


# Defender Game Racer Turbo RS3


Wired gamepad  
User Manual




## CONNECTION TO PC

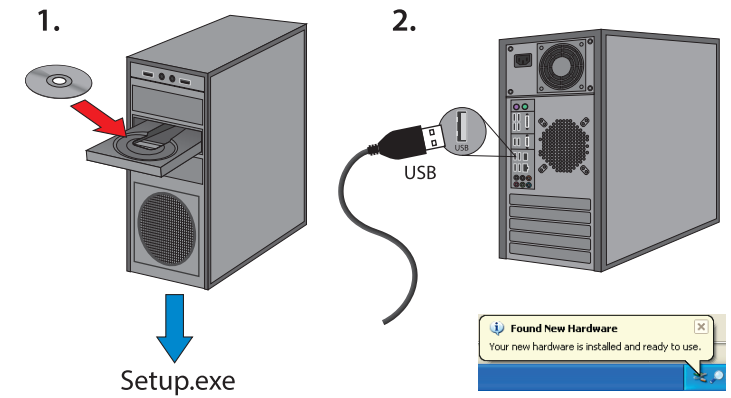


3. Windows 7 → Control Panel → Devices and printers  
Windows 8 → Control Panel → Devices and printers  
Windows 10 → Control Panel → Devices and printers

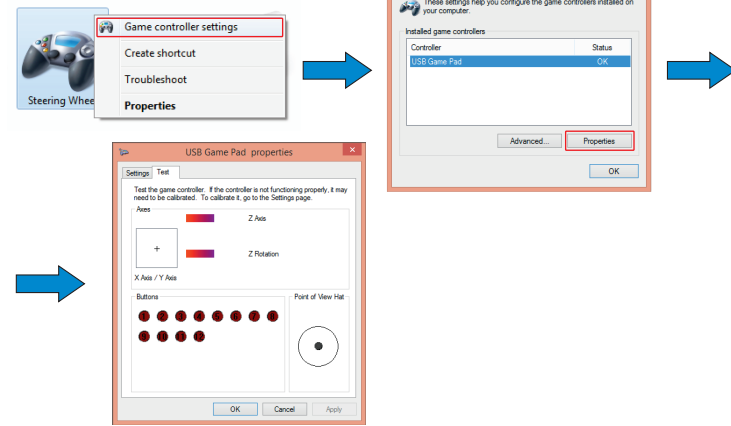

## CONNECTION TO PS

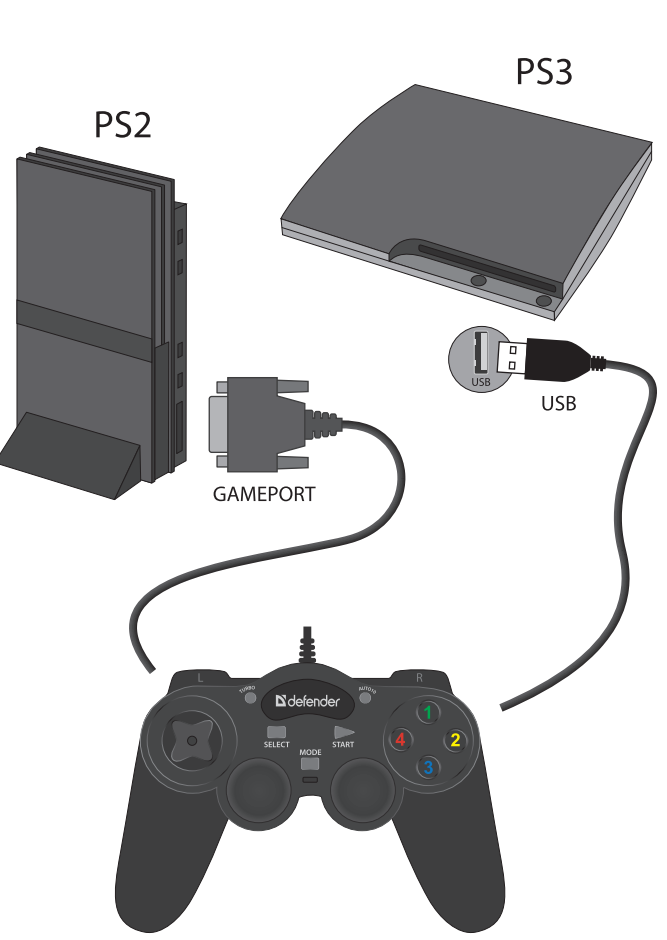


## USING

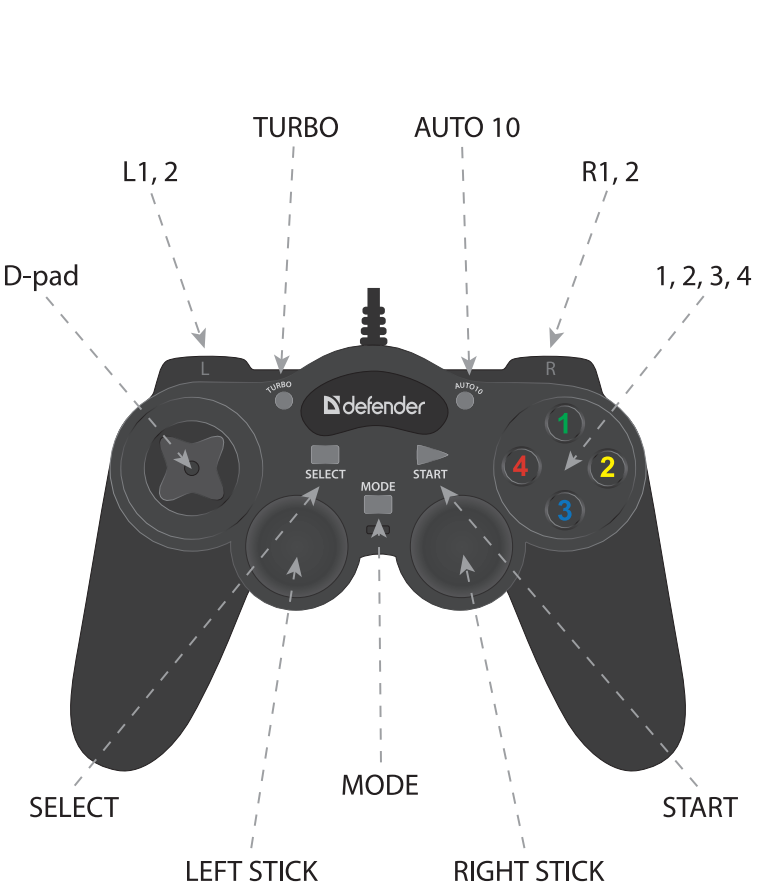


Operating mode	PS3	PS2/Digital	PS2/Analog	PC/Digital	PC/Analog	PC XINPUT (default)
Main Buttons	△	△	△	1	1	4
	○	○	○	2	2	2
	X	X	X	3	3	1
	□	□	□	4	4	3
	L2	L2	L2	5	5	Z
	R2	R2	R2	6	6	Z
D-PAD	L1	L1	L1	7	7	L1
	R1	R1	R1	8	8	R1
	R3	-	R3	12	12	10
Left Stick	X/Y	X/Y	X/Y	X/Y	X/Y	X/Y
	Z/RZ	1-4	Z/RZ	1-4	Z/RZ	X/Y
Right Stick	START	START	START	10	10	8
	SELECT	SELECT	SELECT	9	9	7
	TURBO	TURBO	TURBO	TURBO	TURBO	TURBO
	CLEAR	CLEAR	CLEAR	CLEAR	CLEAR	CLEAR
MODE	HOME	MODE	MODE	MODE	MODE	MODE
	AUTO10	AUTO10	AUTO10	AUTO10	AUTO10	AUTO10

## TURBO

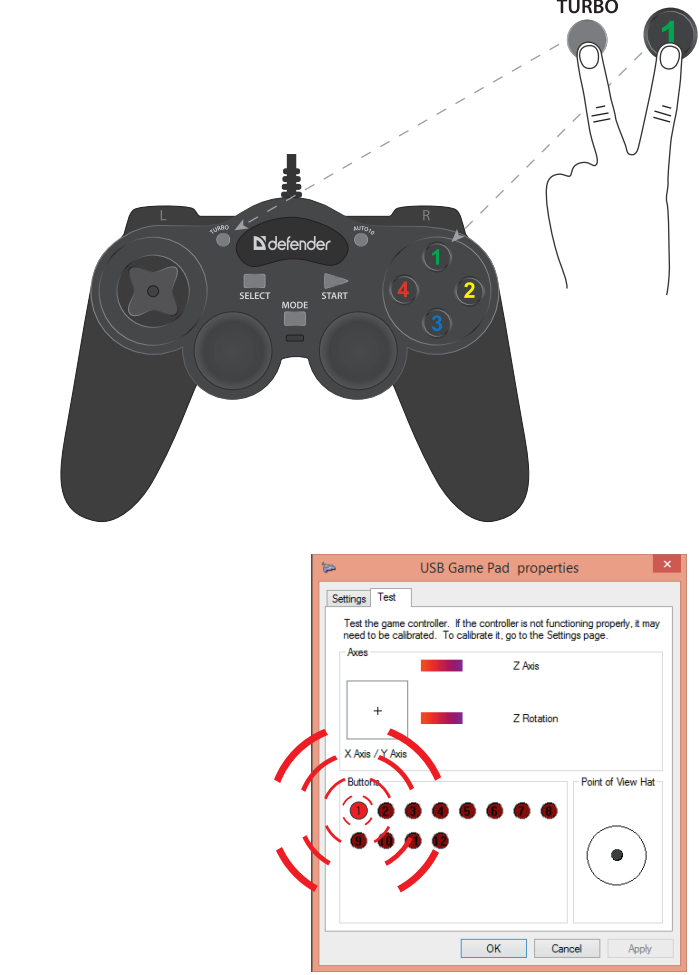

## CLEAR

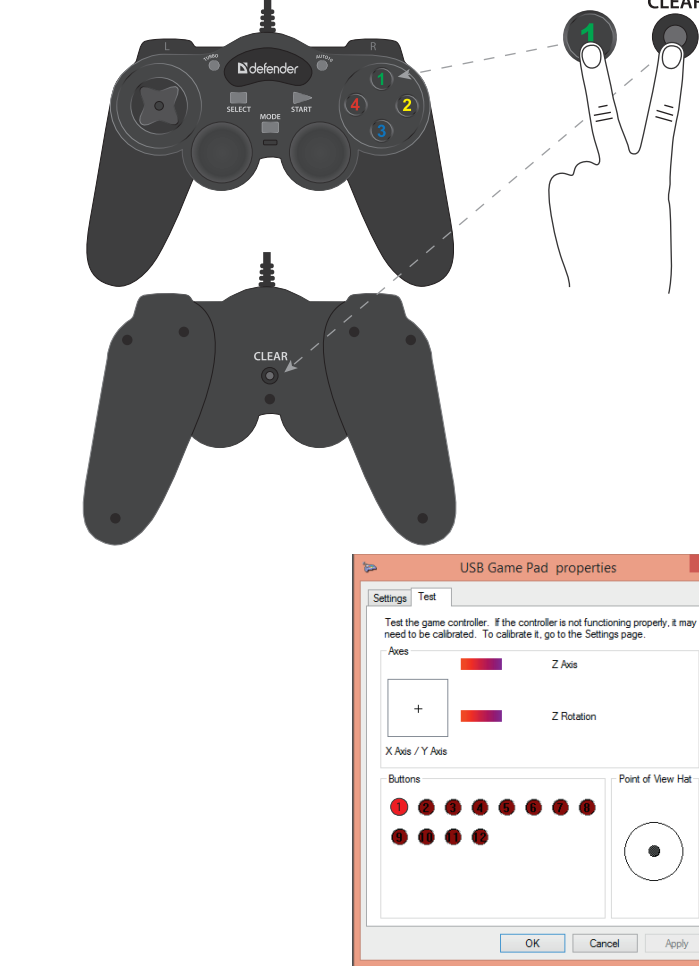

## AUTO 10

