



Read the instructions carefully
as well as the safety guidelines before use.

1 - DESCRIPTION (depending on model)

- A. Ionic function
- B. Ceramic air outlet grid
- C. Cool air outlet grid
- D. Temperature switch (positions 1-2-3)
- E. Air speed switch (positions 1-2)
- F. Removable rear housing
- G. Hanging loop

2 - SAFETY

- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
- The appliance's accessories become very hot during use. Avoid contact with the skin.
- Makes sure that the supply cord never comes into contact with the hot parts of the appliance.
- Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask for installer for advice.
- The installation of the appliance and its use must however comply with the standards in force in your country.

WARNING: do not use this appliance near bath-tubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has failed;

- it does not work correctly;

The appliance is equipped with a heat-sensitive safety device. In the event of over-heating (for example if the heat grill is blocked), the dryer will stop automatically: contact the After-Sales Service.

The appliance must be unplugged:

- before cleaning and maintenance procedures;

- if it is not working correctly;

- if you want to clean or use it again;

- Do not use if the cord is damaged;

- Do not immerse or put under running water, even for cleaning purposes.

- Do not hold with damp hands.

- Do not hold the appliance by the casing, which is hot, but by the handle.

- Do not plug by pulling on the cord, rather pull out by the plug.

- Do not use an electrical extension lead.

- Do not clean with abrasive or corrosive products.

- Do not use at temperatures below 0°C and above 35°C.

GUARANTEE

Your appliance is designed for use in the home only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.

3 - USE (depending on model)

***IONIC-CERAMIC® System 1 (depending on model):** your hair dryer will disperse negative ions which reduce static electricity, add shine to your hair and make your hair easier to manage. This effect is reinforced by the gentle radiant heat emitted by the ceramic coating.

SEPARATE SPEED AND TEMPERATURE SETTINGS (2-3-4):

ROOT VOLUMIZER ATTACHMENT:

- Switch the hairdryer on.

- Turn on the hair leaving the roots damp.

- Switch it off.

- Place the root volumizer attachment (H) on the hair dryer as shown (fig. 5).

Please note that the markings should be on the top.

- Set the machine to speed setting 1 (fig. 3) and temperature setting 2 (fig. 4).

Step By Step Instructions:

- Always start with sections of hair at the top of the head and finish with those at the nape of the neck.

- Lift the section up keeping it vertical (fig. 6).

- Place the attachment as close as possible to the root (fig. 7).

- Hold the section of hair against the styling bar (fig. 8).

- Hold in position for 7 seconds.

- Remove the attachment (H) from the section of hair without straightening it (fig. 9).

- Fold the section over to the other side of the head (fig. 10, 11).

The attachment can also be used on dry hair. For this method, firstly lightly dampen the roots and follow the steps described above with the required area.

4 - ACCESSORIES (depending on model)

- Concentrator (6 mm)

- Concentrator (8 mm)

- 'Classic Volume' diffuser

- Root Volumizer Attachment (H)

a. Root Volumizer fingers b. Ceramic blade c. Styling bar

5 - CLEANING

Warning: always unplug the appliance before cleaning it.

Your hair dryer requires very little maintenance. You can clean it, as well as the accessories, with a slightly damp cloth to remove any hair or impurities that may be clinging to the rear grid.

• Removable rear housing (12).

ENVIRONMENT PROTECTION FIRST!

① Your appliance contains valuable materials which can be recovered or recycled.

Leave it at a local civic waste collection point.

These instructions are also available on our website www.rowenta.com.

RU

Перед использованием ознакомьтесь с правилами техники безопасности

1 - ОПИСАНИЕ (в зависимости от модели)

А. Керамическая решетка на выходе воздуха

Б. Автоматическая функция ионизации

С. Кюпка подачи холодного воздуха

Д. Переключатель режимов температуры воздуха (положения 1-2-3)

Е. Переключатель режимов скорости подачи воздуха (положения 1-2)

Ж. Съемная решетка

Г. Колпачок для подвески фена

Read the instructions carefully
as well as the safety guidelines before use.

1 - DESCRIPTION (в зависимости от модели)

А. Ionic function

Б. Ceramic air outlet grid

В. Cool air outlet grid

Г. Temperature switch (positions 1-2-3)

Д. Air speed switch (positions 1-2)

Е. Removable rear housing

Ж. Hanging loop

2 - SAFETY

For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).

The appliance's accessories become very hot during use. Avoid contact with the skin.

Makes sure that the supply cord never comes into contact with the hot parts of the appliance.

Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask for installer for advice.

The installation of the appliance and its use must however comply with the standards in force in your country.

WARNING: do not use this appliance near bath-tubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use as the proximity of water presents a hazard even when the appliance is switched off.

When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has failed;

- it does not work correctly;

The appliance is equipped with a heat-sensitive safety device. In the event of over-heating (for example if the heat grill is blocked), the dryer will stop automatically: contact the After-Sales Service.

The appliance must be unplugged:

- before cleaning and maintenance procedures;

- if it is not working correctly;

- if you want to clean or use it again;

- Do not use if the cord is damaged;

- Do not immerse or put under running water, even for cleaning purposes.

- Do not hold with damp hands.

- Do not hold the appliance by the casing, which is hot, but by the handle.

- Do not plug by pulling on the cord, rather pull out by the plug.

- Do not use an electrical extension lead.

- Do not clean with abrasive or corrosive products.

- Do not use at temperatures below 0°C and above 35°C.

GUARANTEE

Your appliance is designed for use in the home only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.

3 - USE (в зависимости от модели)

***IONIC-CERAMIC® System 1 (в зависимости от модели):** ваш фен будет выдавать отрицательные ионы, что уменьшит электростатическое накопление, а также улучшит внешний вид волос.

Функция ионизации работает в том случае, если температура воздуха выше 30°C.

Функция керамики работает в том случае, если температура воздуха выше 30°C.

Функция кондиционирования работает в том случае, если температура воздуха выше 30°C.

Функция объема работает в том случае, если температура воздуха выше 30°C.

Функция блеска работает в том случае, если температура воздуха выше 30°C.

Функция кондиционирования работает в том случае, если температура воздуха выше 30°C.

Функция объема работает в том случае, если температура воздуха выше 30°C.

Функция блеска работает в том случае, если температура воздуха выше 30°C.

Функция кондиционирования работает в том случае, если температура воздуха выше 30°C.

Функция объема работает в том случае, если температура воздуха выше 30°C.

Функция блеска работает в том случае, если температура воздуха выше 30°C.

Функция кондиционирования работает в том случае, если температура воздуха выше 30°C.

Функция объема работает в том случае, если температура воздуха выше 30°C.

Функция блеска работает в том случае, если температура воздуха выше 30°C.

Функция кондиционирования работает в том случае, если температура воздуха выше 30°C.

Функция объема работает в том случае, если температура воздуха выше 30°C.

Функция блеска работает в том случае, если температура воздуха выше 30°C.

Функция кондиционирования работает в том случае, если температура воздуха выше 30°C.

Функция объема работает в том случае, если температура воздуха выше 30°C.

Функция блеска работает в том случае, если температура воздуха выше 30°C.

Функция кондиционирования работает в том случае, если температура воздуха выше 30°C.

Функция объема работает в том случае, если температура воздуха выше 30°C.

Функция блеска работает в том случае, если температура воздуха выше 30°C.

Функция кондиционирования работает в том случае, если температура воздуха выше 30°C.

Функция объема работает в том случае, если температура воздуха выше 30°C.

Функция блеска работает в том случае, если температура воздуха выше 30°C.

Функция кондиционирования работает в том случае, если температура воздуха выше 30°C.

Функция объема работает в том случае, если температура воздуха выше 30°C.

