



Pos.	Description
1*	Brush Cap
2*	Carbon Brush
3*	Brush Holder
4	Screw
6	Housing
7*	Switch
8	Handle Cover
9	Screw
10*	Stator
11	Screw
12	Deflector
13	Capacitance
14	Clip
15	Rubber sleeve
16	Cable
17*	Bearing Sleeve
18	Ball Bearing 608Z
19*	Rotor
20	Spindle Lock
21	Spindle Lock Spring
22	Ball Bearing 6000Z
23	Spacer
24	Base Board Set
25	Coach Screw
26	Butterfly Screw
27	Compress Spring
28	Butterfly Nut
* Priority Spare Parts (PSP)	

Pos.	Description
29	Cylindrical Pin
30	Gear Housing
31	Flat Washer
32	Rubber Bush
33	Screw
35	Lock Nut
36	Depth Wrench
38*	Bearing Bush
39	Washer For Spindle
40*	Gear
41	Gear sleeve
42	Middle Cover
43	Screw
44	Under Protection Shield
45	Ball Bearing 6001Z
46	Washer
47	Washer For Spindle
48	Woodruff Key
49*	Spindle
50*	Inner Flange
52*	Outer Flange
53*	Pressure Screw
54	Screw
55	Washer
56	Lever For Shield
57	Tension Spring
58	Parallel Guide
* Priority Spare Parts (PSP)	