



80-393 **GDAŃSK**
ul. Krynicka 1
tel.: (058) 55 43 555
fax: (058) 55 43 500

ODDZIAŁ:
02-784 **WARSZAWA**
ul. Janowskiego 9
tel.: (022) 648 03 48..49
fax: (022) 648 03 50

Instrukcja obsługi

instruction manual

TRYMER / TRIMMER
TA 46
TA 33



TA46/TA33 Trimmers

Model	TA46	TA33
Cutting capacity (80g/m ²)	8	8
Cutting length (mm)	320	460
Base dimensions (mm)	328x160	458x160

Read all instructions before using.

- This product is not intended for use by children. Keep product out of the reach of children.
- This product is intended for use in trimming paper. Do not use the product for any other purpose.
- Keep loose items (e.g., hands, fingers, jewelry, clothing, neckties, etc.) away from the blade to avoid personal injury or damage to the product.
- Watch the sharp edges

To avoid damage to the product

- Remove paper clips and staples from items before trimming paper.
- Never lubricate the cutting blade.
- Do not expose product to water or other liquids.
- Always operate the product on a flat, level, steady surface to avoid it overturning.
- Do not hang or wall-mount the product.
- This product is intended for indoor use only. Do not use outdoors.

Save the instructions for future reference.

WAY OF USING

1. Put the trimmer on the flat, stable surface.
2. Ensure that you place the material that you intend to cut beneath the transparent plastic rails.
3. Place the paper or material that you intend to cut in the required position on the cutting base.
4. Slide the cutting head along the edge of the metal cutting base.



NOTE!

It is forbidden to cut bigger amount of paper than stated in instruction, it could cause sliding out the rotating blade over the cutting zone and cause the permanent damages of blades.

There is a rule in all trimmers - the bigger amount of sheets cut at a time - the smaller quality of cutting.

HOW TO CHANGE THE CUTTING HEAD

1. Lift up the small cap on the topside of the plastic frame.
2. Slide the guide rail a little through the opening which has appeared.
3. Slide the cutting head in the other direction, towards the detached end of the guide rail.
4. Take the new cutting head and slide it onto the guide rail. Ensure that the position is correct, i.e. the cutting head must be positioned such as rotary blade runs precisely along the edge of the metal cutting base.



NOTE!

Special casing in which the blade is mounted, protects from contact with cutting blade. Never remove or dismantle blade's casing.

DEFECTS

In case of appearance of defect, the device along with warranty card and defect's description should be taken to the seller or to the nearest authorized service. Device could be taken to the further repair, that is why user should preserve the original and complete packaging. In case of transferring the device to repair without original or incomplete packaging, a risk of damaging the device while transporting is on the buyer side. That is why in case of lack of original packaging in the buyer's interest is to prepare the best substitute packing.