

# Kitchen scale

User's manual

EN



## SENCOR®

SKS 5020WH / SKS 5021GR / SKS 5022BL  
SKS 5023OR / SKS 5024RD / SKS 5025VT  
SKS 5026YL / SKS 5027TQ / SKS 5028RS

Before first use, please read all instructions contained in this user's manual carefully, even if you are already familiar with using similar products. Only use this product in accordance with the instructions described in the user's manual. Please store this manual for later use.

Keep the original packaging, including the internal packing material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this product, pack it in the original cardboard box to ensure maximum protection during transport (e.g., when moving or when you need to send this product for repair).

EN-1


**CONTENTS**

IMPORTANT SAFETY NOTICE .....	3
DESCRIPTION .....	4
INSTRUCTIONS FOR USE.....	5
OVERLOAD INDICATOR.....	6
CHANGING BATTERIES .....	6
CLEANING AND MAINTENANCE.....	6
DISPOSAL OF USED BATTERIES .....	6
TROUBLESHOOTING.....	6
TECHNICAL SPECIFICATIONS .....	6
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT.....	7
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS .....	7

## IMPORTANT SAFETY NOTICE

- 1) Carefully unpack the product, and take care not to throw away any part of the packaging material before you have found all parts of the product.
- 2) This product must not be used by persons (including children) with physical or mental impairments or by inexperienced persons, unless properly trained or schooled in the safe use of the product, or unless they have been properly supervised by a qualified person who will be responsible for their safety.
- 3) Children must be supervised to ensure that they do not play with the product.
- 4) Under no circumstances should you repair or alter the product yourself. Entrust all repairs and adjustments to a specialised company/service. Tampering with the product may void the warranty.
- 5) Store and use the product away from flammable or volatile materials and substances.
- 6) Keep the product away from extreme temperatures, direct sunlight and excessive humidity. Do not use in a dusty environment.
- 7) Do not place the product near heaters, open fires or other sources of heat.
- 8) This product is designed for household use. Do not use in industrial surroundings or outdoors!
- 9) Do not use the product for purposes other than those intended.
- 10) Do not spray the product with water or any other liquid. Do not submerge the product in water or any other liquid.
- 11) If you will not be using the product for an extended period of time, remove the batteries. Otherwise they may leak inside the product and cause irreparable damage.
- 12) For plugging the product into the mains socket, use only the type of adaptor included with the product.
- 13) It is not permitted to make construction changes to the product nor to attach HF amplifiers or antennas.
- 14) The manufacturer is not responsible for damages caused by incorrect use of this appliance or its accessories. Such damages include food spoilage, injuries, burns, scalding, fire, etc.

## DESCRIPTION

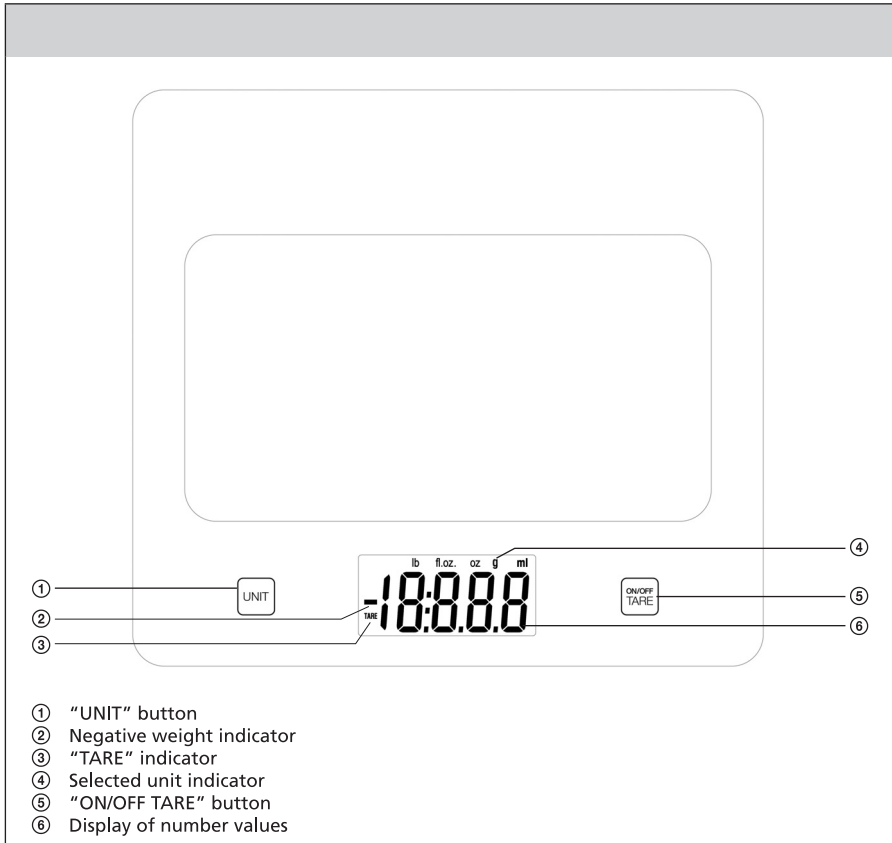

## INSTRUCTIONS FOR USE

### Turning the scale on and off



#### Warning

Before turning on the scale for the first time, please check the back of the battery cover and remove the insulation tape, which prevents the discharge of batteries during transport.

- 1) Turn the scale on by pressing the "ON/OFF TARE" button.
- 2) Turn the scale off by pressing the "ON/OFF TARE" button.



#### Warning

The scale turns itself off automatically after approximately 60 seconds after displaying "0.0" on the LCD display or while it is idle. By turning it off after weighing using the "ON/OFF TARE" button you will save the battery.

### Switching units

While weighing you may switch between units (g -> ml -> lb:oz -> fl.oz) by pressing the "UNIT" button.

### Weighing procedure

- 1) Turn the scale on by pressing the "ON/OFF TARE" button.
- 2) If necessary select the weight unit (g -> ml -> lb:oz -> fl.oz).
- 3) Place the food that you wish to weigh on the weighing surface.
- 4) The weight will be displayed on the display in the selected units.

### Additional weighing function

- 1) Turn the scale on by pressing the "ON/OFF TARE" button.
- 2) If necessary select the weight unit (g -> ml -> lb:oz -> fl.oz).
- 3) Place the food that you wish to weigh carefully on the plate.
- 4) As soon as the scale stabilises, press the "ON/OFF TARE" button. The current weight will be erased and the display will be reset to zero.
- 5) Place other foods on the scale. The display will display only the weight of the newly placed foods.
- 6) In this way you may continue to weigh additional foods by adding them step by step and repeating steps 4 and 5.

### How to turn off the additional weighing function (TARE)

Remove all food from the scale. A negative value will be displayed on the display. Press the "ON/OFF TARE" button to reset the scale to zero.

## OVERLOAD INDICATOR

If the scale is overloaded (max. capacity 5 kg), the display will show the symbol "EEEE". Remove the food from the scale immediately so as not to damage the scale.

## CHANGING THE BATTERIES

If the display shows the dead battery "Lo" icon, it is time to change the batteries.

- 1) Remove the battery compartment cover on the bottom part of the scale.
- 2) Remove the old batteries.
- 3) Place one 3V type CR2032 lithium battery into the battery compartment. Pay attention to the polarity. The positive pole must always be facing upwards.



### Warning

- If you will not use the scale for a long time, store it in a horizontal position. This position better protects the sensitive sensors located in the scale footings.
- Do not place or leave any objects on the scale that may place unnecessary stress on the sensors.
- Strong magnetic fields may negatively influence the weighing precision. Do not use the scale in environments with strong magnetic fields.

## CLEANING AND MAINTENANCE

To clean the outer parts of the appliance, use a soft cloth dipped in lukewarm water.

## DISPOSAL OF USED BATTERIES

This product comes with one alkaline battery. Do not place used batteries into regular household waste. Instead, use the appropriate waste collection and recycling centres.

## TROUBLESHOOTING

If the scale is displaying random values or if it is not turning off automatically, you need to restart it. In such cases, remove the batteries for about 10 seconds and place them back again. The scale should work normally again.

## TECHNICAL SPECIFICATIONS

Power supply .....	1 x 3V lithium battery (CR2032)
Max. measurable weight .....	5000 g
Sensitivity weighing: .....	1 g
Switching between units .....	g -> ml -> lb:oz -> fl.oz
Automatic shut off when idle .....	60 s
Dimensions (width x depth x height).....	201 x 184 x 16 mm
Display dimensions (length x height).....	55 x 25 mm
Weight .....	0.49 kg

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

# Kitchen scale

SKS 5020WH / SKS 5021GR / SKS 5022BL / SKS 5023OR / SKS 5024RD / SKS 5025VT / SKS 5026YL / SKS 5027TQ / SKS 5028RS