


Models -AT00** AND FB10**

Mvmt. Cal. No. H50*

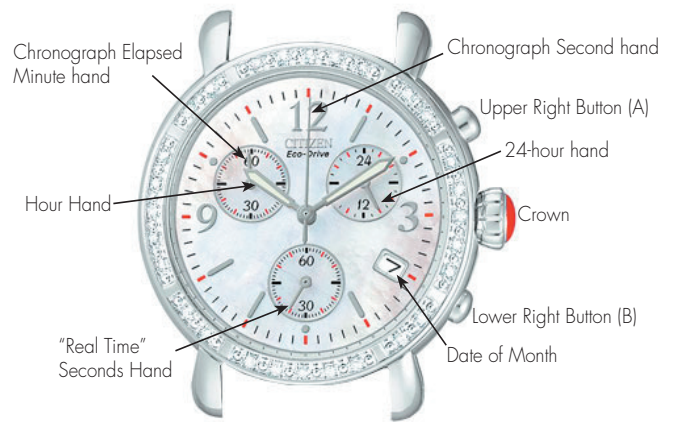

TO SET THE TIME

☐ Pull the crown out two 'clicks' and turn in either direction to set the current time. Be sure to pay attention to the 24-hour hand located at the upper right sub dial to ensure the correct AM or PM time is set. This will ensure the date changes at "night".

☐ Push the crown in two 'clicks' to the closed position.

TO SET THE CALENDAR

☐ Pull the crown out 1 'click' and turn clockwise to set the date (be sure not to set the date between 11:00 p.m. and 2:00 a.m.)

☐ Push the crown in one 'click' to the closed position.

Note: The date of month feature is not based on a perpetual calendar. It will need to be manually reset for each month shorter than 31 days.

TO USE THE 60-MINUTE CHRONOGRAPH

☐ Press and release the upper right button (A) to start the chronograph. This will cause the sweep-second hand to start moving in one second increments. NOTE: The chronograph sweep second hand is only operational during chronograph function.

☐ Push the upper right button (A) again to stop the chronograph.

☐ Push the lower right button (B) to reset the chronograph to the "12:00" or zero position.

Note: Pressing and releasing the lower right button (A) while the chronograph is operating will cause the timing to stop and the chronograph to reset.

TO ADJUST THE CHRONOGRAPH SECOND HAND ZERO POSITION

☐ Press and hold the upper right button (A) for three or more seconds then release.

☐ Press and release the upper right button (A) to move the chronograph second hand to the "12:00" or zero position.

☐ Push the crown in two 'clicks'.

☐ Press and release the lower right button (B) to reset the chronograph function.