

VAGARY

A decorative flourish consisting of a horizontal line with a central downward-pointing curve and two upward-pointing curves at the ends.

取扱説明書・保証書

Introduction

Thank you for your purchase of our product.

Before using the watch, read this instruction manual carefully to ensure correct use.

After reading this manual, store it in a safe place for future reference.

To check the movement number

A case number-4 alphanumeric characters and 6 or more alphanumeric characters-is engraved on the case back. (Figure on the right)

A combination of 2 numbers (4 digit and 6 or more digit) is engraved on the case back of your watch.

In the example on the right, "1234" is the movement number.

Engraving position example






The engraving position may differ depending on watch model.



Safety precautions – IMPORTANT

This manual contains the following the instructions that should be strictly followed at all times to prevent injury to yourself and other persons as well as damage to property. Understand the meaning of the following symbols and read pages from 14 to 25.

★ Safety advisories are categorized and depicted in this manual as follows:

 DANGER	Highly likely to cause death or serious injury
 WARNING	Can cause serious injury or death
 CAUTION	Can or will cause minor or moderate injury or damage

★ Important instructions are categorized and depicted in this manual as follows:

	Warning (caution) symbol followed by instructions that should be followed or precautions that should be observed.
	Warning (caution) symbol followed by prohibited matters.

<Protective stickers>




Be sure to remove any stickers covering the metal parts (back cover, band, clasp) or glass of the watch before use. Otherwise, perspiration or moisture may enter the gaps between the protective stickers and the parts, which may result in a skin rash and/or corrosion of the metal parts.

<Band adjustment>

Do not adjust the length of the band (metal or rubber) yourself. If you fail to perform the work properly, the watch may fall off, or an injury may occur during adjustment. (If you purchase a product which is sold with a special tool for band adjustment, you may carefully adjust the band yourself.)

For band adjustment, consult the shop where you purchased the watch or your MB Service center. Other shops may not be able to handle the watch, or may charge a fee.

Contents

Introduction.....	1
Safety precautions	2
Before using.....	6
 435A (three hands, Plain models)	8
 G110 (three hands, with date).....	9
 J519 (chronograph 30-minutes type).....	10
Zero Positioning of Chronograph Hands	12

Water Resistance	14
Precautionary Item and Usage Limitation.....	16
Warranty and service	26
Repair & Warranty service	30

Before using

★Before setting the time and calendar

 
- When the screw down crown is equipped on your model, loosen the screw before operation. After operation, return the crown to the normal position and tighten it.
- The date and day change at around 0:00 a.m. Take care to set a.m. and p.m. correctly by referring to the 24 hour hand or calendar indication.
- Turn the minute hand 4-5 minutes past the correct time and then turn it back to the correct time. The time on the watch can then be set to the correct time by pushing in the crown in synchronization with a time service tone.

★Caution on setting the calendar

- Do not adjust the calendar while the time below is indicated:
Between 9:00 p.m. and 2:00 a.m.
The calendar may not change properly if the calendar is adjusted in the period. Move the hands out of the period before the calendar adjustment.
- Adjust the calendar at the beginning of the following months:
March, May, July, October, December.

The illustrations in this instruction manual may differ from the actual watch in its design, the position of the crown and calendar, etc.


435A: three hands Plain models

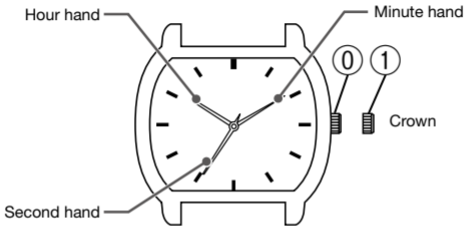

★Setting the time

1. Pull out the crown to position ①.
2. Turn the crown to set the time.
3. Push in the crown to position ①.

 G110: three hands with Date

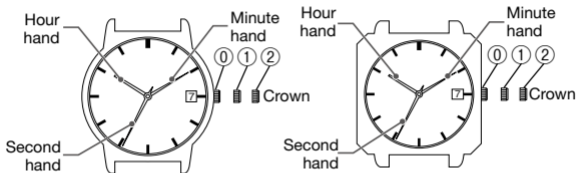


★Setting the time

See page 8. (Pull out the crown to position ②)

★Setting the date

1. Pull out the crown to position ①.
2. Turn the crown to the left to set the date.
3. Push in the crown to position ①.

 J519: chronograph 30-minutes type

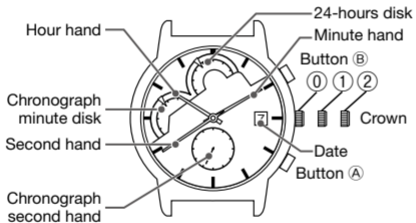

★Setting the time

1. Pull out the crown to position ②.
2. Turn the crown to set the time.
 - The 24-hour disk movement is linked with the hands.
3. Push in the crown to position ①.

 
★Setting the date

1. Pull out the crown to position ①.
2. Turn the crown to the left to set the date.
3. Push in the crown to position ①.

★Using the chronograph

- Pressing button ③ starts/stops/restarts measurement.
- To reset the chronograph, press button ④ while measurement is stopped.
- You can time up to 29 minutes and 59 seconds.
- The chronograph stops automatically after 30 minutes.

★Zero Positioning of Chronograph Hands

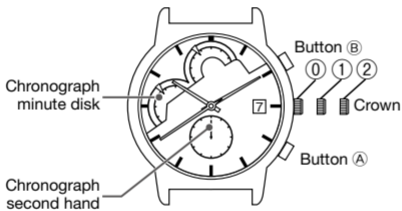

<Adjusting the chronograph hands to the 0 position>

Adjust the chronograph hands to the 0 position (upright) when they do not return to the 0 position after replacing the battery or inflicting a strong shock.

1. Pull out the crown to position ②

2. Press button ③ to adjust the chronograph second hand to the 0 position.

(The chronograph second hand moves counterclockwise when you press button ③.)

- The hand moves continuously by pressing and holding it.

3. Push in the crown to position ①

4. Press the button ④ to reset the chronograph.

Check all the chronograph hands is set to the 0 position.

- While you adjust the chronograph hands, the watch is stopped.






Water Resistance

Warning Water resistance

- Refer to the watch dial and the case back for the indication of the water resistance of your watch. while skin diving, but not while scuba or saturated diving using helium gas. The following chart provides examples of use for reference to ensure that your watch is used properly. (The unit "1bar" is roughly equal to 1 atmosphere.)
- WATER RESIST(ANT) x×bar may also be indicated as W.R.x×bar.
- Non-water resistant models are not designed to come into contact with any moisture. Take care not to expose a watch with this rating to any type of moisture.
- Water resistance for daily use (to 3 atmospheres) means the watch is water resistant for occasional accidental splashing.

Name	Indication	Specification
	Dial or Case back	
Non-water resistant	_____	Non-water resistant
Everyday-use water resistant watch	WATER RESIST(ANT)	Water-resistant to 3 atmospheres
Upgraded everyday use water-resistant watch	WATER RESIST(ANT) 5 bar	Water-resistant to 5 atmospheres
	WATER RESIST(ANT) 10/20 bar	Water-resistant to 10 or 20 atmospheres

- Upgraded water resistance for daily use (to 5 atmospheres) means that the watch may be worn while swimming, but is not to worn while skin diving.
- Upgraded water resistance for daily use (to 10/20 atmospheres) means that the watch may be worn
- Refer to the watch dial and the case back for the indication of the water resistance of your watch. while skin diving, but not while scuba or saturated diving using helium gas.

Water-related use				
				
Minor exposure to water (washing face, rain, etc.)	Swimming and general washing work	Skin diving, marine sports	Scuba diving using an air tank	Operate the crown or button when the watch is wet
NO	NO	NO	NO	NO
OK	NO	NO	NO	NO
OK	OK	NO	NO	NO
OK	OK	OK	NO	NO

Precautionary Items and Usage Limitations



Caution To Avoid Injury

- Be particularly careful when wearing your watch while holding a small child, to avoid injury.
- Be particularly careful when engaged in strenuous exercise or work, to avoid injury to yourself and others.
- Do NOT wear your watch while in a sauna or other location where your watch may become excessively hot, since there is the risk of burns.
- Be careful when putting on and taking off your watch, since there is a risk of damaging your fingernails, depending on the manner in which the band is fastened.
- Take off your watch before going to bed.

Caution Precautions

- Always use the watch with the crown pushed in (normal position). If the crown is of the screw lock-type, make sure it is securely locked.
- Do NOT operate the crown or any push buttons when the watch is wet. Water may enter the watch causing damage to vital components.
- If water enters the watch or the watch fogs up and does not clear up even after a long time, consult your dealer or Authorized Service Center for inspection and/or repair.
- Even if your watch has a high level of water resistance, please be careful of the following.
 - If your watch is immersed in sea water, rinse thoroughly with fresh water and wipe with a dry cloth.
 - Do not pour water from a tap directly onto your watch.
 - Take off your watch before taking a bath.
- If seawater enters the watch, place the watch in a box or plastic bag and immediately take it in for repair. Otherwise, pressure inside the watch will increase, and parts (crystal, crown, push button, etc.) may come off.

Caution Wearing your Watch

<Band>

- Leather, genuine skin and rubber (urethane) bands will deteriorate over time due to perspiration, body oils and dirt. Be sure to replace the band periodically.
- The durability of a leather band may be affected when wet (fading, peeling of adhesive), owing to the properties of the material. Moreover, wet leather may cause a rash.
- It is recommended to take off the watch if it gets wet, even if the watch itself is water resistant.
- Do not wear the band too tightly. Try to leave enough space between the band and your skin to allow adequate ventilation.
- The rubber (urethane) band may be stained by dyes or soil present in or on clothing or other accessories. Since these stains may not be removable, caution is required when wearing your watch with items that tend to easily transfer color (articles of clothing, purses, etc.). In addition, the band may be deteriorated by solvents or moisture in the air. Replace with a new one when it has lost elasticity or become cracked.
- Please request adjustment or repair of the band in the following cases:
 - You notice an abnormality with the band due to corrosion.
 - The pin of the band is protruding.

- We do not recommend attempting to adjust the watch band yourself. Special expertise and experience is required for proper adjustment. If not adjusted correctly, the band may become detached leading to loss of your watch. (Some retailers may supply a band adjustment tool with your purchase).
For band adjustment, we recommend you consult the retailer from where the watch was purchased or your nearest Authorized Citizen Service Center. Some repair shops may charge a nominal fee for adjustment if the watch was not purchased directly from them.

<Temperature>

- The watch may stop or the function of the watch may be impaired in extremely high or low temperature. Do not use the watch in places where the temperature is outside the operating temperature range as stated in the specifications.

<Magnetism>

- Analog quartz watches are powered by a step motor that uses a magnet. Subjecting the watch to strong magnetism from the outside can cause the motor to operate improperly and prevent the watch from keeping time accurately. Do not allow the watch to come into close proximity to magnetic health devices (magnetic necklaces, magnetic elastic bands, etc.) or the magnets used in the latches of refrigerator doors, clasps used in handbags, the speaker of a cell phone, electromagnetic cooking devices and so on.

<Strong Shock>

- Avoid dropping the watch or subjecting it to other strong impact. It may cause malfunctions and/ or performance deterioration as well as damage to the case and bracelet.

<Static Electricity>

- The integrated circuits (IC) used in quartz watches are sensitive to static electricity. Please note that the watch may operate erratically or not at all if exposed to intense static electricity.

<Chemicals, Corrosive Gasses and Mercury>

- If paint thinner, benzene or other solvents or products containing these solvents (including gasoline, nail-polish remover, cresol, bathroom cleaners and adhesives, water repellent, etc.) are allowed to come into contact with the watch, they may discolor, dissolve or crack the materials. Be careful when handling these chemicals. Contact with mercury such as that used in thermometers may also cause discoloration of the band and case.

<Protective Stickers>

- Be sure to remove any protective stickers that may be on your watch (case back, band, clasp, etc.). Otherwise, perspiration or moisture may enter the gaps between the protective stickers and the parts, which may result in a skin rash and/or corrosion of the metal parts.

Caution Always Keep Your Watch Clean

- Rotate the crown while it is pressed in fully and press the buttons periodically so they do not become stuck due to accumulations of foreign matter.
- The case and band of the watch come into direct contact with the skin in the same manner as undergarments. Corrosion of the metal or unnoticed soiling such as that caused by perspiration and dirt can soil sleeves and other portions of clothing. Keep your watch clean at all times.
- The case and band of the watch come into direct contact with the skin. If you think there is something wrong, discontinue wearing the watch immediately and consult your physician. In the case of accumulation of sweat or dirt on a metal band or case, clean thoroughly using a brush and neutral detergent. In the case of a leather band, wipe clean using a dry cloth.
- Leather bands may become discolored by perspiration or dirt. Always keep your leather band clean by wiping with a dry cloth.

Caring for your Watch

- Wipe any dirt or moisture such as perspiration from the case and crystal with a soft cloth.
- For a metallic, plastic or rubber (urethane) watchband, wash any dirt off with water.
Remove the small amounts of dirt trapped between the crevices of the metallic band with a soft brush.
- For a leather band, wipe off dirt using a dry cloth.
- If you will not be using your watch for an extended period of time, carefully wipe off any perspiration, dirt or moisture and store in a proper location, avoiding locations subject to excessively high or low temperatures and high humidity.

Warning Battery handling

- Do not attempt to recharge an old battery.
- Do not dispose an old battery into a fire.
- Keep batteries out of reach of children.
- In the event a battery is swallowed, immediately consult a physician.
- Do not disassemble, modify, or heat the battery. Doing so may cause an accident.
- If a depleted battery is left in your watch, damage may be caused by leakage of battery fluid. Be sure to replace the battery promptly.
- Always be sure to select a battery of the correct specifications when replacing the battery.

<When Luminous Paint is used for your watch>

The paint on the dial and hands helps you with reading the time in a dark place. The luminous paint stores light (daylight or artificial light) and glows in a dark place. It is free from any radioactive substance or any other material harmful to a human body or environment.

- The light emission gradually becomes weaker as time passes.
- The duration of the light (“glow”) will vary depending on the brightness, types of and distance from a light source, exposure time, and the amount of the paint.
- The paint may not glow and/or may dissipate quickly if exposure to light was not sufficient.

Warranty and service

<Free Guarantee>

In the case a malfunction has occurred during the course of normal use while the watch is still under warranty, the watch will be repaired free of charge in accordance with the conditions of the warranty included with this manual.

<Stock Period of Repair Parts>

Our standard period for stocking repair parts for each model is generally seven years. When an exterior part such as the watch case, glass, dial, hand, crown or band is damaged, a spare part with different appearance may sometimes be used.

<Repair Period>

Repairs can be performed on your watch within the repair parts stock period even after the free guarantee has expired. However, you will be charged for these repairs. Please take the watch to the shop where you purchased it and ask whether it can be repaired because the repair period varies according to the conditions of use, environment and so forth. Moreover, there are cases in which it is difficult to restore the watch to its original accuracy when decreased accuracy has resulted from long-term use.

<Change of Address or Receiving as a Gift>

In the event that you have moved or have received your watch as a gift, and are not able to bring your watch to the shop where it was purchased for servicing, please consult Customer Support Center.

<Periodic Inspection (Charge Basis)>

- Water resistance

As the water resistance will be reduced over time, you should have your watch inspected and its water resistance verified every 2-3 years (charge basis) to extend its life and ensure safety. To maintain its water resistance, it is recommended to request us to replace the packings and other parts of your watch.

- Disassembling for internal cleaning (repair)

You should have your watch disassembled and its internal components cleaned periodically to extend its life. Lubrication oils are used to reduce wearing of moving parts such as gears. However, over time the lubrication oils will degrade and wear will increase, eventually resulting in malfunction. Please have your watch undergo internal cleaning every 3-5 years (although the maintenance frequency depends on the usage circumstances).

<Batteries>

The battery was installed in your watch at factory is a monitor-use battery which monitors the functions and special features of your watch. You should keep in mind that the life of your battery could be shorter than the specified period is up.

Even in the event that the battery runs out before the time specified in the guarantee, there will be a fee for replacing the battery.

<Other Inquiries>

If you have any questions regarding the warranty, repairs or other matters, please inquire at the shop where you purchased your watch or Customer Support Center.

Guarantee policy:

- **Guarantee exclusion**

In the cases below you will be charged for repair even during the guarantee period.

- Leather band repair/replacement. Battery replacement and changes in appearance in the course of normal use (stains and scratches on the glass, watch case, straps, bands, bracelets).
- Any malfunction or damage caused by repairing or modifying the watch yourself or through mistreatment or negligence.
- No valid guarantee is presented.
- No store name or date of purchase is on the guarantee, or the name or date is altered.
- Any malfunction or damage caused by natural disasters, fire, or other accidents.

- **Manner of guarantee**

The guarantee covers your watch for repair and maintenance.

Spare parts with a different appearance may sometimes be used when repairing exterior parts such as the glass, watch case, face, hands, or bands.

When it is difficult to repair the watch, an equivalent may be provided instead of repairing it.

- * **The personal information on the guarantee shall not be used for any other purpose than the warranty of the product.**
- * **The terms and conditions of this guarantee are in addition to and does not in any way affect your statutory or legal rights as a consumer.**
- * **The guarantee card will not be reissued. Keep this guarantee in a safe place.**

This guarantee is valid only in the country where you purchased the watch.

<http://vagary.jp/>