



Prestigio

THE ART OF HI-TECH



MultiPad Visconte 10.1

PMP810E | PMP810E3G | PMP810F | PMP810F3G

Tablet PC

User Manual

About this user manual

This user manual is specially designed to detail the device's functions and features.

- Please read this manual before using the device to ensure safe and proper use.
- Descriptions are based on the device's default settings.
- Images and screenshots may differ in appearance from the actual product.
- Prestigio continuously strives to improve its products. Due to software upgrading, some contents in this user manual may be different from your product. Prestigio reserves the rights to revise this user manual or withdraw it at any time without prior notice. Please take your product as standard.

Conventions used in this manual

In this user manual, we use the following symbols to indicate useful and important information:



Caution: provides safety precaution and important information.



Note: gives additional information.



Tips: usage tips.

> The order of options or menus you must select to perform a step.

Warranty Information

Prestigio MultiPad PMP810E/PMP810E3G/PMP810F/PMP810F3G has a 2-year warranty period.

Please find warranty information at

<http://www.prestigio.com/support/warranty-terms>

Prestigio MultiPad PMP810E/PMP810E3G/PMP810F/PMP810F3G has a life cycle of 2 years.

Contents

1. Unboxing	1
Inside your package	1
Your Windows tablet at a glance	1
2. Getting started	3
Charge the battery	3
Power on your tablet	4
Install the SIM card	4
Insert a memory card	5
Connect to an HDMI-compliant display	5
Connect to USB devices	6
Use a folio case	6
3. Basics	8
Finger tips	8
Motion gesture	9
Voice control	9
Start screen	10
4. Work with Windows® 8.1	11
Start up for the first time	11
Power status	11
Charms	12
The familiar desktop	13
Use Windows® apps	13
Customize the start screen	15
Connect to the Internet	15
Airplane mode	16
Use Internet Explorer	17
Change your settings	18
Help and support	19
5. Recovery system	20
Introduction	20
Refresh your Windows tablet	20
Reset your Windows tablet	20
6. Specification	21
7. Troubleshooting	22

 
1. Unboxing





Inside your package

- Prestigio Windows tablet
- Warranty card
- Adaptor
- Legal and safety notices
- Quick start guide

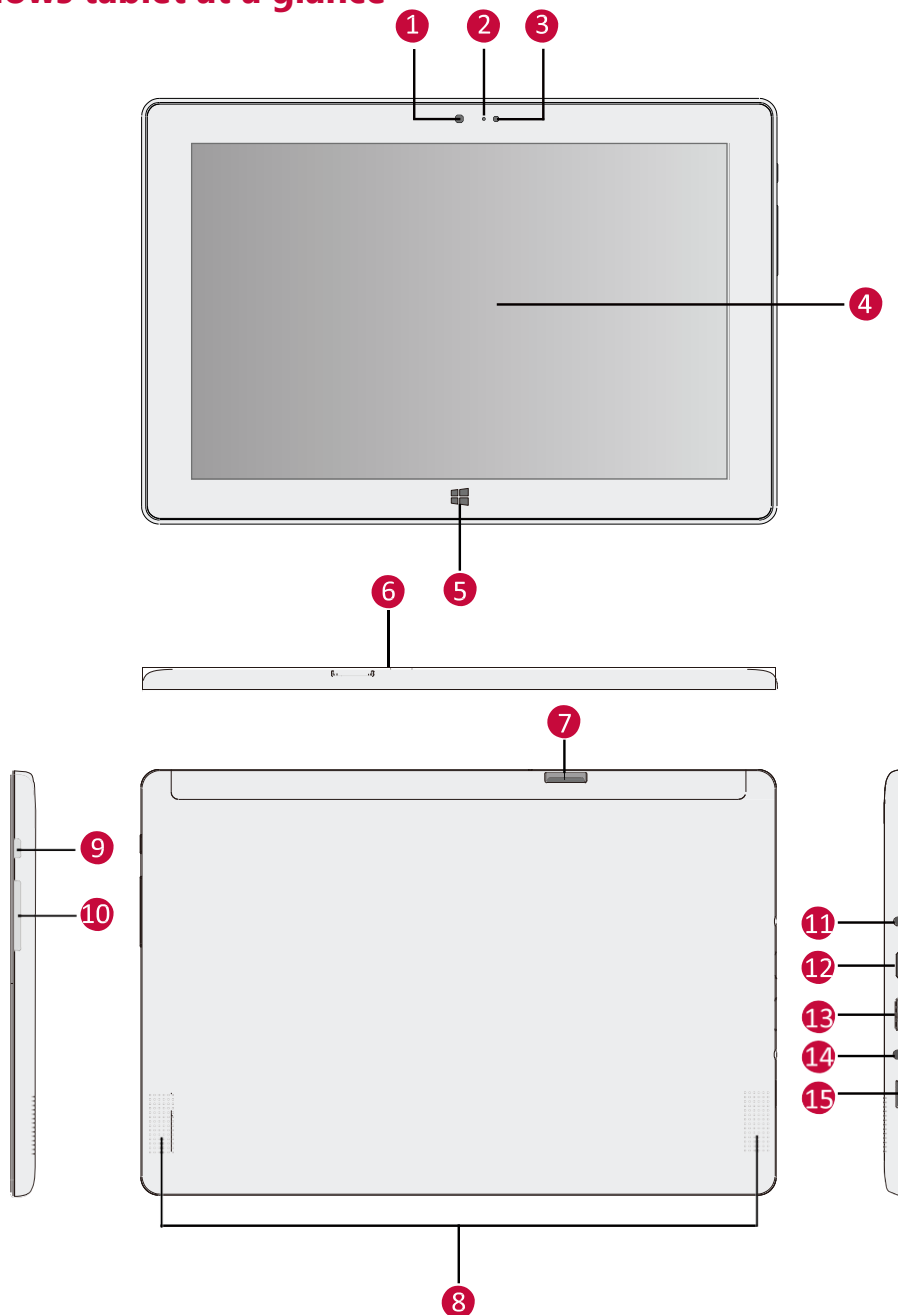Your Windows tablet at a glance



Item	Function
1	Front camera A built-in camera that allows you to capture still images, record videos, and chat online.

2	<p>Camera indicator The camera indicator lights up when the built-in camera is in use.</p>
3	<p>Light sensor The light sensor detects the amount of light in your environment. It allows the system to automatically adjust the brightness of the display depending on the ambient light condition.</p>
4	<p>Touch screen The touch screen panel allows you to operate your Windows tablet using touch gestures.</p>
5	<p>Start key Touch this button to go back to the Start screen. If you are already in the Start screen, touch this button to go back to the last app you opened.</p>
6	<p>Microphone The built-in mono microphone can be used for video conferencing, voice narrations, or simple audio recordings.</p>
7	<p>SIM card slot Your Windows tablet comes with a built-in SIM card slot that supports GSM and WCDMA network bands. Inset a 3G SIM card, then you can connect to any 3G network. (For more information, please contact your local telecom operators.)  This is only available for model PMP810E3G/PMP810F3G.</p>
8	<p>Audio speaker Your Windows tablet is equipped with a built-in high quality stereo speaker. Audio features are software controlled.</p>
9	<p>Power button</p> <ul style="list-style-type: none"> • Press the power button to turn on your Windows tablet, put it to sleep or hibernate and wake it up from sleep or hibernate mode. • Press and hold the power button for about five (5) seconds to force shut down your Windows tablet when it becomes unresponsive. <p> Forcing the system to restart may result in data loss. We strongly recommend that you back up your data regularly.</p>
10	<p>Volume key Press this button to turn up or lower the volume.</p>
11	<p>Audio jack This port allows you to connect the Windows tablet's audio-out signal to amplified speakers or headphones. You can also use this port to connect your Windows tablet to an external microphone.</p>
12	<p>Mini HDMI With a mini HDMI to HDMI cable, you can connect your Windows tablet to video and audio devices, such as television, or any other compatible digital or audio components that use a HDMI connection.</p>
13	<p>Micro USB 3.0 port With a micro USB 3.0 cable, you can connect your Windows tablet to USB accessories, such as a mouse, printer, or an Ethernet adapter.</p>
14	<p>Power jack Connects the AC power supply to power up the device and charge the battery.</p>
15	<p>Micro SD card slot Insert a micro SD memory card to further expand the capabilities of your Windows tablet.</p>

2. Getting started



Congratulations on your purchase and welcome to Prestigio. To get the most from your product and enjoy all that Prestigio has to offer, please visit:

<http://www.prestigio.com/catalogue/MultiPads>

More details about your product, please access:

<http://www.prestigio.com/support>



 
Please read the "Legal and safety notices" on your package before use.




Do not allow water to contact the touch screen. The touch screen may malfunction in humid conditions or when exposed to water.

Charge the battery

1. Assembling the power adaptor: slide the plug fitting into the power adaptor body until it clicks into place.

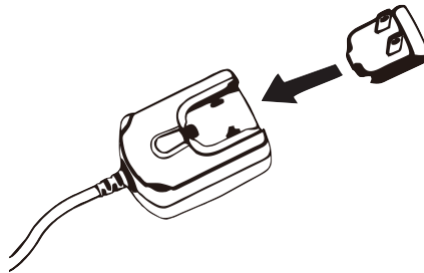

 2. Connecting power: connect the DC-in jack to your Windows tablet and plug the AC adaptor into any AC outlet.

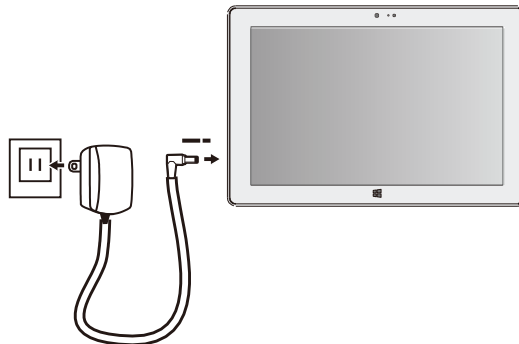


Always use authentic accessories to optimize your Windows tablet's performance. Non-authentic accessories (eg. chargers) may damage your tablet.



- You can use the Windows tablet while it is charging.
- The only way to turn off the charger is to unplug it, so it is advised to use an easily accessible power socket.

 
Optimize your battery performance

Here are some tips to help you optimize your battery performance.

- **Reduce the brightness of your screen:** Open the **Settings** charm, tap **Screen**, and then adjust the slider. The brighter the screen is, the more power it uses.
- **Choose a power plan that saves power:** A power plan is a collection of settings that control how your Windows tablet uses power.
- Turn off or remove devices that you are not using. Many USB devices consume power when connected, so you might want to unplug devices that you are not using.
- **Turn off Wi-Fi:** If you do not need Wi-Fi for awhile, you can turn it off to conserve battery power. To do this, open the **Settings** charm, tap the wireless network icon (), and turn on **Airplane mode**.


Power on your tablet

Press the power button to power on your tablet.

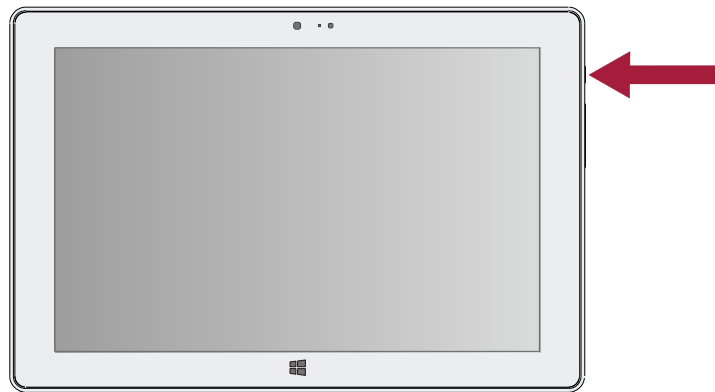

Install the SIM card

 With the SIM card's gold contacts facing down and its cut-off corner facing inwards, insert the SIM card all the way into the SIM card slot. Push the SIM card in until it clicks into place.

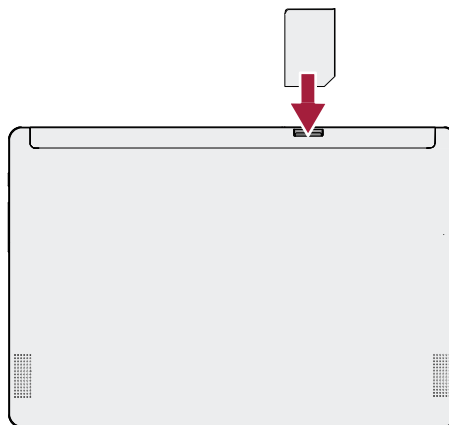

Remove the SIM card: Push the SIM card in to eject it from its slot, and remove it.

 


This is only available for model PMP810E3G/PMP810F3G.

Insert a memory card

You can expand the memory of your tablet and store additional multimedia files by adding a micro-SD card. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device.

1. Insert a memory card with the gold contacts facing downwards.
2. Push the memory card into the slot until it locks in place.

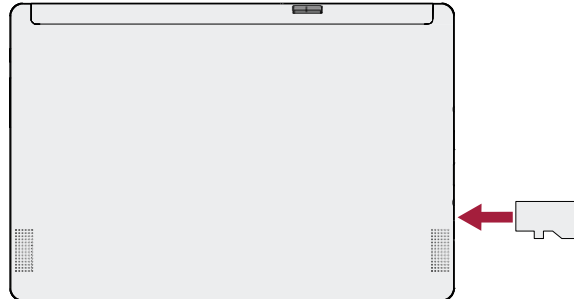

Some memory cards may not be fully compatible with the device. Using an incompatible card may damage the device or the memory card, or corrupt the data stored in it.

 


Frequent writing and erasing of data shortens the lifespan of memory cards.



Remove the memory card: push the memory card until it disengages from the device, and then pull it out.

Connect to an HDMI-compliant display

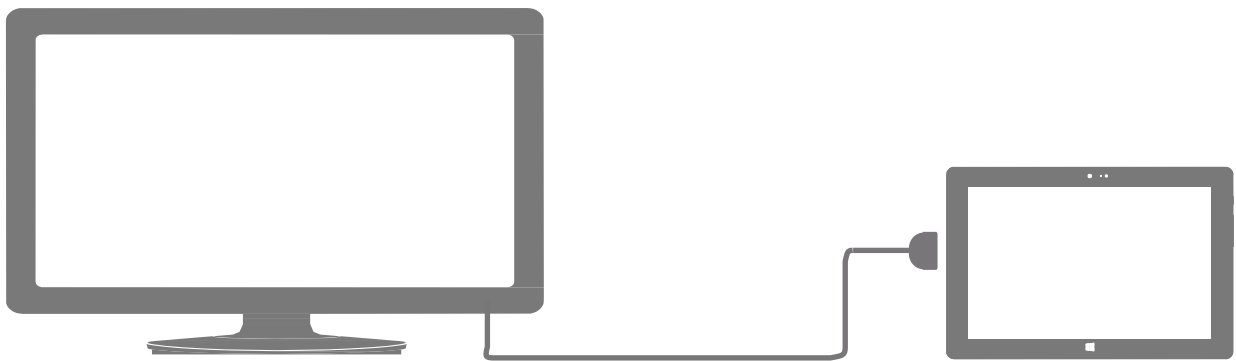


To connect an HDMI-compliant display

1. Connect the mini HDMI connector to the mini HDMI port of your Windows tablet.
2. Plug the HDMI cable to the HDMI port of an HDMI-compliant display.

Connect to USB devices

 You can use an USB dongle. It allows you to connect an USB device to your Windows tablet. With the USB dongle inserted, you can access the contented flash drives, or external HDDs, or use external USB speaks, a mouse, a keyboard, and other USB devices.

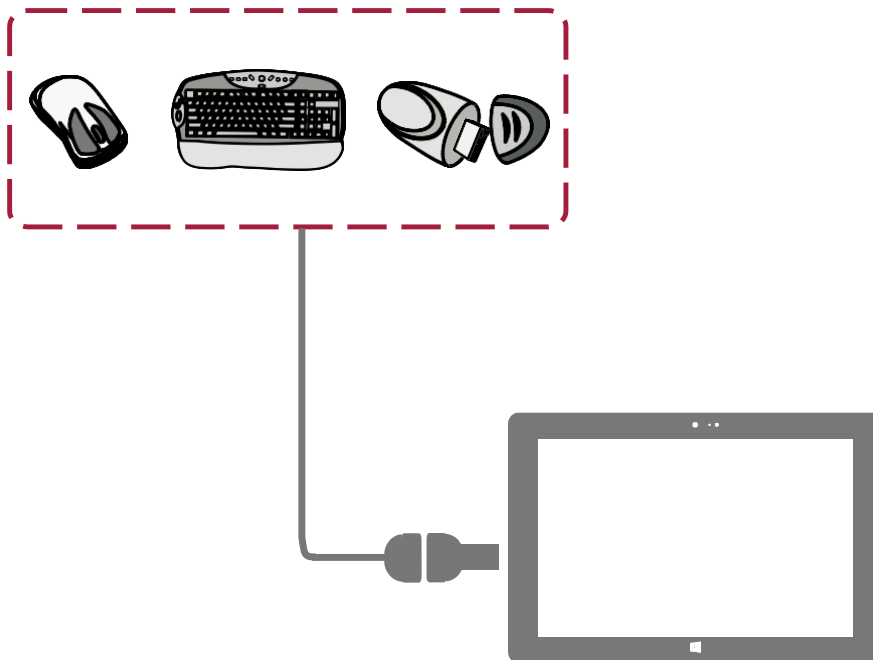


1. Insert the USB dongle's connector to your Windows tablet's micro USB 3.0 port.
2. Insert the USB device to the USB dongle's USB port.

Use a folio case

You can use a PBKB03 Bluetooth keyboard (an optional accessory , not included in your package) to make using your Windows tablet more convenient. PBKB03 is more than a keyboard. It is also a protective cover. Type on PBKB03 just as you would on any other keyboard.

 Device overview

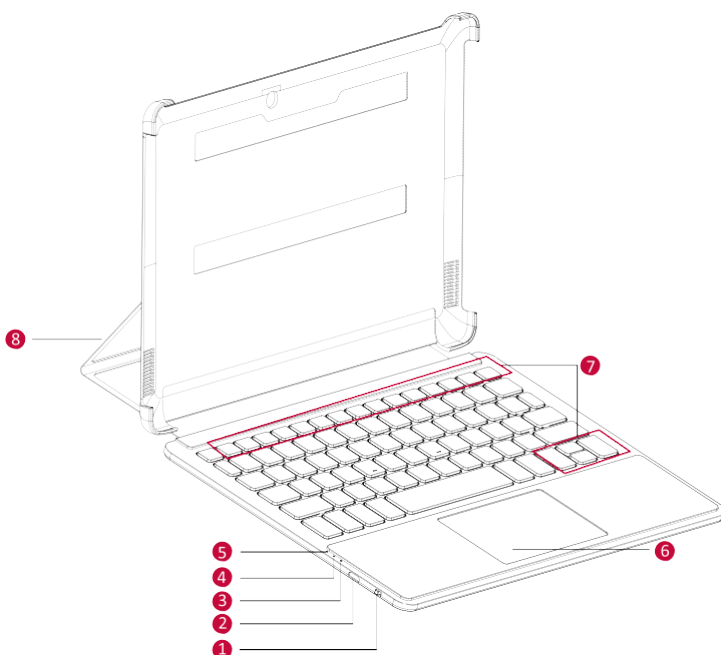

- 1 On/Off switch
- 2 Micro-USB charging port
- 3 NumLK light
- 4 Battery status light
- 5 Bluetooth light
- 6 Touch pad
- 7 Function keys
- 8 Kickstand

Getting started

1. Open the keyboard cover and insert your Windows tablet in the holder.
2. Move the holder into typing position. Flip out the kickstand and move the keyboard cover into typing position.

Connecting with an tablet

1. Make sure your Windows tablet is powered on.
2. Slide the power button to the right on the Bluetooth keyboard.
3. To activate the Bluetooth receiver, press **Fn+C** on the Bluetooth keyboard until the Bluetooth LED light starts blinking.
4. Tap the **Settings** charm on your tablet > **Change PC Settings** > **PC and devices** > **Bluetooth**.
5. The Windows tablet will search for available Bluetooth devices to pair with.
6. Once your Bluetooth keyboard is identified, tap Bluetooth keyboard.
7. Once pairing is completed, the Bluetooth LED indicator will turn off.

Status light indicators

Item	Light	Description
Battery status light	Blue	The battery power is sufficient.
	Red	Battery power is low. Recharge the battery.
Bluetooth light	Blinking blue	The keyboard is ready for pairing or is trying to reconnect to your Windows tablet. Or, the keyboard is in use.
	None	Bluetooth pairing or reconnection is successful.
	Solid blue	The keyboard has not been connected to any devices.
NumLK light	Blue	The numeric keypad is activated.
	None	The numeric keypad is turned off.

Function keys

Hot Keys (Fn+)	Function (Windows 8/ Windows 8.1)	Hot Keys (Fn+)	Function (Windows 8/ Windows 8.1)
F1	Sleep mode	F8	Screen settings
F2	Windows settings	F9	On/Off touch pad
F3	Brightness -	↑	Page Up
F4	Brightness +	↓	Page Down
F5	Volume -	←	Page Home
F6	Volume +	→	Page End
F7	Mute		

3. Basics



Finger tips

Only use your fingers on the touch screen.

Tap/Double tap



- Tap an app to launch it.
- On Desktop mode, double-tap an application to launch it.

Tap and hold



 
- To move an app, tap and hold the app tile and drag it to a new location.
- To close an app, tap and hold the top side of the running app and drag it down to the bottom of the screen to close it.

Swipe from edge



- **Right edge:** opens the charms.
- **Left edge:** brings in open apps, snaps apps, shows your recently opened apps, or close apps.
- **Top or bottom edge:** shows commands or closes an app.

Finger slide

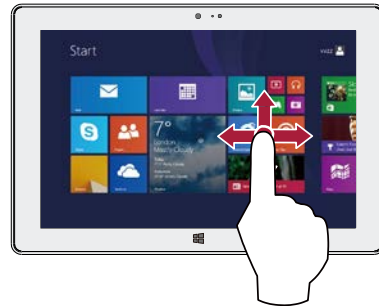

Slide your finger to scroll up and down, and slide your finger to pan the screen left or right.

Zoom in



Spread two fingers apart on the touch panel.

Zoom out

 


Pinch two fingers together on the touch panel.

Motion gesture


Rotate your Windows tablet for a better view


For many screens, you can automatically change the screen orientation from portrait to landscape by turning your Windows tablet sideways. When entering text, you can turn your Windows tablet sideways to bring up a bigger keyboard.

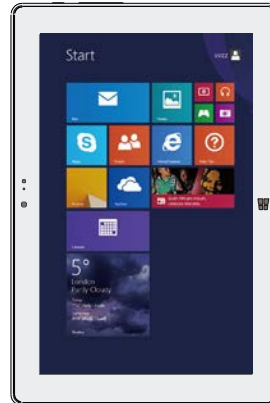

Lock the screen orientation

If you do not want the screen content to rotate, you can lock the screen orientation.

1. Rotate your Windows tablet for your desired orientation.
2. Open the Settings charm, and then tap or click **Screen**.
3. Tap the Screen rotation icon. 

A lock appears on the Screen icon when rotation is locked. 



- Some applications do not allow screen rotation.
- Some applications display a different screen based on the orientation.

Voice control

Voice control lets you control music playback using voice commands.

 
Use voice control: press the volume button to adjust the volume. Press the top of the button to turn up the volume, and press the bottom of the button to lower the volume.

Start screen

Start is the heart of your Windows tablet—it is where you open apps, see what your friends are doing, and get to your favourite websites. The tiles on Start show info, such as new email messages and the next appointment on your calendar.

To go to Start:

- Press [Windows] below the touchscreen, or swipe from the right edge of the screen and tap **Start**.

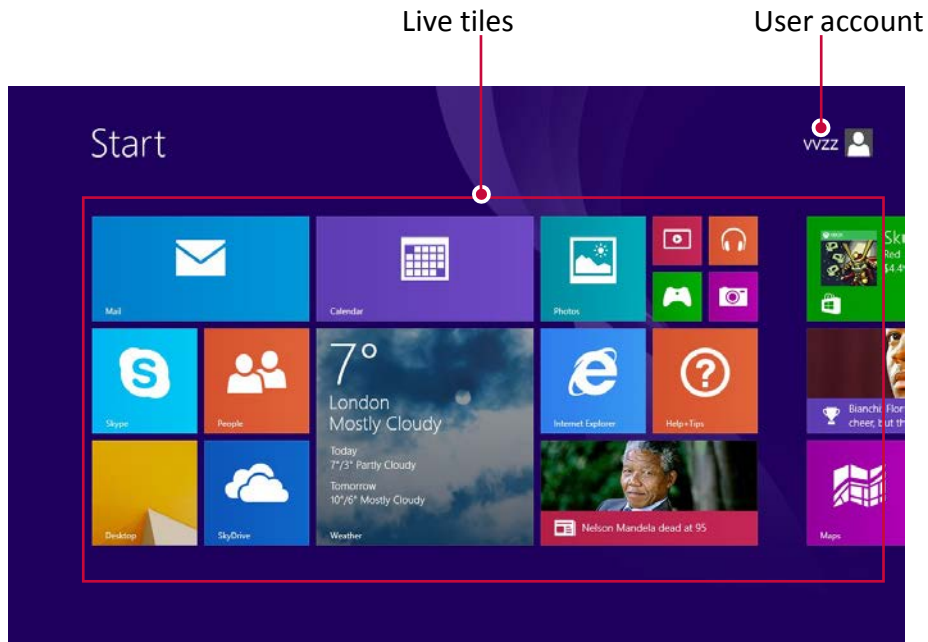

4. Work with Windows® 8.1

4

Start up for the first time

When you start your Windows tablet for the first time, a guide will appear on your screen to help you configure the basic settings of your Windows® 8.1 operating system.

To start for the first time:

1. Turn your Windows tablet on.
2. Carefully read the license terms. Tap **I accept the license terms for using Windows** and tap **Accept**.
3. Follow the next on-screen instructions to configure the following items:
 - Personalize
 - Settings
4. Once you are done configuring the basic items, the Windows® 8.1 video tutorial appears. Watch this tutorial to learn more about Windows® 8.1 functionalities.
5. Sign in to your user account to enter the Start screen.

Power status

Power on or wake

1. Press and release the power button. The lock screen appears with notifications for apps that have had activity.
2. To unlock your Windows tablet, swipe upwards from the bottom of the screen.

Sleep and hibernation

- If you do not use your Windows tablet for a few minutes, it will go to sleep just like a laptop would. Sleep is a power-saving state that allows your Windows tablet to quickly resume when you want to start working again.
- If you do not use your Windows tablet for an hour, it will go into a hibernation state. While sleep puts your work and settings in memory and draws a small amount of power, hibernation puts your open documents and programs on your hard disk, and then turns off your Windows tablet.

Windows lock screen

When your Windows tablet enters the Windows® 8.1 operating system or when it is in sleep or hibernate mode, the Windows lock screen may appear. Swipe upwards the lock screen to go to the Start screen.

Set the screen sleep time

If you do not use your Windows tablet for awhile, the screen may dim or turn off, or your tablet may go to sleep. This happens to help preserve battery life. Here is where you can change these settings:

1. Open the **Settings** charm, tap **Change PC settings > PC and devices > Power and sleep**.
2. Under **Screen**, choose when you want the screen to turn off.
3. Under **Sleep**, choose when you want your Windows tablet to go to sleep.

Shut down or restart

Open the **Settings** charm, tap **Power > Shut down or Restart**.

Charms

No matter where you are, the charms help you do the things you do most often—such as search, share, print, and change settings. They are always available regardless of which app you are currently in.

Display the charms

- Here is how to open the charms: Swipe from the right edge, and then tap the one you want.



Inside the charms bar

Here is what you can do with the charms:



Search

You can use the Search charm to find things on your Windows tablet.



Share

When you are in an app, you can use the Share charm to share files, photos, or webpages.



Start

The Start charm takes you to the Start screen. Or if you are already on Start, it takes you to the last app you used.



Devices

Use the Devices charm to play, project, and print to connected devices.



Settings

Use the Settings charm to change your Windows tablet settings. If you are in an app, you can go to settings for that app.

The familiar desktop

After introducing all this new stuff, here is something familiar. The Windows desktop—with its taskbar, folders, and icons—is still here, with a new taskbar and streamlined file management.



 
Get to the desktop

- On Start screen, tap **Desktop** (it is a tile).

Use Windows® apps

Open apps

- Tap an app tile on the Start screen.
- You can see all your apps by swiping upwards from the centre of the Start screen.

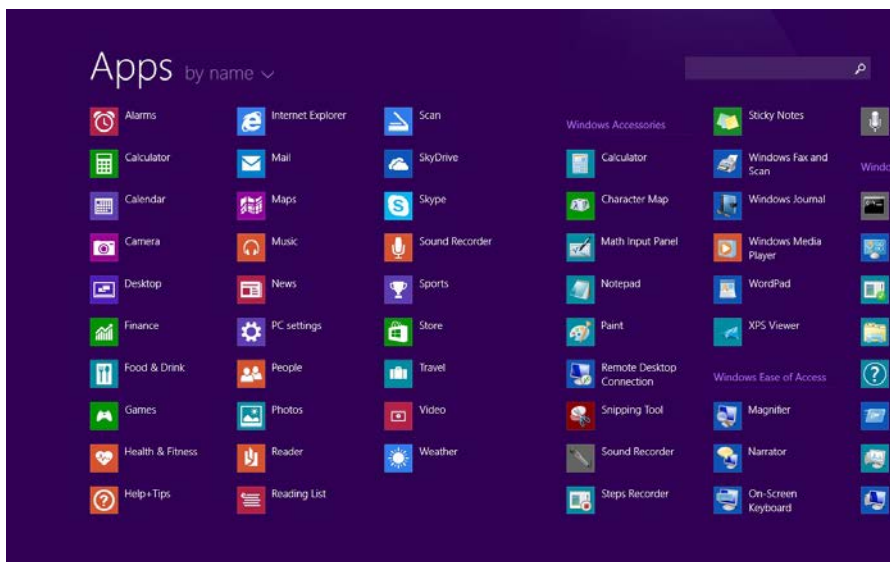

If you do not see the app or program you want, look in the Windows Store.

Switch between open apps

You can switch between open apps by swiping from the left edge of the screen. You can keep swiping, and each time you will switch to another app.

 
Switch to a specific app

- Swipe from the left edge, and with your finger still on the screen, move it back toward the left edge. Tap the app you want.



Use apps together (side by side)

You can use two apps at the same time by snapping them side by side. This way you can see two apps on the screen at once.

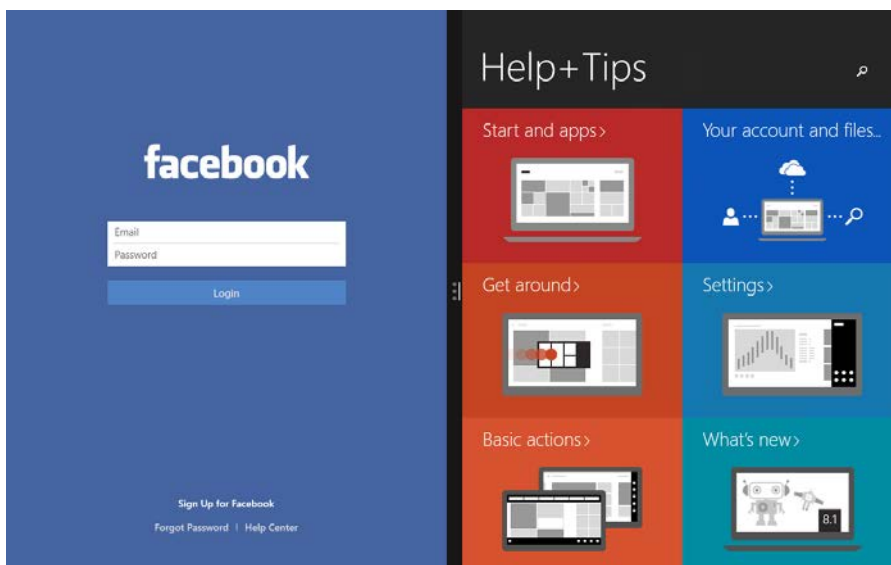

1. Open each of the apps you want to use.
2. Open the recently used app list (swipe from the left edge, and with your finger still on the screen, move it back toward the left edge).
3. Drag an app from the app list until the current app changes size, then let go of the app.
4. To adjust the size of the apps, drag the bar between the apps.



If you want to change one of the apps, go to Start or the Apps view and tap an app. It will appear on top of the first two apps. Tap the left of right side of the screen.

Close an app

You do not need to close apps from the Windows Store. When you switch to another app, Windows leaves the app running in the background. It will close eventually if you do not use it. If you really want to close a Windows Store app, here is how:

- Swipe downwards from the top edge of the screen, and drag the app down and off the screen.

App commands



Swipe upwards from the bottom edge of the screen, or downwards from the top edge. Choose an item on the bar of commands.

Customize the start screen

You can resize or unpin apps from the Start screen.


Resize apps

To resize an app tile:

1. Swipe from the bottom edge, and then tap .
2. Tap to select an app tile.
3. Tap  to reduce or enlarge the app tile.

Unpin apps

To unpin an app:

1. Swipe down the app tile to select and launch the settings bar.
2. Tap  to unpin an app.

Connect to the Internet

You can connect your Windows tablet to the Internet and browse a webpage on the website. Your tablet connect to the Internet whenever necessary, using a Wi-Fi connection (if available) or your mobile operator's data connection.

Wi-Fi

Connect the device to a Wi-Fi network to use the Internet or share media files with other devices. To use Wi-Fi, you need access to a wireless point or hotspot.




The availability and strength of the Wi-Fi signal will vary depending on objects, such as buildings or simply a wall between rooms, the Wi-Fi signal has to pass through.



Turn off the Airplane mode to enable the Wi-Fi.


To enable the Wi-Fi

1. Open the Settings charm, then tap the wireless network icon .
2. Tap to turn on Wi-Fi.
3. Tap to select an access point from the list of available Wi-Fi connections then tap **Connect**.
4. When you are prompted for a password, key in the password and tap **Next**.
5. Choose whether or not you want to connect to other PCs and devices on the network. Choose **No** if you are connecting to a network in a public place such as a café.



The next time your Windows tablet connects to a previously accessed secured wireless network, you will not be asked to enter the key or other security information again.

Disconnect from a wireless network

1. Open the Settings charm, then tap or click the wireless network icon .
2. Tap the network with a Connected status, and then choose **Disconnect**.

Mobile broadband


Mobile broadband makes it possible for you to connect to the Internet from virtually anywhere, even if there is no Wi-Fi network available. Mobile broadband connections use 3G, 4G, or LTE and mobile networks to do this, just as phones do.

You can use your mobile operator's data connection. Some apps and services may transfer data over your mobile operator's cellular network, which may result in additional fees. Contact your mobile operator for details.



It is only available for the Model: PMP810E3G/PMP810F3G.

To enable the data connection

1. Open the Settings charm, then tap the wireless network icon .
2. Tap to turn on **Mobile broadband**.
3. Tap to select the access point then tap **Connect**.
4. When you are prompted for a password, key in the password and tap **Next**.



If you do not have the data connection turned on and you are also not connected to a Wi-Fi network, you will not receive automatic updates to your email, social network accounts, and other synced information.


Airplane mode

The Airplane mode disables the wireless connections, allowing you to use your Windows tablet safely while in-flight.



Contact your airline provider to learn about related inflight services that can be used and restrictions that must be followed when using your tablet in-flight.

Turn the Airplane mode on or off

1. Open the Settings charm, then tap the wireless network icon .
2. Move the slider to the left to turn the Airplane mode off or move the slider to the right to turn the Airplane mode on.

Use Internet Explorer



Internet Explorer provides a more intuitive, faster and more secure way of browsing and sharing your favorite websites.



Ensure that you are connected to the Internet before using IE.

Use Internet Explorer





1. On the Start screen, tap [].
2. From web address bar, type the web address and tap [].


Add and close tabs

Tabs are your browsed web pages displayed in thumbnails shown on the Menu bar.

To add a new tab

1. Swipe from the top or bottom edge of the IE10 page to show the Menu bar.
2. Tap [].
3. In the web address bar, type the web address and tap [].

To close a tab

 
1. Swipe from the top or bottom edge of the IE10 page to show the Menu bar.
2. Tap [] of the tab that you want to close.

Change your settings

PC Settings

Most of the settings that you will want to change can be found in PC settings. To open PC settings:

1. Open the Settings charm. Some PC settings appear in the lower-right corner.

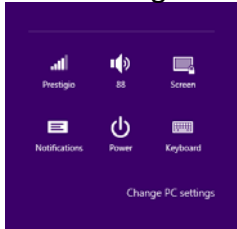

2. For more settings, tap **Change PC settings**.
3. Tap a category. For example, tap PC and devices to add a device, or Accounts to change account settings.

Search for a setting

You can use the Search charm to find a setting.

1. Open the Search charm, tap the arrow and choose Settings.
2. Tap the search box and type what you want to find. For example, type sound to find sound settings.
3. If you do not see the setting you want, tap the Search button to see more results.
4. Tap a setting to open it.

Control Panel

Control Panel includes some additional settings that you might use less often, such as customizing the desktop. To open Control Panel:

- Open the Search charm, type control panel, and then choose **Control Panel** from the search results.
- From the desktop, open the Settings charm and then tap **Control Panel**.

Sync your settings

When you sign in with a Microsoft account, your personal settings and preferences are stored on SkyDrive, and are synced to any PC that you sign in to.

To choose which settings sync:

Open the Settings charm, tap **Change PC settings > SkyDrive > Sync settings**.

Help and support

If you have any problems using the operating system, see the Windows Help and Support file.

To open the Windows Help and Support file:

- Select the Settings charm. Tap **Help**.

You can read the Windows Help and Support file on your Windows tablet. You can also get online help

and support by clicking the link listed under More to explore.

5. Recovery system

5

Introduction

If you are having problems with your tablet, you can try to restore, refresh or reset it. Restoring your tablet is a way to undo recent system changes you have made. Refreshing your tablet reinstalls Windows and keeps your personal files and settings. It also keeps the applications that came with your tablet and the apps you have installed from the Windows Store. Resetting your tablet reinstalls Windows but deletes your files, settings and applications – excluding the applications that came with your tablet.

Refresh your Windows tablet

Fixes software problems by reinstalling the factory default configuration. This preserves the user's data, important settings, and any Windows Store apps previously purchased from the Windows Store.


1. Swipe in from the right edge of the screen, tap **Settings**, then tap **Change PC settings**.
2. Tap **Update and recovery**, and then tap **Recovery**.
3. Under **Refresh your PC without affecting your files**, tap **Get started**.
4. Follow the instructions on screen.


Reset your Windows tablet


Prepares your tablet for recycling or transferring of ownership. This reinstalls the factory default configuration and returns all user data and applications to the state of their original Out-of-Box Experience.

Remove everything and reinstall Windows

Restoring your Windows tablet to its original factory settings can be done using the Remove everything and reinstall option in PC Settings. Refer to the steps below to enable this option:

 Back up all your data before enabling this option.

 This process may take a while to complete.

1. Launch the Charms bar.
2. Tap  > **Change PC Settings** > **Update and recovery**.
3. Under **Remove everything and reinstall Windows**, tap **Get started**.
4. Follow the onscreen instructions to complete the reinstallation and reset process.

6. Specification

6

Item	Specification
OS	Windows 8.1
Processor	Intel® Celeron® Processor N2805 (1M Cache, 1.46 GHz)
GPU	Intel® HD Graphics, 667Mhz
Memory	2 GB RAM+32 GB/64 GB (SSD) ROM, Micro SD slot supports up to 64GB
Display	10.1" IPS, Capacitive Multi-Touch (10 Dots)
Resolution	1280*800
Camera	Front 1M
Communications	WiFi: 802.11 b/g/n GSM: 900MHz/1800MHz WCDMA: 900MHz / 2100MHz (It is only available for the Model: PMP810E3G/PMP810F3G.)
Speaker	Built-in stereo speakers 0.8W*2
Interfaces	Micro USB 3.0, Mini HDMI, Micro SD (micro SDHC compatible)
Bluetooth	Support Bluetooth 4.0
G-sensor	Support
Light sensor	Support
GPS	Support
Power Requirements	12V / 2A (DC interface)
Battery	4000mAh/7.4V Lithium battery
Dimension	258.66*173.3*9.9mm
Weight	580g (PMP810E/PMP810F) 590g (PMP810E3G/PMP810F3G)

7. Troubleshooting

7

When I turn on my Windows tablet, nothing appears on the screen.

- If the screen is blank, make sure that:
 - The AC power adapter is connected to the tablet and the power cord is plugged into a working electrical outlet.
 - The tablet power is on. Press and hold the Power button for three seconds for confirmation.
 - Press and hold the Power button for seven seconds to force shut down the tablet. Then press the power button for three seconds to restart.
- If these items are set correctly and the screen remains blank, have the tablet serviced.

The screen goes blank while my Windows tablet is on.

- Your power management is enabled. Do one of the following to resume from sleep mode:
 - Press the Power button.
 - Press the Windows button.
 - Press any key on the keyboard (located on the folio case).

The touch screen responds slowly or improperly

If the touch screen is not responding properly, try the following:

- Remove any protective covers from the touch screen. Protective covers may prevent the device from recognising your inputs and are not recommended for touch screen devices.
- Ensure that your hands are clean and dry when tapping the touch screen.
- Restart your device to clear any temporary software bugs.
- Ensure that your device software is upgraded to the latest version.
- If the touch screen is scratched or damaged, take it to your local dealer.

The critical low-battery error message appears, and the Windows tablet immediately turns off.

- The battery power is getting low. Connect the AC power adapter to the Windows tablet.

The Windows tablet enters sleep mode immediately after Power-on.

- Make sure that:
 - The battery is charged.
 - The operating temperature is within the acceptable range.

If the battery is charged and the temperature is within range, do the following:

1. Press the Power button for three seconds to turn on the tablet.
2. Press and hold the Power button for seven seconds to force shut down.
3. Press the Power button for three seconds again to restart.

If the problem persists, have the tablet serviced.

The tablet does not return from sleep mode and it does not work.

- If the tablet does not return from sleep mode, it might be because the battery is depleted.
- If your tablet is in sleep mode, connect the AC power adapter to the tablet. Then press the Windows button or the Power button.
- If your tablet is powered-off, connect the AC power adapter to the tablet. Then press the Power button to resume operation.

The screen is blank.

- Do the following:
 - If you are using the AC power adapter or the battery, press Fn+F3 to make the screen brighter.
 - Press the Power button to confirm if the tablet is in sleep mode.

The screen is unreadable or distorted.

- Make sure that the screen resolution and color quality are correctly set.

Incorrect characters appear on the screen.

- Is the operating system or programs installed correctly?

No sound can be heard from the speaker even when the volume is turned up.

- Make sure that:
 - The Mute function is off.
 - The combo audio jack is not being used.
 - Speakers are selected as the playback device.

Your tablet shuts down before the battery status icon shows it is empty.

- Recharge the battery.

Your battery seems to over heat

- You might be using a charger that was not intended for use with your tablet. Make sure you always use the authentic accessory shipped with your tablet.

Your tablet is not charging

- If the battery is completely flat, it might take several minutes of precharge (up to 5 minutes in some cases) before the charging icon is displayed on the screen.

The Microsoft® Windows operating system does not start.

- For details, see “Recovery system” on page 20.

Failure to restore system partition to factory default.

- The system partition (e.g. the partition size or the drive capacity of C) has been modified.

Your tablet does not respond.

- To turn off your tablet, press and hold the Power button for seven seconds or more. If the tablet still does not respond, remove the AC power adapter.