

# Electric Kettle

User's Manual

EN



**SENCOR®**

SWK 1785BK

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future reference.

We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor and warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

EN-1

# Electric Kettle

SWK 1785BK

## TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS .....	3
DESCRIPTION OF THE KETTLE .....	6
BEFORE FIRST USE .....	6
USING THE KETTLE .....	7
CLEANING AND MAINTENANCE .....	7
TECHNICAL SPECIFICATIONS .....	8
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS ..	8
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT .....	8

## IMPORTANT SAFETY INSTRUCTIONS

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision. Keep this appliance and the power cord out of reach of children that are younger than 8 years of age.
- Children must not play with the appliance.
- Before connecting the electric kettle to a power socket, check that the voltage stated on the rating label matches the electrical voltage in the socket.
- Connect the electric kettle only to a properly grounded socket.

#### **Attention:**

This electric kettle is not designed to be controlled using a programmed device, external timer switch or remote control.

- The electric kettle is designed for domestic use and similar places such as:
  - staff kitchens in stores, offices and other workplaces;
  - hotel or motel rooms and other living areas;
  - bed and breakfast establishments;
  - agricultural farms.
- Do not use the electric kettle outdoors.
- Do not place the electric kettle on window sills or on unstable surfaces. Always place the electric kettle on a stable, even and dry surface.

# Electric Kettle

SWK 1785BK

- Never use the electric kettle in the near vicinity of a bath, shower or swimming pool.
- Only use the electric kettle with the base that was supplied with it. Do not use the base supplied with this electric kettle for other types of electric kettles.
- Use the electric kettle only for boiling water.
- If the electric kettle is overfilled, then boiling water could splash out.
- Don't move the kettle lid or open it while the water is boiling.
- Pay extra attention when handling a kettle filled with hot water.
- The electric kettle is protected against damage caused by accidentally running it without water.
- If the electric kettle is running, do not leave it unattended.
- Always disconnect the electric kettle from the power socket if you will not be using it or before moving or cleaning it.
- Do not place the electric kettle on an electric or gas stove or in its vicinity, do not place it in the vicinity of an open fire or an appliance that is a source of heat.
- Ensure that the power cord does not come into contact with water or moisture.
- Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table or that it is not touching a hot surface.
- Do not disconnect the electric kettle from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling on the plug of the power cord.
- Do not use the electric kettle if it has fallen on the floor, has visible signs of damage or if it is leaking.
- If the power cord is damaged, have it replaced at a professional service centre. It is forbidden to use the electric kettle if it has a damaged power cord or plug.

# Electric Kettle

SWK 1785BK

EN


- To avoid the danger of injury by electrical shock, do not repair the electric kettle yourself or make any adjustments to it. All repairs of this electric kettle should be carried out at an authorised service centre. By tampering with the appliance you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.



## **Attention: Hot surface**

When the appliance is used, the kettle's body heats up. Do not touch the hot surface. You could suffer burns.

## DESCRIPTION OF THE KETTLE

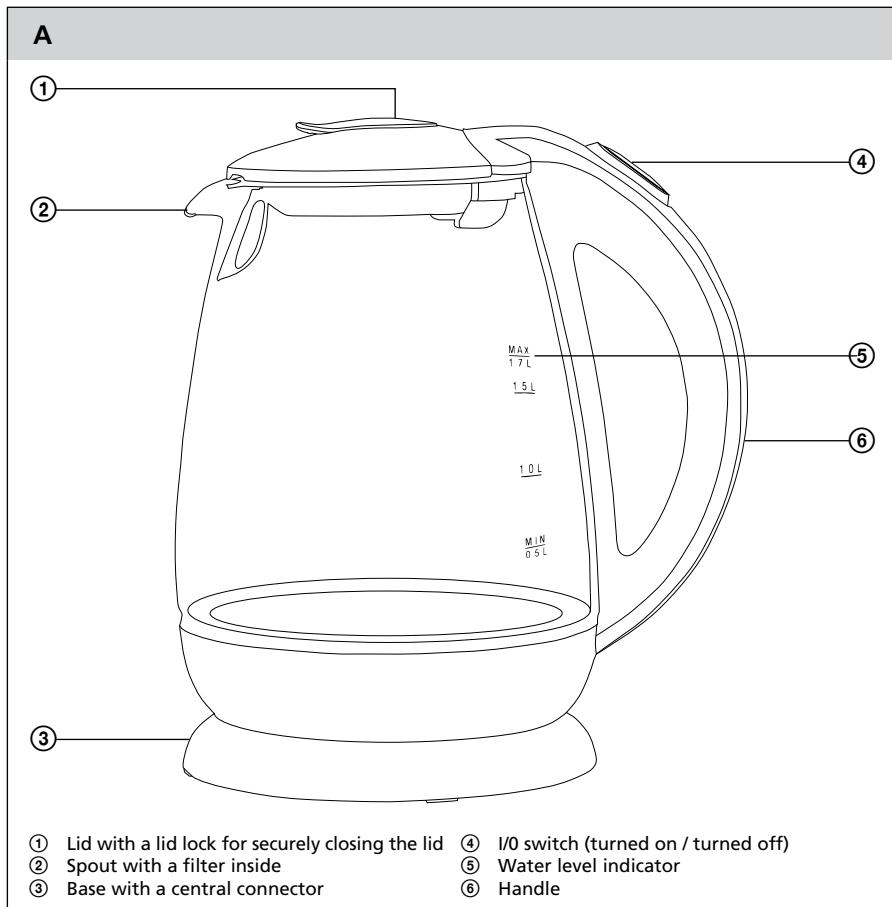

## BEFORE FIRST USE

1. Remove all packaging material from the kettle and its base.
2. Fill the kettle with clean water up to the maximum water mark. Boil the water and empty the contents of the kettle. Repeat this process two to three times.

**Note:**

To boil water in the kettle, proceed according to the instructions in chapter Using the kettle.

3. Now the electric kettle is ready for operation.

# Electric Kettle

SWK 1785BK

EN

## USING THE KETTLE

1. Set the desired length of the power cord. Push the power cord into the groove in the base. Place the base on a stable, even and clean surface.
2. Fill the kettle with the required amount of water. The water level must reach at least the minimum mark (0.5 l) and must not exceed the maximum mark (1.7 l). You may fill the kettle through the spout or through the opening after lifting the lid. The lid can only be opened once the lid lock, located in the middle of the lid, is released. After filling the kettle with water, close the lid and push it down so that it is secured in the closed position.



### Warning!

Never fill the kettle when it is located on the base.  
If the electric kettle is overfilled, then boiling water could splash out.

3. Place the kettle on the base. Insert the power plug into an electrical power socket. Check that the lid of the kettle is closed.
4. Start the kettle by setting the switch to position I (On). The inside of the kettle will be illuminated.



### Attention:

Do not turn on the kettle when it is empty. The incorrect use of the kettle may negatively affect its lifetime. If you accidentally turn on the electric kettle without water, the thermostat will, after reaching a certain temperature, interrupt the electric circuit and the kettle light inside will turn off. The kettle can be used again after several minutes, as soon as its stainless steel bottom has cooled down.

5. When the water starts to boil, the kettle will turn off automatically and the kettle light inside will turn off. Before taking the kettle off the base, check that it has turned itself off automatically. If it has not automatically turned itself off, turn off the kettle manually by setting the switch to position 0 (Off).



### Note:

The operation of the kettle can be interrupted at any time by setting the switch to position 0 (Off).

6. Pour the boiled water into a prepared container, cup or mug. Make sure that it remains in a vertical position when it is carried, particularly if it is filled all the way up to the maximum mark. If you wish to open the lid to refill the kettle, first empty all the contents of the kettle so that you are not scalded by the escaping steam.
7. After you finish using the kettle, disconnect the power cord from the el. power socket. Empty the kettle and allow it to cool down.

## CLEANING AND MAINTENANCE

- Regularly remove water scale deposits from inside the kettle based on how frequently the kettle is used. During standard use of the kettle (3 to 5 times per day), we recommend to remove water scale deposits:
  - once per month in areas with hard and very hard water;
  - once every two to three months in areas with soft and medium hard water.
- To remove water scale deposits it is possible to use:
  - 8% white vinegar, generally available in stores. Put ½ l of vinegar into the kettle and allow it to settle for 2 hours without boiling. Then empty the kettle and before further use, boil clean water in it four to five times.

# Electric Kettle

SWK 1785BK

- citric acid. Boil ½ l of water in the kettle, into the boiled water, add 30 g of citric acid and allow it to settle for about 30 minutes. Then empty the kettle and before further use, boil clean water in it four to five times.
- To clean the external parts of the electric kettle, use a dry cloth or a cloth dipped in a weak solution of neutral kitchen detergent. After applying the kitchen detergent, wipe the surface with a lightly damp cloth and then wipe dry.
- To clean the base, use only a dry cloth.
- Never use cleaning agents causing abrasion, petrol, solvents, etc. to clean the kettle and the base.

## TECHNICAL SPECIFICATIONS

Rated voltage .....	220–240 V
Rated frequency .....	50/60 Hz
Rated power input .....	1 850–2 200 W
Capacity .....	1.7 l

We reserve the right to change text and technical specifications.

### INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

#### For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

#### Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This appliance meets all the basic requirements of EU directives related to it.