

Contents

1 Instructions	12
1.1 General instructions	12
1.2 Declaration of conformity	12
1.3 Declaration art. 10.10 Directive 2014/53/EU	13
1.4 This user manual	13
1.5 How to read the user manual	13
2 Smeg Connect	14
2.1 Control panel	14
2.2 Connectivity requirements	14
2.3 Installation of the App	14
2.4 Registration of the product	15
2.5 Remote connection	18
2.6 Software updates	18

ENGLISH

Dear Customer, thank you for your confidence in our products.

By purchasing one of our products, you have chosen a package in which aesthetic research, combined with innovative technical design, offers unique items that become furnishing elements.

We hope that you will fully appreciate the features of your appliance and we send you our best regards.

SMEG S.p.A.

Apple, App Store and iOS marks belong to Apple Inc.

Google Play Store and Android marks belong to Google Inc.

Wi-Fi is a mark belonging to Wi-Fi Alliance.

The manufacturer reserves the right to make any changes deemed necessary for the improvement of its products without prior notice. The illustrations and descriptions contained in this manual are therefore not binding and are merely indicative.

TRANSLATION OF THE ORIGINAL INSTRUCTIONS

We advise you to read this manual carefully, as it contains all the instructions for maintaining the appliance's aesthetic and functional qualities.

For further information on the product: www.smeg.com



1 Instructions

1.1 General instructions

- The use of the App requires the availability of a Wi-Fi network with dedicated internet router, for the connection between appliance and mobile device.
- In case of poor signal for the use of the appliance, envisage to install a Wi-Fi repeater nearby.
- Outside the coverage range of the Wi-Fi network, the use of the App involves the availability of a data link for the mobile device.
CAUTION: additional costs might arise depending on the contract with the mobile phone operator.
- The appliance can operate off-line as a "non-connected" household appliance, but it cannot be controlled through the App when the Wi-Fi connection or the data link are deactivated.
- For safety reasons and in compliance with the regulations in force, not all the functions of the appliance can be remotely activated.

1.2 Declaration of conformity

The manufacturer SMEG declares that the types of radio devices:

CVI118RWS2 - CVI118LWS2
CVI118RWN2 - CVI118LWN2
CVI318RWX2 - CVI318LWX2
CVI618RWN2 - CVI618LWN2
CVI618RWX2 - CVI618LWX2
CVI638RWN2 - CVI638LWN2
CVI338RWX2 - CVI338LWX2

comply with the directive
2014/53/EU.

- Technology:
Wi-Fi IEEE 802.11 b/g/n.
- Frequencies: **2400-2497 MHz.**
- Max. output power: **+18.5 dBm.**
- The equipment operates in the **ISM band at 2.4 GHz.**

The complete text of the EU declaration of conformity is available at the following internet address:

www.smeg.com/smegconnect/direttiva_red



1.3 Declaration art. 10.10 Directive 2014/53/EU

This radio equipment is **NOT subject to restrictions on putting into service or to requirements concerning authorisation for use in any of the EU Member States.**

1.4 This user manual

This user manual is an integral part of the appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.

Read this user manual carefully before using the appliance.

1.5 How to read the user manual

This user manual uses the following reading conventions:

Instructions



General information on this user manual, on safety and final disposal.

Use



Information on the use of the appliance and its accessories.



Information

1. Sequence of instructions for use.

 - Standalone instruction.



2 Smeg Connect

The appliance is equipped with the **Smeg Connect** technology so that the user can control its operation through an App on his smartphone tablet.

For further information, refer to the supplied brochure and/or visit the site

www.smeg.com

2.1 Control panel



The functions of the control panel depending on the appliance connectivity will be described here below.

Display

The display shows the information of the appliance.

ON/OFF key

This key allows you to turn the appliance on or off.

Connection key

Use this key to activate or deactivate remote connection.

Light key

Control lock key

Fan key

Use these keys to adjust the appliance.

2.2 Connectivity requirements

- Smartphone or PC tablet with IOS version 10.x or higher or Android version 5.1 or higher.
- WLAN network activated and available in the location where the appliance is installed.
- Internet connection.
- Name and password of the home WLAN.


2.3 Installation of the App

- Download the App **Smeg Connect** on your mobile smartphone or tablet from APP Store (Apple devices) or Google Play Store (Android devices) and install it.



2.4 Registration of the product

i If the wording **Connection Failed** **CF** is displayed during recording, it means that some passages of the procedure did not work properly or were interrupted.

i The registration procedure can be interrupted at any time by pressing the **Connection** key 

Creation of the account



1. Start the App **Smeg Connect**.
2. Enter the data required for registration.


i the fields marked with an asterisk "*" are compulsory.

3. At the end of the registration a confirmation email will be sent to the required address.

Connection to the device

1. **Log in**.
2. In the following screen **Welcome User Name**, touch **Add product**.



3. In the following screen **Add product** select the type of product you wish to connect (in this case "wine cellar")
4. Press any key on the device to activate the control panel.
5. Hold down the **Connection**  key for a few seconds.

The device enters the menu **Smeg Connect**: the display shows **SC**.



Use

Manual mode



 
For the connection:

6. Press the **LIGHT**  key within 30 seconds to proceed with manual registration of the product.
7. Touch **Proceed with manual connection** on the App.

Proceed with manual connection





End of the registration



1. On the mobile device, open Wi-Fi settings and select the "**smegconnect**" network.
2. Enter the password "**smeg0001**" and wait until the complete connection.
3. Go back to the **Smeg Connect App** and touch **Next**.

Next

4. Press the **Fan** key on the appliance within one minute . The **Connection**  key starts flashing..
5. In the Smeg Connect App touch **Next**.

Next

6. Enter the data of the Access Point:
 - Name of the household network (SSID)
 - Password of the Wi-Fi (key).

My Home Wi-Fi



Enter Wi-Fi password



7. Touch **Next** and wait.

Next

8. Wait for the welcome page in the App.

Pairing completed successfully




Welcome in Smeg Connect
Your product is connected


When an acoustic signal is heard, the product registration procedure is completed.




Change of the Access Point access rights

i The access right change procedure can be interrupted at any time by pressing the **Connection** key .

If the access rights (**name of the network** or **password**) of your Access Point are changed:

1. **Log in.**
2. Enter the page **Product Info** and select the item **Access Point Change**.
3. Press any key on the device to activate the control panel.
4. Hold down the **Connection**  key for a few seconds.



The device enters the menu **Smeg Connect**: the display shows .


5. Hold down the **ON/OFF**  key for a few seconds.
6. On the mobile device, open Wi-Fi settings and select the "**smegconnect**" network.
7. Enter the password "**smeg0001**" and wait until the complete connection.
8. Go back to the **Smeg Connect** App and touch **Next**.

Next

9. Press the **Fan** key on the appliance within one minute .
10. In the Smeg Connect App touch **Next**.

Next

11. Enter the data of the new Access Point. The **fan**  key is steady light and the **Connection**  key starts flashing. When an acoustic signal is heard, the Access Point credentials change procedure is completed.


i If the wording **Connection Failed**  is displayed during recording, it means that some passages of the procedure did not work properly or were interrupted.





2.5 Remote connection




To connect the device:

1. Press any key to activate the control panel.
2. Press the **Connection**  key.

The Connection key  starts flashing. For a few seconds the display will show the wording  alternately with the value of the temperature, until the internet link is completed.

Disconnect the device:


- At any time, press the **Connection**  key.

The **Connection**  key stops flashing and becomes steady again.

Cancel the registration

To cancel the registration of the device

- Enter the App, menu **Product Info** and proceed as instructed.


 The device must be registered again following the above procedure.


To cancel the registration of the user

- Enter the App, menu **My Account** and proceed as instructed.


What to do if...

During the connection the display shows

 alternately with the temperature value. If this condition continues for more than one minute, there might be problems in the remote connection:

- Check if the router is switched on.
- Check if the router is not too far.
- Check the internet link.
- Press the **Connection**  key to disconnect the device and retry the connection later on.


2.6 Software updates

 This stage does not require any activity of the user.

Software updates are occasionally released concerning the device connectivity.

If the device is connected to the home WLAN, the updates are automatically downloaded and installed.

During installation, the connectivity service is temporarily stopped (this lasts about 2 minutes).

 During software updates, the devices operates as usual.