



■ PARTS LIST FOR

KEY NO.	PARTS NO.	PARTS NAME	KEY NO.	PARTS NO.	PARTS NAME	KEY NO.	PARTS NO.	PARTS NAME
1	0232198	DRAG KNOB ASSY.	22	68519A	LINK	44	67107	ONE WAY CLUTCH SPRING
2	42081	STOPPER SPRING	23	15711	KICK LEVER	45	02032119	MAIN BODY ASSY.
3	0268514	CLICK PLATE ASSY.	24	412144	COVER A	46	14353	ANTI-REVERSE CAM
4	26439	DRAG WASHER	25	342113	OSCILLATOR SHAFT	47	152117	ANTI-REVERSE LEVER
5	062154	SPOOL ASSY.(1000)	26	0229369	BAIL ARM ASSY.	48	672102	ANTI-REVERSE SPRING
	062155	SPOOL ASSY.(2000)	27	27704	WASHER	49	20632	SCREW
6	33327	CLICK CLAW	28	25099	ROLLER	50	02322107	HANDLE ASSY.
7	67108	CLICK CLAW SPRING	29	17451	COLLAR	51	9406-01-25	SCREW
8	21157	CLICK CLAW SCREW	30	15708C	BAIL ARM LEVER	52	412140	PROTECTOR
9	38248	BALL BEARING	31	21165	SCREW	53	5406-01-05	SCREW
10	42077	RETAINING RING	32	20663	SCREW	54	10474	BULL GEAR
11	27453B	CLICK WASHER	33	612901	COVER B	55	110102	OSCILLATOR
12	13119	CLICK	34	30162	BEARING SUPPORT	56	20383AB	SCREW
13	27694	SPOOL WASHER	35	38049	BALL BEARING	57	38059	BALL BEARING
14	342107	SHAFT	36	17435	BALL BEARING COLLAR	58	08279	MAIN GEAR
15	18035	NUT	37	68517	HOLDER	59	27290A	WASHER
16	302001	NUT WASHER	38	25089	ROLLER	60	02042118	SIDE PLATE ASSY.
17	20662	SCREW	39	17413	INNER RING	61	8406-LD-01	SCREW
18	20634	SCREW	40	09332	PINION GEAR	62	GWB-LD-01	SCREW
19	052121	ROTOR	41	9406-01-20	CONTROL PLATE	63	6405-00-38	HANDLE CAP ASSY.
20	68513	SLIDER	42	68449	OUTER RING	64	412141	PROTECTOR
21	67077	DEAD POINT SPRING	43	23349	SPRING PIN			