

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

Čeština
<div>🔧 Tipy</div> <div> - Tento bezdrátový adaptér podporuje pouze operační systém Windows 10.</div> <div> - Pokud jste bezdrátový adaptér již nainstalovali, odinstalujte stávající bezdrátový adaptér. Konkrétní kroky naleznete v příloze.</div> <div> - Pokud je držák s vysokým profilem pro váš počítačovou skříň příliš vysoký, můžete si namontovat bezdrátovou anténu pomocí držáku s nízkým profilem.</div>
<div>🔧 Montáž hardwaru</div> <div> <ol style="list-style-type: none">Vypněte počítač a odpojte jej od elektriky, poté odstraňte boční panel počítačové skříně. Vyberte dostupný slot PCI-E X1 a odstraňte držák odpovídající slotu v počítačové skříni. Poté do vybraného slotu zasuněte bezdrátový adaptér a zkontrolujte, že v něm dobře sedí.</div>
<div>📌 Poznámka</div> <div>Někdy můžete se k novým hardwarovým komponentám bezdrátového adaptéru, abyste bezdrátový adaptér nepoškodili statickou elektřinou.</div>
<div>3. Připojte bezdrátovou adaptérnou anténu. Namontujte boční panel počítačové skříně a poté připojte počítač k elektrice a zapněte jej.</div>

Deutsch
<div>🔧 Tipps</div> <div> - Der drahtlose Adapter unterstützt nur das Betriebssystem Windows 10.</div> <div> - Wenn Sie zuvor einen drahtlosen Adapter installiert haben, deinstallieren Sie den bestehenden drahtlosen Adapter im Menüpunkt Hilfe>Sicherungen >Vorgeschichte.</div> <div> - Wenn die große Halterung zu lang für Ihr PC-Gehäuse ist, können Sie für die Anbringung des drahtlosen Adapters die kleine Halterung verwenden.</div>
<div>🔧 Hardware-Installation</div> <div> <ol style="list-style-type: none">Schalten Sie den Computer aus und trennen Sie die Stromzufuhr, entfernen Sie dann die Seitenabdeckung des PC-Gehäuses. Wählen Sie einen verfügbaren PCI-E X1-Steckplatz aus und entfernen Sie die Halterung für den Steckplatz im PC-Gehäuse. Stecken Sie dann den drahtlosen Adapter in den ausgewählten Steckplatz und stellen Sie sicher, dass der drahtlose Adapter ordnungsgemäß im Steckplatz steckt.</div>
<div>📌 Hinweis</div> <div>Berühren Sie nicht die Metallteile am Anschluss des drahtlosen Adapters, um eine Beschädigung des drahtlosen Adapters durch eine statische Entladung zu vermeiden.</div>
<div>3. Bringen Sie die Antennen des drahtlosen Adapters an. Bringen Sie die Seitenabdeckung des PC wieder an, schalten Sie die Stromzufuhr an und schalten Sie den PC an.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

Deutsch
<div>🔧 Tipps</div> <div> - Der drahtlose Adapter unterstützt nur das Betriebssystem Windows 10.</div> <div> - Wenn Sie zuvor einen drahtlosen Adapter installiert haben, deinstallieren Sie den bestehenden drahtlosen Adapter im Menüpunkt Hilfe>Sicherungen >Vorgeschichte.</div> <div> - Wenn die große Halterung zu lang für Ihr PC-Gehäuse ist, können Sie für die Anbringung des drahtlosen Adapters die kleine Halterung verwenden.</div>
<div>🔧 Hardware-Installation</div> <div> <ol style="list-style-type: none">Schalten Sie den Computer aus und trennen Sie die Stromzufuhr, entfernen Sie dann die Seitenabdeckung des PC-Gehäuses. Wählen Sie einen verfügbaren PCI-E X1-Steckplatz aus und entfernen Sie die Halterung für den Steckplatz im PC-Gehäuse. Stecken Sie dann den drahtlosen Adapter in den ausgewählten Steckplatz und stellen Sie sicher, dass der drahtlose Adapter ordnungsgemäß im Steckplatz steckt.</div>
<div>📌 Hinweis</div> <div>Berühren Sie nicht die Metallteile am Anschluss des drahtlosen Adapters, um eine Beschädigung des drahtlosen Adapters durch eine statische Entladung zu vermeiden.</div>
<div>3. Bringen Sie die Antennen des drahtlosen Adapters an. Bringen Sie die Seitenabdeckung des PC wieder an, schalten Sie die Stromzufuhr an und schalten Sie den PC an.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

Magyar
<div>🔧 Tipp</div> <div> - Ez a vezeték nélküli adapter csak a Windows 10 operációs rendszer támogatja.</div> <div> - Ha már korábban telepített vezeték nélküli adattort, kérjük, először eltávolítsa a meglévő vezeték nélküli adattort. A konkrét lépéseket lásd az A melléklet.</div> <div> - Ha a magas profilú tartókeret túl hosszú a számítógép háttérpaneljének lyukához, a vezeték nélküli hálózati kártya a csatlakozás elősegítésére használhatók a csatlakozó tartók.</div>
<div>🔧 Hardvertelepítés</div> <div> <ol style="list-style-type: none">Kapcsolja ki a számítógépet és válassza le a tápellátást, majd távolítsa el a számítógépház oldalrészét. Válasszon ki egy rendelkezésre álló PCI-E X1 foglalatot, és távolítsa el a számítógéphez tartozó foglalatot. Ezt követően helyezze a vezeték nélküli hálózati kártyát a kiválasztott foglalatba, és győződjön meg arról, hogy a kártya megfelelően becsúszott a foglalatba.</div>
<div>📌 Megjegyzés</div> <div>Nem érintse meg a vezeték nélküli hálózati kártya csatlakozójának fém érintkezőit, hogy a statikus elektromosság ne léghessen ki a kártya alkatrészeiben.</div>
<div>3. Szerelje fel az antennákat a vezeték nélküli hálózati kártyára. Szerelje vissza a számítógéphez tartozó oldalrészét, majd csatlakoztassa újból a számítógépet a tápellátással, és kapcsolja be.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

Magyar
<div>🔧 Tipp</div> <div> - Ez a vezeték nélküli adapter csak a Windows 10 operációs rendszer támogatja.</div> <div> - Ha már korábban telepített vezeték nélküli adattort, kérjük, először eltávolítsa a meglévő vezeték nélküli adattort. A konkrét lépéseket lásd az A melléklet.</div> <div> - Ha a magas profilú tartókeret túl hosszú a számítógép háttérpaneljének lyukéhez, a vezeték nélküli hálózati kártya a csatlakozás elősegítésére használhatók a csatlakozó tartók.</div>
<div>🔧 Hardvertelepítés</div> <div> <ol style="list-style-type: none">Kapcsolja ki a számítógépet és válassza le a tápellátást, majd távolítsa el a számítógépház oldalrészét. Válasszon ki egy rendelkezésre álló PCI-E X1 foglalatot, és távolítsa el a számítógéphez tartozó foglalatot. Ezt követően helyezze a vezeték nélküli hálózati kártyát a kiválasztott foglalatba, és győződjön meg arról, hogy a kártya megfelelően becsúszott a foglalatba.</div>
<div>📌 Megjegyzés</div> <div>Nem érintse meg a vezeték nélküli hálózati kártya csatlakozójának fém érintkezőit, hogy a statikus elektromosság ne léghessen ki a kártya alkatrészeiben.</div>
<div>3. Szerelje fel az antennákat a vezeték nélküli hálózati kártyára. Szerelje vissza a számítógéphez tartozó oldalrészét, majd csatlakoztassa újból a számítógépet a tápellátással, és kapcsolja be.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

English
<div>🔧 Suggeriti</div> <div> - Questo adattatore wireless supporta solamente il sistema operativo Windows 10.</div> <div> - Nel caso in cui avete già installato un altro adattatore wireless, disinstallate l'adattatore precedente per la procedura di installazione.</div> <div> - Se il supporto di profilo alto è troppo lungo per il vostro PC, potete utilizzare il supporto di profilo basso incluso nel pacchetto per installare l'adattatore wireless.</div>
<div>🔧 Installazione dell'hardware</div> <div> <ol style="list-style-type: none">Spegnere il computer e scollegare il cavo di alimentazione, quindi rimuovere il pannello laterale del case del PC. Selezionare uno slot PCI-E X1 disponibile e rimuovere la staffa corrispondente allo slot sul case del PC. Inserire l'adattatore wireless nello slot selezionato, assicurandosi che l'adattatore sia adeguatamente a contatto con lo slot.</div>
<div>📌 Nota</div> <div>Non toccare con le mani i pin metallici situati sul connettore dell'adattatore wireless onde evitare che fondano per effetto dell'elettricità statica.</div>
<div>3. Installare le antenne all'adattatore wireless. Installare il pannello laterale del case del PC, quindi riconnettere il computer alla presa di corrente e accenderlo.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case, then reconnect the computer to the power source and switch it on. Access the contents of the CD. Double-click the driver Setup.exe and the program will be installed automatically. If the wireless network is encrypted, enter its wireless password, click Next, and then follow the system prompts. If the wireless network is encrypted, enter its wireless password, click Next, and then follow the system prompts.</div>
<div>Connected successfully.</div>
<div>🔧 Tips</div> <div> - If there is no CD-drive in your computer, you can download the WiFi-driver of this wireless adapter through the following methods.</div> <div> - Method 1: Visit https://www.tendacn.com/en/download/detail-3788.html to download the WiFi-driver.</div> <div> - Method 2: Scan the QR code below to download the WiFi-driver. If the WiFi-driver cannot be downloaded through WeChat QR code, it is recommended to try a browser.</div>
<div>🔧 Installation completed.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

Deutsch
<div>🔧 Tipps</div> <div> - Der drahtlose Adapter unterstützt nur das Betriebssystem Windows 10.</div> <div> - Wenn Sie zuvor einen drahtlosen Adapter installiert haben, deinstallieren Sie den bestehenden drahtlosen Adapter im Menüpunkt Hilfe>Sicherungen >Vorgeschichte.</div> <div> - Wenn die große Halterung zu lang für Ihr PC-Gehäuse ist, können Sie für die Anbringung des drahtlosen Adapters die kleine Halterung verwenden.</div>
<div>🔧 Hardware-Installation</div> <div> <ol style="list-style-type: none">Schalten Sie den Computer aus und trennen Sie die Stromzufuhr, entfernen Sie dann die Seitenabdeckung des PC-Gehäuses. Wählen Sie einen verfügbaren PCI-E X1-Steckplatz aus und entfernen Sie die Halterung für den Steckplatz im PC-Gehäuse. Stecken Sie dann den drahtlosen Adapter in den ausgewählten Steckplatz und stellen Sie sicher, dass der drahtlose Adapter ordnungsgemäß im Steckplatz steckt.</div>
<div>📌 Hinweis</div> <div>Berühren Sie nicht die Metallteile am Anschluss des drahtlosen Adapters, um eine Beschädigung des drahtlosen Adapters durch eine statische Entladung zu vermeiden.</div>
<div>3. Bringen Sie die Antennen des drahtlosen Adapters an. Bringen Sie die Seitenabdeckung des PC wieder an, schalten Sie die Stromzufuhr an und schalten Sie den PC an.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

Deutsch
<div>🔧 Tipps</div> <div> - Der drahtlose Adapter unterstützt nur das Betriebssystem Windows 10.</div> <div> - Wenn Sie zuvor einen drahtlosen Adapter installiert haben, deinstallieren Sie den bestehenden drahtlosen Adapter im Menüpunkt Hilfe>Sicherungen >Vorgeschichte.</div> <div> - Wenn die große Halterung zu lang für Ihr PC-Gehäuse ist, können Sie für die Anbringung des drahtlosen Adapters die kleine Halterung verwenden.</div>
<div>🔧 Hardware-Installation</div> <div> <ol style="list-style-type: none">Schalten Sie den Computer aus und trennen Sie die Stromzufuhr, entfernen Sie dann die Seitenabdeckung des PC-Gehäuses. Wählen Sie einen verfügbaren PCI-E X1-Steckplatz aus und entfernen Sie die Halterung für den Steckplatz im PC-Gehäuse. Stecken Sie dann den drahtlosen Adapter in den ausgewählten Steckplatz und stellen Sie sicher, dass der drahtlose Adapter ordnungsgemäß im Steckplatz steckt.</div>
<div>📌 Hinweis</div> <div>Berühren Sie nicht die Metallteile am Anschluss des drahtlosen Adapters, um eine Beschädigung des drahtlosen Adapters durch eine statische Entladung zu vermeiden.</div>
<div>3. Bringen Sie die Antennen des drahtlosen Adapters an. Bringen Sie die Seitenabdeckung des PC wieder an, schalten Sie die Stromzufuhr an und schalten Sie den PC an.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

English
<div>🔧 Tips</div> <div> - This wireless adapter only supports Windows 10 operating system.</div> <div> - If you have installed a wireless adapter before, please uninstall the existing wireless adapter. Refer to the appendix for specific steps.</div> <div> - If the high profile bracket is too long for your PC case, you can use the low profile bracket in the package to install the wireless adapter.</div>
<div>🔧 Hardware installation</div> <div> <ol style="list-style-type: none">Turn off the computer and disconnect the power, then remove the side panel of the PC case. Select an available PCI-E X1 slot, and remove the bracket corresponding to the slot on the PC case. Then insert the wireless adapter into the selected slot, and make sure that wireless adapter contacts with the slot properly.</div>
<div>Package contents</div> <div> <ul style="list-style-type: none">Wireless adapter (with a high profile bracket) × 1 Antenna × 2 Driver CD × 1 Low profile bracket × 1 Quick installation guide × 1</div>
<div>The guide walks you through installation and how to perform first-time configurations. For product details, please visit www.tendacn.com.</div>
<div>📌 Note</div> <div>Do not touch the metal area on the connector of the wireless adapter with your hands to prevent wireless adapter from being burnt out by static electricity.</div>

||
||
||