

Prestigio

MULTIBOARD LIGHT

**Quick Start Guide
2021**

Contents

1. Safety information	1
2. Preparing for operation	3
Product features	3
Accessories	4
Wall mount	4
Using a stand	5
3. Connection and Setting	6
Power port	6
Signal input ports	6
Signal output ports	8
Audio ports	9
Control ports	9
4. Control Panel	10
Introduction of panel buttons	10
Remote Control	10
5. Basic operations	12
Startup/Shutdown	12
Sidebar settings	12
Signal source switching	12
Signal source setting	13
Image mode	14
Voice mode	14
Menu setting	15
Network settings	15
Wireless hot spot	16
Date and language setting	16
System setting and applications	17
Control lock and centralized control setting	18
Power on/off setting	18
Comments	19
Android homepage	19
Writing software	20
Document manager	20
Quick operation	21
6. Troubleshooting	22
7. Technical Specifications	24
8. Protection of trademarks and intellectual property	25
9. Notes and information during operation	26

1. Safety information

Safety Warning

- Before operating, please read this manual thoroughly, and keep it for future reference.
- Delivery, handling & unpacking of the box should be careful, to exclude the Multiboard damaging.
- Image shown in this manual is indicative only. There may be differences between the pictures and the actual product, please prevail in kind.



CAUTION: To reduce the risk of electric shock, do not attempt to uncover the product since there are no user-serviceable parts inside it. For relevant services, please consult professional servicemen.

1. Use only the power supply and voltage indicated on the label.
2. A power cord is included. Confirm that the ground terminal of the wall outlet is well grounded before installation. Route the power cord away from passageways to avoid treading; also keep away from areas where the power cord may get pressed.
3. Do not overload the power outlet and use a certified power outlet.
4. In case of thunderstorms, please pull out the power plug and the network cable and disconnect the product from the antenna to avoid damage.
5. If the product will be left unused for a long period of time, please power it off and pull out the power plug.
6. In case of any abnormal sound or smell, please power it off immediately and pull out the power plug. If necessary, stop using it and contact the maintenance personnel as soon as possible.
7. Keep away from flammable and explosive materials (e.g., candle, electric stove, bulb).
8. Be careful to prevent any liquid or metal objects from entering into the product; if so, stop using it immediately and contact the maintenance personnel.
9. When it is moved from a low-temperature environment to a warm area, condensate may form inside it. In such case, the product should be placed still for at least 24h prior to restart to air-dry the condensate.
10. Handle it with at least two persons; avoid impact and pay special attention to the display screen during the transfer.
11. To avoid injury, please install the base according to the instructions, and then place the product on an even and steady ground; or, if the base is not installed, the product should be firmly fixed to a wall according to the wall-mount bracket installation instructions.

12. Do not place the product in any environment:
- To direct sunlight, moisture, high/low temperature, or dust.
 - To poor ventilation or an enclosed environment.
 - To where any flammable or explosive material is present.
 - To where any combustible or corrosive gas is present.
13. In order to avoid the risk of explosion, do not expose the batteries to sunlight, fire or high temperature.

Precautions

- Do not attempt to disassemble/assemble this product as you may get exposed to dangerous voltage or other hazards. If necessary, please contact the maintenance personnel.
- If the product is dirty, first disconnect the power plug, then dampen the cloth with water and wipe with the slightly wet cloth. Do not apply force while wiping the display screen as it may scratch the screen. Do not wipe with such solvents as alcohol, gasoline, acid, alkali, detergent, volatile oil and diluents since these solvents may damage the product.
- Condensate may appear inside the screen in high humidity, and this is a normal phenomenon as generally temperature difference between the external and internal glass surfaces may lead to water droplets on the internal glass surface. Such water droplets will disappear automatically after 24h of normal use. Please rest assured to use the product.
- Do not insert any sharp or metal object into the vent or touch the signal connector with any sharp or metal object; otherwise short circuit or electric shock can be caused.
- Do not exert pressure on the LCD screen as it is made of glass.
- Do not place the product on an unsteady trolley, shelf or table; otherwise it may turn over. Move the product carefully when it is on a trolley. Emergency stop, excessive force or uneven ground can result in tipping over of the trolley and the product.
- Openings on the product are designed for heat dissipation to ensure good performance. Vent holes should not be covered with objects such as newspaper, tablecloth and curtain as they may impede ventilation.
- Do not allow a still picture or an active picture containing stationary text or icon to remain on the screen for too long because this will leave a “ghost image” on the screen, and it will not disappear long after shutdown.



As the Prestigio products are constantly updated and improved, your device's software and hardware may have a slightly different appearance or modified functionality than presented in this User manual.

Prestigio hereby states that this panel complies to basic requirements and another relevant regulations given by the EU CE directives 2014/30/EU. Full version of the declaration of conformity is available on: www.prestigio.com




The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

2. Preparing for operation

Product features

This product uses UHD LED-backlit panel, IR and multi-touch technologies. Equipped with a writing software, it is convenient, highly interactive, safe and environmentally friendly.

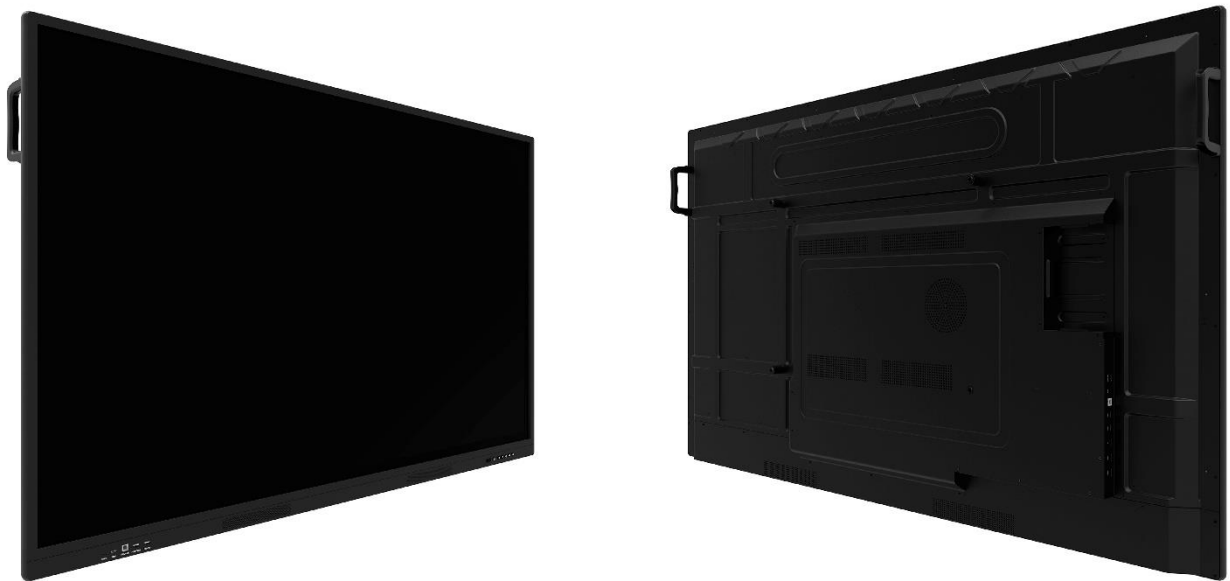

- **High interconnectivity (optional)**

This product can connect to other devices. It allows wireless connection with PCs, PADs and mobile phones, realizing wireless transmission of documents, wireless push of videos and wireless screen cast.

- **Extraordinary Display**

This product uses a high-quality UHD LCD panel featuring original display color, vivid pictures, uniform display, no flickering, and quick response. You can enjoy UHD pictures from different angles.


- **Accurate Touch Control**

This product incorporates the advanced touch technology featuring quick response, high positioning accuracy, strong environmental adaptability, accurate operation, etc. No stylus is needed; you can operate with your hand by clicking, dragging and other actions.

- **Highly Interactive**

This product is preinstalled with a professional writing software. It provides multiple types of pens, drawing tools and other functions, and you can write and move the contents as you like.


Accessories

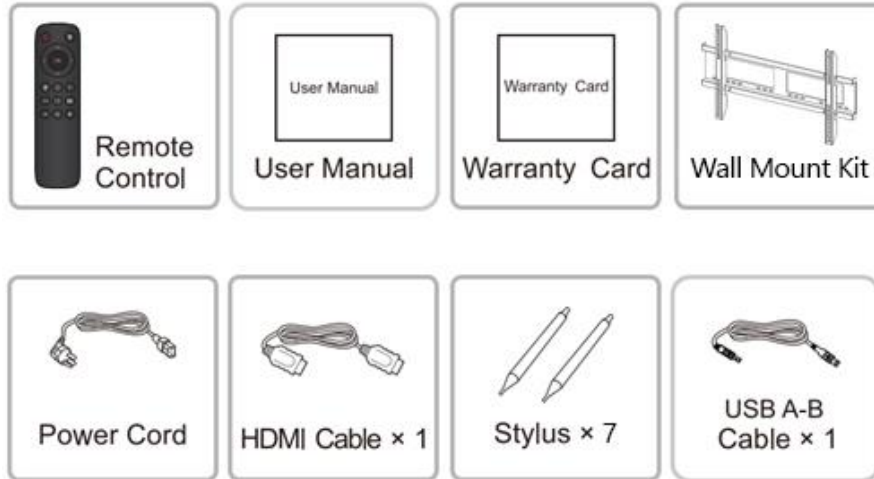

Wall Mount

Precautions for Installation

- For installation of the wall-mount bracket, at least two professional workers are required; you should not attempt to install it, otherwise injury may result.
- During installation, assistance from professional workers is needed to designate the installation also, measures should be taken to make sure it can bear certain amount of external force. Make sure the bracket is installed onto a firm wall rather than plaster board or other surface which can not provide strong support.
- This product should be installed on a vertical plane, not on an oblique plane; also, it should not be installed with the front facing upwards; otherwise falloff of the product or personal injury may be caused.
- To avoid damage of the product or injury, keep the bracket out of the reach of children.
- Tighten the screws during installation to avoid product damage and injury.
- The installation is shown in the figure below; ventilation space should be kept around the product.

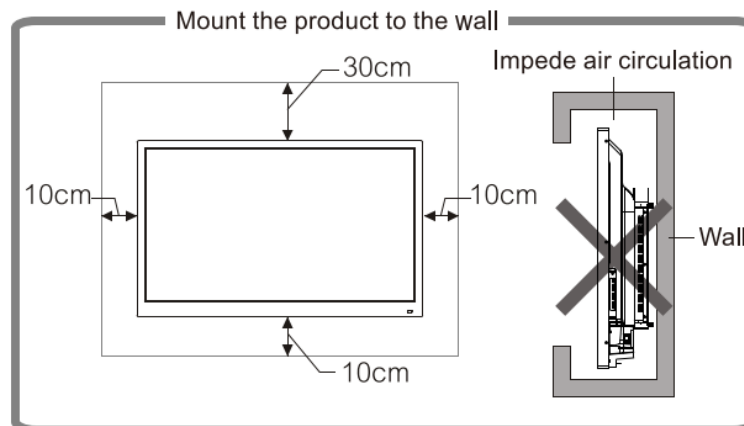



- This MultiBoard multimedia panel can only be attached to the wall using the wall mounting kit recommended by Prestigio. Use of other wall mounting equipment may lead to unstable installation and risk causing serious injury.
- Installing the MultiBoard multimedia panel requires specialist skills and should only be attempted by qualified technical staff. Clients should not try to fix the device to the wall themselves. Prestigio bears no liability for incorrect installation or fitting that results in accident or injury.



Make sure that a qualified technical specialist uses the Prestigio-recommended wall mounting kit to attach the device to a wall.

Using a stand

You can install the MultiBoard multimedia panel on a stand.*



*The model illustrated can be used with 55-98". However, you need to be careful when fitting it at an angle greater than 7 degrees. Make sure the stand is stable and cannot fall over.

Article	Description
PMBST01	MultiBoard stand
PMBST02E	Electronically controlled MultiBoard stand
PMBST03E	Electronically controlled MultiBoard stand
PMBST04E	Electronically controlled MultiBoard stand
PMBWMK	MultiBoard wall mounting kit

The additional accessories are available for this series of MultiBoard models. You can get them from the store.

The list of additional accessories is always being updated: check in stores for new releases.

As the Prestigio products are constantly updated and improved, your device's software and hardware may have a slightly different appearance or modified functionality than presented in this User Manual.


3. Connection and setting



For the safety of you and the machine please do not connect any power plug before peripheral wires connections.


Note: The port connection instructions are provided below. The listed port types are for reference only, and do not cover all ports on this product.

- **Power port**

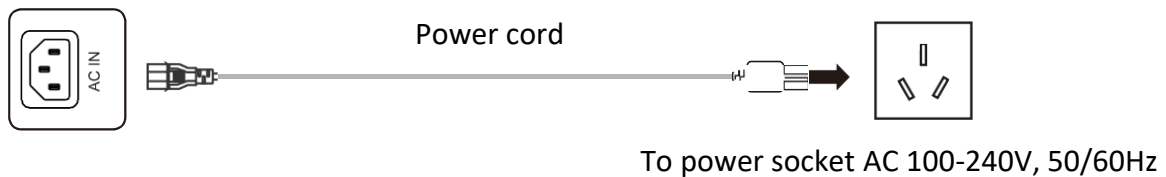

- **Signal input ports**

- **USB port**

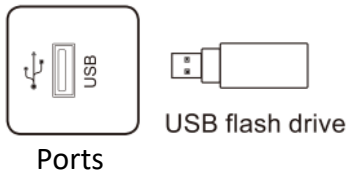


- Note:**
1. The output current of USB2.0 port is 500mA, and that of USB3.0 port is 900mA. In order to ensure normal operation, please do not simultaneously use all USB ports to charge external devices.
 2. Media USB port is used to connect external devices to the Android system of the product. which enables data reading via the file manager of this product. PC USB port is used to connect OPS equipment. PUBLIC-USB port serves as both Media USB port and PC USB port, and is automatically switchable with the signal source.
 3. This product is connected with wireless keyboard and mouse. In case of stuck operation or slow response, change the wireless receiver to another USB port, or use the USB extension cable to connect the wireless receiver, thus to enlarge the reception range.
 4. Some nonstandard USB devices may be unrecognizable, please use standard USB devices.
 5. For upgrading software with a flash drive, please use a USB2.0 flash drive.

- **Type-C port**




- Note:** 1. The Type-C port can support PD power supply (up to 5V, 3A), DP signal display (as mobile and pad which can support Type-C display).
2. The signal quality depends on the quality of the Type-C cable, so please match with certified standard wire.

- **HDMI-IN port**

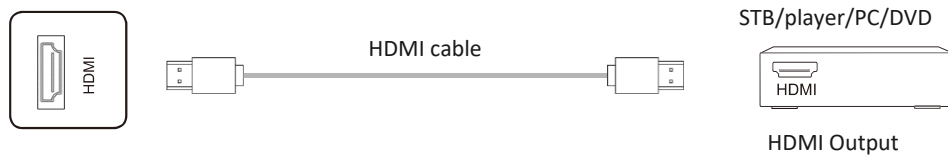


- Note:** The maximum resolution supported by HDMI port is 4K@60HZ, please see the section of technical parameters for the detailed signal formats. When 4K@60HZ signals are played, the EDID version in the OSD menu should be switched to EDID2.0.

- **TOUCH USB-port**

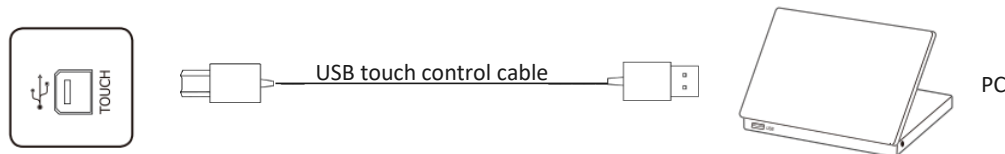


- Note:** 1. When the TOUCH USB port is connected to the same device with the signal source, the external device can be operated by the TOUCH function.
2. The front panel touch port is compatible only with the front panel HDMI input.


- **VGA Audio/Video port**

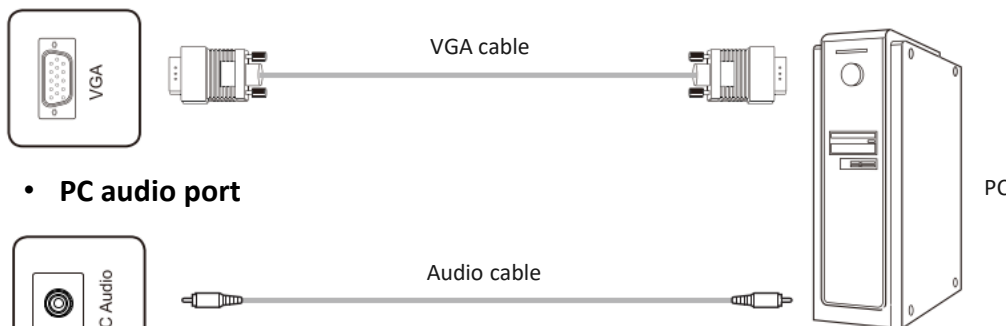

- **PC audio port**

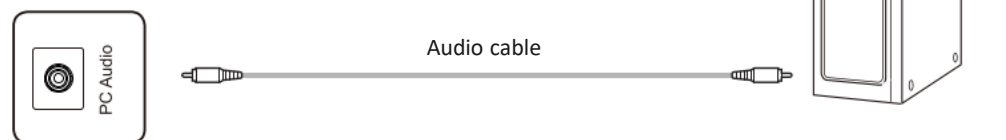


- **AV-IN port**

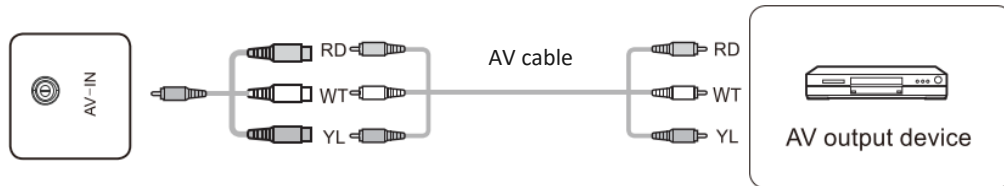

Note: the type of AV-IN port is $\varnothing 13.5\text{mm}$ MINI port. For connecting signals, a MINI adapter cable or a MINI adapter and an AV cable are required and connected as indicated by the figure.


- **YPBPR port**

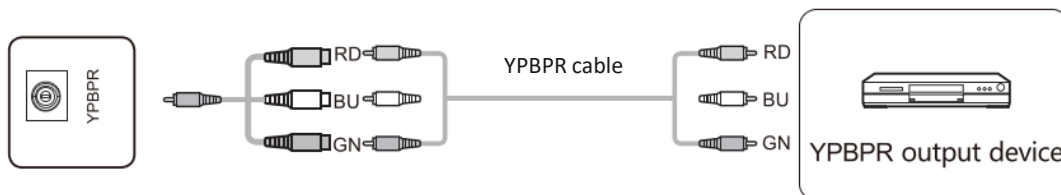

Note: the type of YPBPR port is $\varnothing 3.5\text{mm}$ MINI port. For connecting signals, a MINI adapter cable and a YPBPR cable are required.


- **Signal output ports**

- **AV-OUT port**

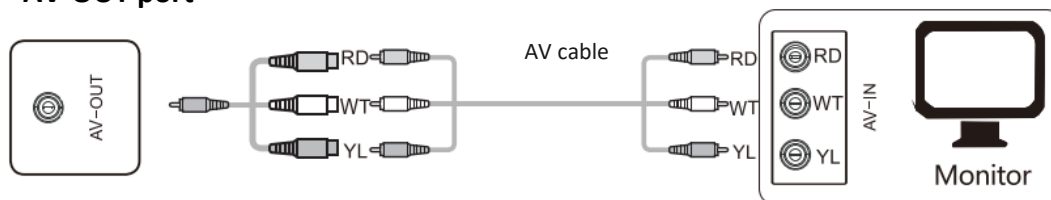

Note: the type of AV-OUT port is $\varnothing 3.5\text{mm}$ MINI port. For outputting signals, a MINI adapter cable and an AV cable are required; for connecting signals, a MINI adapter is required and connected as indicated by the figure.


- **HDMI-OUT port**

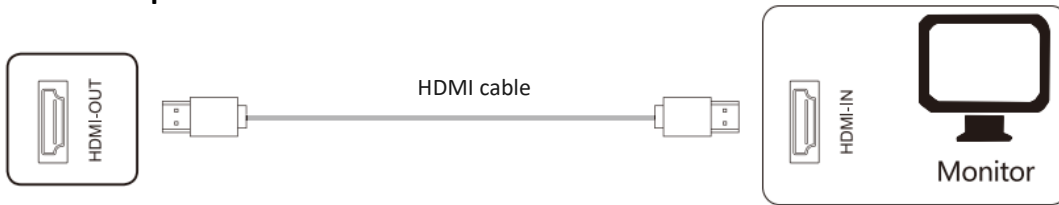

Note: the HDMI-OUT port can output Audio&Video signals to the HDMI-IN port of the second product, the second product can replay the Audio&Video signals to the third product, so on and so forth. The maximum relaying amount depends on quality and length of the HDMI cable, so it suggests using the cables provided by us.

- **Audio ports**

- **Optical fiber port**

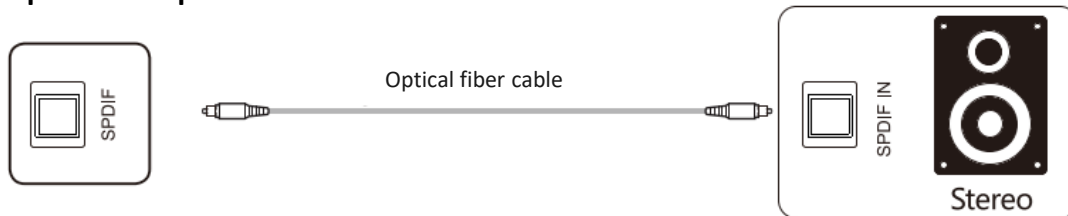

Note: this port can output audio signals of this product to speakers with a SPDIF-IN port.

- **Audio-OUT port**



Note: Audio-OUT port can be connected with a headset or an external speaker.


- **Control ports**

- **RS232 port**



Note: RS232-IN port is connected to the PC; the product is operated via the PC.

4. Control panel

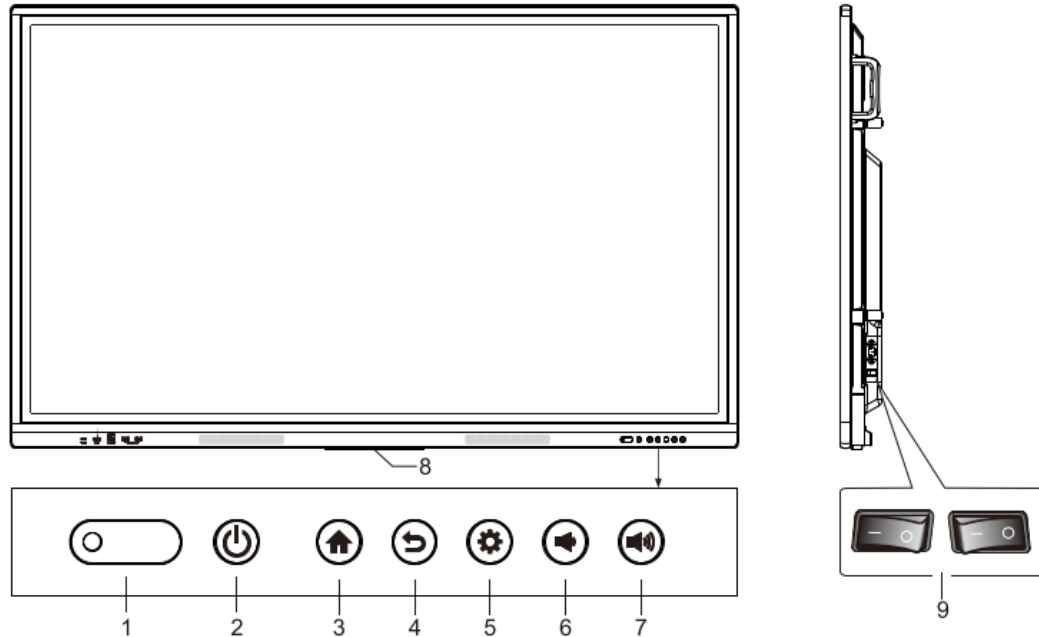

1. Indicator light, remote control receiver and light sensing receiver;
2. Power;
3. Homepage;
4. Return and touch unlock;
5. Settings;
6. Vol-;
7. Vol+;
8. Fixed position of WIFI antenna with plastic bracket;
9. Switch

Remote Control

Precautions for Use of Remote Control:

- Aim the remote control at the remote receiver when using the remote control. Any object placed between the remote control and the remote receiver may disturb the operation.
- Protect the remote control from vibration. Do not expose the remote control to direct sunlight as heat may deform it.
- When the remote receiver is subject to direct sunlight or strong light, the remote control may malfunction. In such case, please change the angle of lighting or the product, or operate the remote control close to the remote receiver.

- Replace the batteries in case of low battery as it will reduce the range of the remote control. If the remote control is to be left unused for a long period of time or the batteries are depleted, please remove the batteries as battery leakage may damage the remote control.
- Do not use batteries of different types or mix a new battery with a used one. Always replace batteries in pair.
- Do not throw batteries into a fire or recharge or disassemble batteries. Do not recharge, short-circuit, disassemble/assemble, heat or burn any used batteries. Please dispose of waste batteries according to applicable environmental regulations. Do not expose batteries to any hot environment, like direct sunlight, over the fire.

Keys on the remote control:



KEY	Function
POWER (⏻)	Switch between power-on and standby states
SOURCE (📡)	Open / close the signal source list
NAVIGATION KEYS (<>^v)	Select or adjust menu options
OK (OK)	Confirm the operation
MEUN (☰)	Show/hide the main menu
HOME (🏠)	Display the Android home page
BACK (↶)	Return to the previous interface
OPS	Switch to OPS source
WRITING PAGE (📧)	Switch to the writing page
SNAPSHOT (📷)	Take a screenshot
VO - (—)	Decrease the volume
MUTE (🔇)	Enable/disable sound
VO + (+)	Increase the volume

1. The picture is for reference only, subject to the actual remote control.
2. Functions of keys on the remote control may vary, subject to actual functions.

5. Basic operations

Startup/Shutdown

- Startup/shutdown
Use 100-240V AC as the power supply.
⏻ on the panel and the remote control can be used to switch between power-on and standby states. ⏻ on the rear panel has two ends. Press the O end to power off the product; press the I end to power it on.
- Auto standby
In the Android main interface, whether there is signal input or not, the product will not enter the standby mode.
In the non-Android main interface, if there is no signal input within 15min, the product will automatically enter the standby mode.
- Save before shutdown
Before shutdown, the product will save the picture and sound settings. Upon restart, these settings will be used.
- OPS ON/OFF
If the product is installed with the OPS module and it is in OPS signal source, the OPS module will start automatically. If not, start it manually.
Before turning off the product, first use the touch function or mouse to turn off the OPS module from the Start menu. The Standby key on the panel or remote control can be used to turn off the product only after the OPS module completely shuts down. It is not allowed to press the Standby key or directly disconnect the power supply without turning off the OPS module as it will damage the OPS module.
When the OPS module enters the OFF state and no operation is performed on the PC for a long period of time, this product will enter standby. To use the module, just restart the product.

Note: The OPS module is optional.

Sidebar Setting


Press the sidebar shortcut key arrow, or slide the edge of the screen inwards (when turn off the touch signal switch) to tune out the sidebar menu that are respectively system setting, signal source/menu setting, small tools, progress management, switch to Android homepage, return and comments.

Signal Source Switching

You can use the remote control or touch function to switch the source by the following methods:

Method one: press the "Signal Source" key on the remote controller to call "Signal Source Menu", press the cursor key on the remote control to select a signal source, press the "OK" key, and then the product will switch to the input signal source that you selected.

Method two: selected the side bar menu > Signal Source Settings, select signal source, and then the product will switch to the input signal source you select.

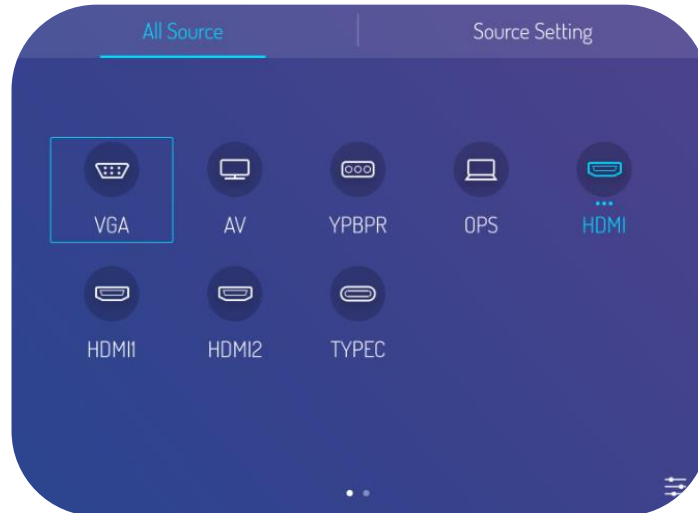

Remark: the picture is for reference only, subject to the actual signal source menu.


Signal Source Setting

Upon the signal source menu, select the right one and enter the signal source setting submenu, it can set the signal source auto-switching, signal source lock, power-on signal source and auto-poweroff without signal.




Image Mode

Select sidebar menu, press setting icon to enter signal source setting menu, then press the menu icon on the bottom right corner of signal source setting page to enter menu page, it can adjust the image mode, cool and warm tones and scaling patterns as well when move to image mode suboption.

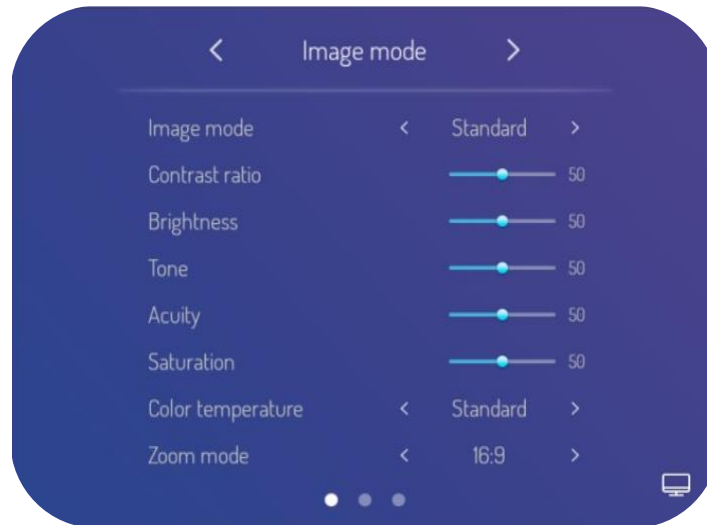


Voice Mode

Select sidebar menu, press setting icon to enter signal source setting menu, then press the menu icon on the bottom right corner of signal source setting page to enter menu page, it can adjust the volume, equilibrium, bass and treble setting, sound output device setting and so on when move to voice mode suboption.

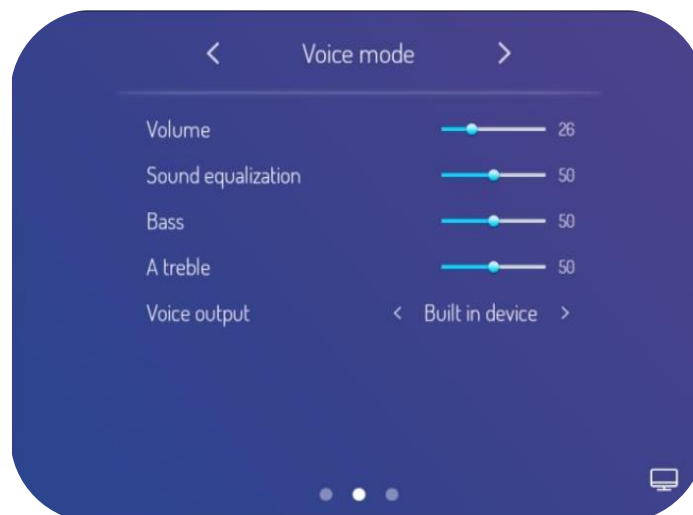

Menu Setting

Select sidebar menu, press setting icon to enter signal source setting menu, then press the menu icon on the bottom right corner of signal source setting page to enter menu page, it can adjust the back light, auto-backlight, EDID version, HDR, HDMI output resolution setting etc., when move to menu setting suboption.

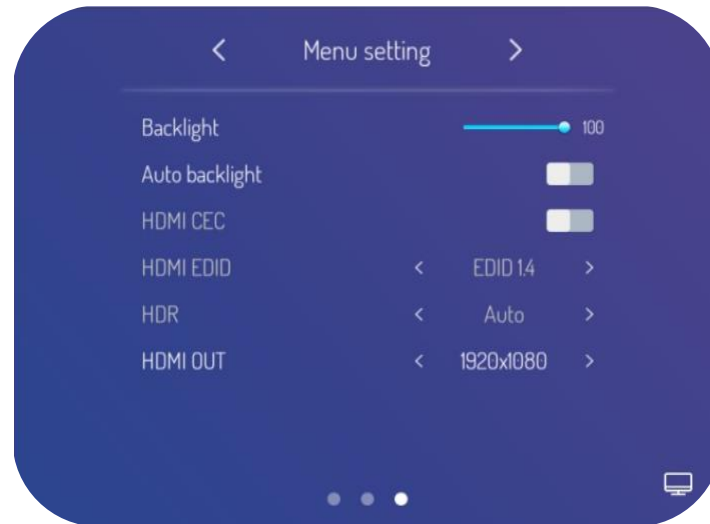

Network Settings

Select sidebar menu, press the setting icon and then enter systems setting page where it can conduct wireless network, wired network, wireless hot spot setting.


- Wireless Network (optional)
 1. Select sidebar menu > System Settings > Wireless Network.
 2. Turn on WLAN switch.
 3. Select the network to be connected from Network List, enter the connecting password, and then success to connect the wireless network.
 4. If there is no desired network in Network List, it can manually add a network.
- Wired Network
 1. Connect one end of the network cable to the network port of this machine before using wired network, and then connect the other end to a router.
 2. Select sidebar menu > System Settings > Wired Network.
 3. Turn on connecting switch.
 4. Select "DHCP" in IP settings, and then the machine will automatically obtain an IP address and connect to network.
 5. Select "Static" in IP settings, manually input IP address, gateway, network prefix length, DSN address, and then click "Finish" to connect to network.

Remark: there are two network ports on this machine, either of which can be connected to wired network (choose one of them). When one network port is connected with a router, the other port can be connected with an external device. At this time, the Android system of this machine, OPS (Windows system only) and the external device form a LAN, which can be connected to network at the same time.

Wireless Hot Spot (optional)


1. Select sidebar Menu > System Settings > Wireless Hot Spot.
2. Turn on hot spot switch.
3. Enter the hot spot name in the textbox, and the system defaulted name is “Android AP—7654” which is changeable into other name.
4. Select encryption type. In case of opening network, no password is required, but any device that finds this network can connect to the WIFI network of this machine. In case of WPA PSK/WPA2 PSK encryption, a protective password over 8 digits shall be entered, and the correct password is required for other device that finds this network to connect to network.
5. After encryption is selected, the system will automatically configure a password or it can also enter a password in the password box.
6. Click “OK” to save setting, and then this network can be found by other WIFI devices within the range when they search WIFI networks.

Note: please set the network password and complicate it as much as possible.

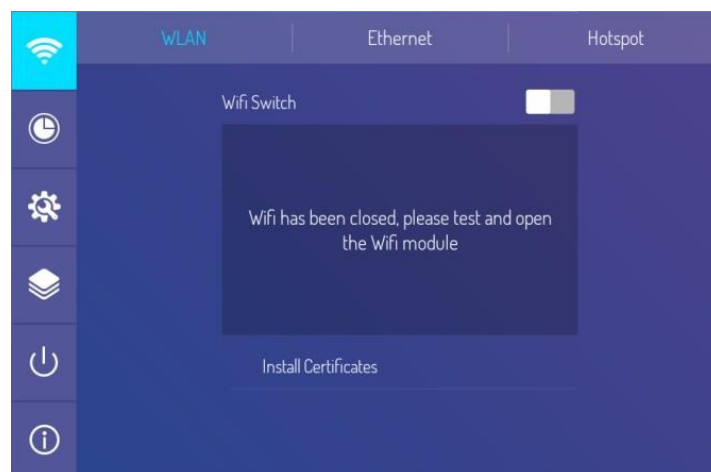

Date and Language Setting

Select sidebar menu, press setting icon and enter system setting page, it can automatically synchronize and update the time from the network automatically, 24 hour setting as well as date, time, zoom, input method, system language setting etc. when move down to system setting and applications page.

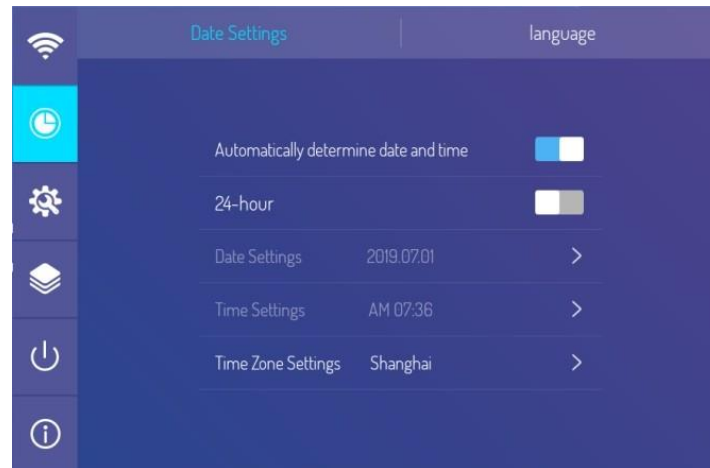

System Setting and Applications

Select sidebar menu, press setting icon and enter system setting page, it can set wallpaper, screen-lock background, no signal image, count-down, password alteration, start-up screen lock, factory data resetting, automatic checking for updates, manual checking for updates, Android application management, etc. when move down to system setting and applications page.

Remark:

1. The option of wallpaper and screen lock background images can be PNG, JPEG form, and suggested resolution are 1920*1080 and 3840*2160. In order to make sure the successful import and smoothly running of the system, please do not select overlarge document.
2. The initial password is 888888. Please keep in mind of the modified passwords if you want to change it. If the password is forgotten, please contact after-sale personnel for super password and reset the password.
3. Please do not arbitrarily restore factory settings. When encountered malfunction, please conduct the operation of factory data resetting under the guide of after-sales personnel.




Control Lock and Centralized Control Setting

Select sidebar menu, press the setting icon and enter system setting page, it can set remote control lock, touch lock, panel lock, smart screen refreshing, gesture on/off, centralized control etc.

Remark:

1. Touch lock can only be removed via the return key of remote control and keyboard plate.
2. The function of Smart Screen Refreshing is to prevent image retention due to static frame displayed for a long time which may causes electric burning injury to LCD.
3. Gesture on/off can set gesture to switch to sidebar menu (slide from the side of screen to the central), bottom-bar menu (slide upwards from bottom left of the screen), and floating ball menu (tune-out with three-finger touch).

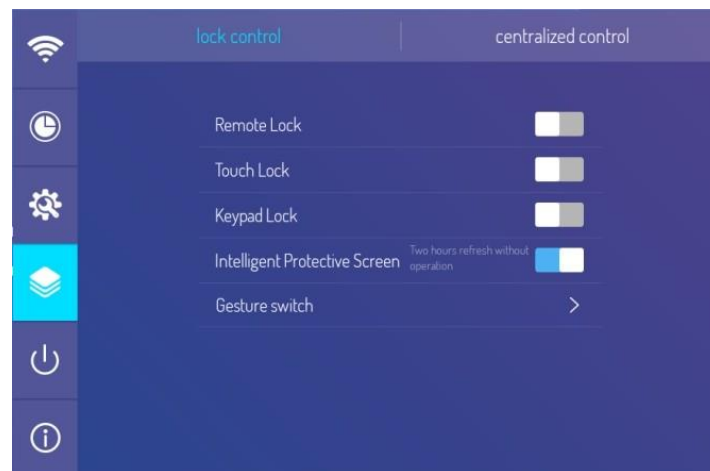

Power On/off Setting

Select sidebar menu, press setting icon and enter system setting page, it can set wake on LAN, timing switcher, startup time, shutdown time and so on when move down to power on/off setting.



Comments

Select sidebar menu, press comments icon, then it can annotate the page and conduct relevant operation.


Note: The homepage background and icons are subject to practical products.



Android Homepage

There are time, date, flash drive information, network information, hot spot information and shortcuts for Multiboard and file manager on the home page. All apps include system apps and third party apps.

Note: The homepage background and icons are subject to practical products.

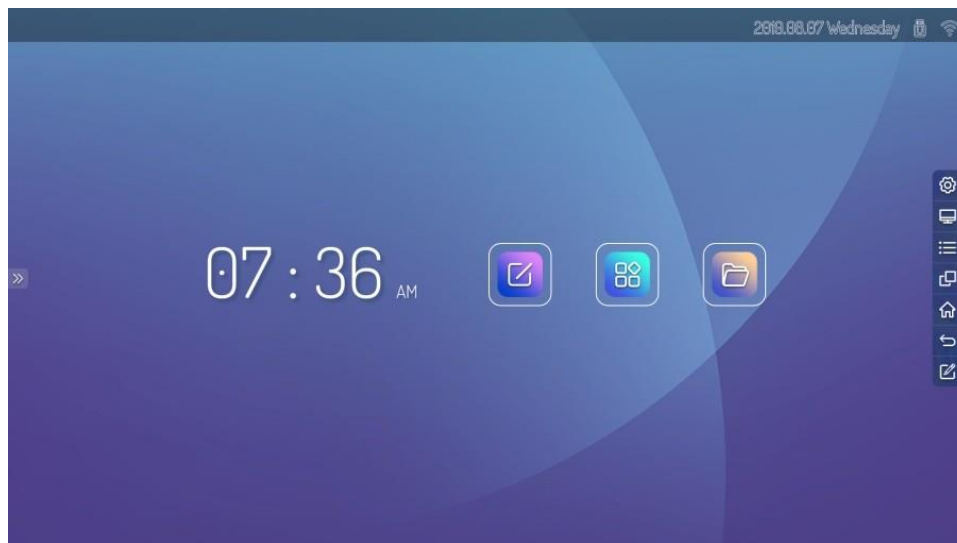


- Special tips

User can install new application and the operations may vary. The operation methods detailed in this Manual are for reference only. User shall operate the machine according to the actual situation.

Writing Software


The Multiboard writing software contains selection, background setting, brush setting, undo, restore, text, clear screen, save, import picture, spot light and split screen and other functions.

EN

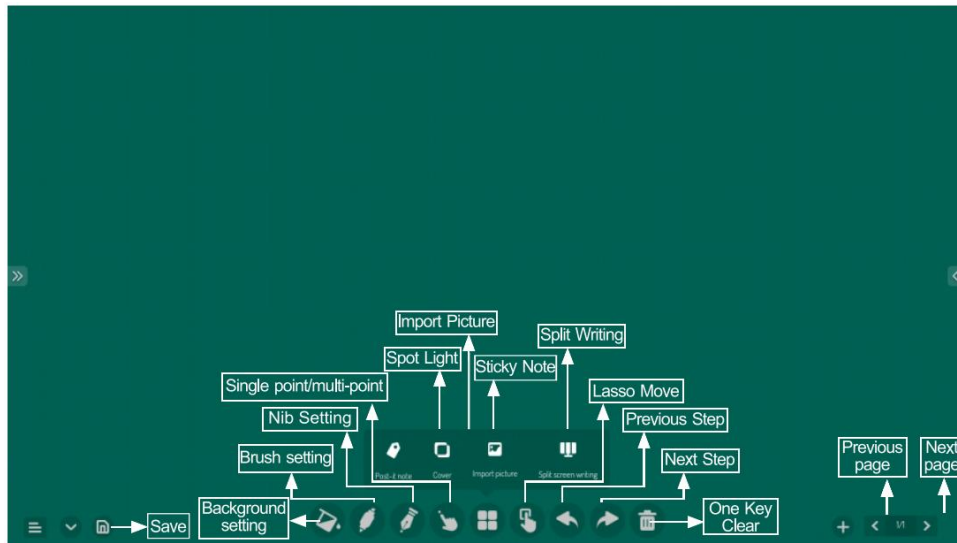

Documents Manager



The document manager supports the playing of images, videos, audio, etc. Long pressing can move, copy, delete selected document.

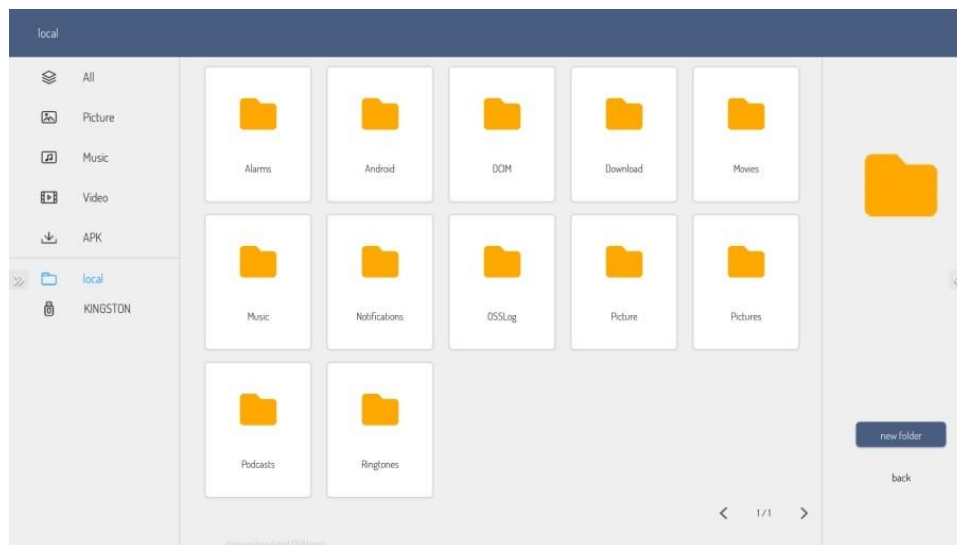

Quick Operation

Two fingers are placed in the middle of the screen to call up the Popup loop menu. Swiped up along the edge of the bottom left corner of the screen, it will come out Help and Popup loop quick menu. Click the help icon to view the operation guide and click on the Popup loop for quick shortcuts.

Note: The homepage background and icons are subject to practical products.

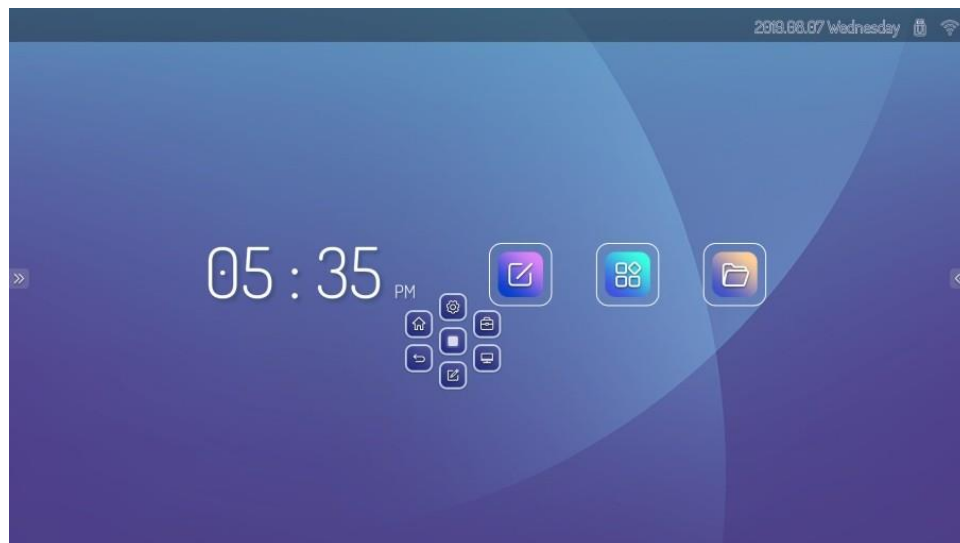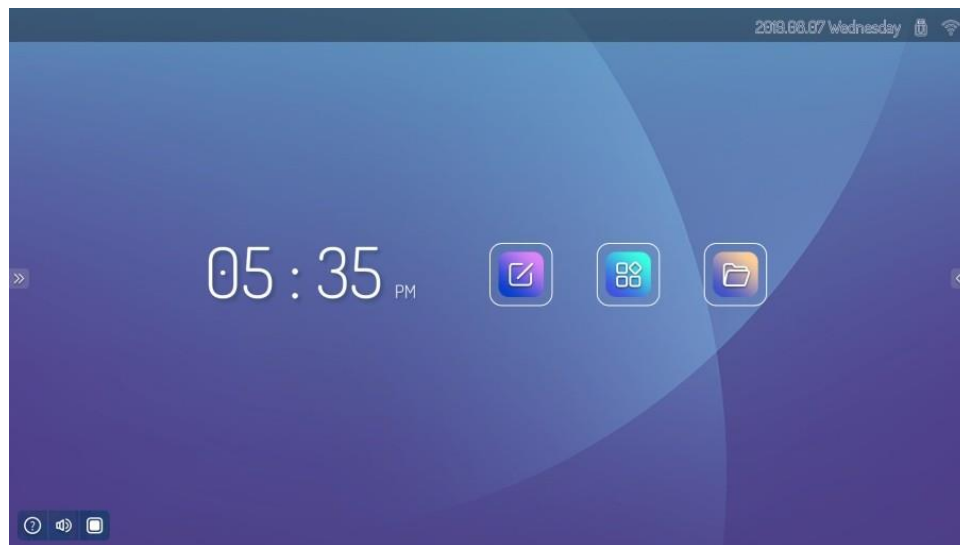

6. Troubleshooting

Special Tips:

Please check the following table to see if it can help to find out the reason for the malfunction encountered before performing maintenance. When it still cannot remove the fault according to the operation of this instruction book completely, please contact the service center to conduct product maintenance.

Symptom	Possible Cause	Solution
The screen does not display anything; there is no sound, and the indicator does not come on	Looseness of power plug, power connection failure	Check if the power cord is properly connected
Pictures shown on the product have dotted line or stripe interference	Signal interference caused by automobile, neon light, electric hairdryer, etc.	Try to find out the machine that affect the product, and then put them away from the product, or insert the power plug to another socket.
Pictures shown on the PC are offset, do not cover the entire screen, go beyond the screen, or are blurred	1.Improper adjustment 2.Wrong display mode	1.Use the auto adjustment function 2.Enter "PC Screen Adjustment" to adjust the horizontal or vertical position 3.Use the recommended mode
Short remote control distance, malfunction of remote control	1.The remote receiver of the product is blocked by some other object 2.Battery level of the remote control is low	1.Move the object to avoid blocking the remote receiver 2.Replace the battery
The product gets stuck, crashes or cannot be operated	1.Too many programs are running 2.Normal operation of the product is disturbed by external environment (e.g., lightning, static electricity)	Disconnect the product from power supply; wait for 1-2min and reconnect power supply; then restart the product

The touch is slow, it doesn't work	Too many programs are running	Clean up a program that runs memory large or restart the product
OPS can't be turned on, no display, no touch	OPS has not been fixed well	Reinstall the OPS computer
Touch excursion	Caused by the computer's coordinate system, need to do some correction.	Enter the control panel to select the correction processing
Invalid touch of the external computer	<ol style="list-style-type: none"> 1.the signal source is inconsistent with the corresponding interface of the touch USB cable 2.the touch USB cable is too long or of low quality 	<ol style="list-style-type: none"> 1.Check and change the corresponding interface of the touch USB cable, 2.Change another shorter or better quality touch USB cable.

7. Technical specifications

ARTICLE	PMB000L654	PMB000L754
Screen size, inch	65" (UHD)	75" (UHD)
Screen resolution	3840x2160	3840x2160
Response time	8ms	8ms
Viewing angle	178/178	
Screen/sensor technology	LED/ IR 20 point touch, 10 point writing	LED/ IR 20 point touch, 10 point writing
Brightness/contrast	300 cd/m ² (min); 350cd/m ² (typ); 400 cd/m ² (orig LCD)/ 1200:1 (typ); 4000:1 (dyn)	350 cd/m ² (min); 400cd/m ² (typ); 400 cd/m ² (orig LCD)/ 1200:1 (typ); 5000:1 (dyn)
Frequency	60Hz	
Power consumption: general/standby	220W / ≤0.5W	220W / ≤0.5W
Display interfaces	HDMI IN x 3 (incl. HDMI in front); VGA IN x 1; AV IN x 1; LAN x 2; USB 2.0 x 3 (incl. USB in front); USB3.0 x 1 in front (Win PC); Touch port x 2 (incl. port in front); USB Type C x 1 (in front); Audio IN x 1; RS232 x 1; HDMI OUT x 1; AV OUT x 1; Audio OUT x 1; Light sensor injected	HDMI IN x 3 (incl. HDMI in front); VGA IN x 1; AV IN x 1; LAN x 2; USB 2.0 x 3 (incl. USB in front); USB3.0 x 1 in front (Win PC); Touch port x 2 (incl. port in front); USB Type C x 1 (in front); Audio IN x 1; RS232 x 1; HDMI OUT x 1; AV OUT x 1; Audio OUT x 1; Light sensor injected
Possibility of connecting additional PC module	YES, PMB528K001, 80-pin	YES, PMB528K001, 80-pin
Wi-Fi	WiFi 802.11 (a, b, g, n, ac) (2.4GHz/5GHz)	WiFi 802.11 (a, b, g, n, ac) (2.4GHz/5GHz)
Audio	2.1: 15W x 2 and 15W x 1	2.1: 15W x 2 and 15W x 1
Dimensions (mm)	1511.6x87.8x919.7	1722.5x87.1x1033.6
Dimensions of package (mm)	1660x245x1045	1880x280x1160
Weight (kg)	41.5	60.5
Weight in package (kg)	57	75.6

Attention! The panel's description and interface may be altered in connection with updates to the series of models.
For additional product information see: www.prestigio.com

8. Protection of trademarks and intellectual property

This document, the contents of the device, and also any data uploaded including types, graphic images, sound files, video, text, design elements, software and documentation (user guides, illustrations, etc.) constitute intellectual property and may not be copied, altered or distributed in whole or in part without the owner's permission.

The Prestigio trademark and logo are the property of Prestigio Plaza Limited. "Prestigio" is a registered trademark belonging to the Prestigio company. **Applicable law:** this document is drawn up in accordance with the law of Cyprus. Any questions concerning this document should be addressed to the company at: «Prestigio Plaza Limited» Spyrou Kyprianou 26, Prestigio Plaza, 4040, Limassol, Cyprus, Limassol.

This information may change from time to time. For more information see www.prestigio.com

EN:

Manufacturer: «Prestigio Plaza Limited» Spyrou Kyprianou 26, Prestigio Plaza, 4040, Limassol, Cyprus, Limassol.

Made in China

Importer to the Russian Federation: LLC Asbis 125445 Moscow, municipal district Levoberezhny internal city, Leningradskoe sh., 71G, building 2, floor 3, room. 20, tel. +7 495 775 06 41

Date of manufacture is shown on a sticker under the serial number on the individual package.



www.prestigio.com