

SAMSUNG


Кнопки пульта дистанционного управления



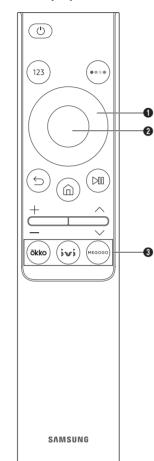

THE PLASTIC PART OF 21 SMART CONTROL CONTAINS A MINIMUM OF 24% POST-CONSUMER RECYCLED POLY ETHYLENE TEREPHTHALATE(PET)

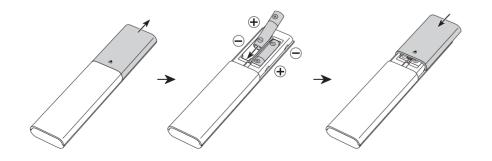

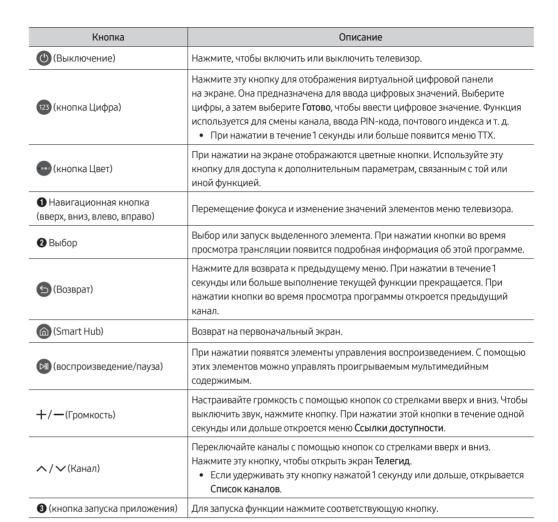

- Изображения, кнопки и функции Пульт управления могут отличаться в зависимости от модели или региона.
- В случае использования пульта дистанционного управления, поставляемого с данным телевизором, для управления другим телевизором некоторые функции могут работать неправильно.



BN68-11643F-00









 
FN

SAMSUNG

About the Buttons on the Remote Control

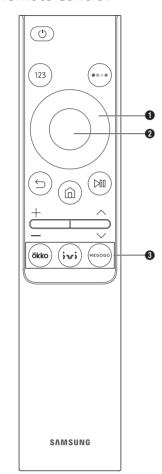

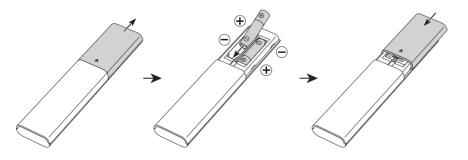



Button	Description
(Power)	Press to turn the TV on or off.
(Number button)	Press to bring up the virtual numeric pad on the screen. Use the numeric keypad to enter numeric values. Select numbers and then select Done to enter a numeric value. Use to change the channel, enter a PIN, enter a ZIP code, etc. • When pressed for 1 second or more, the TTX menu appears.
(Colour button)	When pressed, coloured buttons appear on the screen. Use this button to access additional options that are specific to the feature in use.
① Directional button (up, down, left, right)	Moves the focus and changes the values seen on the TV's menu.
2 Select	Selects or runs a focused item. When pressed while you are watching a broadcast programme, detailed programme information appears.
(Return)	Press to return to the previous menu. When pressed for 1 second or more, the running function is terminated. When pressed while you are watching a programme, the previous channel appears.
(Smart Hub)	Returns to the Home Screen.
(Play/pause)	When pressed, the playback controls appear. Using these controls, you can control the media content that is playing.
+/-(Volume)	Move the button up or down to adjust the volume. To mute the sound, press the button. When pressed for 1 second or more, the Accessibility Shortcuts menu appears
^/∨(Channel)	Move the button up or down to change the channel. To see the Guide screen, press the button. • When pressed for 1 second or more, the Channel List screen appears.
3 (Launch app button)	Press each button to run its function.

- The images, buttons, and functions of the Remote Control may differ with the model or geographical area.
- If you use the remote control that comes with your TV to control another TV, some functions may not operate normally.





