


Детализировка и лист запасных частей к гайковерту FROSP ПГ-364

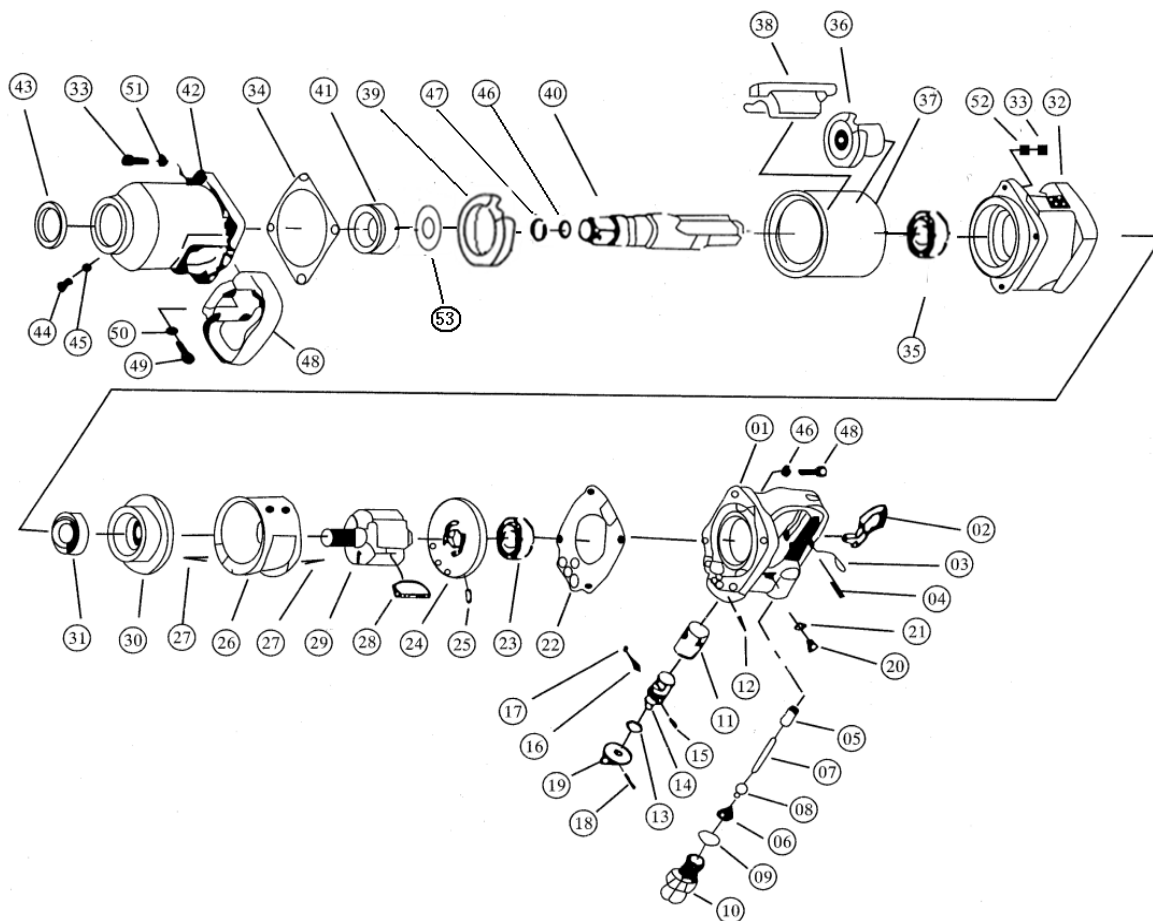

PARTS No.	Name Of Parts	Perset	PARTS No.	Name Of Parts	Perset
1	Handle	1	27	Spring pin	2
2	Switch	1	28	Leaf	6
3	Spring pin	1	29	Impeller	1
4	Needle pin	1	30	After the Cover	1
5	Throttle bushing	1	31	Bearing	1
6	Throttle spring	1	32	Chassis	1
7	Throttle pin	1	33	Hexagon screw	4
8	Throttle	1	34	Ring	1
9	O-ring	1	35	Bearing	1
10	Inlet Bushing	1	36	Hanawa	1
11	Valve Bushing	1	37	Hammer rack	1
12	Spring pin	1	38	Eccentric block	2
13	O-ring	1	39	Thrust Washer	1
14	Valve	1	40	Axis	1
15	Spring pin	1	41	Bearing	1
16	Spring	1	42	Hammer Shell	1
17	Ball	1	43	Anti-oil-ring	1
18	Spring pin	1	44	Oil Plug Screw	1
19	Copper sleeve	1	45	O-ring	1
20	Oil Plug Screw	1	46	O-ring	1
21	O-ring	1	47	Fixed ring	1
22	Shell ring	1	48	D-Handle	1
23	Bearing	1	49	Spring washer	4
24	After the Cover	1	50	Hex cap bolts	4
25	Spring pin	1	51	Elastic washer	4
26	Cylinder	1	52	Hex Nut	12
			53	Gasket	1