

ENGLISH

SANDWICH MAKER VT-7149

The sandwich maker is intended for toasting bread slices and making hot sandwiches with various fillings.

DESCRIPTION

1. Power indicator (red)
2. Ready indicator (green)
3. Handles
4. Handle clip

ATTENTION!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA, to install RCD, contact a specialist.

SAFETY PRECAUTIONS

Before using the electrical unit, read this instruction manual carefully and keep it for future reference.

Use the unit for its intended purpose only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

- Before switching the unit on, make sure that the mains voltage corresponds to the voltage specified on the unit body.
- The power cord is equipped with a eu-socket; plug it into the socket with a reliable grounding contact.
- To avoid fire, do not use adapters for plugging the unit in.
- After the sandwiches are ready, take the power plug out of the socket and open the sandwich maker.
- This unit is not intended for usage with an external switch timer or a separate remote control system.
- Place the unit on a flat, stable heat-resistant surface with free access to the mains socket.
- Use the unit in places with proper ventilation.
- To avoid fire, do not place the unit near curtains or blinds and do not cover it during operation.
- Do not use the unit outdoors.
- It is forbidden to use the unit in rooms where inflammable substances are stored or used.
- Do not use the unit near gas-stoves or heaters; do not place the unit on hot surfaces.
- You can use wheat flour bread as well as rye flour bread.
- Cut the bread into slices of required size.
- Use vegetable oil or ordinary margarine to smear the slices, as other fats burn fast. Smear the bread with some oil from the outside if you want your sandwich crispy. You can add herbs, garlic, a pinch of cinnamon or other spices to the oil.
- Do not put too much filling, otherwise the bread slices will be difficult to press together or the filling will leak.
- 1-2 spoons of filling are usually enough. You can use anything at hand for the filling: cooked meat or fish leftovers, fried mushrooms, jam, tinned fish, any boiled/roasted vegetables. Add a drop of mayonnaise or tomato sauce to make the filling juicier.
- Do not use filling from fresh vegetables that wilt under high temperature (lettuce, cucumber). You can have good results using tomatoes and onions.
- Use only cooked meat or fish – the sandwich maker only heats up the filling but doesn't cook it.

CLEANING AND MAINTENANCE

- Clean the unit after every use.
- Disconnect the unit from the mains.
- Let the unit cool down completely, to this end it is recommended to open the sandwich maker.

- Remove bread crumbs, wipe the non-stick coating of the operating surfaces with a damp cloth and then wipe the non-stick coating dry.
- Never use abrasives or metal scourers for cleaning the unit, as they can damage the inner non-stick coating or outer surface of the unit.
- Do not allow children to touch the unit body and the power cord during unit operation.

• This unit is not intended for usage by children. Place the unit out of reach of children during the operation and cooling down.

• The unit is not intended to be used by people with physical, sensory or mental disabilities (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• Do not leave children unattended; avoid them using the unit as a toy.

• For children safety reasons do not leave polyethylene bags used as packaging unattended.

Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!

- Check the power cord, the power plug and the unit body periodically.

- Never use the unit if the power cord or the power plug is damaged, if it does not work properly or after it was dropped.

• If the power cord is damaged, it should be replaced by the manufacturer or a specialized service or similar qualified personnel to avoid danger.

• Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped.

• If the unit works improperly or after it was dropped, unplug the unit and contact any authorized service center from the contact address list given in the warranty certificate and on the website www.vitek.ru.

• Transport the unit in the original packaging only.

• Keep the unit out of reach of children and people with disabilities.

THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY. ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.

BEFORE THE FIRST USE

After the unit transportation or storage at low temperature, keep it for at least three hours at room temperature before switching on.

- Unpack the unit, remove any promo stickers and package materials that can prevent unit operation.

- Check the unit for damages, do not use it in case of damages.

• Before switching the unit on, make sure that the mains voltage corresponds to the voltage specified on the unit body.

• The unit is intended for operation with AC system and 50 Hz frequency. The unit does not need any additional settings for operating with the required nominal frequency.

• Clean the non-stick coating of the operating surfaces with a damp cloth or a sponge and then wipe it dry.

• Before using the unit for the first time, apply a small amount of vegetable oil on the operating surface non-stick coating and spread it.

Данное изделие соответствует всем требуемым европейским и российским стандартам безопасности и гигиены.

ПЕРВЫЙ ВКЛЮЧЕНИЕ

After the unit transportation or storage at low temperature, keep it for at least three hours at room temperature before switching on.

• Unpack the unit, remove any promo stickers and package materials that can prevent unit operation.

• Check the unit for damages, do not use it in case of damages.

• Before switching the unit on, make sure that the mains voltage corresponds to the voltage specified on the unit body.

• The unit is intended for operation with AC system and 50 Hz frequency. The unit does not need any additional settings for operating with the required nominal frequency.

• Clean the non-stick coating of the operating surfaces with a damp cloth or a sponge and then wipe it dry.

• Before using the unit for the first time, apply a small amount of vegetable oil on the operating surface non-stick coating and spread it.

CE This product conforms to the EMC Directive 2014/30/EU and to the Low Voltage Directive 2014/35/EU.

Ограничение по сроку службы

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Ограничение по сроку службы

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed. If the user reveals such differences, please report them via e-mail to info@vitek.ru for receipt of an updated manual.

Ограничение по сроку службы

Ограничение по сроку службы</

