

Lire attentivement le mode d'emploi ainsi que les consignes de sécurité avant toute utilisation.

## UTILISATION

Attention : utilisation sur cheveux secs et démêlés.

- Sélectionnez une mèche de cheveux.

- Positionnez l'appareil en bas de votre tête.

- Maintenez vos cheveux à l'aide de la pince intégrée.\*

- Enroulez la mèche autour du bouclier.

- Attendez 6 à 10 secondes, libérez la mèche.

## CONSEILS DE SÉCURITÉ

Pour votre sécurité, cet appareil est conforme aux normes et réglementations applicables (Directives Bassa Tension, Compatibilité Electromagnétique, Environnement,...).

\* Les accessoires de l'appareil deviennent très chauds pendant l'utilisation. Evitez le contact avec la peau. Assurez-vous que le cordon d'alimentation ne soit jamais en contact avec les parties chaudes de l'appareil.

\* Vérifiez que la tension de votre installation électrique correspond à celle de votre appareil. Toute erreur de branchement peut causer des dommages irréversibles non couverts par la garantie.

\* Pour une protection supplémentaire, l'installation d'un dispositif à courant résiduel (RCD) ayant un courant de fonctionnement résiduel nominal n'excédant pas 30 mA est conseillée dans le circuit électrique alimentant la partie de bain. Demandez conseil à l'installateur.

\* Risque de brûlure. Gardez l'appareil hors de portée des jeunes enfants, en particulier pendant l'utilisation et le refroidissement.

\* Lorsque l'appareil est connecté à l'alimentation, ne le laissez jamais sans surveillance.

\* Placez toujours l'appareil avec le support, le cas échéant, sur une surface plane, stable et résistante à la chaleur.

\* L'installation de l'appareil et son utilisation doit toutefois être conforme aux normes en vigueur dans votre pays.

\* ATTENTION : ne pas utiliser cet appareil près des baignoires, douche, lavabos ou autres récipients contenant de l'eau.

\* Lorsque l'appareil est utilisé dans une salle de bain, débranchez-le après usage, car la proximité de l'eau représente un danger, même lorsque l'appareil est étanche.

\* Pour les autres pays non soumis à la réglementation de l'UE: Cet appareil n'est pas prévu pour être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou des personnes d'âge avancé, ou malades, ou qui manquent de l'autonomie, si elles ont pu être formées, par l'intermédiaire d'une personne responsable, ou si elles sont sous surveillance ou d'instructrice préalable concernant l'utilisation de l'appareil il convient de surveiller les enfants pour s'assurer qu'ils ne jouent pas avec l'appareil.

\* Pour les pays où la réglementation exige l'ET (CE), cet appareil peut être utilisé par des personnes âgées de 8 ans et plus et des personnes ayant des capacités physiques, sensorielles ou mentales réduites ou un manque d'expérience et de connaissances, s'ils ont reçu un encadrement ou des instructions concernant l'utilisation de l'appareil en toute sécurité et comprennent les risques encourus. Les enfants ne doivent pas jouer avec l'appareil. Les enfants ne doivent ni nettoyer l'appareil ni s'occuper de son entretien sans surveillance.

\* Si le câble d'alimentation est endommagé, il doit être remplacé par le fabricant, son service après vente ou des personnes de qualification similaire afin d'éviter un danger.

\* N'utilisez pas votre appareil et contactez un Centre Service Agréé si : votre appareil est tombé, il ne fonctionne pas normalement.

\* WARINHWEIS: Verwenden Sie dieses Gerät nicht in der Nähe einer Badewanne, einer Dusche, eines Waschbeckens oder eines anderen Wasserspeises.

\* L'appareil doit être débranché : avant le nettoyage et l'entretien, en cas d'anomalie de fonctionnement, dès que vous avez terminé de l'utiliser, si vous quittez la pièce, même momentanément.

\* Ne pas utiliser si le cordon est endommagé.

\* Ne pas immerger ni passer sous l'eau, même pour le nettoyage.

\* Ne pas tenir avec les mains humides.

\* Ne pas tenir par le boîtier qui est chaud, mais par la poignée.

\* Ne pas débrancher en tirant sur le cordon, mais en tirant par la prise.

\* Ne pas utiliser de prolongateur électrique.

\* Ne pas nettoyer avec des produits abrasifs ou corrosifs.

\* Ne pas utiliser par température inférieure à 0 °C et supérieure à 35 °C.

## GARANTIE

Votre appareil est destiné à un usage domestique seulement. Il ne peut être utilisé à des fins professionnelles. La garantie devient nulle et invalide en cas d'utilisation incorrecte.

## PARTICIPONS À LA PROTECTION DE L'ENVIRONNEMENT!

① Votre appareil contient de nombreux matériaux valorisables ou recyclables.

Confiez-le à un point de collecte ou à défaut dans un centre service agréé pour que son traitement soit effectué.

Ces instructions sont également disponibles sur notre site Internet [www.rowenta.com](http://www.rowenta.com)

EN Read the instructions carefully as well as the safety guidelines before use.

## INSTRUCTION FOR USE

Caution: see on dry and detangled hair.

Select a strand of hair.

Position the curler at the bottom of your strand.

Hold your hair with the spring clip\*.

Wrap the strand around the curler.

After 6-10 seconds, release the strand.

## Safety

• For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).

• The appliance's accessories become very hot during use. Avoid contact with the skin. Make sure that the supply cord never comes into contact with the hot parts of the appliance.

• Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm not covered by the guarantee.

• For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask for installer for advice.

• Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.

• When the appliance is connected to the power supply, never leave it unattended.

• Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

• The installation of the appliance and its use must however comply with the standards in force in your country.

• WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

• For other countries not subject to EU regulations: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• For countries subject to EU regulations (CE): This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has fallen.

- it does not work correctly.

- The appliance must be unplugged, before cleaning and maintenance procedures, if it is not working correctly, as soon as you have finished using it, if you leave the room, even momentarily.

- Do not use if the cord is damaged.

- Do not immerse or put under running water, even for cleaning purposes.

- Do not hold with damp hands.

NL Lees voor ieder gebruik de gebruiksaanwijzing en de veiligheidsvoorschriften aandachtig door.

## GEbruIK

Let op: Gebruik het apparaat op droog haar dat niet in de klit zit.

- Pak een haartolk vast.

- Plaats de klier aan de onderkant van de haartolk.

- Klem het haar vast met de clip\*.

- Wikkel de lok om de krultang.

- Laat de lok na 6-10 seconden los.

## VEILIGHEID

• Voor uw veiligheid beantwoordt dit apparaat aan de toepasselijke normen en regelgeving (Richtlijnen Laagspanning, Elektromagnetische Compatibiliteit, Milieu...).

• De accessoires van het apparaat worden tijdens het gebruik zeer heet. Vermijd contact met de ogen. Zorg dat het netstroom nooit in contact komt met de hete delen van het apparaat.

• Controleer of de spanning van uw elektriciteitsinstallatie overeenkomt met die van het apparaat. Een verkeerde aansluiting kan onherstelbare schade veroorzaken die niet door de garantie gedekt wordt.

• Voor extra bescherming wordt aanbevolen om een aardlekschakelaar te installeren met een differentiaalstroom van maximaal 30 mA in het elektrische circuit van de badkamer. Vraag de installateur voor meer advies.

• Do not use if the cord is damaged.

• Do not immerse or put under running water, even for cleaning purposes.

• Do not hold with damp hands.

• Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

• For other countries not subject to EU regulations: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has fallen.

- it does not work correctly.

• The appliance must be unplugged, before cleaning and maintenance procedures, if it is not working correctly, as soon as you have finished using it, if you leave the room, even momentarily.

- Do not use if the cord is damaged.

- Do not immerse or put under running water, even for cleaning purposes.

- Do not hold with damp hands.

• Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

• For other countries not subject to EU regulations: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has fallen.

- it does not work correctly.

• The appliance must be unplugged, before cleaning and maintenance procedures, if it is not working correctly, as soon as you have finished using it, if you leave the room, even momentarily.

- Do not use if the cord is damaged.

- Do not immerse or put under running water, even for cleaning purposes.

- Do not hold with damp hands.

• Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

• For other countries not subject to EU regulations: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has fallen.

- it does not work correctly.

• The appliance must be unplugged, before cleaning and maintenance procedures, if it is not working correctly, as soon as you have finished using it, if you leave the room, even momentarily.

- Do not use if the cord is damaged.

- Do not immerse or put under running water, even for cleaning purposes.

- Do not hold with damp hands.

• Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

• For other countries not subject to EU regulations: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has fallen.

- it does not work correctly.

• The appliance must be unplugged, before cleaning and maintenance procedures, if it is not working correctly, as soon as you have finished using it, if you leave the room, even momentarily.

- Do not use if the cord is damaged.

- Do not immerse or put under running water, even for cleaning purposes.

- Do not hold with damp hands.

• Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

• For other countries not subject to EU regulations: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has fallen.

- it does not work correctly.

• The appliance must be unplugged, before cleaning and maintenance procedures, if it is not working correctly, as soon as you have finished using it, if you leave the room, even momentarily.

- Do not use if the cord is damaged.

