


Детализировка и лист запасных частей к гайковерту FROSP ПГ-3128У

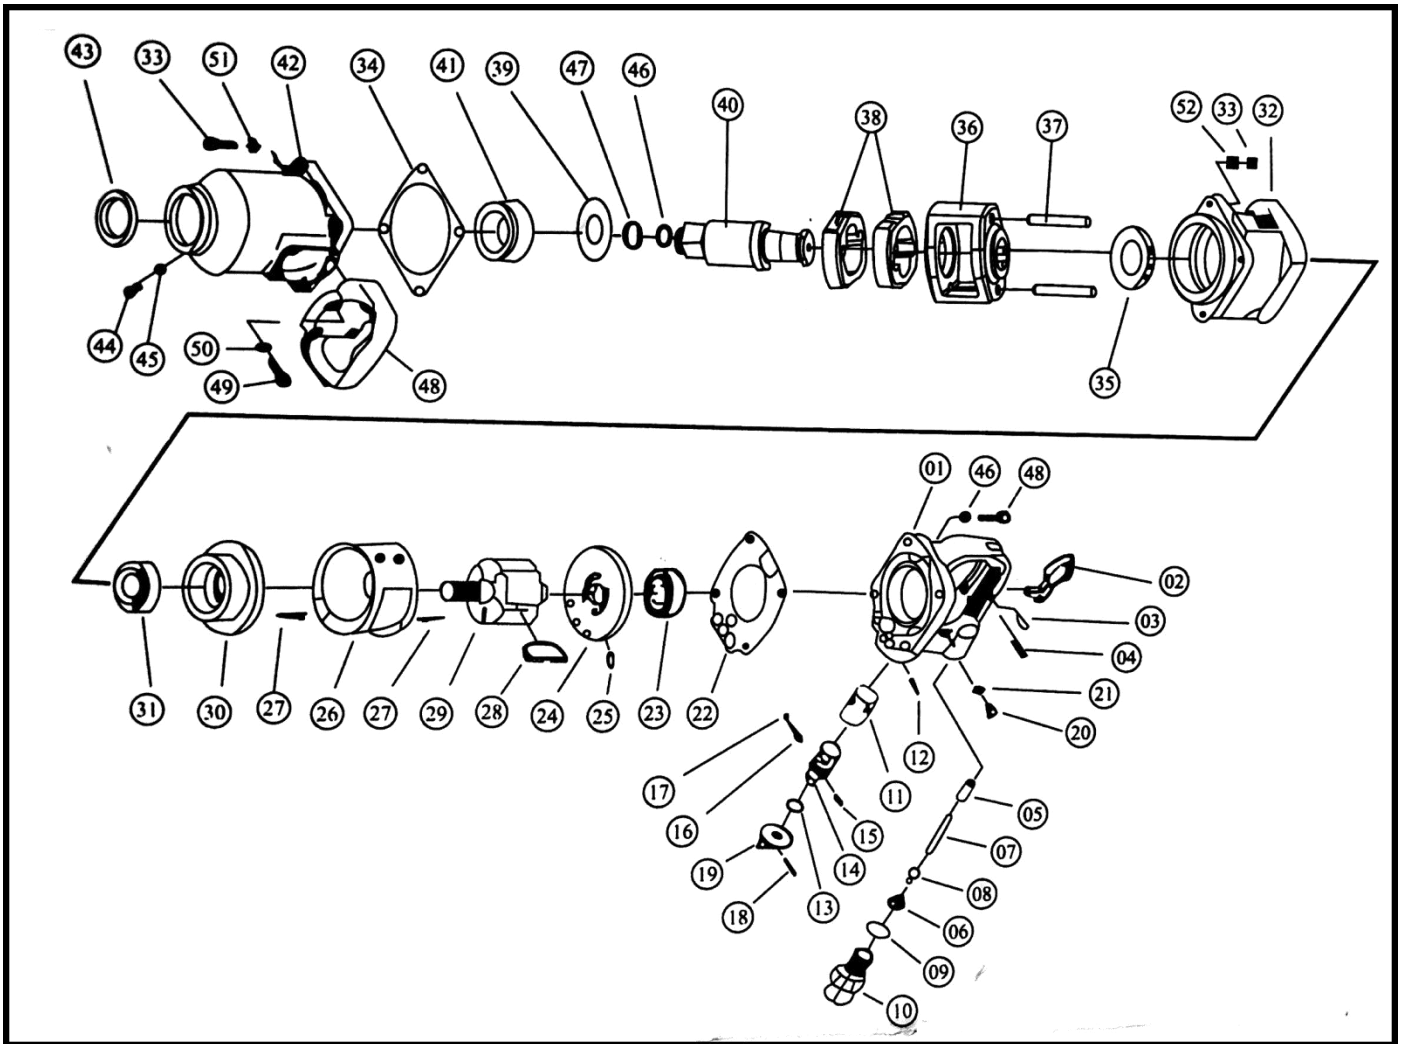

No.	Part name	QTY	No.	Part name	QTY	No.	Part name	QTY	No.	Part name	QTY
1	Handle	1	14	Valve	1	27	Spring pin	2	40	Anvil	1
2	Switch	1	15	Spring pin	1	28	Blade	6	41	Bearing	1
3	Spring pin	1	16	Spring	1	29	Impeller	1	42	Hammer shell	1
4	Needle pin	1	17	Ball	1	30	After the cover	1	43	Anti-oil-ring	1
5	Throttle bushing	1	18	Spring pin	1	31	Bearing	1	44	Oil plug screw	1
6	Throttle spring	1	19	Copper sleeve	1	32	Chassis	1	45	O-ring	1
7	Throttle pin	1	20	Oil plug screw	1	33	Hexagon screw	4	46	O-ring	1
8	Throttle	1	21	O-ring	1	34	Ring	1	47	Fixed ring	1
9	O-ring	1	22	Shell ring	1	35	Gasket	1	48	D-handle	1
10	Inlet bushing	1	23	Bearing	1	36	Hammer cage	1	49	Spring washer	4
11	Valve spring	1	24	After the cover	1	37	Hammer pin	1	50	Hex cap bolts	4
12	Spring pin	1	25	Spring pin	1	38	Hammer	2	51	Elastic washer	4
13	O-ring	1	26	Cylinder	1	39	Thrust washer	1	52	Hex nut	12