

Manuale d'uso - Efficienza Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuell - Energieeffektivitet / Manuell - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual – Energieeffektivitet Руководство - Энергоэффективность / Käsiiraamat - Energiatõhususe / Rokasgrāmata - Energieeffektivitātes

Table with 16 columns: S, M, AEC, EEC, FDE, FDEC, LE, LEC, GFE, GFEC, Qmin, Qmax, Qboost, SPEmin, SPEmax, SPEboost, P0, Ps, F, EE, Qbep, Pbp, Qmax, Wbep, WL, Emiddle, Lwa, CONSIGLI PER IL RISPARMIO ENERGETICO, CONSIGLI PARA EL AHORRO DE ENERGIA, CONSELHOS PARA ECONOMIA ENERGETICA, CONSIGLI PER IL RISPARMIO ENERGETICO, CONSIGLI PARA EL AHORRO DE ENERGIA, CONSELHOS PARA ECONOMIA ENERGETICA, Norme di riferimento, Normative references, Referenznormen, Normas de referencia, Normas de referencia, Referensstandarder, Referensstandarder, Vitteormit, Referencestandar, Normatívus dokument, Normatívus dokument. Rows include manufacturer (FABER), model (P1381), efficiency classes (AEC, EEC, FDE, FDEC, LE, LEC, GFE, GFEC), flow rates (Qmin, Qmax, Qboost), sound power levels (SPEmin, SPEmax, SPEboost), power consumption (P0, Ps), and various performance metrics (F, EE, Qbep, Pbp, Qmax, Wbep, WL, Emiddle, Lwa).

