 
 



№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	20340010130	Накладка рукоятки	1	7	70230090000	Кронштейн крепления ручки стартера	1
2	70500192130	Верхняя рабочая рукоятка	1	8	70520090130	Нижняя рабочая рукоятка	1
3	70540012780/ 70540012130	Рычаг выключения двигателя	1	9	60040130000	Болт М8х50	2
4	20030030000	Ограничитель рычага	1	10	20040030780	Гайка крепления рукояток	4
5	70050120000	Кронштейн троса	1	11	20240020000	Хомут для троса	1
6	70810040000	Трос выключения двигателя	1	12	60040090000	Болт М8х30	2




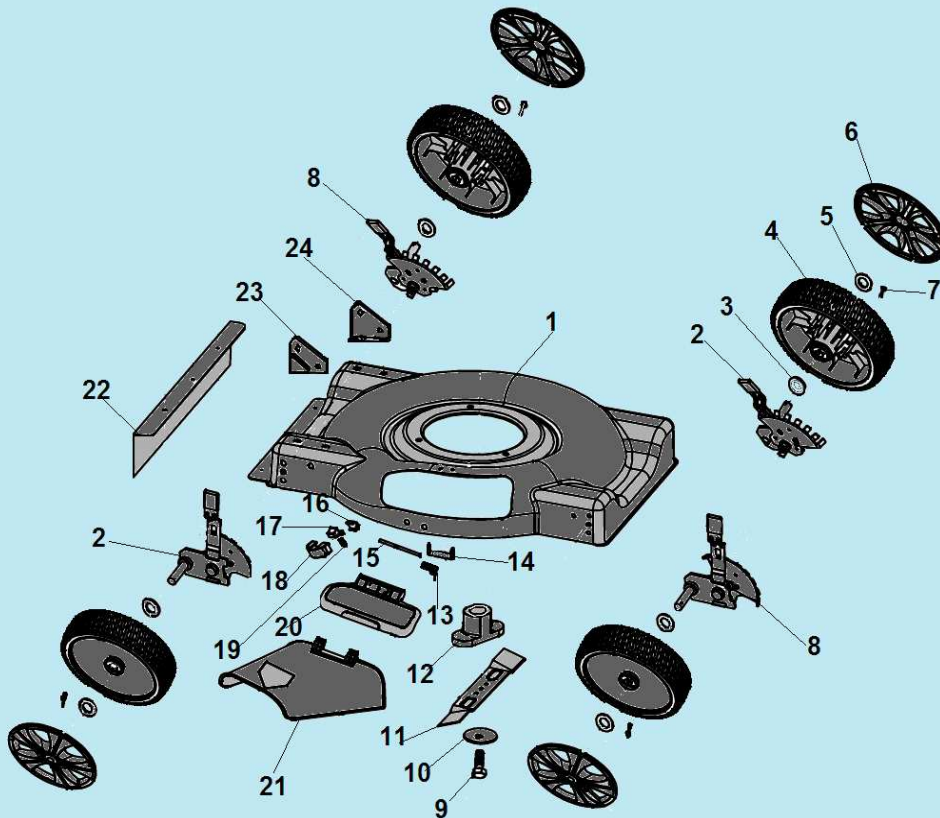






№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	70742210780	Корпус (дека)	1	13	60390010000	Пружина оси	1
2	70880030000	Кронштейн колеса с регулятором высоты	2	14	70060060780	Кронштейн	1
3	60180110000	Шайба 14,2x20,7x0,5	4	15	70030070000	Ось крышки отсека бокового	1
4	20880103000/ 20880103130	Колесо	4	16	60200580000	Прокладка	1
5	60190080000	Шайба 13x20x1,5	4	17	20490090000	Фиксатор крышки	1
6	20620030060	Колпак колеса	4	18	20650200000	Корпус фиксатора	1
7	60300060000	Шплинт	4	19	60380600000	Пружина фиксатора	1
8	70880060000	Кронштейн колеса с регулятором высоты	2	20	20120050000	Крышка отсека выброса травы	1
9	60100020000	Болт 3/8-24UNF-35	1	21	20110060000	Направляющая бокового выброса	1
10	70040070000	Шайба крепления ножа	1	22	20750020000	Накладка деки	1
11	70130030000	Нож для травы	1	23	70070080000	Правый кронштейн крепления рукоятки	1
12	70140750000	Адаптер крепления ножа	1	24	70070020000	Левый кронштейн крепления рукоятки	1






**08P500**

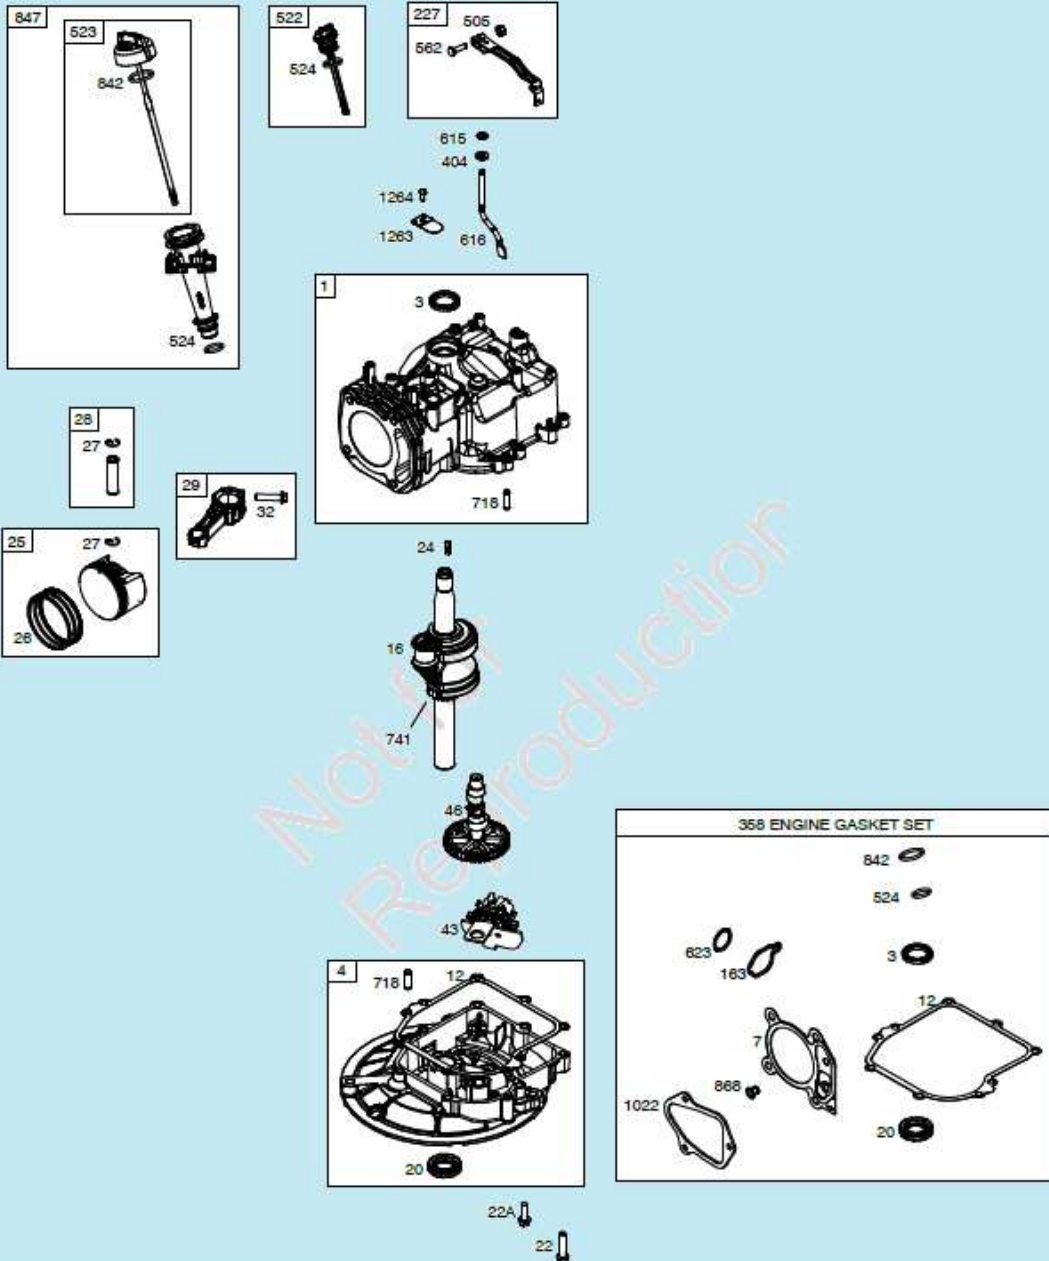


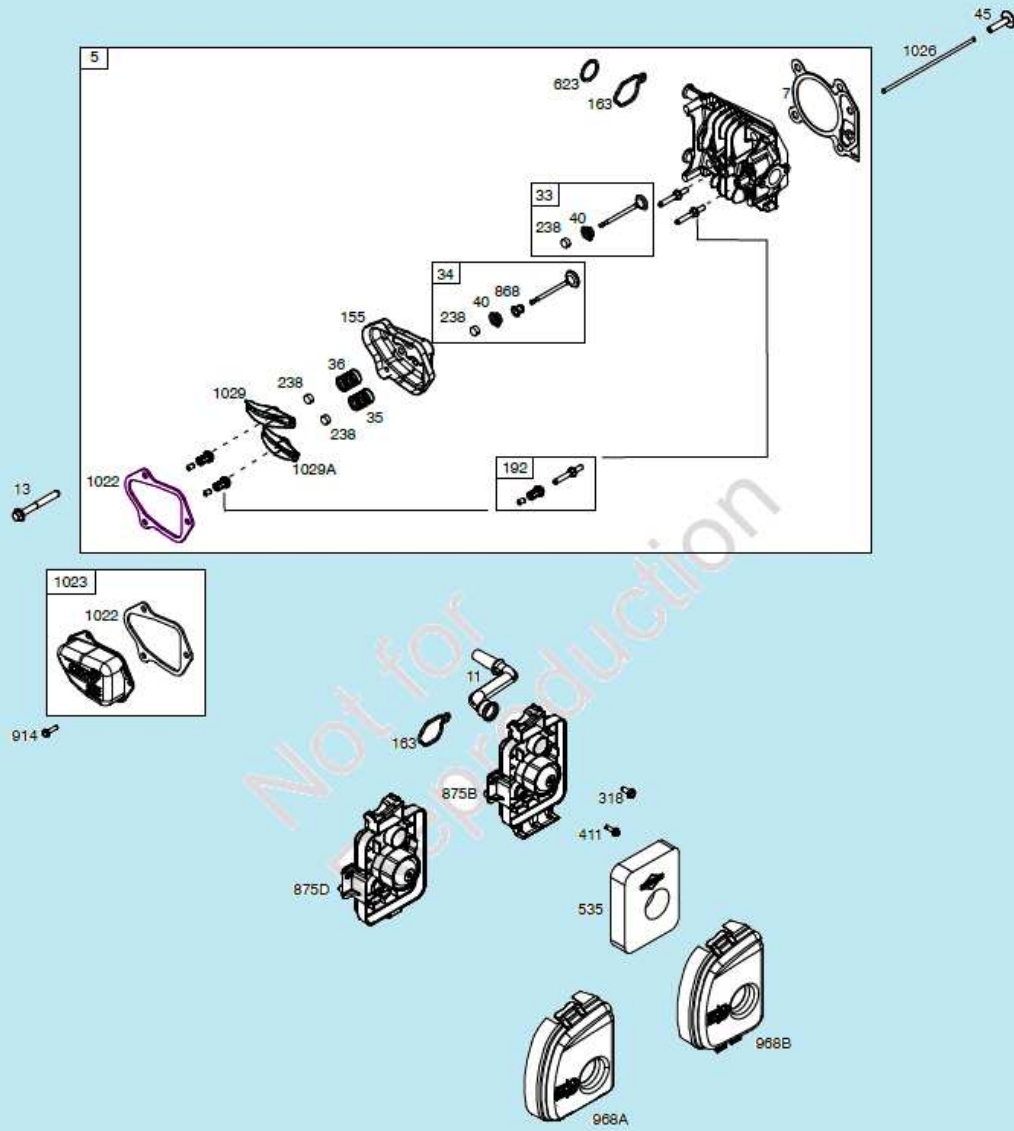 

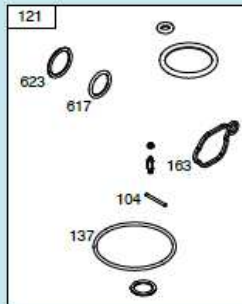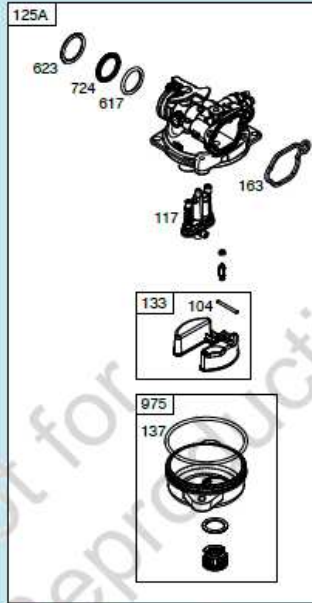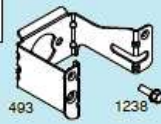    


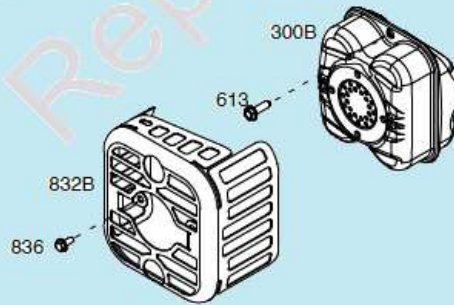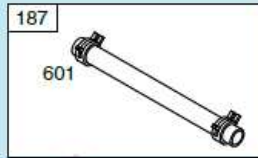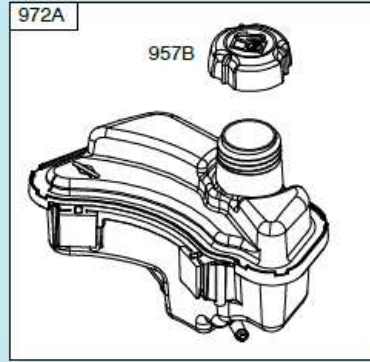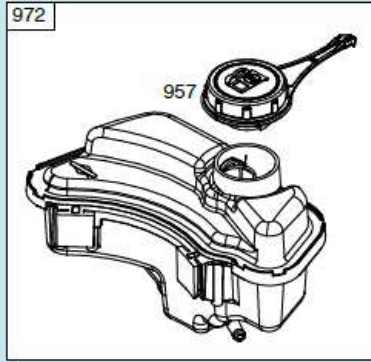    

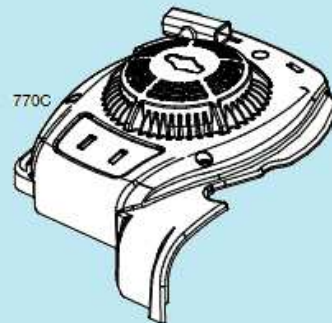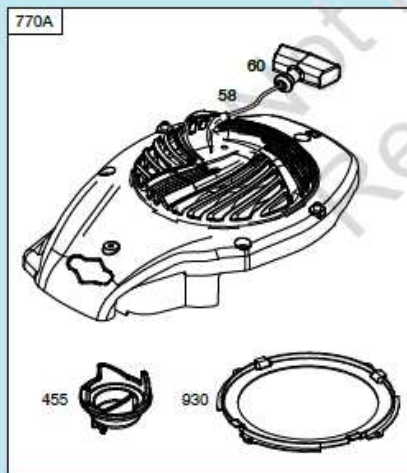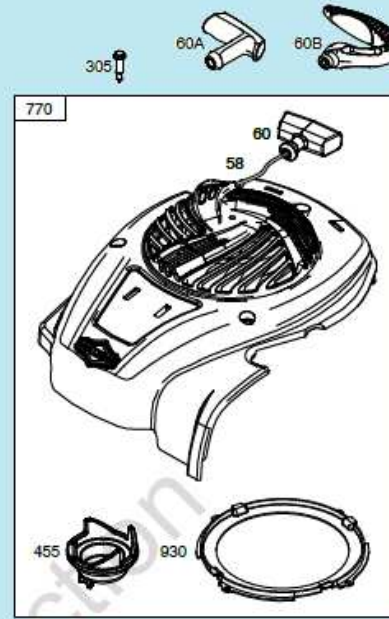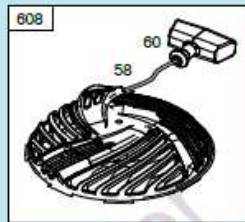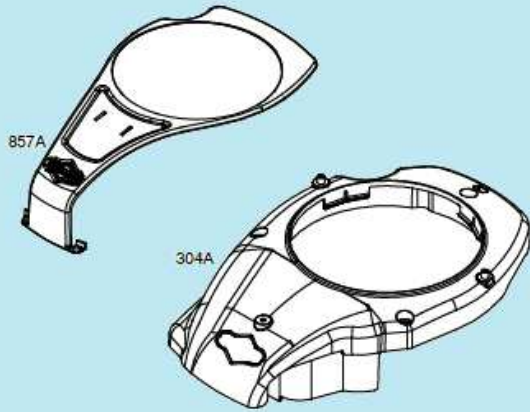       

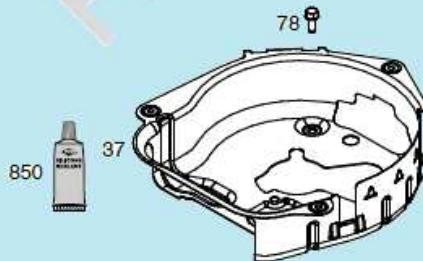



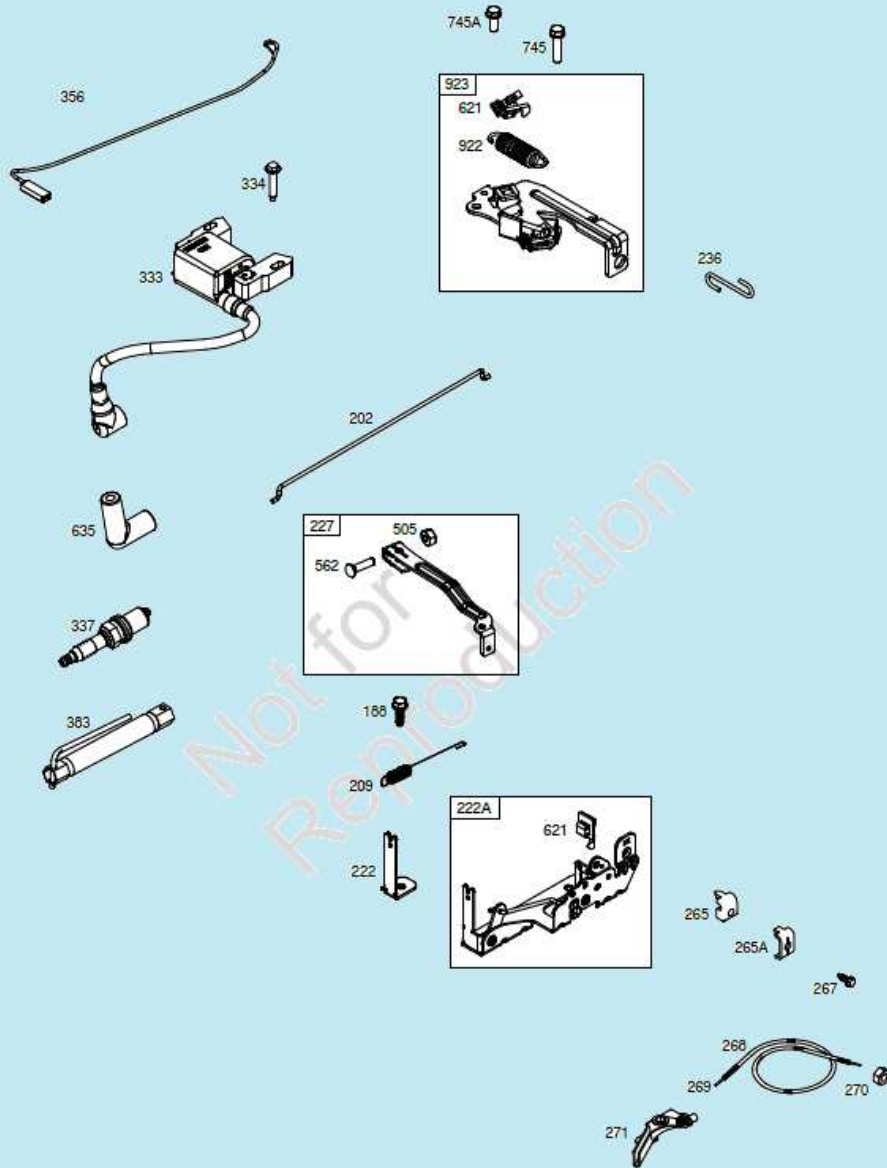

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	592048	Cylinder Assembly	33	590531	Valve-Exhaust	121	590589	Kit-Carburetor Overhaul
3	299819s	Seal-Oil (Magneto Side)	34	590530	Valve-Intake	122	590549	Spacer-Carburetor
4	590569	Sump-Engine	35	590532	Spring-Valve (Intake)	125A	591979	Carburetor
5	590525	Head-Cylinder	36	590532	Spring-Valve (Exhaust)			----- Note -----
7	799586	Gasket-Cylinder Head	37	590582	Guard-Flywheel			593261 Carburetor
11	590522	Tube-Breather			----- Note -----			Used on Type No(s).
12	799587	Gasket-Crankcase			591904 Guard- Flywheel			0034, 0042, 0046,
13	590512	Screw (Cylinder Head)			Used on Type No(s).			0047, 0049, 0054,
16	590537	Crankshaft			0009, 0013, 0016,	133	591120	0055, 0063, 0064.
		----- Note -----			0017, 0020, 0025,	137	593235	Float-Carburetor
		590538 Crankshaft			0026, 0027, 0029,	155	590529	Gasket-Float Bowl
		Used on Type No(s).			0035, 0037, 0040,	163	799580	Plate-Cylinder Head
		0011, 0015, 0017,			0044, 0056, 0060,	167	791766	Gasket-Air Cleaner
		0021, 0022, 0025,			0066, 0068, 0071,	187		Line-Fuel
		0026, 0027, 0028,			0074, 0076.			(Cut To Required Length)
		0030, 0033, 0036,	40	590528	Retainer-Valve	188	793480	Screw
		0037, 0042, 0043,	43	697799	Slinger-Governor/Oil			(Control Bracket)
		0044, 0045, 0046,	45	590514	Tappet-Valve	192	590535	Adjuster-Rocker Arm
		0049, 0050, 0051,	46	590524	Camshaft	202	590517	Link-Mechanical
		0061, 0063, 0065,			----- Note -----			Governor
		0066, 0067, 0069,			592968 Camshaft	209	590541	Spring-Governor
		0070, 0071, 0073,			Used on Type No(s).			----- Note -----
		0075, 0078.			0004, 0013, 0024.			591497 Spring- Governor
		591152 Crankshaft			(Used After Code Date			Used on Type No(s).
		Used on Type No(s).			13081100).			0049, 0067, 0069.
		0034, 0047, 0048,	58	591108	Rope-Starter	222	590560	Bracket-Control
		0052, 0055, 0059,	60	691915	Grip-Starter Rope	222A	590561	Bracket-Control
		0062, 0076.	60A	281434s	Grip-Starter Rope	227	590520	Lever-Governor
20	391483s	Seal-Oil (PTO Side)	60B	799716	Grip-Starter Rope			Control
22	692551	Screw (Crankcase Cover/Sump)	78	793480	Screw (Flywheel Guard)	236	591292	Link-Lockout
22A	590763	Screw (Crankcase Cover/Sump)	104	590558	Pin-Float Hinge	238	590533	Cap-Valve
			117	592804	Jet-Main (Standard)	265	690798	Clamp-Casing
					----- Note -----	265A	691024	Clamp-Casing
23	590544	Flywheel			592794 Jet-Main (Standard)	267	692577	Screw (Casing Clamp)
23A	592005	Flywheel			Used on Type No(s).	268	691025	Casing-Control Wire (Cut To Required Length)
24	222698s	Key-Flywheel			0034, 0042, 0046,	269	691026	Wire-Control (Cut To Required Length)
25	591975	Piston Assembly (Standard)			0047, 0049, 0054,			
26	591976	Ring Set (Standard)			0055, 0063, 0064.	270	691027	Nut (Control Wire Casing)
27	691588	Lock-Piston Pin	118	592689	Jet-Main (High Altitude)	271	691028	Lever-Control
28	699659	Pin-Piston (Standard)			----- Note -----	300B	590565	Muffler
29	590518	Rod-Connecting			593271 Jet-Main (High Altitude)	304A	593962	Housing-Blower
32	691664	Screw (Connecting Rod)			Used on Type No(s).	305	590586	Screw (Blower Housing)
					0034, 0042, 0046,	318	793480	Screw (Mounting Bracket)
					0047, 0049, 0054,	332	690662	Nut (Flywheel)
					0055, 0063, 0064.			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
333	593872	Armature-Magneto	601	791850	Clamp-Hose	868	590534	Seal-Valve (Intake)
334	691061	Screw (Magneto Armature)	608	593959	Starter-Rewind (Used After Code Date 14082400)	875B	590584	Base-Air Cleaner
337	692051	Plug-Spark (Resistor)	613	590562	Screw (Muffler)	875D	593227	Base-Air Cleaner Used on Type No(s). 0038, 0039, 0040.
		----- Note ----- 692720 Plug-Spark (EMS) Used on Type No(s). 0002, 0004, 0005, 0012, 0013, 0015, 0016, 0017, 0021, 0022, 0023, 0024, 0030, 0040, 0041, 0045, 0048, 0051, 0052, 0053, 0058, 0068, 0070, 0071, 0073, 0074, 0075, 0077.	615	690340	Retainer-Governor Shaft	914	591103	Screw (Rocker Cover)
			616	590516	Crank-Governor	922	692135	Spring-Brake
			617	270344s	Seal-O Ring (Intake Manifold)	923	691487	Brake
			621	692310	Switch-Stop	930	590585	Guard-Rewind
			623	799581	Seal-O Ring (Carburetor Spacer)	957	799585	Cap-Fuel Tank
			635	692076	Boot-Spark Plug	957B	692046	Cap-Fuel Tank
			668	590546	Spacer	968A	593228	Cover-Air Cleaner Used on Type No(s). 0038, 0039, 0040.
			718	690959	Pin-Locating (Crankcase Cover)	968B	590581	Cover-Air Cleaner
			724	697478	Retainer-Seal	972	590568	Tank-Fuel
			741	796210	Gear-Timing (Plastic)	972A	591947	Tank-Fuel
356	692390	Wire-Stop	745	691146	Screw (Brake)	975	591492	Bowl-Float
		----- Note ----- 796798 Wire-Stop Used on Type No(s). 0069.	745A	690859	Screw (Brake)	1005	592050	Fan-Flywheel
358	590590	Gasket Set-Engine	770	591977	Kit-Rewind/Blower Housing	1022	591255	Gasket-Rocker Cover
363	19619	Puller-Flywheel			----- Note ----- 591139 Kit-Rewind/ Blower Housing Used on Type No(s). 0004, 0013, 0024, 0030, 0045.	1023	590513	Cover-Rocker Arm
383	19576s	Wrench-Spark Plug	770A	592049	Kit-Rewind/Blower Housing	1026	590515	Rod-Push
404	690272	Washer (Governor Crank)			Used on Type No(s). 0005, 0015, 0018, 0057.	1029	590526	Arm-Rocker
411	590552	Screw (Air Cleaner Base to Air Cleaner Bracket)	770C	594276	Kit-Rewind/Blower Housing	1029A	590527	Arm-Rocker
455	590545	Cup-Flywheel (Used Before Code Date 14082500)			Used on Type No(s). 0077, 0078.	1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
455A	593960	Cup-Flywheel (Used After Code Date 14082400)	832B	592709	Guard-Muffler	1058		381266TRI Manual-Operator's
493	590551	Bracket-Mounting (Carburetor)	836	690661	Screw (Muffler Guard)			----- Note ----- 381266EST Manual-Operator's 381266WST Manual-Operator's 80006730SEA Manual-Operator's Used on Type No(s). 0043, 0068.
505	793515	Nut (Governor Control Lever)	842	691031	Seal-O Ring (Dipstick Tube)	1127	590554	Screw (Float Bowl to Carburetor Body)
522	590580	Plug-Dipstick/Fill	847	590572	Dipstick/Tube Assembly	1238	590562	Screw (Carburetor Spacer)
523	796503	Dipstick	850	100106	Sealant-Silicone	1263	697124	Reed-Breather
524	691876	Seal-Dipstick Tube	857A	591114	Trim-Blower Housing Cover	1264	793453	Screw (Breather Reed)
535	799579	Filter-Air Cleaner Foam			Used on Type No(s). 0045, 0050.	1319	794467	Label-Warning
562	793514	Bolt (Governor-Control Lever)				1319A	797669	Label-Warning