







SCREEN SYMBOLS

	<p>Minute Minder Status Indication</p> <ul style="list-style-type: none"> • On: Minute minder alarm active. • Flashing: Minute minder adjustment mode , adjustment possible by  or  buttons or current minute minder alarm completed. • Off: Minute minder is not active.
	<p>Child Lock Indication</p> <ul style="list-style-type: none"> • On: Child Lock is active. • Off: Child Lock is inactive.





It is an electronic timing module to use a minute-programmed alarm clock independent from the oven.


The case where the time clock is behind or ahead is not a malfunction. The oven time clock may be put back or ahead according to mains frequency as it runs directly with mains voltage. This is not a malfunction.

POWER ON

At power on, time of day is flashing. The indicated time of day is not correct and has to be adjusted.

TIME OF DAY ADJUSTMENT





Press  and  simultaneously for 3 seconds to enter the adjustment mode and then the dot symbol in between hours and minutes digits will start to flash. Using either  and  adjust the desired duration. The maximum adjustable duration is 23h 59 minutes.


Adjustment mode will be abandoned within 6 seconds after the last button press or can be terminated immediately by pressing the  button.

Note: Time of Day adjustment is also activated in first 7 seconds after power on.


SETTING THE MINUTE MINDER

With this function, you can adjust a duration in minutes . After the adjusted time has been elapsed, an alarm sound will be produced.




Press  button once to enter the minute minder adjustment mode,  symbol will start flashing on the screen. Using either  or , adjust the desired duration. The minute minder time increments are in 10 seconds up to 99 minutes 50 seconds, thereafter the display will show 1 hour and 40 minutes and the adjustment will be in 1 minute steps up to the 24 hours.

Adjustment mode will be abandoned within 6 seconds after the last button press or can be terminated immediately by pressing the  button.

CANCELLING THE ALARM BUZZER SOUND





Once the adjusted minute minder duration is elapsed, the buzzer alarm will start to sound , accompanied by the flashing  symbol on the screen. Any button press will stop the alarm sound and this indication. If no button is pressed, the alarm sound will end automatically after 5 minutes, but the flashing symbol will go on.

CHILD LOCK





This function is intended to prevent any unauthorized modification of the timer settings. This function will be active, within 30 seconds after the last button press.  will appear. To deactivate it, press the  button for 3 seconds.  will disappear.

PROGRAMMABLE OPTIONS

Alarm tone:

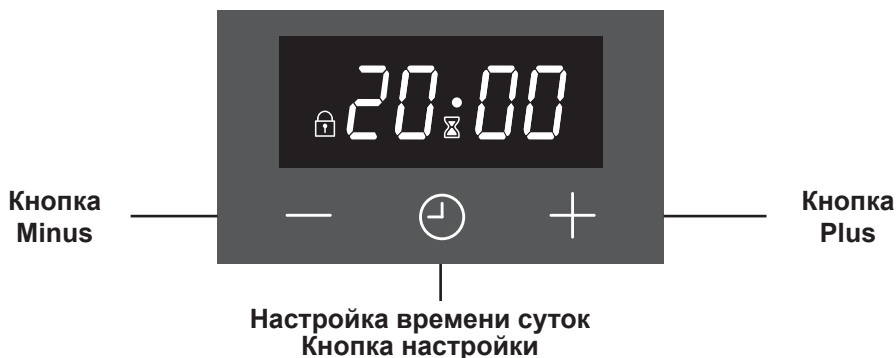
Pressing and holding the  button for 3 seconds will result in the currently valid buzzer tone being produced. By pressing  and  buttons, you may scroll through 3 available buzzer tones. The last heard buzzer tone will be automatically recorded as the selected tone. After 6 seconds of the last button press or by pressing , the adjustment is completed.

Brightness setting:



Pressing and holding the  button for 3 seconds will result in the currently valid brightness setting being showed. By pressing  and  buttons, you may scroll through 8 available brightness setting. The last seen brightness setting will be automatically recorded as the selected setting. After 6 seconds of the last button press or by pressing , the adjustment is completed.

Note: Default settings are highest.

Note: Programmable options are nonvolatile and will be resident after any power failure.



СИМВОЛЫ НА ЭКРАНЕ

	<p>Индикация статуса устройства поминутного напоминания</p> <ul style="list-style-type: none"> • Вкл.: Сигнал устройства минутного напоминания активен. • Мигание: Режим настройки устройства поминутного напоминания, настройка выполняется кнопками + или - или завершением работы текущего устройства поминутного напоминания. • Выкл.: Сигнал устройства минутного напоминания неактивен.
	<p>Индикация "Блокировки от детей"</p> <ul style="list-style-type: none"> • Вкл.: Блокировка от детей активна. • Выкл.: Блокировка от детей неактивна.

Это электронный модуль отсчета времени для использования запрограммированного таймера, независимого от духовки.

Случай, при котором время на таймере отстает или спешит, не является неисправностью. Время на таймере может спешить или отставать в зависимости от частоты напряжения, в связи с тем, что он работает непосредственно от сетевого напряжения. Это не является неисправностью.

ВКЛЮЧЕНИЕ ПИТАНИЯ

При включении питания мигает время суток. Указанное время суток неправильно определено и должно быть исправлено.

НАСТРОЙКА ВРЕМЕНИ СУТОК





Нажмите **+** и **-** одновременно в течение 3 секунд для переключения на режим настройки, затем начнет мигать символ точка между значениями часов и минут. Используйте **+** или **-** для настройки требуемого времени. Максимальное значение для настройки 23ч 59 минут.


Режим настройки будет отменен в течение 6 секунд после последнего нажатия кнопки **⌚** или может быть немедленно прекращен нажатием кнопки.

Примечание: Настройка времени суток также активируется в первые 7 секунд после включения.


УСТАНОВКА УСТРОЙСТВА ПОМИНУТНОГО НАПОМИНАНИЯ

Благодаря данной функции вы можете настроить продолжительность в минутах. По истечении установленного времени Вы услышите сигнал таймера.




Нажмите кнопку  один раз, для того чтобы войти в режим настройки устройства поминутного напоминания,  символ будет мигать на экране. Используйте  или  для настройки требуемой продолжительности. Диапазон устройства поминутного напоминания от 10 секунд и до 99 минут 50 секунд, то есть на дисплее появится 1 час 40 минут, настройка будет производиться с шагом от 1 минуты и до 24 часов.

Режим настройки будет отменен в течение 6 секунд после последнего нажатия кнопки или может быть немедленно прекращен нажатием кнопки. 

ОТКЛЮЧЕНИЕ СИГНАЛА УСТРОЙСТВА ПОМИНУТНОГО НАПОМИНАНИЯ





По истечении установленного времени Вы услышите сигнал, сопровождающийся миганием символа  на экране. Нажатие любой кнопки остановит сигнал и индикацию. При не нажатии на любую из кнопок звуковой сигнал прекратится автоматически через 5 минут, однако, но мигающий символ будет активен.

БЛОКИРОВКА ОТ ДЕТЕЙ




Эта функция предназначена для предотвращения любого несанкционированного изменения настроек таймера. Эта функция будет активна в течение 30 секунд после последнего нажатия кнопки.  появится. Для дезактивации нажмите на  в течение 3-х секунд.  исчезнет.

ПРОГРАММИРУЕМЫЕ ОПЦИИ

Звук сигнала:

Нажатие и удержание кнопки  в течение 3-х секунд приведет к использованию текущего звука сигнала. Нажатием кнопки  и  вы можете ознакомиться с 3 другими звуками сигнала. Последний прослушанный сигнал будет автоматически установлен. Через 6 секунд после последнего нажатия кнопки или с помощью нажатия кнопки  настройка будет завершена.

Настройка яркости:

Нажатие и удержание кнопки  в течение 3-х секунд приведет к использованию текущей яркости. Нажатием кнопки  вы  можете ознакомиться с 8 другими вариантами яркости. Последняя просмотренная яркость будет автоматически установлена. Через 6 секунд после последнего нажатия кнопки или с помощью нажатия кнопки  настройка будет завершена.

Примечание: Настройки по умолчанию являются самыми высокими.

Примечание: Программируемые параметры неизменны и останутся такими же после сбоя питания.