

**RM-D1177+ BBK DVD/TV/LCD/LED
Universal Remote Control
User Guide**

Turns TV on or off Turns DVD on or off



Remark:
Blue print for the DVD function

Insert two "AAA" batteries, press "DVD power" or "TV power". Switch to the corresponding function, test the remote controller can work or not, if can't, please set as follow methods:

Method 1: Input the Code
A, DVD function: press "DVD power" button and "ENTER" button together, when the indicator lights, according to the dvd remote controller pictures to input the code (such as 001), setting finished, test DVD function.

B, TV function: press "TV power" button and "ENTER" button together, when the indicator lights, according to the tv remote controller pictures to input the code (such as 001), setting finished, test tv function.

To DVD as an example:



indicator lights then input the code 001

Press the "DVD power"

Method 2: Auto search
A, DVD function: press "DVD power", and don't release. After 6 seconds, the remote controller will search automatic, when volume appears on your tv, release button on time, setting finished, test dvd function.

B, TV function: press "TV power", and don't release. After 6 seconds, the remote controller will search automatic, when volume appears on your tv, release button on time, setting finished, test tv function.

To DVD as an example:



After 6s, the remote will searching, when volume appears, release "power"

Remark: press "ENTER" and number "0" button, it will restore factory defaults

Установите две батарейки типа AAA, нажмите "DVD Power" или "TV Power". Включите соответствующую функцию и проверьте работает пульт, или нет. Если нет, то выполните следующие методы настройки:
Метод 1: Ввод кода
А, Функция DVD: нажмите кнопку "DVD Power" и "Enter" вместе, когда загорится индикатор введите соответствующий картинке пульта код (например 001). Настройка завершена, проверьте функции DVD.
В, Функция TV: нажмите кнопку "TV Power" и "Enter" вместе, когда загорится индикатор введите соответствующий картинке пульта код (например 010). Настройка завершена, проверьте функции TV.

Пример для DVD:

Нажмите "DVD Power"

Индикатор загорится - вводите код 001

Метод 2: Автопоиск

А, DVD функция: направьте пульт на DVD плеер, нажмите "DVD Power", и не отпускайте.

Через 6 секунд пульт начнёт автопоиск.

Когда на телевизоре появится громкость – отпустите

кнопку. Настройка завершена, проверьте функции DVD.
В, TV функция: направьте пульт на TV, нажмите "TV Power",

и не отпускайте. Через 6 секунд пульт начнёт автопоиск. Когда на телевизоре появится громкость - отпустите кнопку. Настройка завершена, проверьте функции TV.


Пример для DVD:

Нажмите "DVD Power"


И через 6 секунд начнется автопоиск, когда появится звук, отпустите "power".

Для сброса настроек нажмите "Enter" и "0".

DVD MODELS

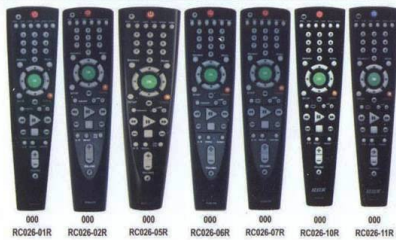

RC026-01R RC026-02R RC026-05K RC026-06R RC026-07R RC026-10R RC026-11R

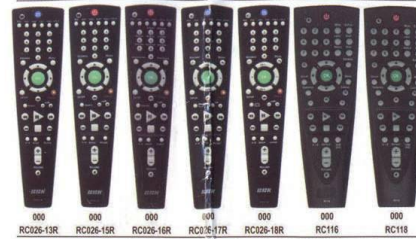


RC026-13R RC026-15R RC026-16R RC026-17R RC026-18R RC116 RC118



RC437 DK1005S DK3510S DK3530S DK9907S RC-16 RC-34



RC-47 RC-49 RC-59 RC-60 RC-1050 RC-1060 RC-1070

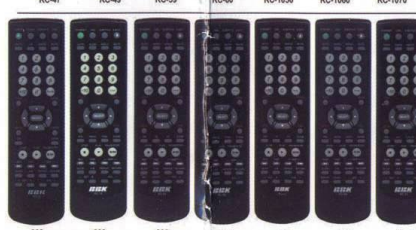


RC-02 RC-15 RC-24 RC-25 RC-43 RC-48 RC-51


DVD MODELS




RC-54 ABSS30T ABSS35T AV100 AV210T AV215T AV214T

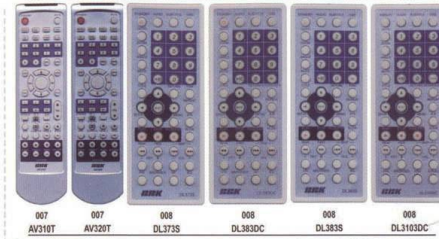


AV310T AV320T DL373S DL3830C DL3835 DL3103DC

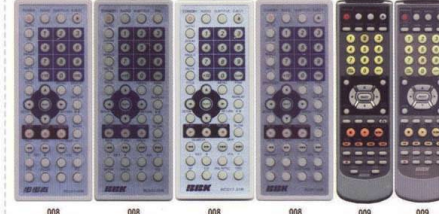

RC017-06R RC017-22R RC017-31R RC017-40R DW9916S DW 9915S

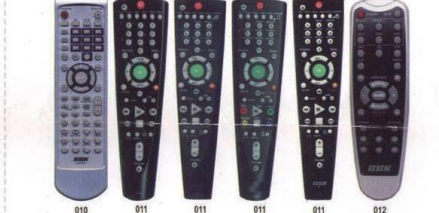

DW9933S LT115 LT121 LT122 LT123 FSA-680

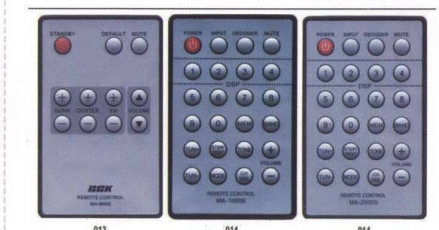


MA-800S MA-1000S MA-2000S

DVD MODELS



RC019-01R RC019-12R RC019-19R RC026-020R RC073-01R RC073-02R RC1024 RC3050

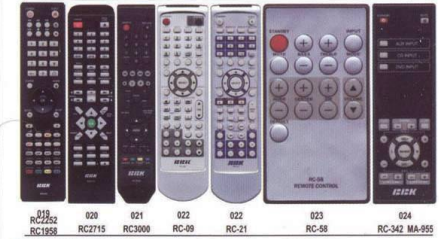

RC1958 RC2715 RC3000 RC-09 RC-21 RC-08 RC-24 MA-955



RC-070 RC-MA101 RC019-24R FSA-1006

TV/LED/LCD MODELS



RC-LED100 RC-LEM100 HOF96295PDK HOF96K425SP08 LT118-03 LT1507 LT1510



LT2003S LT117 LT4710 RC3229 CAMERON LT1504 RC-1902



RC2465 RC-2003 EN-31907 HVD208 HYUNDAI RC-STB100