


Product Overview

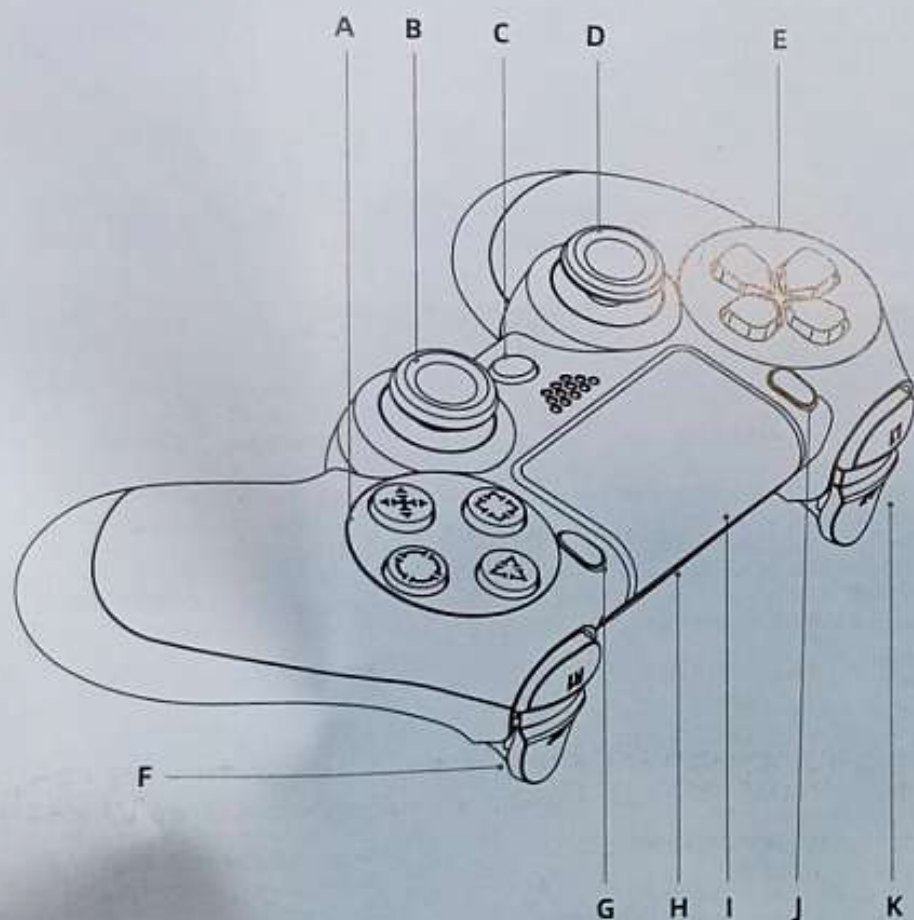

- A) key / key / key / key
- B) Right joystick
- C) PS key
- D) Left joystick
- E) Arrow keys
- F) R1, R2 keys

- G) OPTION key
- H) LED indicator
- I) Touchpad keys
- J) SHARE key
- K) L1, L2 keys

How to use

EN

1. Use the data cable to connect the PS4 host to the handle, press the PS button, and the connection is successful after the LED light is on.
2. After the connection is successful, unplug the data cable, you can use it wirelessly.
3. Turn off the handle: long press the PS button for 10 seconds.

Note: Only the first use requires a data cable to connect the PS4 host to the handle.

Как использовать

RU

1. Используйте кабель для подключения к PS4, нажмите кнопку PS, соединение будет успешным после того, как загорится светодиодный индикатор.
2. После успешного подключения отключите кабель и вы сможете использовать контроллер без проводов.

Примечание: только при первом использовании требуется кабель для подключения консоли PS4 к контроллеру.

Wie benutzt man

DE

1. Verwenden Sie das Datenkabel, um den PS4-Host mit dem Griff zu verbinden, drücken Sie die PS-Taste, und die Verbindung ist erfolgreich, nachdem das LED-Licht leuchtet.
2. Nachdem die Verbindung erfolgreich ist, ziehen Sie das Datenkabel ab, Sie können es drahtlos verwenden.
3. Schalten Sie den Griff aus: Drücken Sie die PS-Taste 10 Sekunden lang.

Hinweis: Nur bei der ersten Verwendung ist ein Datenkabel erforderlich, um den PS4-Host mit dem Griff zu verbinden.