

**Руководство
пользователя
цифрового
фортепиано
Aramius**



Меры безопасности

Пожалуйста, внимательно прочтите инструкцию перед использованием.

Сохраните эту инструкцию для будущего использования.

Внимание

Для избежания серьезных травм или смерти, вызванных ударом электрическим током, коротким замыканием, пожаром или иными факторами, обязательно соблюдайте следующие правила безопасности. Эти предупреждения включают, но не ограничиваются, следующим:

Питание / силовой кабель

1. Может использоваться только номинальное напряжение, указанное в данном оборудовании.
Требуемое напряжение указано в соответствующей табличке.
2. Регулярно проверяйте вилку и очищайте её от накопившейся пыли.
3. Используйте только кабель, входящий в комплект поставки.
4. Не размещайте кабель питания рядом с источником тепла, таким как обогреватель или радиатор. Не перегибайте кабель питания слишком сильно, так как это может привести к его повреждению.
5. Не ставьте на кабель тяжелые предметы и не прокладывайте его в тех местах, где люди могут споткнуться об него и получить травму.
6. В случае неисправности не пытайтесь открыть устройство самостоятельно.

Немедленно прекратите использование и обратитесь к квалифицированным специалистам для устранения неполадок.

Влага

1. Не допускайте попадания влаги на устройство, не используйте его вблизи воды или во влажной среде; не ставьте на него сосуды с жидкостью, так как это может привести к проникновению жидкости в любое отверстие. Если в инструмент попала жидкость, немедленно выключите питание и выньте вилку из розетки. Затем обратитесь к квалифицированным специалистам для технического обслуживания оборудования.
2. Не включайте и не выключайте вилку влажной рукой.



3. Огонь

1. Не помещайте горящие предметы, такие, как свечи, на музыкальные инструменты. Упавшая свеча может стать причиной пожара.
2. В любой нештатной ситуации, например, при износе или повреждении кабеля питания, внезапном прерывании звука или появлении необычного запаха или дыма во время использования устройства, немедленно выключите его и выньте вилку из розетки. Обратитесь к квалифицированным специалистам для технического обслуживания оборудования.

4. Внимание

Для предотвращения травмы, порчи оборудования или ущерба для имущества, обязательно соблюдайте следующие базовые меры предосторожности. Эти меры включают, но не ограничиваются, следующим:

1. Питание / силовой кабель

При отключении кабеля обязательно беритесь за разъем (вилку), а не тяните за сам кабель, иначе кабель можно повредить.

2. Если вы не планируете использовать инструмент в течение длительного времени, а также в грозу, выключайте кабель из розетки.

3. Не используйте большое количество удлинителей, так как это может ухудшить качество звука, или привести к перегреву вилки и/или розетки.




Спасибо, что купили наше цифровое фортепиано! Вне зависимости от того, являетесь ли вы студентом, любителем фортепиано или профессионалом, это фортепиано впечатлит вас своим качеством звука и стильным дизайном. Вы можете учиться играть, создавать удивительные звуки, подключать MIDI, и многое другое. Кроме того, фортепиано оснащено взвешенной молоточковой клавиатурой, реагирующей на силу нажатия, что позволяет вам полнее выразить свои музыкальные эмоции.

Для лучшего понимания вашего нового цифрового пианино, мы рекомендуем вам внимательно прочитать данное руководство, чтобы в полной мере использовать расширенные и удобные функции инструмента. Мы также рекомендуем вам надлежащим образом хранить инструкции для дальнейшего использования.

Если вам нравится наше цифровое пианино, пожалуйста, порекомендуйте его своим друзьям!

1 Панель управления

Все функции вашего цифрового пианино находятся в левой части панели управления клавиатурой.

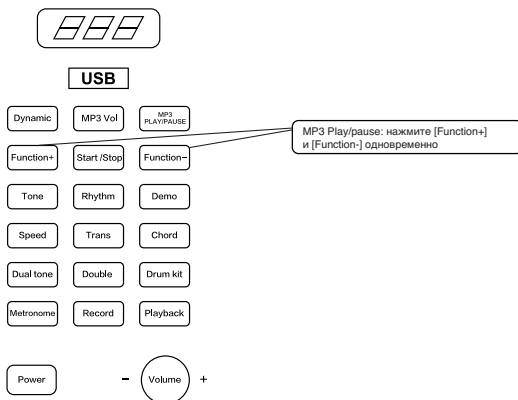

2 Кнопка включения питания/Громкость

1. Включите устройство

Подключите устройство к выходу адаптера питания и включите его с помощью кнопки [power] на правой стороне клавиатуры. Тембр по умолчанию – рояль.

2. Отрегулируйте громкость

Найдите ручку [volume] на панели управления, отрегулируйте громкость инструмента, при повороте ручки по часовой стрелке громкость прибавляется, против часовой стрелки – убавляется.

Предупреждение: чрезмерная громкость (особенно при подключении к наушникам) может повредить слух.

3 Подключение наушников

1. В дополнение к встроенной системе звукоусиления вы можете подключить стандартные наушники; гнездо для наушников находится под клавиатурой на левой стороне инструмента; при подключении наушников встроенная система звукоусиления отключается;

2. Отрегулируйте громкость наушников при помощи основной ручки громкости.

4 Функция записи

1. Начать запись: нажатие кнопки записи переключает устройство в режим ожидания записи.

2. Закончить запись: процесс записи заканчивается автоматически, когда заканчивается память устройства. Принудительное окончание записи: повторное нажатие кнопки записи останавливает запись.



РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ 4

5 Воспроизведение

Воспроизведение записанного материала: нажмите кнопку Play, чтобы начать воспроизведение.

6 Демонстрация

1. Воспроизвести все песни последовательно: имеется 110 встроенных демо-песен; нажмите кнопку [demonstration song], и песни будут воспроизводиться последовательно, повторное нажатие кнопки [demonstration song] останавливает воспроизведение.
2. Выбор песни: в режиме воспроизведения нажмите кнопку [last/function-] или кнопку [next/ function], и выберите песню. Будет воспроизводиться выбранная вами песня.

7 Ритмический рисунок

1. Выбрать ритмический рисунок: нажмите start/stop, чтобы активировать ритм, нажмите кнопку previous/-function или next/function в течение 5 секунд после нажатия кнопки rhythm. (Полный перечень ритмических рисунков дан в приложении).
2. Отрегулируйте скорость аккомпанемента: после нажатия кнопки rhythm, нажмите кнопку speed +/- чтобы подстроить темп авто-аккомпанемента.

8 Темп

1. Нажмите кнопку speed, чтобы отрегулировать темп в течение 5 секунд.
2. Можно также воспроизводить файлы с внешнего USB-устройства. Нажмите и удерживайте данную клавишу в течение 5 секунд, а затем нажмите кнопку Function, чтобы отрегулировать громкость MP3.

9 Комбинированный аккорд

1. Данная кнопка работает только в ритмическом и общих режимах. При воспроизведении ритма нажмите данную кнопку, и нажмите любую кнопку в диапазоне A1-F#4, затем нажмите многопальцевый метод, вы услышите соответствующий аккорду аккомпанемент; если не нажать многопальцевый метод постановки аккорда, устройство будет работать в режиме однопальцевого метода.

10 Тембр

1. Всего имеется 140 тембров, включая 128 стандартных GM, 17 тембров национальных инструментов, 10 стандартных групп перкуссионных инструментов, и 1 группа эффектов.
Дефолтный тембр при загрузке = 000.
2. Выберите тембр: нажмите кнопку тембр, активируйте функцию выбора тембра, на дисплее отобразится номер соответствующего тембра.
3. Нажмите кнопку [last/ function-] или кнопку [next/ function] в течение 5 секунд, чтобы выбрать тембр. (Перечень тембров доступен в приложении). Перезагрузите фортепиано, чтобы восстановить тембр по умолчанию (рояль).



12 Метроном

1. Нажмите кнопку **beat** на контрольной панели, чтобы активировать функцию метронома. На цифровом экране отображается темп по умолчанию.
2. Темп регулируется в диапазоне 20-280 ударов в минуту. Повторное нажатие выводит устройство из режима настройки метронома, и фортепиано автоматически возвращается к текущим настройкам;
3. При перезагрузке фортепиано возвращается к дефолтным настройкам метронома.

12 Транспонирование

1. Доступно 13 секций транспонирования (-6-6), описанные в Параграфе 7 после электрификации.
2. Нажатием этой кнопки тональность клавиатуры можно поднять или опустить на 6 полутонов: от -6 до 6

13 Воспроизведение MP3 / пауза / громкость MP3

1. Громкость MP3: Нажмите и удерживайте данную кнопку в течение 5 секунд, когда воспроизводите песни с флешки, а затем нажмите кнопку **function**, чтобы отрегулировать громкость.
2. MP3 play pause – этой кнопкой запускается и останавливается воспроизведение MP3.
3. MP3 Play/pause: Нажмите **[Function+]** и **[Function-]** одновременно.

14 Двойной тон

Данная кнопка включает / отключает функцию секвенсора. Нажмите эту кнопку, чтобы активировать данную функцию, будут звучать основной тон и откроется выбор субтонов.

15 Двойная клавиатура

Данная кнопка включает / отключает функцию секвенсора.

Нажмите эту кнопку, чтобы открыть, гамма A1-B4 будет звучать как гамма E3-B5, а гамма C5A1-B4C9 будет звучать как гамма C4-C8.

Номер может быть использован для выбора основного тона, чтобы заменить клавиши C5-C9 изначального тона.

16 Ввод барабанов с клавиатуры

Нажмите данную кнопку, чтобы перевести клавиатуру в режим барабанов (каждой клавише соответствует барабан).

17 Сила нажатия

Данная кнопка включает / отключает функцию секвенсора.

При активированной функции чувствительности к силе нажатия, громкость инструмента зависит от силы нажатия. По умолчанию клавиатура чувствительна к силе нажатия, если вам нужно отключить данную функцию, нажмите **[strength]**.



Внешний вид: стандартный

Отделка: Белая (черная) краска; белый (черный) ПВХ под дерево.

Конструктивные особенности: деревянная конструкция корпуса ,
контрольная панель, клавиатура.

Клавиатура: Корейская технология рояльной клавиатуры
на 88 клавиш, взвешенная молоточковая клавиатура,
чувствительная к силе нажатия.

Источник аудио сигнала: Интеграция последней европейской
технологии формирования звука DSP, сэмплы топовых итальянских
роялей

Сэмплированные тембры, пятиуровневая динамика, резонанс
обертонов аналогового источника звука;

Демо-песни: 111 классических демо-песен (классическая
фортепианная музыка для демонстрации тембров роялей и песни
для демонстрации ритмических рисунков);

Эффекты: ревербератор, хорус.

1, 2, 3, 4, 5, 6; Метроном: сильный и слабый звук в соответствии
с размером
тикающий звук 1,2,3,4,5,6;

Функция педали: имитация педалей рояля – левая ослабляет звук,
а правая – увеличивает полноту звучания.

Интерфейс: USB-вход, педали, разъем питания, аудио интерфейс;

Номинальная мощность: DC 15V 2000mA;

Мощность динамиков: 15Wx2;

Габариты: 1323x340x725 (мм, длина, ширина, высота); вес: 24 кг;

Комплект поставки: адаптер питания, инструкция по
эксплуатации.



Возможные причины/ решения

Неисправность

Легкий хлопок при включении	Не беспокойтесь, это нормально
Устройство включено, а при нажатии на клавиши звука нет.	Убедитесь, что громкость не уведена на ноль. Также проверьте, не подключены ли наушники, поскольку это автоматически отключает встроенную звуковую систему.
Прочее Качество звука нот и ноты в пределах одного тембра	Качество звука Это нормально, так как сэмплирование могло осуществляться в различных динамических диапазонах.
Какие-то ноты звучат длиннее, какие-то короче В некоторых тембрах звук излишне продлен	Максимальная продолжительность Это также нормальное явление, поскольку у пианино может быть разный тембр.
Тихая громкость	Убедитесь, что громкость не уведена на минимум.
Демо-песни воспроизводятся с искажениями или прерываниями	Возможно, вы слишком долго играли на максимальной громкости, внутренний усилитель перегрелся, и включается защита. Уберите громкость или полностью выключите устройство на какое-то время - функции восстановятся.
При игре звучат два тембра сразу	Возможно, вы просто включили функцию двойной клавиатуры и забыли ее отключить.

Примечание: данное оборудование было протестировано и соответствует соответствующим национальным нормам безопасности и электромагнитной совместимости. Радиосвязь может создавать помехи в работе оборудования или влиять на прием радио- или телевизионных сигналов. Пользователи должны принять одну или несколько из следующих мер для устранения помех:

- Переориентируйте или переместите приемную антенну.

-

Подключите устройства к разъемам разных линий электротока. Проконсультируйтесь с дилером или опытным ТВ или радио специалистом.

Предупреждение пользователю: любые необоснованные изменения или доработки могут повлиять на нормальную работу устройства пользователем.

Производитель: Zhendong Development Zone, Dongshi Town, Jinjiang City, Fujian Province



Перечень тембров

T000	Acoustic Grand Piano	T043	Contrabass	T088	Pad 1 (new age)
T001	Bright Acoustic Piano	T044	Tremolo Strings	T089	Pad 2 (warm)
T002	Electric Grand Piano	T045	Pizzicato Strings	T090	Pad 3 (polysynth)
T003	Honky-tonk Piano	T046	Orchestral Harp	T091	Pad 4 (choir)
T004	Rhodes Piano	T047	Timpani	T092	Pad 5 (bowed)
T005	Chorused Piano	T048	String Ensemble 1	T093	Pad 6 (metallic)
T006	Harpichord	T049	String Ensemble 2	T094	Pad 7 (halo)
T007	Clavichord	T050	Synth Strings 1	T095	Pad 8 (sweep)
T008	Celesta	T051	Synth Strings 2	T096	FX 1 (rain)
T009	Glockenspiel	T052	Choir Aahs	T097	FX 2 (soundtrack)
T010	Music box	T053	Voice Oohs	T098	FX 3 (crystal)
T011	Vibraphone	T054	Synth Voice	T099	FX 4 (atmosphere)
T012	Marimba	T055	Orchestra Hit	T100	FX 5 (brightness)
T013	Xylophone	T056	Trumpet	T101	FX 6 (goblins)
T014	Tubular Bell	T057	Trombone	T102	FX 7 (echoes)
T015	Dulcimer	T058	Tuba	T103	FX 8 (sci-fi)
T016	Drawbar Organ	T059	Muted Trumpet	T104	Sitar
T017	Percussive Organ	T060	French Horn	T105	Banjo
T018	Rock Organ	T061	Brass Section	T106	Shamisen
T019	Church Organ	T062	Synth Brass 1	T107	Koto
T020	Reed Organ	T063	Synth Brass 2	T108	Kalimba
T021	Accordion	T064	Soprano Sax	T109	Bagpipe
T022	Harmonica	T065	Alto Sax	T110	Fiddle
T023	Tango Accordion	T066	Tenor Sax	T111	Shanai
T024	Acoustic Guitar (nylon)	T067	Baritone Sax	T112	Tinkle Bell
T025	Acoustic Guitar (steel)	T068	Oboe	T113	Agogo
T026	Electric Guitar (jazz)	T069	English Horn	T114	Steel Drums
T027	Electric Guitar (clean)	T070	Bassoon	T115	Woodblock
T028	Electric Guitar (muted)	T071	Clarinet	T116	Taiko Drum
T029	Overdriven Guitar	T072	Piccolo	T117	Melodic Tom
T030	Distortion Guitar	T073	Flute	T118	Synth Drum
T031	Guitar Harmonics	T074	Recorder	T119	Reverse Cymbal
T032	Acoustic Bass	T075	Pan Flute	T120	Guitar Fret Noise
T033	Electric Bass(finger)	T076	Bottle Blow	T121	Breath Noise
T034	Electric Bass (pick)	T077	Shakuhachi	T122	Seashore
T035	Fretless Bass	T078	Whistle	T123	Bird Tweet
T036	Slap Bass 1	T079	Ocarina	T124	Telephone Ring
T037	Slap Bass 2	T080	Lead 1 (square)	T125	Helicopter
T038	Synth Bass 1	T081	Lead 2 (sawtooth)	T126	Applause
T039	Synth Bass 2	T082	Lead 3 (calliope lead)	T127	Gunshot
T040	Violin	T083	Lead 4 (chiff lead)	T128	Yong Gin
T041	Viola	T084	Lead 5 (charang)	T129	Zheng
T042	Cello	T085	Lead 6 (voice)	T130	Zhong Ruan
		T086	Lead 7 (fifths)	T131	Pi Pa
		T087	Lead 8 (bass+lead)	T132	Big Souna



Перечень тембров

T133	Souna	T178	Viola Attack 2	T223	Soft Guitar 3
T134	Er Hu	T179	Hard Barsoon 1	T224	Castanets 2
T135	Yue Hu	T180	Mute Barafon 2	T225	Soft Guitar 4
T136	Di Zi	T181	Bodhran	T226	Hard Vibe 2
T137	Bong Di	T182	Kawala 2	T227	Reed Horn
T138	Koto	T183	Didgeridoo 2	T228	Nay 2
T139	Qu Di	T184	Soft Guitar 1	T229	Bari & Tenor
T140	Jungle Bass	T185	Souna	T230	Kawala 3
T141	Koto 2	T186	Twin Bones	T231	Indian Flute 4
T142	Marimba 3	T187	Jazz Organ 2	T232	Didgeridoo 4
T143	Tsugaru	T188	Woodblock 3	T233	Attack Clav. 2
T144	Kawala 1	T189	Soft Santur	T234	Marimba 4
T145	Attack Clav. 1	T190	Koto 3	T235	Bari & Tenor 2
T146	Crystal	T191	Castanets 1	T236	Slow Violin
T147	Bright String	T192	Viola Attack 3	T237	Organ Flute
T148	Clavi 2	T193	Woodblock 4	T238	Jazz Organ 4
T149	Chorus Guitar.	T194	Bright String 2	T239	Electric Vraphone 3
T150	Barafon	T195	Twin Bones 2	T240	Dual Horns 3
T151	Jazz Organ	T196	Tenor Sax 2	T241	Indian Flute 5
T152	Indian Flute	T197	Wind Organ	T242	English Horn 3
T153	Mute Barafon 1	T198	Tron Flute	T243	Dulcimer 2
T154	Dual Horns 1	T199	Bodhran 2	T244	Koto 4
T155	Electrici Giutar (Clean) 2	T200	Tron Flute	T245	Tubular Bells 3
T156	Clavi 3	T201	Jazz Organ 3	T246	Tsugaru 4
T157	Soft Sax 1	T202	Soft Santur 2	T247	Tsugaru 5
T158	Electric Vraphone	T203	Woodblock 5	T248	Mute Barafon 4
T159	Didgeridoo 1	T204	Shamisen 4	T249	Dual Horns 4
T160	Barafon 2	T205	Indian Flute 2	T250	Soft Sax 3
T161	Tubular Bells 2	T206	Electric Vraphone 2	T251	Bodhran 3
T162	Soft Accord	T207	Soft Guitar 2	T252	Guitar Pinch 3
T163	Barafon 3	T208	Mute Barafon 3	T253	Crystal 3
T164	Clavi 4	T209	Dual Horns 2	T254	Grow Guitar
T165	Nay	T210	Xylophone 2	T255	Jazz Organ 5
T166	Oct Harp	T211	Didgeridoo 3	T256	Attack Barafon
T167	Attack Barafon	T212	Wind Organ 2	T257	Xylophone 4
T168	Clavi 5	T213	Church Bells	T258	Soft Santur 3
T169	Kalimba 2	T214	Tsugaru 3	T259	Kawala 4
T170	Tsugaru 2	T215	Nay	T260	Soft Guitar 5
T171	Shamisen 2	T216	Guitar Pinch 2	T261	Nay 3
T172	Woodblock 2	T217	Grow Guitar	T262	Synth Harpsi. 3
T173	Crystal 2	T218	Indian Flute 3	T263	Wind Organ 3
T174	Shamisen 3	T219	Synth Harpsi. 2	T264	Shanai 2
T175	Synth Harpsi. 1	T220	Soft Sax 2	T265	Woodblock 6
T176	Jazz Organ 1	T221	Xylophone 3	T266	Electric Vraphone 4
T177	Viola Attack	T222	English Horn 2	T267	Kawala 5



Перечень тембров

T268	Grow Guitar 2	T313	Twin Bones 4	T358	Chorus Guitar. 2
T269	Grow Guitar 3	T314	Soft Sax 5	T359	Didgeridoo 8
T270	Steel Bell 6	T315	Shamisen 5	T360	Soft Santur 5
T271	Wind Organ 4	T316	Suona 3	T361	Clavi 6
T272	Soft Accord 2	T317	Bodhran 4	T362	Kalimba 6
T273	Kalimba 3	T318	Shamisen 6	T363	Didgeridoo 9
T274	Twin Bones 3	T319	Electric Vraphone 6	T364	Wind Organ 6
T275	Church Bells 2	T320	Tsugaru 7	T365	Tron Flute 3
T276	Koto 5	T321	Oct Harp 3	T366	Soft Sax 6
T277	Attack Barafon 2	T322	Kalimba 4	T367	Suona 4
T278	Mute Barafon 5	T323	Soft Clav. 2	T368	Soft Guitar 7
T279	Nay 4	T324	English Horn 3	T369	Hard Vibe 6
T280	Jungle Bass 2	T325	Didgeridoo 6	T370	Jazz Organ 7
T281	Soft Accord 3	T326	Barafon 4	T371	Grow Guitar 5
T282	Hard Vibe 3	T327	Indian Flute 7	T372	Xylophone 5
T283	Soft Clav.	T328	Organ Flute 2	T373	Bag Pipe 5
T284	Bag Pipe 2	T329	Soft Santur 4	T374	Bag Pipe 6
T285	Oct Harp 2	T330	Mute Barafon 7	T375	Clavi 7
T286	Woodblock 7	T331	Nay 6	T376	Hard Vibe 7
T287	Mute Barafon 6	T332	Hard Vibe 5	T377	Kawala 7
T288	Guitar Pinch 4	T333	Bari & Tenor 4	T378	Shanai 3
T289	Dulcimer 3	T334	Bag Pipe 4	T379	Suona 5
T290	Soft Sax 4	T335	Tenor Sax 3	T380	Jungle Bass 4
T291	Electric Vraphone 5	T336	Organ Flute 3	T381	Grow Guitar 6
T292	Tsugaru 6	T337	Dulcimer 5	T382	Bag Pipe 7
T293	Reed Horn 2	T338	Twin Bones 5	T383	Crystal 4
T294	Castanets 3	T339	Grow Guitar 4	T384	Guitar Pinch 5
T295	Tron Flute 2	T340	Kalimba 5	T385	Woodblock 8
T296	Attack Clav. 3	T341	Oct Harp 4	T386	Soft Sax 7
T297	Bari & Tenor 3	T342	Nay 7	T387	Attack Barafon 4
T298	Indian Flute 6	T343	Dual Horns 5	T388	Barafon 6
T299	Soft Guitar 6	T344	Didgeridoo 7	T389	Organ Flute 4
T300	Nay 5	T345	English Horn 4	T390	Mute Barafon 9
T301	Didgeridoo 5	T346	Kawala 6	T391	Shanai 4
T302	Marimba 5	T347	Marimba 6	T392	Soft Clav. 3
T303	Attack Clav. 4	T348	Barafon 5	T393	Oct Harp 5
T304	Jungle Bass 3	T349	Soft Accord 5	T394	Tron Flute 4
T305	Hard Barsoon 2	T350	Mute Barafon 8	T395	Bright String 3
T306	Suona 2	T351	Dual Horns 6	T396	Jazz Organ 8
T307	Hard Vibe 4	T352	Church Bells 3	T397	Mute Barafon 10
T308	Bag Pipe 3	T353	Wind Organ 5	T398	Slow Violin 2
T309	Soft Accord 4	T354	Attack Clav. 5	T399	Soft Sax 8
T310	Attack Barafon 3	T355	Jazz Organ 6	T400	English Horn 5
T311	Hard Barsoon 3	T356	Reed Horn 3	T401	Reed Horn 4
T312	Dulcimer 4	T357	Tenor Sax 4	T402	Indian Flute 8



Перечень тембров

T403	Castanets 4	T448	Didgeridoo 12	T493	Attack Clav. 7
T404	English Horn 6	T449	Kalimba 8	T494	Reed Organ 2
T405	Tron Flute 5	T450	Electric Guitar (Clean) 3	T495	Viola Attack 4
T406	English Horn 7	T451	Dulcimer 8	T496	Koto 6
T407	Hard Barsoon 4	T452	Reed Horn 5	T497	Tsugaru 8
T408	Dulcimer 6	T453	Bodhran 5	T498	Bag Pipe 10
T409	Xylophone 6	T454	Soft Sax 9	T499	Attack Clav. 8
T410	Mute Barafon 11	T455	Mute Barafon 14	T500	Tron Flute 7
T411	Nay 8	T456	Guitar Pinch 7	T501	Marimba 9
T412	Mute Barafon 12	T457	Wind Organ 7	T502	Bag Pipe 11
T413	Dual Horns 7	T458	Guitar Pinch 8	T503	Hard Barsoon 7
T414	Kawala 8	T459	Indian Flute 9	T504	Mute Barafon 15
T415	Soft Clav. 4	T460	Bag Pipe 9	T505	Soft Sax 12
T416	Hard Barsoon 5	T461	Crystal 6	T506	Attack Clav. 9
T417	Dulcimer 7	T462	Twin Bones 6	T507	Jazz Organ 11
T418	Soft Accord 6	T463	Crystal 7	T508	Soft Guitar 9
T419	Church Bells 4	T464	Soft Guitar 8	T509	Didgeridoo 13
T420	Shamisen 7	T465	Guitar Pinch 9	T510	Bright String 4
T421	Synth Harpsi. 4	T466	Attack Clav. 6	T511	Electric Guitar (Clean) 4
T422	Crystal 5	T467	Bodhran 6	T512	Tsugaru 9
T423	Kawala 9	T468	Suona 6	T513	Nay 9
T424	Dual Horns 8	T469	Chorus Guitar. 3	T514	Reed Horn 6
T425	Clavi 8	T470	Slow Violin 4	T515	Didgeridoo 14
T426	Electric Vraphone 7	T471	Clavi 9	T516	Soft Clav. 5
T427	Castanets 5	T472	Castanets 6	T517	Soft Sax 13
T428	Tenor Sax 5	T473	Slow Violin 5	T518	Reed Organ 3
T429	Tenor Sax 6	T474	Jazz Organ 9	T519	Steel Bell 8
T430	Didgeridoo 10	T475	Jazz Organ 10	T520	Clavi 10
T431	Kalimba 7	T476	Electric Vraphone 8	T521	Wind Organ 8
T432	English Horn 8	T477	Bodhran 7	T522	Synth Harpsi. 6
T433	Guitar Pinch 6	T478	Steel Bell 7	T523	Bari & Tenor 5
T434	Hard Vibe 8	T479	Synth Harpsi. 5	T524	Steel Bell 9
T435	Mute Barafon 13	T480	Marimba 7	T525	Soft Sax 14
T436	Tenor Sax 7	T481	Marimba 8	T526	Castanets 8
T437	Bag Pipe 8	T482	Attack Barafon 6	T527	Didgeridoo 15
T438	Shanai 5	T483	Castanets 7	T528	Soft Sax 15
T439	English Horn 9	T484	Hard Vibe 9	T529	Mute Barafon 16
T440	Didgeridoo 11	T485	Tron Flute 6	T530	Soft Guitar 10
T441	Organ Flute 5	T486	Soft Accord 7	T531	Soft Accord 8
T442	Attack Barafon 5	T487	Shanai 6	T532	Wind Organ 9
T443	Jungle Bass 5	T488	Woodblock 9	T533	Didgeridoo 16
T444	Barafon 7	T489	Soft Sax 10	T534	Electric Guitar (Clean) 5
T445	Soft Santur 6	T490	Slow Violin 6	T535	English Horn 10
T446	Slow Violin 3	T491	Soft Sax 11	T536	Soft Sax 16
T447	Hard Barsoon 6	T492	Chorus Guitar. 4	T537	Soft Guitar 11



Перечень тембров

T538	Hard Barsoon 8	T583	Soft Accord 10	T628	Synth Harpsi. 9
T539	Kalimba 9	T584	Electric Guitar (Clean) 6	T629	Soft Sax 18
T540	Koto 7	T585	Viola Attack 7	T630	Koto 10
T541	Soft Clav. 6	T586	Kawala 11	T631	Kalimba 12
T542	Xylophone 7	T587	Soft Santur 7	T632	Suona 9
T543	Soft Clav. 7	T588	Bright String 5	T633	Oct Harp 6
T544	Church Bells 5	T589	Electric Guitar (Clean) 7	T634	Koto 11
T545	Kawala 10	T590	Attack Barafon 8	T635	Shanai 8
T546	Didgeridoo 17	T591	Electric Vibraphone 9	T636	Electric Guitar (Clean) 8
T547	Kalimba 10	T592	Steel Bell 10	T637	Clavi 12
T548	Castanets 9	T593	Mute Barafon 19	T638	Attack Harp 3
T549	Didgeridoo 18	T594	Chorus Guitar. 7	T639	Attack Clav. 10
T550	Bodhran 8	T595	Soft Clav. 10	T640	Bright String 6
T551	English Horn 11	T596	Viola Attack 8	T641	Organ Flute 7
T552	Hard Vibe 10	T597	Church Bells 7	T642	Electric Guitar (Clean) 9
T553	Bodhran 9	T598	Soft Santur 8	T643	Kawala 12
T554	Indian Flute 10	T599	Wind Organ 10	T644	Bodhran 11
T555	Dulcimer 9	T600	Indian Flute 11	T645	Shanai 9
T556	Soft Clav. 8	T601	Tsugaru 10	T646	Suona 10
T557	Viola Attack 5	T602	Dulcimer 10	T647	Synth Harpsi. 10
T558	Attack Harp 1	T603	Grow Guitar 8	T648	Bari & Tenor 6
T559	Mute Barafon 17	T604	Tubular Bells 6	T649	Kawala 13
T560	Tenor Sax 8	T605	Jungle Bass 8	T650	Bari & Tenor 7
T561	Twin Bones 7	T606	Dulcimer 11	T651	Reed Horn 7
T562	Chorus Guitar. 6	T607	Organ Flute 6	T652	Shamisen 10
T563	Shanai 7	T608	Nay 10	T653	Soft Clav. 11
T564	Kalimba 11	T609	Attack Barafon 9	T654	Bari & Tenor 8
T565	Jungle Bass 6	T610	English Horn 12	T655	Soft Santur 9
T566	Attack Barafon 7	T611	Suona 7	T656	Attack Harp 4
T567	Soft Clav. 9	T612	Reed Organ 5	T657	Bright String 7
T568	Tubular Bells 4	T613	Shamisen 8	T658	Guitar Pinch 11
T569	Reed Organ 4	T614	Koto 9	T659	Wind Organ 11
T570	Guitar Pinch 10	T615	Shamisen 9	T660	Soft Guitar 12
T571	Bodhran 10	T616	Church Bells 8	T661	English Horn 13
T572	Clavi 11	T617	Nay 11	T662	Kawala 14
T573	Viola Attack 6	T618	Hard Barsoon 9	T663	Grow Guitar 10
T574	Synth Harpsi. 7	T619	Slow Violin 7	T664	Attack Harp 5
T575	Jungle Bass 7	T620	Soft Sax 17	T665	Bari & Tenor 9
T576	Koto 8	T621	Grow Guitar 9	T666	Organ Flute 8
T577	Church Bells 6	T622	Attack Harp 2	T667	Woodblock 10
T578	Soft Accord 9	T623	Suona 8	T668	Hard Vibe 11
T579	Tubular Bells 5	T624	Nay 12	T669	Mute Barafon 20
T580	Bag Pipe 12	T625	Synth Harpsi. 8	T670	Tubular Bells 7
T581	Grow Guitar 7	T626	Didgeridoo 19	T671	Suona 11
T582	Mute Barafon 18	T627	Nay 13	T672	Bright String 8



Перечень тембров

T673	Hard Vibe 12	T718	Hard Barsoon 11	T763	Kawala 19
T674	Slow Violin 8	T719	English Horn 14	T764	Reed Horn 9
T675	Shamisen 11	T720	Crystal 8	T765	Attack Harp 7
T676	Tron Flute 8	T721	Bari & Tenor 10	T766	Oct Harp 7
T677	Attack Clav. 11	T722	Koto 13	T767	Kalimba 14
T678	Dual Horns 9	T723	Didgeridoo 20	T768	Twin Bones 9
T679	Wind Organ 12	T724	Tenor Sax 10	T769	Attack Clav. 12
T680	Twin Bones 8	T725	Bright String 12	T770	Bari & Tenor 11
T681	Reed Organ 6	T726	Hard Vibe 14	T771	Attack Harp 8
T682	Organ Flute 9	T727	Dual Horns 10	T772	English Horn 15
T683	Slow Violin 9	T728	Kawala 16	T773	Twin Bones 10
T684	Dulcimer 12	T729	Kawala 17	T774	Soft Clav. 12
T685	Tsugaru 11	T730	Bag Pipe 13	T775	Tubular Bells 10
T686	Wind Organ 13	T731	Electric Guita (Clean) 10	T776	Slow Violin 13
T687	Soft Santur 10	T732	Tron Flute 9	T777	Synth Harpsi. 15
T688	Suona 12	T733	Kawala 18	T778	Guitar Pinch 12
T689	Soft Guitar 13	T734	Tron Flute 10	T779	Church Bells 9
T690	Xylophone 8	T735	Tubular Bells 8	T780	Castanets 10
T691	Dulcimer 13	T736	Synth Harpsi. 13	T781	Twin Bones 11
T692	Marimba 10	T737	Soft Santur 13	T782	Indian Flute 12
T693	Soft Guitar 14	T738	Tubular Bells 9	T783	Woodblock 11
T694	Viola Attack 9	T739	Attack Barafon 10	T784	Attack Harp 9
T695	Hard Vibe 13	T740	Attack Barafon 11	T785	Crystal 10
T696	Koto 12	T741	Electric Vitrphone 10	T786	Mute Barafon 21
T697	Tenor Sax 9	T742	Dual Horns 11	T787	Synth Harpsi. 16
T698	Kawala 15	T743	Shanai 10	T788	Reed Organ 8
T699	Steel Bell 11	T744	Bright String 13	T789	Steel Bell 12
T700	Soft Accord 11	T745	Crystal 9	T790	Chorus Guitar. 8
T701	Organ Flute 10	T746	Clavi 13	T791	Reed Organ 9
T702	Organ Flute 11	T747	Soft Sax 20	T792	Marimba 11
T703	Bright String 9	T748	Tron Flute 11	T793	Electric Vitrphone 11
T704	Soft Santur 11	T749	Dulcimer 14	T794	Soft Guitar 16
T705	Hard Barsoon 10	T750	Slow Violin 11	T795	Viola Attack 10
T706	Wind Organ 14	T751	Tenor Sax 11	T796	Reed Organ 10
T707	Synth Harpsi. 11	T752	Nay 14	T797	Bari & Tenor 12
T708	Soft Sax 19	T753	Soft Guitar 15	T798	Soft Sax 22
T709	Bright String 10	T754	Shanai 11	T799	Jazz Organ 12
T710	Bright String 11	T755	Hard Barsoon 12	T800	Soft Guitar 17
T711	Jungle Bass 9	T756	Synth Harpsi. 14	T801	Xylophone 9
T712	Soft Accord 12	T757	Soft Sax 21	T802	Xylophone 10
T713	Reed Horn 8	T758	Suona 13	T803	Church Bells 10
T714	Slow Violin 10	T759	Kalimba 13	T804	Suona 15
T715	Synth Harpsi. 12	T760	Suona 14	T805	Crystal 11
T716	Attack Harp 6	T761	Slow Violin 12	T806	Chorus Guitar. 9
T717	Soft Santur 12	T762	Reed Organ 7	T807	Crystal 12



Перечень тембров

T808	Hard Barsoon 13	T854	Reed Horn 11
T809	Castanets 11	T855	Steel Bell 15
T810	Kawala 20	T856	Kawala 21
T811	Nay 15	T857	Attack Harp 10
T812	Tubular Bells 11	T858	Oct Harp 11
T813	Hard Barsoon 14	T859	Kalimba 15
T814	Barafon 8	T860	Tubular Bells 13
T815	Marimba 12	T861	Electric Guita (Clean) 11
T816	Soft Sax 23	T862	Jazz Organ 14
T817	Attack Barafon 12	T863	Attack Barafon 14
T818	Electric Vraphone 12	T864	Soft Guitar 20
T819	Wind Organ 15	T865	Soft Accord 13
T820	Attack Barafon 13	T866	Synth Harpsi. 17
T821	Electric Vraphone 13	T867	Bodhran 12
T822	Soft Guitar 18	T868	Woodblock 12
T823	Xylophone 11	T869	Attack Harp 11
T824	Tenor Sax 12	T870	Organ Flute 12
T825	Oct Harp 8	T871	Jazz Organ 15
T826	Shamisen 12	T872	Didgeridoo 21
T827	Reed Horn 10	T873	Church Bells 13
T828	Marimba 13	T874	Synth Harpsi. 18
T829	Reed Organ 11	T875	Chorus Guitar. 11
T830	Attack Clav. 13	T876	Organ Flute 13
T831	Hard Barsoon 15	T877	Shamisen 13
T832	Dual Horns 12	T878	Jungle Bass 10
T833	Soft Clav. 13	T879	Shamisen 14
T834	Church Bells 11	T880	Bright String 14
T835	Oct Harp 9	T881	Hard Barsoon 16
T836	Oct Harp 10	T882	Shanai 12
T837	Indian Flute 13	T883	Soft Accord 14
T838	Viola Attack 11	T884	Oct Harp 12
T839	Clavi 14	T885	Electric Guita (Clean) 12
T840	Koto 14	T886	Synth Harpsi. 19
T841	Soft Guitar 19	T887	Viola Attack 12
T842	Castanets 12	T888	Mute Barafon 22
T843	Jazz Organ 13	T889	Synth Harpsi. 20
T844	Bag Pipe 14	T890	Electric Guita (Clean) 13
T845	Steel Bell 13	T891	Bright String 15
T846	Church Bells 12	T892	Tron Flute 12
T847	Guitar Pinch 13	T893	Reed Organ 12
T848	Soft Clav. 14	T894	Organ Flute 14
T849	Tubular Bells 12	T895	Electric Vraphone 14
T850	Grow Guitar 11	T896	Mute Barafon 23
T851	Steel Bell 14	T897	Jungle Bass 11
T852	Chorus Guitar. 10	T898	Kalimba 16
T853	Crystal 13	T899	Dulcimer 15



Ритмы

R000	AClub Pop	R041	Blue Grass 2	R086	8 Beat Adria
R001	16 Beat Pop	R042	Blue Grass 3	R087	Classic Piano
R002	8 Beat Pop	R043	Pop Waltz	R088	Unplugged
R003	8 Beat Soul	R044	USA March	R089	Pop Ballad
R004	8 Beat Rock	R045	Hully Gully	R090	Pop New Age
R005	Rap Pop	R046	Tarantella	R091	8 Beat Modern
R006	Pop Rock	R047	Limbo Rock	R092	Country Ballad
R007	60' s Soul	R048	Swing Waltz	R093	Love Song
R008	70' s Soul	R049	Pub Piano	R094	Modern Country Pop
R009	Funk	R050	Jazz Waltz 1	R095	Electro Pop
R010	16 Beat Shuffle	R051	Jazz Waltz 2	R096	Acoustic Ballad
R011	Twist	R052	Show Tune	R097	Piano Ballad
R012	British Pop	R053	Polka	R098	R&B Ballad
R013	Hard Rock	R054	Schlager Polka	R099	Rock Ballad
R014	Fusion	R055	Waltz	R100	Slow & Easy
R015	FunkShuffl	R056	Cha Cha	R101	Analog Ballad
R016	FusionShuffl	R057	Rumba	R102	E Ballad
R017	Groovy Pop	R058	Jive	R103	Techno 1
R018	60's Vintage Pop	R059	Pasodoble	R104	Techno 2
R019	80's Pop	R060	Samba 1	R105	Funky Disco
R020	Rock'n Roll 1	R061	Samba 2	R106	Saturday Night
R021	Rock'n Roll 2	R062	Schlager Rock 1	R107	Club Latin
R022	Straight Rock	R063	Schlager Rock 2	R108	Disco Chocolate
R023	Jazz Rock	R064	FoxTrot	R109	Disco Fox
R024	FastGospel	R065	Viennese Waltz	R110	Disco Funk
R025	FolkRock	R066	Tangol	R111	Disco Hands
R026	RockBilly	R067	Tango2	R112	Disco Party
R027	RockBoogie	R068	Bossanova	R113	Disco Samba
R028	RockChaCha	R069	Mambo 1	R114	UK Pop
R029	RockClassical	R070	Mambo 2	R115	Club Dance
R030	RockShuffle	R071	Bolero	R116	Modern R&B
R031	RockPop	R072	Cumbia	R117	Hip Shuffle
R032	60's RockN	R073	Latin Rock	R118	Charleston
R033	Standard Rock	R074	Disco Latin	R119	DiscoPop
R034	Brit Rock Pop	R075	Tijuana	R120	DiscoSoul
R035	60's Vintage Rock	R076	Reggae	R121	DiscoTrot
R036	Chart Rock Shfl	R077	Salsa	R122	EuroBeat
R037	60's Pop Rock	R078	Calypso	R123	Rap
R038	Ober Polka	R079	GuadDance	R124	Rave
R039	Polka Pop	R080	Reggae12Beat	R125	Big Band Shuffle 1
R040	Blue Grass	R081	Reggae16Beat	R126	Big Band Shuffle 2
		R082	Slow Rock 1	R127	Big Band Shuffle 3
		R083	Slow Rock 2	R128	Fast Band 1
		R084	Slow Rock 3	R129	Fast Band 2
		R085	Slow Soul	R130	Cat Groove



Ритмы

R131	Dixie Jazz	R176	Polka Pop2	R221	Brazilian Samba
R132	Medium Jazz	R177	Blue Grass 4	R222	Brit Pop Swing
R133	Jazz Big Band	R178	Blue Grass 5	R223	60's 8 Beat
R134	Jazz Club	R179	Blue Grass 6	R224	Fast Bossa
R135	Ragtime	R180	Pop Waltz2	R225	60's Guitar Pop
R136	Country 1	R181	USA March2	R226	70's 8 Beat
R137	Country 2	R182	Hully Gully2	R227	90's Guitar Pop
R138	Country Ballad	R183	Tarantella2	R228	Soft Rock
R139	Country Two Step	R184	Limbo Rock2	R229	Chart Guita rPop
R140	70's Disco Funk	R185	Swing Waltz2	R230	Gujiira
R141	Disco Philly1	R186	Pub Piano2	R231	Modern Pop Bld
R142	Disco House1	R187	Jazz Waltz 1	R232	Soul R&B
R143	80's Disco	R188	Jazz Waltz 2	R233	R&B Soul Ballad
R144	Swing Fox2	R189	Show Tune2	R234	Euro Hip Hop
R145	Slow Fox2	R190	Polka2	R235	Trip Hop
R146	Organ Cha Cha2	R191	Ober Polka1	R236	Ibiza 2004
R147	Organ Quick Step2	R192	Party Polka	R237	Mod Big Band Shfl
R148	Cat Groove2	R193	Waltz2	R238	Modern Big Band
R149	Dixie Jazz2	R194	Cha Cha2	R239	Pop Gtr Ballad
R150	Medium Jazz2	R195	Rumba2	R240	Ibiza 2002
R151	Jazz Big Band2	R196	Jive2	R241	Euro Trance
R152	Jazz Club2	R197	Pasodoble2	R242	6-8 Trance
R153	Ragtime2	R198	Samba3	R243	Latin DJ's
R154	Big Band Shuffle 1	R199	Samba4	R244	Bomba
R155	Big Band Shuffle 2	R200	Schlager Rock 3	R245	Chillout Cafe
R156	Big Band Shuffle 3	R201	Schlager Rock 4	R246	70's Glam Piano
R157	Fast Band 2	R202	Fox Trot2	R247	French House
R158	Fast Band 3	R203	Viennese Waltz2	R248	English Waltz
R159	Frankly Soul	R204	Tango3	R249	8 Beat Ballad1
R160	Jazz Funk	R205	Tango4	R250	Club House
R161	Classic Big Band	R206	German Waltz	R251	House
R162	French Jazz1	R207	Carnival	R252	Jazz Gtr Club
R163	Jump Jive	R208	Organ Sambal	R253	Modern Jazz
R164	Country Ballad2	R209	Reel1	R254	Acoustic Jazz
R165	Country Two Step2	R210	Gay Gordons1	R255	Cool Jazz Ballad
R166	Country 1	R211	Scand Waltz	R256	Modern Jazz Bld
R167	Country 2	R212	Pop Classics	R257	Easy Listening
R168	Finger Pickin1	R213	Live 8 Beat	R258	Bebop
R169	Country Brothers1	R214	Power Rock	R259	Orch Big Band1
R170	New Country	R215	Acoustic Rock	R260	Big Band Fast1
R171	Easy Country1	R216	Cool 8 Beat	R261	Orchestra Swing1
R172	70's Chart Cntry1	R217	Uptempo 8Beat	R262	Orchestra Swing2
R173	Hoedown	R218	90's Rock Ballad	R263	Rock Cha Cha2
R174	Country Shuffle	R219	Chart Rock Shfl	R264	Organ Swing
R175	Schlager Polka2	R220	Brit Pop	R265	Secret Service



Ритмы

R266	Animation Bld	R311	Big Band Fast2	R356	New R&B
R267	Christmas Waltz	R312	Midnight Swing	R357	Pop R&B
R268	Movie Swing	R313	70's Chart Cntry	R358	Chart R&B
R269	Movie Ballad	R314	Jazz Waltz Med	R359	Modern Shuffle
R270	Bubblegum Pop	R315	Mariachi Waltz	R360	Blues Rock
R271	Rock Shuffle	R316	US March	R361	Dream Dance
R272	West Coast Pop	R317	Guitar Rumba	R362	US Chart Hit
R273	Classic 16 Beat	R318	Slow Blues	R363	German Rock
R274	Jazz Pop	R319	Jazz Waltz Fast	R364	Schlager Beat
R275	Jazz Shuffle	R320	70's Country Pop	R365	Mellow Hip Hop
R276	8 Beat Ballad2	R321	Dixieland	R366	Classic Hip Hop
R277	Chillout	R322	40's Big Band	R367	New Hip Hop
R278	16 Beat Ballad1	R323	Easy Country2	R368	Duranguense
R279	Epic Ballad	R324	Country Hits	R369	Laff
R280	Easy Ballad	R325	Country 8 Beat	R370	Ober Walzer
R281	Cuban Son	R326	Sci-fi March	R371	Bhangra
R282	Bachata	R327	Tap Dance Swing	R372	Zouk
R283	Forro	R328	Orchestral Bolero	R373	German March
R284	J-Pop Hit	R329	Gospel Sisters	R374	Enka
R285	16 Beat Ballad2	R330	Italian Waltz	R375	Bolero Lento
R286	70's Pop Ballad	R331	6-8 March	R376	Sherif fReggae
R287	EP Ballad	R332	Bluegrass	R377	Beguine
R288	Power Ballad	R333	Mod Cntry Bld1	R378	Latin Disco
R289	Guitar Ballad	R334	Scand Country1	R379	Tango5
R290	New R&B Ballad	R335	Scand Country2	R380	Tango6
R291	Guitar Serenade	R336	Scand Shuffle	R381	Rock &Roll
R292	Organ Ballad	R337	Worship Slow	R382	Rock & Roll Shf1
R293	Joropo	R338	Disco Teens	R383	Oldies R & R
R294	Reggaeton	R339	Scand Bugg	R384	Detroit Pop1
R295	French Waltz	R340	Schlager Sambal	R385	Detroit Pop2
R296	Merengue	R341	Schlager Samba2	R386	Worship Med
R297	12-8 Ballad	R342	Scand Slow Rock	R387	Worship Fast
R298	Norteno	R343	Schlager 6-8	R388	Piano Boogie
R299	Jig	R344	Schlager Fox	R389	Lovely Shuffle
R300	Hawaiian	R345	Highland Waltz	R390	60's Rock & Roll
R301	Electronica	R346	Italian Polka	R391	Kool Funk
R302	Funky House	R347	Grupera	R392	Blueberry Blues
R303	Club Beat	R348	Danzon	R393	Shuffle Blues
R304	Retro Club	R349	Schlager Alp	R394	Mambo 3
R305	Mod Chart Pop	R350	Saeidy	R395	Mambo 4
R306	MOR Swing	R351	Bhajan	R396	Soul
R307	Retro Pop	R352	Hip Hop Groove	R397	Skiffle
R308	Rumba Flamenco	R353	Chart Pop1	R398	6-8Soul
R309	Trance Pop	R354	Organ Groove	R399	Soul Brothers
R310	Orch Big Band2	R355	Chart Pop2	R400	Happy Reggae



Ритмы

R401	Pop Latin	R446	Love Song2	R491	Guitar Serenade2
R402	6-8Slow Rock	R447	French House2	R492	Organ Ballad2
R403	6-8 Modern	R448	Jazz Waltz3	R493	Joropo2
R404	6-8 Orchestral	R449	Classic Piano2	R494	Reggaeton2
R405	Schlager Shuffle	R450	Disco Party2	R495	French Waltz2
R406	Schlager Pop	R451	Club Dance2	R496	Merengue2
R407	Schlager Rumba	R452	Jazz Gtr Club2	R497	Pop Ballad2
R408	Euro Pop Organ	R453	Modern Jazz2	R498	Norteno2
R409	70' s French Hit	R454	Polka Pop3	R499	Jig2
R410	Italian Mazurka	R455	USA March3	R500	Hawaiian2
R411	Bohemian Waltz	R456	Ober Polka2	R501	70' s Disco3
R412	Club Pop3	R457	Easy Listening2	R502	70' s Disco4
R413	Schlager Italia2	R458	Fast Band4	R503	Club Beat2
R414	Power Rock2	R459	Fast Band5	R504	Rap2
R415	Rock'n Roll 3	R460	Big Band Fast3	R505	Disco House2
R416	Cool8 Beat2	R461	Orchestra Swing3	R506	MOR Swing2
R417	British Pop3	R462	Orchestra Swing4	R507	Retro Pop2
R418	British Pop4	R463	Rock Cha Cha4	R508	Calypto2
R419	8 Beat Soul3	R464	Schlager Rock5	R509	Trance Pop2
R420	Brit Pop2	R465	Organ Samba2	R510	Big Band Shuffle4
R421	Disco Latin2	R466	Gay Gordons2	R511	Big Band Shuffle5
R422	Brit Pop Swing2	R467	Swing Waltz3	R512	Big Band Shuffle6
R423	Fast Gospel2	R468	Reel2	R513	Finger Pickin2
R424	Fast Bossa2	R469	Movie Ballad2	R514	Hully Gully3
R425	60' s Guitar Pop2	R470	Cool Pop2	R515	Viennese Waltz3
R426	90' s Soul	R471	Rock Shuffle2	R516	Show Tune3
R427	Funk Shuffl 3	R472	Hard Rock3	R517	Rumba3
R428	8 Beat Rock3	R473	Hard Rock4	R518	Schlager Rock4
R429	Rock Cha Cha3	R474	Club Pop4	R519	Jazz Waltz Fast2
R430	Guajira2	R475	8 Beat Pop3	R520	Country Ballad3
R431	Rock Ballad2	R476	8 Beat Pop4	R521	Dixieland2
R432	Alp Ballad3	R477	60' s RockN2	R522	French Jazz2
R433	8 Beat Modern2	R478	16 Beat Ballad3	R523	Easy Country3
R434	Euro Hip Hop2	R479	Straight Rock2	R524	Country Hits2
R435	Disco Pop2	R480	Easy Ballad2	R525	Country 8 Beat2
R436	Disco Philly2	R481	Pop Mambo2	R526	Blue Grass7
R437	Mod Big BandShf12	R482	Bossanova2	R527	Blue Grass8
R438	Modern Big Band2	R483	Forro2	R528	Blue Grass9
R439	8 Beat Adria2	R484	Standard Rock2	R529	Gospel Sisters2
R440	Disco Chocolate2	R485	16 Beat Ballad3	R530	Italian Waltz2
R441	Euro Trance2	R486	Contemp Rock2	R531	Limbo Rock3
R442	Euro Beat2	R487	EP Ballad2	R532	Bluegrass2
R443	Techno3	R488	Fusion3	R533	Country Brothers2
R444	Reggae2	R489	Fusion4	R534	Scand Country3
R445	Chillout Cafe2	R490	Funk2	R535	Scand Country4



Ритмы

R536	Scand Shuffle2	R581	Parranda2	R626	Country 6
R537	70's Chart Cntry2	R582	Latin Rock2	R627	Country 7
R538	Pub Piano3	R583	Acoustic Rock2	R628	Jive2
R539	Polka3	R584	80's Pop2	R629	Jazz Rock2
R540	Samba5	R585	60's Soul2	R630	Folk Rock2
R541	Samba6	R586	Fusion Shuffl3	R631	Funk Pop Rock
R542	Jive3	R587	Fusion Shuffl4	R632	Acoustic Rock
R543	Fox Trot3	R588	16 Beat Pop3	R633	50's Pop2
R544	Pasodoble3	R589	16 Beat Pop4	R634	80's Pop2
R545	Highland Waltz2	R590	60's Rock & Roll2	R635	Pop Rock 3
R546	Schlager Polka3	R591	Brit Rock Pop2	R636	British Pop1
R547	Grupera2	R592	Blueberry Blues2	R637	British Pop2
R548	Danzon2	R593	Skiffle2	R638	Hard Rock1
R549	Schlager Alp2	R594	Mambo5	R639	Hard Rock2
R550	Tango7	R595	Mambo6	R640	Fusion2
R551	Tango8	R596	Soul2	R641	Fusion3
R552	Hip Hop Groove2	R597	Classic 8Beat2	R642	Funk Shuffl 1
R553	Hip Shuffle2	R598	Bolero2	R643	Funk Shuffl 2
R554	Organ Groove2	R599	Soul Brothers2	R644	Fusion Shuffl 1
R555	Chart Pop3	R600	Happy Reggae2	R645	8Beat 1
R556	Country Ballad2	R601	Pop Latin2	R646	8Beat 2
R557	Romantic Ballad2	R602	6-8Slow Rock2	R647	8Beat 3
R558	Analog Ballad2	R603	6-8 Modern2	R648	8Beat 4
R559	Electro Pop2	R604	6-8 Orchestral2	R649	8Beat 5
R560	Blues Rock2	R605	Slow Soul2	R650	8Beat 6
R561	Rave2	R606	Piano Ballad2	R651	8Beat 7
R562	US Chart Hit2	R607	Disco Trot2	R652	8Beat 8
R563	German Rock2	R608	Disco Hands2	R653	8Beat 9
R564	Schlager Beat2	R609	UK Pop2	R654	8Beat 10
R565	Disco Funk2	R610	Italian Mazurka2	R655	8Beat 11
R566	Disco Samba2	R611	Bohemian Waltz2	R656	8Beat 12
R567	New Hip Hop2	R612	70's Chart Ballad	R657	8Beat 13
R568	Cat Groove3	R613	Romantic Ballad	R658	8Beat 14
R569	Laff2	R614	90's Cool Ballad	R659	8Beat 15
R570	Pop Waltz3	R615	Alp Ballad1	R660	8Beat 16
R571	Bhangra2	R616	Alp Ballad2	R661	8Beat 17
R572	Twist2	R617	Tango9	R662	8Beat 18
R573	German March2	R618	Tango10	R663	16Beat 1
R574	Enka2	R619	Acoustic Ballad 2	R664	16Beat 2
R575	Bolero Lento2	R620	Piano Ballad 1	R665	16Beat 3
R576	Midnight Swing2	R621	Slow Rock 5	R666	16Beat 4
R577	French Jazz3	R622	Slow Rock 6	R667	16Beat 5
R578	Latin Party Pop2	R623	Slow Rock 7	R668	16Beat 6
R579	Saedy2	R624	80's EP Ballad	R669	16Beat 7
R580	Bhajan2	R625	80's Boy Band	R670	16Beat 8



Ритмы

Демонстрация

R671	Pop 1
R672	Pop 2
R673	Pop 3
R674	Pop 4
R675	Pop 5
R676	Pop 6
R677	Pop 7
R678	Pop 8
R679	Pop 9
R680	Pop 10
R681	Pop 11
R682	Pop 12
R683	Pop 13
R684	Pop 14
R685	Pop Bolero
R686	Pop Dance
R687	Motown
R688	British Pop 1
R689	British Pop 2
R690	British Pop 3
R691	Guitar Pop
R692	Slow Pop
R693	Groove 1
R694	Groove 2
R695	Groove 3
R696	Groove 4
R697	Groove 5
R698	Groove 6
R699	Groove 7

S074	On affordable
S075	You set off to the chapeau
S076	The Qinghai-Tibet Plateau
S077	Same Song
S078	Hill Road Bending 18
S079	Farewell
S080	Happy home
S081	Place peach bloom
S082	New Century
S083	Gave me a Red Rose
S084	Kangding Love Song
S085	Dansolde
S086	Beijing Tune
S087	Yi Jian Mei
S088	Rumanxilou
S089	Goodbye Dabieshan
S090	Happy Chinese New Year
S091	Dreams Of Riverboat
S092	The Penghu bending Grandmother
S093	Heart-Throb
S094	Wish You Peaceful
S095	Impulse punishment
S096	Shepherd Front
S097	Spring Festival Overture
S098	One can hope that long
S099	The bending moon
S100	Sweet Honey
S101	Liang Zhu
S102	Platforms
S103	Welcome march
S104	mei fei se wu
S105	Efforts will win
S106	Dance Song
S107	Xinjiang Dance
S108	The sunset Drunk
S109	Prairie paeon
S040	Sighing
S041	Restlessness
S042	La Donna E Mobile
S043	Fur Elise
S044	Chanson Du Toreador
S045	Hungarin Dances No.5
S046	Nocture
S047	Red River Valley
S048	Danny Boy
S049	Picnic
S050	My Bonnie

S051	Home On The Range
S052	She Wore A Yellow Ribbon
S053	Cow Boy
S054	Twinkle Twinkle Little Star
S055	Jockey Club
S056	Yang On A Horse To Transport Grain
S057	Stepping Higher And Higher
S058	IS Taihu Lake
S059	Osmanthus everywhere open in August
S060	Central government
S061	Tathagata
S062	Aobaoshan
S063	Yangning Chunxiao
S064	Jasmine
S065	Jaunty
S066	Good Day
S067	Childhood
S068	Zi Zhufiao
S069	Auspicious TREBLE
S070	Trials of a long journey always intelligence
S071	In that faraway place
S072	Prairie Song
S073	Look at home
S020	American Beauty Rag
S021	Crazy Arms
S022	Before the Next TearDrop Falls
S023	Waltz Op64 No.1 By Chopin
S024	Piano Sonata
S025	The Beautiful Blue Danube
S026	The Crave
S027	Tea For Two
S028	Sleigh Ride
S029	Rudolph The Red Nosed Reindeer
S030	Santa Claus Is Coming To Town
S031	Traumerei
S032	Clock
S033	Humoresque
S034	Frohlicher Landmann
S035	Canon
S036	Waltz
S037	Greensleeves
S038	Polka
S039	Arabesque