

# **ARAMIUS**

## **АРО-160**

### **Цифровое пианино**

### **Инструкция пользователя**



Благодарим Вас за выбор этого цифрового пианино. Это цифровое пианино элегантно и изысканно. Оно представляет собой идеальное сочетание ощущения игры и качества звука традиционного фортепиано и новейших современных электронных технологий.

- ◆ Перед использованием инструмента обязательно внимательно прочитайте данную инструкцию.

Специальное напоминание: это устройство является электронным, поэтому после его включения в двух динамиках или в одном из них, а также в наушниках может быть слышен некоторый звуковой тон; это нормальное явление. Располагайте его вдали от радиочастотных приборов и устройств с двигателями, таких как радиоприемники, маршрутизаторы, ТВ-приемники, холодильники и стиральные машины.

## Использование чипа синтезатора dream пятого поколения


В его основе лежит новейшая французская технология цифрового сэмплирования, придающая реалистичность вашему исполнению.

## 88 последовательно расположенных молоточковых клавиш

88 последовательно расположенных молоточковых клавиш создают аутентичное чувство игры на большом фортепиано.

## Гнездо для наушников

Внешнее гнездо для наушников позволяет играть на инструменте, не мешая другим людям.

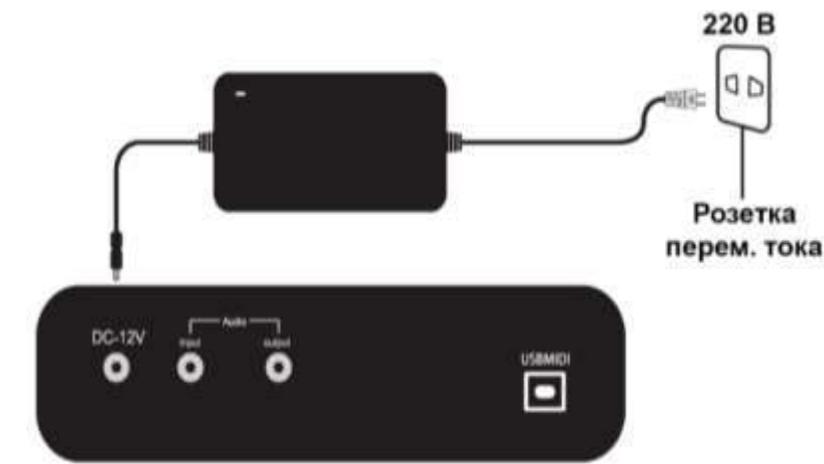

## Меры безопасности

Обязательно прочитайте инструкцию прежде, чем начать пользоваться инструментом. Пожалуйста, сохраните эту инструкцию в надежном месте для дальнейшего использования.

### 1. Осторожно!

Во избежание серьезных травм или даже смерти из-за поражения электрическим током, короткого замыкания, ранений, пожара или других опасностей обязательно соблюдайте указанные ниже предупреждения. Эти предупреждения включают, помимо прочего, следующее.

### 2. Электрическое напряжение/Провода

1. Можно использовать только электрическую сеть с номинальным напряжением, указанным в данном устройстве.  
Требуемое напряжение указано на заводской табличке, имеющейся на устройстве.
2. Регулярно проверяйте электрическую вилку и удаляйте с нее налипшую грязь и пыль.
3. Можно использовать только шнур питания/вилку, входящие в комплект поставки.
4. Не размещайте шнур питания рядом с источником тепла, например обогревателем или радиатором.  
Не сгибайте шнур питания слишком сильно и избегайте его повреждения.
5. Не ставьте на шнур питания тяжелые предметы, не размещайте его в местах, где о него можно споткнуться.
6. Не открывайте данное устройство самостоятельно.  
В случае повреждения устройства немедленно прекратите его использование и обратитесь к квалифицированным специалистам для технического обслуживания.

### 3. Предупреждение относительно влаги

1. Не допускайте попадания на инструмент капель дождя, не используйте его вблизи воды и во влажной среде, а также не ставьте на него емкости с жидкостью. В противном случае брызги могут попасть через отверстия внутрь. Если в инструмент попадет какая-либо жидкость, например вода, немедленно отключите его питание и отсоедините шнур питания от розетки переменного тока. Затем обратитесь за помощью к профессиональному обслуживающему персоналу для проведения технического обслуживания инструмента.
2. Не подключайте шнур питания мокрыми руками.

### 4. Пожарная безопасность

1. Не ставьте горящие предметы, например свечи, на музыкальные инструменты. Горящий предмет может упасть и вызвать пожар.
2. При возникновении любой нештатной ситуации, повреждении шнура питания, внезапном прерывании звука или появлении ненормального запаха или дыма во время использования инструмента немедленно выключите питание устройства и вытащите вилку шнура питания из розетки. Затем обратитесь за помощью к профессиональному обслуживающему персоналу для проведения технического обслуживания инструмента.

### 5. Внимание!

Во избежание травм, повреждения оборудования, а также вашего или чужого имущества обязательно соблюдайте следующие основные меры предосторожности. Эти предупреждения включают, помимо прочего, следующее.

1. **Электрическое напряжение/Провода**  
Отсоединяя вилку шнура питания от устройства или розетки, обязательно беритесь за вилку, а не за шнур питания. Если тянуть непосредственно за шнур питания, это может привести к его повреждению.
2. Если инструмент не используется в течение длительного времени или во время грозы, вынимайте вилку из розетки.
3. Не используйте для подключения инструмента удлинитель с несколькими розетками для одновременного подключения других устройств. Это может ухудшить качество звука или привести к перегреву электрической розетки.

Благодарим вас за покупку цифрового пианино! Независимо от того, являетесь ли вы студентом, любителем игры на фортепиано или профессионалом, этот инструмент поразит вас идеальным качеством звука и модным дизайном. Он может использоваться для обучения игре на фортепиано, позволяет слушать звук, создавать MIDI и безусловно сможет удовлетворять ваши потребности в развлечениях.

Кроме того, цифровое пианино оснащено высококачественной молоточковой клавиатурой с пошаговой регулировкой усилия нажатия (клавиатура стандартной жесткости), позволяющей выражать свои чувства, облекая их в соответствующую форму и создавая ваш собственный стиль.


Для лучшего понимания работы вашего нового цифрового пианино мы рекомендуем вам внимательно прочитать данную инструкцию, чтобы в полной мере использовать его широкие возможности и удобные функции.

Мы также рекомендуем вам хранить инструкцию в доступном месте для дальнейшего использования.

Если вам понравилось наше цифровое пианино, порекомендуйте его своим друзьям!

#### 1 Volume/Select

Громкость при включении/выбор громкости звука (Volume/Select) электрического пианино. Функция регулировки громкости используется по умолчанию.

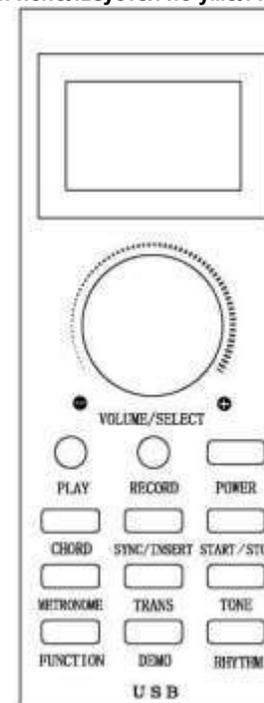

#### 2 Power

Кнопка питания (Power) служит для включения электрического пианино. Когда пианино подключено к электрической сети, нажмите и удерживайте кнопку питания для его включения. Чтобы выключить пианино, нажмите кнопку питания.

#### 3 Record

Нажмите кнопку записи (Record), чтобы войти в режим записи; электрическое пианино может создавать звук ритма для начала записи.

#### 4 Playback

После завершения записи нажмите кнопку записи (Record), чтобы выключить звук ритма электрического пианино. Нажмите кнопку воспроизведения (Playback), и электрическое пианино воспроизведет записанную мелодию.

**5 Start/Stop**

Клавиша старт/стоп (Start/Stop) служит для запуска/прекращения работы электрического пианино после его вхождения в рабочий режим.

**6 Sync/Insert**

При использовании функции синхронизации/вставки (Sync/Insert) сначала необходимо запустить режим ритма (Rhythm). После этого нажмите кнопку синхронизации/вставки (Sync/Insert), чтобы автоматически вставить мелодию.

**7 Chord**

При подключении функции аккордов (Chord) в электрическом пианино необходимо запустить режим ритма (Rhythm). После этого нажмите клавишу аккордов (Chord), чтобы включить режим аккордов.

Нажмите на клавиатуре черные и белые клавиши аккордов, и электрическое пианино будет создавать звук с ритмом аккордов.

**8 Metronome**

Нажмите кнопку метронома, чтобы войти в функцию метронома (Metronome), и электрическое пианино будет создавать звук ритма. Нажмите кнопку метронома (Metronome), чтобы выбрать ритм метронома. Для выключения функции метронома нажмите кнопку метронома еще раз.

**9 Transpose**

Нажмите клавишу транспонирования (Transpose) электрического пианино, чтобы войти в режим функции транспонирования (переноса). Нажмите поворотный регулятор в течение 5 секунд для подтверждения, а затем поверните его, чтобы выбрать клавишу для транспонирования (от -12 до +12).

**10 Tone**

Нажмите кнопку тона (Tone), чтобы войти в режим регулировки тембра. Нажмите поворотный регулятор в течение 5 секунд для подтверждения, а затем поверните его, чтобы выбрать соответствующий тон.

**11 Rhythm**

Нажмите кнопку ритма (Rhythm), чтобы войти в режим регулировки ритма. Нажмите поворотный регулятор в течение 5 секунд для подтверждения, а затем поверните его, чтобы выбрать соответствующий ритм.

**12 Demo**

Нажмите кнопку демонстрационного режима (Demo), чтобы войти в демонстрационный режим воспроизведения, поверните поворотный регулятор, чтобы выбрать демонстрационную дорожку. Нажмите кнопку демонстрационного режима, чтобы воспроизвести или остановить воспроизведение демонстрационной дорожки.

**13 Functions**

Нажмите клавишу функций (Function) электрического пианино, чтобы войти в режим настройки функций. После нажатия клавиши функций на дисплее отобразится соответствующая функция, а затем в течение 5 секунд поверните регулятор, чтобы выбрать режим включения или выключения функции отображения.

Исполнение: Стандартное вертикальное  
 Отделка: Окрашенная белая (черная) поверхность; белый (черный) ПВХ с текстурой дерева. Конструктивные особенности: основной блок и опора представляют собой деревянную конструкцию, включающую боковую панель управления с клавишами и складную раму.

Клавиши: Корейская технология GrandPiano с 88 клавишами. Металлический кронштейн обеспечивает плавную регулировку силы удара по клавишам.

Источник звука: Новейшая европейская технология спектрального синтеза. Высококачественный звуковой процессор. Для создания тембра фортепиано используются сэмплы тембра знаменитого итальянского рояля, пятислойная динамика, сфера аналогового источника звука с резонансом струнных обертонов.

Демонстрационные мелодии: 111 классических демонстрационных мелодий (демонстрационная ритмичная классическая фортепианная музыка).

1, 2, 3, 4, 5, 6: Метроном (Metronome) воспроизводит ритм с тикающим звуком и сильной долей: 1, 2, 3, 4, 5, 6.

Функция педалей: Имитация традиционных функций педалей рояля. Можно получать эффекты Soft, Sostenuto и Sustain.

Интерфейс: разъемы USB, педали и питания  
 Номинальное питание: 15 В пост. тока, 2000 мА  
 Мощность акустической системы: 35 Вт x 2  
 Габариты: 1360/430/900 мм (длина x ширина x высота)  
 Масса: 54 кг  
 Аксессуары: адаптер питания, инструкция пользователя

**Неисправность**

**Возможные причины / Устранение**

При включении питания раздается звук, напоминающий хлопок.

Это нормально. Пожалуйста, не волнуйтесь.

Когда питание включено, при нажатии на клавиши звука не слышно.	Убедитесь, что основная кнопка управления тембром (Tone) установлена в правильное положение. Проверьте, что к разъему для наушников не подключены другие устройства. В случае их подключения встроенная акустическая система автоматически отключается.
Различное качество звучания нот одного тембра.	Различное качество звучания. Это нормальное явление, что связано с разным диапазоном сэмплирования для формирования тембра.
Неодинаковая длительность звука. При некоторой тембровой окраске звук может растягиваться.	Разная максимальная длительность. Это нормальное явление при установке разного тембра звучания фортепиано.
Низкая громкость	Убедитесь, что основной регулятор громкости установлен в правильное положение.
Демонстрационная музыка воспроизводится с искажениями или прерываниями.	Причиной может быть то, что время воспроизведения на высокой мощности слишком велико. Это приводит к перегреву усилителя мощности и срабатыванию внутренней системы защиты от перегрузки. Убавьте громкость или отключите питание на некоторое время, чтобы восстановилась нормальная работа инструмента.
При игре одновременно возникают два тембра.	Причиной является то, что во время игры вы включаете и выключаете функцию двойного тембра.

**Предупреждение для пользователя:** Любые необоснованные изменения или модификации устройства пользователем могут повлиять на нормальную работу данного устройства.

## Список мелодий

001	MinutWlz	045	Polka	089	Beyer 99
002	DJ Dance	046	SoilPull	090	Beyer 26
003	Fountain	047	Trout	091	Beyer 27
004	SpanGirl	048	Send-off	092	Beyer 28
005	SonataPn	049	March	093	Beyer 29
006	SuperSng	050	ForElise	094	Beyer 31
007	LittlBee	051	SwaniRiv	095	Beyer 106
008	HorseRac	052	France	096	Beyer 48
009	Nocturne	053	Danube	097	Beyer 52
010	TheSpain	054	Hungary	098	Beyer 107
011	BusyTran	055	Spaceman	099	Beyer 18
012	Mexico	056	Patriot	100	Beyer 21
013	MozartPn	057	Cuckoo	101	Beyer 23
014	Minuet	058	SingKite	102	Beyer 25
015	Nifuma	059	TongChil	103	Beyer 36
016	Disco	060	DoReMi	104	Beyer 84
017	FolkSong	061	We Happy	105	Beyer 88
018	Girl Sea	062	LittlBee	106	Beyer 32
019	LittStar	063	Russia	107	Beyer 35
020	KindeGtn	064	Plaster	108	Beyer 11
021	Wahaha	065	Foison	109	Beyer 16
022	Duck&Cik	066	JingleBe	110	Beyer 18
023	Humorous	067	PaperBoy		
024	Joy Song	068	Swallow		
025	GoingHom	069	New Year		
026	Dove	070	Edelweis		
027	Auldlang	071	MoonRivr		
028	Moonligh	072	Beyer 10		
029	HapyBirh	073	Beyer 20		
030	PraiseSng	074	Beyer 30		
031	Dolly	075	Beyer 40		
032	Market	076	Beyer 50		
033	Family	077	Beyer 60		
034	A cradle	078	Beyer 70		
035	At Home	079	Beyer 71		
036	Seasons	080	Beyer 72		
037	YearsAgo	081	Beyer 75		
038	Pigeons	082	Beyer 76		
039	InnerVic	083	Beyer 77		
040	Violin	084	Beyer 78		
041	Swan	085	Beyer 79		
042	Musettes	086	Beyer 80		
043	GypsyRnd	087	Beyer 90		
044	Serenade	088	Beyer 98		

## Список ритмов

001	8 Beat 1A	045	Hard RockA	089	Samba A
002	8 Beat 2A	046	Rock & Roll 1A	090	Polka A
003	8 Beat 3A	047	Rock & Roll 2A	091	Polka Ober A
004	8 Beat 4A	048	Chicago BluesA	092	Tarantella A
005	8 Beat HeatA	049	Fast GospelA	093	Slow Waltz A
006	8 Beat Pop 1A	050	Groove SouIA	094	Ober Waltz A
007	8 Beat Pop 2A	051	RapA	095	Piano Ballad A
008	Ballad 1A	052	GospelSI A	096	Waltz 2 A
009	Ballad 2A	053	Blues A	097	Guitar Waltz A
010	Guitar Ballad A	054	Slow Blues A	098	2/4 Piano A
011	Organ Ballad A	055	Foxtrot A	099	3/4 Piano A
012	Bluse Ballad A	056	Disco Tropic A	100	4/4 Piano A
013	Epic Ballad A	057	Disco Hands A	101	8 Beat 1B
014	Rock Ballad A	058	Two Step A	102	8 Beat 2B
015	Slow Ballad A	059	Polk Pop A	103	8 Beat 3B
016	Pop Ballad A	060	Waltz 1A	104	8 Beat 4B
017	Electro Pop Ballad	061	Waltz Pop 1A	105	8 Beat Heat B
018	Polk Ballad A	062	Waltz Pop 2A	106	8 Beat Pop 1B
019	16 Beat 1A	063	Rai A	107	8 Beat Pop 2B
020	16 Beat 2A	064	Twist 1A	108	Ballad 1B
021	16 Beat 3A	065	Twist 2A	109	Ballad 2B
022	16 Beat 4A	066	Miami Pop A	110	Guitar Ballad B
023	16 Beat Funk A	067	Motown A	111	Organ Ballad B
024	16 Beat Pop A	068	Reggae A	112	Bluse Ballad B
025	16 Beat Ballad A	069	Swing Reggae A	113	Epic Ballad B
026	Bossa Nova 1A	070	Mambo A	114	Rock Ballad B
027	Guitar Bossa A	071	Beguine A	115	Slow Ballad B
028	Pop Bossa A	072	Musette A	116	Pop Ballad B
029	Tango A	073	House A	117	Electro Pop Ballad
030	Cha Cha A	074	Slow Fox A	118	Polk Ballad B
031	Rhumba A	075	Vienna Waltz A	119	16 Beat 1B
032	TEX TEX A	076	Salsa A	120	16 Beat 2B
033	Country A	077	Disco A	121	16 Beat 3B
034	Country Rock A	078	Hip Hop Pop A	122	16 Beat 4B
035	Country Shuffle A	079	Analog Pop A	123	16 Beat Funk B
036	Country Swing A	080	Club Dance A	124	16 Beat Pop B
037	Country Ballad A	081	Boogie A	125	16 Beat Ballad B
038	Country Waltz A	082	Funky Pop A	126	Bossa Nova 1B
039	50's Rock A	083	Jazz Rock A	127	Guitar Bossa B
040	Heavy Metal A	084	Swing 1 A	128	Pop Bossa B
041	Rock 1A	085	Dixieland A	129	Tango B
042	Rock 2A	086	Jazz Samba A	130	Cha Cha B
043	Soft RockA	087	March A	131	Rhumba B
044	Slow RockA	088	US. March A	132	TEX TEX B

## Список ритмов

133	Country B	177	Disco B	221	16 Beat 3
134	Country Rock B	178	Hip Hop Pop B	222	16 Beat 4
135	Country Shuffle B	179	Analog Pop B	223	16 Beat Funk
136	Country Swing B	180	Club Dance B	224	16 Beat Pop
137	Country Ballad B	181	Boogie B	225	16 Beat Ballad
138	Country Waltz B	182	Funky Pop B	226	Bossa Nova 1
139	50's Rock B	183	Jazz Rock B	227	Guitar Bossa
140	Heavy Metal B	184	Swing 1B	228	Pop Bossa
141	Rock 1 B	185	Dixieland B	229	Tango
142	Rock 2 B	186	Jazz Samba B	230	Cha Cha
143	Soft Rock B	187	March B	231	Rhumba
144	Slow Rock B	188	US. March B	232	TEX TEX
145	Hard Rock B	189	Samba B	233	Country
146	Rock & Roll 1B	190	Polka B	234	Country Rock
147	Rock & Roll 2B	191	Polka Ober B	235	Country Shuffle
148	Chicago Blues B	192	Tarantella	236	Country Swing
149	Fast Gospel B	193	Slow Waltz	237	Country Ballad
150	Groove Soul B	194	Ober Waltz	238	Country Waltz
151	Rap B	195	Piano Ballad	239	50's Rock
152	GospelSl B	196	Waltz 2	240	Heavy Metal
153	Blues B	197	Guitar Waltz	241	Rock 1
154	Slow Blues B	198	2/4 Piano 1	242	Rock 2
155	Foxtrot B	199	3/4 Piano 1	243	Soft Rock
156	Disco Tropic B	200	4/4 Piano 1	244	Slow Rock
157	Disco Hands B	201	8 Beat 1	245	Hard Rock
158	Two Step B	202	8 Beat 2	246	Rock & Roll 1
159	Polk Pop B	203	8 Beat 3	247	Rock & Roll 2
160	Waltz 1B	204	8 Beat 4	248	Chicago Blues
161	Waltz Pop 1B	205	8 Beat Heat	249	Fast Gospel
162	Waltz Pop 2B	206	8 Beat Pop 1	250	Groove Soul
163	Rai B	207	8 Beat Pop 2	251	Rap
164	Twist 1B	208	Ballad 1	252	GospelSl
165	Twist 2B	209	Ballad 2	253	Blues
166	Miami Pop B	210	Guitar Ballad	254	Slow Blues
167	Motown B	211	Organ Ballad	255	Foxtrot
168	Reggae B	212	Bluse Ballad	256	Disco Tropic
169	Swing Reggae B	213	Epic Ballad	257	Disco Hands
170	Mambo B	214	Rock Ballad	258	Two Step
171	Beguine B	215	Slow Ballad	259	Polk Pop
172	Musette B	216	Pop Ballad	260	Waltz 1
173	House B	217	Electro Pop Ballad	261	Waltz Pop 1
174	Slow Fox B	218	Polk Ballad	262	Waltz Pop 2
175	Vienna Waltz B	219	16 Beat 1	263	Rai
176	Salsa B	220	16 Beat 2	264	Twist 1

## Список ритмов

265	Twist 2	309	Ballad 2	353	Blues
266	Miami Pop	310	Guitar Ballad	354	Slow Blues
267	Motown	311	Organ Ballad	355	Foxtrot
268	Reggae	312	Bluse Ballad	356	Disco Tropic
269	Swing Reggae	313	Epic Ballad	357	Disco Hands
270	Mambo	314	Rock Ballad	358	Two Step
271	Beguine	315	Slow Ballad	359	Polk Pop
272	Musette	316	Pop Ballad	360	Waltz 1
273	House	317	Electro Pop Ballad	361	Waltz Pop 1
274	Slow Fox	318	Polk Ballad	362	Waltz Pop 2
275	Vienna Waltz	319	16 Beat 1	363	Rai
276	Salsa	320	16 Beat 2	364	Twist 1
277	Disco	321	16 Beat 3	365	Twist 2
278	Hip Hop Pop	322	16 Beat 4	366	Miami Pop
279	Analog Pop	323	16 Beat Funk	367	Motown
280	Club Dance	324	16 Beat Pop	368	Reggae
281	Boogie	325	16 Beat Ballad	369	Swing Reggae
282	Funky Pop	326	Bossa Nova 1	370	Mambo
283	Jazz Rock	327	Guitar Bossa	371	Beguine
284	Swing 1	328	Pop Bossa	372	Musette
285	Dixieland	329	Tango	373	House
286	Jazz Samba	330	Cha Cha	374	Slow Fox
287	March	331	Rhumba	375	Vienna Waltz
288	US. March	332	TEX TEX	376	Salsa
289	Samba	333	Country	377	Disco
290	Polka	334	Country Rock	378	Hip Hop Pop
291	Polka Ober	335	Country Shuffle	379	Analog Pop
292	Tarantella	336	Country Swing	380	Club Dance
293	Slow Waltz	337	Country Ballad	381	Boogie
294	Ober Waltz	338	Country Waltz	382	Funky Pop
295	Piano Ballad	339	50's Rock	383	Jazz Rock
296	Waltz 2	340	Heavy Metal	384	Swing 1
297	Guitar Waltz	341	Rock 1	385	Dixieland
298	2/4 Piano 1	342	Rock 2	386	Jazz Samba
299	3/4 Piano 1	343	Soft Rock	387	March
300	4/4 Piano 1	344	Slow Rock	388	US. March
301	8 Beat 1	345	Hard Rock	389	Samba
302	8 Beat 2	346	Rock & Roll 1	390	Polka
303	8 Beat 3	347	Rock & Roll 2	391	Polka Ober
304	8 Beat 4	348	Chicago Blues	392	Tarantella
305	8 Beat Heat	349	Fast Gospel	393	Slow Waltz
306	8 Beat Pop 1	350	Groove Soul	394	Ober Waltz
307	8 Beat Pop 2	351	Rap	395	Piano Ballad
308	Ballad 1	352	GospelSl	396	Waltz 2

## Список ритмов

397	Guitar Waltz	441	Rock 1	485	Dixieland
398	2/4 Piano 1	442	Rock 2	486	Jazz Samba
399	3/4 Piano 1	443	Soft Rock	487	March
400	4/4 Piano 1	444	Slow Rock	488	US. March
401	8 Beat 1	445	Hard Rock	489	Samba
402	8 Beat 2	446	Rock & Roll 1	490	Polka
403	8 Beat 3	447	Rock & Roll 2	491	Polka Ober
404	8 Beat 4	448	Chicago Blues	492	Tarantella
405	8 Beat Heat	449	Fast Gospel	493	Slow Waltz
406	8 Beat Pop 1	450	Groove Soul	494	Ober Waltz
407	8 Beat Pop 2	451	Rap	495	Piano Ballad
408	Ballad 1	452	GospelSl	496	Waltz 2
409	Ballad 2	453	Blues	497	Guitar Waltz
410	Guitar Ballad	454	Slow Blues	498	2/4 Piano 1
411	Organ Ballad	455	Foxtrot	499	3/4 Piano 1
412	Bluse Ballad	456	Disco Tropic	500	4/4 Piano 1
413	Epic Ballad	457	Disco Hands	501	8 Beat 1BF
414	Rock Ballad	458	Two Step	502	8 Beat 2
415	Slow Ballad	459	Polk Pop	503	8 Beat 3
416	Pop Ballad	460	Waltz 1	504	8 Beat 4
417	Electro Pop Ballad	461	Waltz Pop 1	505	8 Beat Heat
418	Polk Ballad	462	Waltz Pop 2	506	8 Beat Pop 1
419	16 Beat 1	463	Rai	507	8 Beat Pop 2
420	16 Beat 2	464	Twist 1	508	Ballad 1
421	16 Beat 3	465	Twist 2	509	Ballad 2
422	16 Beat 4	466	Miami Pop	510	Guitar Ballad
423	16 Beat Funk	467	Motown	511	Organ Ballad
424	16 Beat Pop	468	Reggae	512	Bluse Ballad
425	16 Beat Ballad	469	Swing Reggae	513	Epic Ballad
426	Bossa Nova 1	470	Mambo	514	Rock Ballad
427	Guitar Bossa	471	Beguine	515	Slow Ballad
428	Pop Bossa	472	Musette	516	Pop Ballad
429	Tango	473	House	517	Electro Pop Ballad
430	Cha Cha	474	Slow Fox	518	Polk Ballad
431	Rhumba	475	Vienna Waltz	519	16 Beat 1
432	TEX TEX	476	Salsa	520	16 Beat 2
433	Country	477	Disco	521	16 Beat 3
434	Country Rock	478	Hip Hop Pop	522	16 Beat 4
435	Country Shuffle	479	Analog Pop	523	16 Beat Funk
436	Country Swing	480	Club Dance	524	16 Beat Pop
437	Country Ballad	481	Boogie	525	16 Beat Ballad
438	Country Waltz	482	Funky Pop	526	Bossa Nova 1
439	50's Rock	483	Jazz Rock	527	Guitar Bossa
440	Heavy Metal	484	Swing 1	528	Pop Bossa

## Список ритмов

529	Tango	573	House	617	Electro Pop Ballad
530	Cha Cha	574	Slow Fox	618	Polk Ballad
531	Rhumba	575	Vienna Waltz	619	16 Beat 1
532	TEX TEX	576	Salsa	620	16 Beat 2
533	Country	577	Disco	621	16 Beat 3
534	Country Rock	578	Hip Hop Pop	622	16 Beat 4
535	Country Shuffle	579	Analog Pop	623	16 Beat Funk
536	Country Swing	580	Club Dance	624	16 Beat Pop
537	Country Ballad	581	Boogie	625	16 Beat Ballad
538	Country Waltz	582	Funky Pop	626	Bossa Nova 1
539	50's Rock	583	Jazz Rock	627	Guitar Bossa
540	Heavy Metal	584	Swing 1	628	Pop Bossa 1C
541	Rock 1	585	Dixieland	629	Tango 2C
542	Rock 2	586	Jazz Samba	630	Cha Cha 1C
543	Soft Rock	587	March	631	Rhumba 2C
544	Slow Rock	588	US. March	632	TEX TEX 3C
545	Hard Rock	589	Samba	633	Country 4C
546	Rock & Roll 1	590	Polka	634	Country Rock C
547	Rock & Roll 2	591	Polka Ober	635	Country Shuffle C
548	Chicago Blues	592	Tarantella	636	Country Swing C
549	Fast Gospel	593	Slow Waltz	637	Country Ballad C
550	Groove Soul	594	Ober Waltz	638	Country Waltz C
551	Rap	595	Piano Ballad	639	50's Rock C
552	GospelSl	596	Waltz 2	640	Heavy Metal
553	Blues	597	Guitar Waltz	641	Rock 1C
554	Slow Blues	598	2/4 Piano 1	642	Rock 2C
555	Foxtrot	599	3/4 Piano 1	643	Soft Rock 4C
556	Disco Tropic	600	4/4 Piano 1	644	Slow Rock 5C
557	Disco Hands	601	8 Beat 1	645	Hard Rock C
558	Two Step	602	8 Beat 2	646	Rock & Roll 1C
559	Polk Pop	603	8 Beat 3	647	Rock & Roll 2C
560	Waltz 1	604	8 Beat 4	648	Chicago Blues C
561	Waltz Pop 1	605	8 Beat Heat	649	Fast Gospel 1C
562	Waltz Pop 2	606	8 Beat Pop 1	650	Groove Soul 2C
563	Rai	607	8 Beat Pop 2	651	Rap 1C
564	Twist 1	608	Ballad 1	652	GospelSl 2C
565	Twist 2	609	Ballad 2	653	Slow Blues C
566	Miami Pop	610	Guitar Ballad	654	Slow Blues C
567	Motown	611	Organ Ballad	655	Foxtrot C
568	Reggae	612	Bluse Ballad	656	Disco Tropic C
569	Swing Reggae	613	Epic Ballad	657	Disco Hands C
570	Mambo	614	Rock Ballad	658	Two Step 1C
571	Beguine	615	Slow Ballad	659	Polk Pop 2C
572	Musette	616	Pop Ballad	660	Waltz 1C

## Список ритмов

## Список тембров

661	Waltz Pop 1C	PIANO		042	VIOLA 1
662	Waltz Pop 2C	001	GRAND PIANO 1	043	CELLO 1
663	Rai 2C	002	BRIGHT PIANO 1	044	CONTRABASS 1
664	Twist 1C	003	PIANO ELEC	045	STR TREM 1
665	Twist 2C	004	HONKY-TONK	046	STR PIZZ
666	Miami Pop 2C	005	E PIANO1	047	HARP 1
667	Motown 1C	006	E PIANO2	048	TIMPANI 1
668	Reggae 2C	007	GRAND HARPSICHORD	CONCERT	
669	Swing Reggae C	008	CLAVI CHORD 1	049	STRINGS 1
670	Mambo C	GLOCK		050	STRINGS 2
671	Beguine C	009	CELESTA	051	STR SYN 1
672	Musette C	010	GLOCKENSPIEL 1	052	STR SYN 2
673	House C	011	MUSIC BOX 1	053	CHOIR AAHS 1
674	Slow Fox C	012	VIBRAPHONE 1	054	VOICE OOHS 1
675	Vienna Waltz C	013	MARIMBA 1	055	VOICE SYN
676	Salsa C	014	XYLOPHONE 1	056	ORCH HIT 1
677	Disco 1C	015	TUBULR BELLS 1	BRASS	
678	Hip Hop Pop 2C	016	DULCIMER 1	057	TRUMPT 1
679	Analog Pop C	ORGAN		058	TROMBONE 1
680	Club Dance C	017	HAND ORGAN 1	059	TUBA 1
681	Boogie C	018	PERCHY ORGAN 1	060	MUTE IPT 1
682	Funky Pop 1C	019	ROCK ORGAN	061	FR HORN 1
683	Jazz Rock 2C	020	CHURCH ORGAN 1	062	BRASS SECT 1
684	Swing 1C	021	REED ORGAN 1	063	BRASS SYN 1
685	Dixieland 2C	022	ACCORDN 1	064	BRASS SYN 2
686	Jazz Samba 1C	023	HARMONICA 1	PIPE	
687	March 1C	024	TANGO ACCORDN 1	065	SAX SOPRANO
688	US. March 2C	GUITAR		066	SAX ALTO 1
689	Samba 1C	025	GUITAR NYLON 1	067	SAX TENOR 1
690	Polka C	026	GUITAR STEEL 1	068	SAX BTONE 1
691	Polka Ober 1C	027	GUITAR JAZZ 1	069	OBOE 1
692	Tarantella 1C	028	GUITAR CLEAN 1	070	ENG HORN 1
693	Slow Waltz 2C	029	GUITAR MUTED 1	071	BASSON 1
694	Ober Waltz C	030	GUITAR OVRDRV	072	CLARINET 1
695	Piano Ballad C	031	GUITAR DISTRT 1	WOODPIPE	
696	Waltz 2 C	032	GUITAR HRMNX	073	PICCOLO 1
697	Guitar Waltz C	BASS		074	FLUTE 1
698	2/4 Piano 1C	033	ACOUSTIC BASS 1	075	RECORDER 1
699	3/4 Piano 1C	034	FINGER BASS 1	076	PAN FLUTE
700	4/4 Piano 1C	035	ELECT BASS 1	077	BOTILE BLOWN
		036	FRETL5 BASS	078	SHAKHACHI
		037	SLAP BASS 1	079	WHISTLE 1
		038	SLAP BASS 2	080	OCARINA
		039	SYN BASS 1	SYNTH PIPE	
		040	SYN BASS 2	081	SQR WAVE
		STRING		082	SAW TOOTH
		041	VIOLIN 1	083	CALLIOPE

## Список тембров

084	CHIFF	126	HELICOPTER	172	SOFT HONKY-TONK 2
085	CHARANG	127	APPLAUSE	173	VELOCITY CROSS HONKY-TONK
086	VOICE	128	GUNSHOT 1	174	DARK HONKY-TONK 1
087	FIFTHS	OTHER		175	DARK HONKY-TONK 2
088	BASS LEAD	129	GRAND PIANO2	176	HONKY-TONK /W 1
SYNTH VOICE		130	GRAND PIANO3	177	HONKY-TONK /W 2
089	NEW AGE	131	GRAND PIANO4	178	HONKY-TONK /W 3
090	WARM PAD	132	GRAND PIANO /W 1	179	HONKY-TONK /W 4
091	POLY SYNTH	133	GRAND PIANO /W 2	180	SHORT HONKY-TONK 1
092	CHOIR PAD 1	134	GRAND PIANO /W 3	181	SHORT HONKY-TONK 2
093	BOW GLASS 1	135	BRIGHTNESS PIANO 1	182	E PIANO 1/W
094	METAL PAD 1	136	BRIGHTNESS PIANO 2	183	E PIANO 2/W
095	HALO PAD 1	137	BRIGHTNESS PIANO 3	184	E PIANO 3/W
096	SWEEP	138	GRAND PIANO DARK 1	185	E PIANO 4/W
SYNTH EFFECT		139	GRAND PIANO DARK 2	186	E PIANO 5/W
097	RAIN FX	140	VELOCITY CROSS PIANO 1	187	E PIANO 6/W
098	SNDTRK FX	141	VELOCITY CROSS PIANO 2	188	SOFT E.PIANO 1
099	CRYSTAL FX	142	SOFT GRAND PIANO 1	189	SOFT E.PIANO 2
100	ATMOSPH FX	143	SOFT GRAND PIANO 2	190	SOFT E.PIANO 3
101	BRIGHT FX	144	SOFT GRAND PIANO 3	191	SOFT E.PIANO 4
102	GOBLIN FX	145	STEREO BRIGHT PIANO	192	HARD E.PIANO 1
103	ECHO FX	146	BRIGHT PIANO 2	193	HARD E.PIANO 2
104	SCI-FIX	147	BRIGHT PIANO 3	194	SHORT E.PIANO 1
FOLK SOUND		148	BRIGHT PIANO 4	195	SHORT E.PIANO 2
105	SITAR 1	149	BRIGHT PIANO 5	196	BRIGHTNESS E.P 1
106	BANJO 1	150	BRIGHT PIANO /W 1	197	BRIGHTNESS E.P 2
107	SHAMISEN 1	151	BRIGHT PIANO /W 2	198	HARPSICHORD 1
108	KOTO 1	152	SOFT BRIGHT PIANO 1	199	HARPSICHORD 2
109	KALIMBA	153	SOFT BRIGHT PIANO 2	200	SOFT HARPSICHORD 1
110	BAGPIPE	154	DEEP BRIGHT PIANO	201	SOFT HARPSICHORD 2
111	FIDDLE	155	VELOCITY CROSS BRIGHT PIANO	202	BRIGHT HARPSICHORD 1
112	SHANAI	156	DETUNED E.PIANO 1	203	BRIGHT HARPSICHORD 2
PERCUSSION		157	DETUNED E.PIANO 2	204	DARK HARPSICHORD 1
113	TINKLE BELL	158	DETUNED E.PIANO 3	205	DARK HARPSICHORD 2
114	AGOGO	159	BRIGHT E.PIANO 1	206	HARD HARPSICHORD 1
115	STEEL DRM	160	BRIGHT E.PIANO 2	207	HARD HARPSICHORD 2
116	WOODBLK	161	BRIGHT E.PIANO 3	208	CLAVI CHORD 2
117	TAIKO DRM	162	BRIGHT E.PIANO 4	209	CLAVI CHORD 3
118	MLDY TOM	163	E.PIANO /W 1	210	CLAVI/W
119	SYNTH DRM	164	E.PIANO /W 2	211	BRIGHT CLAVI
120	REVR5 CYM	165	E.PIANO /W 3	212	DARK CLAVI
EFFECT		166	E.PIANO /W 4	213	PERCHY CLAVI
121	GTR NOISE	167	DARK E.PIANO 1	214	BRIGHT CELESTA
122	BREATH 1	168	DARK E.PIANO 2	215	SHORT CELESTA
123	SEASHORE	169	DARK E.PIANO 3	216	PERCHY CELESTA
124	BIRD TWEET 1	170	DARK E.PIANO 4	217	DUET CELESTA
125	TELEPHONE	171	SOFT HONKY-TONK 1	218	CELESTA HARMONIC

219	GLOCKENSPIEL 2	266	PERCHY ORGAN 3	313	DARK ACCORDN
220	GLOCKENSPIEL 3	267	BRIGHT PERCHY ORGAN	314	FAST ACCORDN
221	GLOCKENSPIEL 4	268	DISTR PERCHY ORGAN	315	SLOW ACCORDN
222	BRIGHT GLOCKENSPIEL	269	ROTART ORGAN	316	HARMONICA 2
223	DARK GLOCKENSPIEL	270	SLOW ROTART ORGAN	317	HARMONICA 3
224	GLOCKENSPIEL /W 1	271	1960 ROCK ORGAN	318	HARMONICA 4
225	GLOCKENSPIEL /W 2	272	1980 ROCK ORGAN	319	HARMONICA 5
226	MUSIC BOX 2	273	BRIGHT ROCK ORGAN	320	SWEET HARMONICA
227	MUSIC BOX 3	274	DARK ROCK ORGAN	321	DISTR HARMONICA
228	MUSIC BOX 4	275	SOFT ROCK ORGAN	322	SLOW HARMONICA
229	TOY MUSIC BOX	276	CHURCH ORGAN 2	323	FAST HARMONICA
230	BRIGHT MUSIC BOX	277	CHURCH ORGAN 3	324	BRIGHT HARMONICA
231	DARK MUSIC BOX	278	CHURCH ORGAN 4	325	DARK HARMONICA
232	VIBRAPHONE 2	279	CHURCH ORGAN 5	326	SOFT HARMONICA
233	VIBRAPHONE 3	280	CHURCH ORGAN 6	327	HARMONICA /W 1
234	SYN VIBRAPHONE	281	CHURCH ORGAN /W 1	328	HARMONICA /W 2
235	HARD VIBRAPHONE	282	CHURCH ORGAN /W 2	329	HARMONICA MUTED
236	VIBRAPHONE /W 1	283	BIRGHT CHURCH ORGAN 1	330	TANGO ACCORDN 2
237	VIBRAPHONE /W 2	284	BIRGHT CHURCH ORGAN 2	331	TANGO ACCORDN 3
238	VIBRAPHONE SOFT	285	DARK CHURCH ORGAN 1	332	1960 TANGO ACCORDN
239	MARIMBA 2	286	DARK CHURCH ORGAN 2	333	1980 TANGO ACCORDN
240	MARIMBA /W	287	SOUL CHURCH ORGAN	334	BRIGHT TANGO ACCORDN
241	DARK MARIMBA	288	CHURCH ORGAN HARMONIC	335	DARK TANGO ACCORDN
242	BRIGHT MARIMBA	289	CHURCH ORGAN SLOW	336	SOFT TANGO ACCORDN
243	DUTED MARIMBA	290	CHURCH ORGAN FAST	337	HARD TANGO ACCORDN
244	DARK MARIMBA	291	SOFT CHURCH ORGAN	338	TANGO ACCORDN /W 1
245	XYLOPHONE 2	292	REED ORGAN 2	339	TANGO ACCORDN /W 2
246	XYLOPHONE 3	293	REED ORGAN 3	340	SLOW TANGO ACCORDN
247	VELOCITY CROSS XYLOPHONE	294	REED ORGAN 4	341	FAST TANGO ACCORDN
248	DISTR XYLOPHONE	295	REED ORGAN 5	342	GUITAR NYLON 2
249	BRIGHT XYLOPHONE	296	BRIGHT REED ORGAN	343	GUITAR NYLON 3
250	FAST XYLOPHONE	297	DARK REED ORGAN	344	GUITAR NYLON 4
251	SLOW XYLOPHONE	298	REED ORGAN /W	345	GUITAR NYLON 5
252	TUBULR BELLS 2	299	FAST REED ORGAN	346	GUITAR NYLON 6
253	TUBULR BELLS 3	300	SLOW REED ORGAN	347	GUITAR NYLON 7
254	TUBULR BELLS 4	301	SOFT REED ORGAN	348	GUITAR NYLON RELEASE
255	SYN TUBULR BELLS	302	HARD REED ORGAN	349	VELOCITY CROSS GUITAR
256	TUBULR BELLS DARK	303	JAZZ REED ORGAN	350	DETUNED GUITAR NYLON
257	DULCIMER 2	304	ACCORDN 2	351	BIRGHT GUITAR NYLON
258	DULCIMER 3	305	ACCORDN 3	352	DARK GUITAR NYLON
259	SANTUR	306	ACCORDN 4	353	GUITAR NYLON HARMONIC 1
260	HAND ORGAN 2	307	ACCORDN 5	354	GUITAR NYLON HARMONIC 2
261	HAND ORGAN 3	308	DISTR ACCORDN	355	GUITAR NYLON /W 1
262	SOFT HAND ORGAN	309	BRIGHT ACCORDN	356	GUITAR NYLON /W 2
263	BRIGHT SOFT HAMND ORGAN	310	ACCORDN HARMONIC	357	GUITAR NYLON FAST
264	HAMND ORGAN DETUNED	311	ROCK ACCORDN	358	GUITAR NYLON SLOW
265	PERCHY ORGAN 2	312	SWEET ACCORDN	359	HARD GUITAR NYLON

360	SOFT GUITAR NYLON	407	GUITAR MUTED 4	454	ACOUSTIC BASS 3
361	GUITAR STEEL 2	408	GUITAR MUTED 5	455	ACOUSTIC BASS 4
362	GUITAR STEEL 3	409	BRIGHT GUITAR MUTED	456	ACOUSTIC BASS 5
363	GUITAR STEEL 4	410	DARK GUITAR MUTED	457	DETUNED BASS
364	VELOCITY CROSS GUITAR STEEL	411	GUITAR MUTED HARMONIC	458	BASS AND FILTER
365	DARK GUITAR STEEL	412	GUITAR MUTED RELEASE	459	SOFT BASS
366	BRIGHT GUITAR STEEL	413	GUITAR MUTED CHORUS	460	BASS & RELEASE
367	GUITAR STEEL HARMONIC 1	414	GUITAR MUTED HARD	461	FAST BASS
368	GUITAR STEEL HARMONIC 2	415	GUITAR MUTED SOFT	462	SLOW BASS
369	HARD GUITAR STEEL	416	GUITAR MUTED /W 1	463	BRIGHT BASS
370	SOFT GUITAR STEEL	417	GUITAR MUTED /W 2	464	DARK BASS
371	FAST GUITAR STEEL	418	GUITAR OVRDRV 2	465	BASS /W 1
372	SLOW GUITAR STEEL	419	GUITAR OVRDRV 3	466	BASS /W 2
373	VELOCITY GUITAR STEEL	420	GUITAR OVRDRV 4	467	FINGER BASS 2
374	GUITAR STEEL REALSE	421	PUNK GUITAR	468	FINGER BASS HARMONIC
375	GUITAR STEEL /W 1	422	GUITAR OVRDRV HARMONIC	469	SOFT FINGER BASS
376	GUITAR STEEL /W 2	423	BRIGHT GUITAR OVRDRV	470	FINGER BASS RELEASE
377	GUITAR JAZZ 2	424	DARK GUITAR OVRDRV	471	ELECT BASS 2
378	GUITAR JAZZ 3	425	GUITAR OVRDRV RELEASE	472	ELECT BASS 3
379	GUITAR JAZZ 4	426	HARD GUITAR OVRDRV	473	ELECT BASS 4
380	GUITAR JAZZ 5	427	SOFT GUITAR OVRDRV	474	ELECT BASS 5
381	DARK GUITAR JAZZ	428	GUITAR OVRDRV /W 1	475	ELECT BASS 6
382	BRIGHT GUITAR JAZZ	429	GUITAR OVRDRV /W 2	476	ELECT BASS RELEASE
383	SOFT GUITAR JAZZ	430	GUITAR DISTR 2	477	ELECT BASS HARMONIC
384	HARD GUITAR JAZZ	431	GUITAR DISTR 3	478	SOFT ELECT BASS
385	GUITAR JAZZ VELOCITY	432	GUITAR DISTR 4	479	FAST ELECT BASS
386	GUITAR JAZZ RELEASE	433	GUITAR DISTR 5	480	PICK BASS
387	GUITAR JAZZ HARMONIC	434	GUITAR DISTR 6	481	BRIGHT ELECT BASS 1
388	SOFT GUITAR JAZZ	435	GUITAR DISTR HARMONIC	482	BRIGHT ELECT BASS 2
389	GUITAR JAZZ /W 1	436	GUITAR DISTR RELEASE	483	DARK ELECT BASS 1
390	GUITAR JAZZ /W 2	437	BRIGHT GUITAR DISTR	484	DARK ELECT BASS 2
391	GUITAR CLEAN 2	438	DARK GUITAR DISTR	485	SOFT FRETLS BASS
392	GUITAR CLEAN 3	439	SOFT GUITAR DISTR	486	FAST FRETLS BASS
393	GUITAR CLEAN 4	440	HARMONIC GUITAR DISTR	487	FRETLS BASS RELEASE
394	GUITAR CLEAN 5	441	HARD GUITAR DISTR	488	FRETLS BASS HARMONIC
395	VELOCITY CLEAN GUITAR	442	GUITAR DISTR /W 1	489	FRETLESS BASS
396	DUTED CLEAN GUITAR	443	GUITAR DISTR /W 2	490	FAST FRETLESS BASS
397	BRIGHT CLEAN GUITAR	444	SOFT GUITAR HRMNX	491	SLAP BASS 3
398	CLEAN GUITAR HARMONIC	445	HARD GUITAR HRMNX	492	SLAP BASS 4
399	CLEAN GUITAR /W 1	446	BRIGHT GUITAR HRMNX	493	SLAP BASS 5
400	CLEAN GUITAR /W 2	447	DARK GUITAR HRMNX	494	SLAP BASS 6
401	SOFT CLEAN GUITAR	448	FAST GUITAR HRMNX	495	BRIGHT SLAP BASS 1
402	FAST CLEAN GUITAR	449	SLOW GUITAR HRMNX	496	BRIGHT SLAP BASS 2
403	SLOW CLEAN GUITAR	450	GUITAR HRMNX RELEASE	497	DARK SLAP BASS 1
404	CLEAN GUITAR RELEASE	451	GUITAR HRMNX /W 1	498	DARK SLAP BASS 2
405	GUITAR MUTED 2	452	GUITAR HRMNX /W 2	499	SOFT SLAP BASS 1
406	GUITAR MUTED 3	453	ACOUSTIC BASS 2	500	SOFT SLAP BASS 2

501	FAST SLAP BASS 1	548	VIOLA VIBRATO	595	HARP /W 2
502	FAST SLAP BASS 2	549	VIOLA /W	596	BRIGHT HARP 1
503	SLOW SLAP BASS 1	550	BRIGHT VIOLA	597	BRIGHT HARP 2
504	SLOW SLAP BASS 2	551	FAST VIOLA	598	DARK HARP 1
505	SLAP BASS HARMONIC 1	552	SOFT VIOLA	599	DARK HARP 2
506	SLAP BASS HARMONIC 2	553	CELLO 2	600	HARP HARMONIC
507	SLAP BASS RELEASE 1	554	CELLO 3	601	SOFT HARMONIC
508	SLAP BASS RELEASE 2	555	CELLO 4	602	TIMPANI 2
509	SYN BASS 3	556	DARK CELLO	603	TIMPANI 3
510	SYN BASS 4	557	HARD CELLO	604	TIMPANI 4
511	SYN BASS 5	558	CELLO ENSEMBLE 1	605	TIMPANI /W 1
512	SYN BASS 6	559	CELLO ENSEMBLE 2	606	TIMPANI /W 2
513	SYN BASS HARMONIC 1	560	SLOW CELLO	607	BRIGHT TIMPANI
514	SYN BASS HARMONIC 2	561	FAST CELLO	608	DARK TIMPANI
515	FAST SYN BASS 1	562	CELLO /W	609	STRINGS 3
516	FAST SYN BASS 2	563	BRIGHT CELLO	610	STRINGS 4
517	SOFT SYN BASS 1	564	SOFT CELLO	611	STRINGS 5
518	SOFT SYN BASS 2	565	CONTRABASS 2	612	STRINGS 6
519	SLOW SYN BASS 1	566	CONTRABASS 3	613	SLOW STRINGS 1
520	SLOW SYN BASS 2	567	CONTRABASS 4	614	SLOW STRINGS 2
521	FAST SYN BASS 1	568	CONTRA BASS ENSEMBLE	615	FAST STRINGS 1
522	FAST SYN BASS 2	569	CONTRA BASS ENSEMBLE	616	FAST STRINGS 2
523	BRIGHT SYN BASS 1	570	CONTRA BASS ENSEMBLE	617	DARK STINGS 1
524	BRIGHT SYN BASS 2	571	CONTRA BASS ENSEMBLE	618	DARK STINGS 2
525	DARK SYN BASS 1	572	DARK CONTRA BASS	619	BRIGHT STINGS 1
526	DARK SYN BASS 2	573	CONTRA BASS VIBRATO	620	BRIGHT STINGS 2
527	SYN BASS RELEASE 1	574	STR TREM 2	621	RESONANT STRINGS
528	SYN BASS RELEASE 2	575	STR TREM 3	622	SFORZATO STRINGS
529	VIOLIN 2	576	STR TREM 4	623	STR SYN 3
530	VIOLIN 3	577	STR TREM SLOW	624	STR SYN 4
531	VIOLIN 4	578	STR TREM FAST	625	STR SYN 5
532	VIOLIN 5	579	STR TREM /W	626	STR SYN 6
533	VIOLIN ENSEMBLE 1	580	BRIGHT STR TREM	627	1960 STRINGS
534	VIOLIN ENSEMBLE 2	581	DARK STR TREM	628	1970 STRINGS
535	SLOW VIOLIN	582	SOFT STR TREM	629	SLOW STRINGS 1
536	FAST VOLIN	583	BRIGHT STR PIZZ	630	SLOW STRINGS 2
537	VOLIN /W	584	DARK STR PIZZ	631	FAST STRINGS 1
538	BRIGHT VOLIN	585	STR PIZZ HARMONIC	632	FAST STRINGS 2
539	DARK VOLIN	586	STR PIZZ /W	633	LEGATO STRINGS 1
540	SOFT VOLIN	587	FAST STR PIZZ	634	LEGATO STRINGS 2
541	VIOLA 2	588	SLOW STR PIZZ	635	BRIGHT LEGATO STRINGS
542	VIOLA 3	589	SOFT STR PIZZ	636	DARK LEGATO STRINGS
543	VIOLA 4	590	METAL STR PIZZ	637	CHOIR AAHS 2
544	DARK VIOLA	591	HARP 2	638	CHOIR AAHS 3
545	HARD VIOLA	592	HARP 3	639	CHOIR AAHS 4
546	VIOLA ENSEMBLE	593	HARP 4	640	CHOIR AAHS 5
547	SLOW VIOLA	594	HARP /W 1	641	WARM CHOIR AAHS

## Список тембров

642	CHOIR AAHS /W 1	689	BRIGHT TROMBONE	736	SOFT BRASS SYN
643	CHOIR AAHS /W 2	690	SLOW BRIGHT TROMBON	737	SFORZATO BRASS SYN
644	CHOIR AAHS HARMONIC	691	MUTE TROMBONE	738	DARK BRASS SYN
645	BRIGHT CHOIR AAHS	692	TROMBONE /W	739	BRIGHT BRASS SYN
646	DARK CHOIR AAHS	693	TUBA 2	740	WELL BRASS SYN
647	FAST CHOIR AAHS	694	TUBA 3	741	MUTE BRASS SYN
648	SLOW CHOIR AAHS	695	TUBA 4	742	SWEET BRASS SYN
649	VOICE OOHS 2	696	TUBA 5	743	HOMONIC BRASS SYN
650	WARM VOICE OOHS 1	697	TUBA 6	744	SLOW BRASS SYN
651	WARM VOICE OOHS 2	698	SOFT TUBA	745	FAST BRASS SYN
652	VOICE OOHS /W	699	SLOW TUBA	746	SAX ALTO 2
653	BRIGHT VOICE OOHS	700	TUBA SOLO	747	SAX ALTO 3
654	DARK VOICE OOHS	701	TUBA /W	748	SAX ALTO 4
655	FAST VOICE OOHS	702	BRIGHT TUBA	749	SAX ALTO 5
656	SLOW VOICE OOHS	703	DARK TUBA	750	SAX ALTO 6
657	VOICE SYN HARMONIC	704	MUTE TUBA	751	SAX ALTO BRIGHT
658	SLOW VOICE SYN	705	MUTE TPT 2	752	SAX ALTO MUTE
659	FAST VOICE SYN	706	DARK MUTE TPT	753	SAX ALTO /W
660	BRIGHT VOICE SYN	707	BRIGHT MUTE TPT	754	SOFT SAX ALTO
661	ELE.VOICE SYN	708	MUTE TPT /W	755	SLOW SAX ALTO
662	ORCH HIT 2	709	SWEET MUTE TPT	756	SWEET SAX ALTO
663	ORCH HIT /W	710	FR HORN 2	757	SAX TENOR 2
664	BRIGHT ORCH HIT	711	FR HORN 3	758	SAX TENOR 3
665	ORCH HIT HARMONIC	712	FR HORN 4	759	SAX TENOR 4
666	SLOW ORCH HIT	713	FR HORN 5	760	SAX TENOR 5
667	FAST ORCH HIT	714	FR HORN 6	761	SAX TENOR 6
668	DARK ORCH HIT	715	SWEET FR HORN	762	SWEET SAX TENOR
669	SOFT ORCH HIT	716	SLOW FR HORN	763	DARK SAX TENOR
670	TRUMPT 2	717	FAST FR HORN	764	SUPER SAX TENOR
671	TRUMPT 3	718	BRIGHT FR HORN	765	SAX TENOR /W 1
672	TRUMPT 4	719	DARK FR HORN	766	SAX TENOR /W 2
673	TRUMPT 5	720	BRASS SECT 2	767	SAX TENOR HARMONIC
674	TRUMPT 6	721	BRASS SECT 3	768	SAX TENOR BRIGHT
675	TRUMPT 7	722	BRASS SECT 4	769	SAX BTONE 2
676	DARK TRUMPT	723	BRASS SECT 5	770	SAX BTONE 3
677	BRIGHT TRUMPT	724	BRASS SECT 6	771	SAX BTONE 4
678	SWEET TRUMPT	725	DARK BRASS SECT	772	SAX BTONE 5
679	MUTE TRUMPT	726	BRASS SECT WELL	773	SAX BTONE WELL
680	TRUMPT /W 1	727	BRIGHT BRASS SECT	774	MUTE SAX BTONE
681	TRUMPT /W 2	728	FAST BRASS SECT	775	SWEET SAX BTONE
682	TROMBONE 2	729	SLOW BRASS SECT	776	DARK SAX BTONE
683	TROMBONE 3	730	BRASS SECT /W	777	OBOE 2
684	TROMBONE 4	731	BRASS SYN 3	778	OBOE 3
685	TROMBONE 5	732	BRASS SYN 4	779	OBOE 4
686	TROMBONE 6	733	BRASS SYN 5	780	OBOE 5
687	TROMBONE 7	734	BRASS SYN 6	781	SWEET OBOE
688	DARK TROMBONE	735	BRASS SYN 7	782	OBOE WELL

## Список тембров

783	BRIGHT OBOE	830	RECORDER 4	877	CHOIR PAD HARMONIC
784	DARK OBOE	831	PAN FLUTE SLOW	878	BOW GLASS 2
785	MUTE OBOE	832	PAN FLUTE FAST	879	BOW GLASS HARMONIC
786	ENG HORN 2	833	PAN FLUTE HARMONIC	880	METAL PAD 2
787	ENG HORN 3	834	PAN FLUTE DUTE	881	PAN PAD 1
788	ENG HORN 4	835	PAN FLUTE/W	882	PAN PAD 2
789	ENG HORN 5	836	BRIGHT PAN FLUTE	883	HALO PAD 2
790	ENG HORN 6	837	BOTTLE BLOWN DARK	884	HALO PAD 3
791	ANALOG ENG HORN	838	BOTTLE BLOWN BRIGHTNESS	885	DISPERSE
792	WOODWINDS	839	BOTTLE BLOWN WARM	886	RISING
793	BASSON 2	840	SOFT BOTTLE BLOWN	887	CONGREGATE
794	BASSON 3	841	SHAKHACHI HARMONIC	888	PROGENITOR
795	BASSON 4	842	SHAKHACHI BRIGHT	889	PRELUDE
796	BASSON 5	843	SHAKHACHI DARK	890	WARM AIR
797	BRIGHT BASSON	844	SLOW SHAKHACHI	891	SMOG
798	DARK BASSON	845	FAST SHAKHACHI	892	PAN ECHO
799	BASSON WELL	846	WHISTLE 2	893	LARGE PAN
800	BRIGHT BASSON	847	WHISTLE 3	894	ECHO SLOW
801	MUTE BASSON	848	WHISTLE 4	895	FANTASYLAND
802	SOFT BASSON	849	WHISTLE 5	896	SITAR 2
803	CLARINET 2	850	SQUARE	897	SITAR 3
804	CLARINET 3	851	SINE LEAD	898	SITAR 4
805	CLARINET 4	852	SINE SLOW	899	DISTRIT SITAR
806	CLARINET 5	853	SINE FAST	900	BRIGHT SITAR
807	CLARINET HARMONIC	854	SAW SLOW		
808	DARK CLARINET	855	SAW FAST		
809	BRIGHT CLARINET	856	SAW HARMONIC		
810	CLARINET WELL	857	VOICE LEAD		
811	CLARINET MUTE	858	VOICE SLOW		
812	CLARINET SOFT	859	VOICE FAST		
813	PICCOLO 2	860	SOFT 5TH LEAD		
814	PICCOLO 3	861	5TH LEAD		
815	PICCOLO 4	862	MASSINESS		
816	PICCOLO DARK	863	BASS & LEAD		
817	PICCOLO HARMONIC	864	NEW AGE SLOW		
818	BRIGHT PICCOLO	865	NEW AGE FAST		
819	SOFT PICCOLO	866	NEW AGE HARMONIC		
820	FLUTE 2	867	WARM PAD FAST		
821	FLUTE 3	868	WARM PAD SLOW		
822	FLUTE 4	869	WARM PAD HARMONIC		
823	FLUTE HARMONIC	870	PWM PAD		
824	DARK FLUTE	871	POLY SYNTH SLOW		
825	BRIGHT FLUTE	872	POLY SYNTH FAST		
826	FLUTE MUTE	873	CLICK PAD		
827	SOFT FLUTE	874	ANALOG PAD		
828	RECORDER 2	875	POLY PAD		
829	RECORDER 3	876	CHOIR PAD 2		