GAMESIR GALILEO +
Wireless Mobile Game Controller

ENGLISH

[E-manual]
https://www.gamesir.hk/pages/manuals-gamesir-galileo

PACKAGING CONTENTS
GAMESIR Galileo+ Wireless Mobile Game Controller × 1 Magnetic Phone Holder × 1 Round Thumbsticks × 1
Pro Type-C Cable × 1 User Manual × 1 Thank You & After-sale Service Card × 1
Pro Type-C Adapter × 1 Warranty Information × 1

COMPATIBILITY
Supports iOS and Android devices
Supports Bluetooth

DEVICE LAYOUT
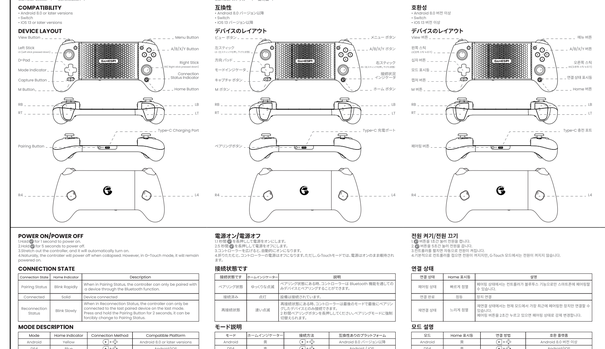

POWER ON/POWER OFF
Power on: Hold for 3 seconds to power off.
Power off: Hold for 3 seconds, the controller will automatically turn on.
Naturally, the controller will power off when collapsed. However, in G-Touch mode, it will remain connected.

CONNECTION STATE
Connection State	Home Indicator	Description
Pairing State	Blink Rapidly	When in Pairing Status, the controller can only be paired with a device through the Bluetooth function.
Solid	Solid	Device connected.
Reconnection Status	Blink Slowly	When in Reconnection Status, the controller can only be connected to the last connected device. Press and hold the Pairing Button for 2 seconds, it can be forcibly change to Pairing Status.

MODE DESCRIPTION
Mode	Home Indicator	Connection Method	Compatible Platform
Android	Yellow	Bluetooth	Android 8.0 and above
OS4	Blue	Bluetooth	Android/iOS
Switch	Red	Bluetooth	Switch/iOS
G-Touch	Cyan	Bluetooth	Gamelir App

* In working status, press combining key combination to switch to the desired mode.
*After successfully connecting to OS 4 OS mode, the default color changes to light orange.

CONNECT TO THE ANDROID DEVICE THROUGH BLUETOOTH
1.With the controller off, hold Ⓛ+Ⓡ to power on and the Home Indicator will blink yellow rapidly.
2.Navigate to the Bluetooth list on your phone, select "Gamelir-G8+", and click it to connect.
3.A solid yellow Home Indicator signifies a successful connection.
*After successful connection, when powered off, press the Home button briefly to power on and automatically reconnect.

CONNECT TO THE IOS DEVICE THROUGH BLUETOOTH
1.With the controller power off, hold Ⓛ+Ⓡ to power on and the Home Indicator will blink blue rapidly.
2.Navigate to the Bluetooth list on your iOS device, select "Gamelir-G8+", and click it to connect.
3.A steady light orange on the Home Indicator indicates a successful connection. You can change the color of the Home indicator under this mode in Settings>General>Game Controllers' on your iOS device. Supports up to 16 million colors.
*After successful connection, when powered off, press the Home button briefly to power on and automatically reconnect.

PLAY MAPPING GAMES ON ANDROID VIA BLUETOOTH CONNECTION IN G-TOUCH MODE
1.With the controller power off, hold Ⓛ+Ⓡ to power on, and the Home Indicator will blink cyan rapidly.
2.Navigate to the Bluetooth list on your Android device, select "Gamelir-G8+", and click it to connect.
3.A solid cyan Home Indicator signifies a successful connection.
*After successful connection, when powered off, press the Home button briefly to power on and automatically reconnect.

CONNECT TO SWITCH THROUGH BLUETOOTH
1.Go to Switch's Home Menu, select "Controller" - "Change Grip/Order" to enter the pairing interface.
2.Press the controller power off, hold Ⓛ+Ⓡ to power on, and the Home Indicator will blink red rapidly.
3.A solid red Home indicator signifies a successful connection.
*After successful connection, when powered off, press the Home button briefly to power on and automatically reconnect.

CONNECT TO A DEVICE THROUGH WIRED CONNECTION
1.Connect the Type-C port to a device, and the controller will automatically recognize the device.
2.After connecting to the device, the controller will automatically switch to the corresponding mode. The Home Indicator will display: Yellow for Android, Blue for OS4, Red for Switch.
*For Switch device: After connecting to the Switch with cable, please open the "Settings-Controllers & Sensors-Pro Controller wired communication". *Supported in Receiver and Wired mode only.

BACK BUTTON SETTING

The corresponding buttons are: A/B/X/Y/LB/RB/LT/RT/L3/R3/D-pad(↑/←/→/↓)

①The mappable buttons are: A/B/X/Y/LB/RB/LT/RT/L3/R3/D-pad(↑/←/→/↓)
Use the LEN button value: Hold the M button simultaneously until the Mode/Home Indicator blinks twice, then release the M button. Simultaneously press the button you need to map, then press the LEN button. When the Mode/Home Indicator return to the corresponding light, the LEN button value is set. In the key combo setting, the interval time for each button press must be less than 1 second, and the total time must be less than 3 seconds.
②Reset the LEN button value: Hold the M button simultaneously until the Mode/Home Indicator blinks white slowly, then press the LEN button. When the Mode Indicator return to the corresponding light, the LEN button value is reset.
*Can be set to trigger a single key or multiple buttons for LEN (up to a maximum of 8 button values triggered).
*Button settings are effective in real-time, the controller will automatically exit the setting mode after the operation will not be paused.

TURBO FUNCTION SETTING
*Regular recommended value: 5-8 times/second (5T-8T) turbo.
Four-speed adjustment: Slow gear with 3Hz, Medium gear with 5Hz, Fast gear with 8Hz, Ultra gear with 12Hz. Each gear can be set to 3 different turbo modes: Single press, Double press, Hold.
1.Turbo function is activated automatically after the corresponding button is pressed.
2.Gear Turbo function: Double-click the M button to clear all Turbo setting. The Home light flashes green twice to indicate a successful operation.

KEY COMBINATION
Function	Operation	Mode	Description
Simulate key value	Hold M + Corresponding key	/	Interchange the face button layout and the key value. *Interchange the A/B, X/Y key value. *The action will be saved after reboot.
Switch trigger mode	Hold M + Corresponding key	/	Enable/Disable trigger mode. *Trigger mode: when pressing, the LT/RT button, the Home Indicator will stay solid white. *The setup will be saved after reboot.
Adjust vibration intensity	Hold M + Corresponding key	/	Vibration Mode: Level 1: 100% vibration; Level 2: 75% vibration; Level 3: 50% vibration; Level 4: 25% vibration; Level 5: 0% vibration (default). *The setup will be saved after reboot.
Adjust volume	Hold M + Corresponding key	/	Increase/Decrease volume. *Volume is not adjustable in G-Touch and OS4 mode.
Reset	Hold M + Corresponding key	/	After the controller vibrates, the controller functions will be restored to factory settings. *After clearing the function settings, you will need to reconfigure the settings.

CHARGING
1.Only the light battery changes when the controller is in the stretched state.
2.The light will turn off automatically when the battery is fully charged.
*The controller does not automatically power off when halted during charging.
*In charging mode, the Mode Indicator breathes to indicate the current battery level.

A/B, X/Y BUTTON POSITIONS CAN BE SWAPPED
1.With the controller power off, hold M+Y/X to enter the interchange of button functions, and the Home Indicator will blink yellow rapidly.
2.Press the Y button on the left side of A/B/X/Y keycaps, there is a mechanical sound, the Home Indicator will blink green rapidly, and the A/B/X/Y keycap out from the left groove.
3.With the removed keycap, position the A/B/X/Y label facing upwards.
4.Insert the keycap into the right groove, there's label position and put it in, and the installation is completed.
*There are two layouts available: Xbox button layout (Up: Y, Left: X, Down: A, Right: B) and Nintendo button layout (Up: X, Left: Y, Down: B, Right: A).
*The default layout is the Xbox button layout.

STICKS & TRIGGERS CALIBRATION
1.Connect your phone to the controller, then hold Ⓛ+Ⓡ+Ⓐ buttons for 3s until the Home Indicator and Mode Indicator blink white slowly, indicating that the calibration mode is entered.
2.Slowly push the joysticks and pull the triggers to their maximum range.
3.Rotate the sticks at their maximum angles 3 times and then return them to the initial position naturally.
4.Press the triggers to their maximum travel 3 times and let them return to their initial position naturally.
5.Press Ⓐ button to save the calibration and exit the calibration mode.
*Calibration should be kept at a constant speed and gentle operation to avoid errors while collecting data.
*If the sticks and triggers can be used normally, please do not calibrate.

GYROSCOPE CALIBRATION
1.Ensure the controller is connected to a mobile phone, then hold Ⓛ+Ⓡ+Ⓐ buttons. The Home Indicator will rapidly flash red and blue and it returns to the mode indicator, indicating that the calibration is complete.

CUSTOMIZATION VIA GAMESIR APP
1.Download the GAMESIR app from the App Store or Google Play, or scan the QR code below to download the app. Enter the app and follow the prompts to complete the firmware upgrade, sticks & triggers zones adjustment, vibration intensity adjustment, button mapping, etc.

⚠ PLEASE READ THIS PRECAUTIONS CAREFULLY
1. Avoid heavy drops, impacts, crush, or bending of the controller under the age of 3. Seek immediate medical attention if swallowed or inhaled.
2. DO NOT disassemble, repair, or modify.
3. DO NOT expose to direct sunlight or high temperatures.
4. DO NOT leave the product in a humid or dusty environment.
5. DO NOT immerse the product in water. Keep it dry (full due to strong impact).
6. DO NOT use USB port directly on a laptop cause malfunctions.
7. DO NOT strongly bend or pull cable ports.
8. DO NOT use chemicals.
9. DO NOT use chemicals such as gasoline or thinner.
10. DO NOT disassemble, repair or modify.
11. Only use the accessories from the original purpose. We are NOT responsible for accidents or damages caused by improper use or modification.
12. DO NOT look directly at the optical light. It might damage your eyes.
13. You have any quality concerns or suggestions, please contact Gamelir or your local distributor.

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION
WASTE DISPOSAL OF THE PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)
(Applicable in countries that have adopted separate collection systems for waste electrical products)
This mark on the product or accompanying documents means that it should not be mixed with other household waste at the end of its life cycle. To prevent harm to human health and the environment, dispose of this product in designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent product. Dispose of waste electrical products in accordance with local regulations. Improper disposal may potentially negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer from which they purchased this product or their local government office for details of the place and manner in which they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product is treated in accordance with environmental protection legislation. Recycling thereby preserving natural resources and the environment and human health.

DECLARATION OF CONFORMITY
FC
FCC STATEMENT
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio or TV technician for help.
This equipment complies with FCC RF Exposure guidelines. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. Use only the supplied antenna.
CE
STATEMENT OF COMPLIANCE WITH EU DIRECTIVE
Hereby, Guangzhou Chicken Run Network Technology Co., Ltd. declares that this GameSir G8+ Controller is in compliance with Directive 2014/30/EU, 2014/53/EU & 2011/65/EU and its amendment (EU) 2015/863.

日本語

[電子マニュアル]
https://www.gamesir.hk/pages/manuals-gamesir-galileo

パッケージ内容
GAMESIR Galileo+ ワイヤレスモバイルゲームコントローラー × 1 マグネットフォンホルダー × 1 ラウンドスティック × 1
Pro Type-C ケーブル × 1 ユーザーマニュアル × 1 感謝&アフターサービスカード × 1
Pro Type-C アダプター × 1 保証情報 × 1

互換性
iOS デバイスおよび Android デバイスに対応
Bluetooth に対応

デバイスのレイアウト

電源オン/電源オフ
電源オン：3 秒間長押しして、電源をオンにします。
電源オフ：3 秒間長押しして電源をオフにします。
自動電源オフ：コントローラーを畳んだ状態で、コントローラーは自動的にオフになります。
ただし、G-Touch モードでは、コントローラーは接続されたままになります。

接続状態示す
接続状態示す	ホームインジケーター	説明
ペアリング状態	赤の点滅	ペアリングが有効に表示時、コントローラーは Bluetooth 機能を通してのみペアリングすることができます。
接続完了	点灯	接続されました。
再接続状態	緑の点滅	接続状態の時、コントローラーは接続されたデバイスにのみ接続することができます。2 秒間ペアリングボタンを長押しすると、ペアリングモードに強制的に変更されます。

モード説明
モード	ホームインジケーター	接続方法	互換性あるのプラットフォーム
Android	黄色	Bluetooth	Android 8.0 and 以上
OS4	青	Bluetooth	Android / iOS
Switch	赤	Bluetooth	Switch/iOS
G-Touch	青緑	Bluetooth	Gamelir アプリ

*動作しているモードで、必要なキーの組み合わせを押して、モードを切り替えます。
*Android モードで OS 4 に接続できたら、デフォルトの色が淡いオレンジに変わります。

ANDROID デバイスを BLUETOOTH を通して接続
1.コントローラーの電源がオフの状態で、Ⓛ+Ⓡ を押して、電源をオンにします。ホームインジケーターが黄色の点滅になります。
2.Android デバイスのホーム画面から、"Gamelir-G8+" を選択してペアリングに接続します。
3.コントローラーホーム インジケーターが黄色に点灯すると、ペアリングが成功したことを示します。
*接続が完了した後、電源がオフになった時に電源ボタンを押すと、電源をオンにして自動的に再接続します。

IOS デバイスを BLUETOOTH を通して接続
1.コントローラーの電源がオフの状態で、Ⓛ+Ⓡ を押して、電源をオンにします。ホームインジケーターが青色の点滅になります。
2.iOS デバイスの Bluetooth リストに移動し、"Gamelir-G8+" を選択してペアリングに接続します。
3.ホーム インジケーターが淡オレンジ色に点灯すると、ペアリングが成功したことを示します。このモードでは、iOS デバイスのコントローラー設定で、ホーム インジケーターの色を変更することができます。最大 1600 万色をサポートします。
*接続が完了した後、電源がオフになった時に電源ボタンを押すと、電源をオンにして自動的に再接続します。

G-TOUCH 互換のゲームをプレイするには BLUETOOTH を通して接続します
1.コントローラーの電源がオフの状態で、Ⓛ+Ⓡ を押して、電源をオンにします。ホーム インジケーターが緑色の点滅になります。
2.Android デバイスの Bluetooth リストに移動し、"Gamelir-G8+" を選択してペアリングに接続します。
3.ホーム インジケーターが緑色に点灯すると、ペアリングが成功したことを示します。
*接続が完了した後、電源がオフになった時に電源ボタンを押すと、電源をオンにして自動的に再接続します。

BLUETOOTH を通して SWITCH に接続する
1.Switch のホーム メニューに移動し、"コントローラー" - "グリップ/オーダーを変更する" を選択してペアリングインターフェイスを開きます。
2.コントローラーの電源がオフの状態で、Ⓛ+Ⓡ を押して電源をオンにします。ホーム インジケーターが赤色の点滅になります。
3.ホーム インジケーターが赤色に点灯すると、ペアリングが成功したことを示します。
*接続が完了した後、電源がオフになった時に電源ボタンを押すと、電源をオンにして自動的に再接続します。

デバイスに有線接続
1.Type-C ポートをデバイスに接続すると、コントローラーはデバイスを認識します。
2.デバイスに接続した後、コントローラーは自動的に対応するモードに切り替わります。ホーム インジケーターは、Android の場合は黄色、OS 4 の場合は青色、Switch の場合は赤色で表示されます。
*Switch デバイス：ケーブルを使用して Switch に接続した後、"設定" - "コントローラーとセンサー" - "Pro コントローラーの有線通信" をオンにしてください。
*レシーバーおよび有線モードのみ対応。

バック ボタンの設定

対応するボタンは：A/B/X/Y/LB/RB/LT/RT/L3/R3/D-pad(↑/←/→/↓)

①マッピングの割当可：キーボードレイアウトキーが1つのみに設定されます。(↑←→↓) キーが3つ、D-PAD(↑←→↓) キーが1つ、LT/RT キーが1つ、L3/R3 キーが1つ。
1.まず、キーボードレイアウトの M キーを長押しします。ホーム インジケーターが 2 回点滅するまで、M キーを離します。次に、マッピングする必要があるボタンを同時に押してから、LEN キーを押します。ホーム インジケーターが対応する光に戻ったら、LEN キーの値が設定されます。キーコンビネーションの設定では、各キーを押すまでの間隔は 1 秒以内、合計時間は 3 秒以内である必要があります。
②LEN キーの値をリセットする：キーボードレイアウトの M キーを長押しします。ホーム インジケーターが白色でゆっくり点滅するまで、LEN キーを押します。ホーム インジケーターが対応する光に戻ったら、LEN キーの値がリセットされます。
*最大 8 つのボタンを設定して、単一のキーまたは複数のボタンをトリガーすることができます。
*設定は即時有効です。操作が完了した時点で、コントローラーは自動的に設定モードを終了します。

ターボ機能設定
*推奨値：5-8 回/秒 (5T-8T) ターボ。
4 段階調整：低速ギア 3Hz、中速ギア 5Hz、高速ギア 8Hz、超速ギア 12Hz。各ギアは 3 種類のターボモードに設定可能：シングル プレス、ダブル プレス、ホールド。
1.ターボ機能はボタンを押すと自動的にオンになります。
2.ターボ機能ギア：ホーム ボタンをダブルクリックすると、すべてのターボ設定がキャンセルされます。ホーム インジケーターは 2 回緑色に点滅し、操作が正常に完了したことを示します。

キーの組み合わせ
機能	操作	モード	説明
ボタンの値を入力	M + 対応するキー	/	対応するレイアウトとボタンの値を交換します。 *A/B、X/Y の値を交換します。 *リセットされた後、設定は保存されます。
モードを切り替える	M + 対応するキー	/	有効/無効。 *トリガー モード：トリガー モードを有効にすると、LT/RT ボタンを押すと、ホーム インジケーターは白色の点灯のままになります。 *設定はリセットされた後、保存されます。
振動強度を調整	M + 対応するキー	/	振動モード：レベル 1：100% 振動；レベル 2：75% 振動；レベル 3：50% 振動；レベル 4：25% 振動；レベル 5：0% 振動（デフォルト）。 *リセットされた後、設定は保存されます。
音量を調整	M + 対応するキー	/	音量を上げる/下げる。 *G-Touch 下 OS 4 モードでは調整できません。
リセット	M + 対応するキー	/	コントローラーが振動した後、コントローラーを機能の工場設定に戻します。 *機能設定をクリアした後、設定を再度設定する必要があります。

充電
1.コントローラーが伸ばした状態の時、光の変化しか表示されません。
2.充電が完了すると、ライトは自動的に消灯します。
*コントローラーが充電中に自動的にシャットダウンすることはありません。
*充電モードでは、モード インジケーターが呼吸の色を表示します。

A / B、X / Y ボタン位置が入れ替わる
1.コントローラーの電源がオフの状態で、M+Y/X を押してボタンの機能を切り替えます。ホーム インジケーターが黄色の点滅になります。
2.コントローラー左側の面のキーキャップの Y ボタンを押します。メカニカルサウンドがあります。ホーム インジケーターが緑色の点滅になります。A/B/X/Y キーキャップが溝から出ます。
3.キーキャップを取り外したら、A/B/X/Y ラベルを上向きに配置します。
4.キーキャップを右側の溝に挿入します。ラベルの位置を調整し、キーキャップを所定の位置に固定します。インストールが完了します。
*利用可能なレイアウトは 2 つあります：Xbox ボタン レイアウト (上: Y、左: X、下: A、右: B) と Switch ボタン レイアウト (上: X、左: Y、下: B、右: A)。
*デフォルトでは Xbox ボタン レイアウトです。

スティックとトリガーのキャリブレーション
1.コントローラーを電源に接続します。Ⓛ+Ⓡ+Ⓐ ボタンを 3 秒間長押しします。ホーム インジケーターとモード インジケーターがゆっくりと点滅し、キャリブレーション モードに入ったことを示します。
2.ジョイスティックをゆっくりと最大限まで押し、トリガーを最大限まで引きます。
3.スティックを最大角度で 3 回回転させ、自然に初期位置に戻します。
4.トリガーを最大限まで 3 回押し、自然に初期位置に戻します。
5.Ⓐ ボタンを押してキャリブレーションを保存し、キャリブレーション モードを終了します。
*キャリブレーションは、常に一定速度で操作する必要があります。エラーを防ぐため、ゆっくりと操作してください。
*スティックとトリガーが正常に動作する場合は、キャリブレーションを行わないでください。

ジャイロスコープの補正
1.コントローラーを携帯電話に接続します。Ⓛ+Ⓡ+Ⓐ ボタンを長押しします。ホーム インジケーターが赤と青の点滅になり、モード インジケーターに戻ります。これは、キャリブレーションが完了したことを示します。

GAMESIR アプリを通じたカスタマイズ
1.App Store または Google Play からダウンロードするか、以下の QR コードをスキャンしてアプリをダウンロードします。アプリを開いてプロンプトに従ってファームウェアのアップグレード、スティックとトリガーのゾーンの調整、振動強度の調整、ボタンのマッピングなどを完了します。

⚠ ご安全上の注意点をよくお読みください
1. 3 歳未満の方はコントローラーを強く落としたり、圧迫したり、曲がったりしないでください。誤って飲み込んだり吸い込んだりした場合は、直ちに医療機関を受診してください。
2. 分解、修理、改造しないでください。
3. 直射日光や高温にさらしないでください。
4. 湿気や埃の多い環境に製品を放置しないでください。
5. 製品を水に浸けないでください。（強い衝撃による防水性の低下のため、乾燥させてください。）
6. USB ポートを直接ノートパソコンに接続しないでください。誤作動の原因となる可能性があります。
7. ポートを強く曲げたり、引っ張ったりしないでください。
8. 化学薬品を使用しないでください。
9. ガソリンやシンナーなどの化学薬品を使用しないでください。
10. 分解、修理、改造しないでください。
11. 本来の目的以外の用途でアクセサリーを使用しないでください。誤用や改造による事故や損傷については、当社は責任を負いません。
12. 光学ライトを直接見ないでください。目を傷つける可能性があります。
13. 品質に関するご意見やご提案がある場合は、Gamelir または現地の販売代理店にご連絡ください。

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION
WASTE DISPOSAL OF THE PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)
(Applicable in countries that have adopted separate collection systems for waste electrical products)
この製品または製品に付属するドキュメントに記載されているこのマークは、ライフサイクルの終了時に他の家庭ごみと混ぜてはいけないことを意味します。人の健康や環境に悪影響を及ぼすリスクを防ぐために、この製品を指定された回収ポイントで処分してください。指定された回収ポイントでは、無料で受け入れられます。あるいは、一部の国では、購入時に同等の製品を販売する小売業者に製品を返品することもできます。廃電気製品は、地元の規制に従って処分してください。不適切な廃棄は、人の健康や環境に潜在的に悪影響を及ぼす可能性があります。家庭ユーザーは、この製品を購入した小売業者または地方政府のオフィスに連絡して、この製品を安全にリサイクルする場所や方法の詳細を確認する必要があります。ビジネス ユーザーは、サプライヤーに問い合わせる必要があります。これを行うことで、廃棄された製品が環境保護法に従って処理されることが保証されます。リサイクルにより、天然資源と環境、人間の健康が保護されます。

DECLARATION OF CONFORMITY
CE
ЕС ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ
С настоящото Guangzhou Chicken Run Network Technology Co., Ltd. декларира, че GameSir G8+ Controller е в съответствие с Директива 2014/30/ЕС, 2014/53/ЕС и 2011/65/ЕС и нейната поправка (ЕС) 2015/863.

한국어

[전자 설명서]
https://www.gamesir.hk/pages/manuals-gamesir-galileo

제품 구성
GAMESIR Galileo+ 무선 모바일 게임 컨트롤러 × 1 자석 폰 홀더 × 1 라운드 조이스틱 × 1
Pro Type-C 케이블 × 1 사용자 설명서 × 1 감사합니다 & 애프터 서비스 카드 × 1
Pro Type-C 어댑터 × 1 보증 정보 × 1

호환성
iOS 및 Android 장치 지원
Bluetooth 지원

장치 레이아웃

전원 켜기/전원 끄기
전원 켜기: 3 초 동안 길게 누르십시오.
전원 끄기: 3 초 동안 길게 누르십시오.
자동 전원 끄기: 컨트롤러를 접으면 컨트롤러가 꺼집니다. 그러나 G-Touch 모드에서는 연결된 채로 있습니다.

연결 상태
연결 상태	Home 표시등	설명
페어링 상태	빠르게 깜빡임	페어링 상태에서는 컨트롤러가 블루투스 기능을 통해서만 페어링할 수 있습니다.
연결 완료	켜짐	장치 연결됨.
재연결 상태	느리게 깜빡임	재연결 상태에서는 장치 마지막에 연결된 장치만 연결할 수 있습니다. 페어링 버튼을 2 초 동안 길게 누르면 페어링 상태로 강제 전환될 수 있습니다.

모드 설명
모드	Home 표시등	연결 방법	호환 플랫폼
Android	노랑	Bluetooth	Android 8.0 이상 기기
OS4	파랑	Bluetooth	Android/iOS
Switch	빨강	Bluetooth	Switch/iOS
G-Touch	청록	Bluetooth	Gamelir 앱

*작동 상태에서 조합 키를 눌러 원하는 모드로 전환합니다.
*OS4 모드로 연결에 성공한 후 기본 색상이 밝은 주황색으로 바뀝니다.

블루투스로 ANDROID 기기 연결
1.컨트롤러 전원이 꺼진 상태에서 Ⓛ+Ⓡ 버튼을 눌러 전원을 켭니다. 홈 표시등이 노란색으로 빠르게 깜빡입니다.
2.모바일 장치의 블루투스 목록을 열고 "Gamelir-G8+" 를 선택하여 연결합니다.
3.홈 표시등이 노란색으로 켜지면 페어링이 성공했다는 것입니다.
*연결이 완료된 후 전원이 꺼진 상태에서 홈 버튼을 눌러 전원을 켜고 자동으로 재연결합니다.

블루투스로 IOS 기기 연결
1.컨트롤러 전원이 꺼진 상태에서 Ⓛ+Ⓡ 버튼을 눌러 전원을 켭니다. 홈 표시등이 파란색으로 빠르게 깜빡입니다.
2.iOS 장치의 블루투스 목록으로 이동하여 "Gamelir-G8+" 를 선택하여 연결합니다.
3.홈 표시등이 밝은 주황색으로 켜지면 페어링이 성공했다는 것입니다. 이 모드에서는 iOS 장치의 컨트롤러 설정에서 홈 표시등 색상을 변경할 수 있습니다. 최대 1600 만 색상을 지원합니다.
*연결이 완료된 후 전원이 꺼진 상태에서 홈 버튼을 눌러 전원을 켜고 자동으로 재연결합니다.

G-TOUCH 모드에서 블루투스 연결로 ANDROID 기기 연결
1.컨트롤러 전원이 꺼진 상태에서 Ⓛ+Ⓡ 버튼을 눌러 전원을 켭니다. 홈 표시등이 녹색으로 빠르게 깜빡입니다.
2.모바일 장치의 블루투스 목록으로 이동하여 "Gamelir-G8+" 를 선택하여 연결합니다.
3.홈 표시등이 녹색으로 켜지면 페어링이 성공했다는 것입니다.
*연결이 완료된 후 전원이 꺼진 상태에서 홈 버튼을 눌러 전원을 켜고 자동으로 재연결합니다.

블루투스로 SWITCH 연결
1.Switch 의 홈 메뉴로 이동하여 "컨트롤러" - "그립/순서 변경" 을 선택하여 페어링 인터페이스를 엽니다.
2.컨트롤러 전원이 꺼진 상태에서 Ⓛ+Ⓡ 버튼을 눌러 전원을 켭니다. 홈 표시등이 빨간색으로 빠르게 깜빡입니다.
3.홈 표시등이 빨간색으로 켜지면 페어링이 성공했다는 것입니다.
*연결이 완료된 후 전원이 꺼진 상태에서 홈 버튼을 눌러 전원을 켜고 자동으로 재연결합니다.

유선으로 기기 연결
1.Type-C 포트를 장치에 연결하면 컨트롤러가 장치를 인식합니다.
2.장치에 연결한 후 컨트롤러는 자동으로 해당 모드로 전환됩니다. 홈 표시등은 Android 의 경우 노란색, OS 4 의 경우 파란색, Switch 의 경우 빨간색으로 표시됩니다.
*Switch 장치: 케이블을 사용하여 Switch 에 연결한 후 "설정" - "컨트롤러 및 센서" - "Pro 컨트롤러 유선 통신" 을 켜십시오.
*리시버 및 유선 모드에서만 지원됩니다.

백 버튼 설정

지원되는 버튼: A/B/X/Y/LB/RB/LT/RT/L3/R3/D-pad(↑/←/→/↓)

①매핑 가능한 버튼: A/B/X/Y/LB/RB/LT/RT/L3/R3/D-pad(↑/←/→/↓)
LEN 버튼 값을 설정합니다: M 버튼을 동시에 눌러 홈/모드 표시등이 두 번 깜빡일 때까지 M 버튼을 유지한 다음 M 버튼을 놓습니다. 동시에 필요한 버튼을 누른 다음 LEN 버튼을 누릅니다. 홈/모드 표시등이 해당 조명으로 돌아오면 LEN 버튼 값이 설정됩니다. 키 조합 설정에서 각 버튼 누름 사이의 간격은 1 초 이내, 총 시간은 3 초 이내여야 합니다.
②LEN 버튼 값 재설정: M 버튼을 동시에 눌러 홈/모드 표시등이 흰색으로 천천히 깜빡일 때까지 유지한 다음 LEN 버튼을 누릅니다. 홈/모드 표시등이 해당 조명으로 돌아오면 LEN 버튼 값이 재설정됩니다.
*최대 8 개의 버튼 값을 트리거하는 단일 또는 여러 버튼을 LEN 에 매핑할 수 있습니다.
*버튼 설정은 즉시 적용됩니다. 컨트롤러는 작업이 일시 중지되지 않은 경우 설정 모드를 자동으로 종료합니다.

터보 기능 설정
*일반 권장 값: 5-8 회/초 (5T-8T) 터보.
4 단계 조절: 저속 기어 3Hz, 중속 기어 5Hz, 고속 기어 8Hz, 울트라 기어 12Hz. 각 기어는 3 개의 터보 모드로 설정할 수 있습니다: 싱글 프레스, 더블 프레스, 홀드.
1.터보 기능은 버튼을 누르면 자동으로 켜집니다.
2.기어 터보 기능: 홈 버튼을 두 번 클릭하여 모든 터보 설정을 제거합니다. 홈 표시등이 녹색으로 두 번 깜빡이면 작업이 성공적으로 완료되었음을 나타냅니다.

키 조합
기능	작동	모드	설명
키 값 변경	M + 해당 키	/	페이스 버튼 레이아웃 및 키 값을 교환합니다. *A/B, X/Y 키 값을 교환합니다. *리셋 후에 설정이 저장됩니다.
트리거 모드 전환	M + 해당 키	/	활성화/비활성화 트리거 모드. *트리거 모드: 누를 때 홈 표시등이 LT/RT 버튼을 누를 때 흰색으로 켜진 상태로 유지됩니다. *리셋 후에 설정이 저장됩니다.
진동 강도 조절	M + 해당 키	/	진동 모드: 레벨 1: 100% 진동; 레벨 2: 75% 진동; 레벨 3: 50% 진동; 레벨 4: 25% 진동; 레벨 5: 0% 진동 (기본값). *리셋 후에 설정이 저장됩니다.
볼륨 조절	M + 해당 키	/	볼륨 증가/감소. *G-Touch 및 OS4 모드에서는 볼륨을 조절할 수 없습니다.
리셋	M + 해당 키	/	컨트롤러가 진동한 후 컨트롤러 기능이 공장 설정으로 복원됩니다. *기능 설정을 지운 후 설정을 다시 구성해야 합니다.

충전
1.충전 중에는 밝기만 변합니다.
2.충전이 완료되면 조명이 자동으로 꺼집니다.
*컨트롤러는 충전 중 중단되는 경우 자동으로 꺼지지 않습니다.
*충전 모드에서 모드 표시등은 충전 레벨을 나타내기 위해 호흡합니다.

A/B, X/Y 버튼 위치를 전환할 수 있습니다
1.컨트롤러 전원이 꺼진 상태에서 M+Y/X 를 눌러 버튼 기능을 전환합니다. 홈 표시등이 노란색으로 빠르게 깜빡입니다.
2.왼쪽 A/B/X/Y 키캡의 Y 버튼을 누릅니다. 기계음이 있습니다. 홈 표시등이 녹색으로 빠르게 깜빡입니다. A/B/X/Y 키캡이 홈에서 나옵니다.
3.분리된 키캡을 위쪽을 향하도록 A/B/X/Y 레이블을 배치합니다.
4.키캡을 오른쪽 홈에 삽입하고 레이블 위치를 조정하고 제자리에 고정합니다. 설치가 완료되었습니다.
*사용 가능한 레이아웃은 2 개입니다: Xbox 버튼 레이아웃 (위: Y, 왼쪽: X, 아래: A, 오른쪽: B) 및 Nintendo 버튼 레이아웃 (위: X, 왼쪽: Y, 아래: B, 오른쪽: A).
*기본 레이아웃은 Xbox 버튼 레이아웃입니다.

스틱 및 트리거 조정
1.컨트롤러에 전원이 연결되면 Ⓛ+Ⓡ+Ⓐ 버튼을 3 초 동안 길게 누릅니다