












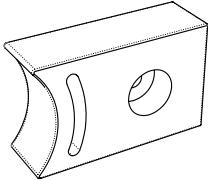

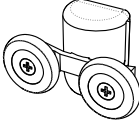


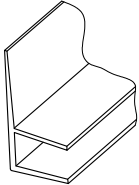



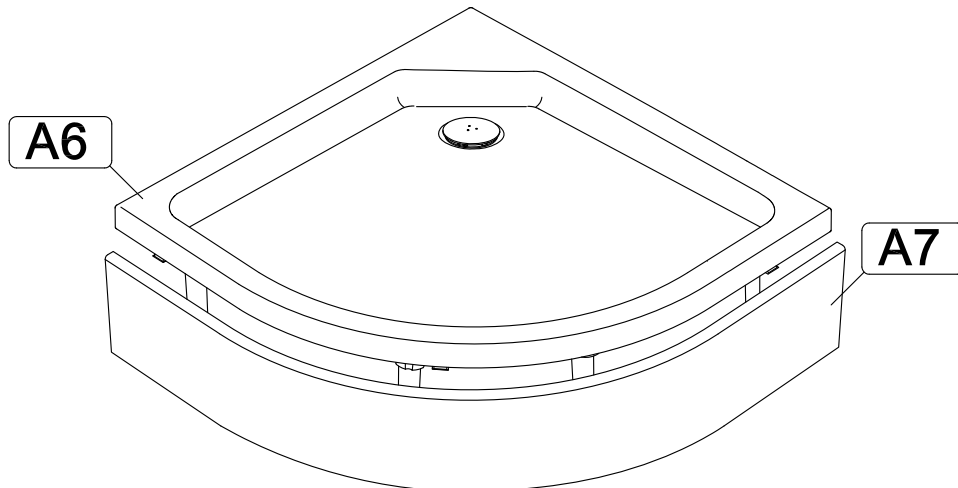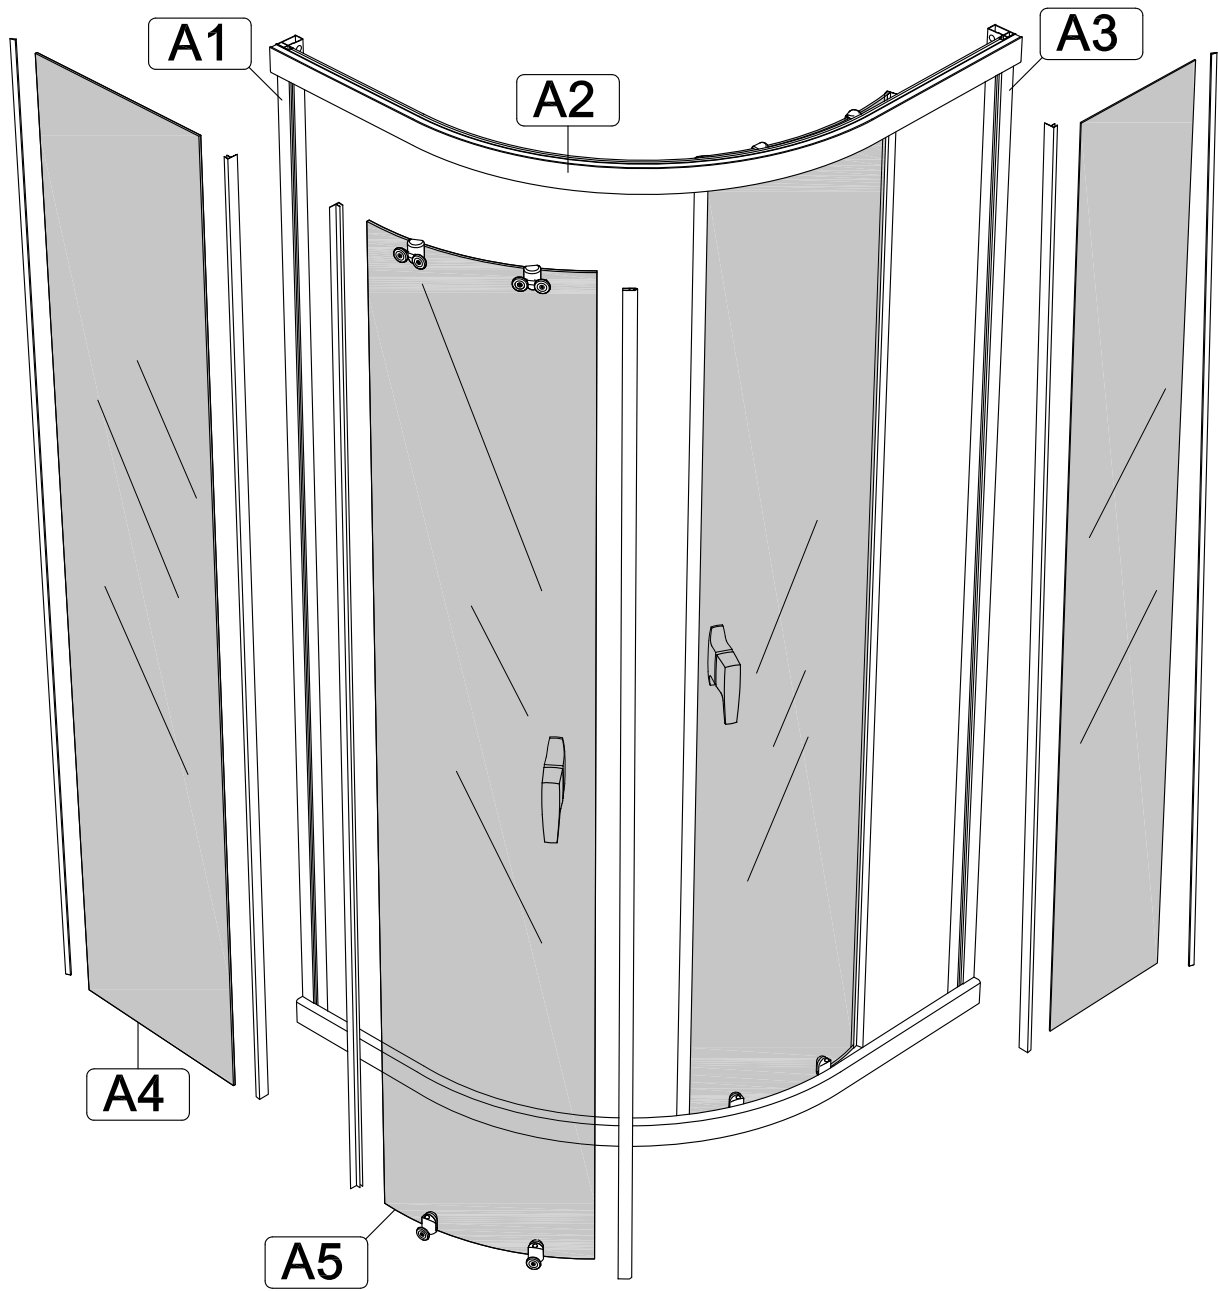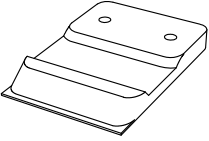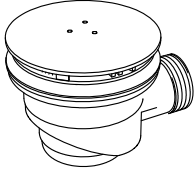

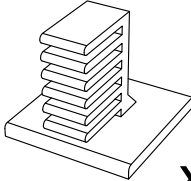










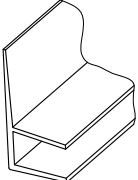
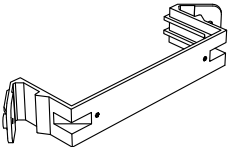
ГИДРУС



Инструкция по сборке
душевой кабины





B1  x3	B2  x6	B3  x1	B4  x2	B5  x2
B6 3.5x50  x2	B7 3.5x19  x10	B8 3.5x19  x30	B9 3.5x12  x8	B10 6x50  x2
B11  x10	B12  x4	B13  x4	B14  x4	B15  x4
B16  x2	B17  x4	B18  x2	B19  x2	B20  x1

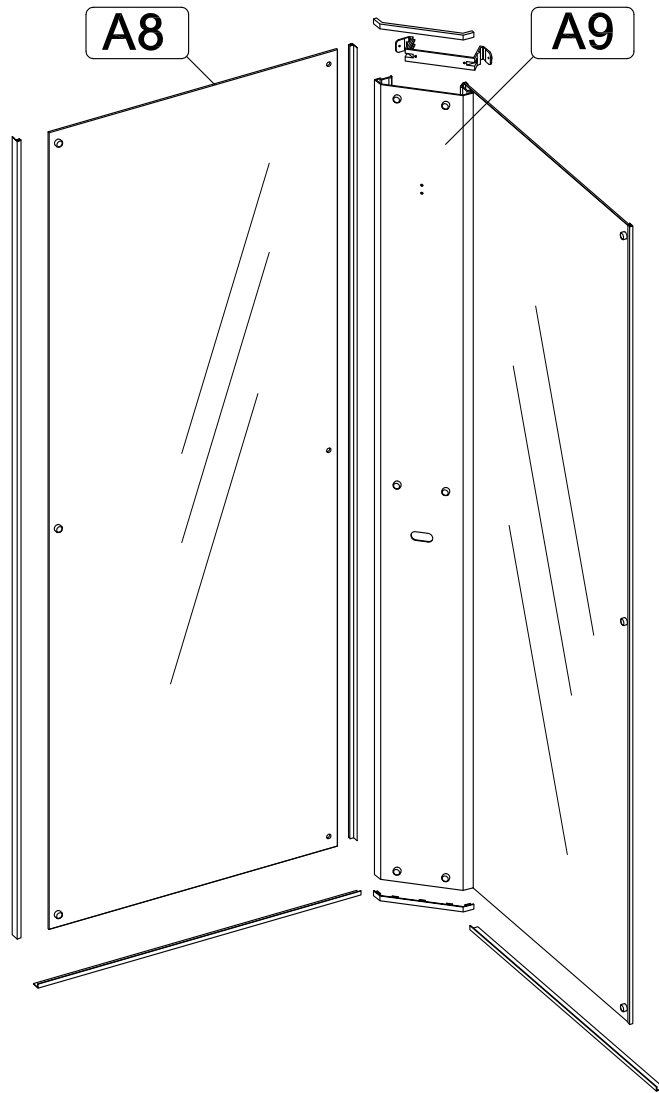

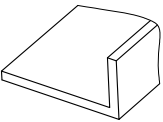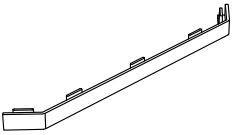B21  x2	B22  x2	B23  x12	B24  x12	B25  x6
B26 3.5x19  x12	B27 3.5x15  x6	B28 M3.5  x6	B29  x4	B30  x3

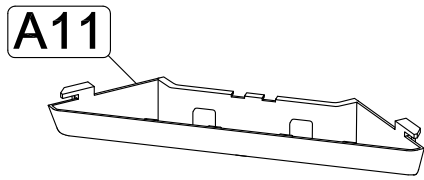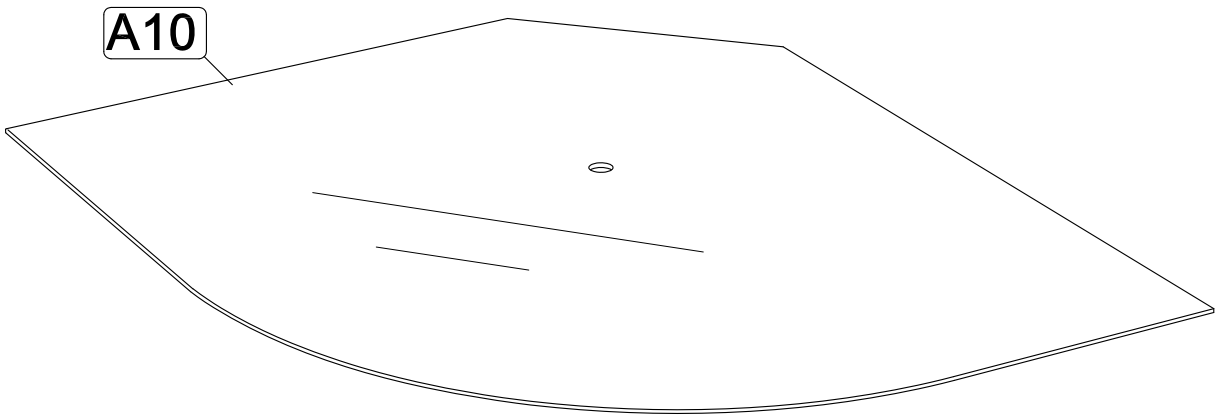

A6

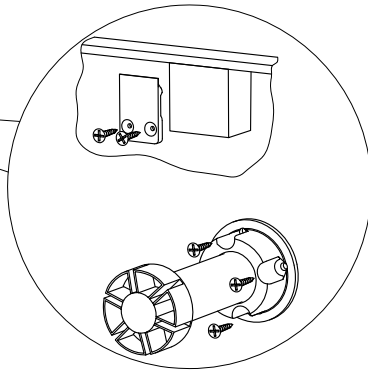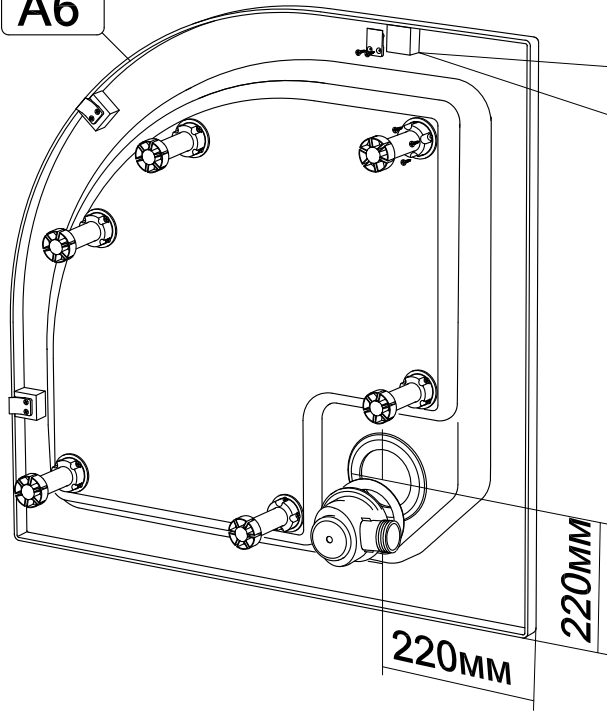


B1

B8

B2


B8

B3

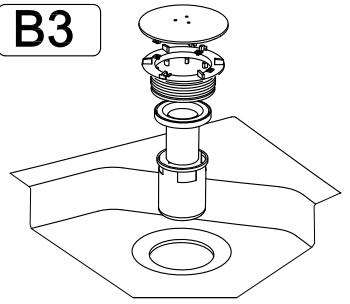



A6







A2

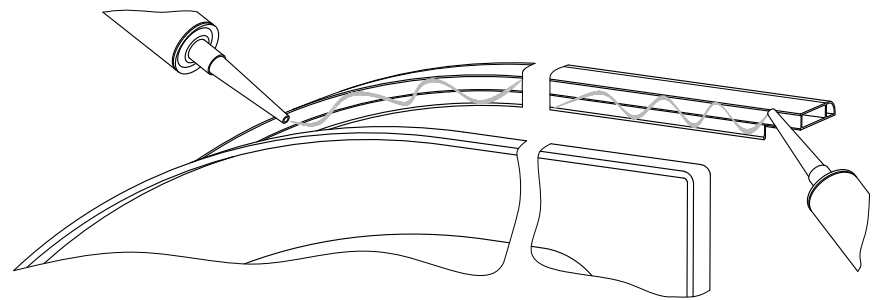


B5

B7

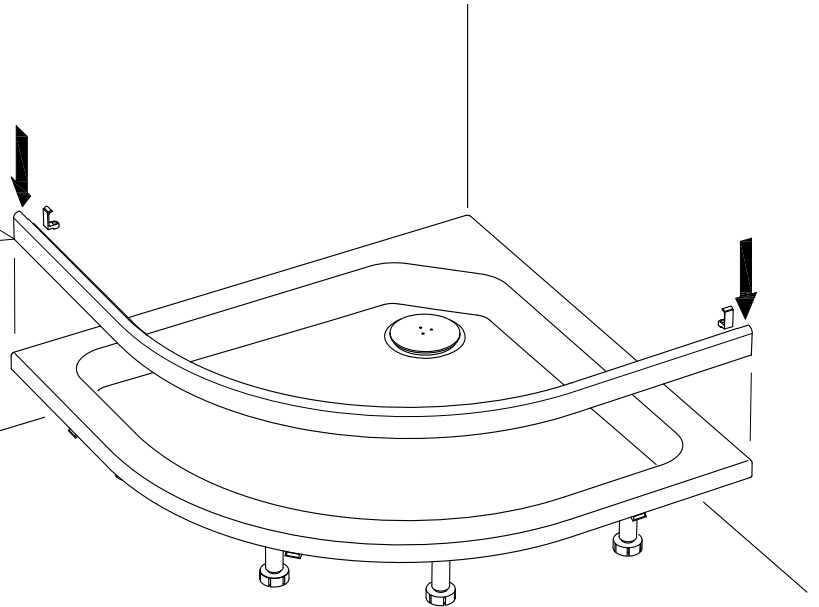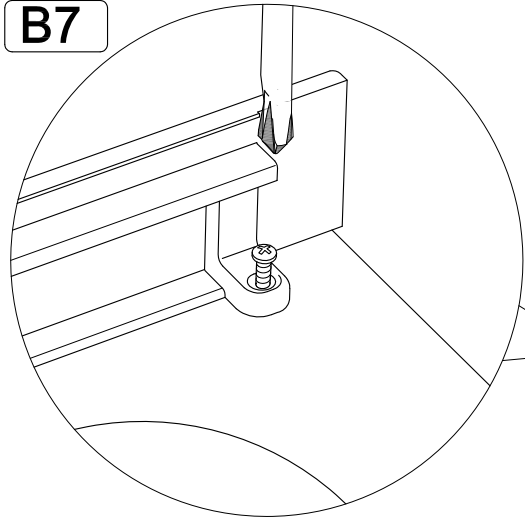

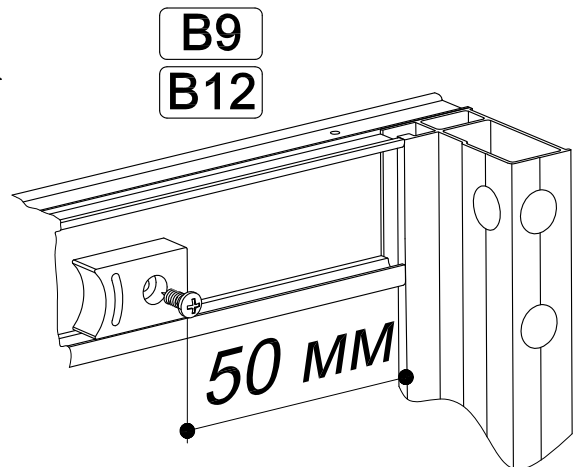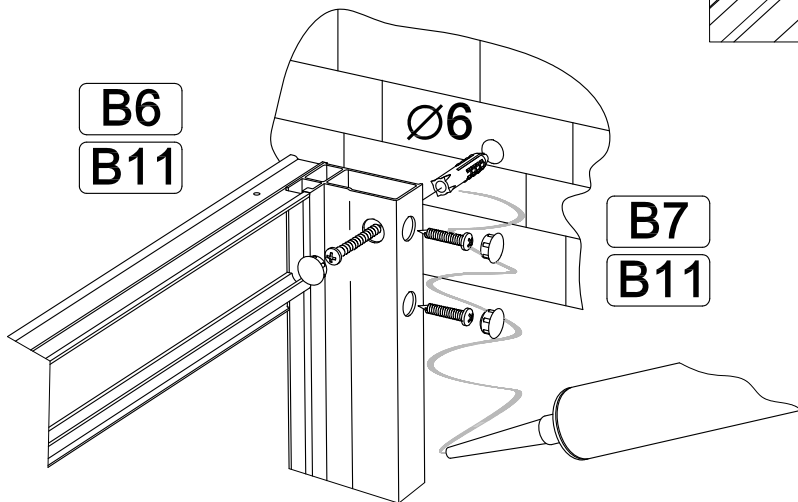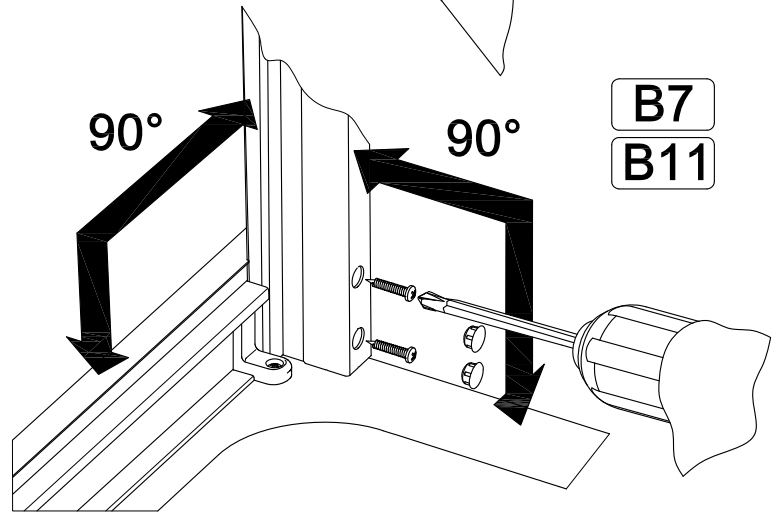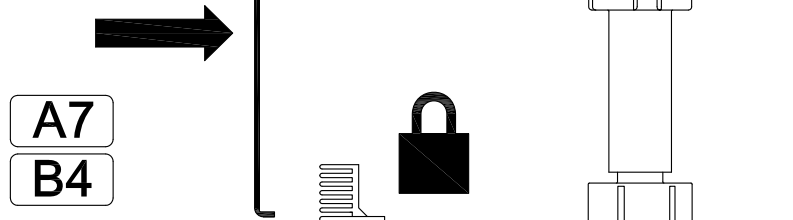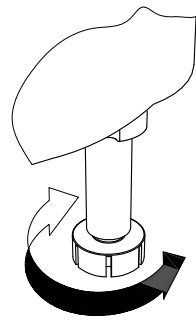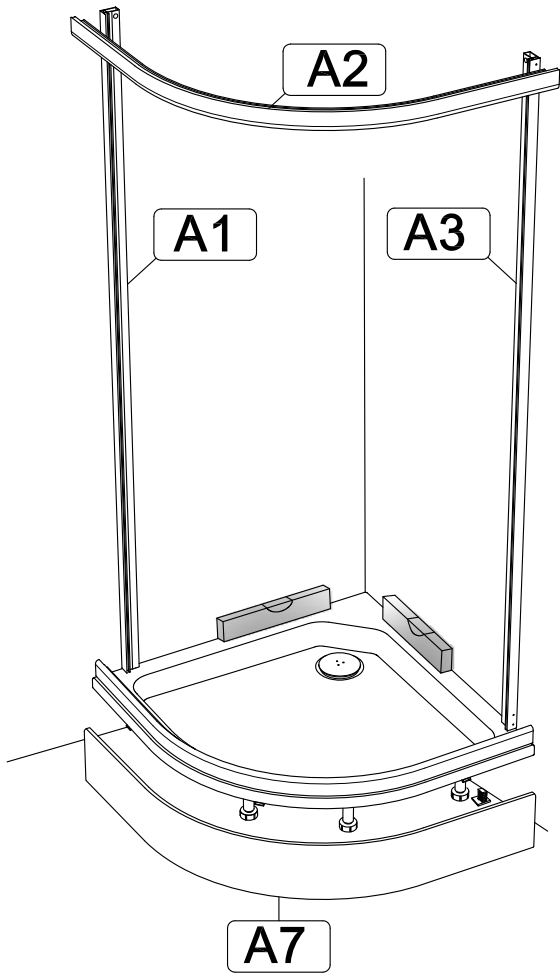

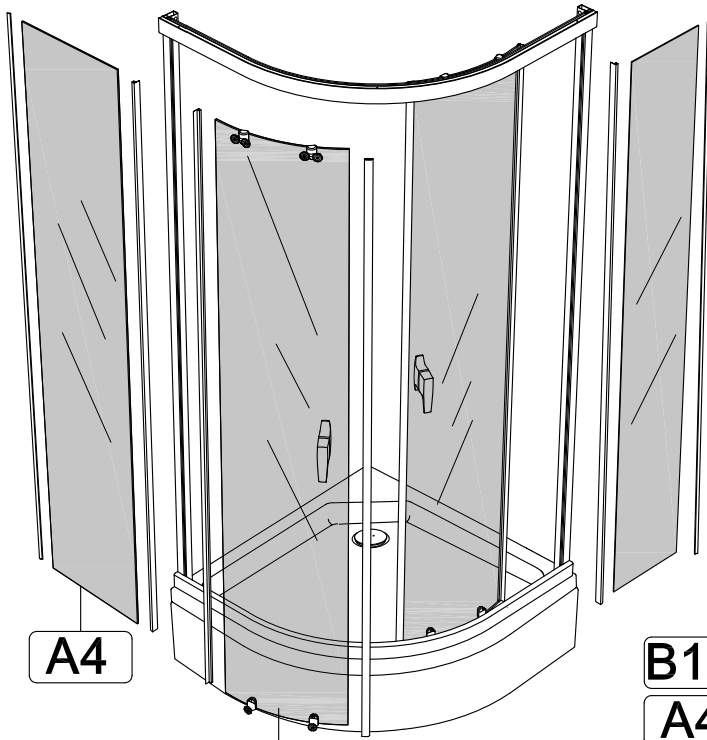

A4

A5



B17 ✂ L=1906

A4

B9


B13

B19

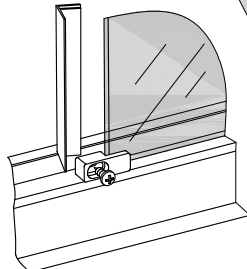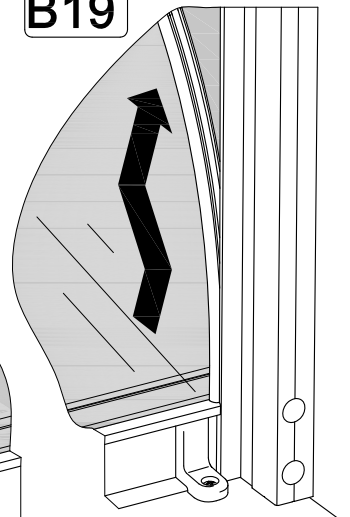


B17 ✂ L=1974

B14

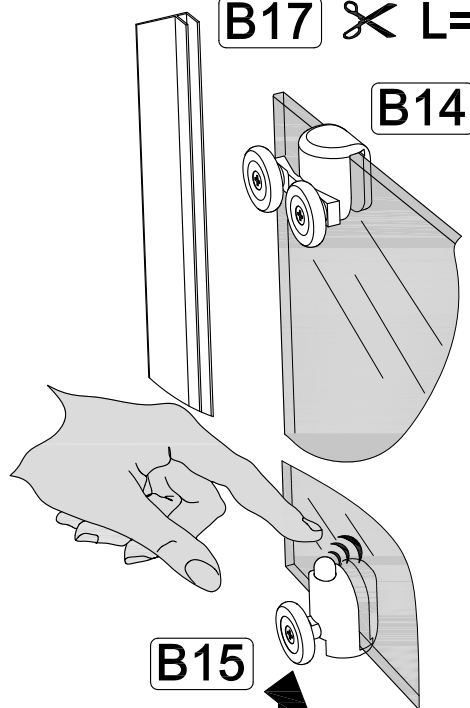


B15

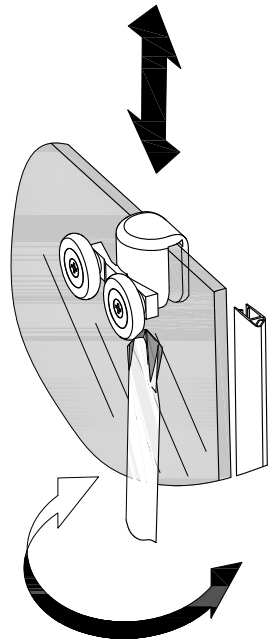

B18

A5

B9

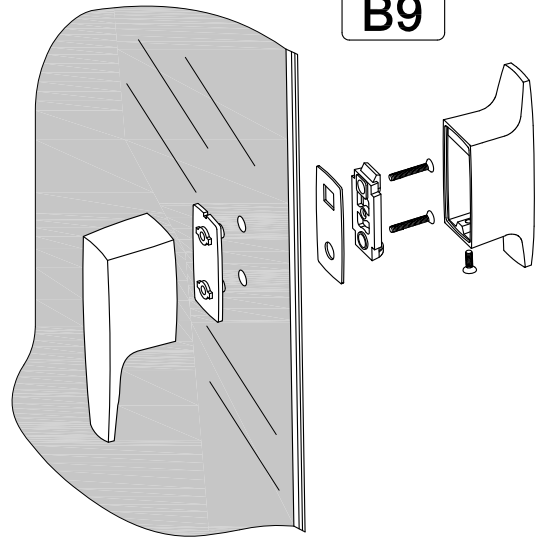

B9


1/2

1/2



B9

B12

B12


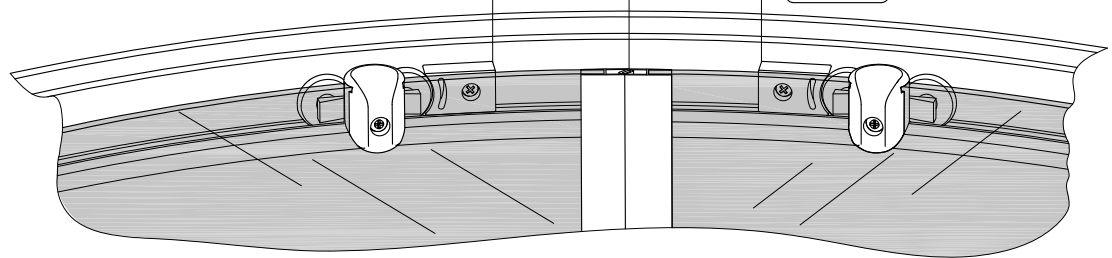




A8

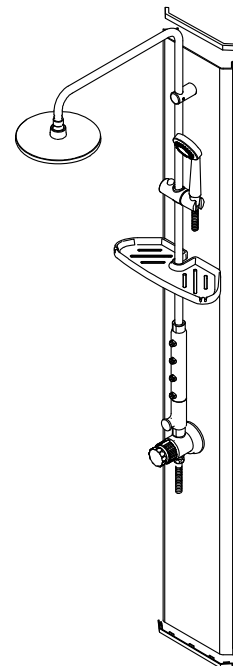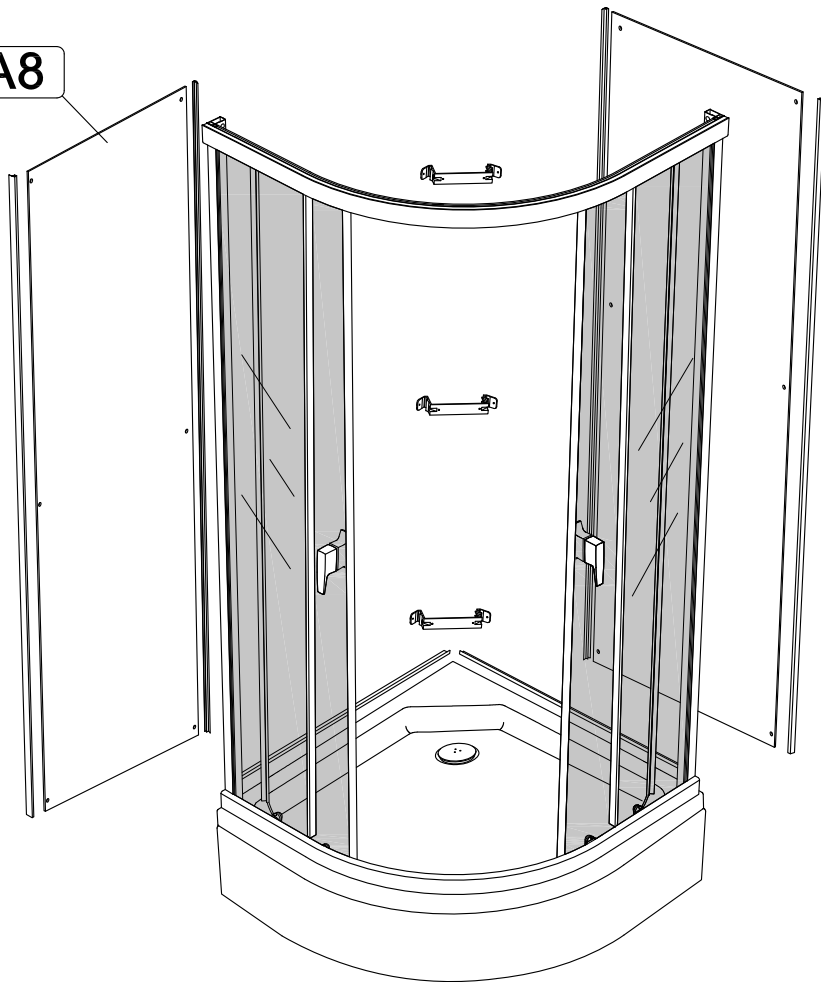

A9

B21

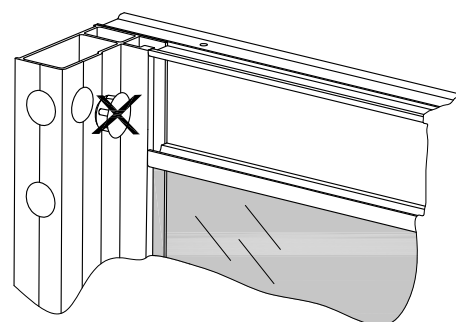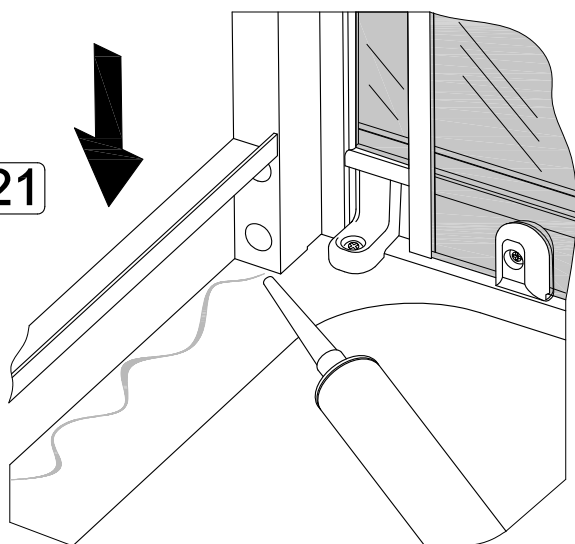


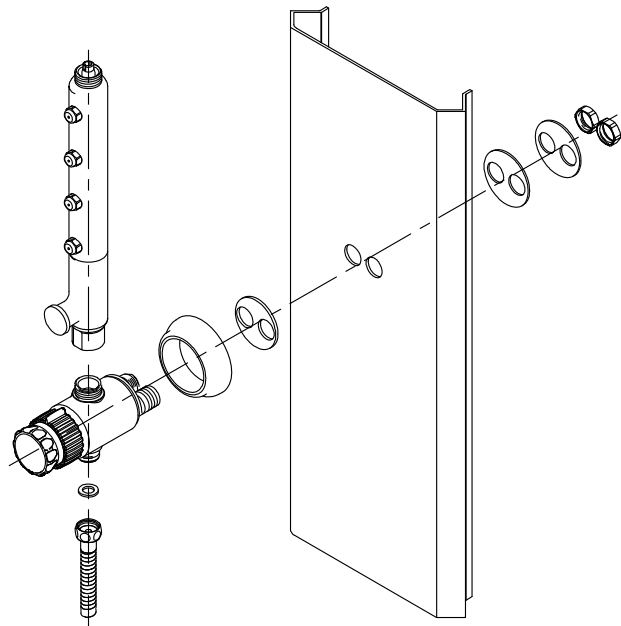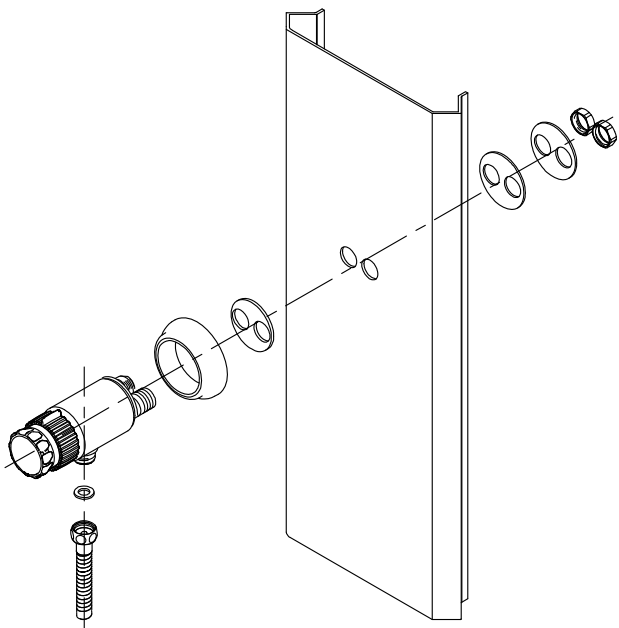


**ЭКО
B3005**

**СТАНДАРТ
B2005**


**ЛЮКС
B2005M**

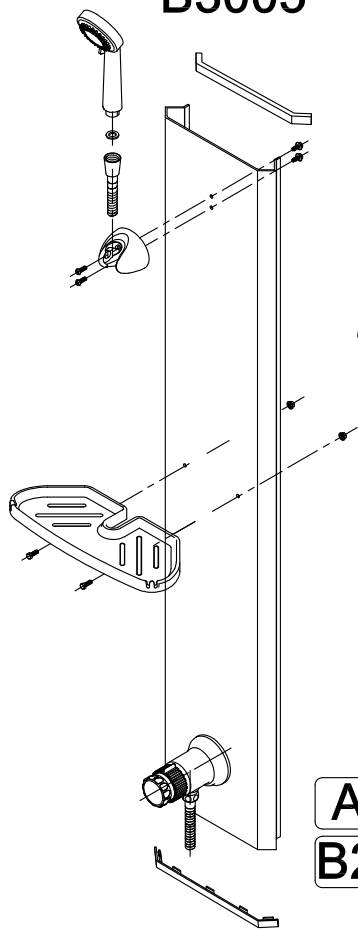


**A9
B22**

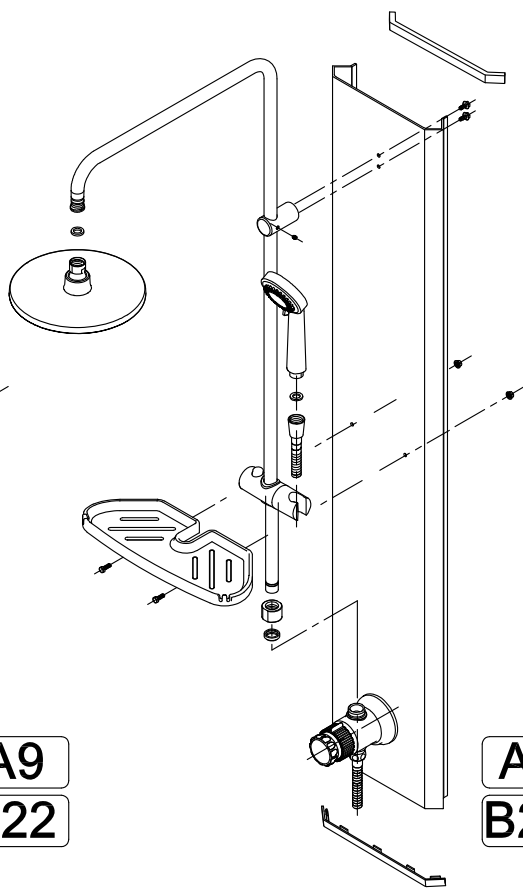


**A9
B22**

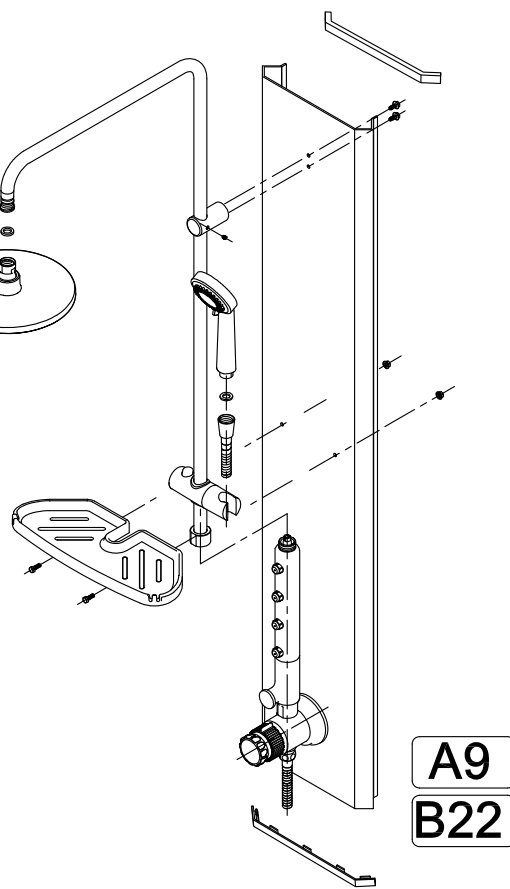


**A9
B22**

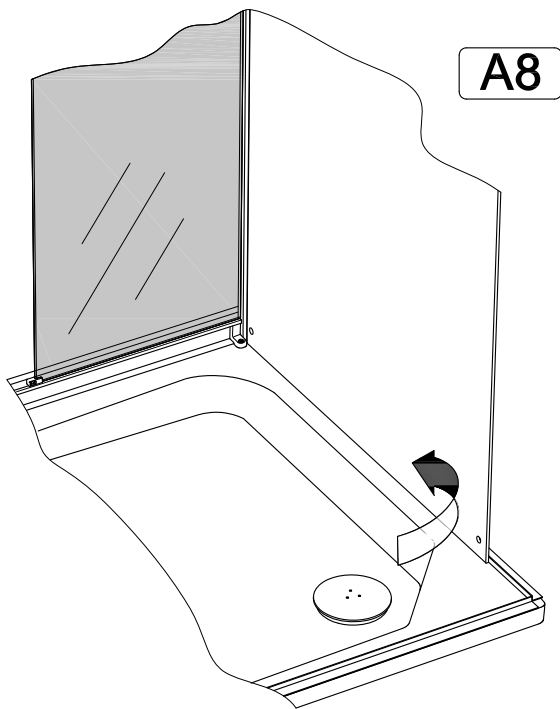


A8

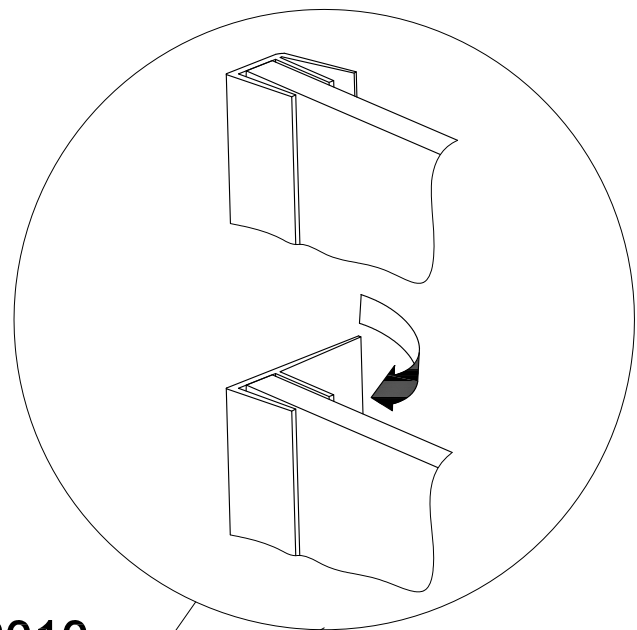

B29 ✂ L=2010

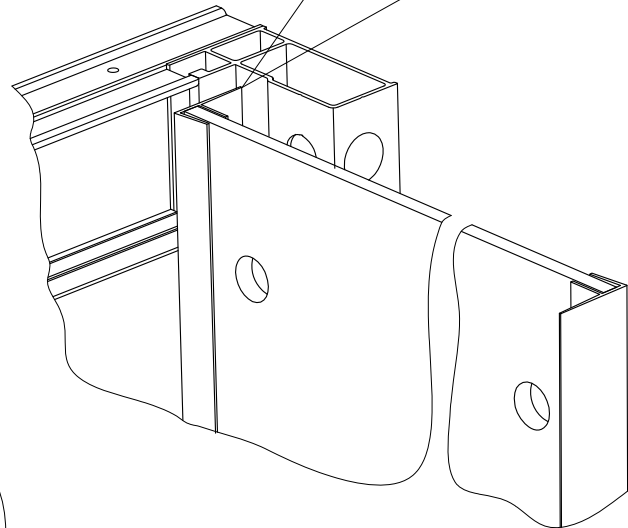




B23
B24
B26

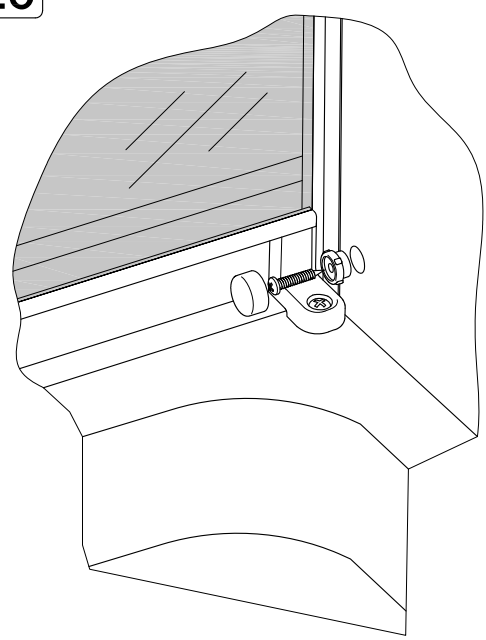


B29 ✂ L=1998

B24
B27
B28
B30




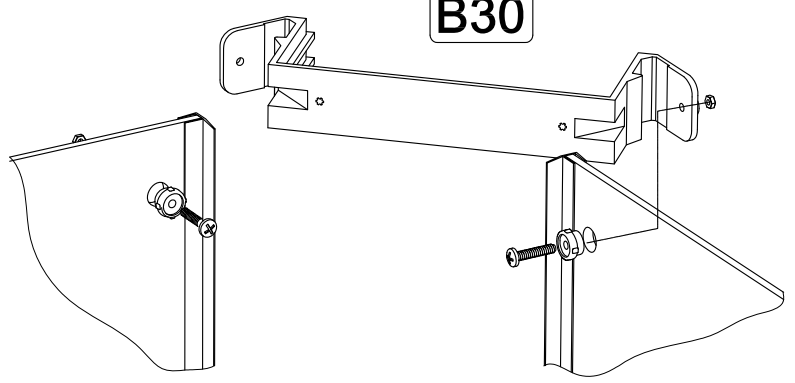


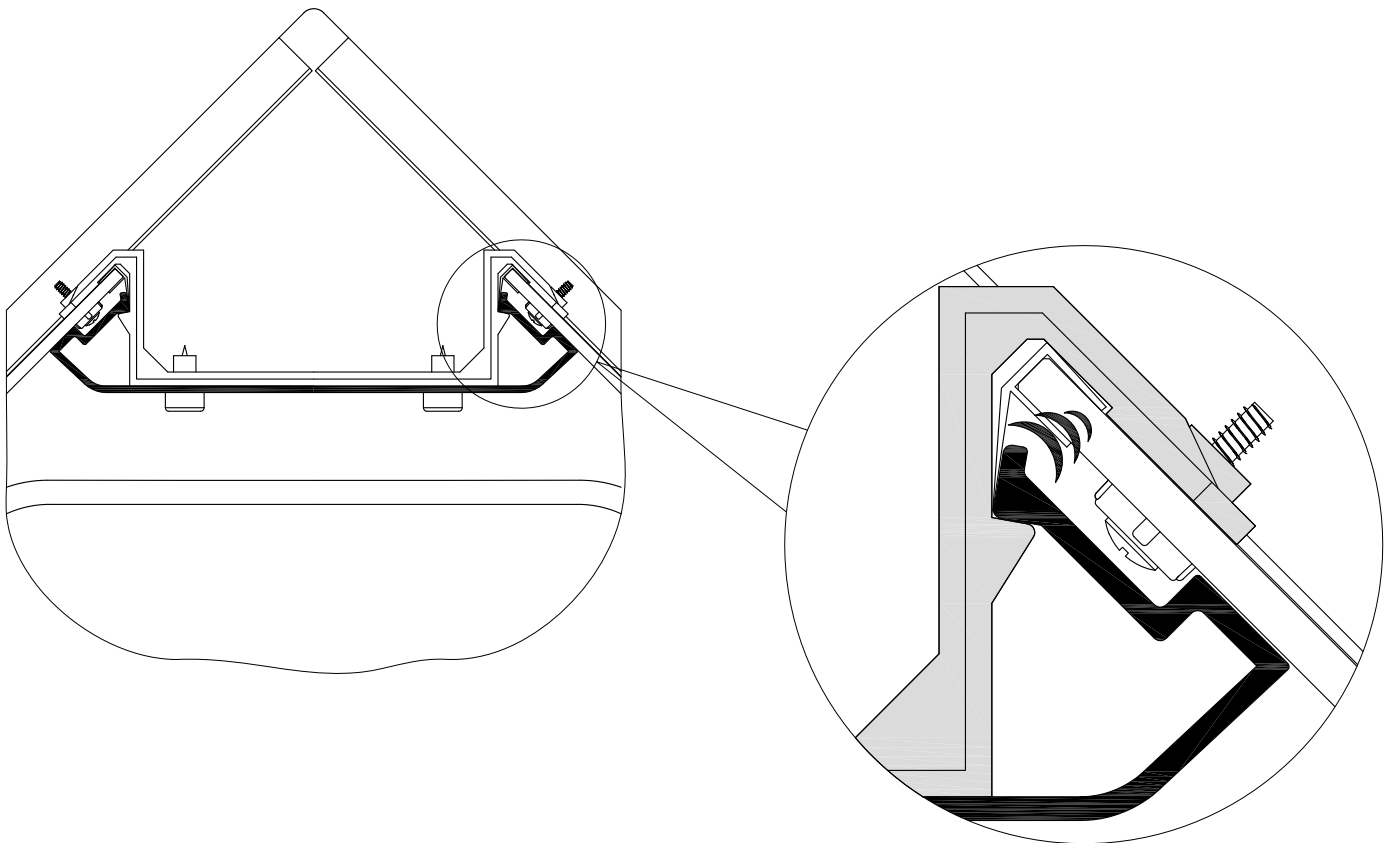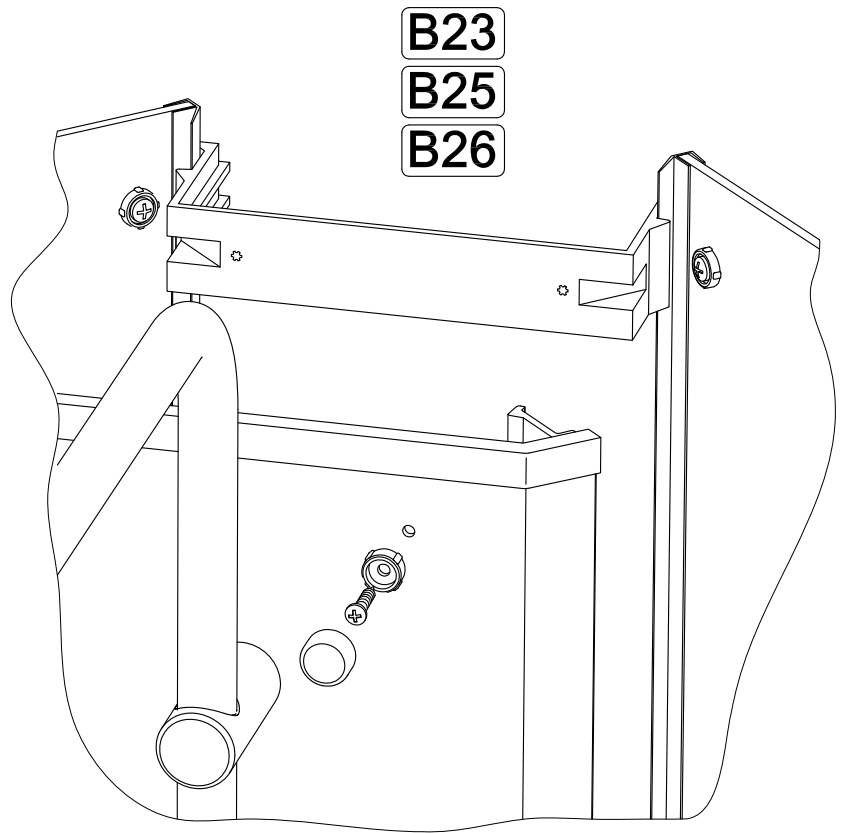

A10

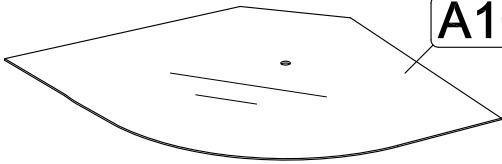

A11

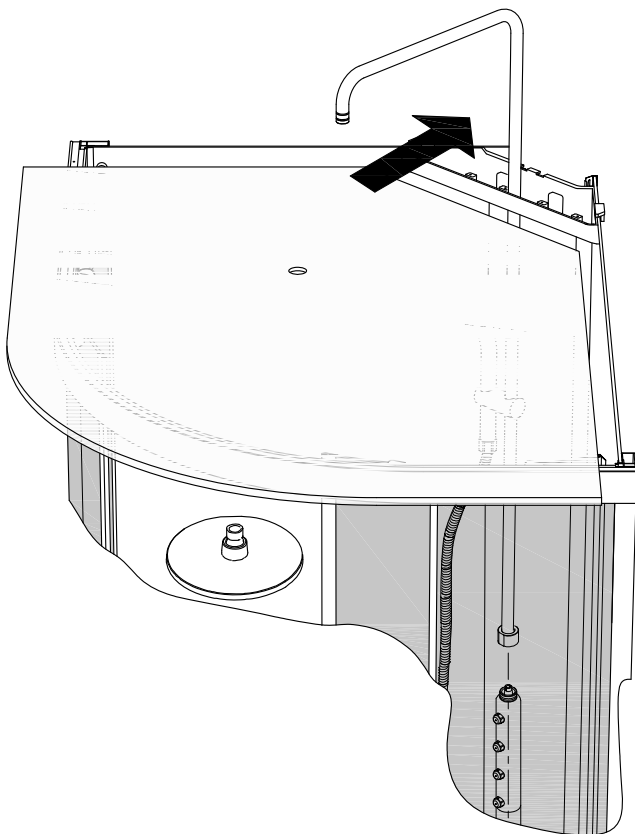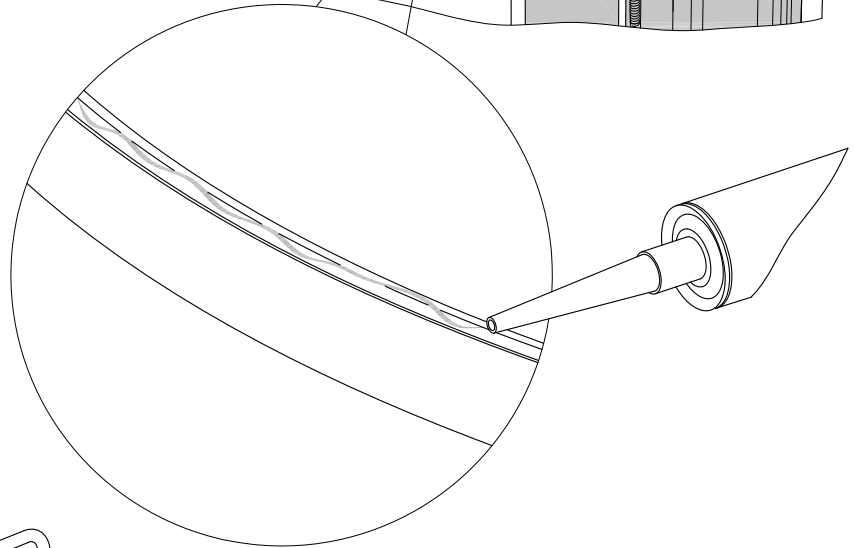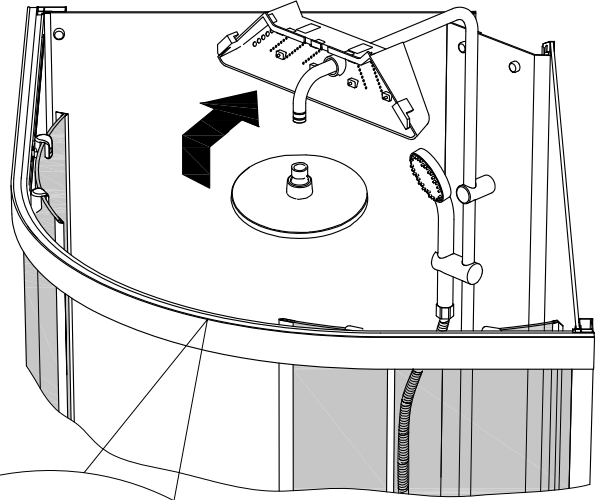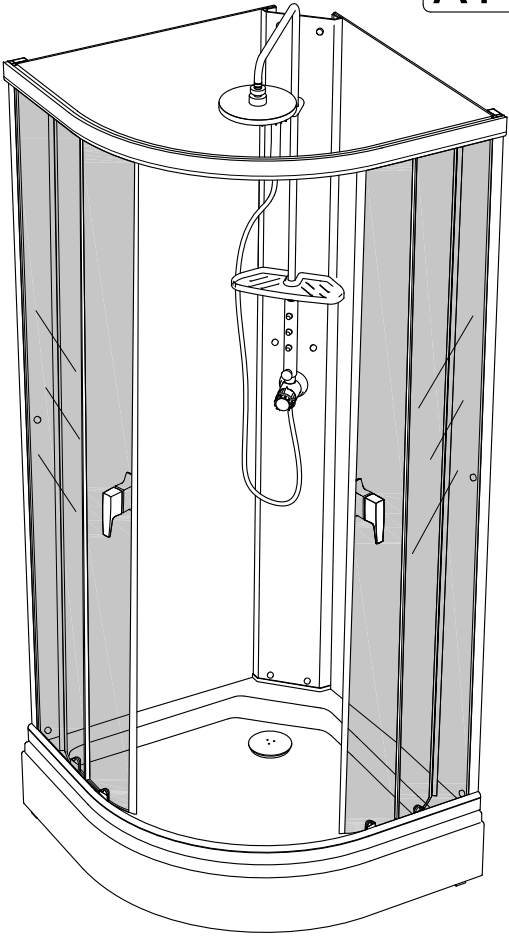

www.3tn.ru