

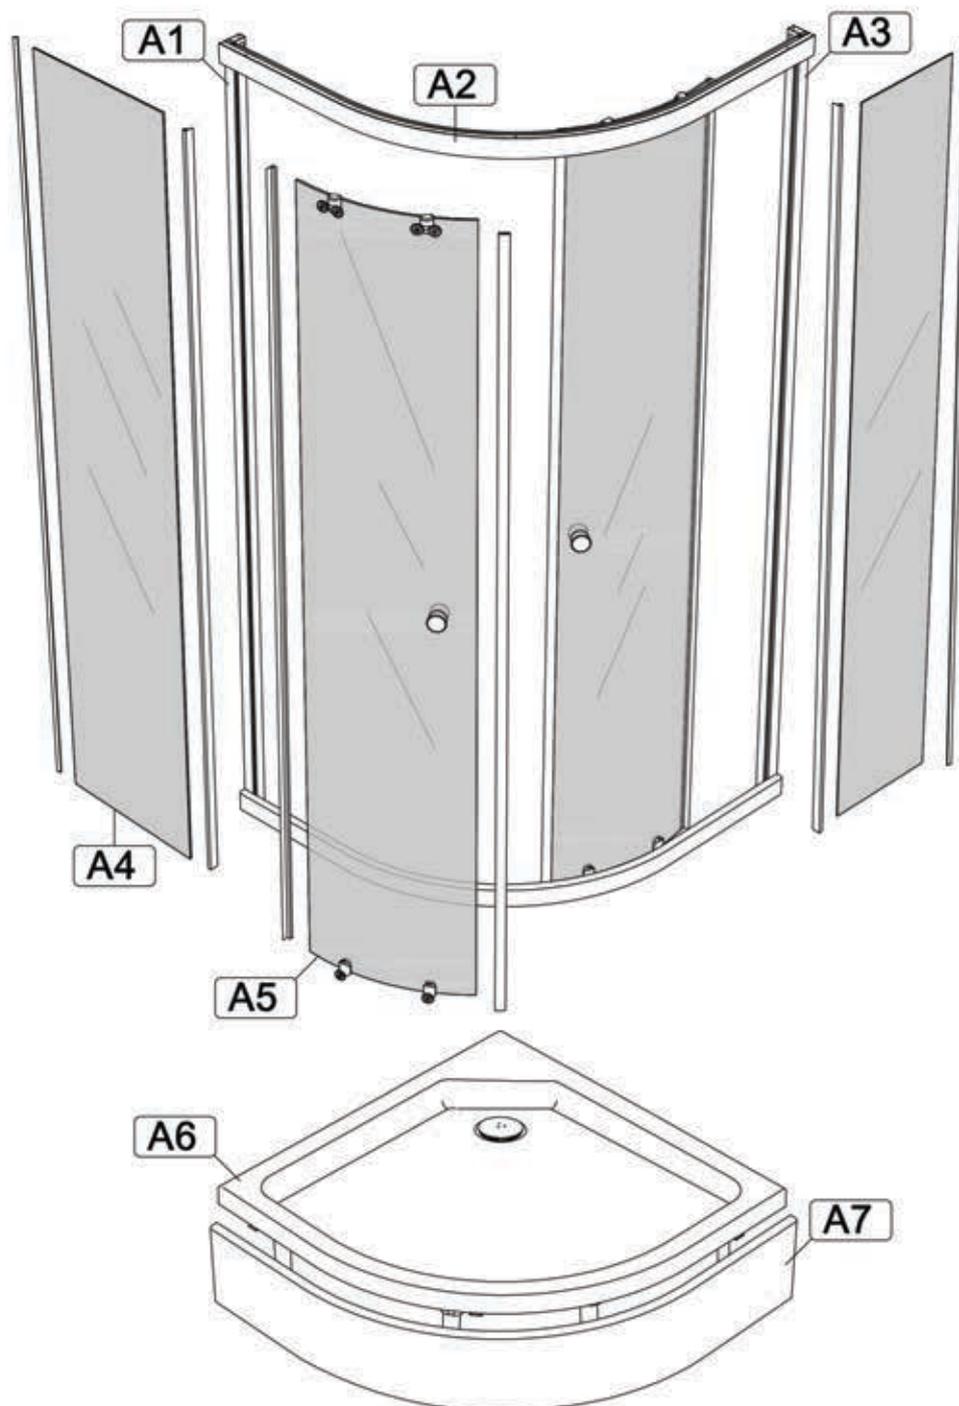

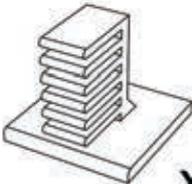
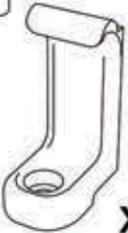
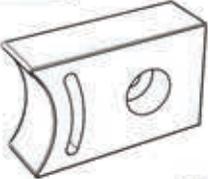




Инструкция по сборке душевой кабины


СТАНДАРТ/РИФ НИЗКИЙ/СРЕДНИЙ ПОДДОН

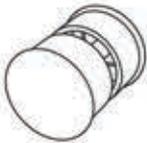

B1  x3	B2  x6	B3  x2		
B4  x3	B5 3.5x50  x2	B6 3.5x19  x11	B7 3.5x19  x30	B8 3.5x12  x10
B9 6x50  x2	B10  x10	B11  x6	B12  x4	B13  x4
B14  x4	B15  x2	B16  x4	B17  x2	B18  x2

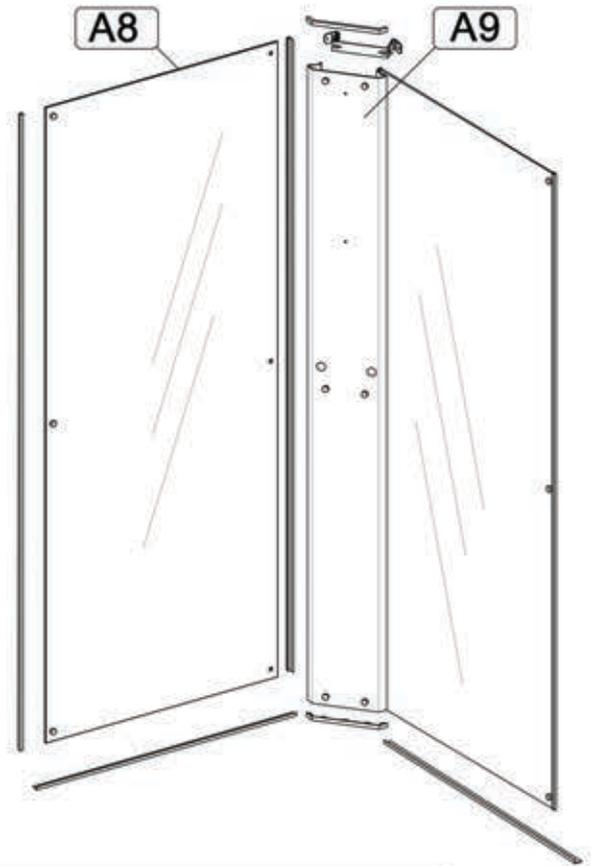


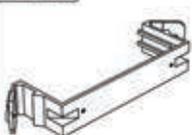B19  x2	B20  x2			
B21  x12	B22  x12	B23  x6	B24 3.5x19  x15	B25 3.5x15  x6
B26 M3.5  x6	B27  x2	B28  x3	B29  x2	B30  x1

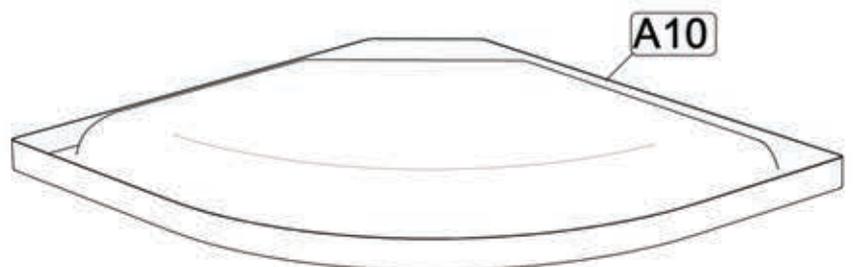

B31  x1	B32 3.5x12  x5
---	--

A6


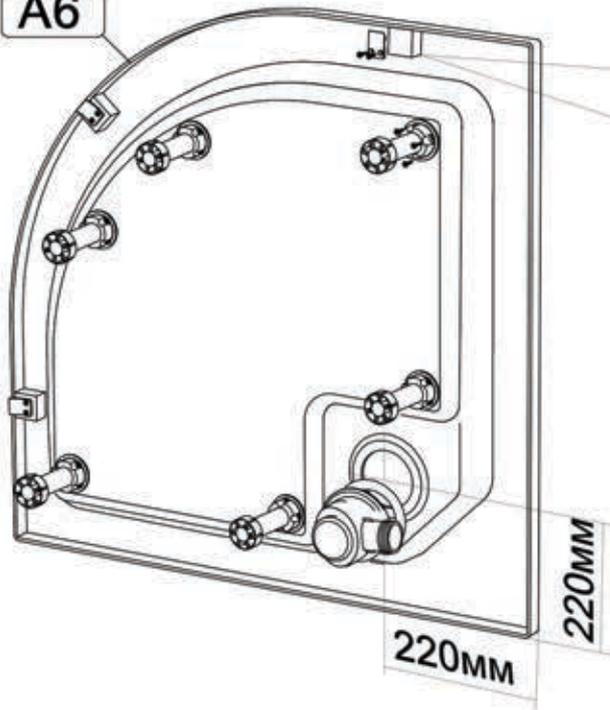


B1

B7


B2

B7

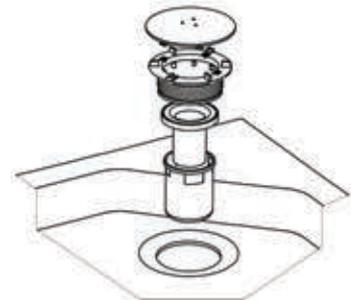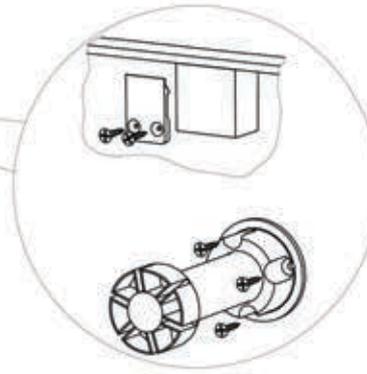



A6


A2

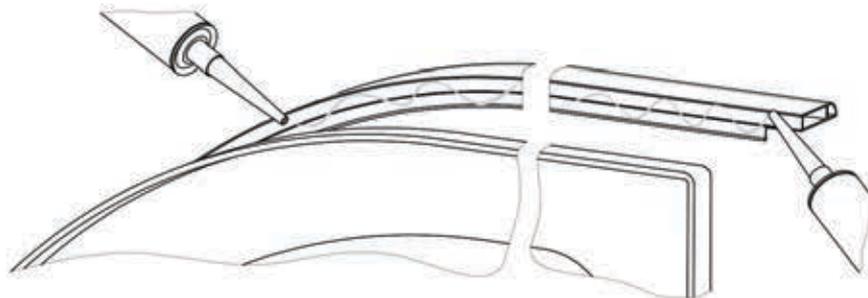



B4

B6

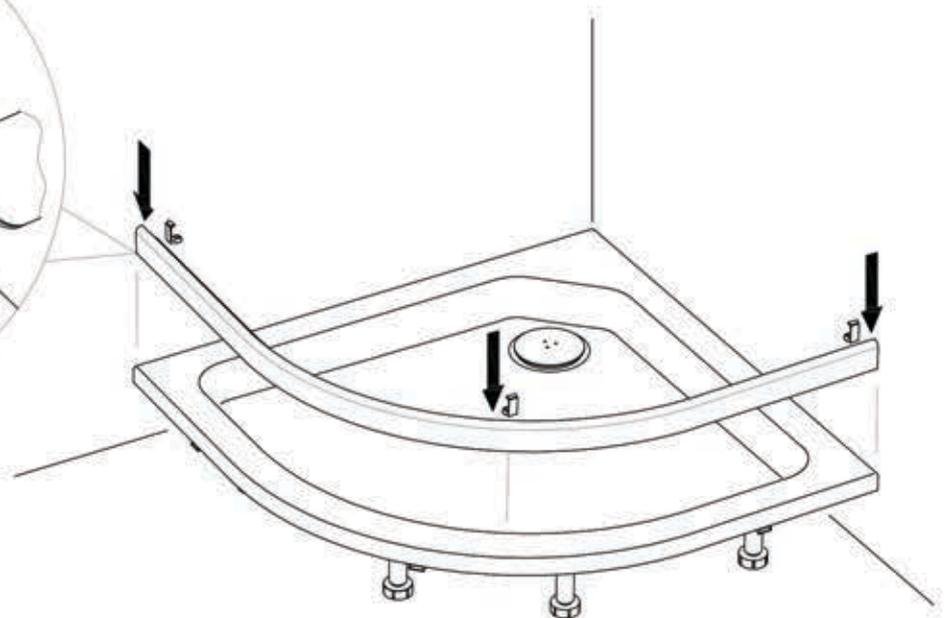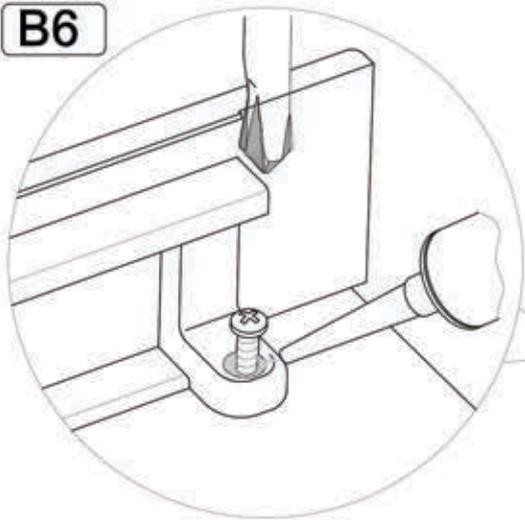


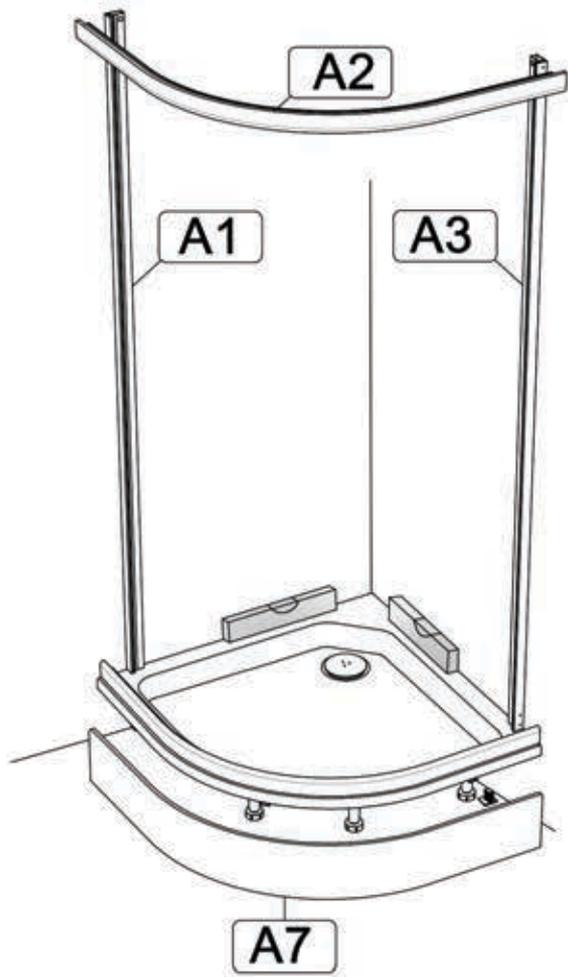


A7
B3

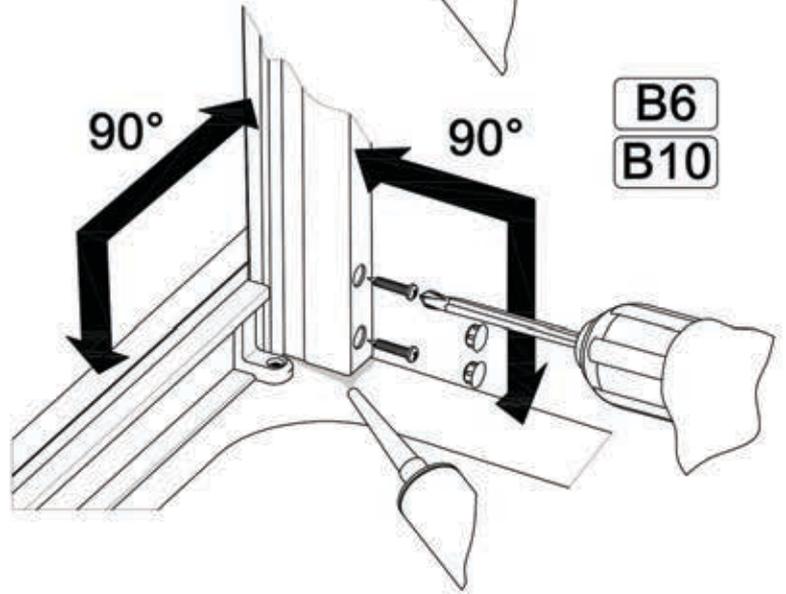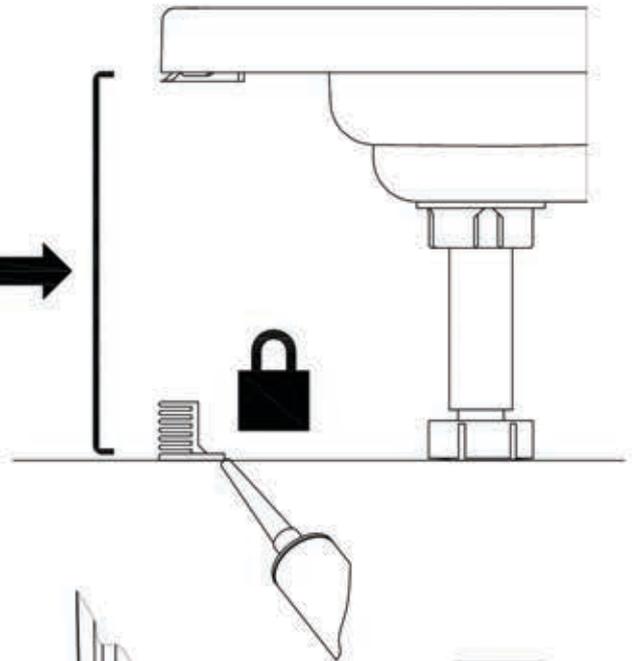


B5
B9
B10


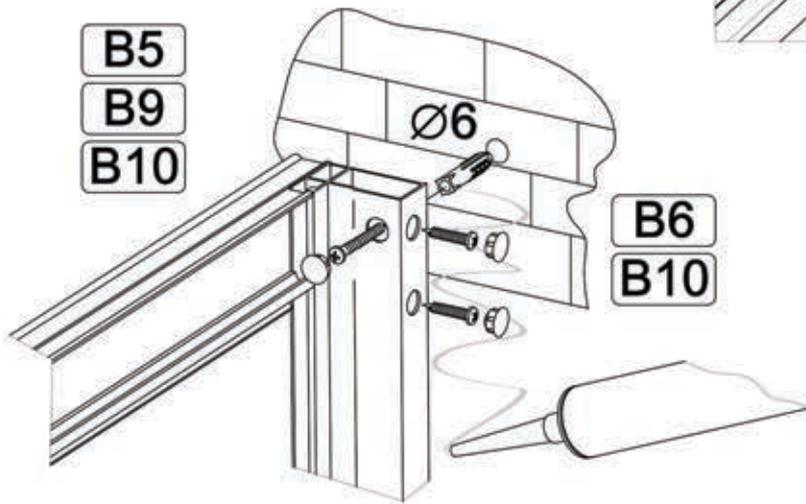


B8
B11

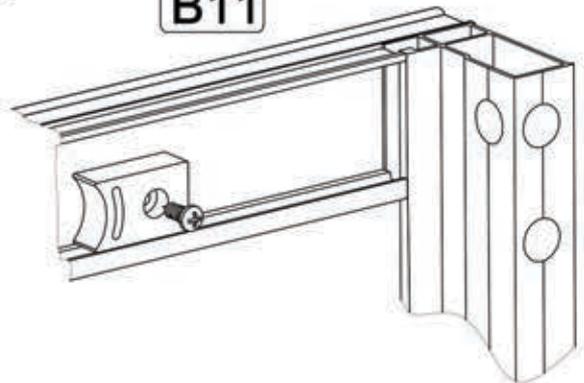


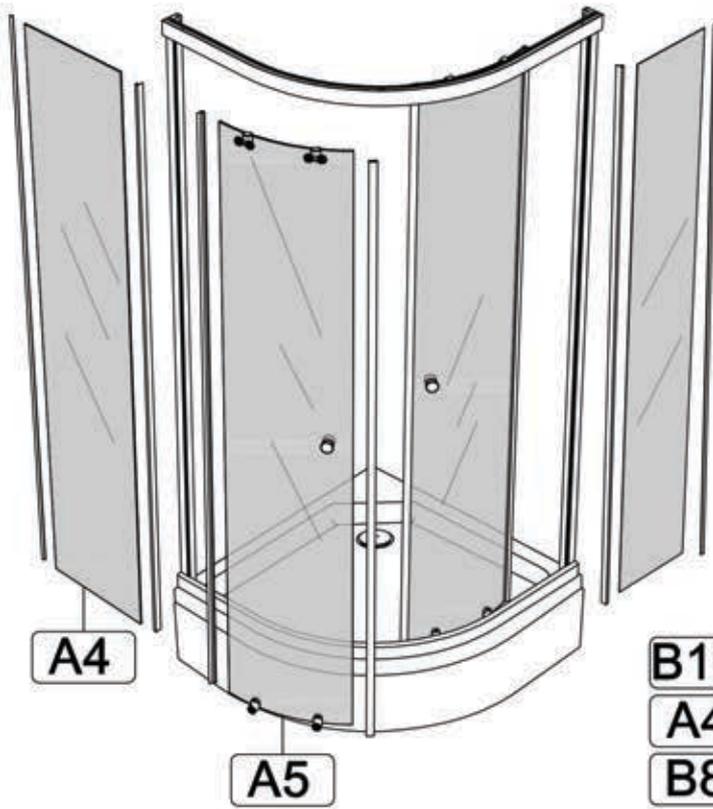


B16 ✂
A4
B8
B12

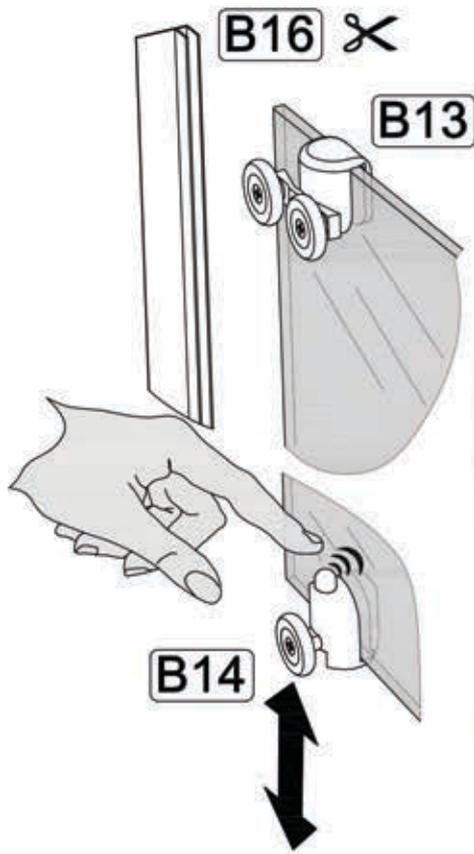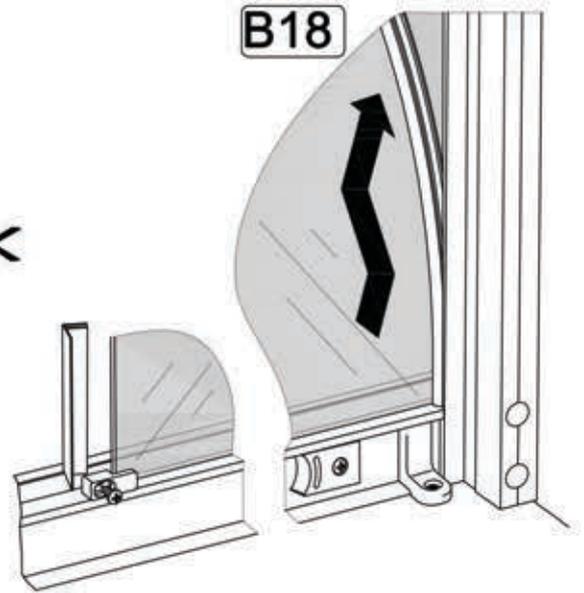



B8 = = B8
B11

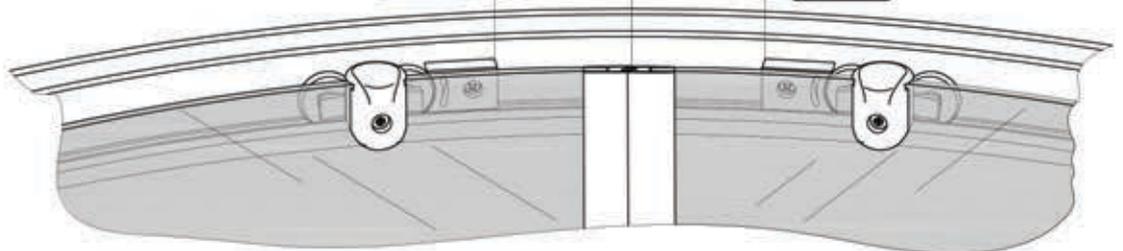

A8

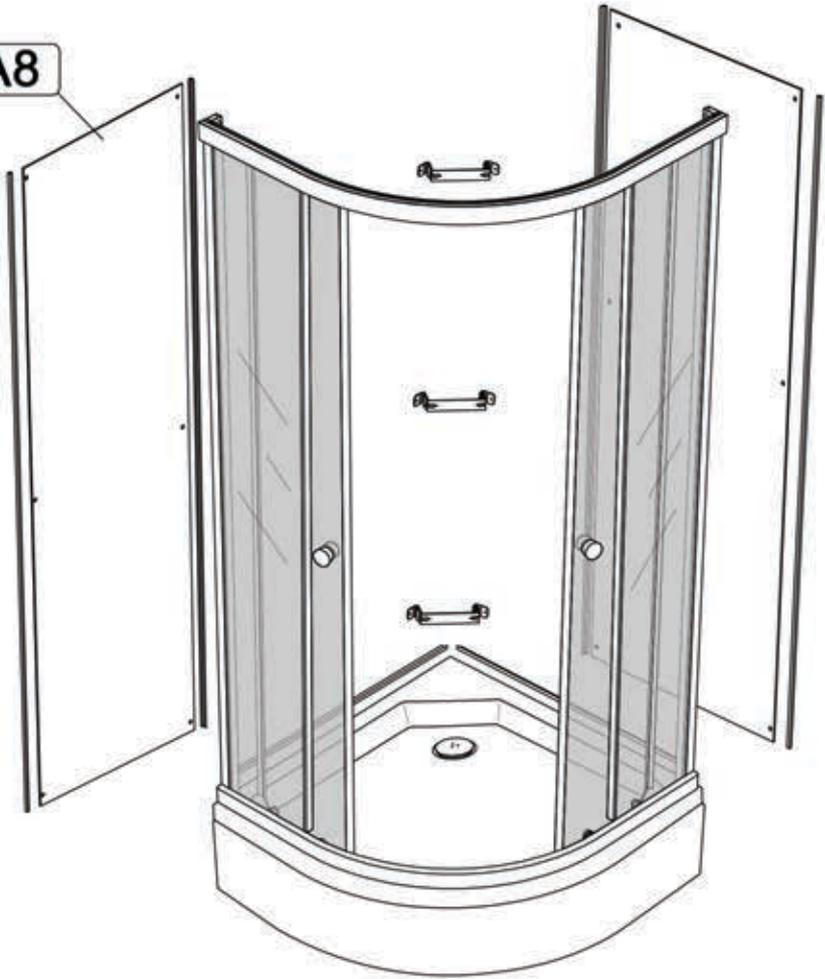




B19

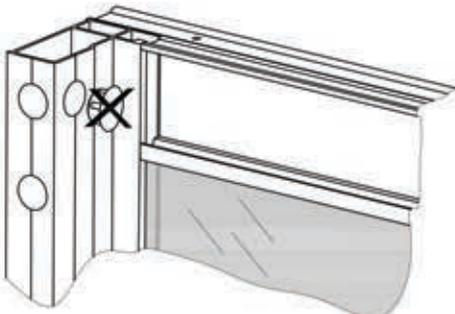
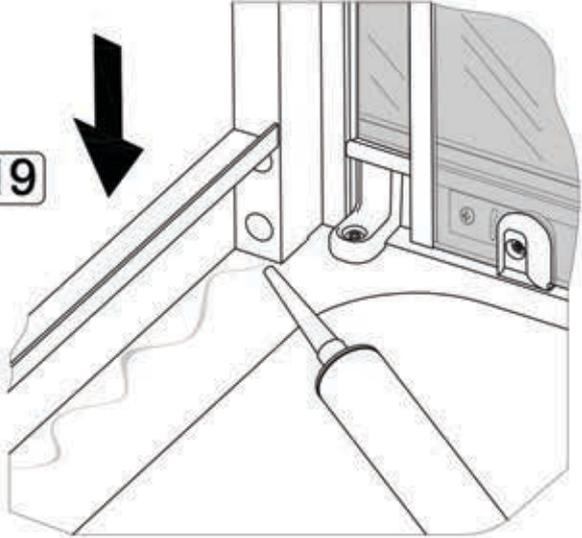


ДН 1



ДН 2

ДН 3

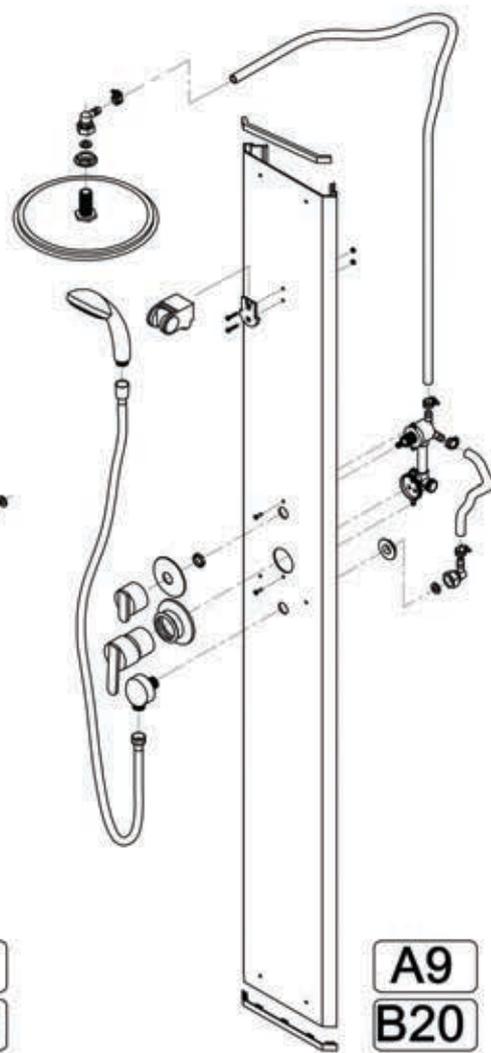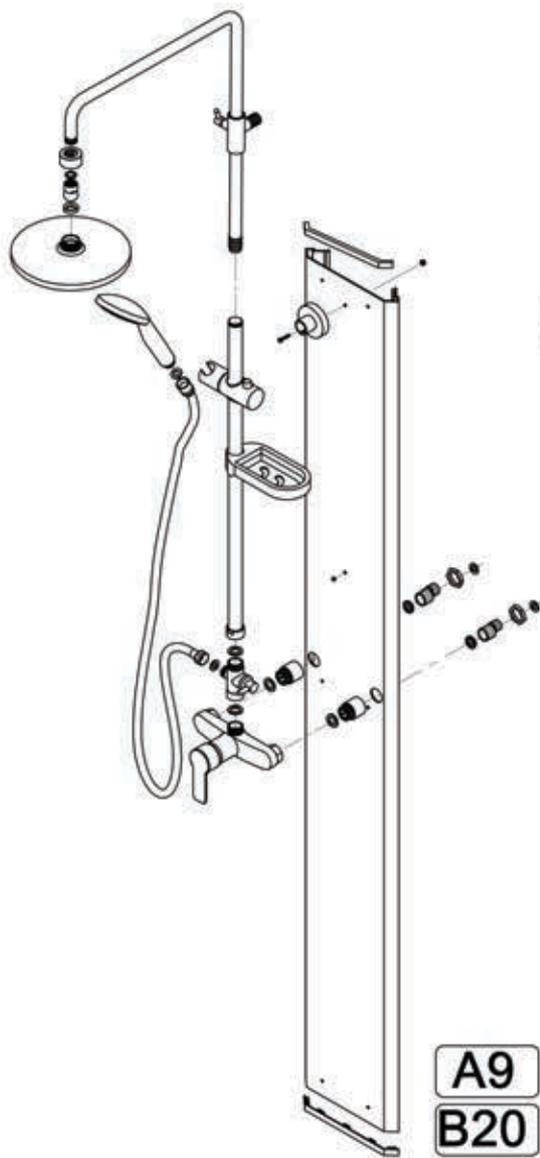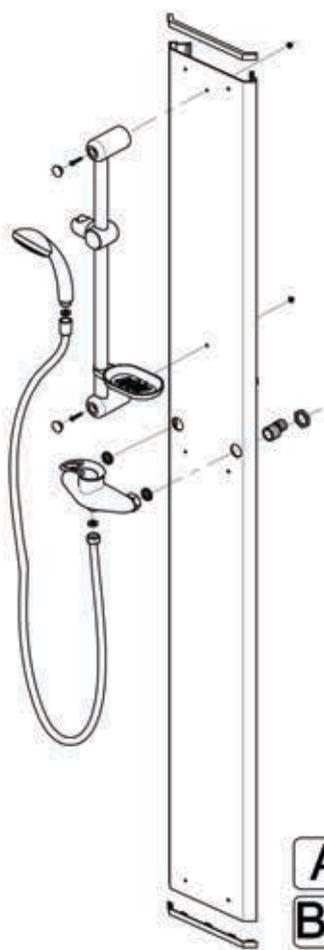

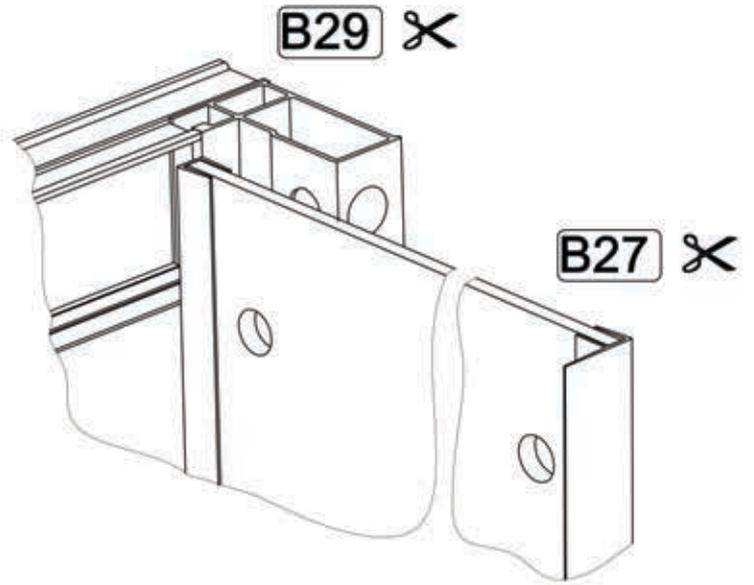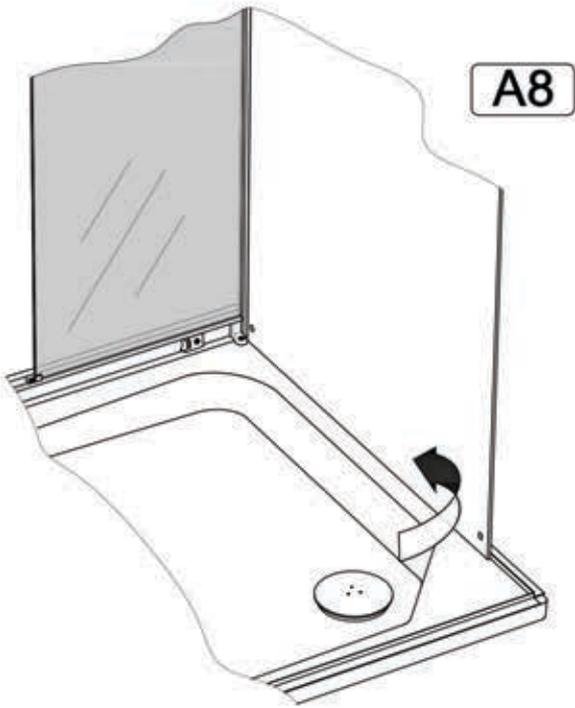


B21
B22
B24

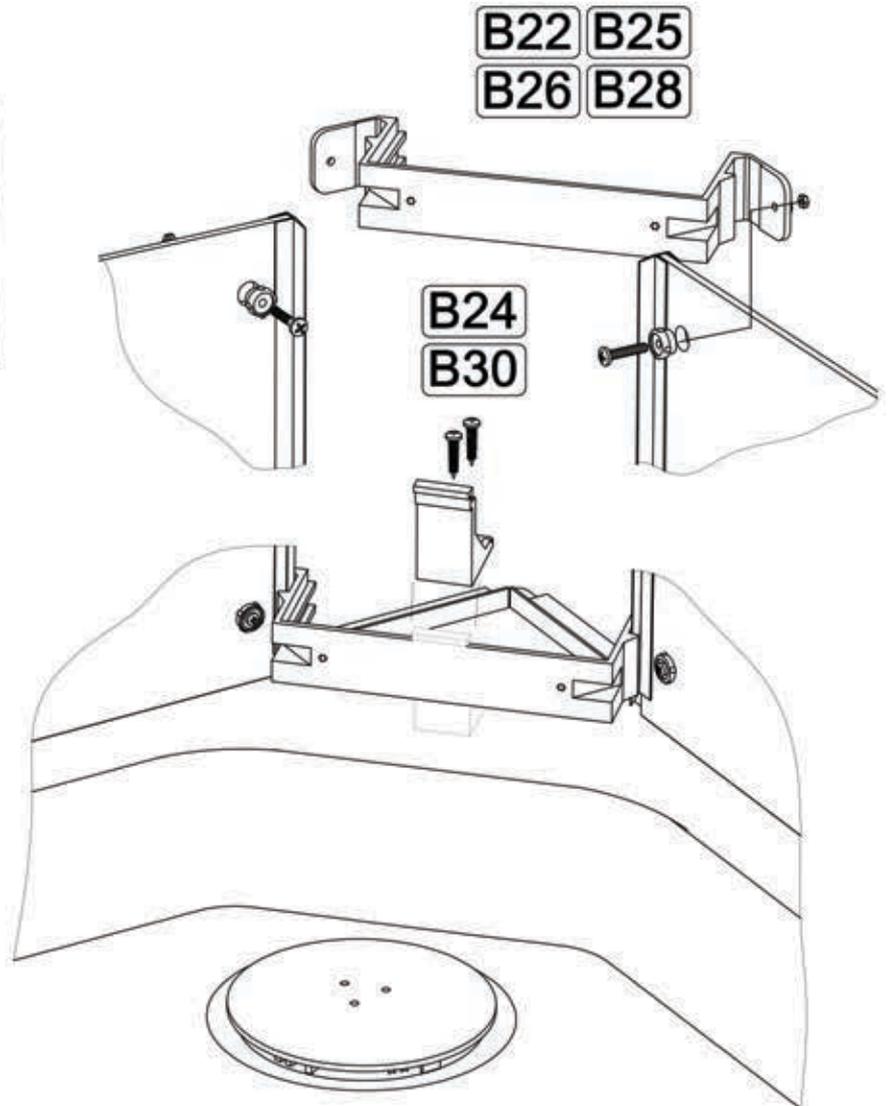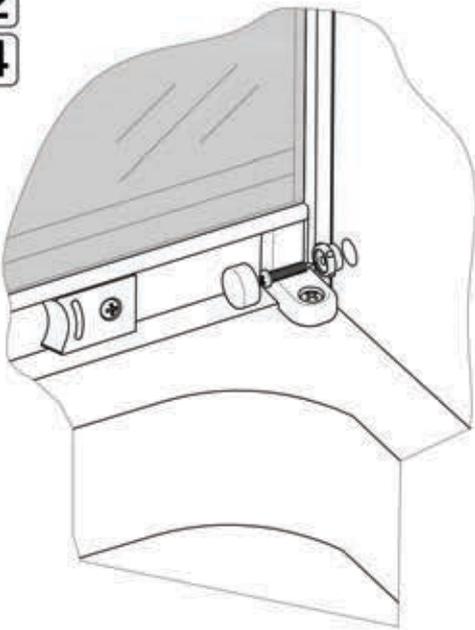





B31
B32

A10

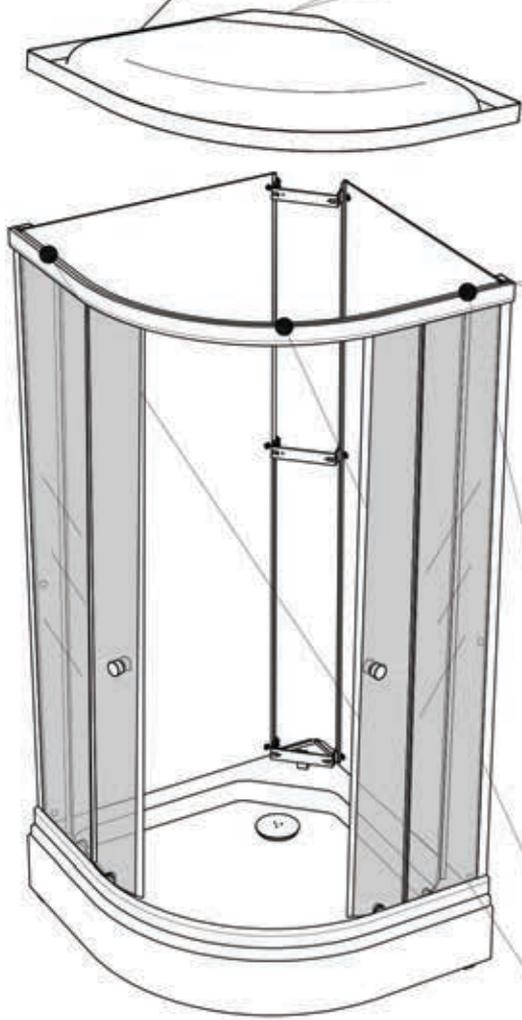

A10
B32

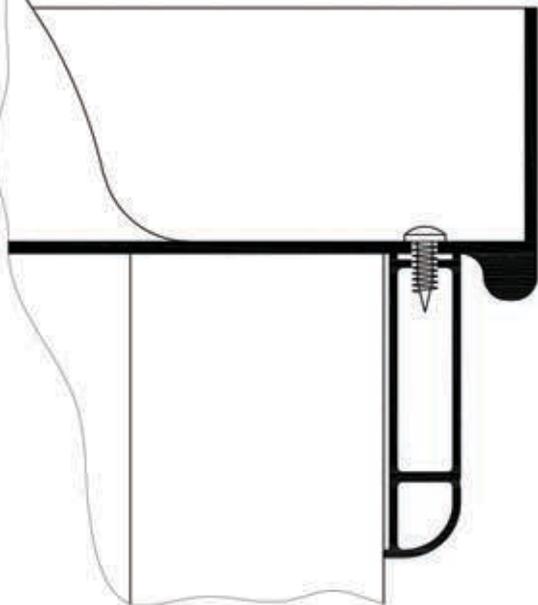

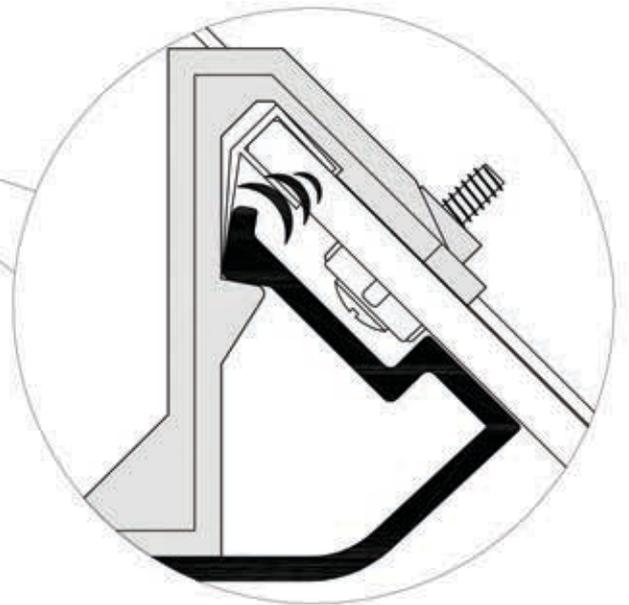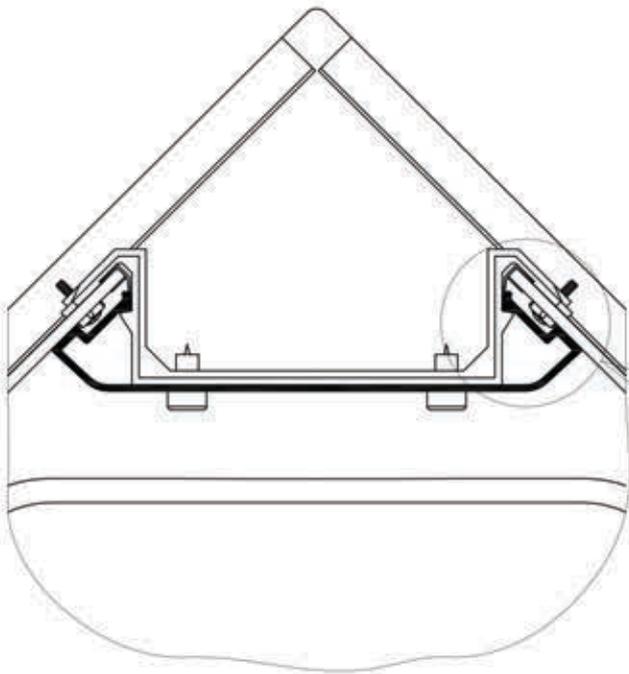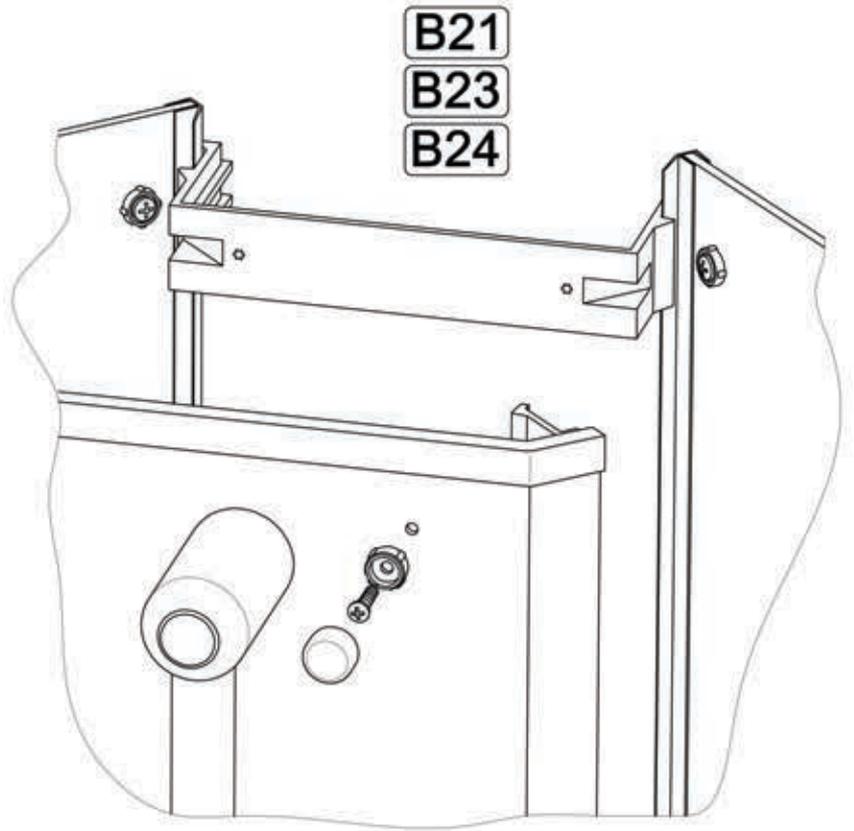

www.3tn.ru