

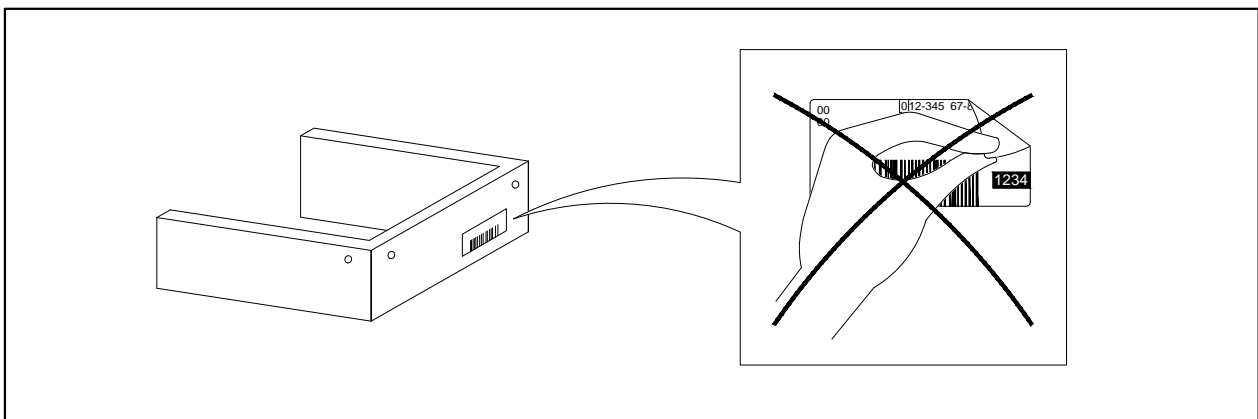
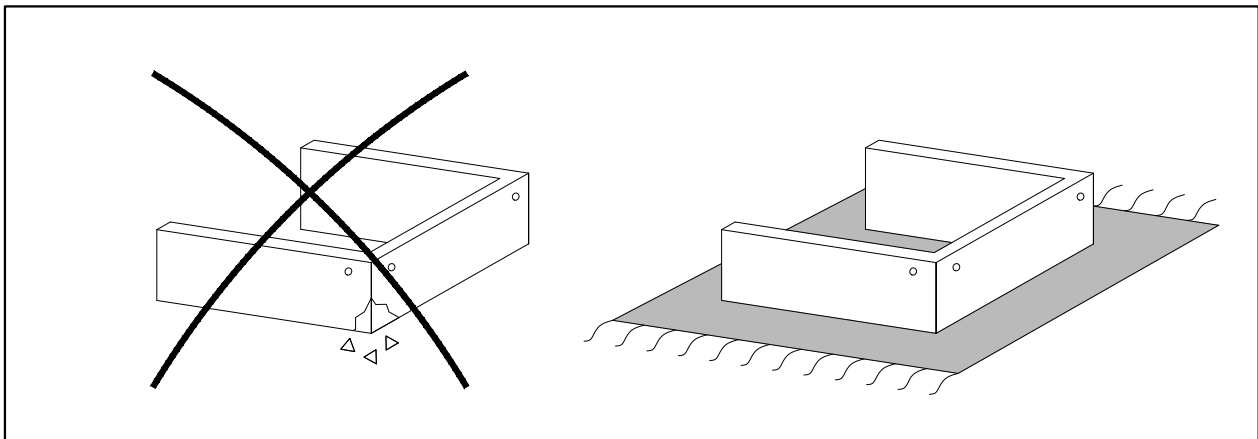
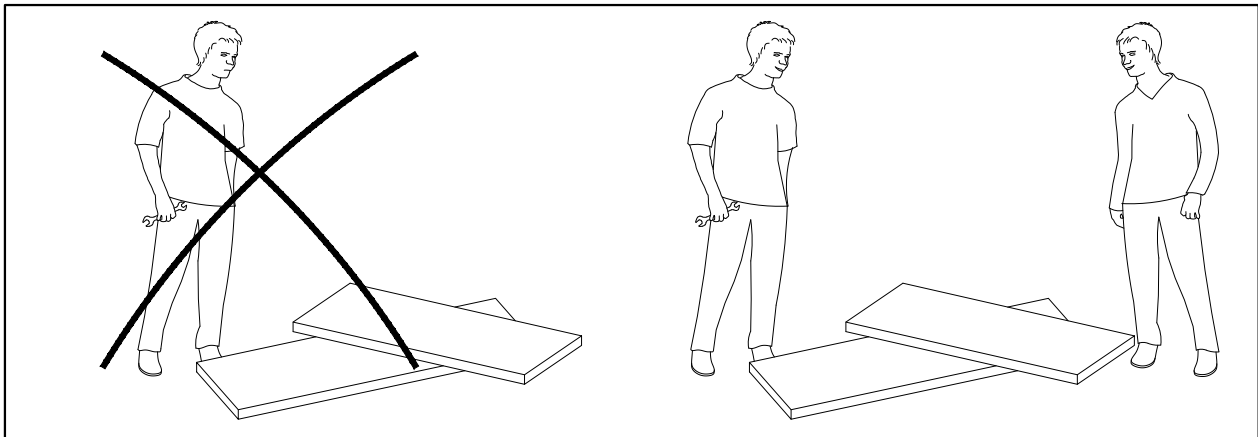


Инструкция по сборке

Кровать с подъёмным механизмом


Дизайн 1220, 1221, 1222, 1223, 1224, 1226, 1227

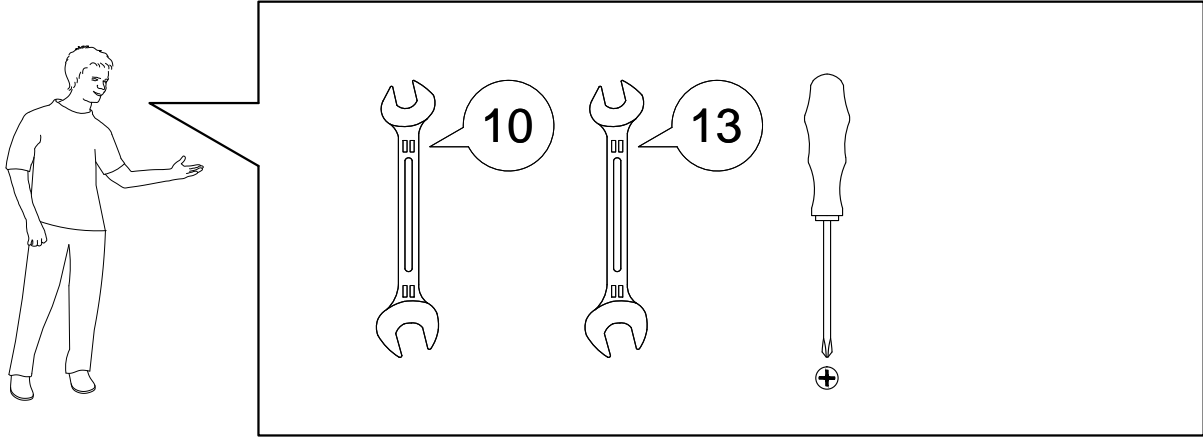

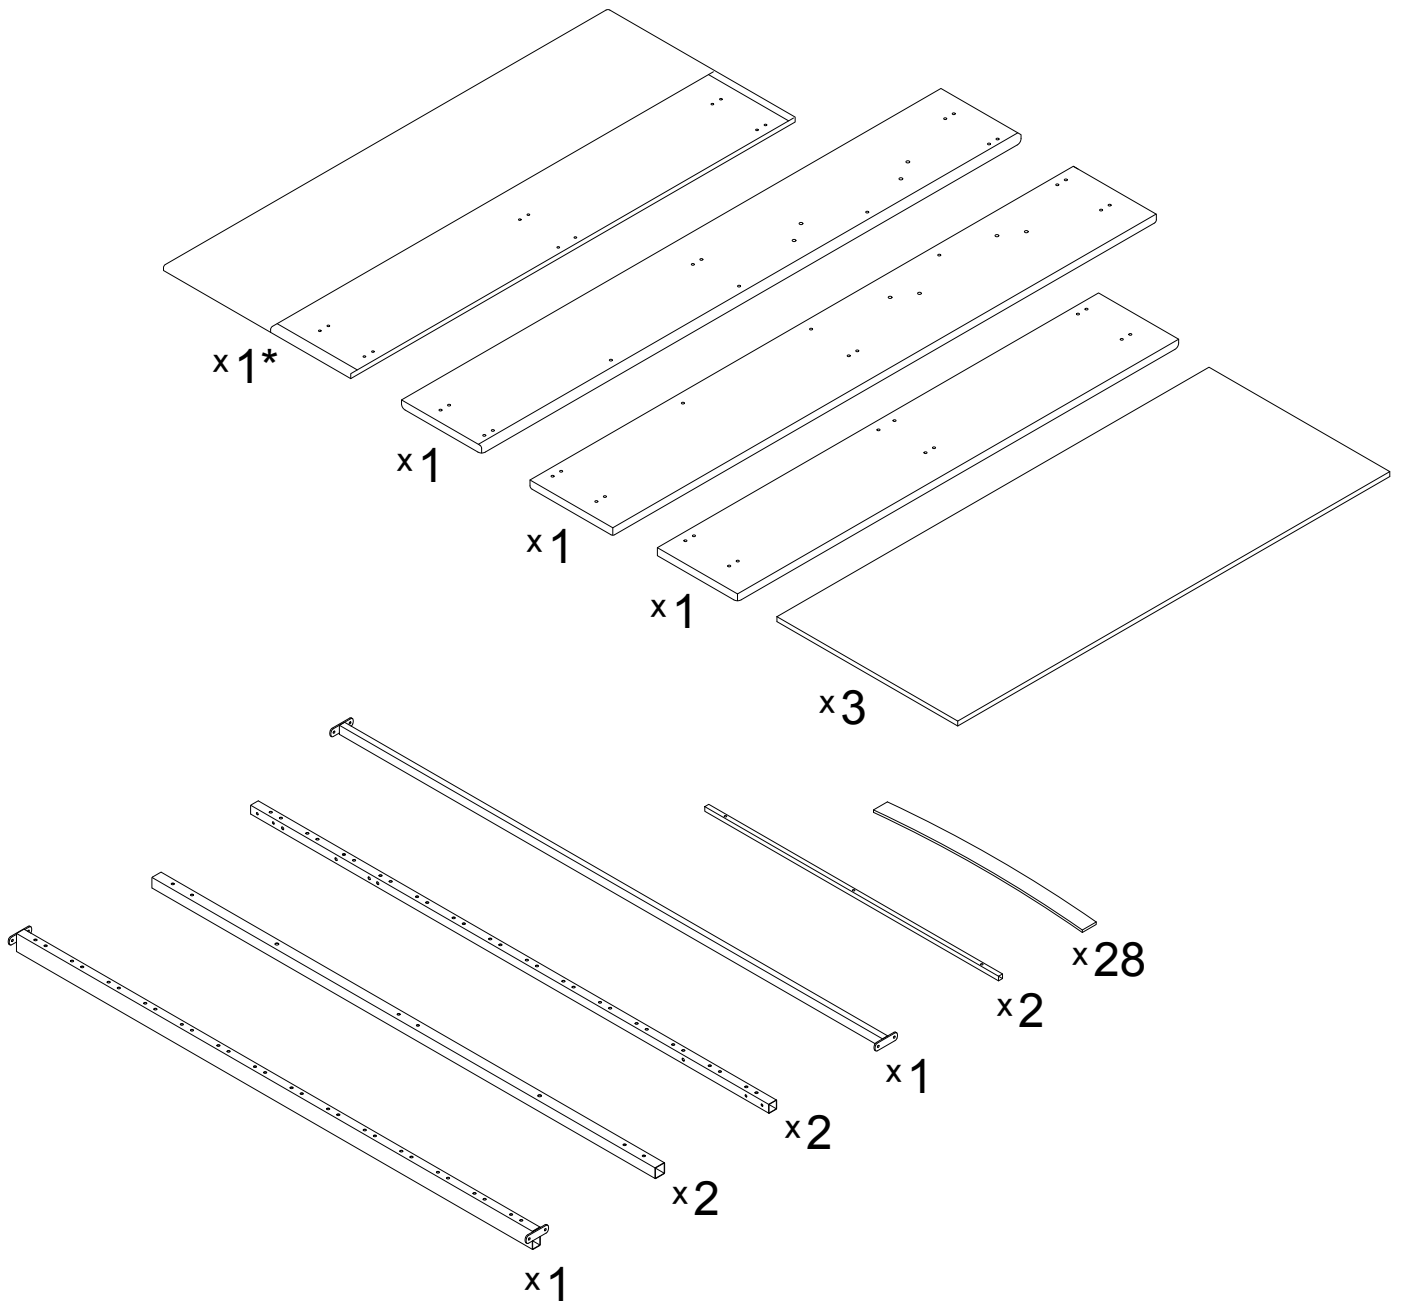


*Дизайн спинки различается в зависимости от модификации кровати.


M 1:2

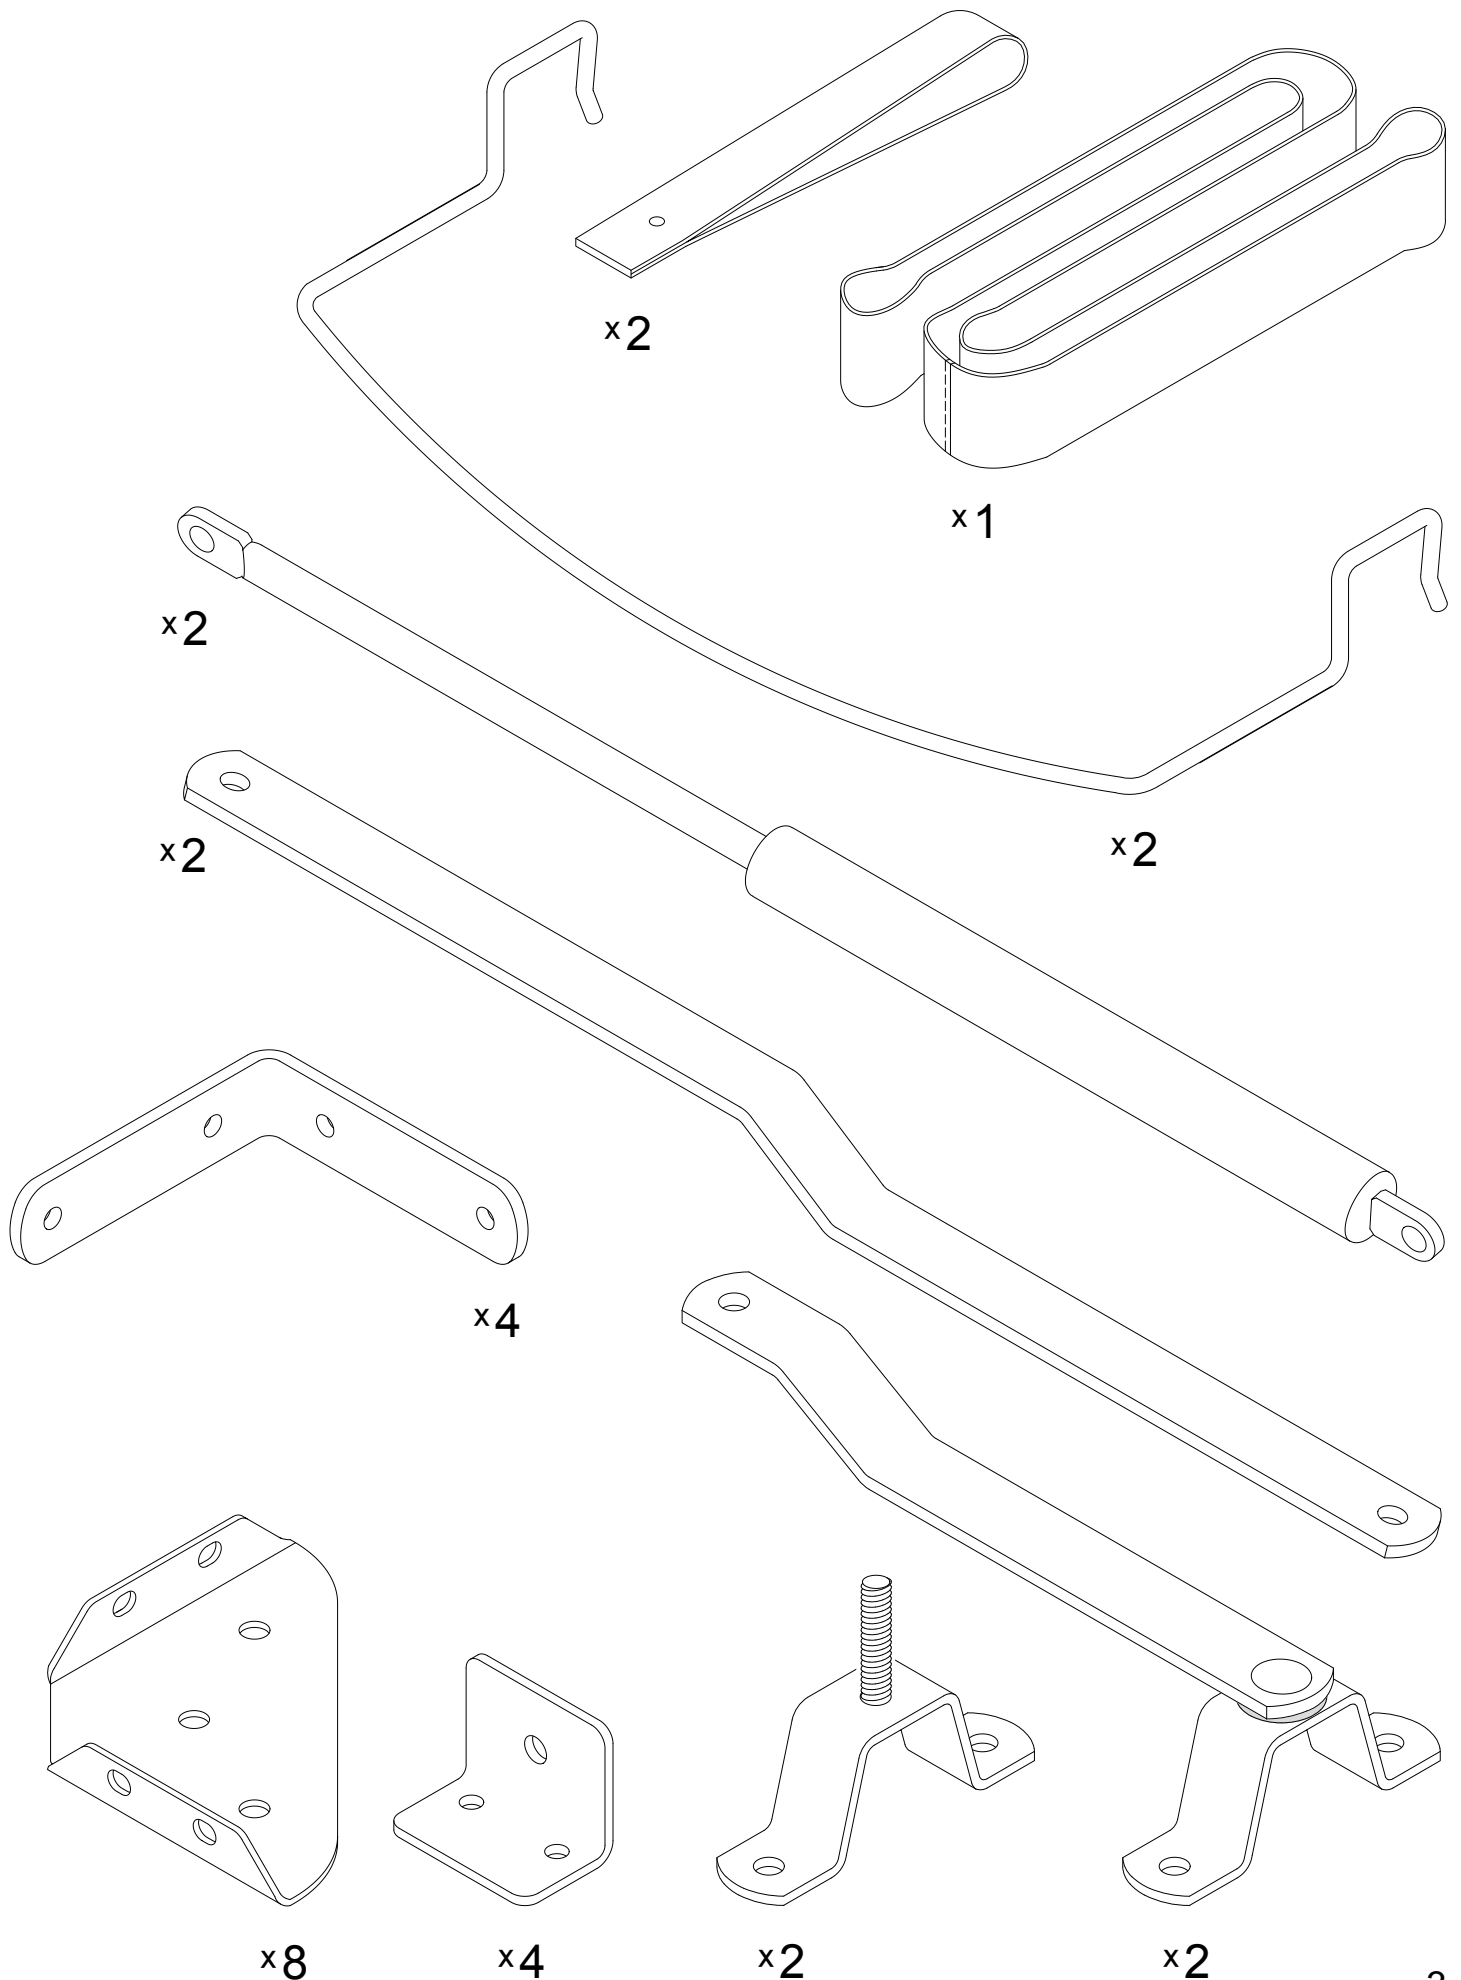


M 1:1

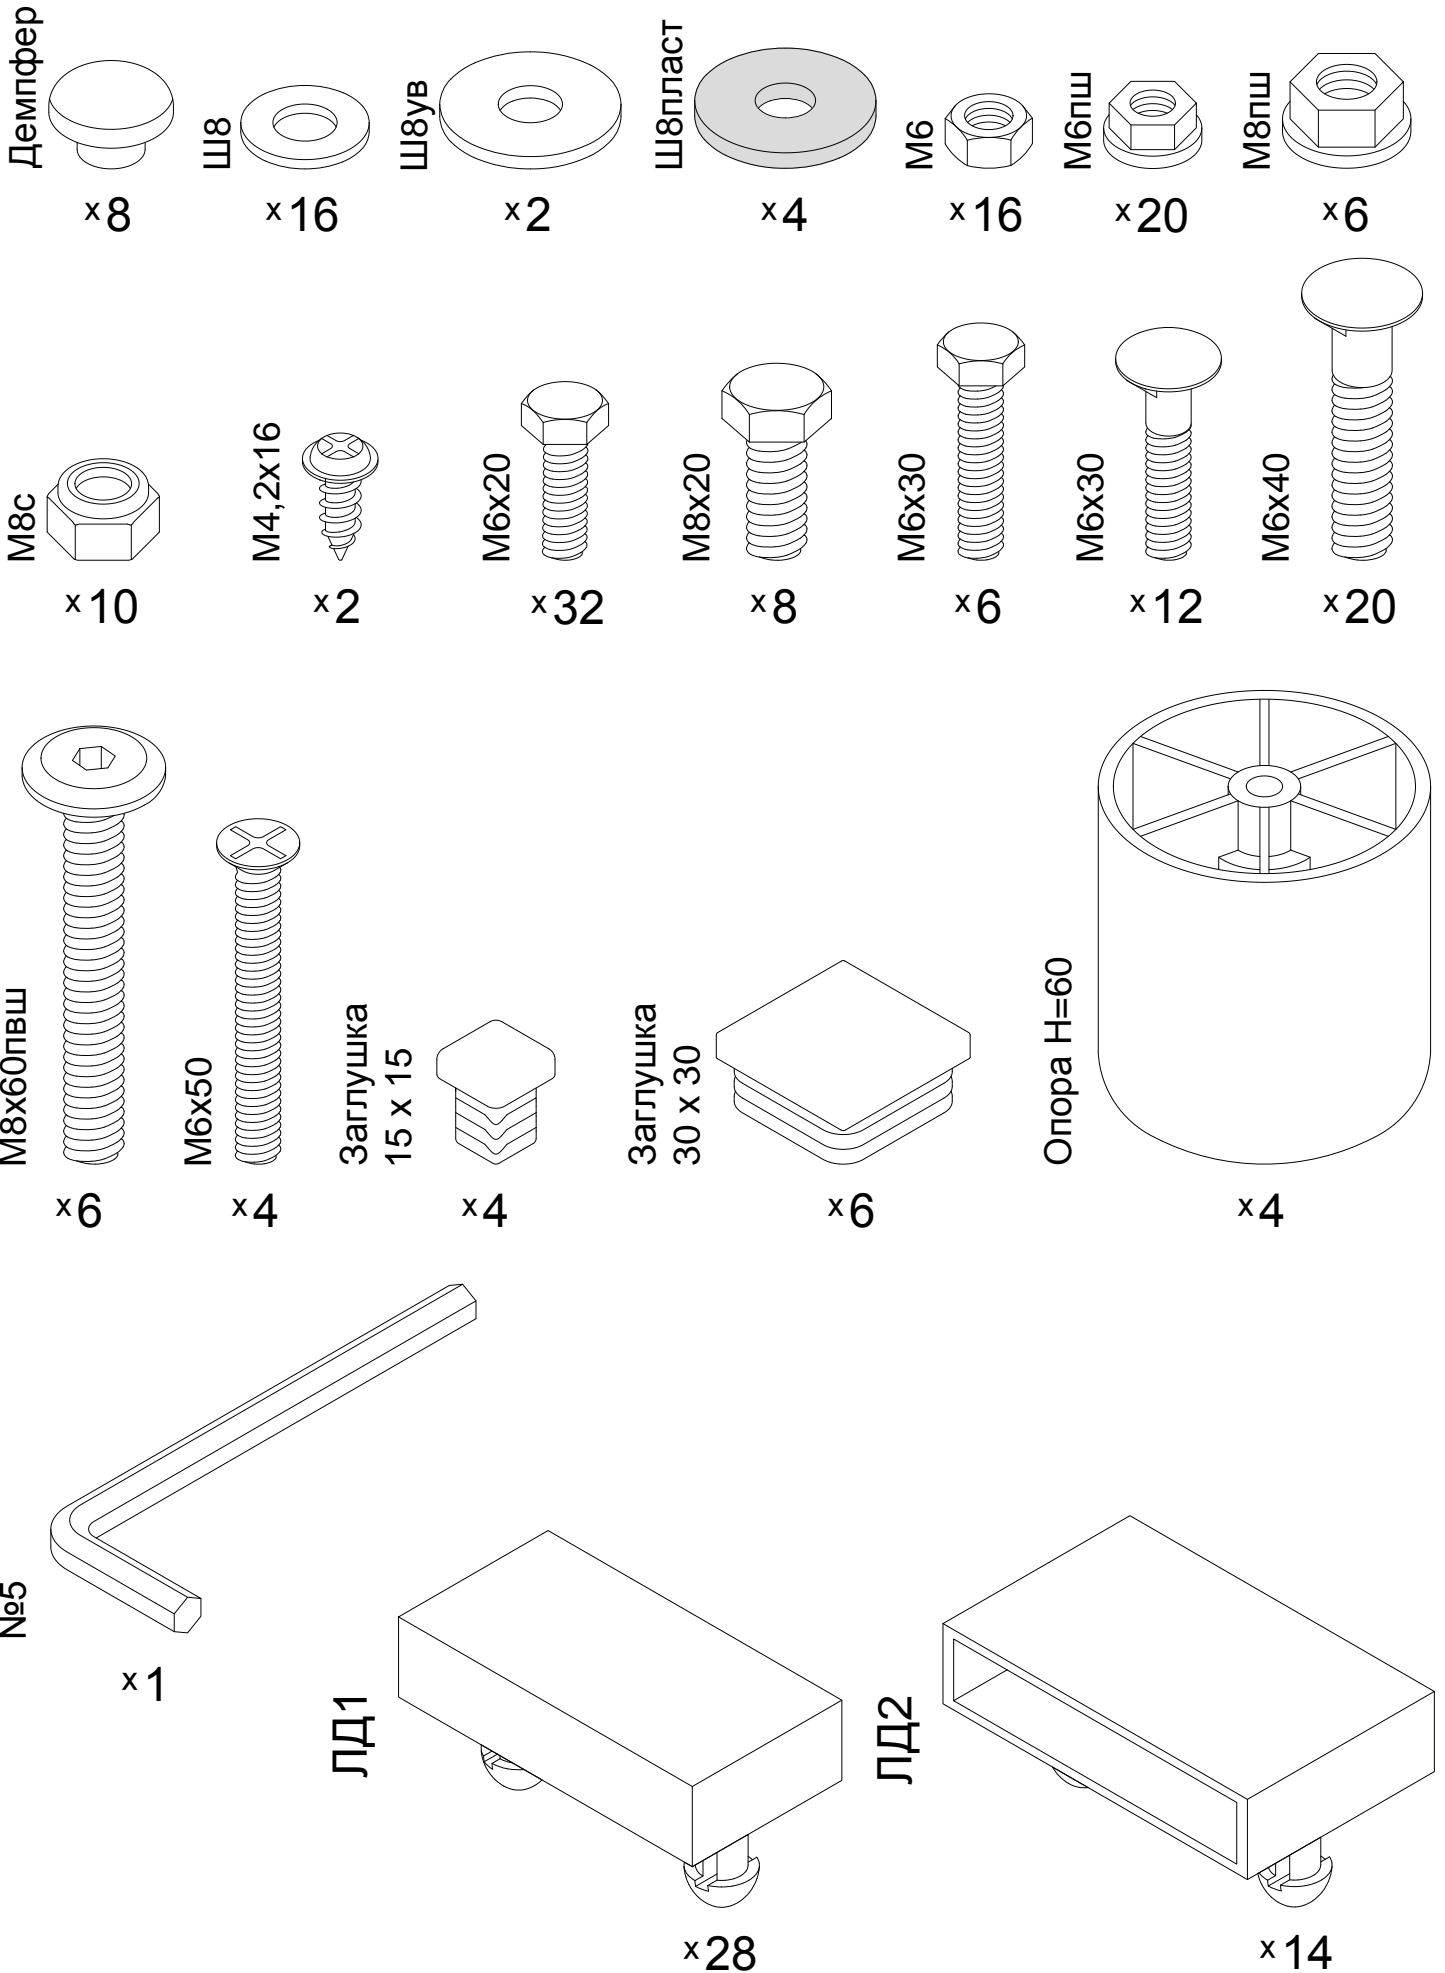







1

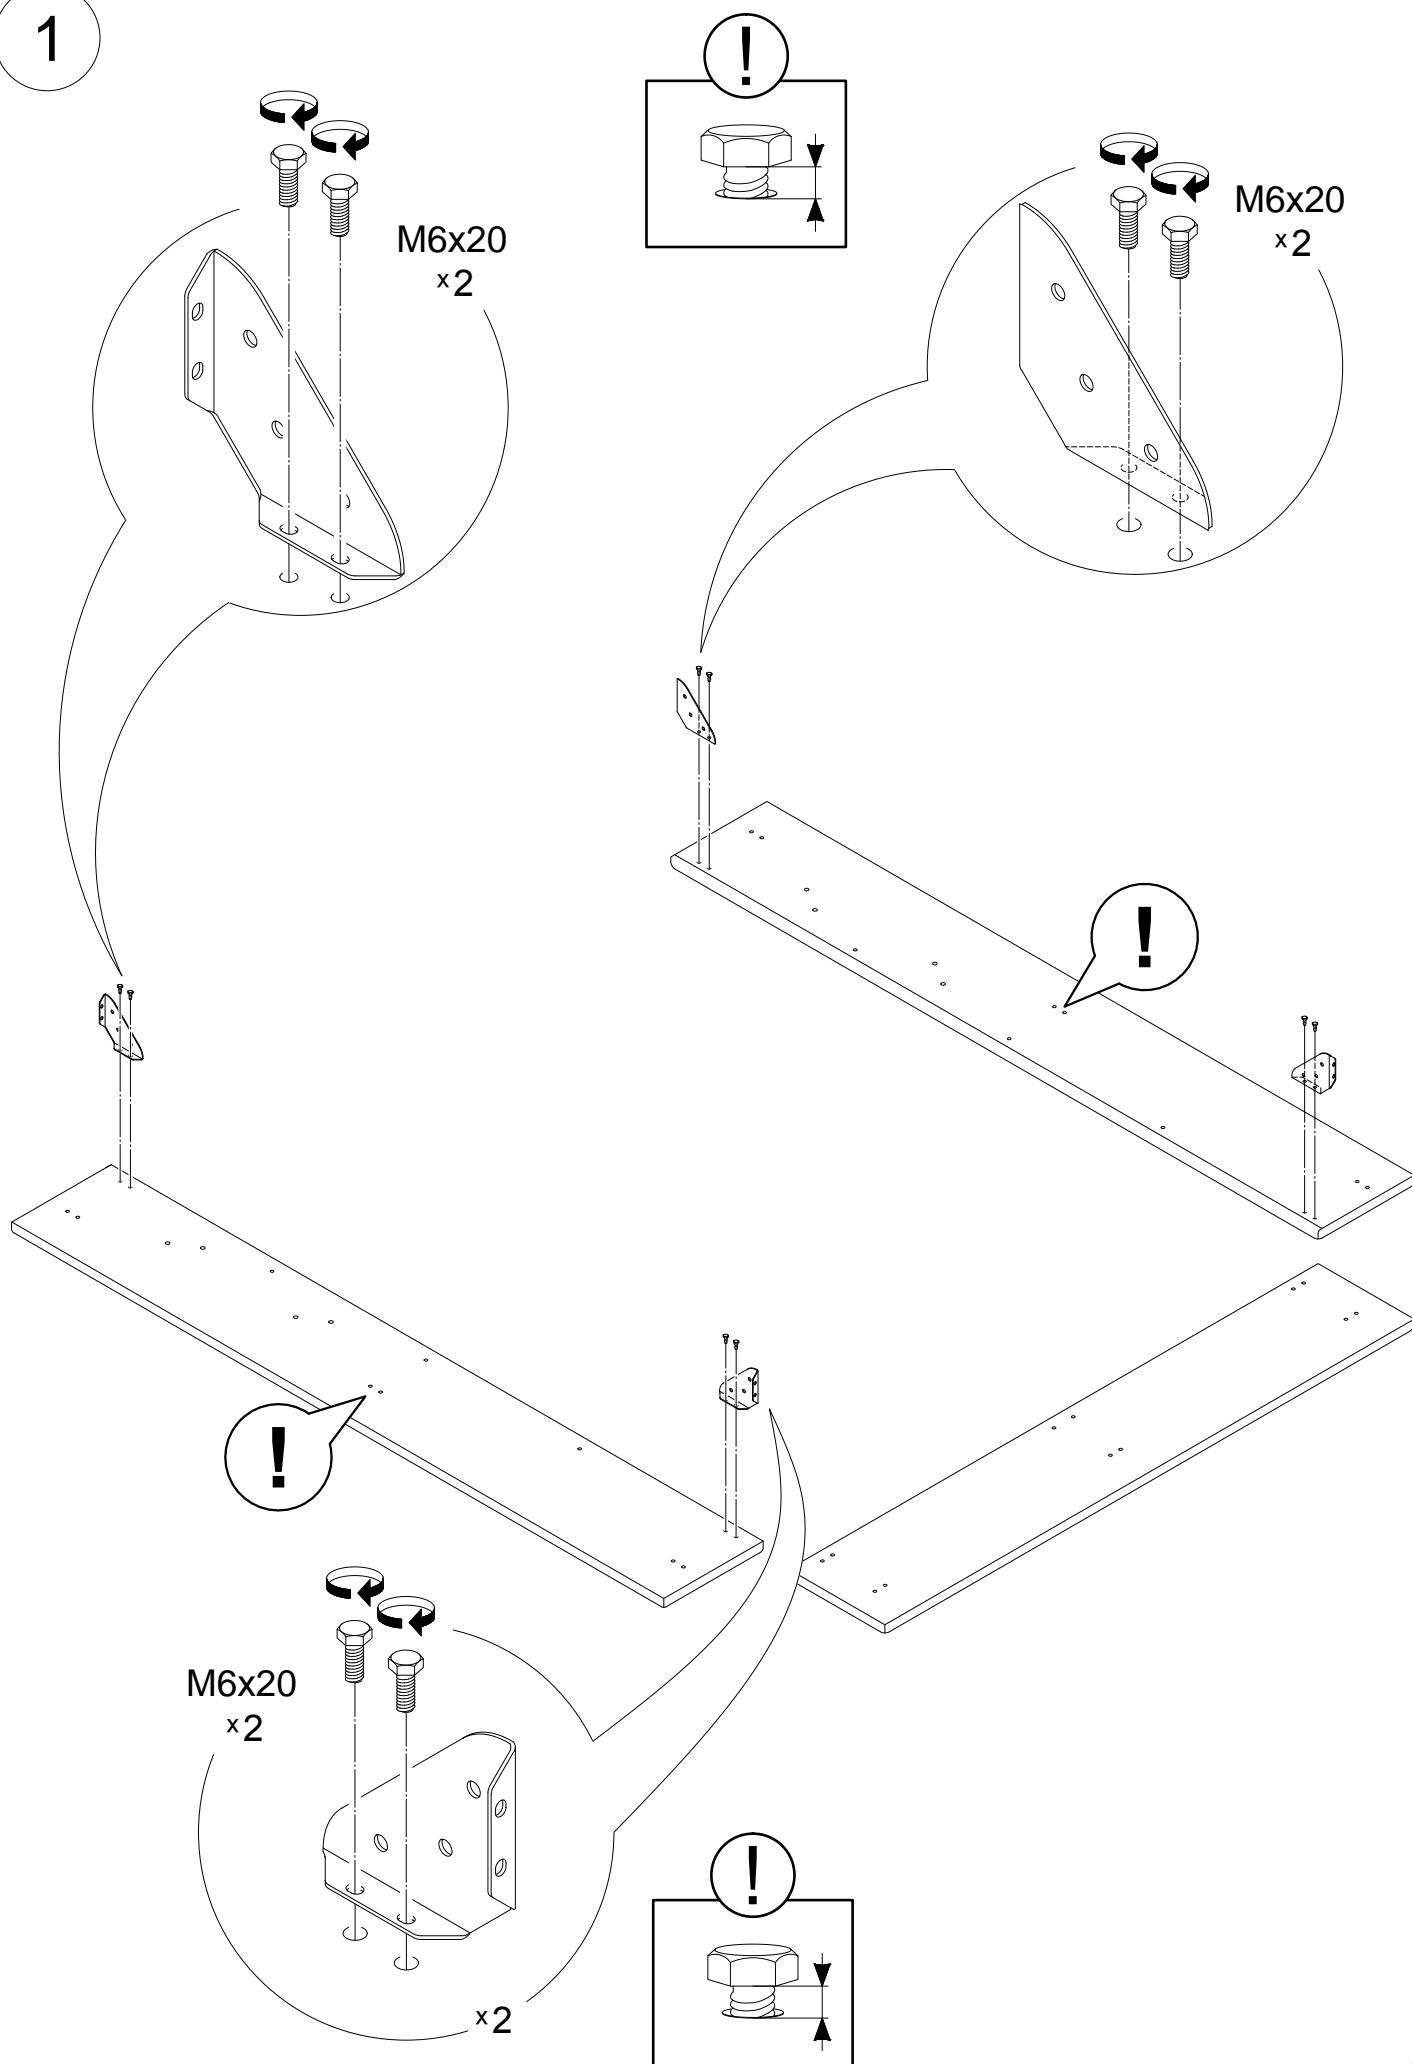


2

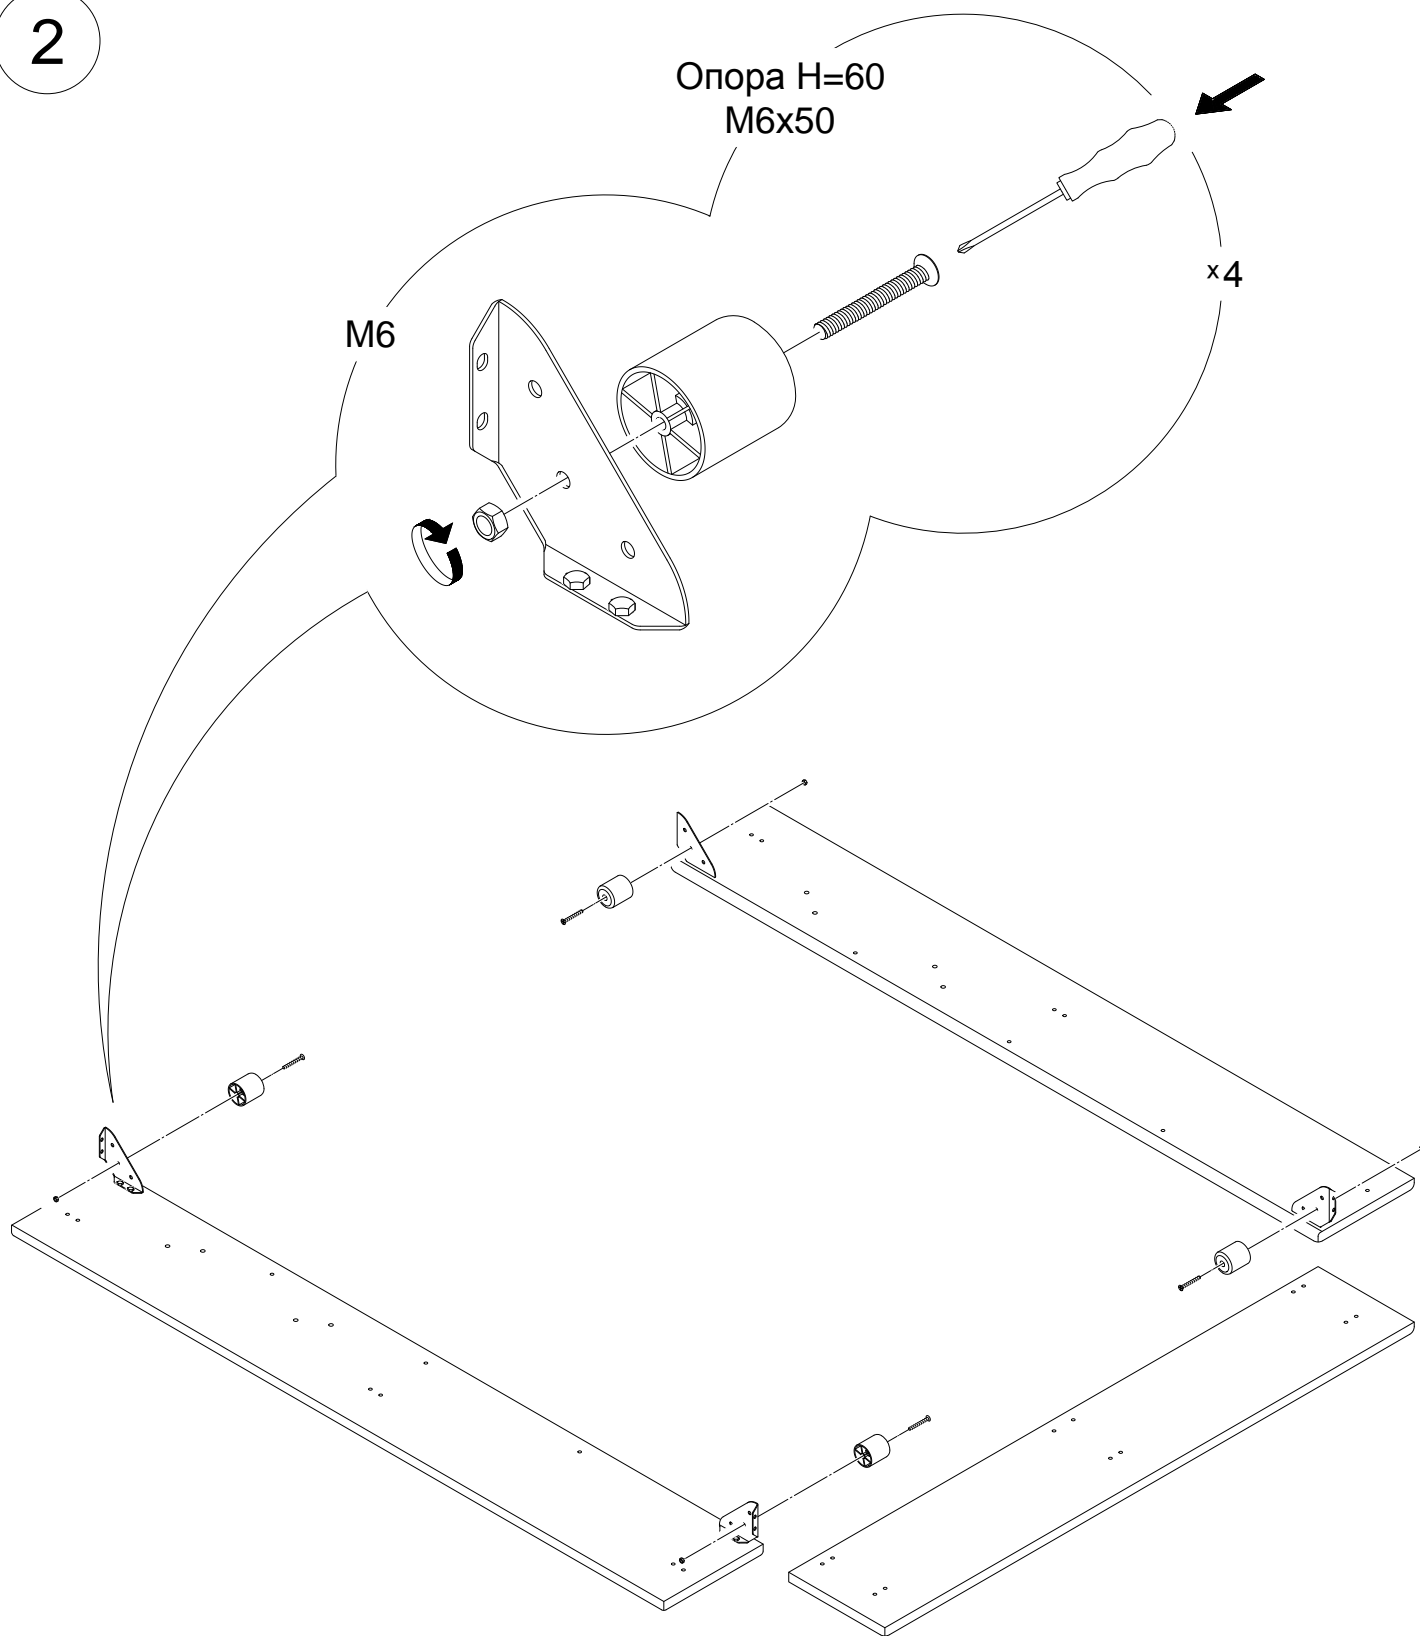


3

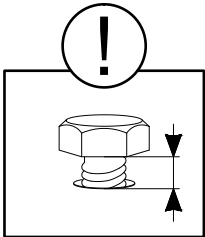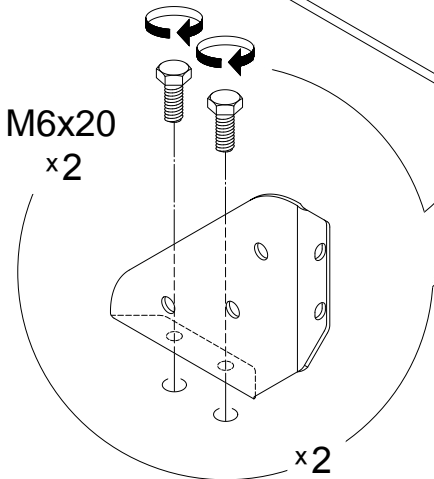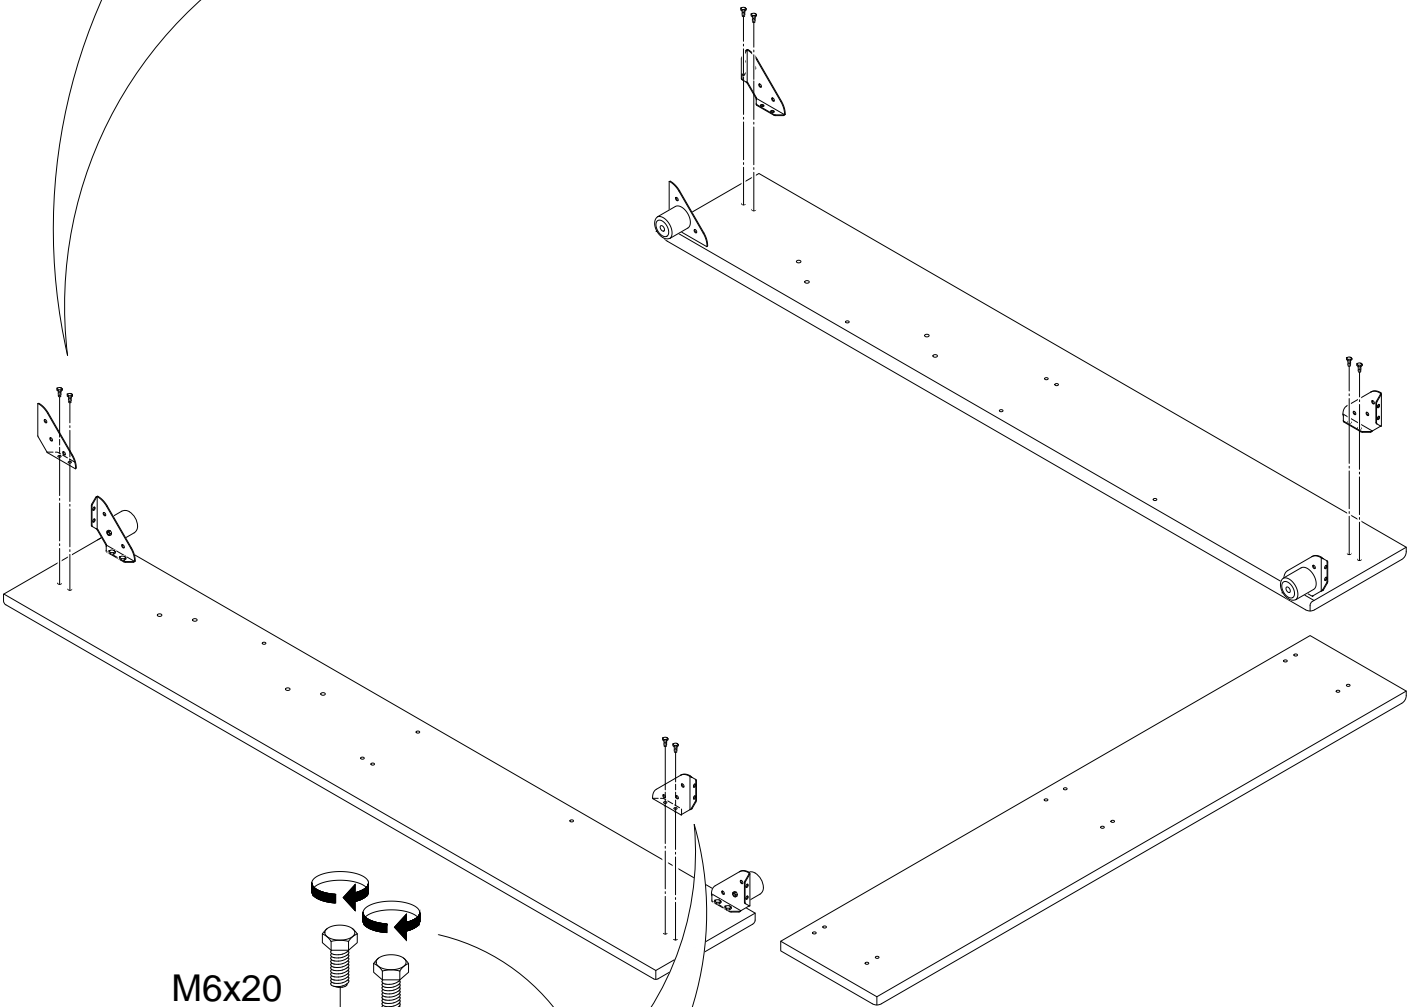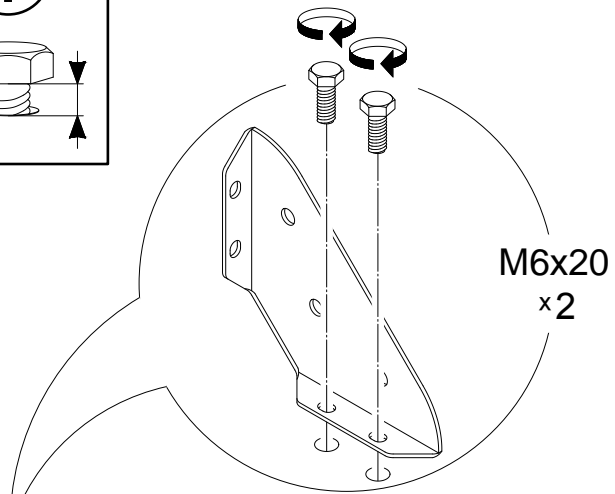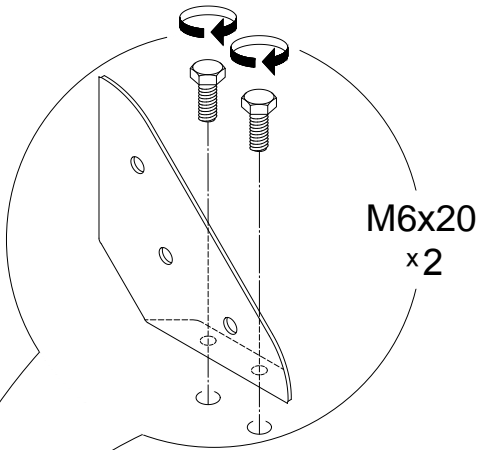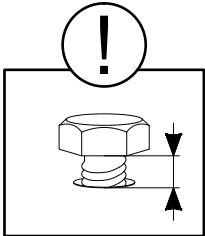


4

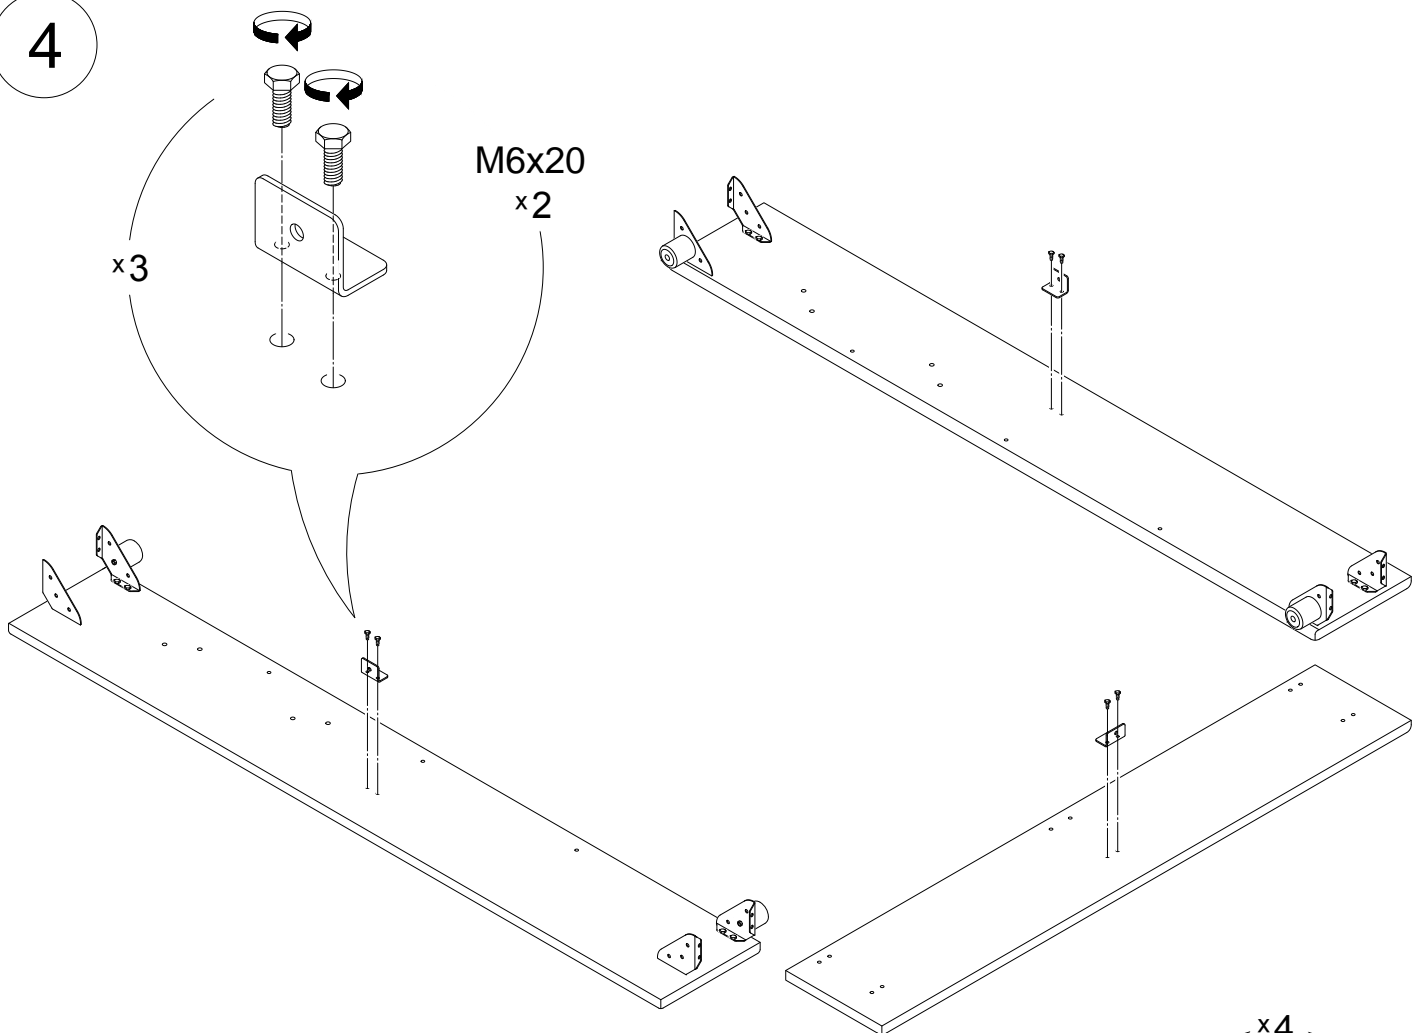


5

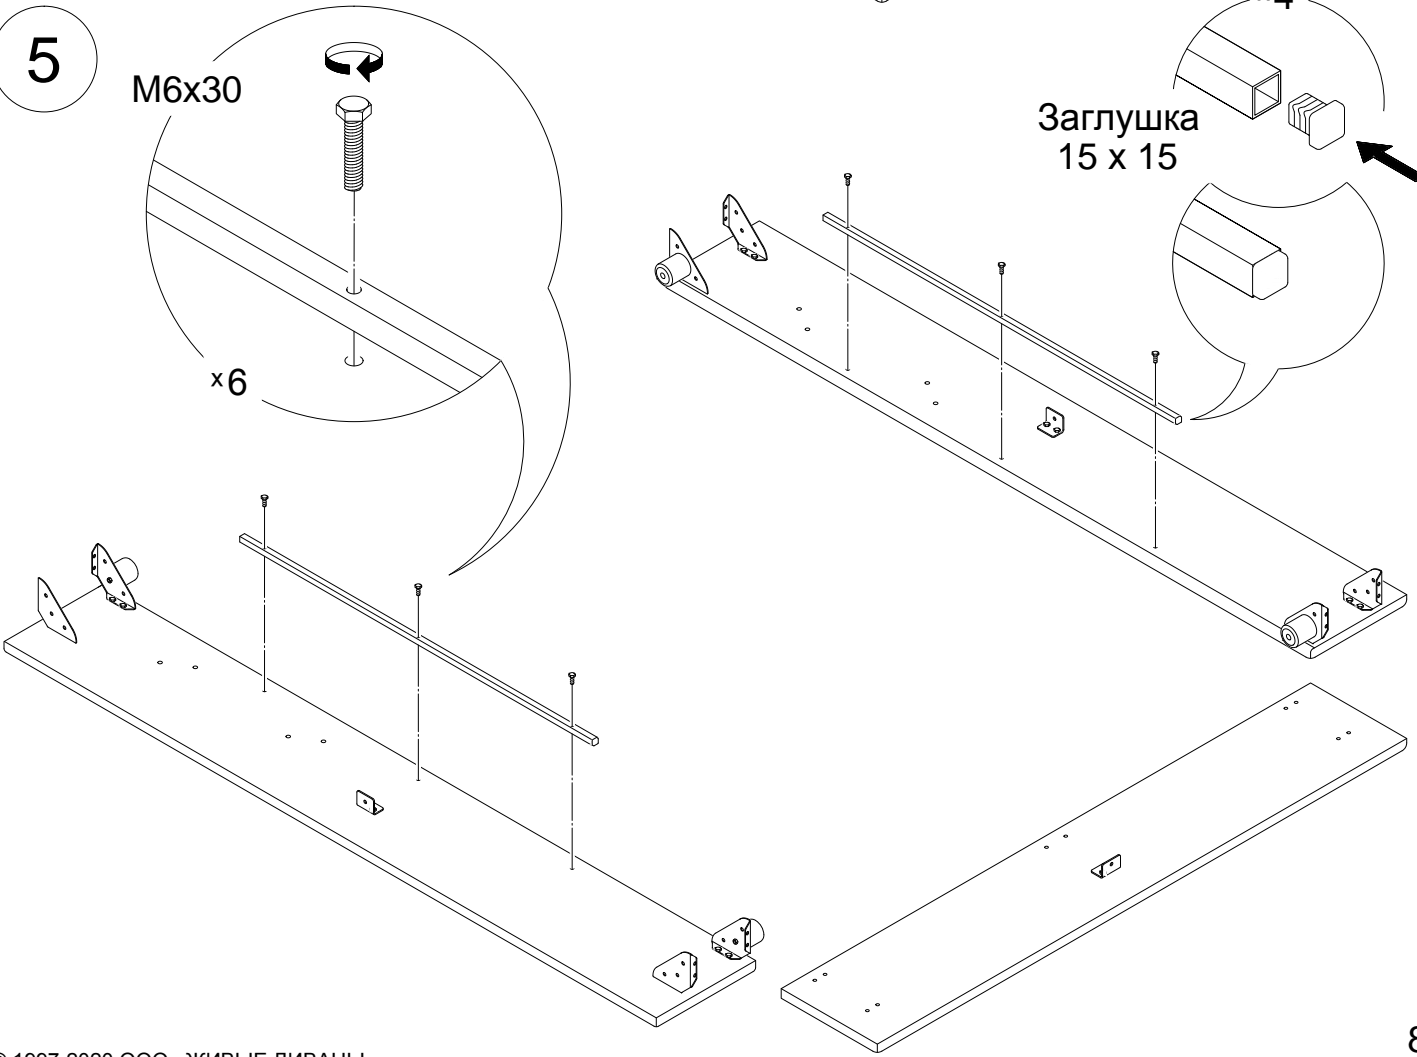


6

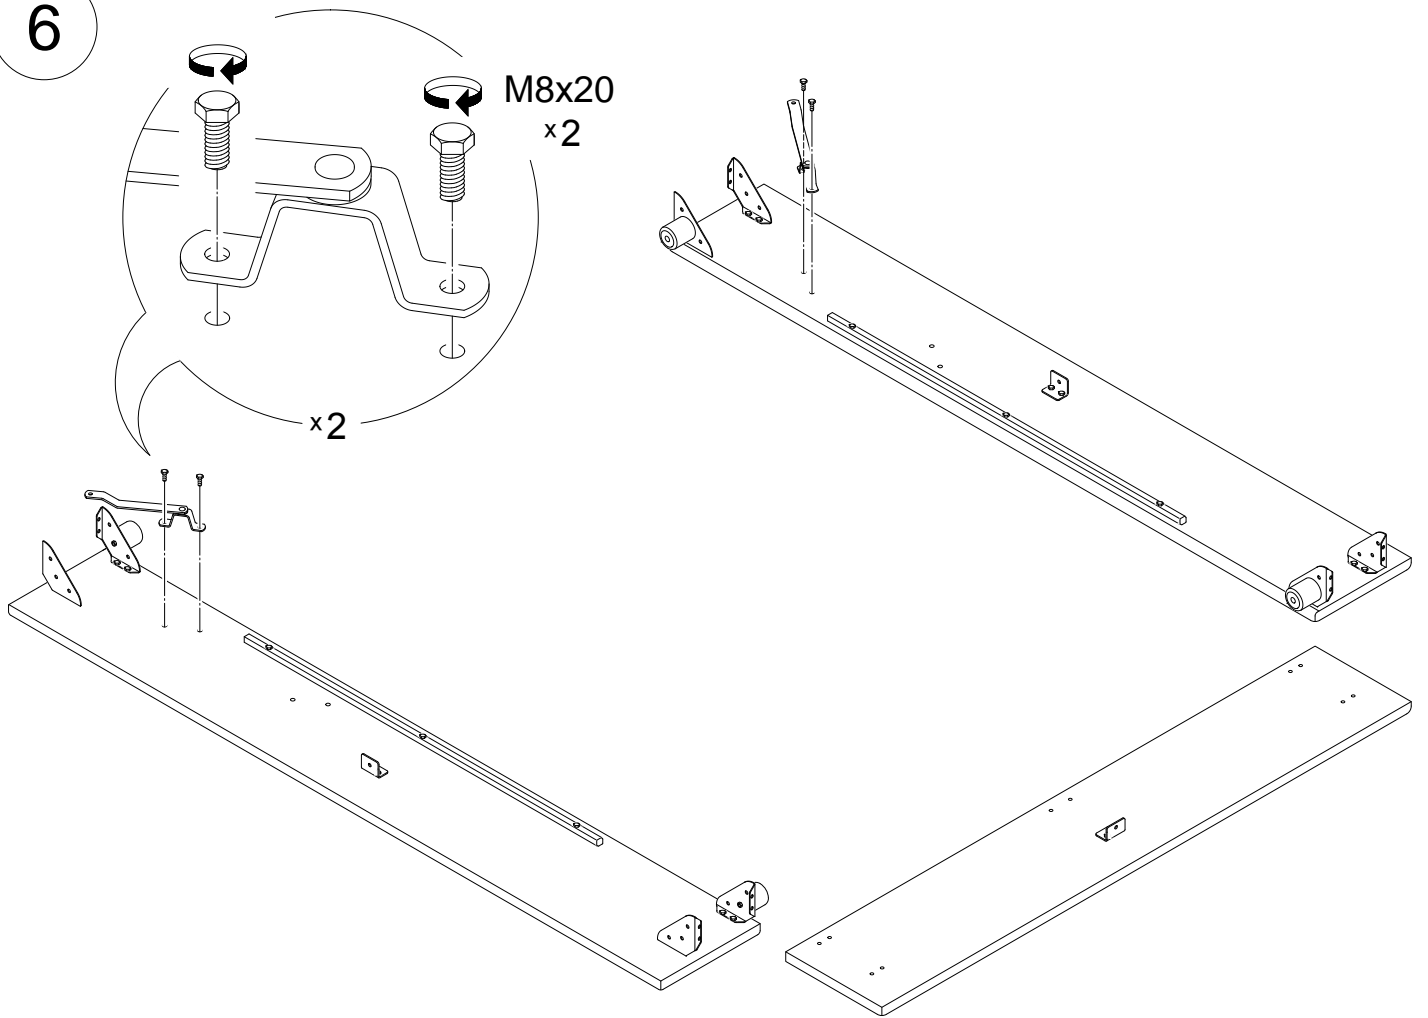





7

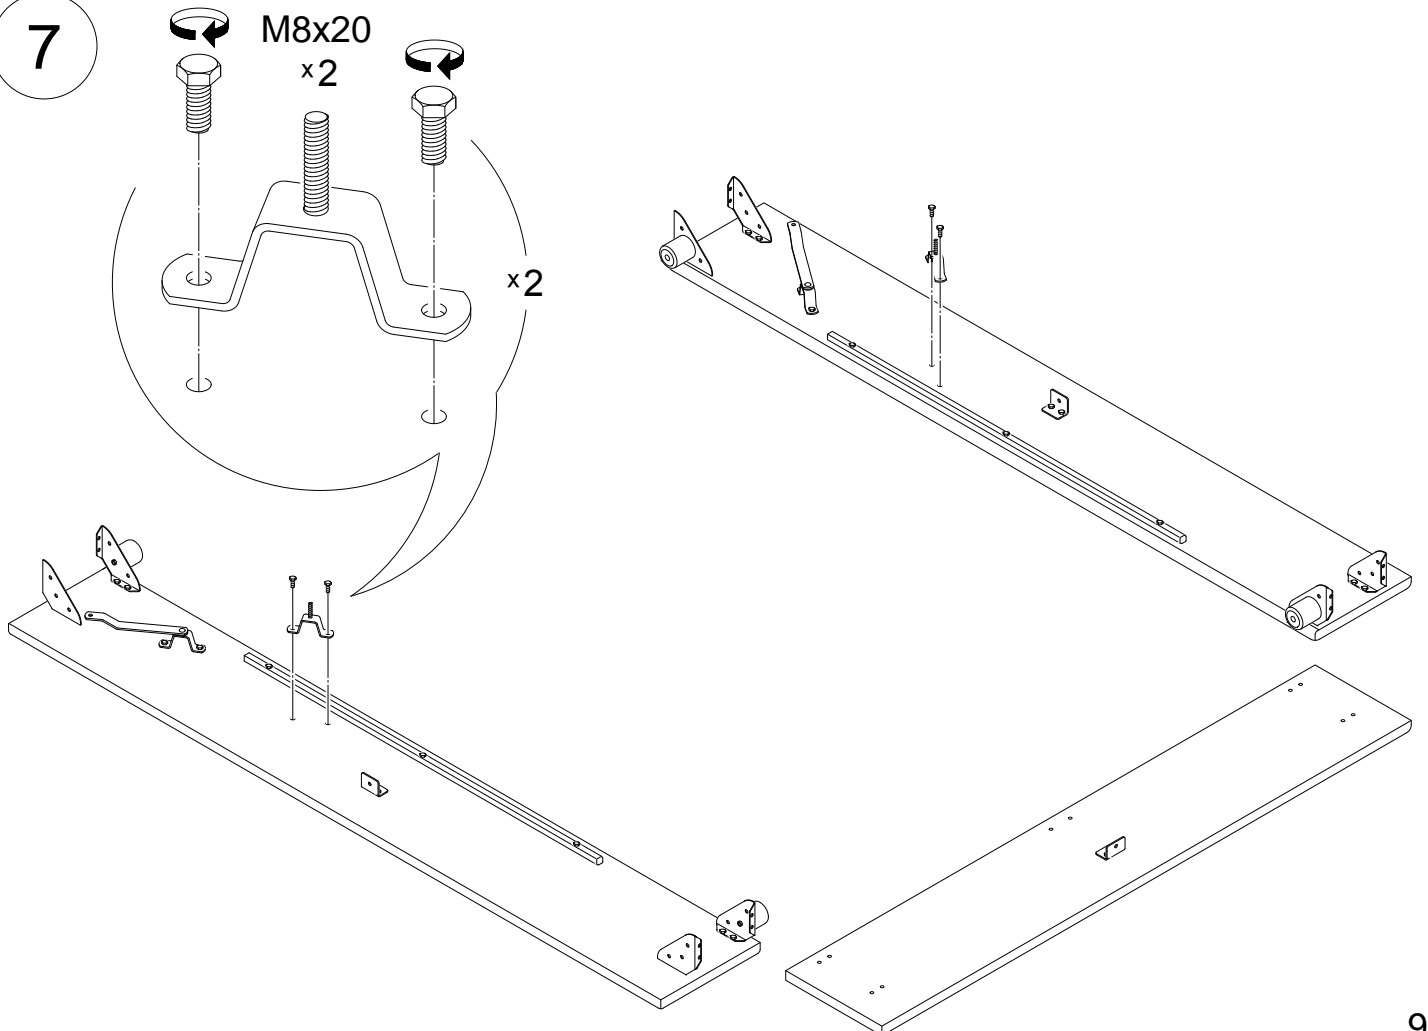



8

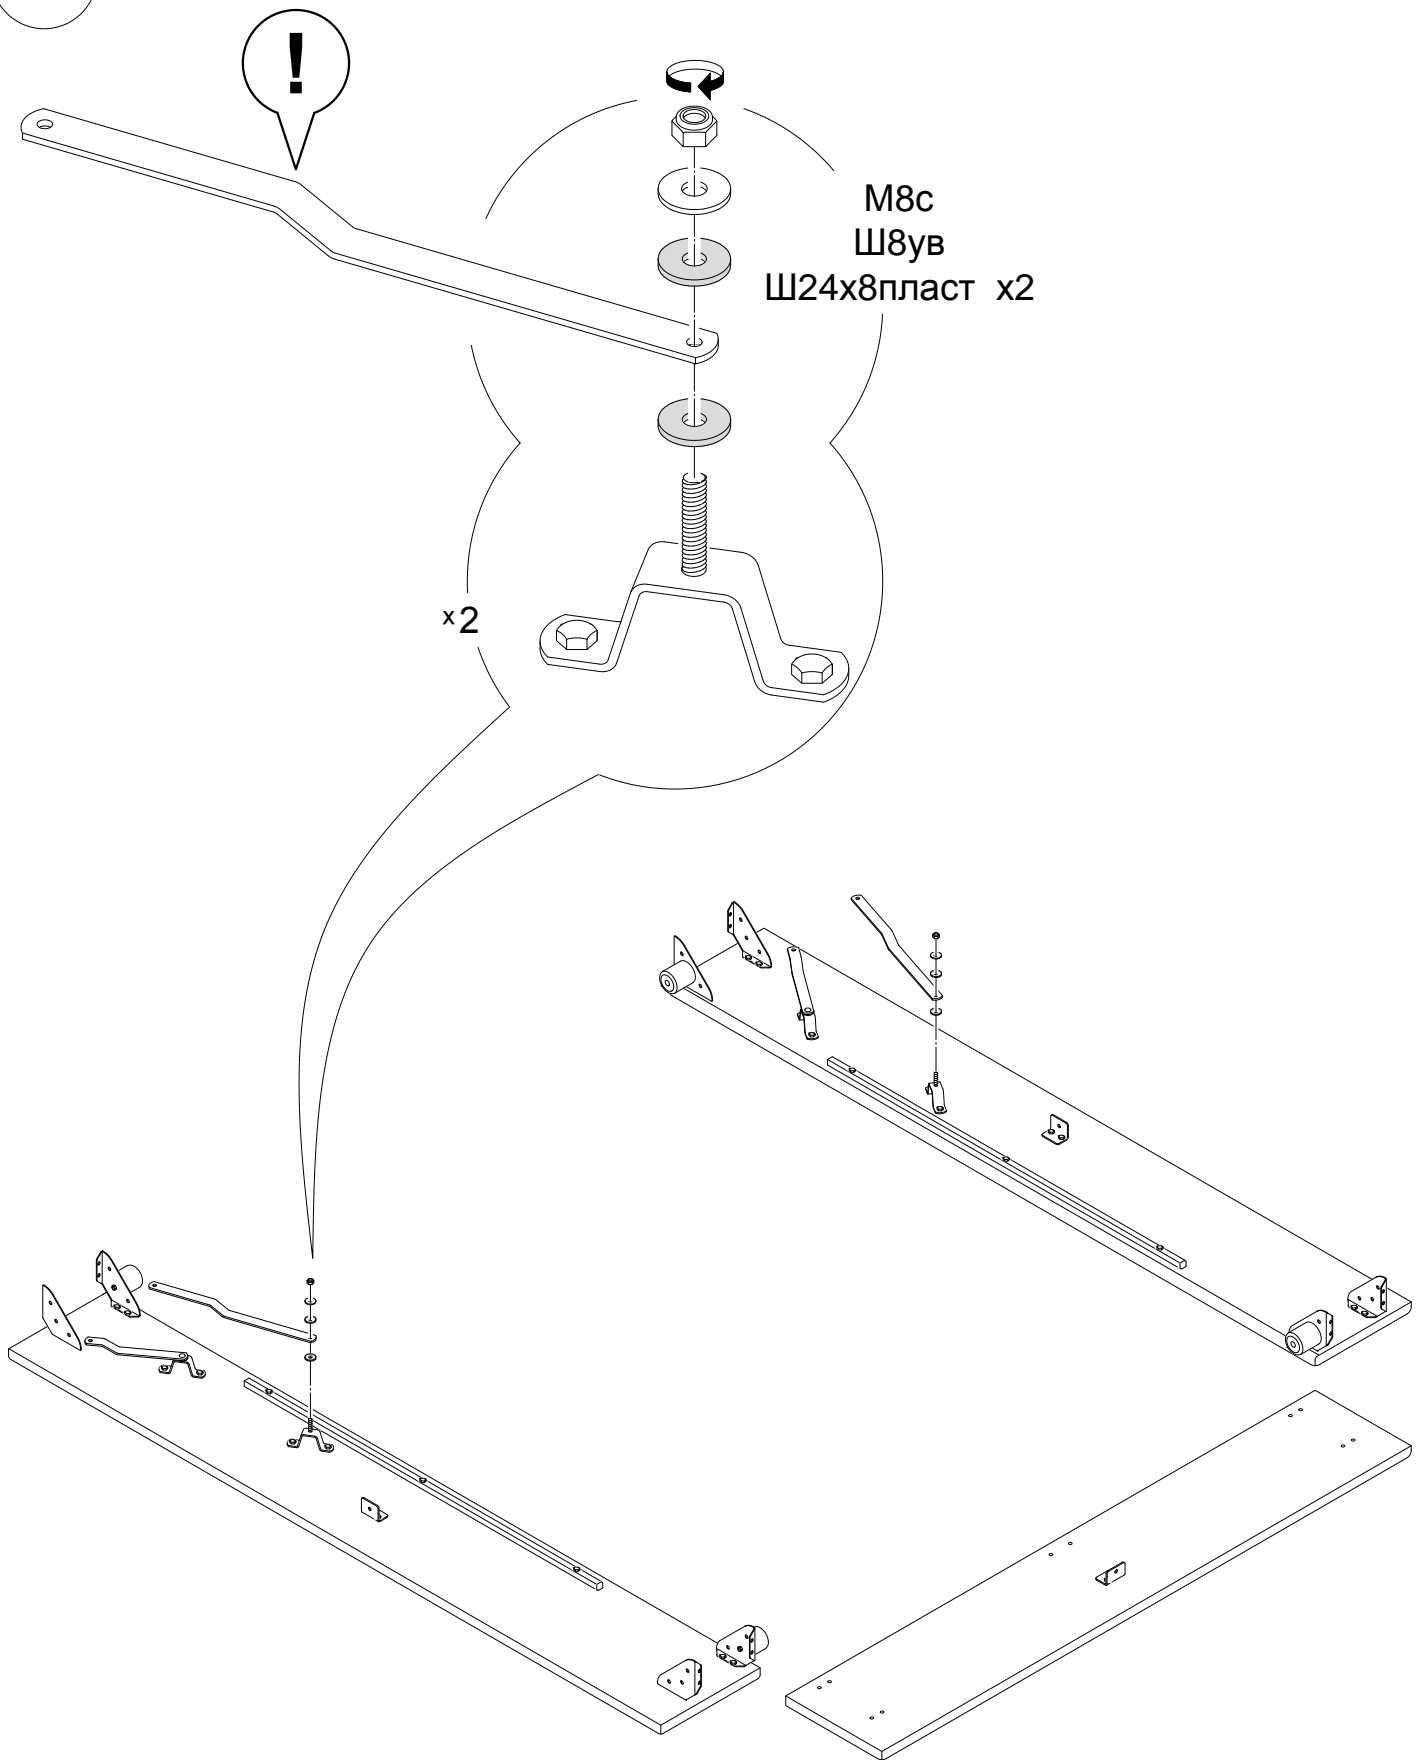



9

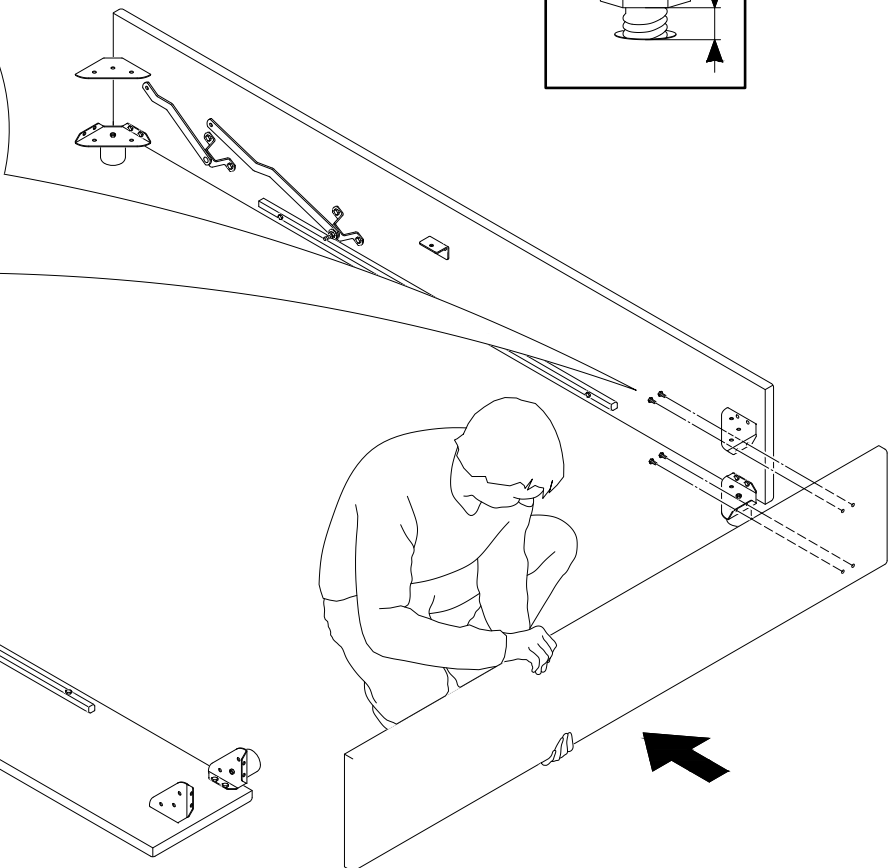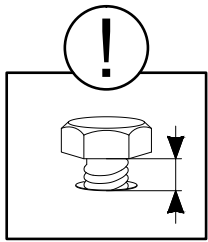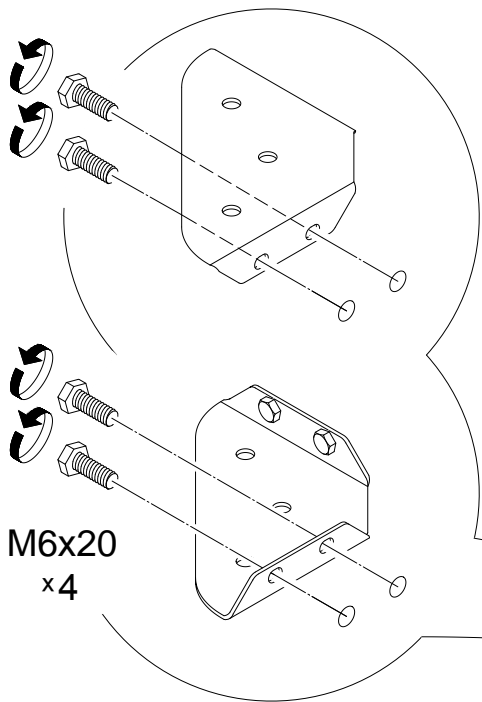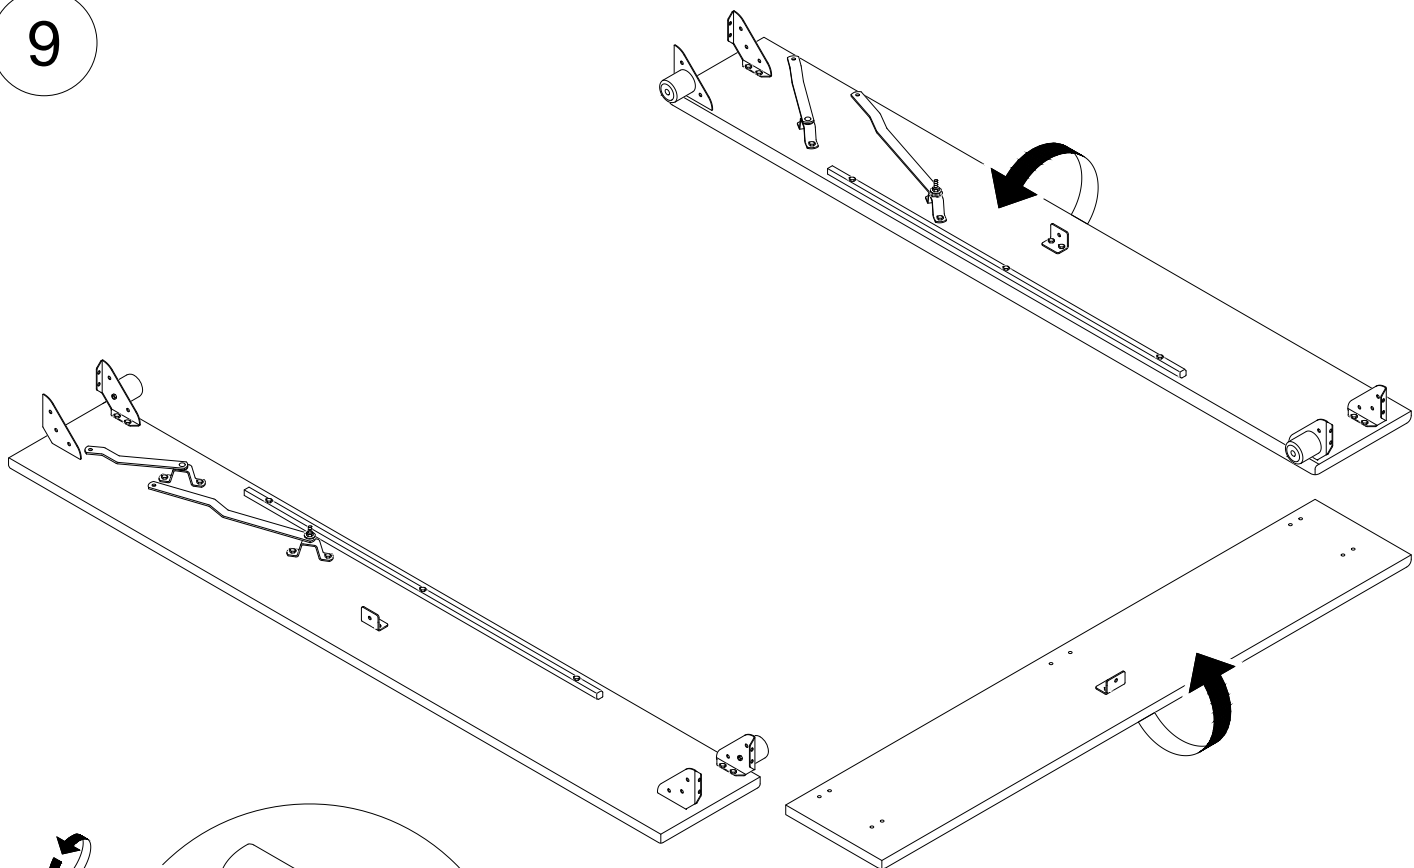



10

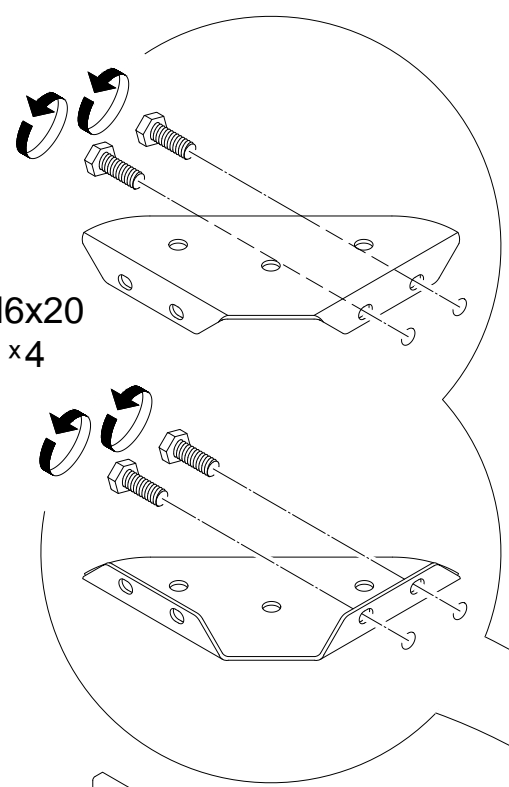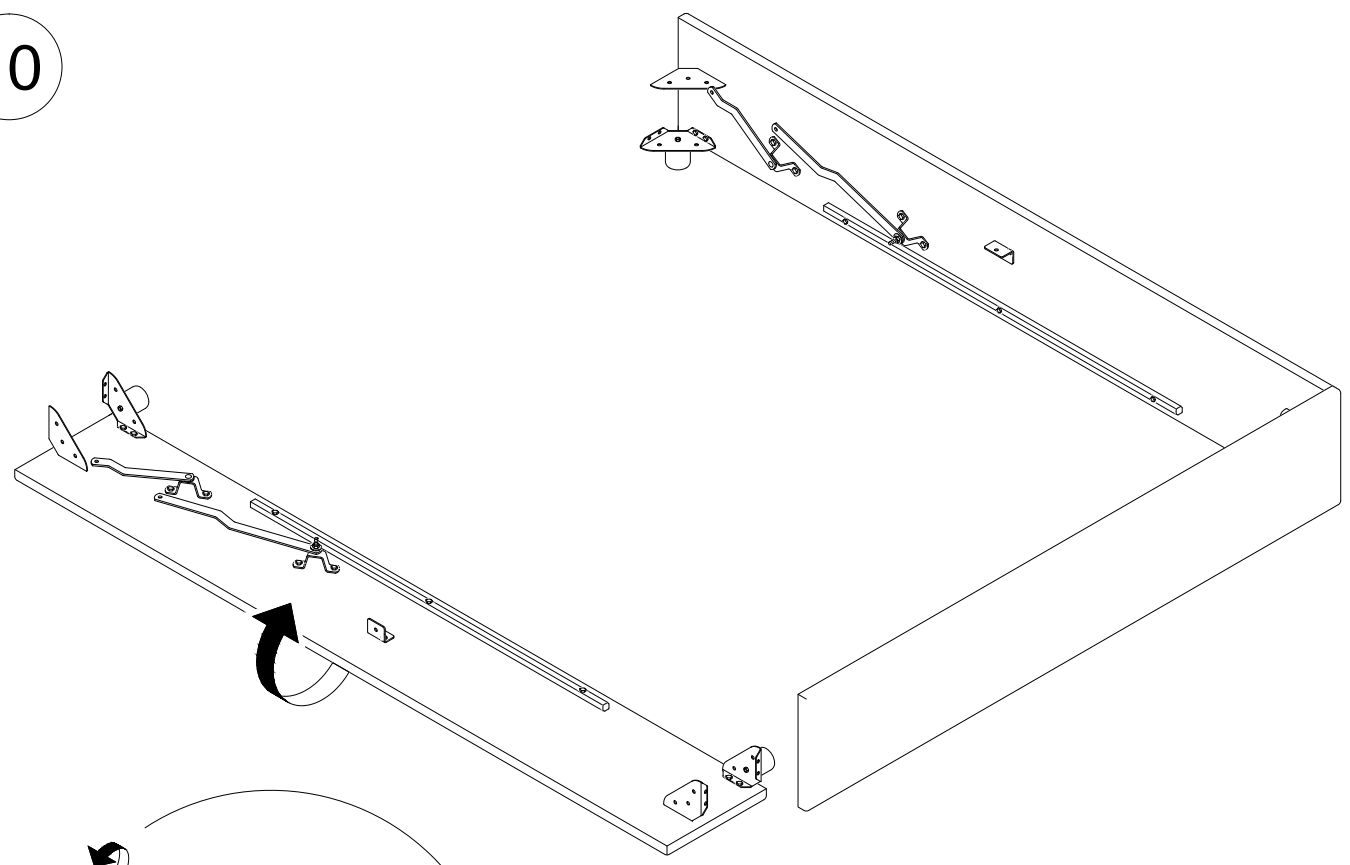



M6x20
x4

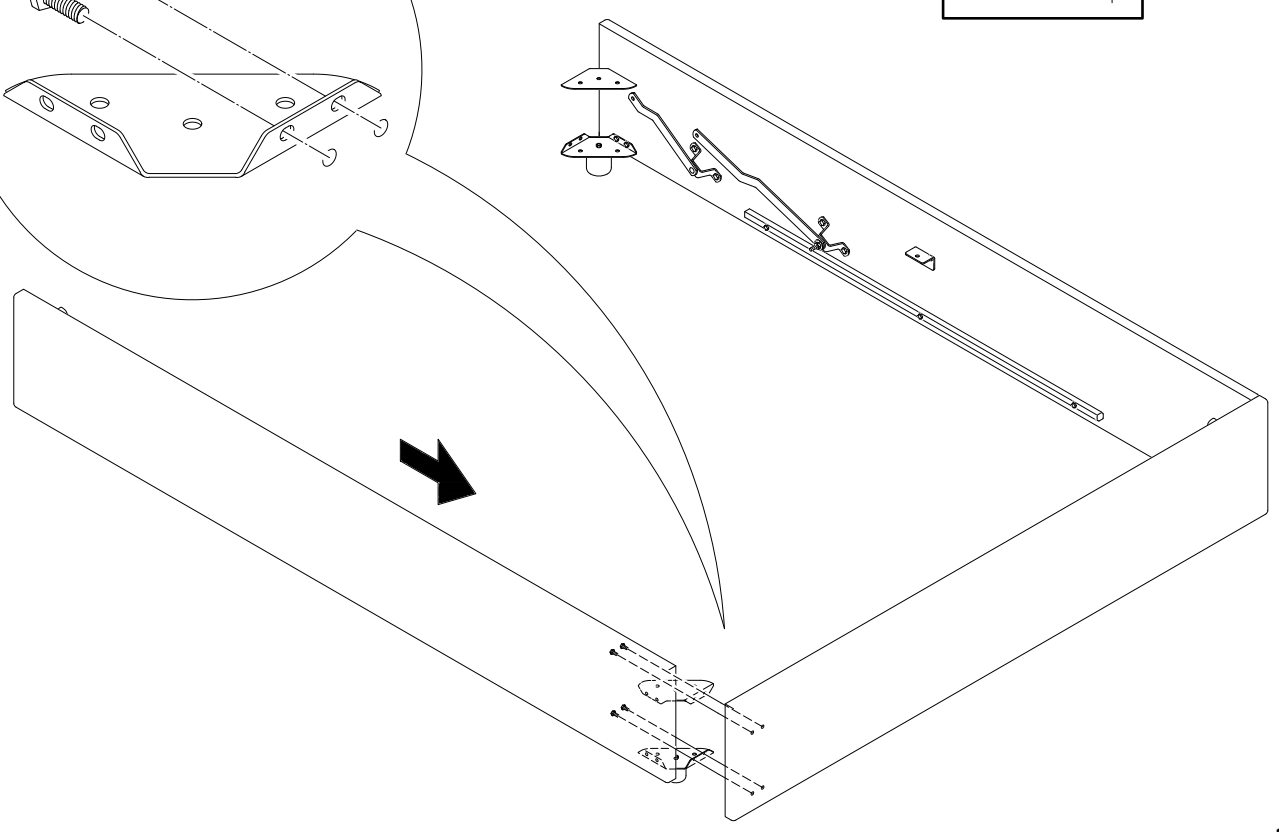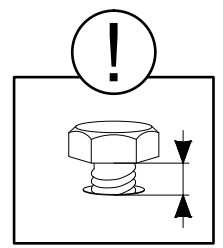


11

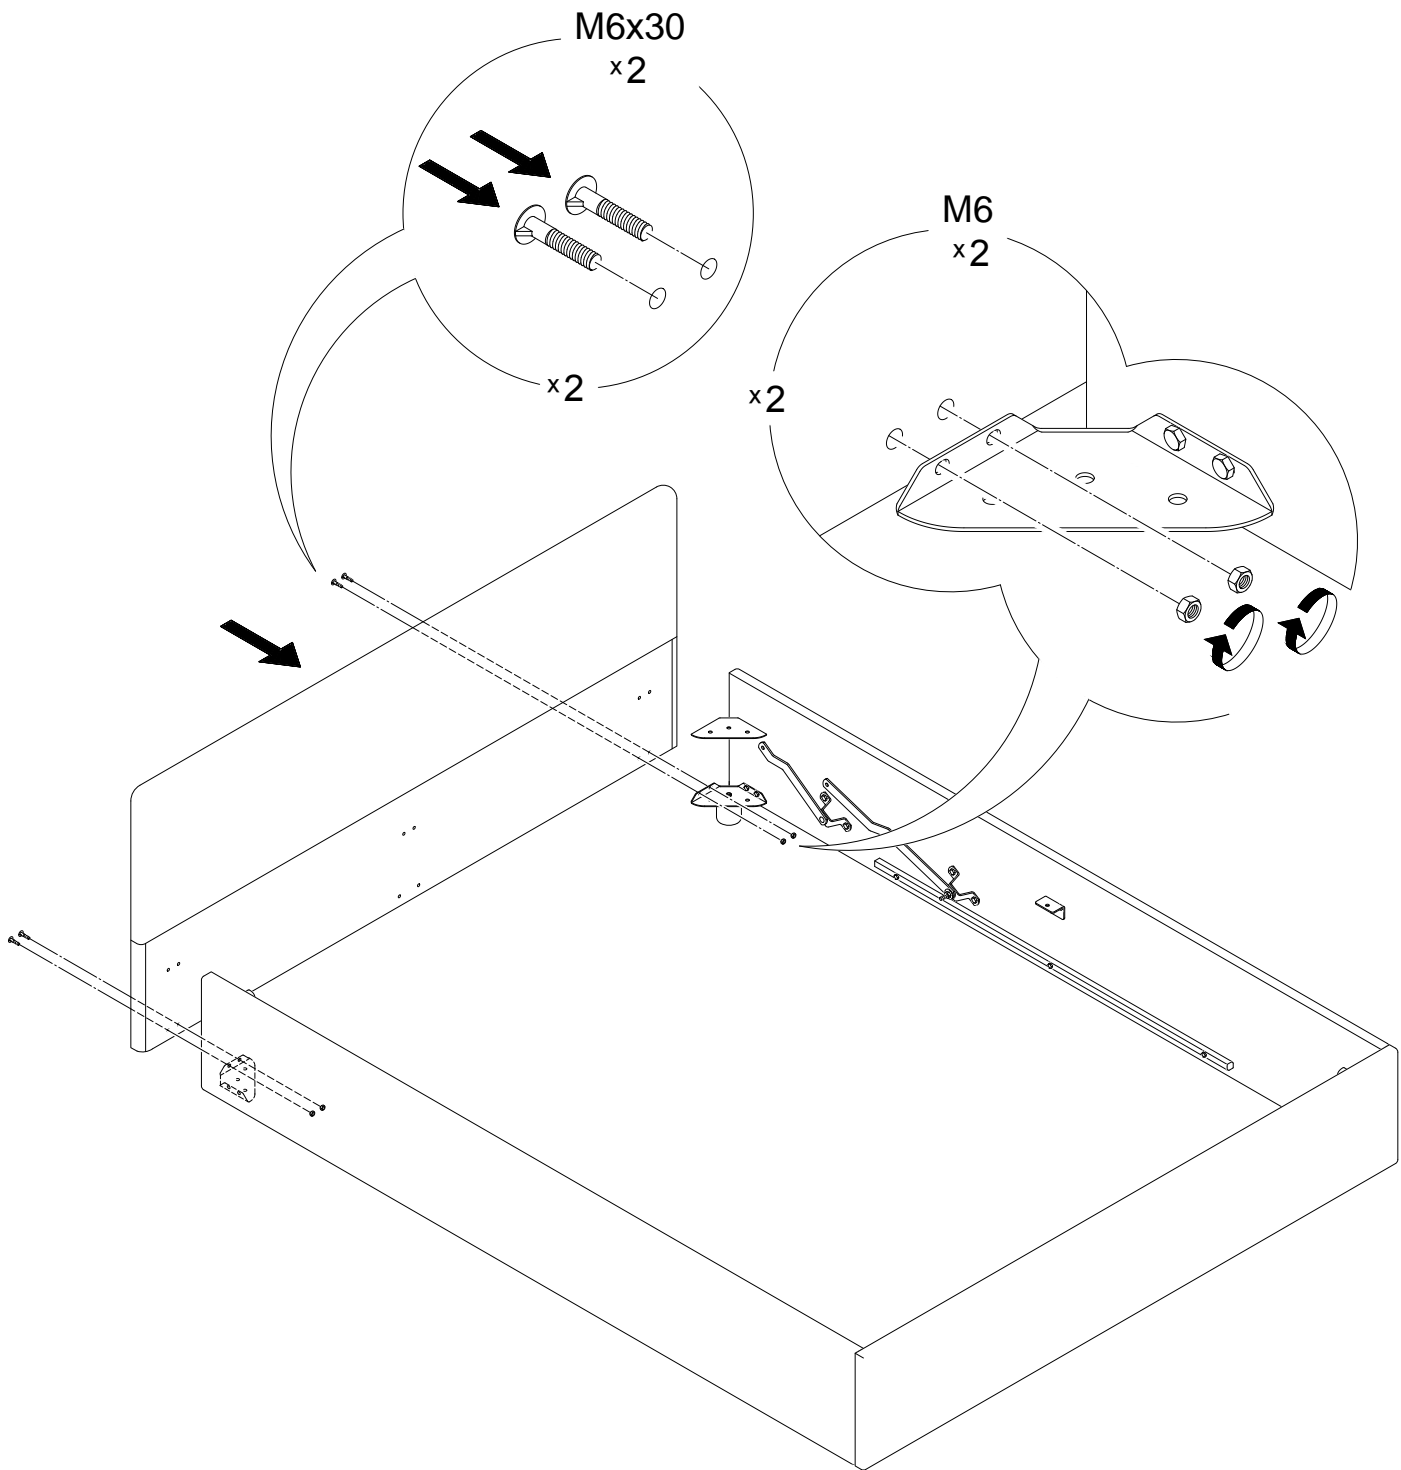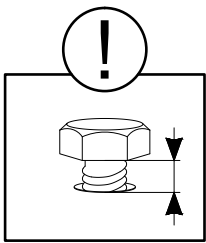


12

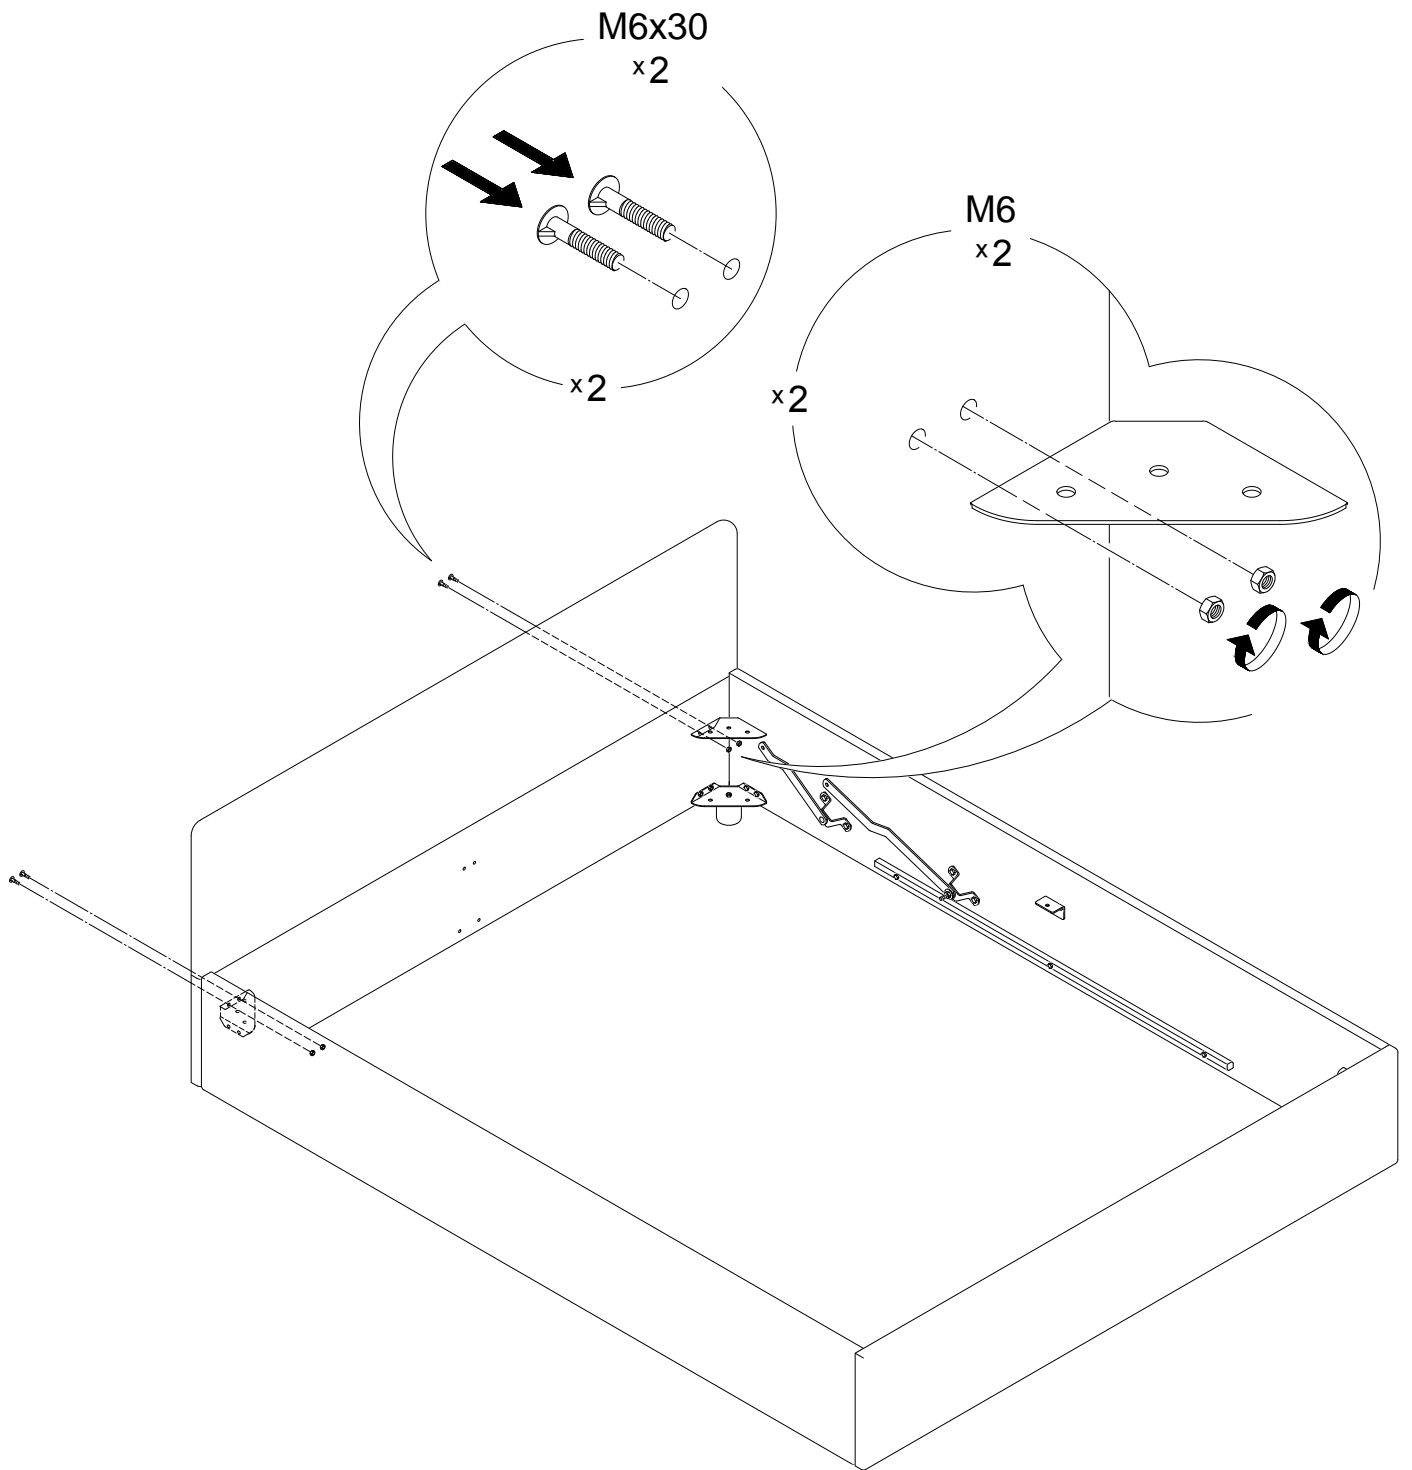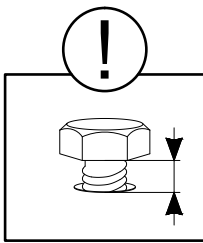


13


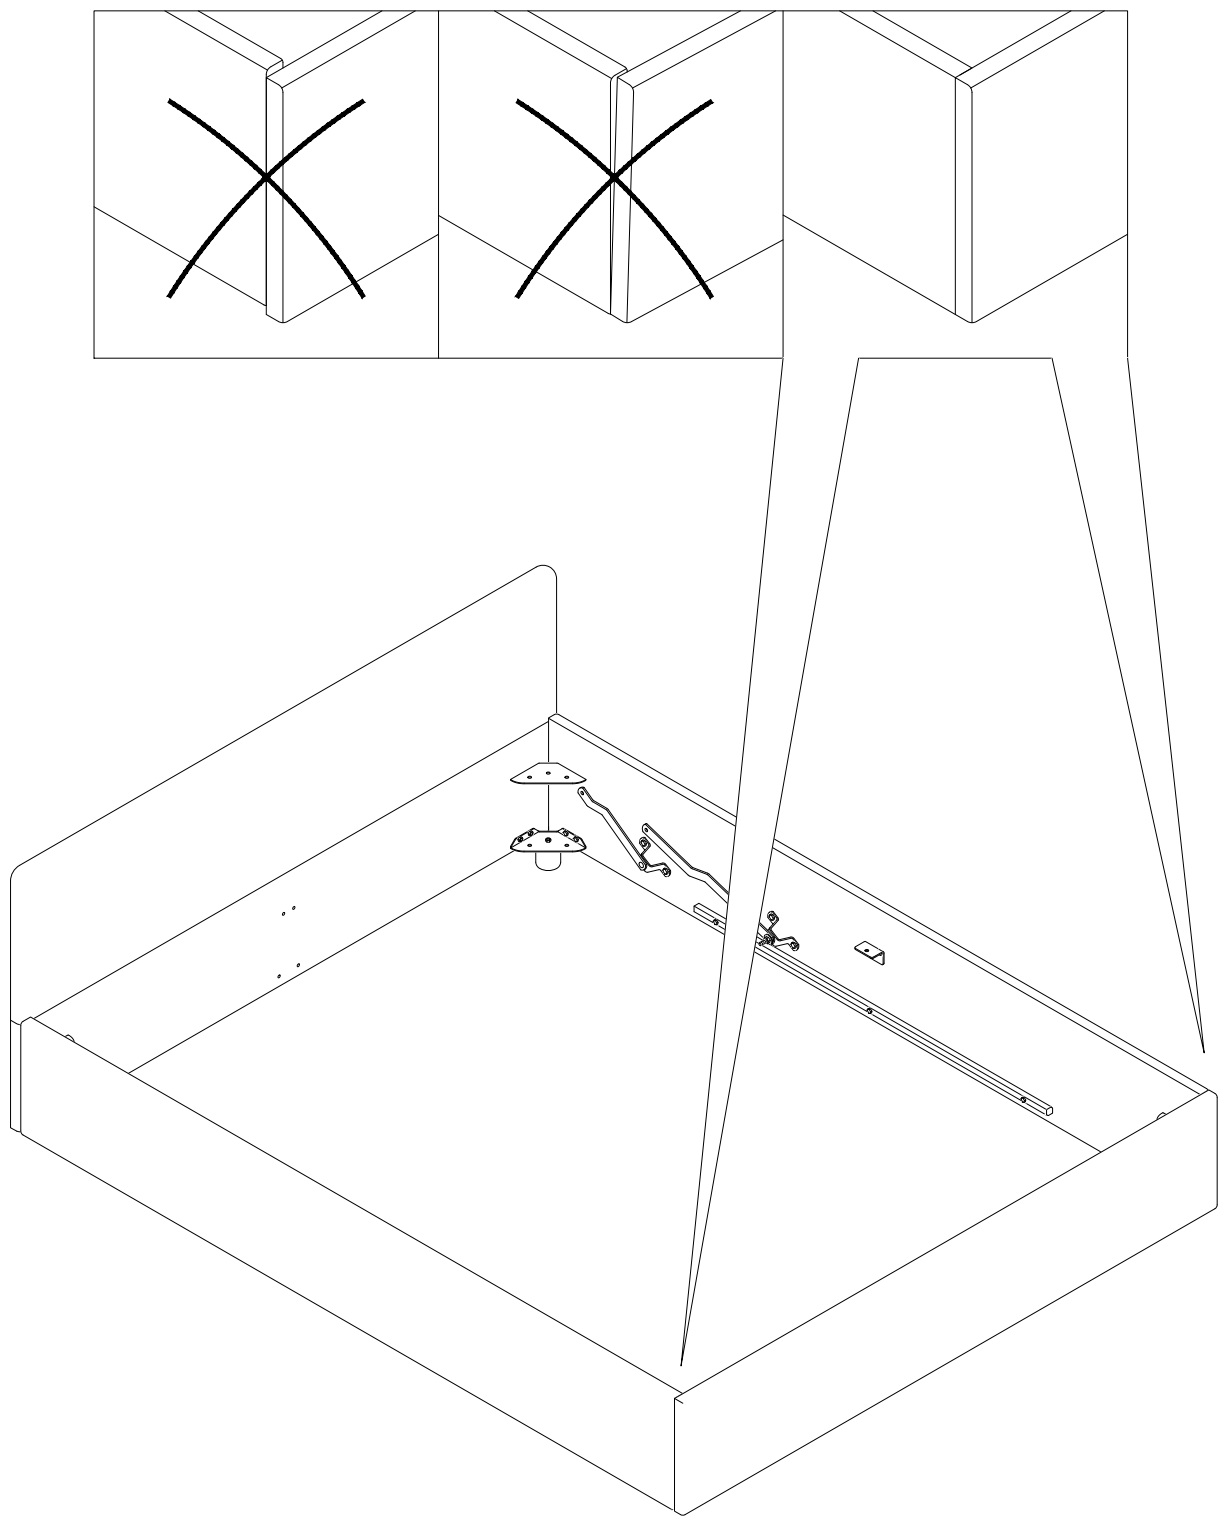


- 1
- 3
- 9
- 10
- 11
- 12

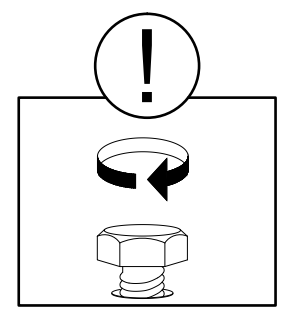



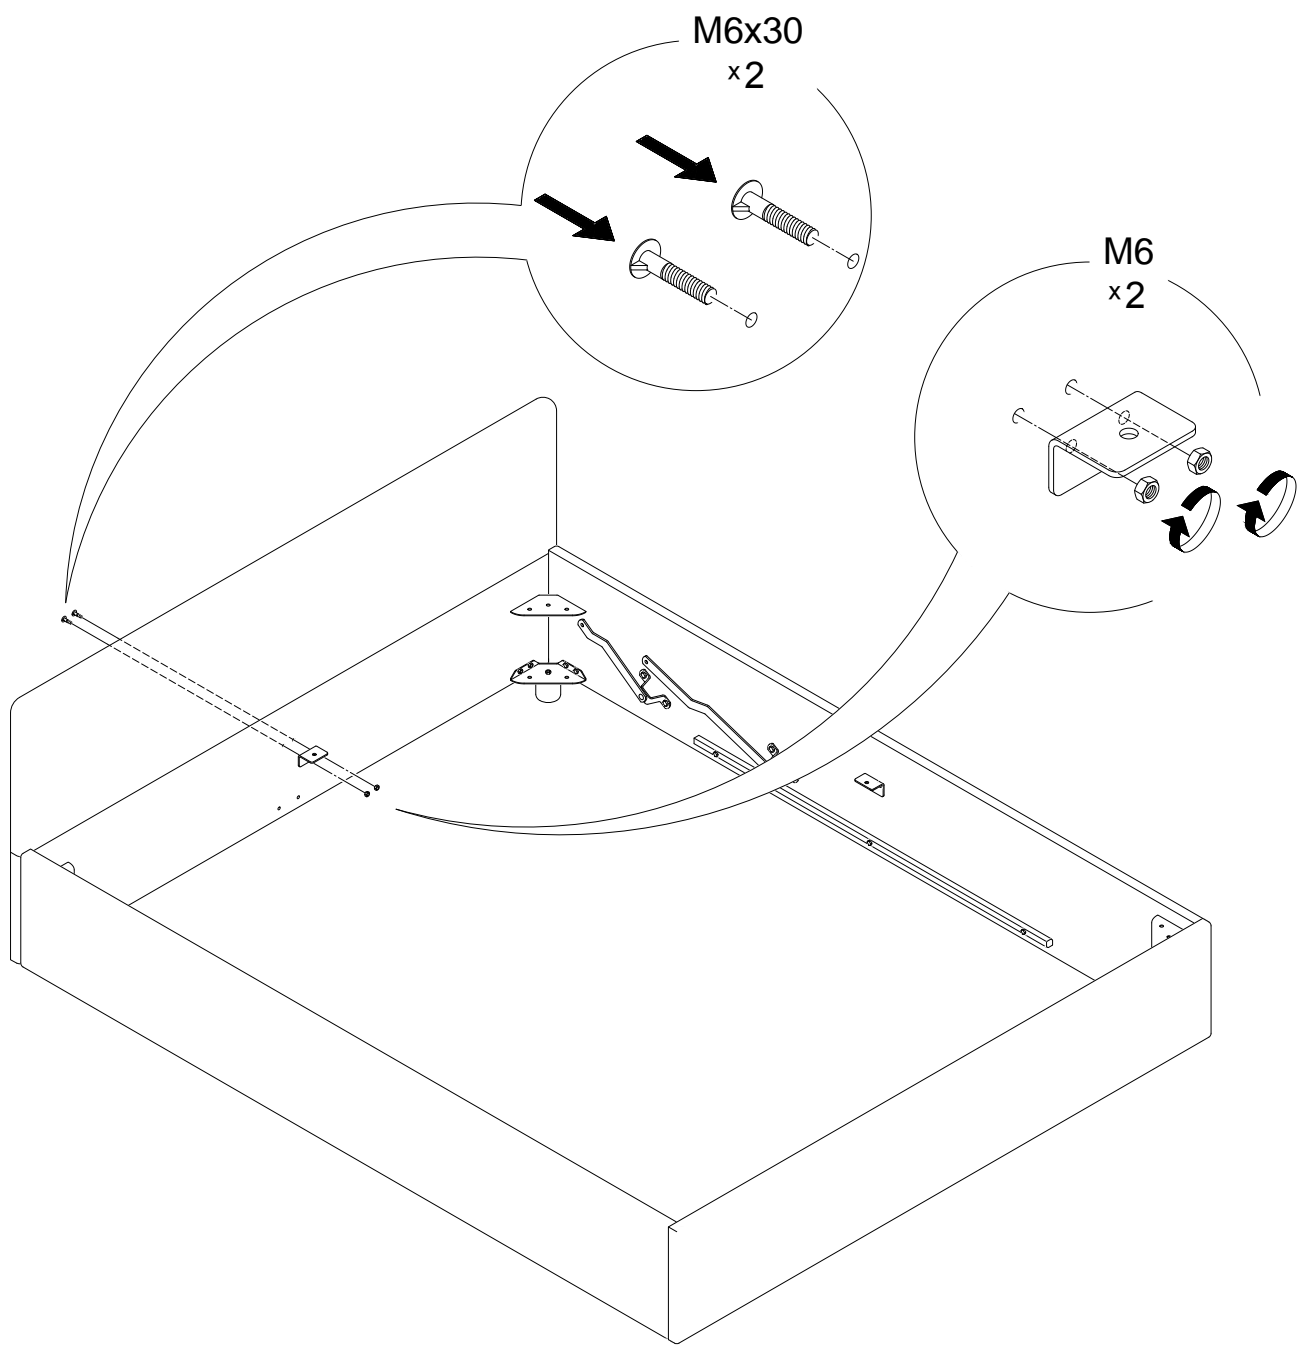


15

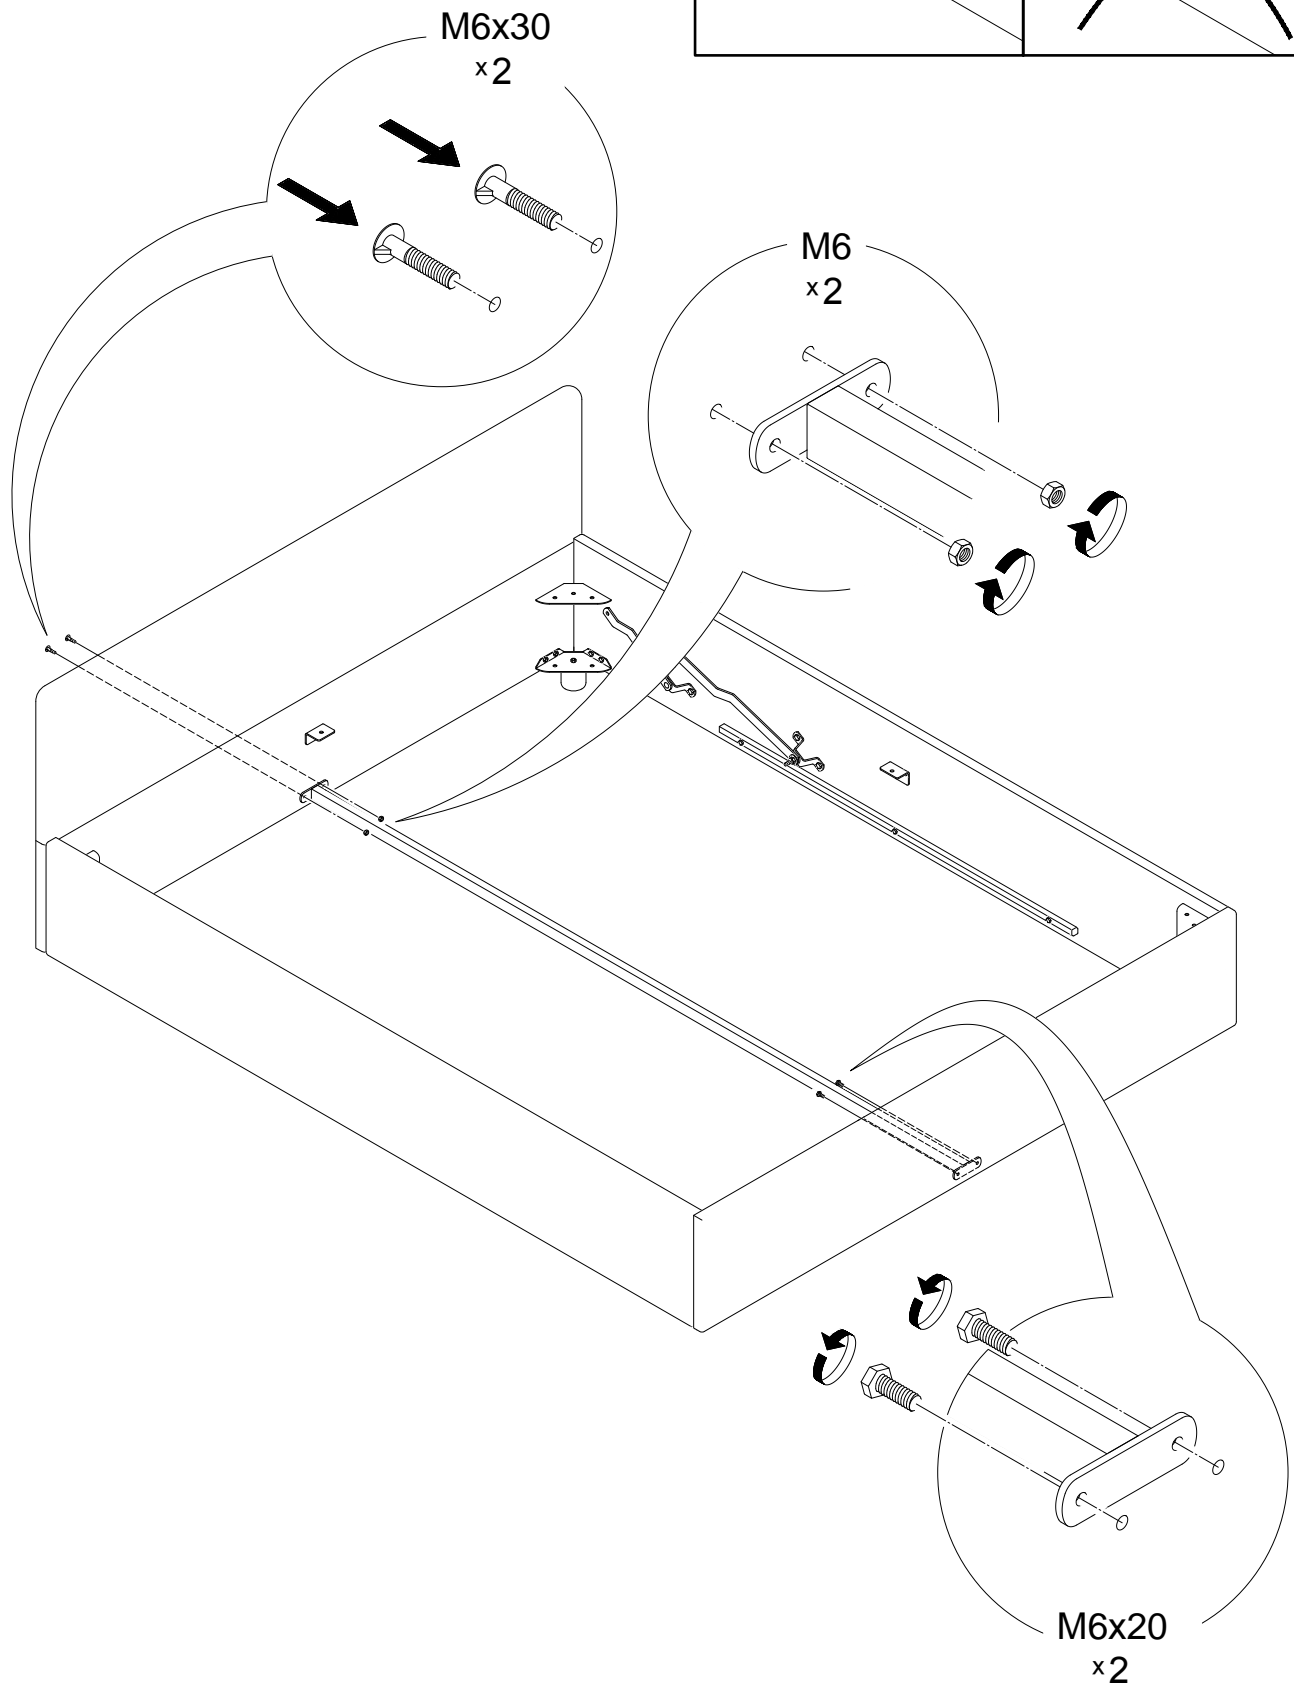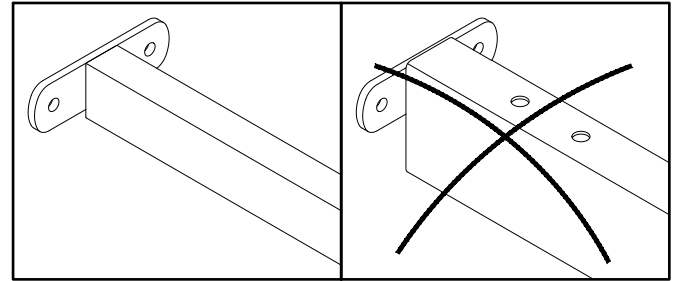


16

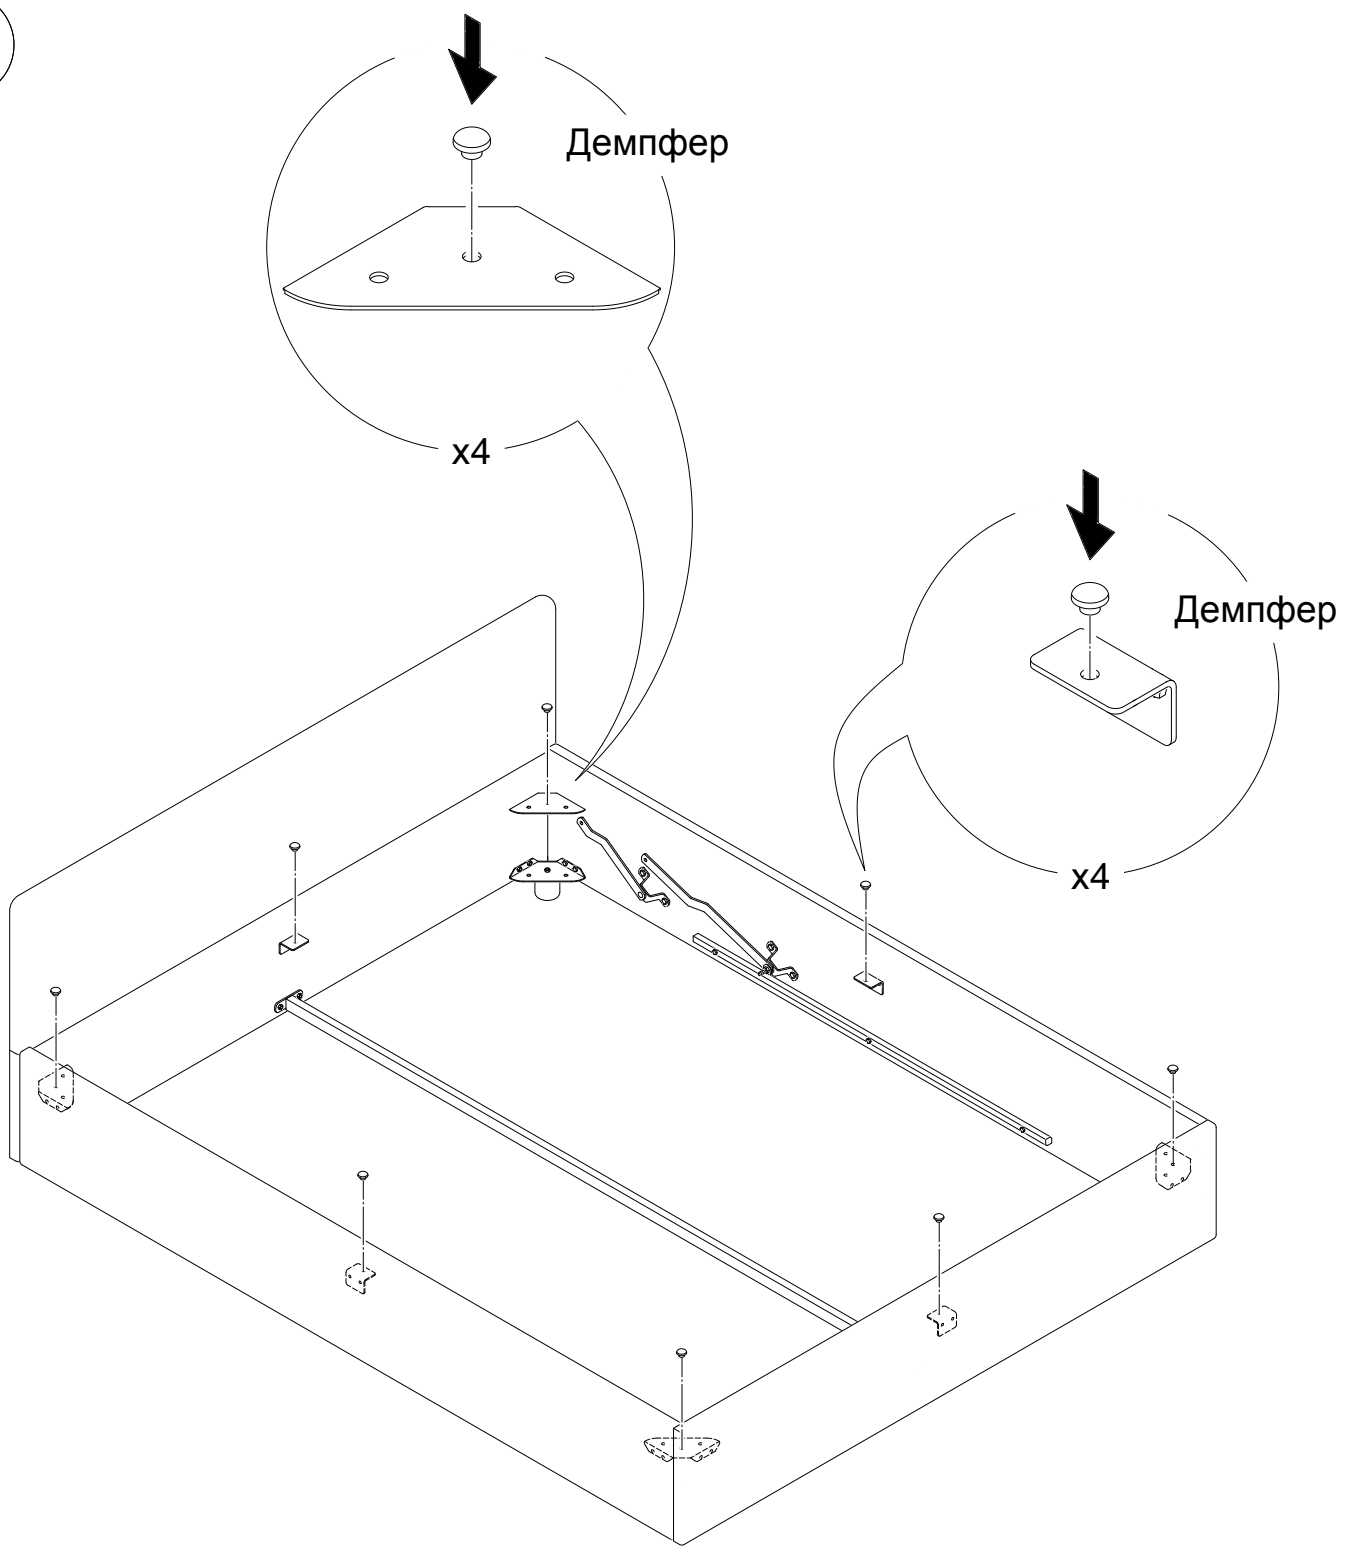



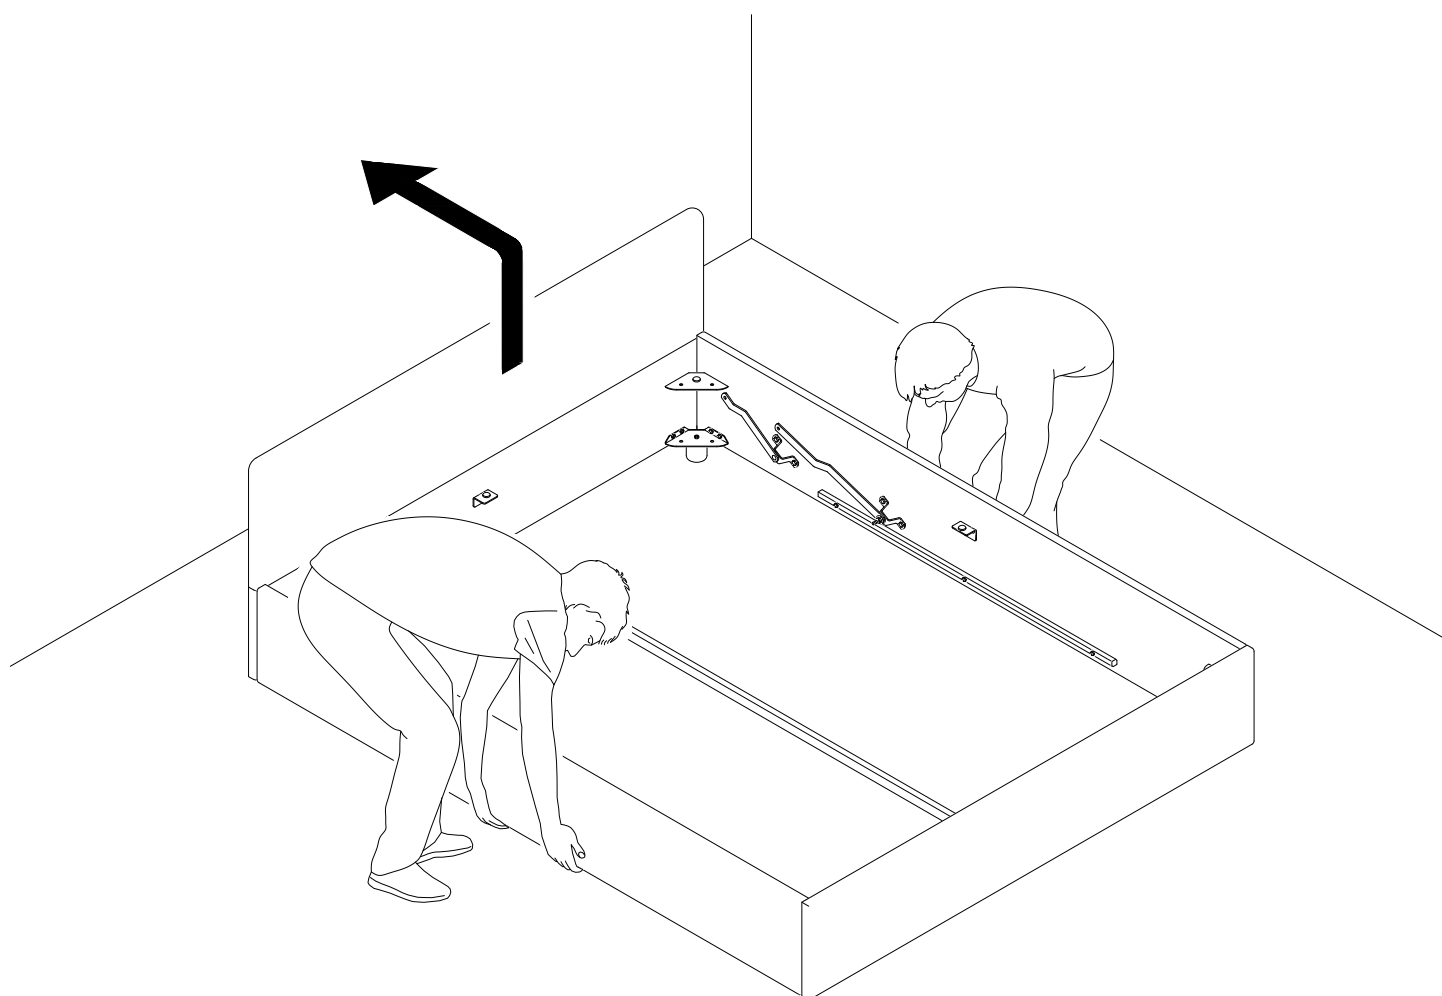
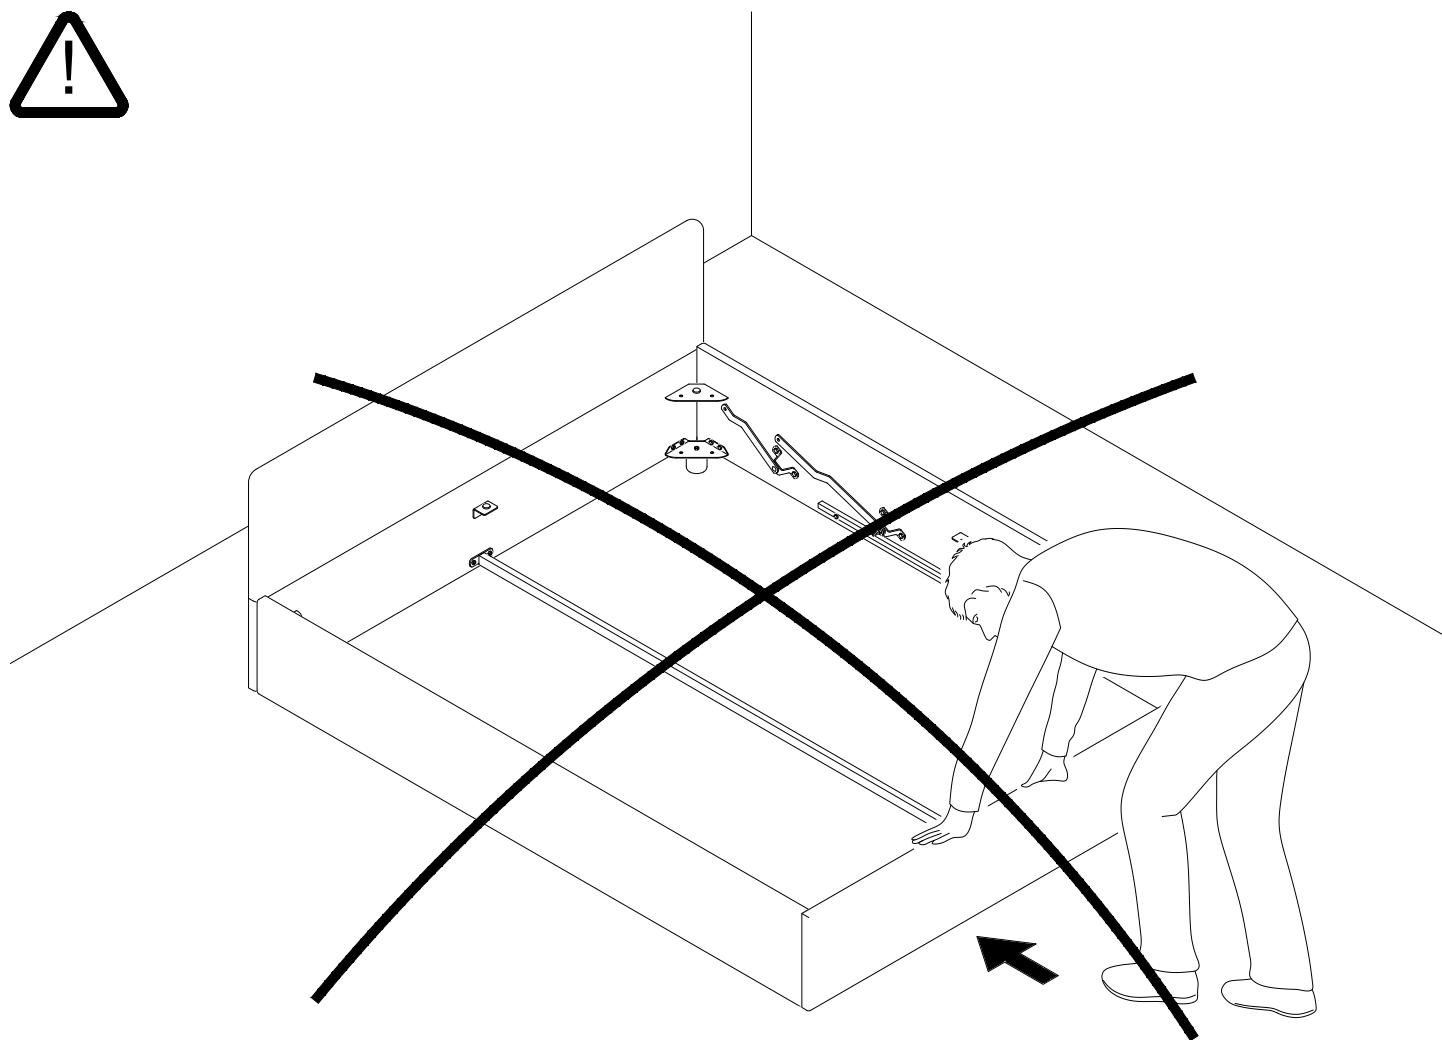




17

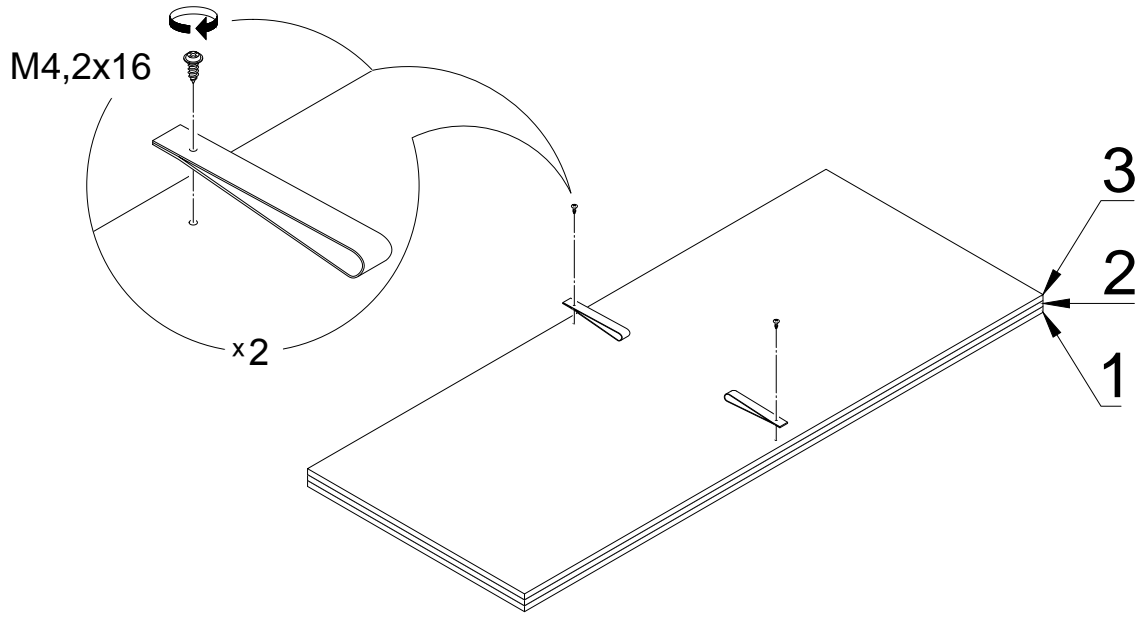


18

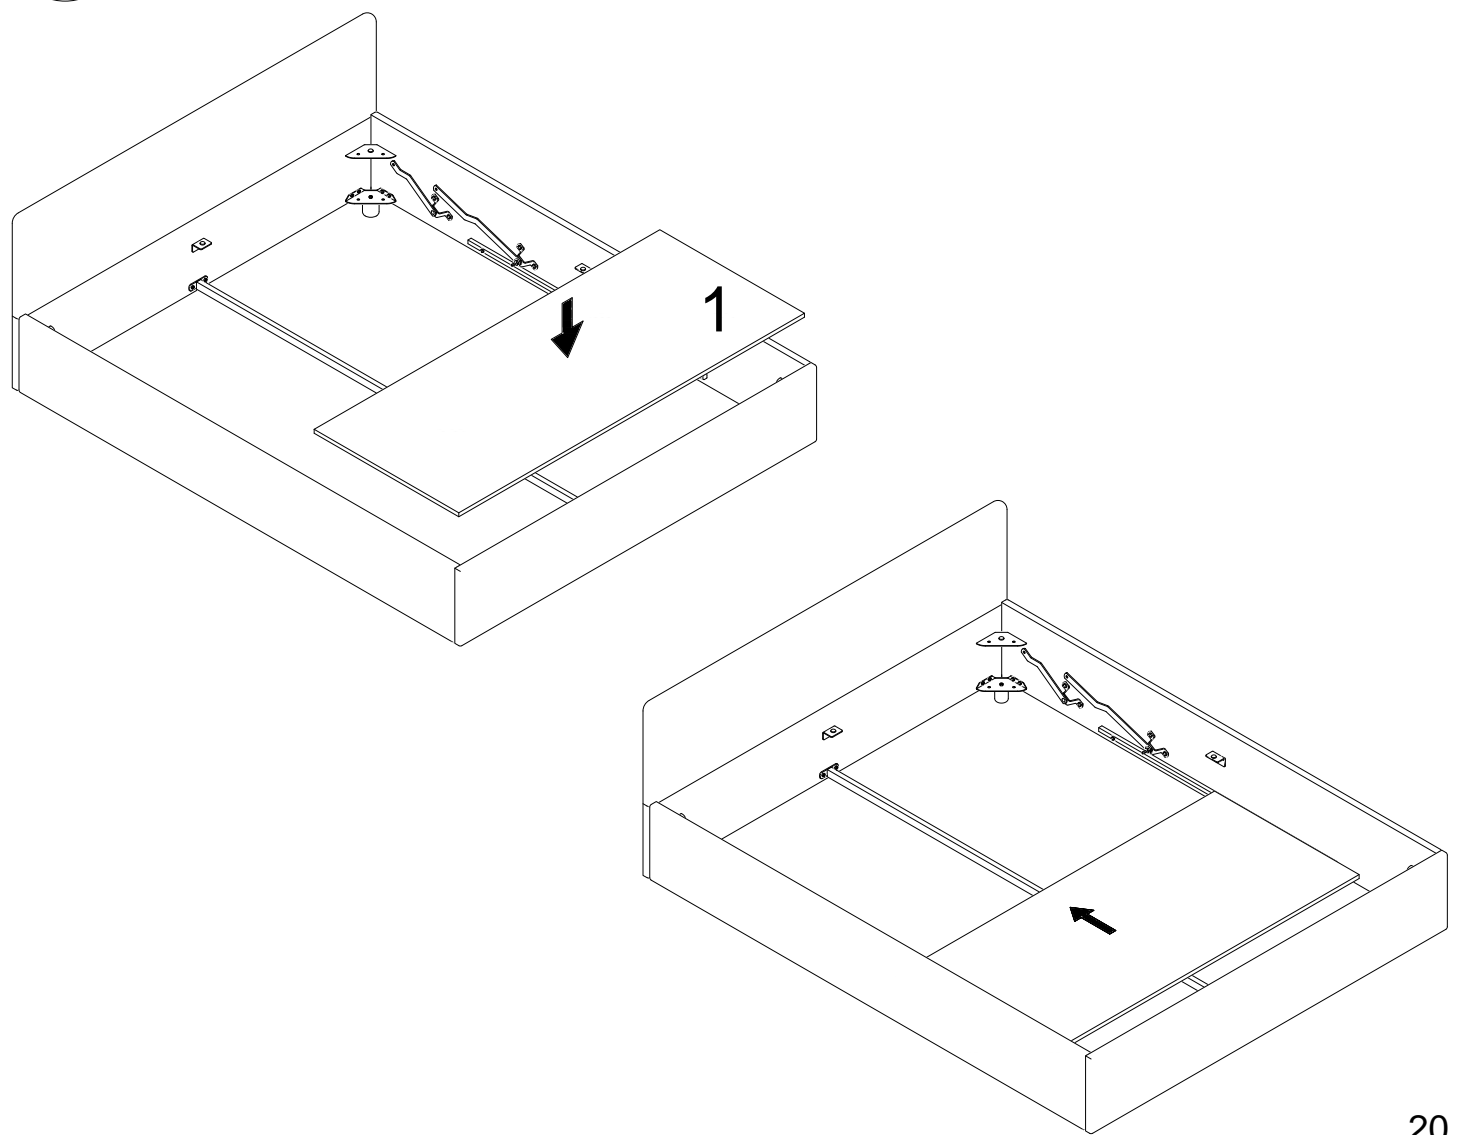

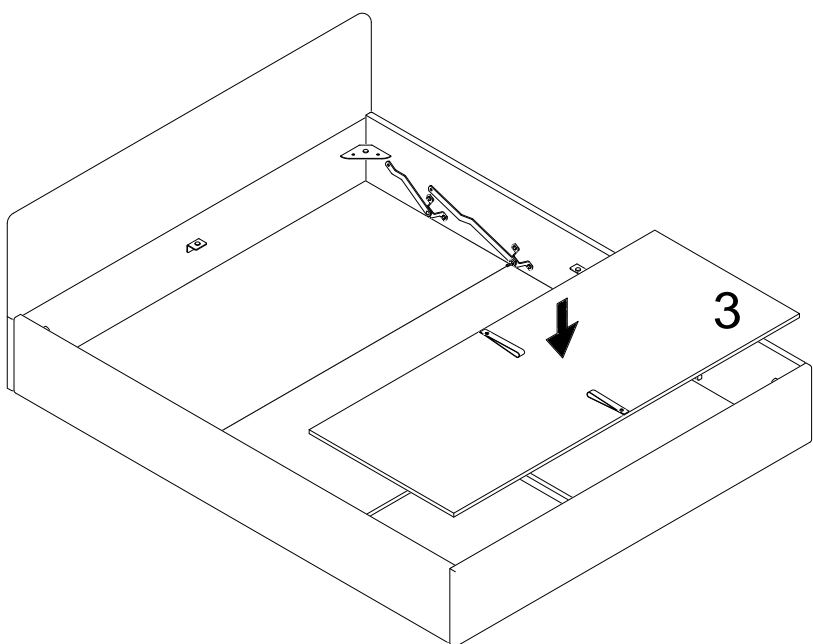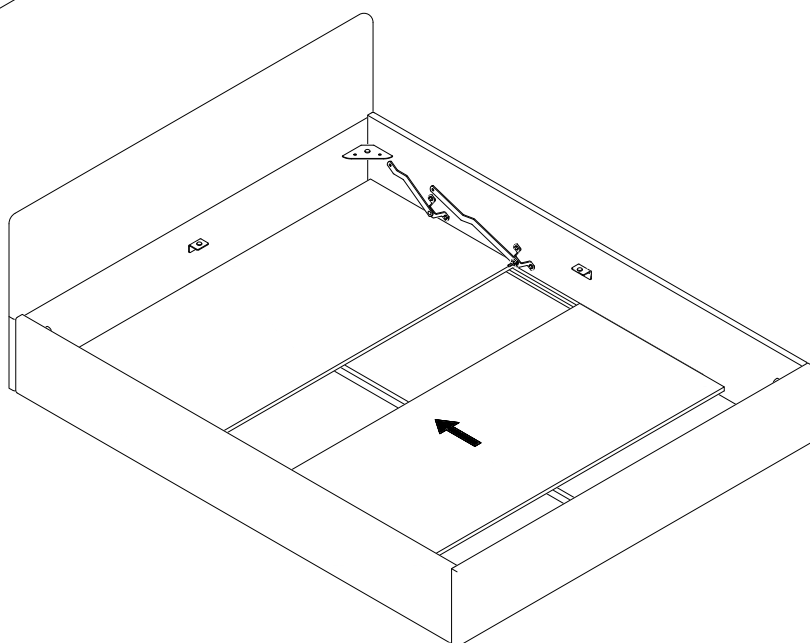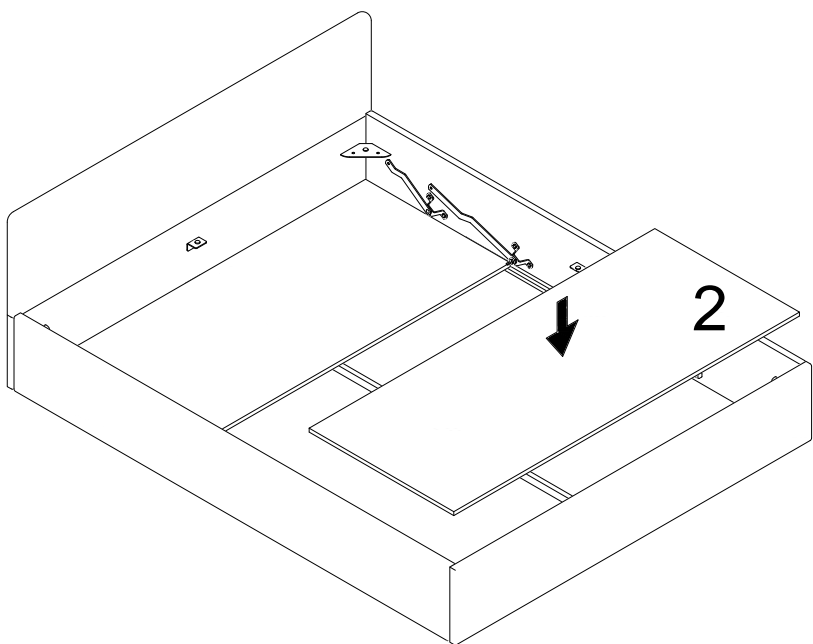


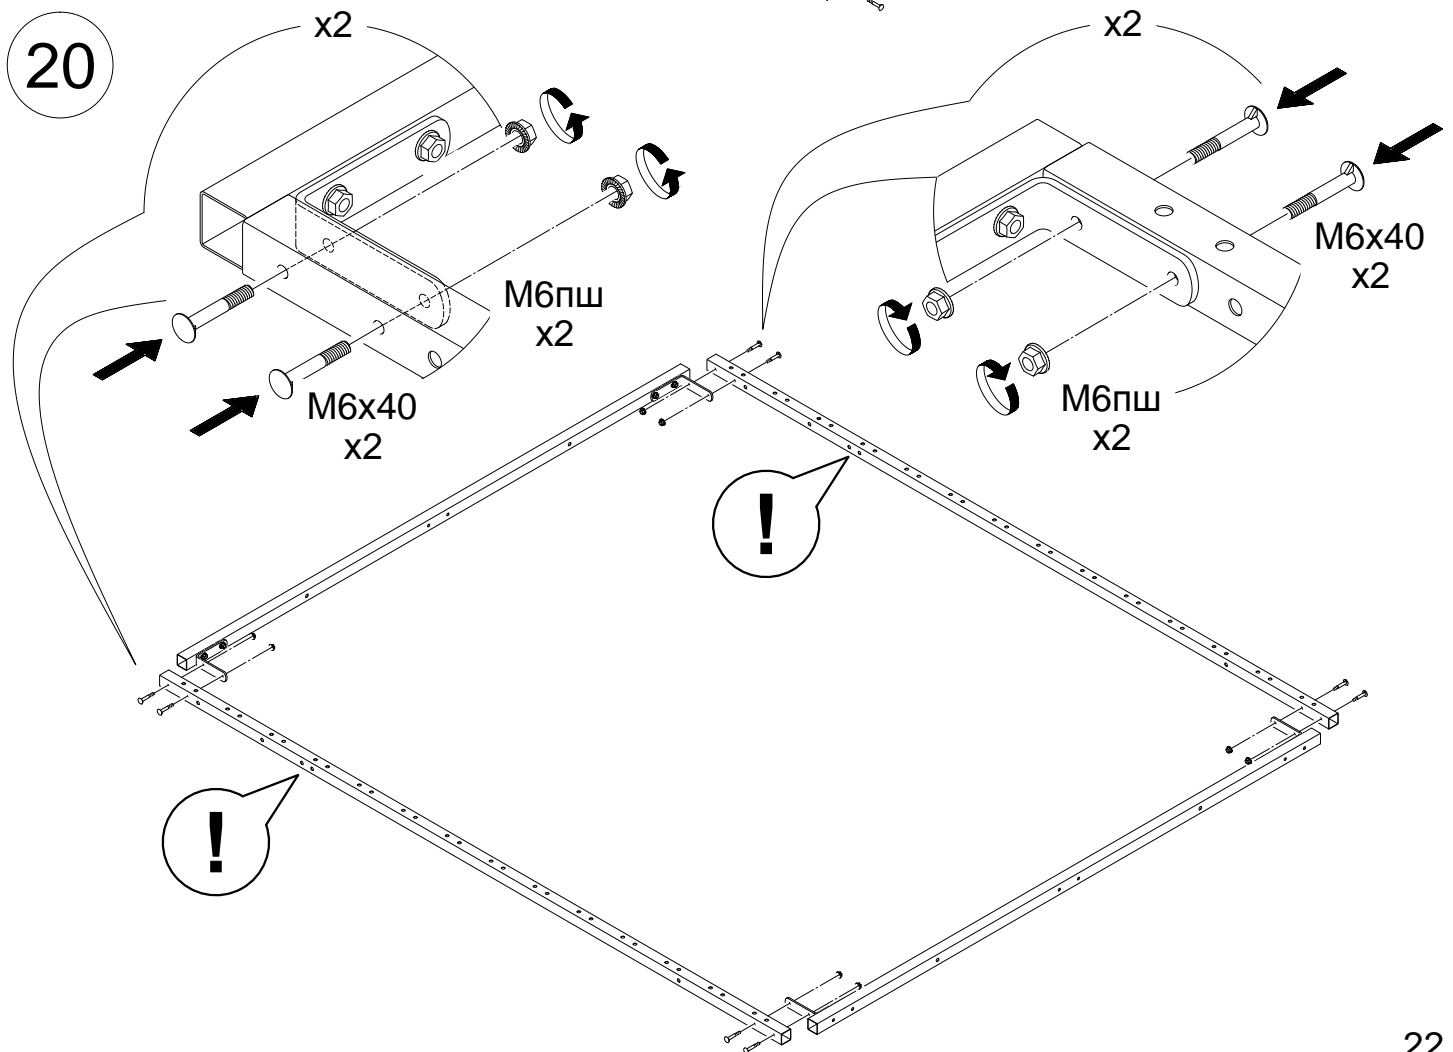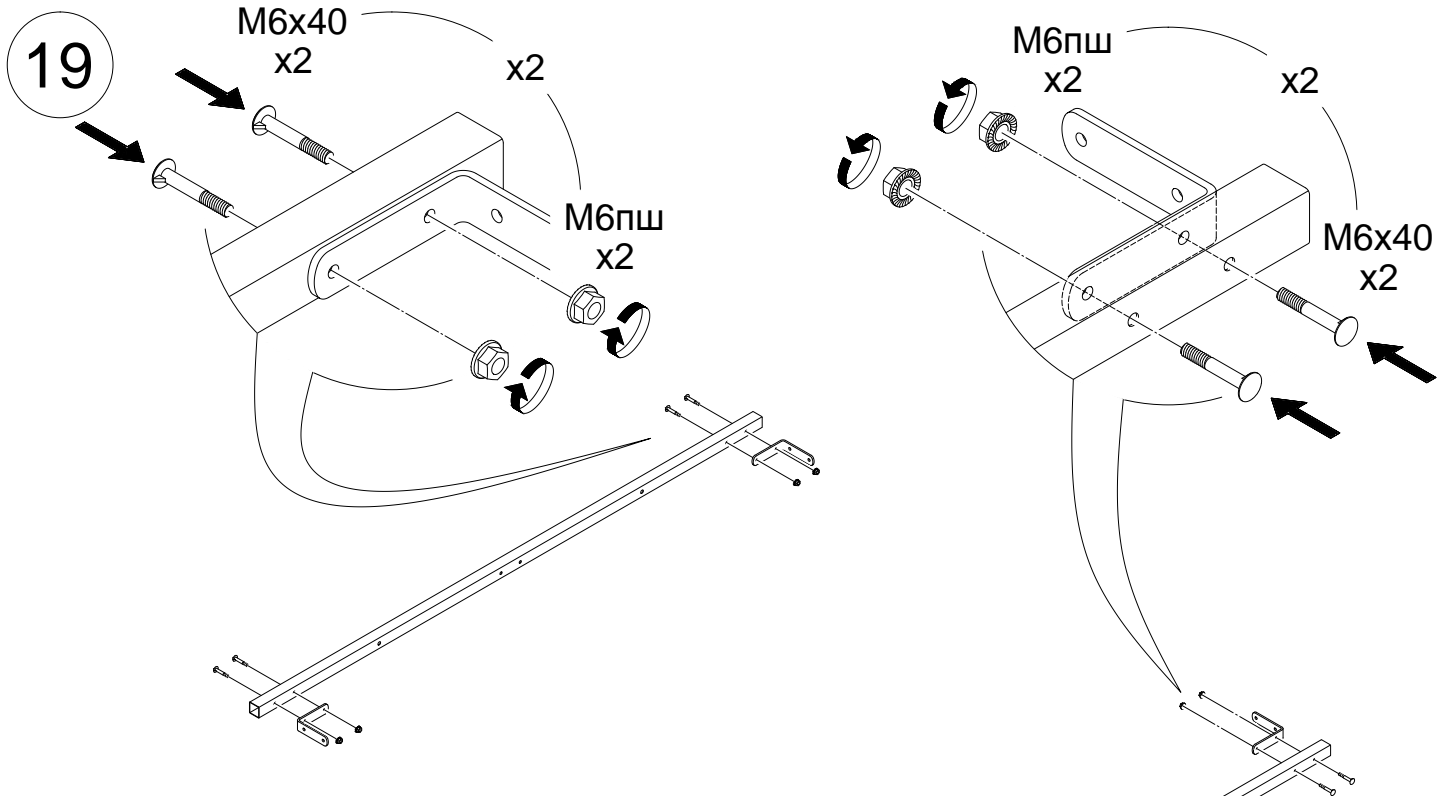


21

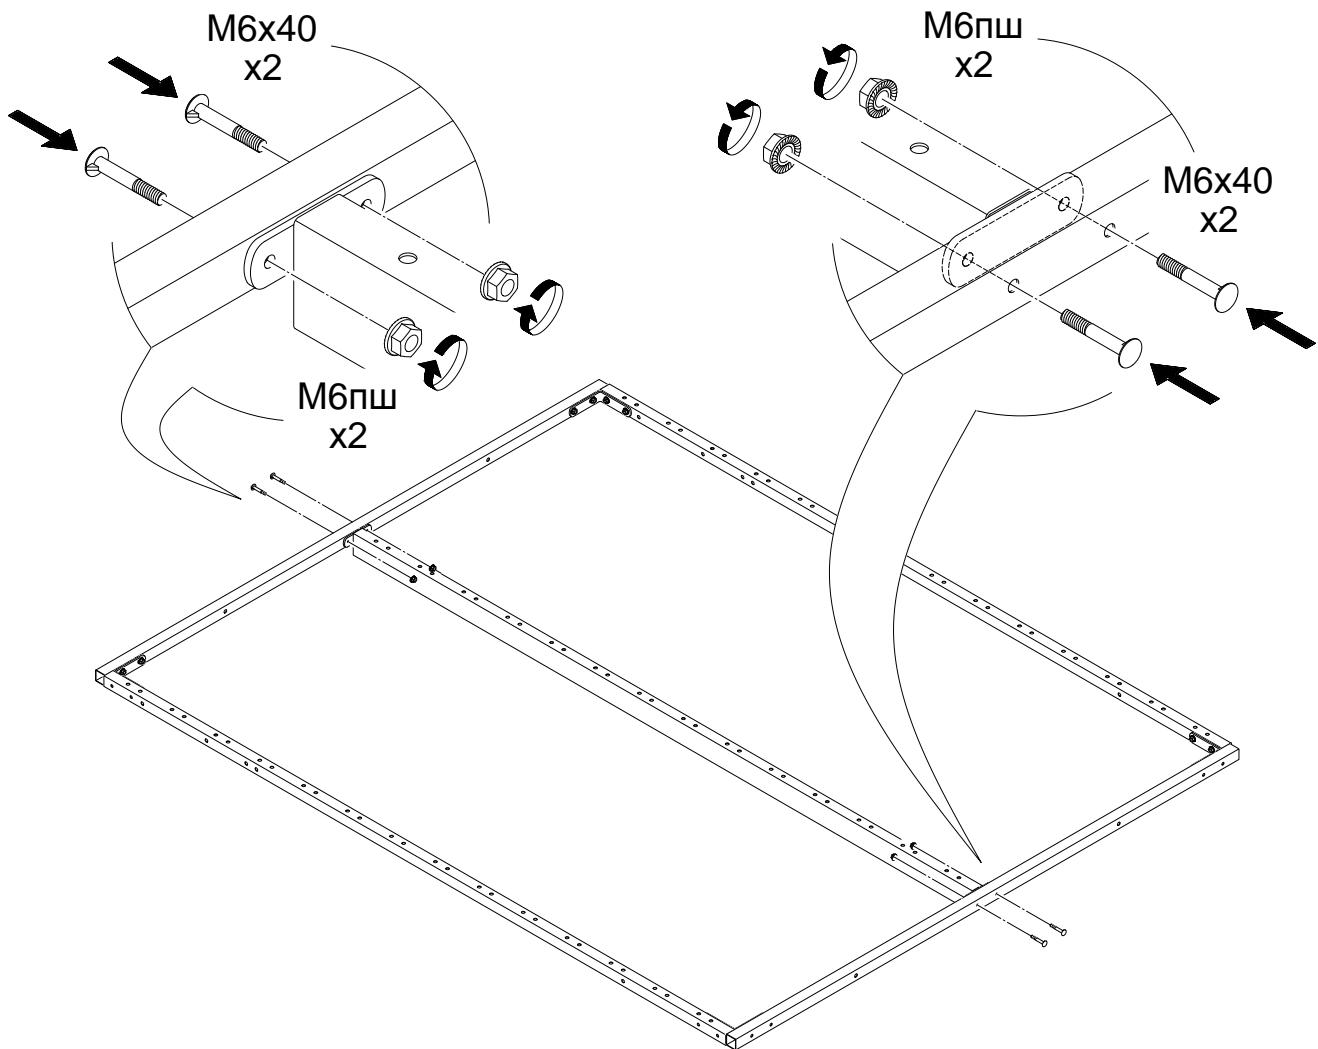


22

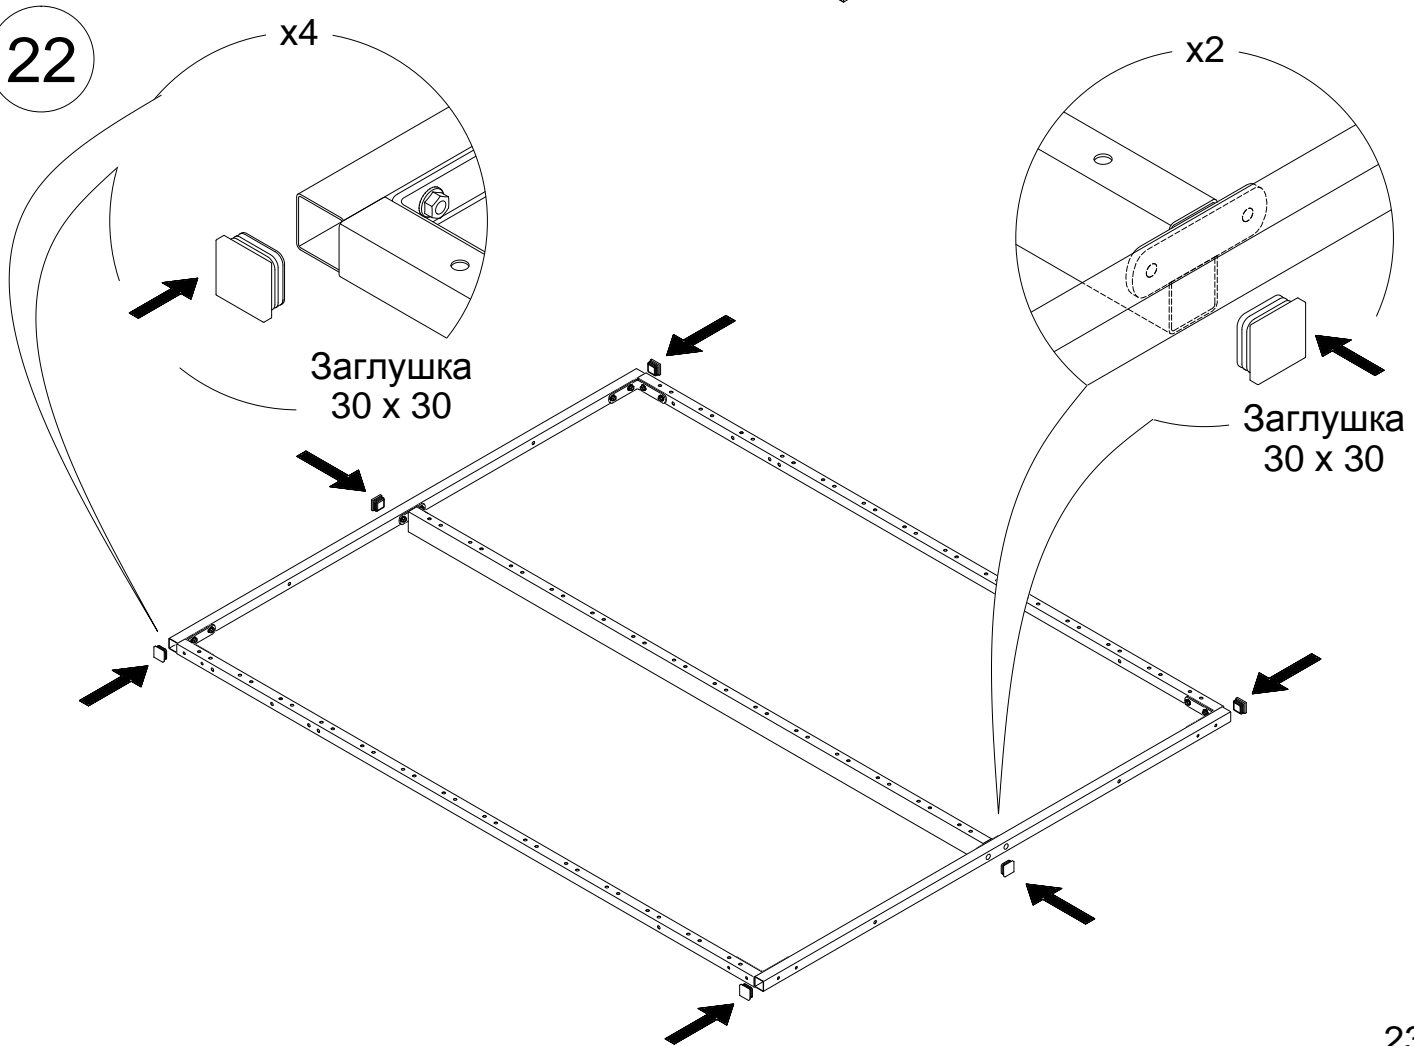


23

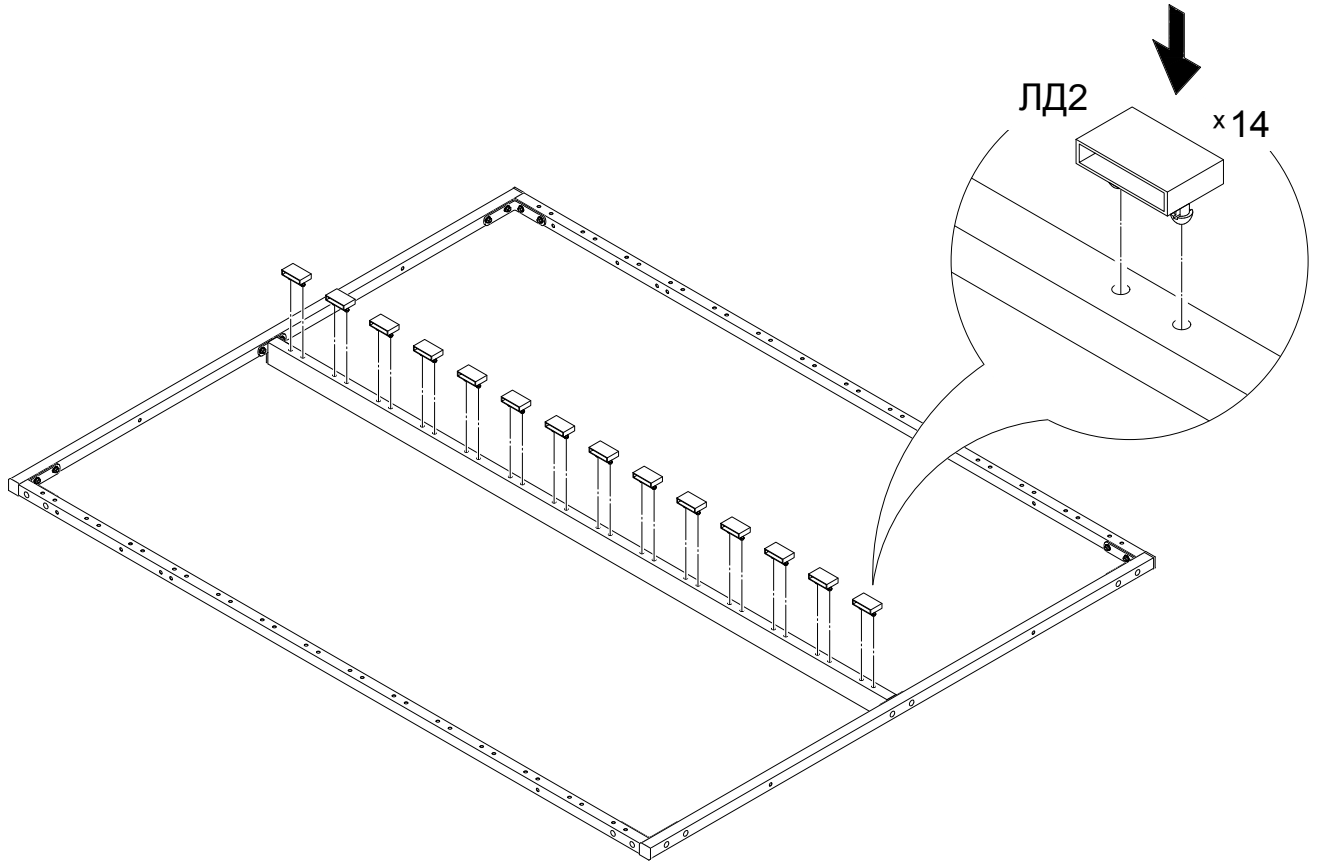


24




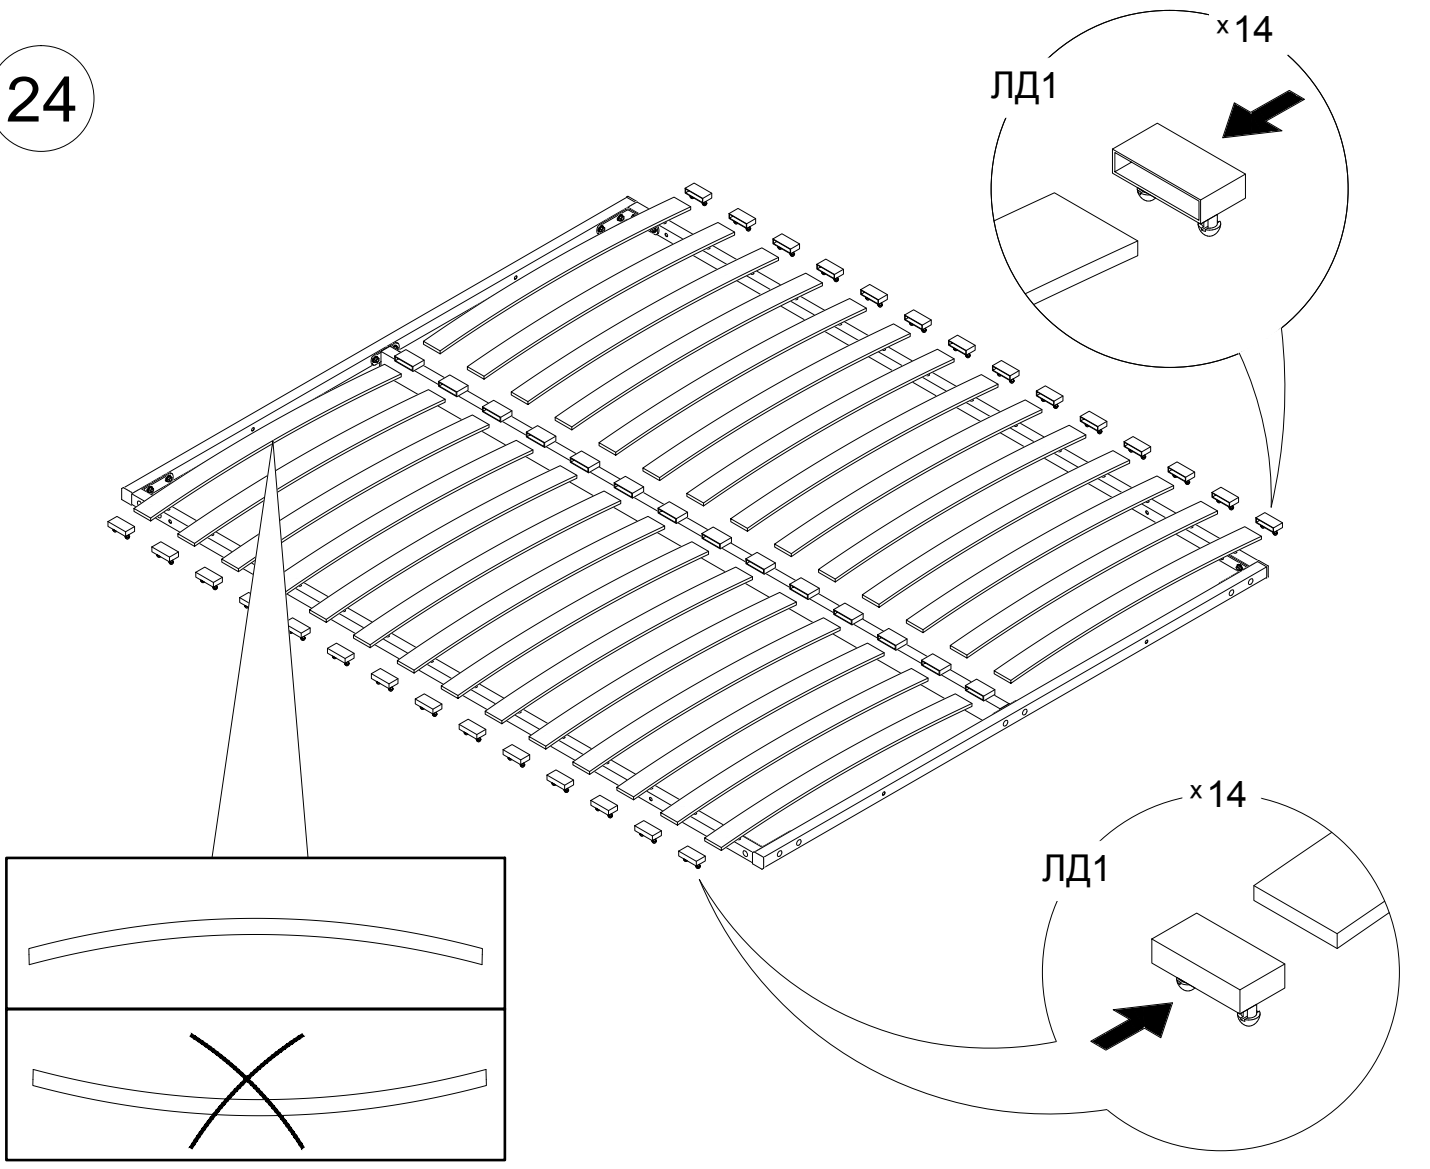




25

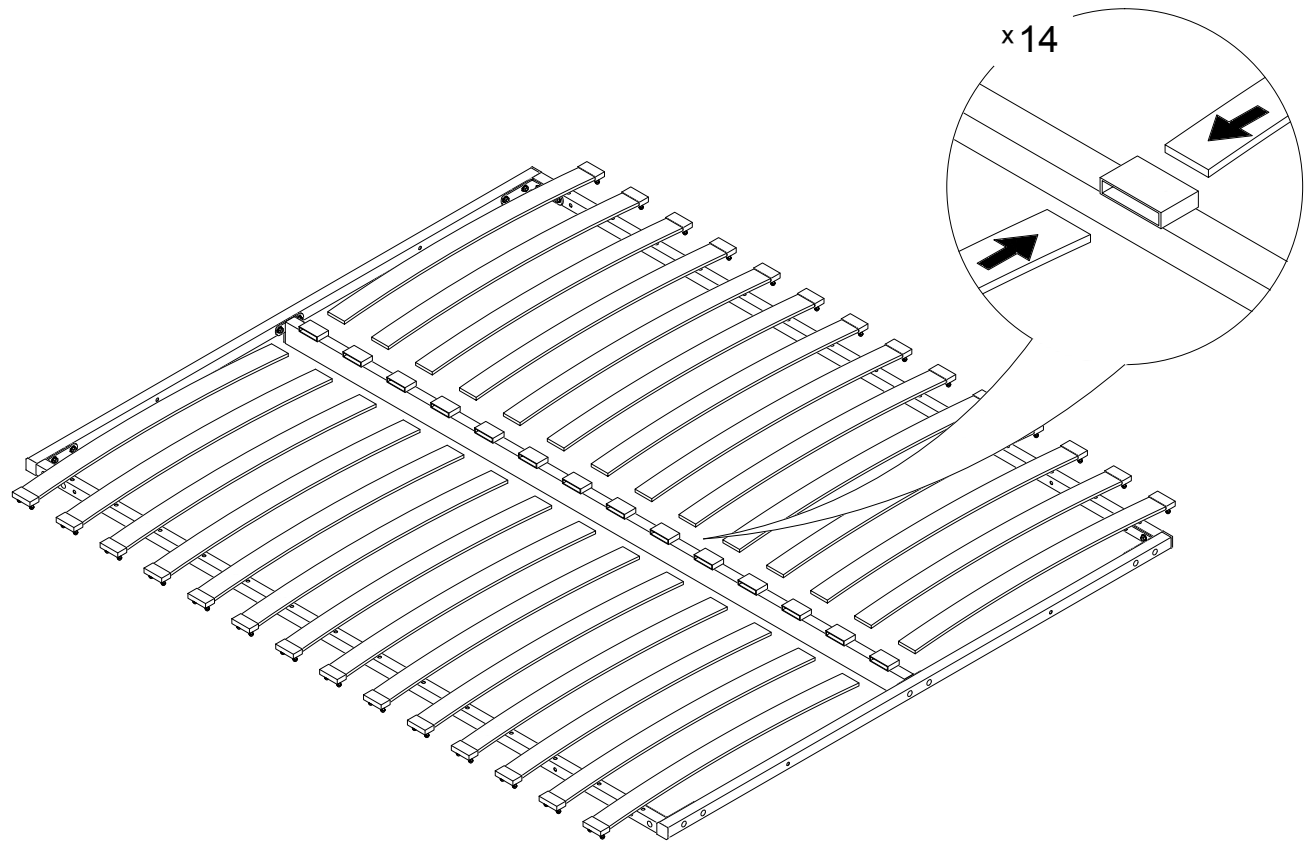

26

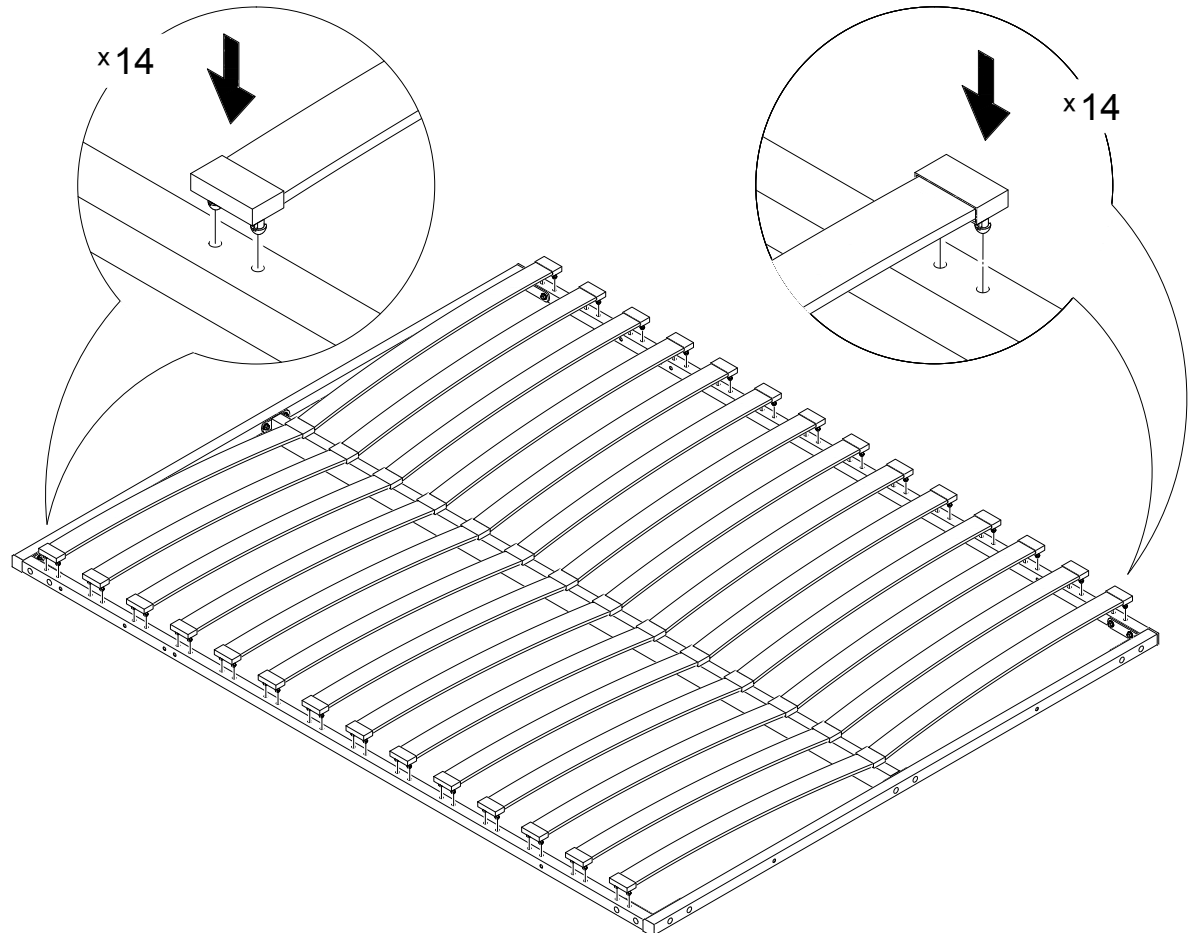


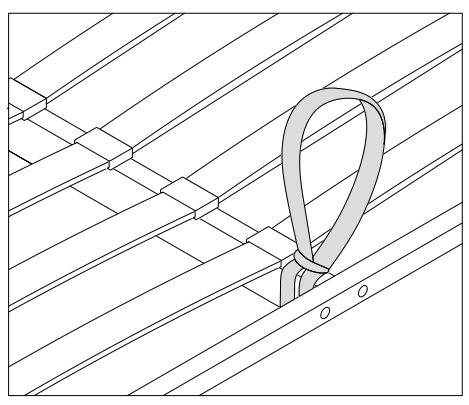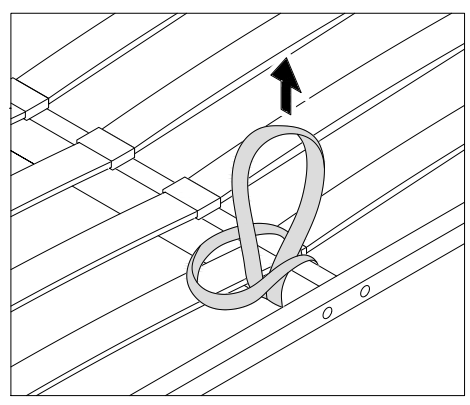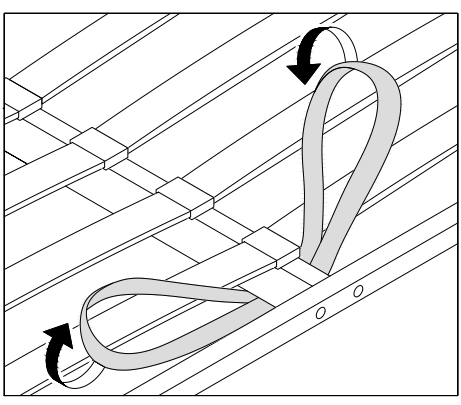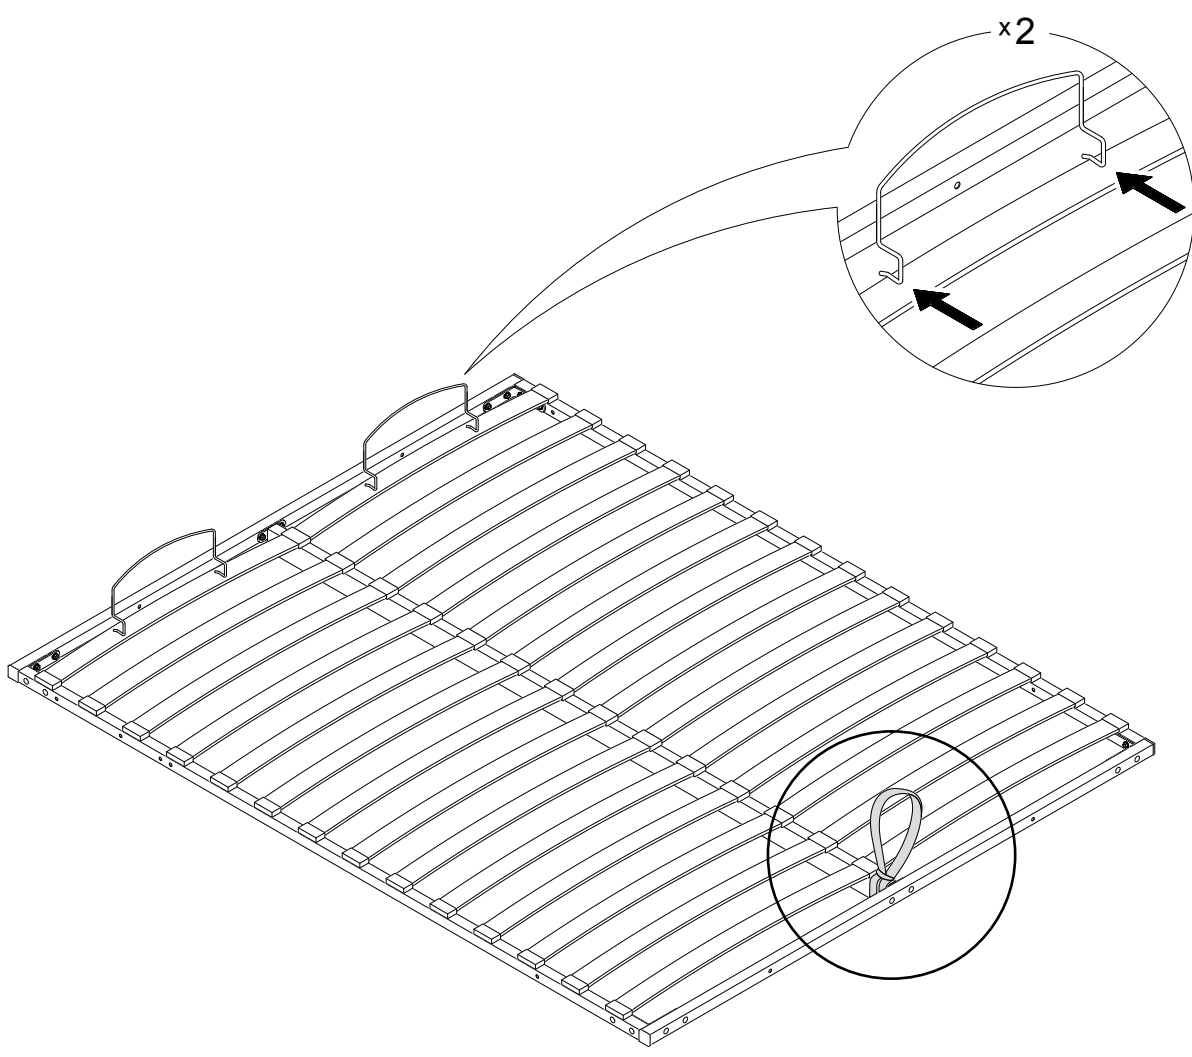


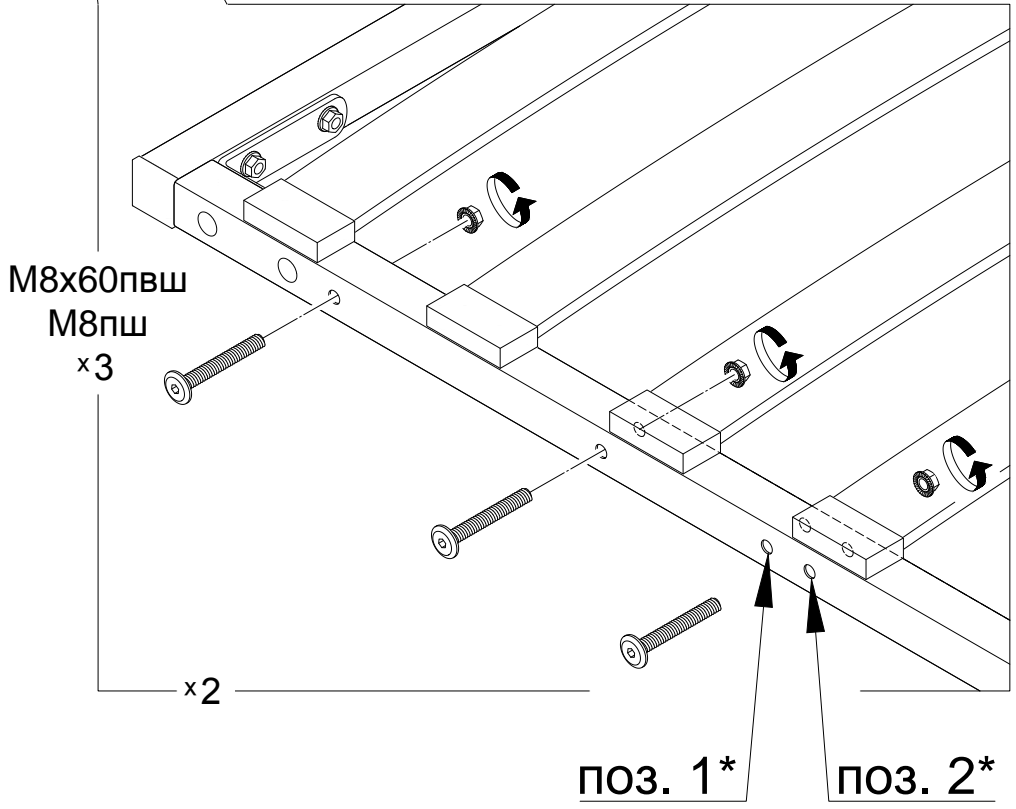
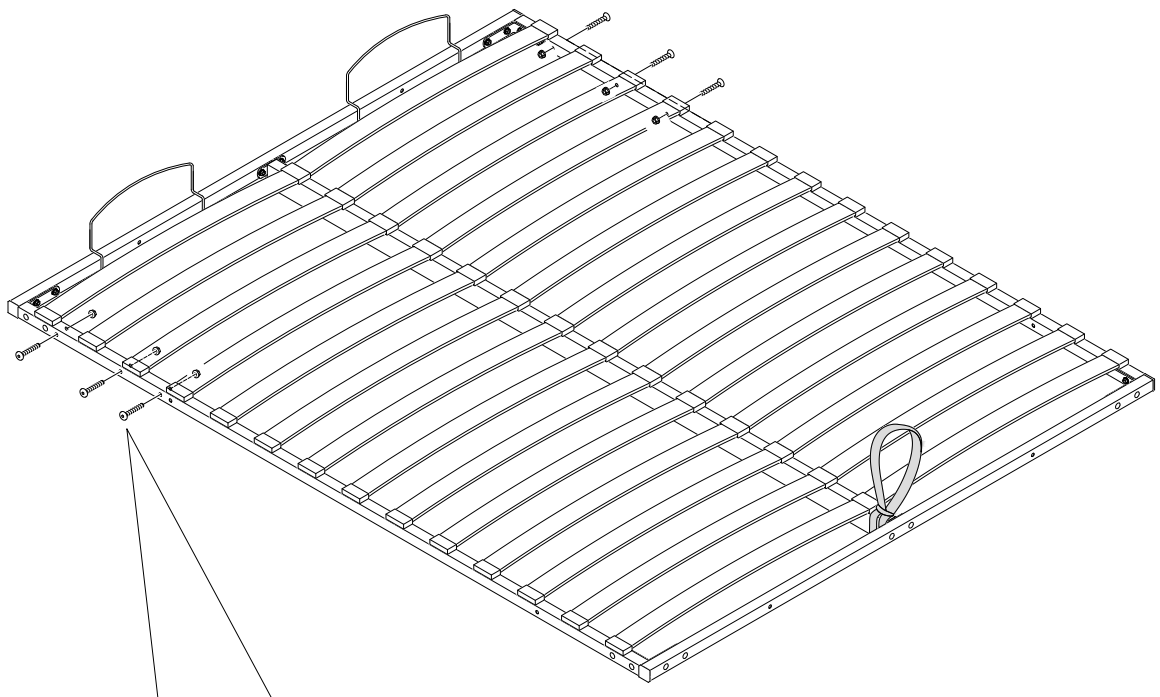






Матрас	Вес матраса, кг	№ поз.*
140x200	15-30	1
	30-47	2
160x200 180x200	12-30	1
	30-47	2

* для оптимальной работы подъёмного механизма

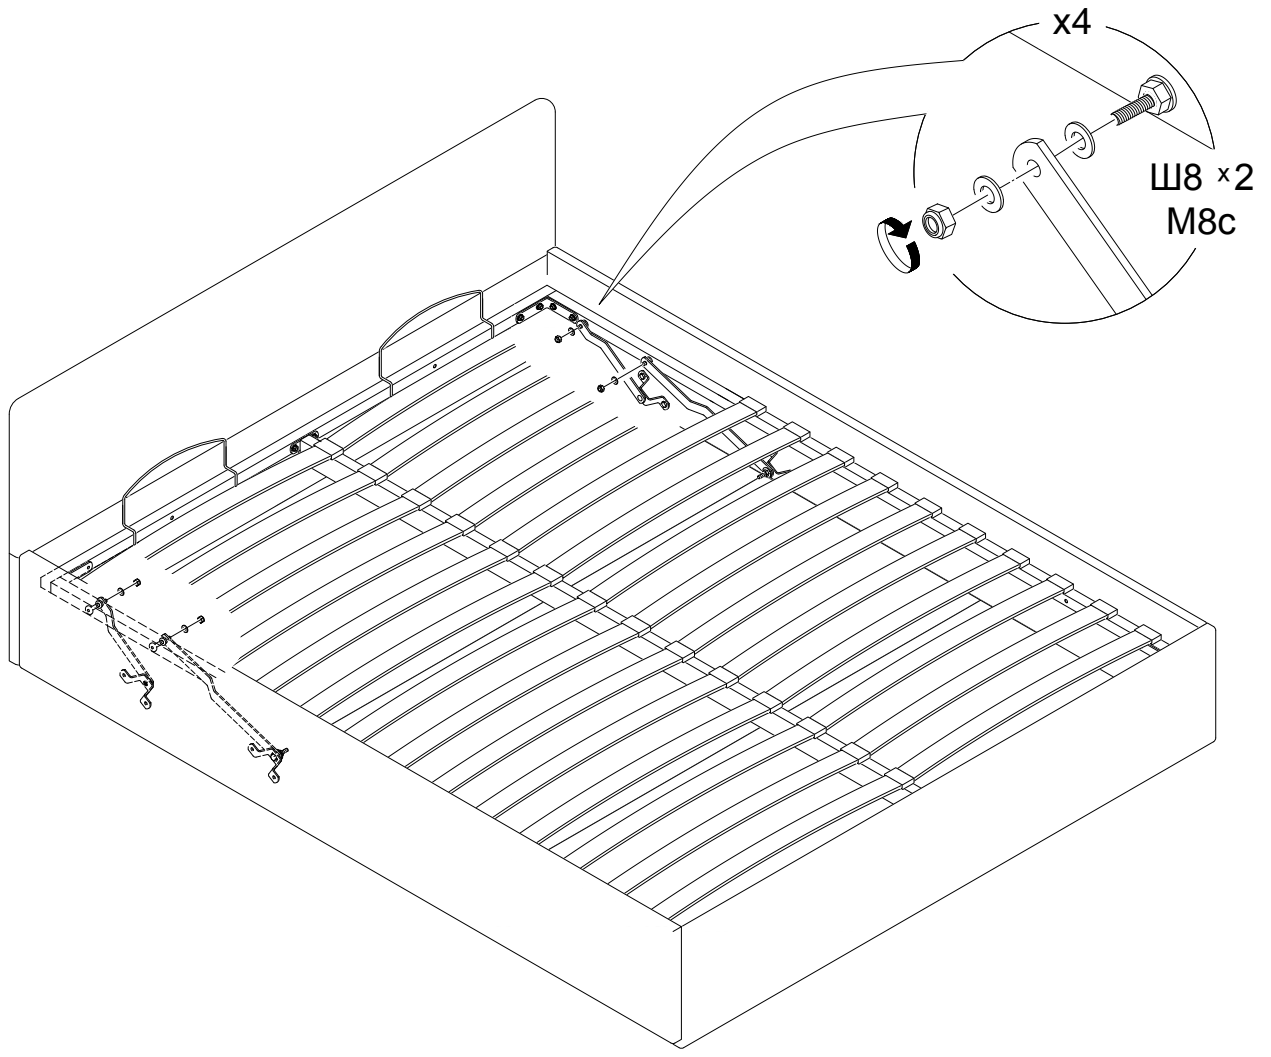

30

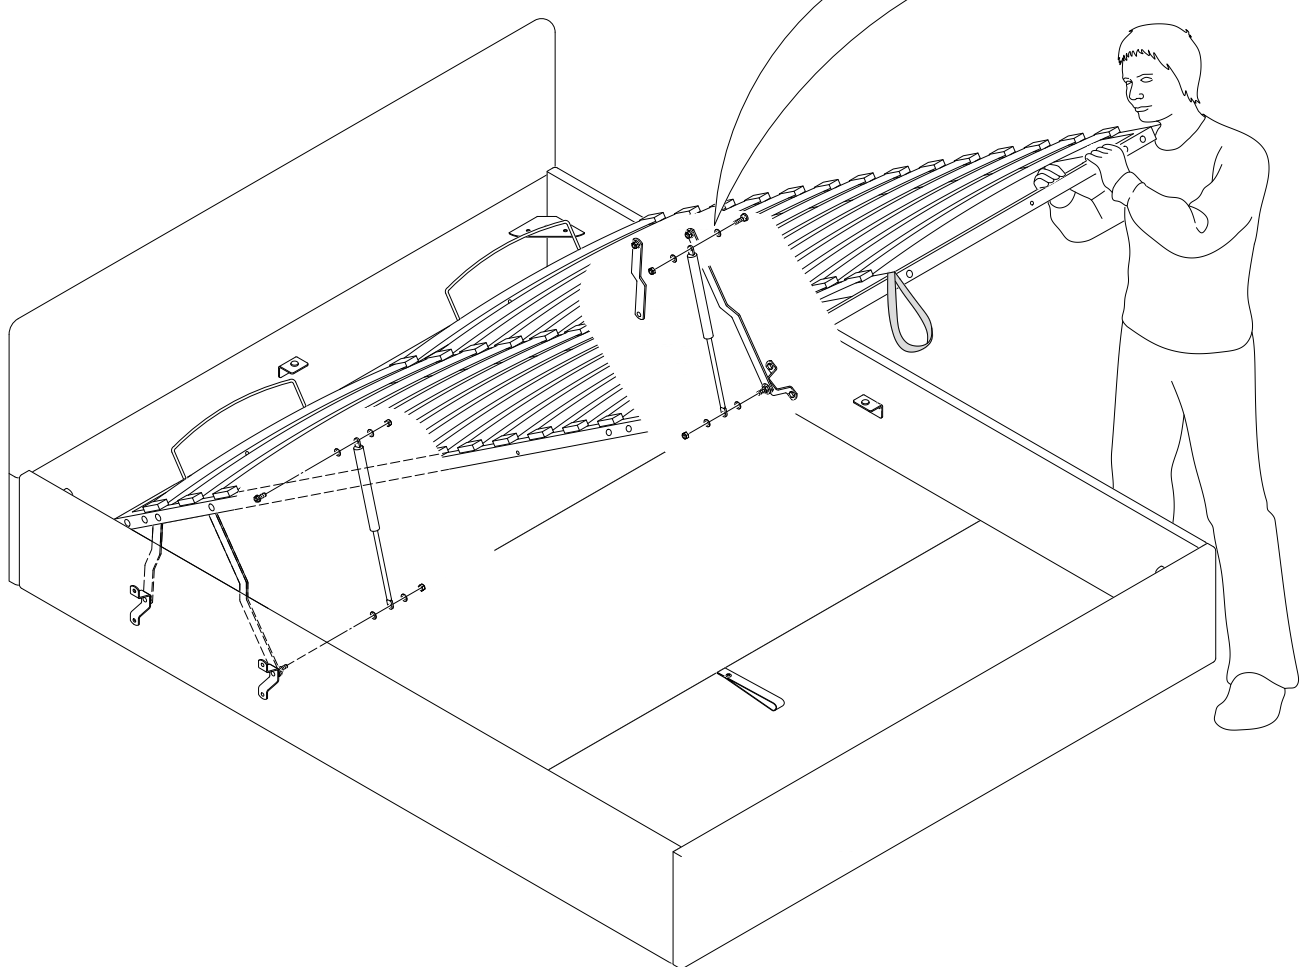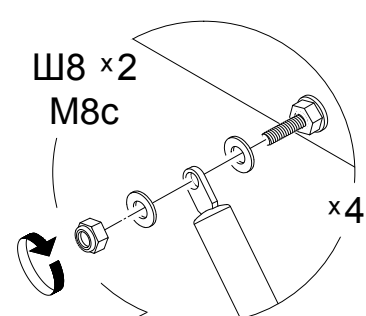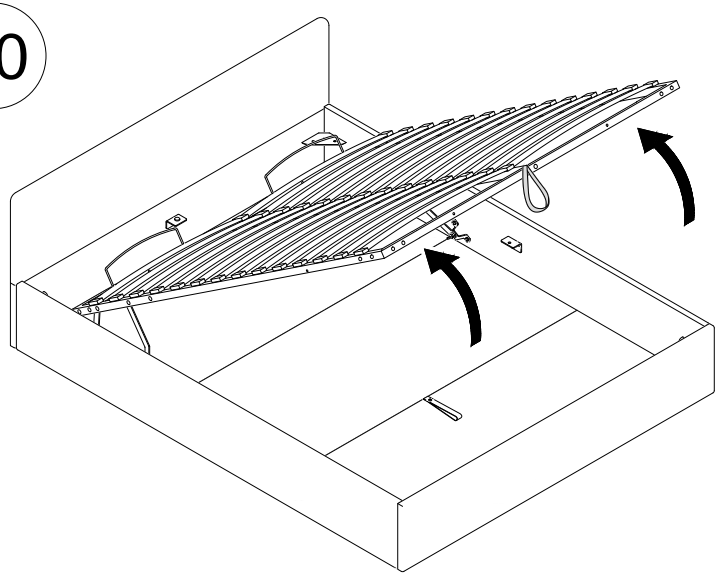

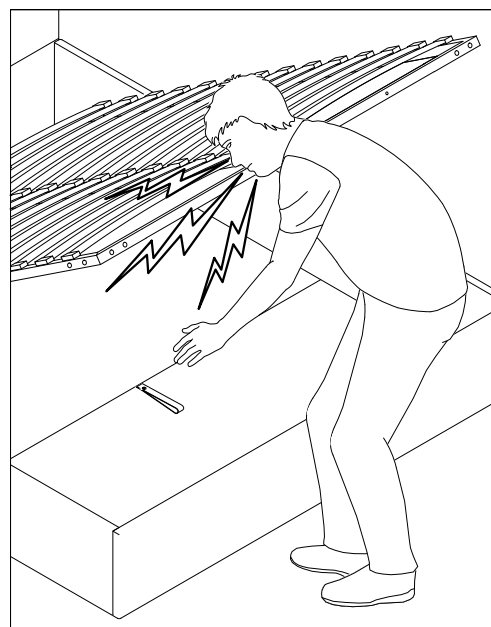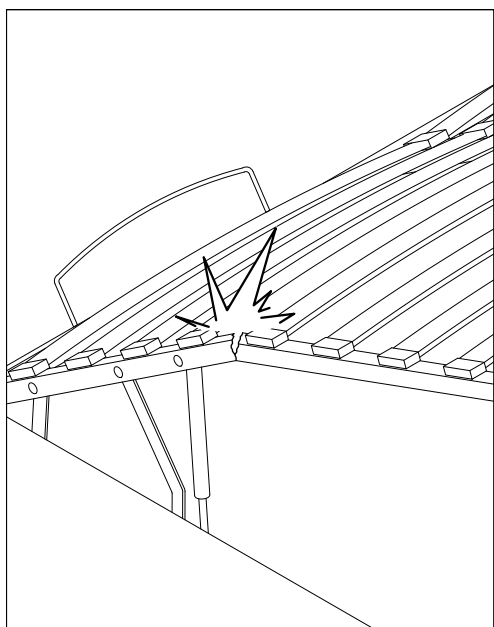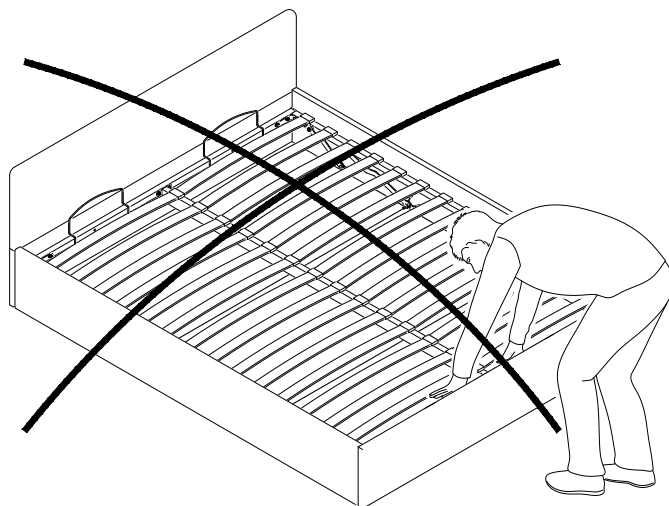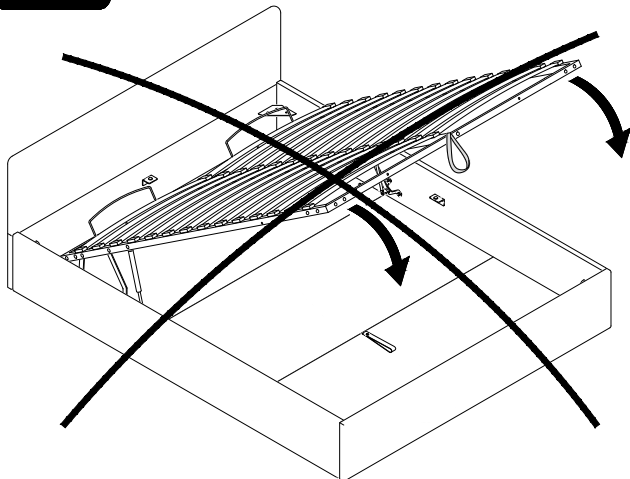

31

