

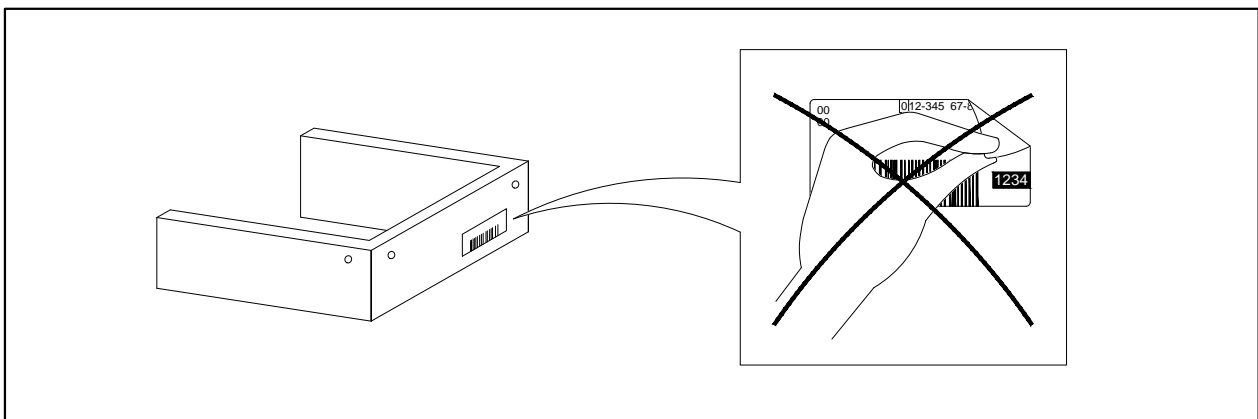
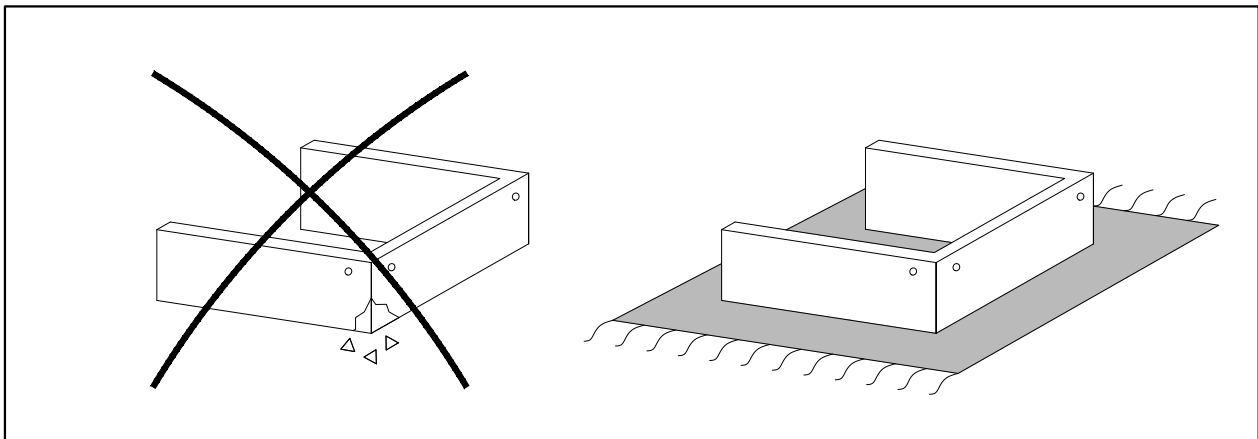
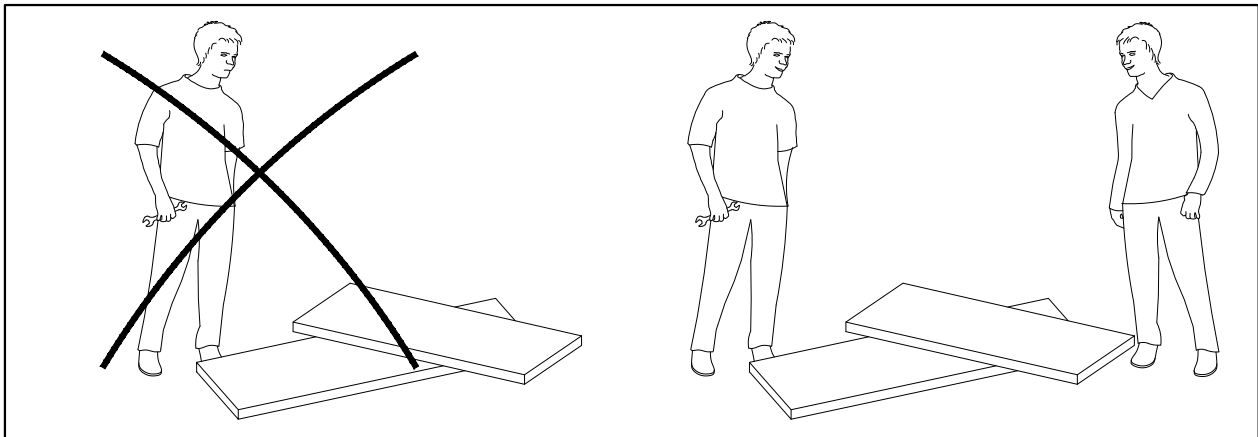


# Инструкция по сборке

## Кровать с подъёмным механизмом

Дизайн 1220, 1221, 1222, 1223, 1224, 1226, 1227

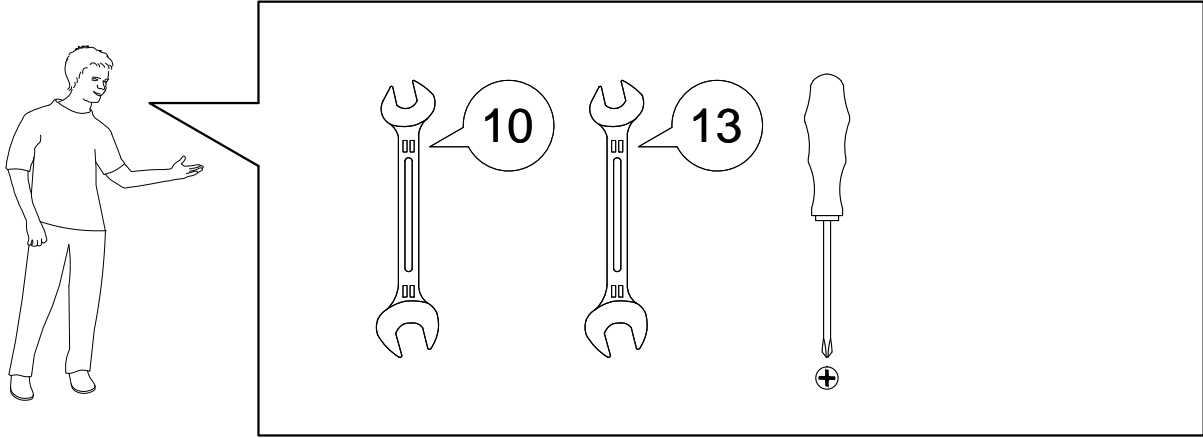


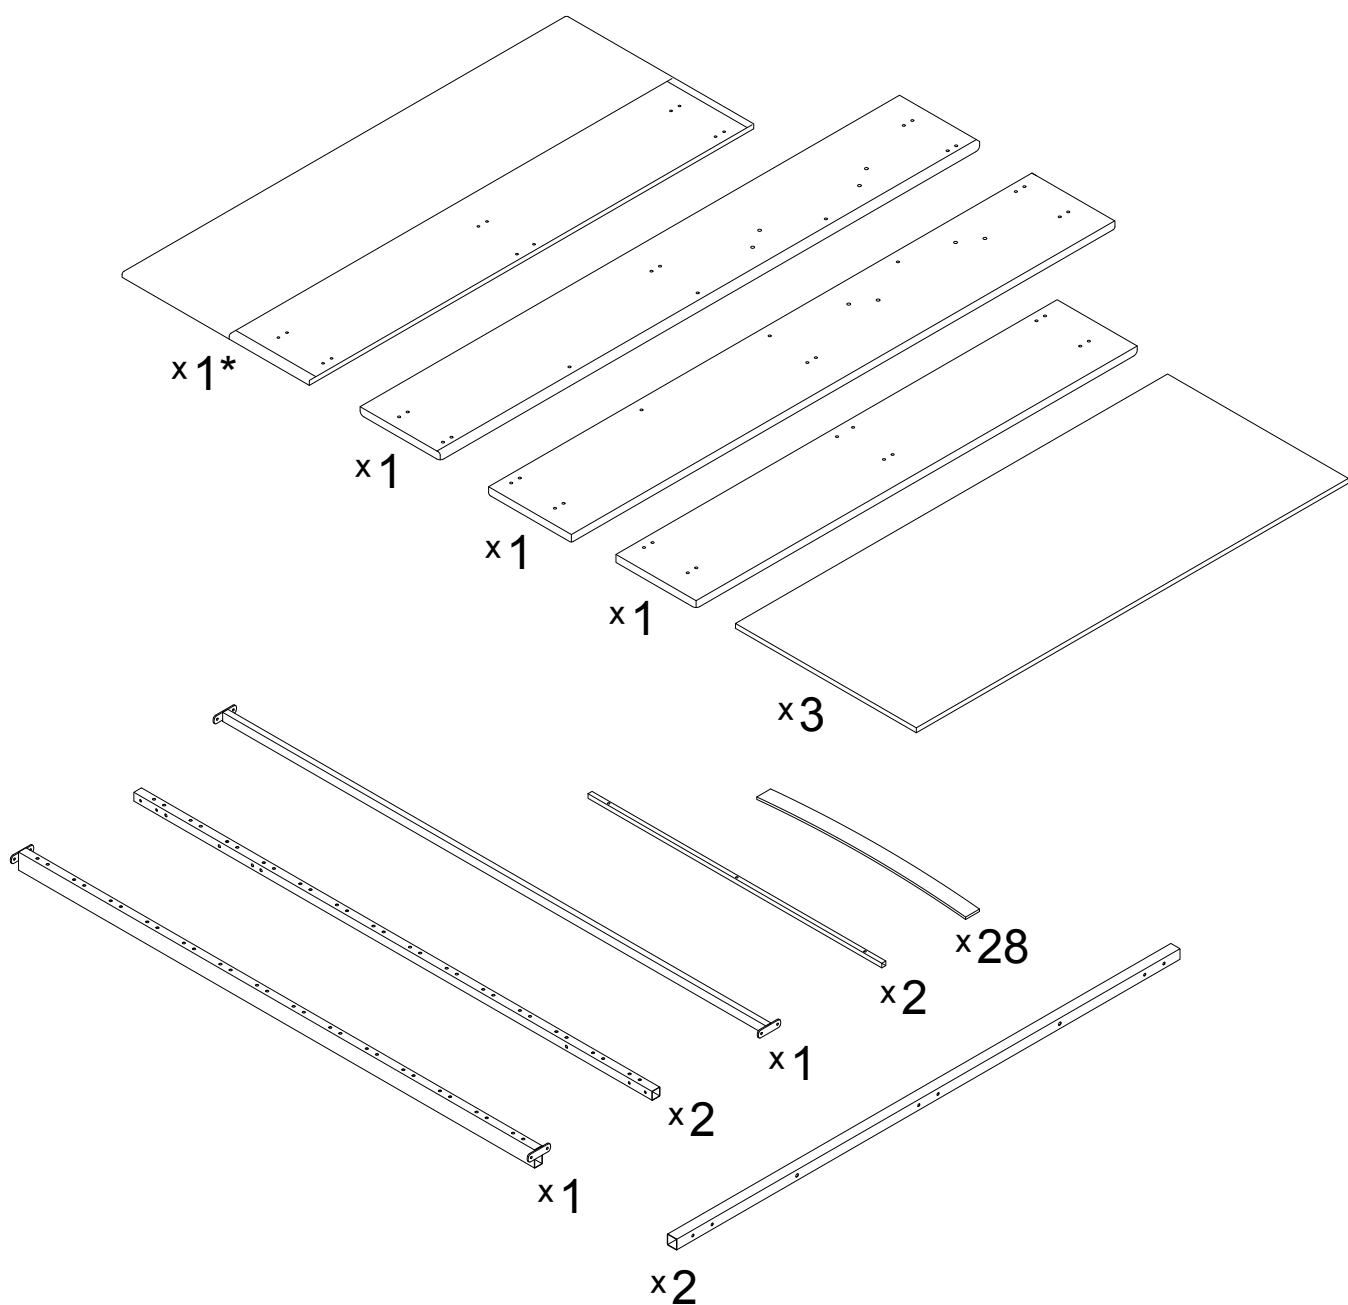

\*Дизайн спинки различается в зависимости от модификации кровати.




# M 1:1






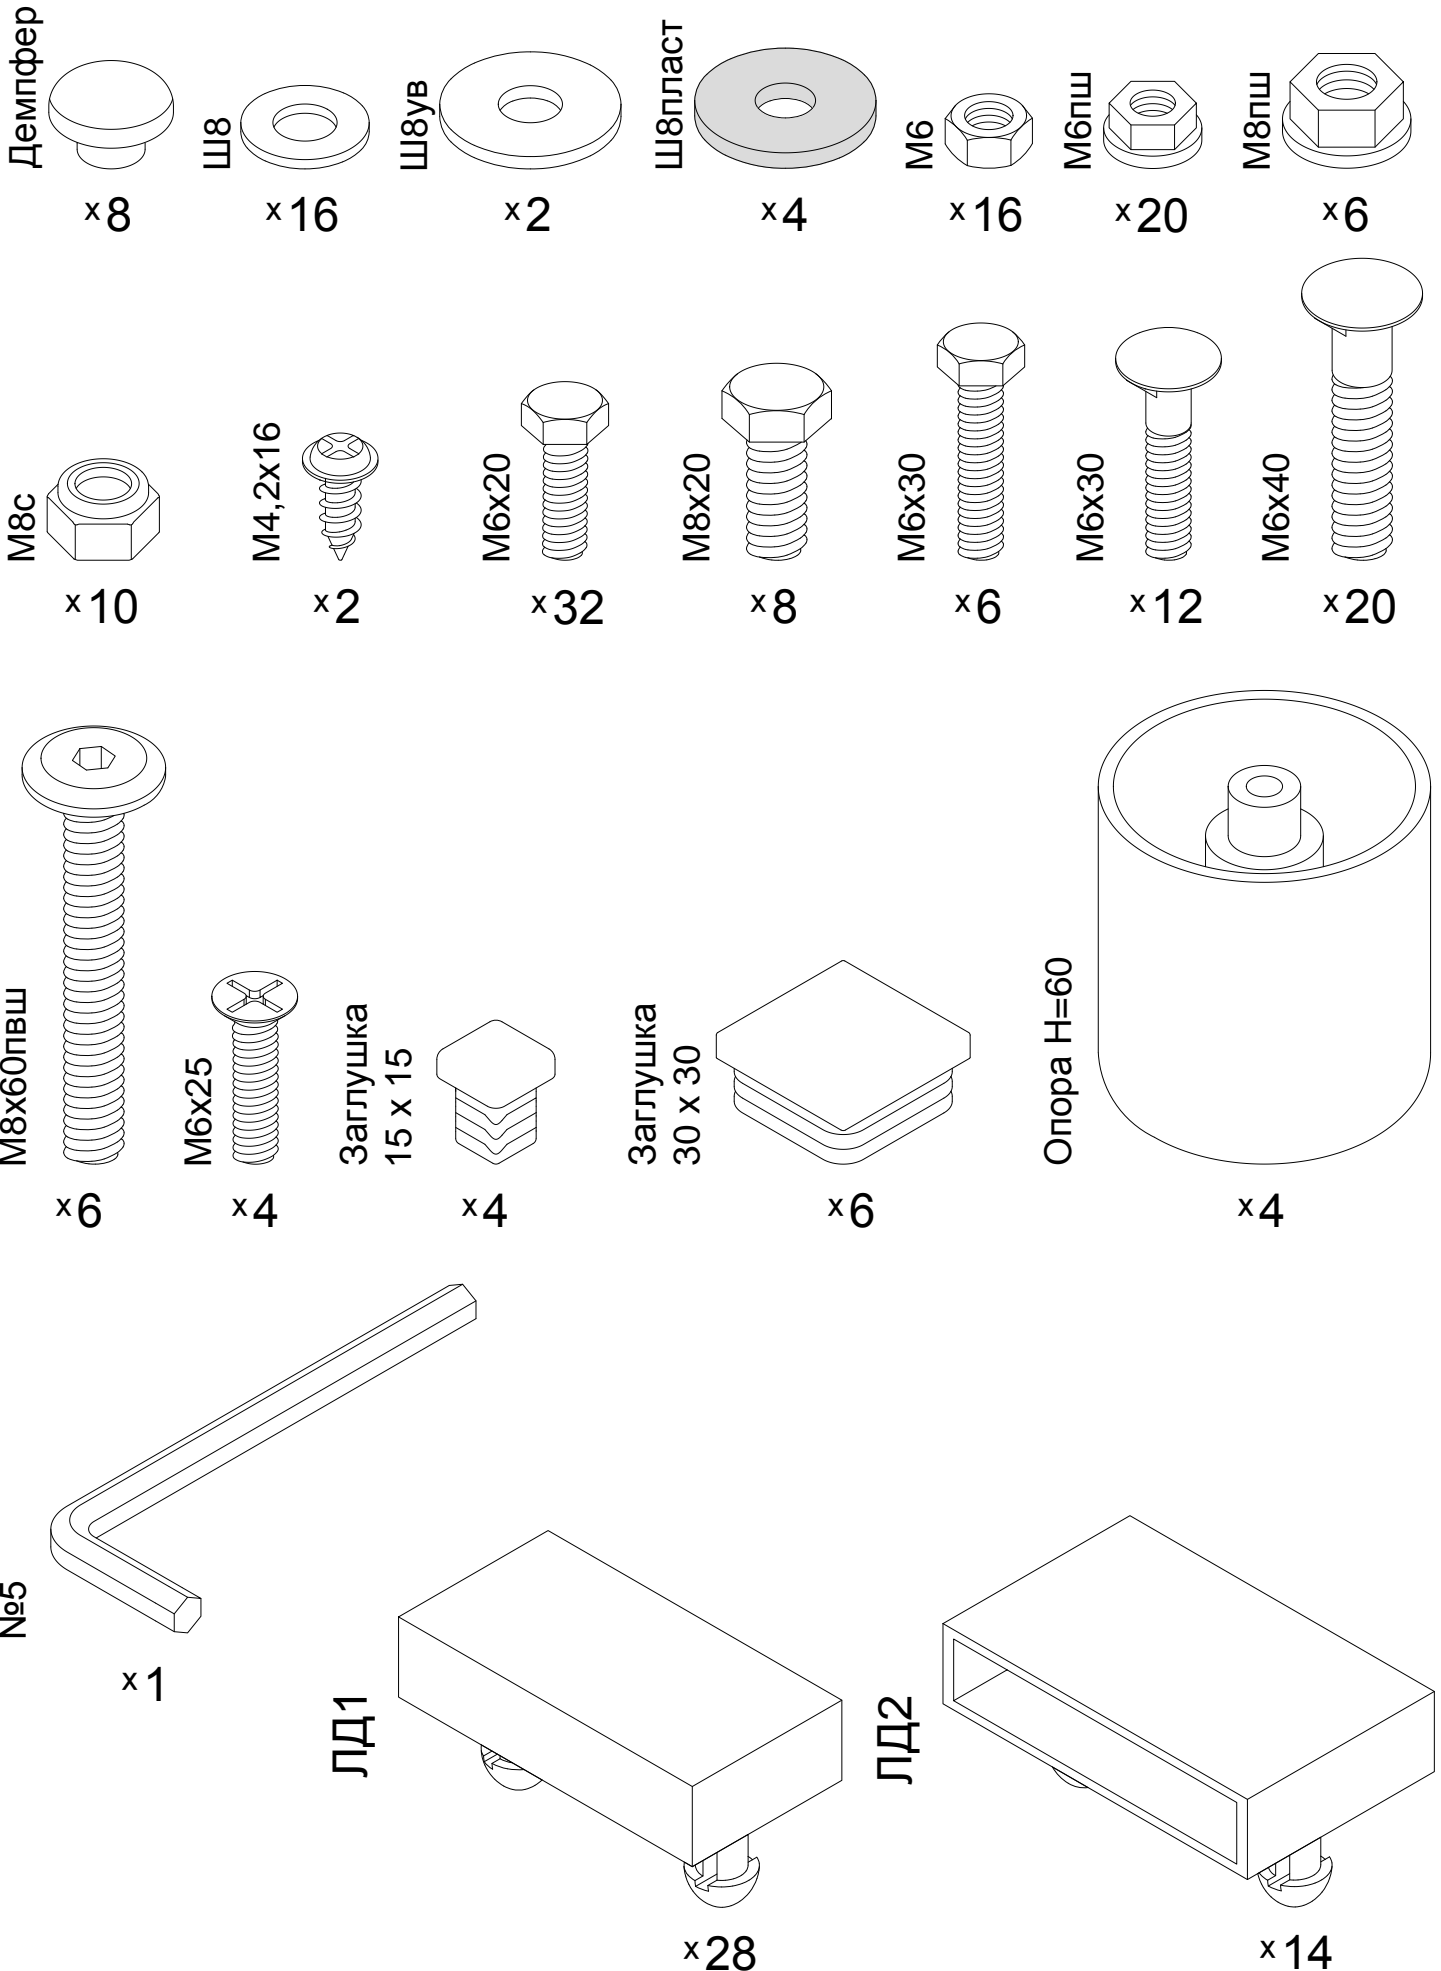




2

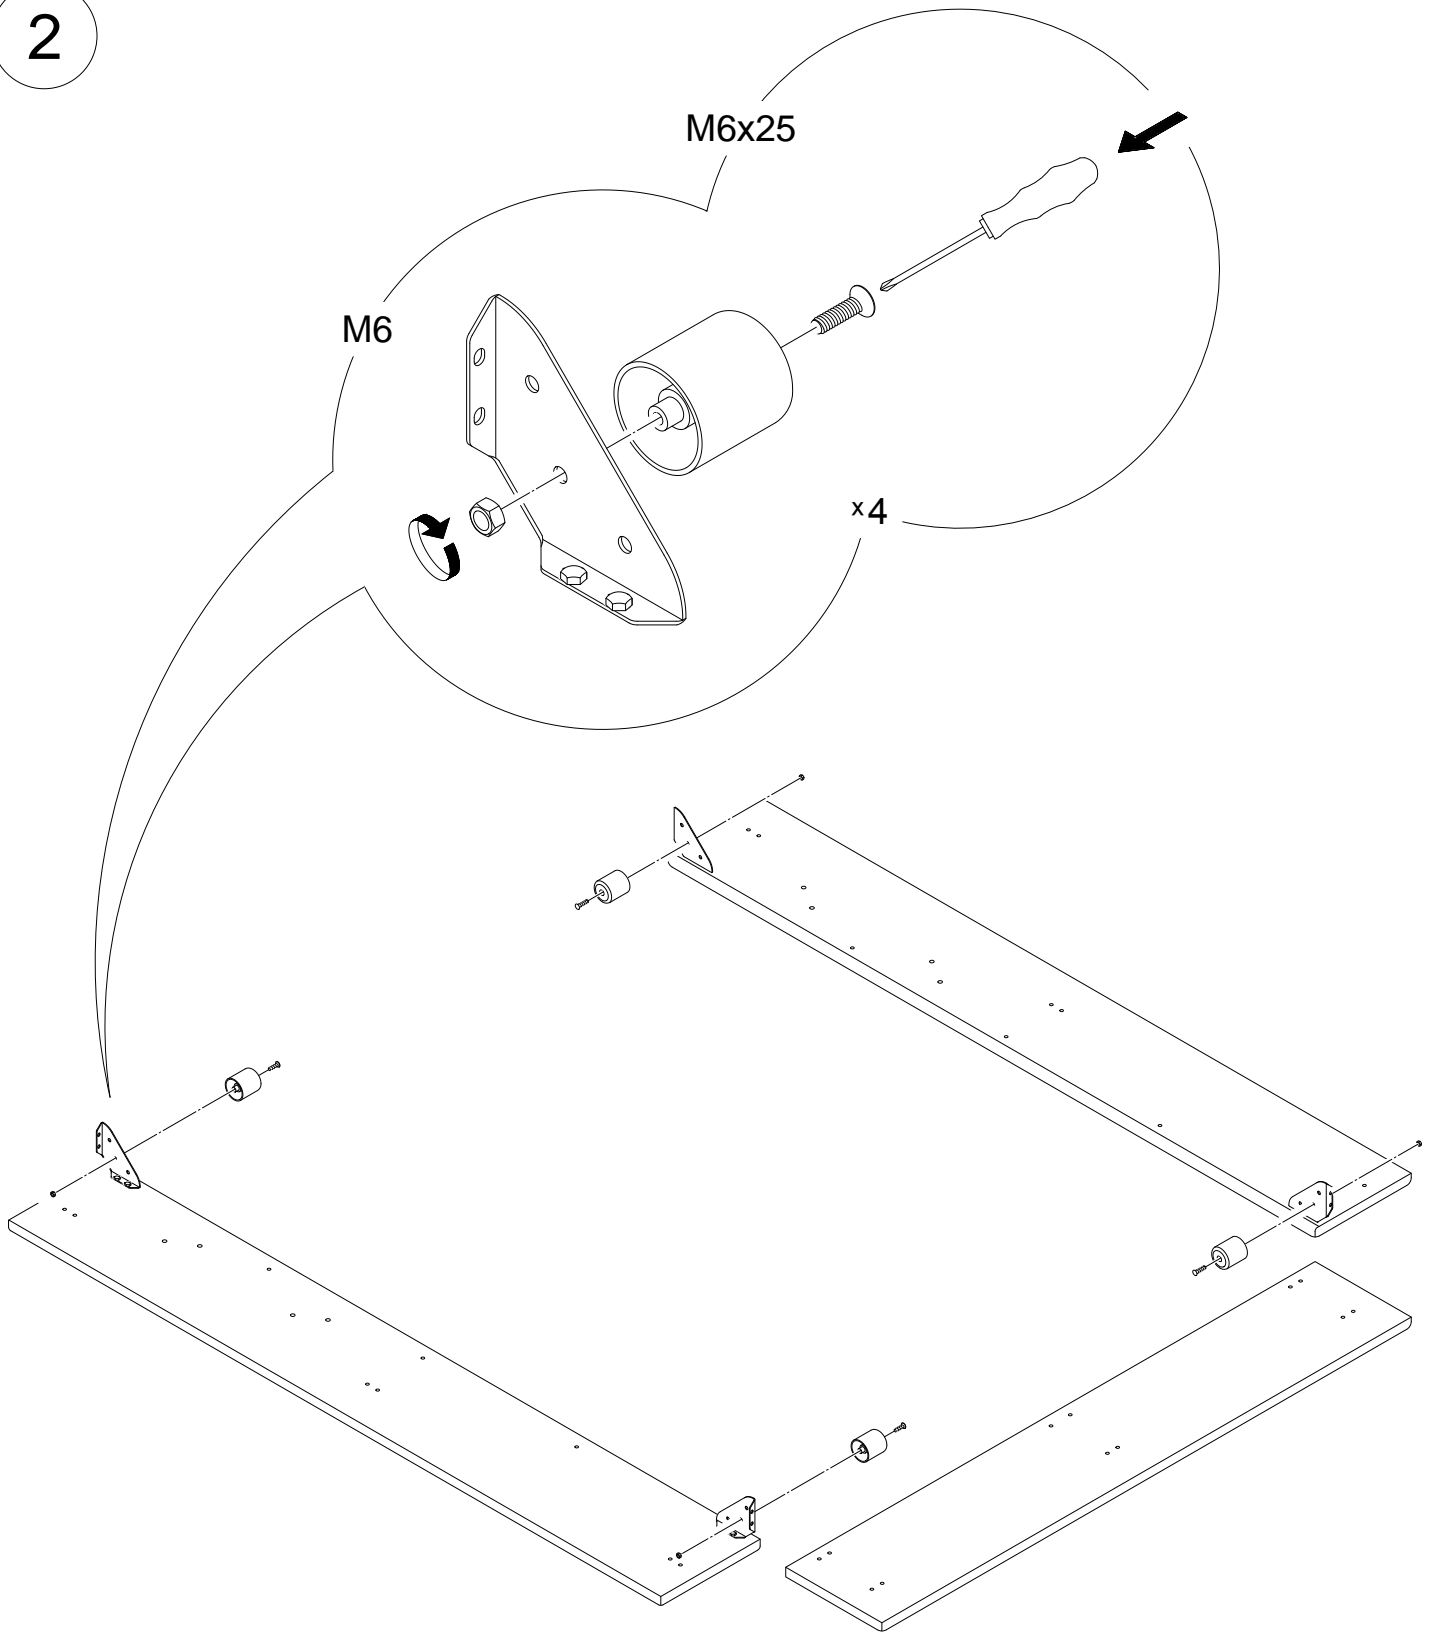


3

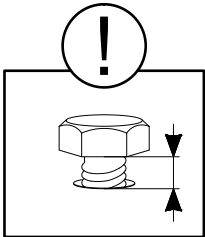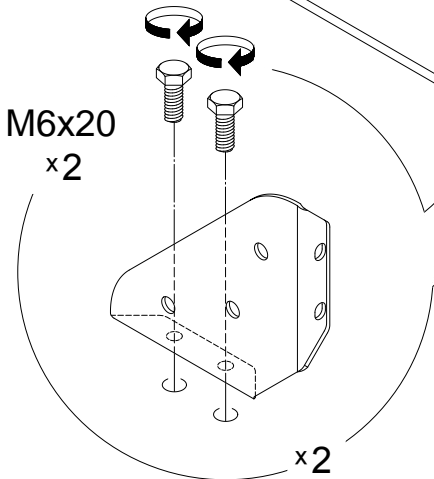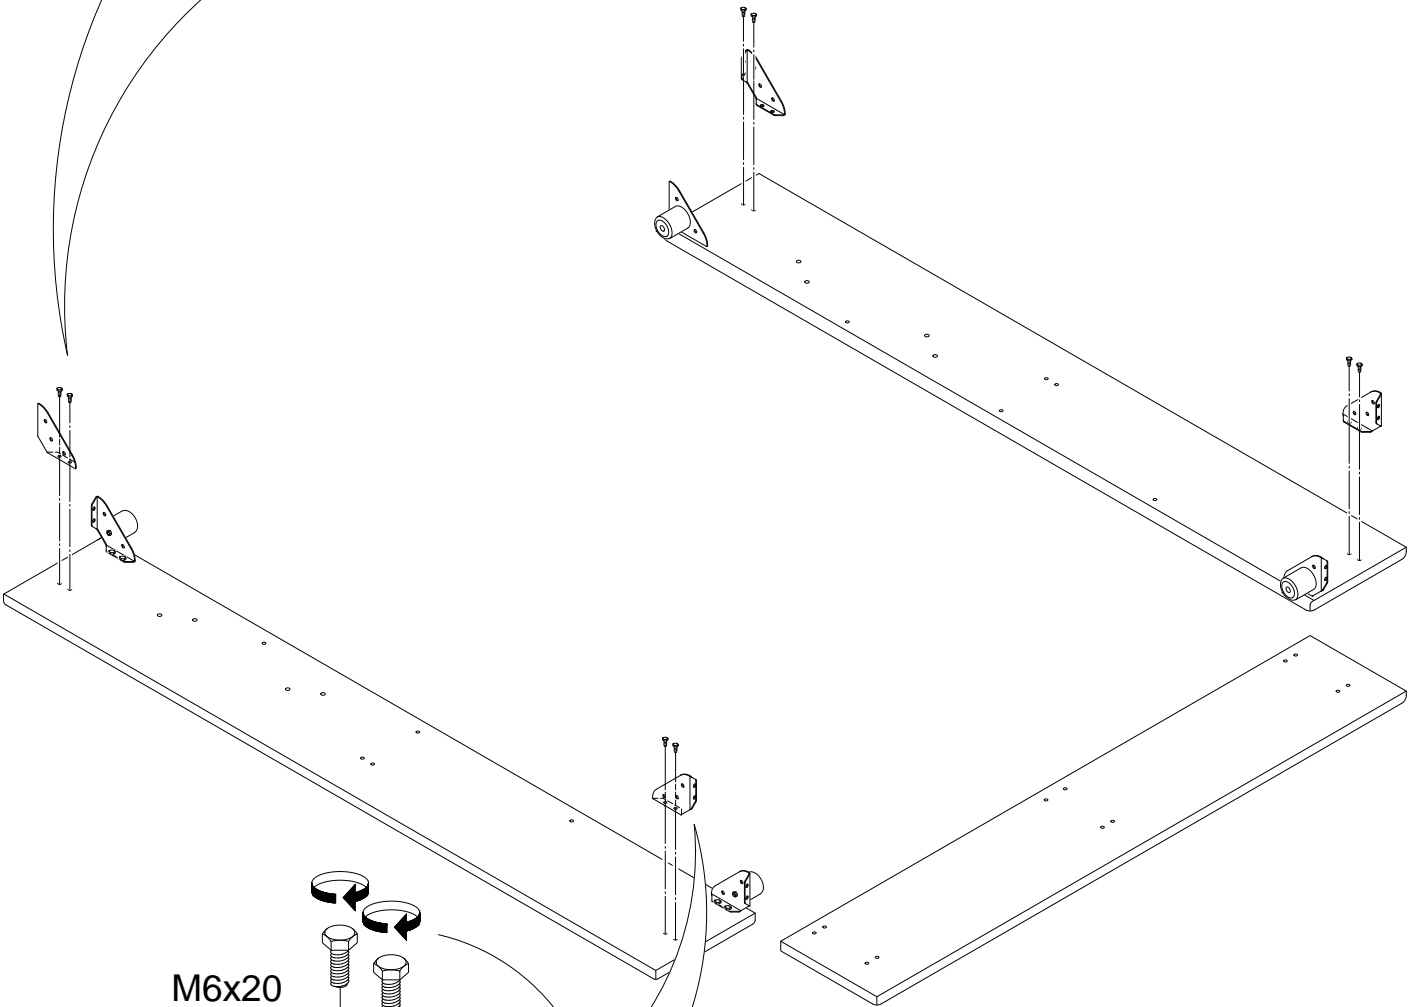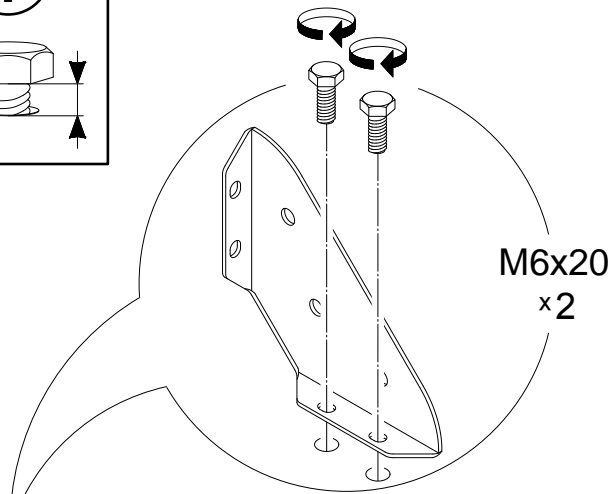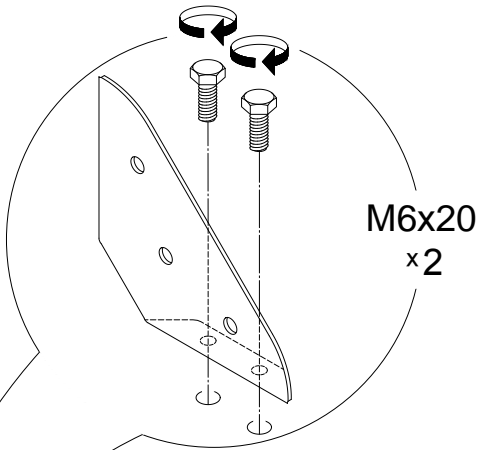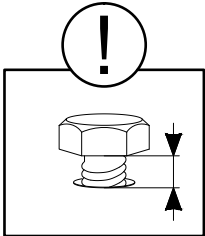






4

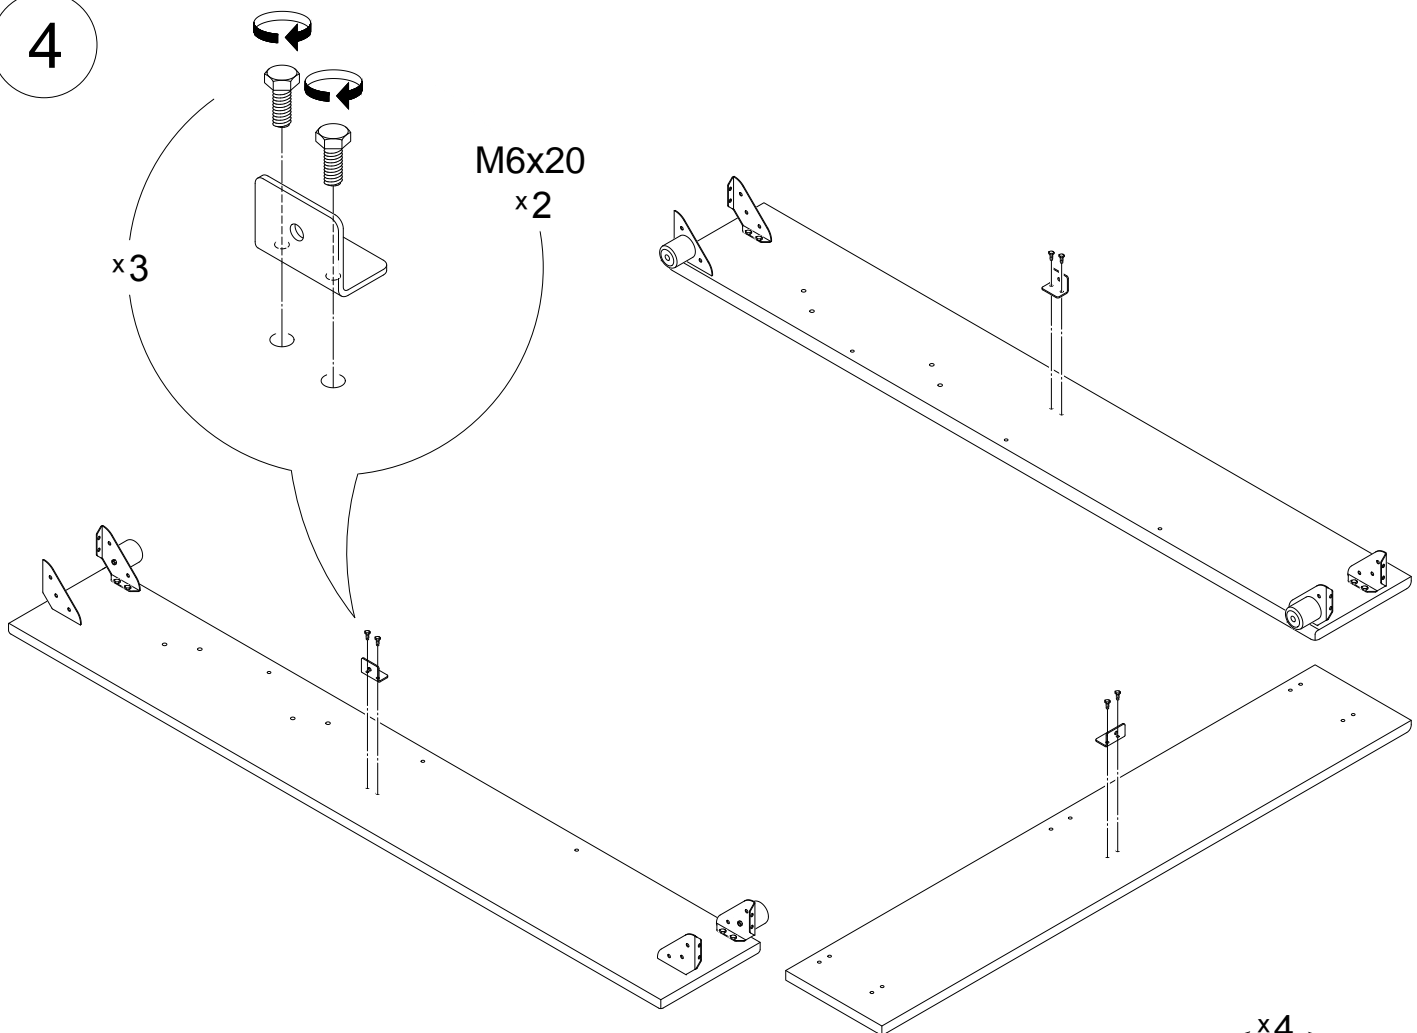



5

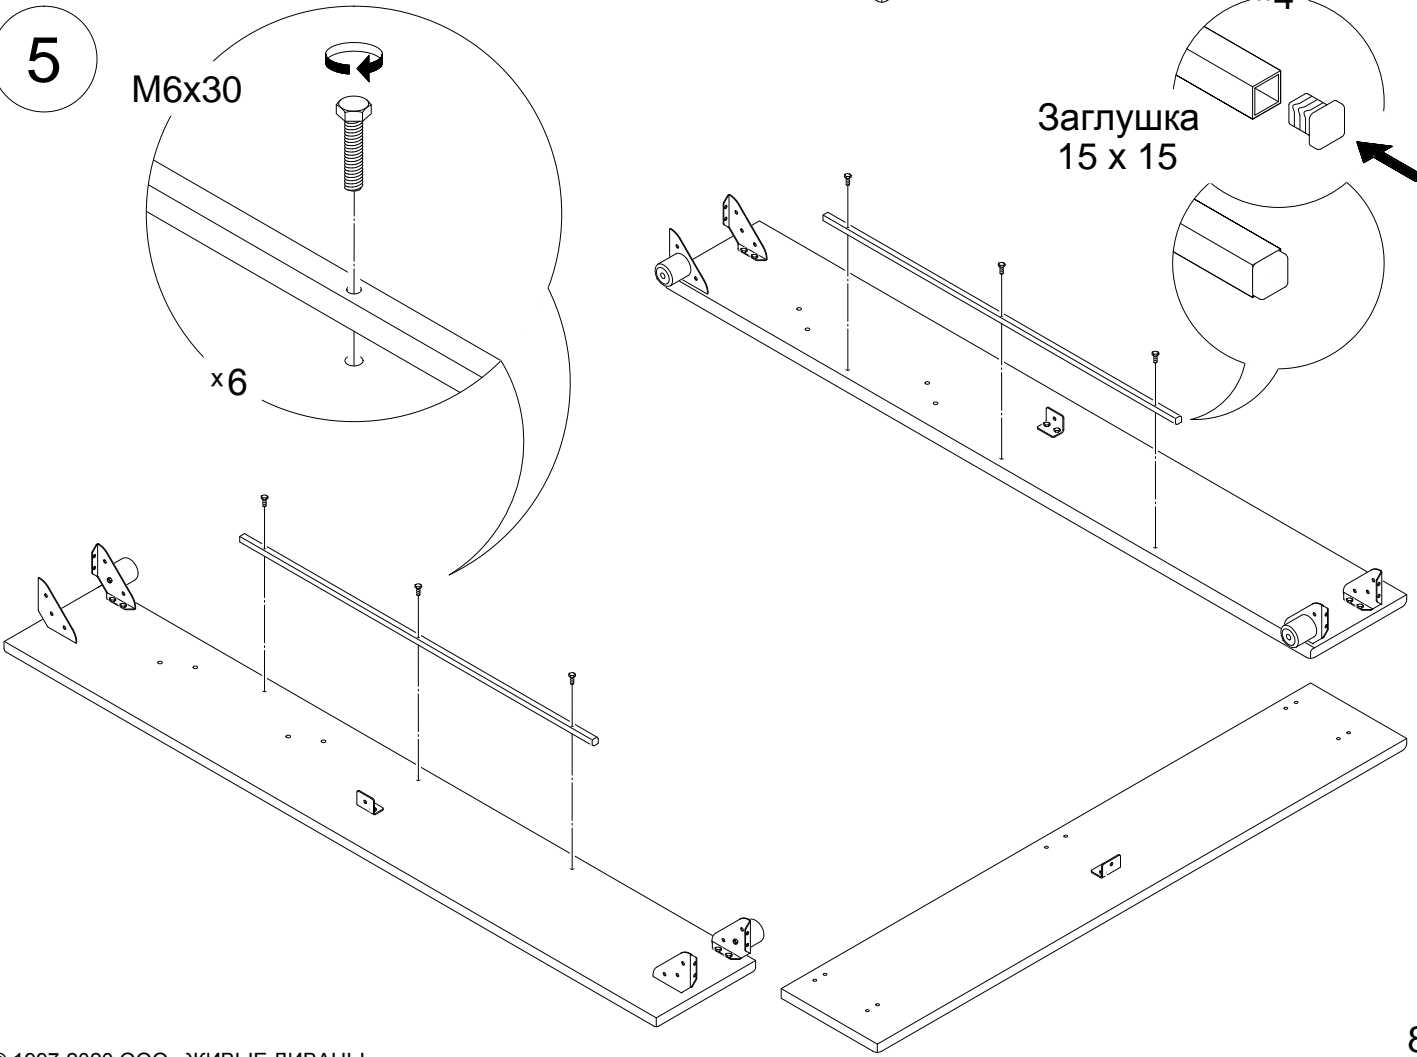


6

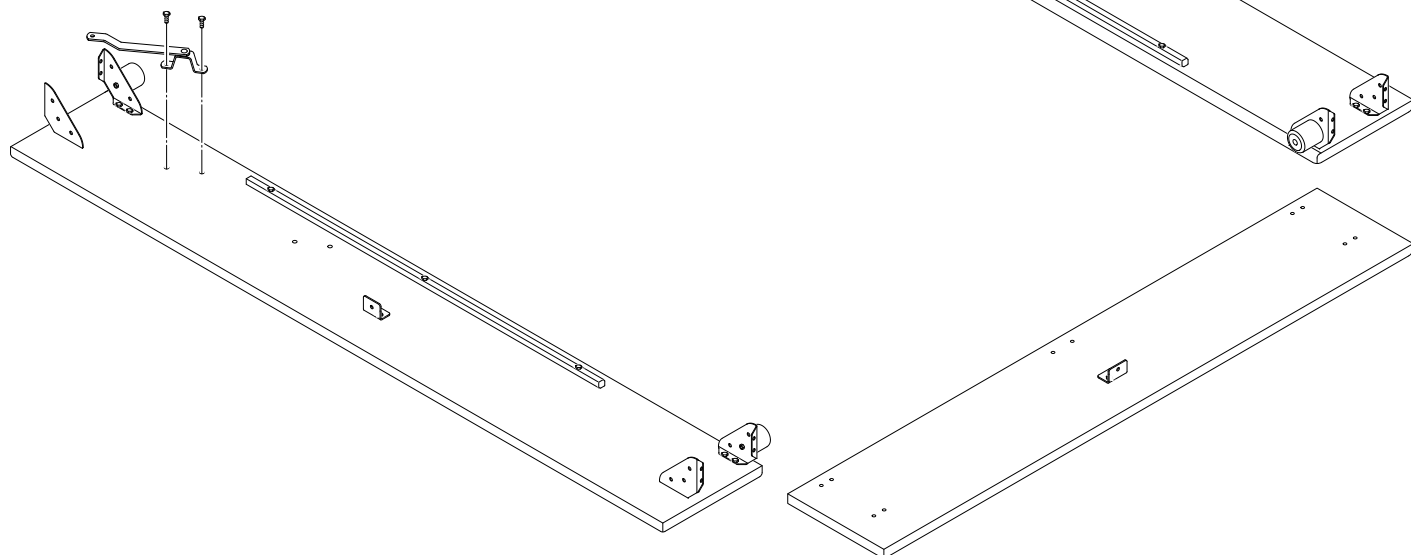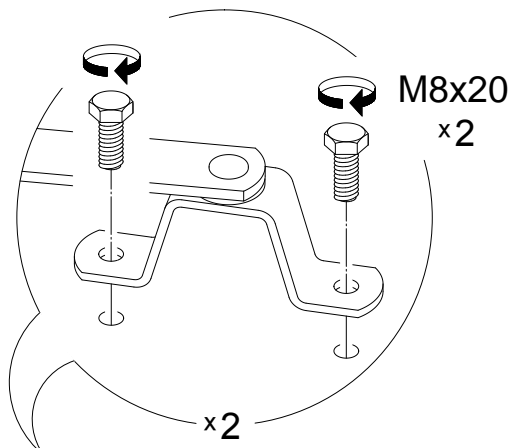





7

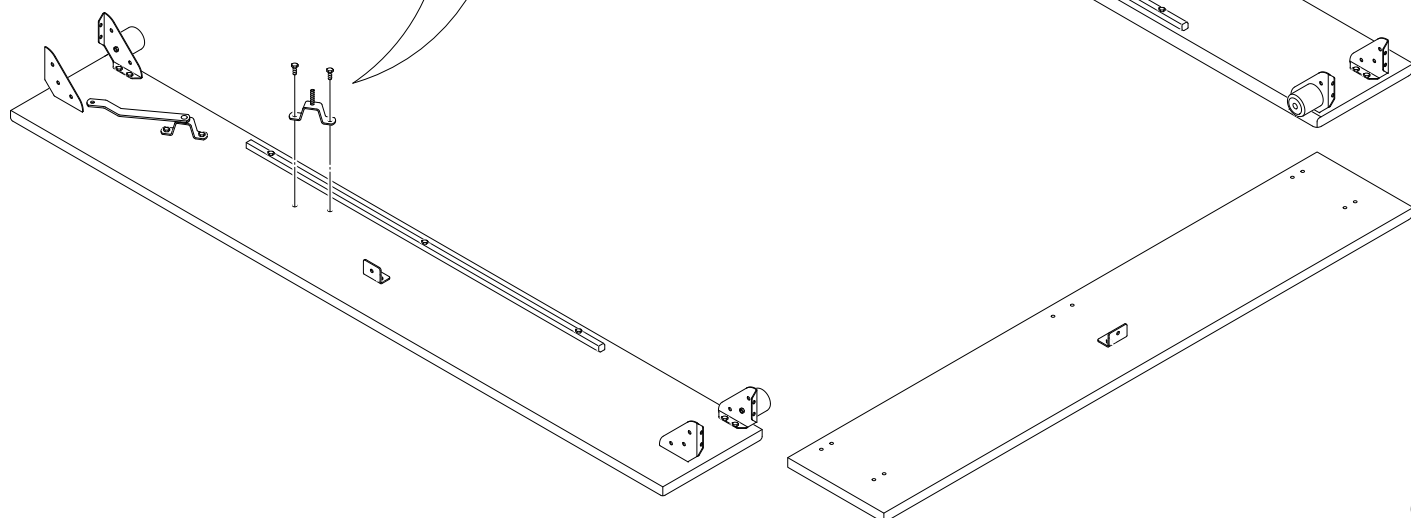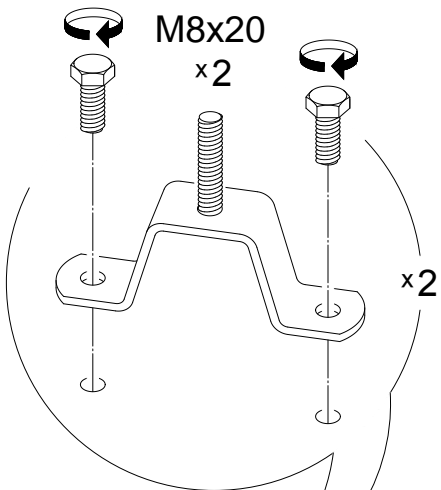



8

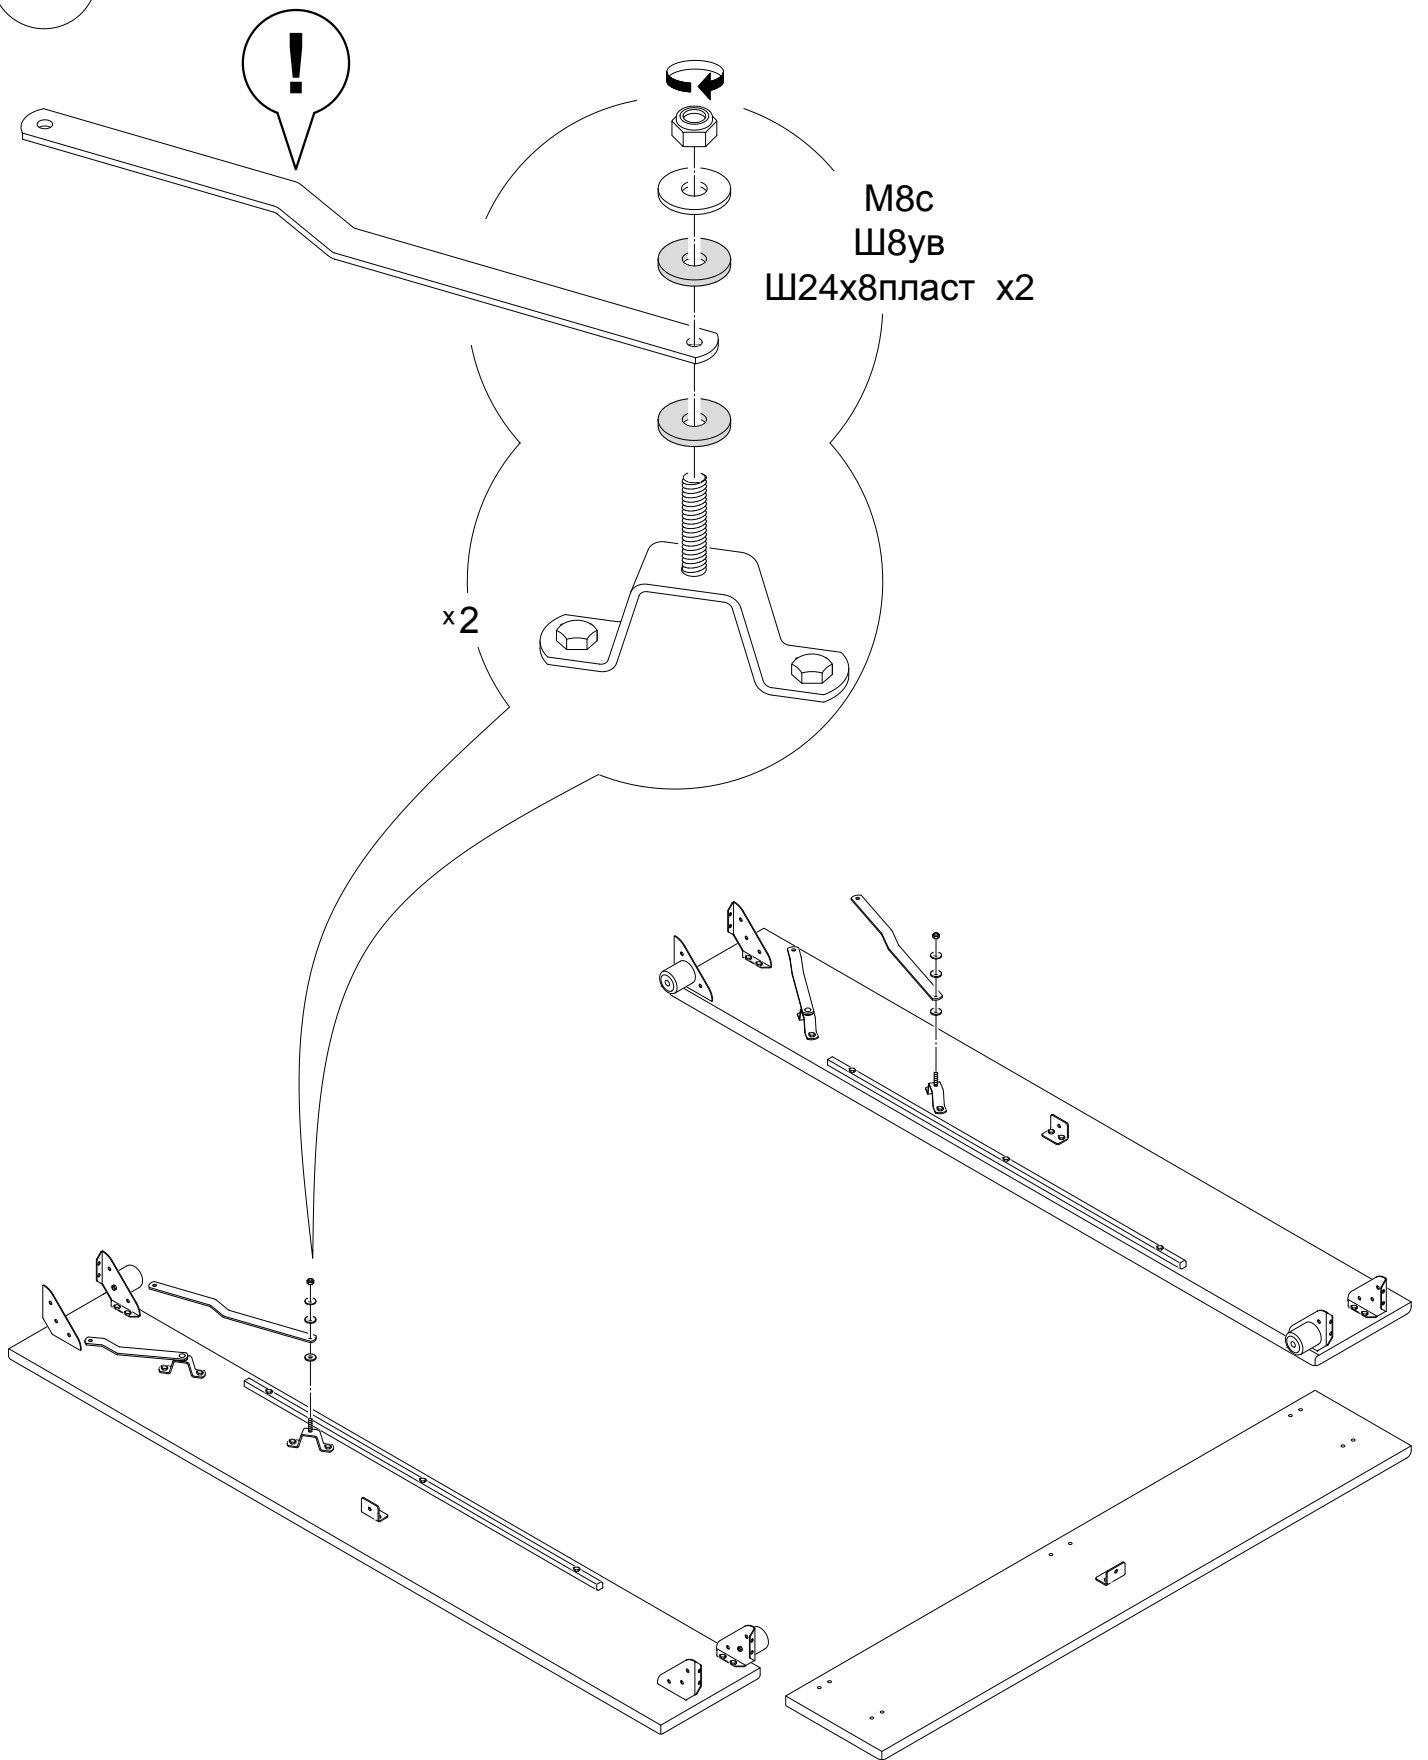



9

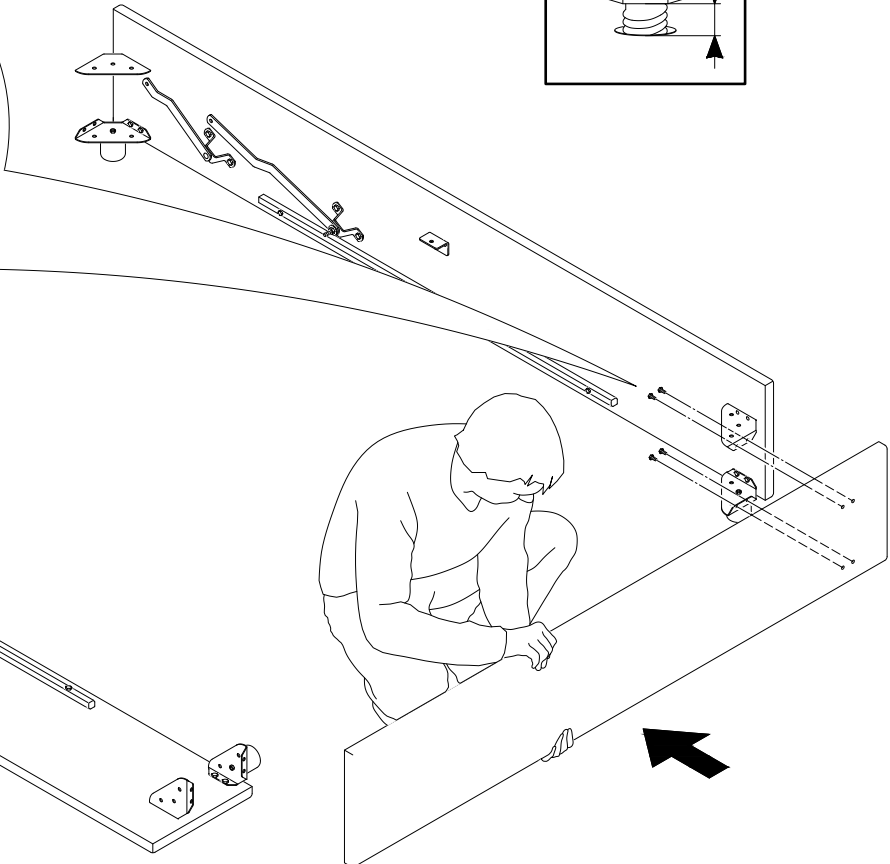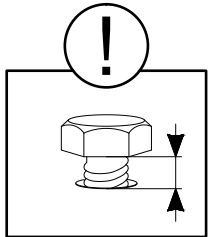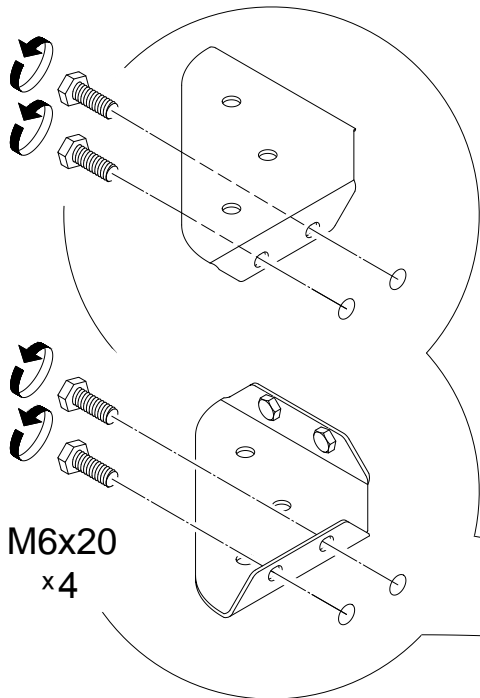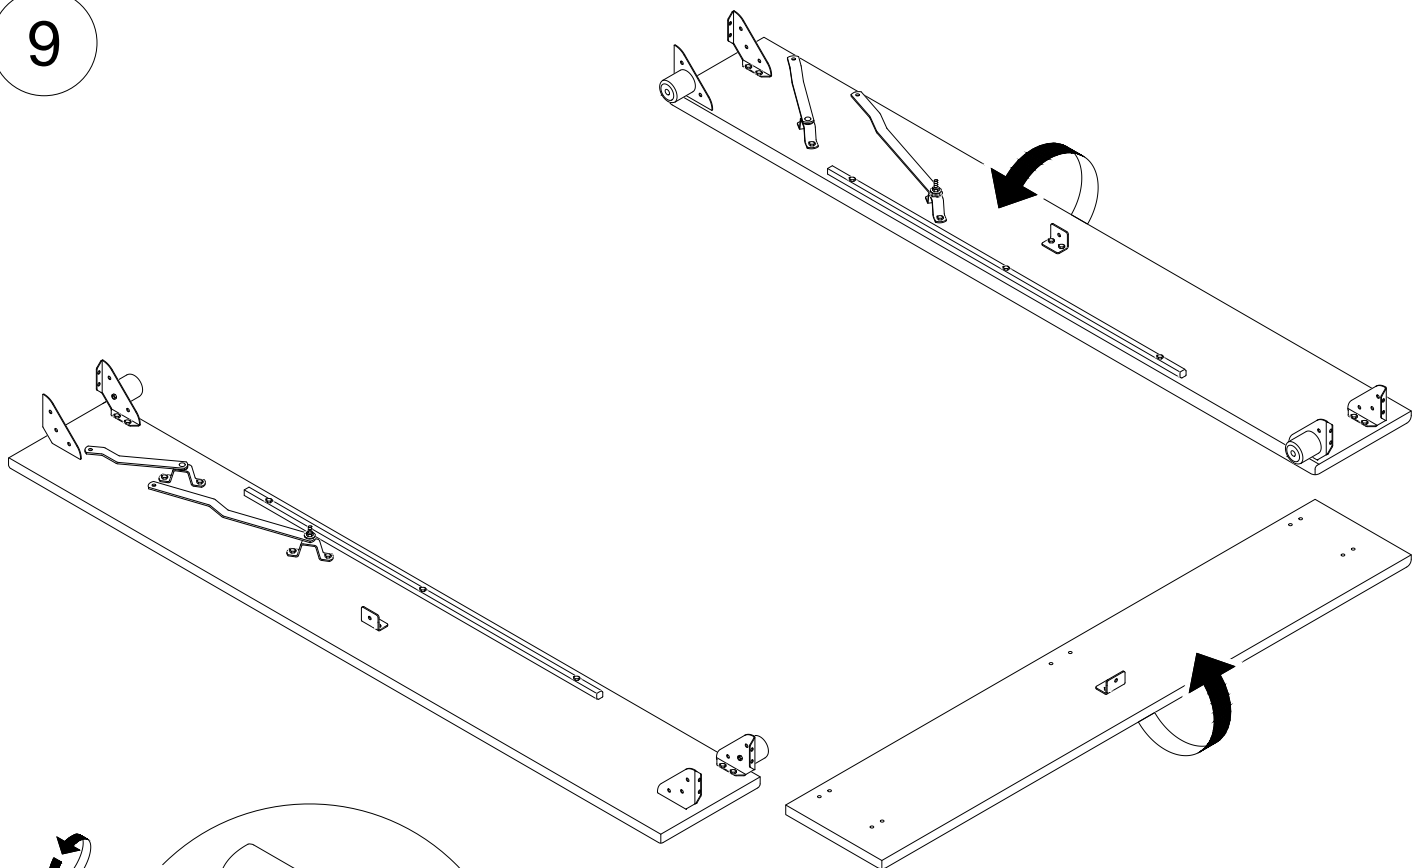



10

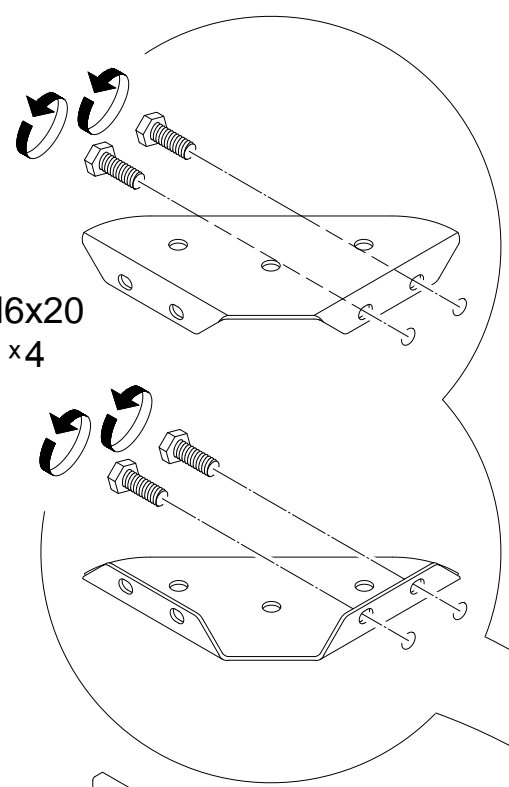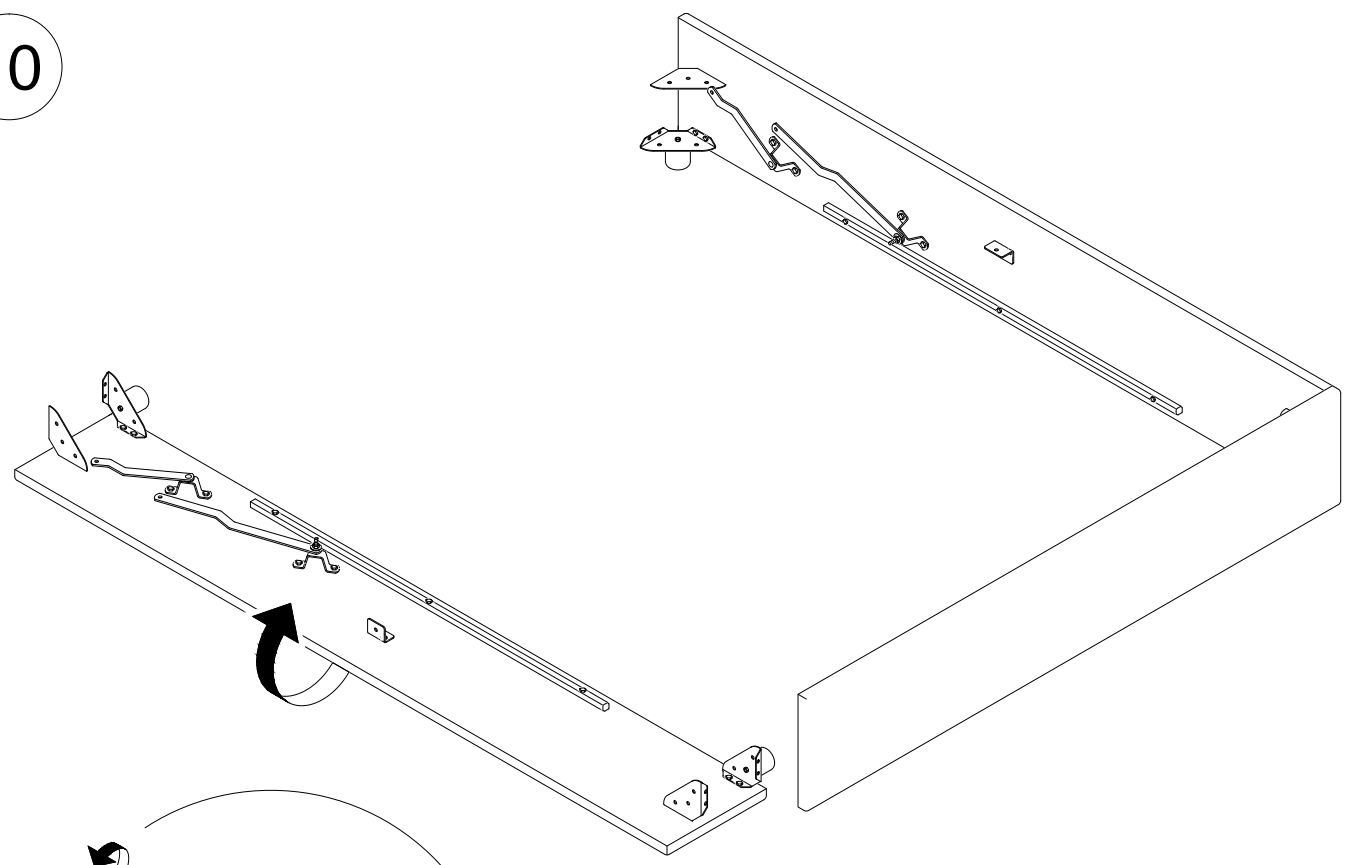



M6x20  
x4

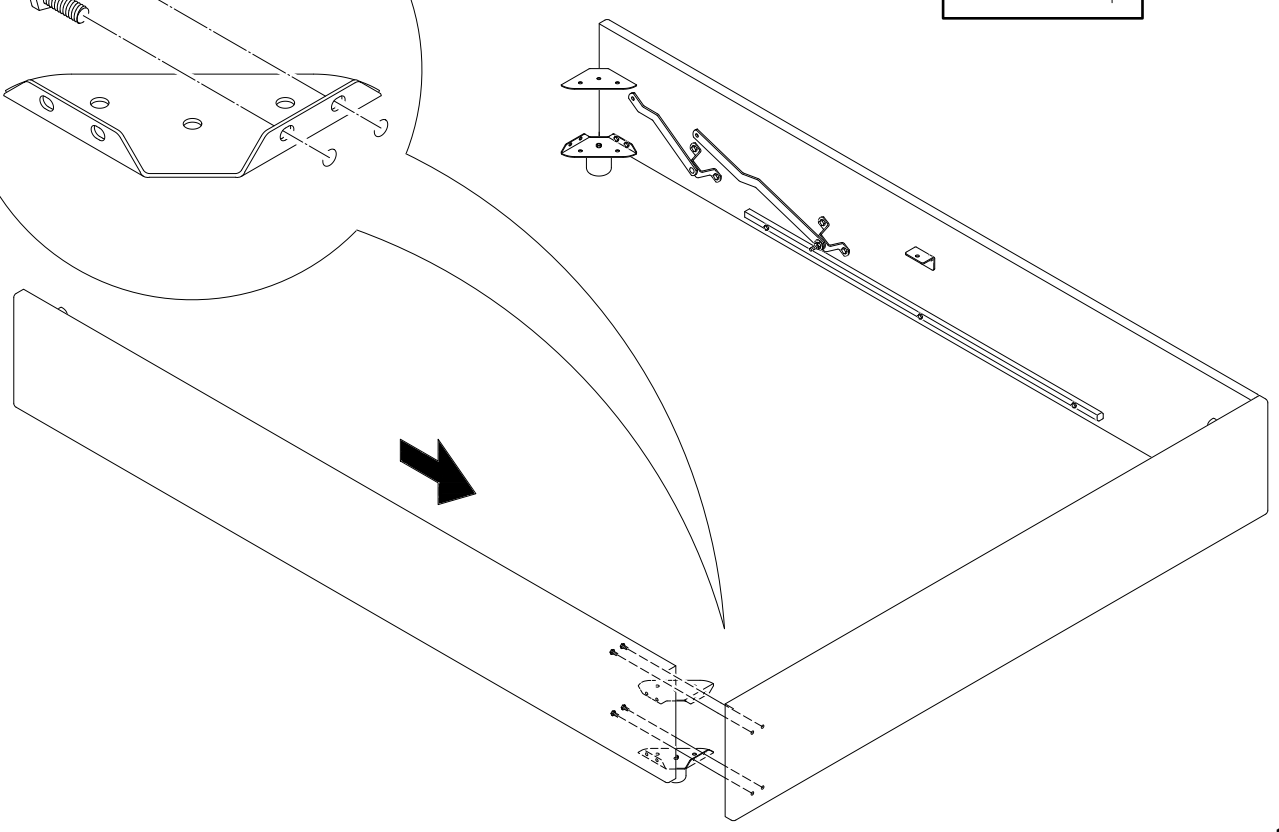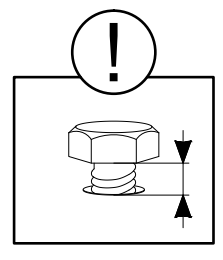


11

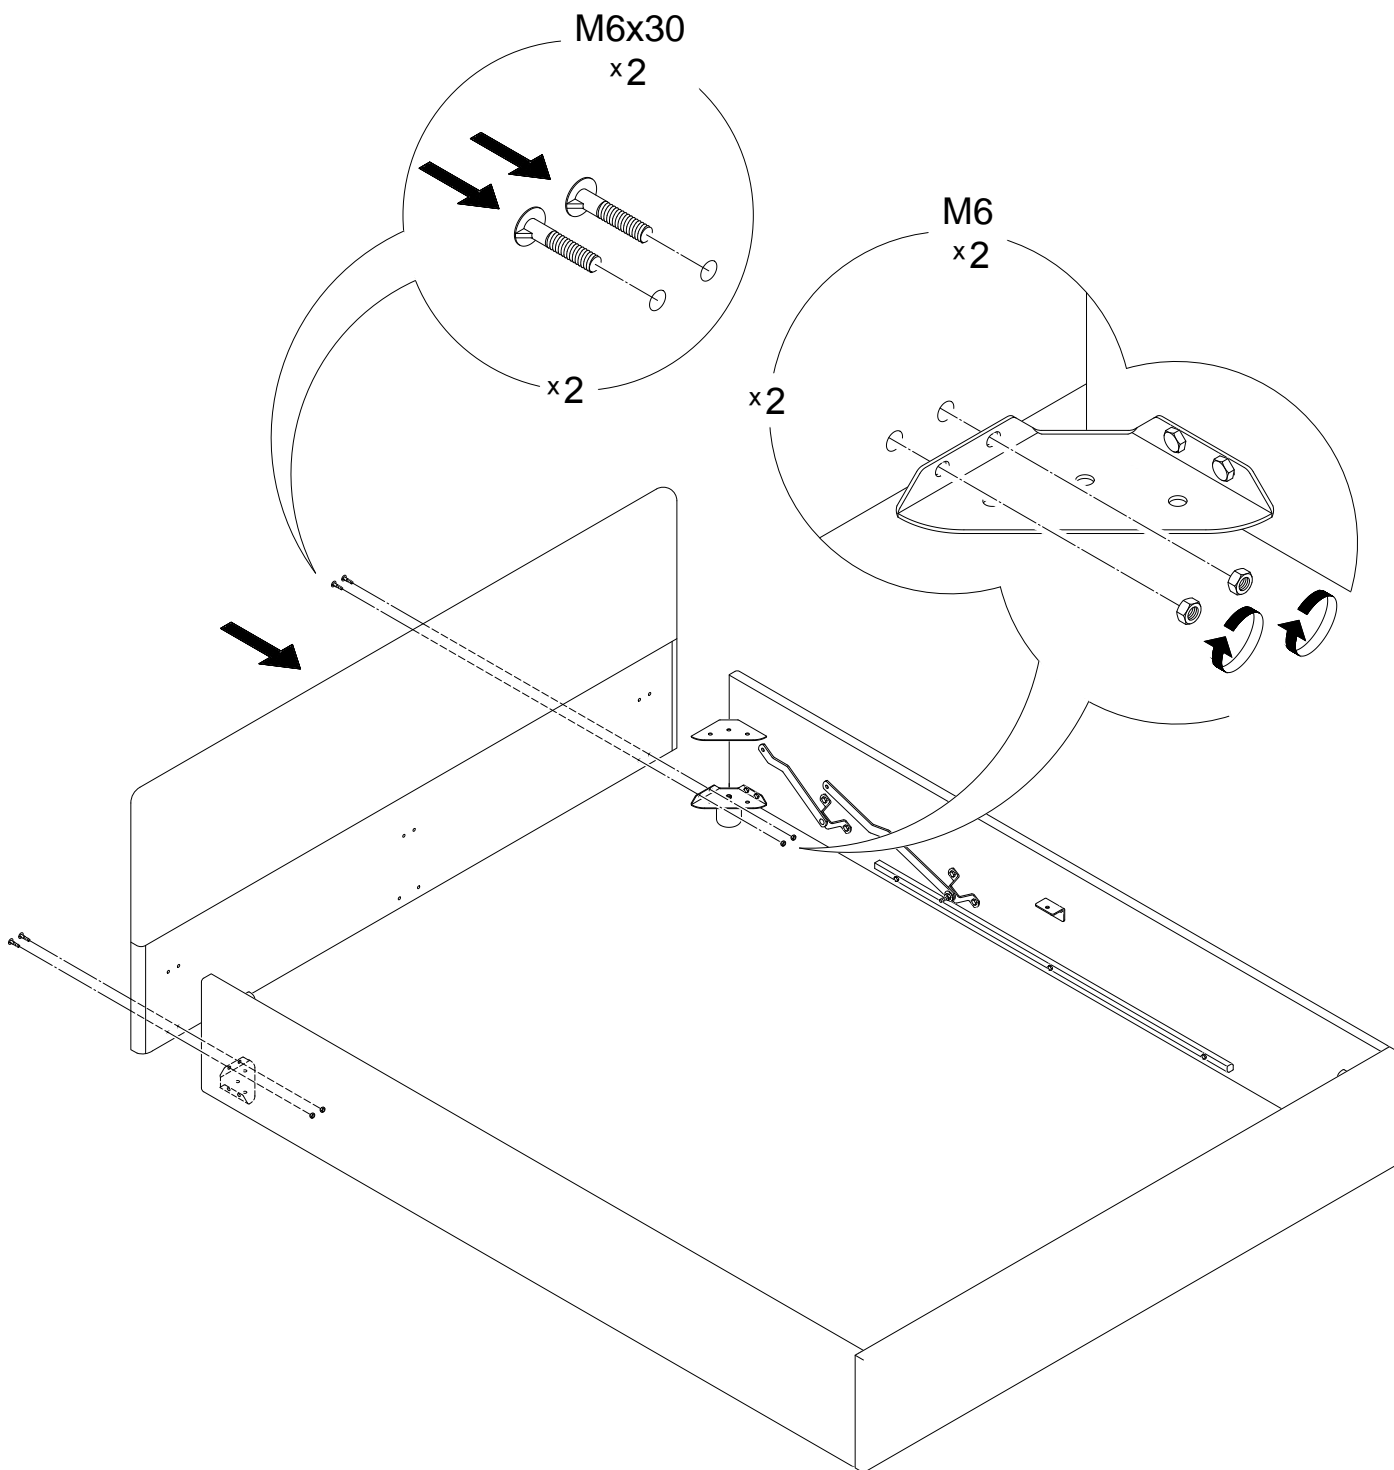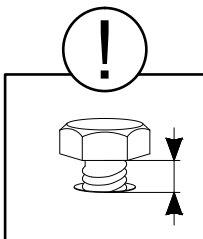


12

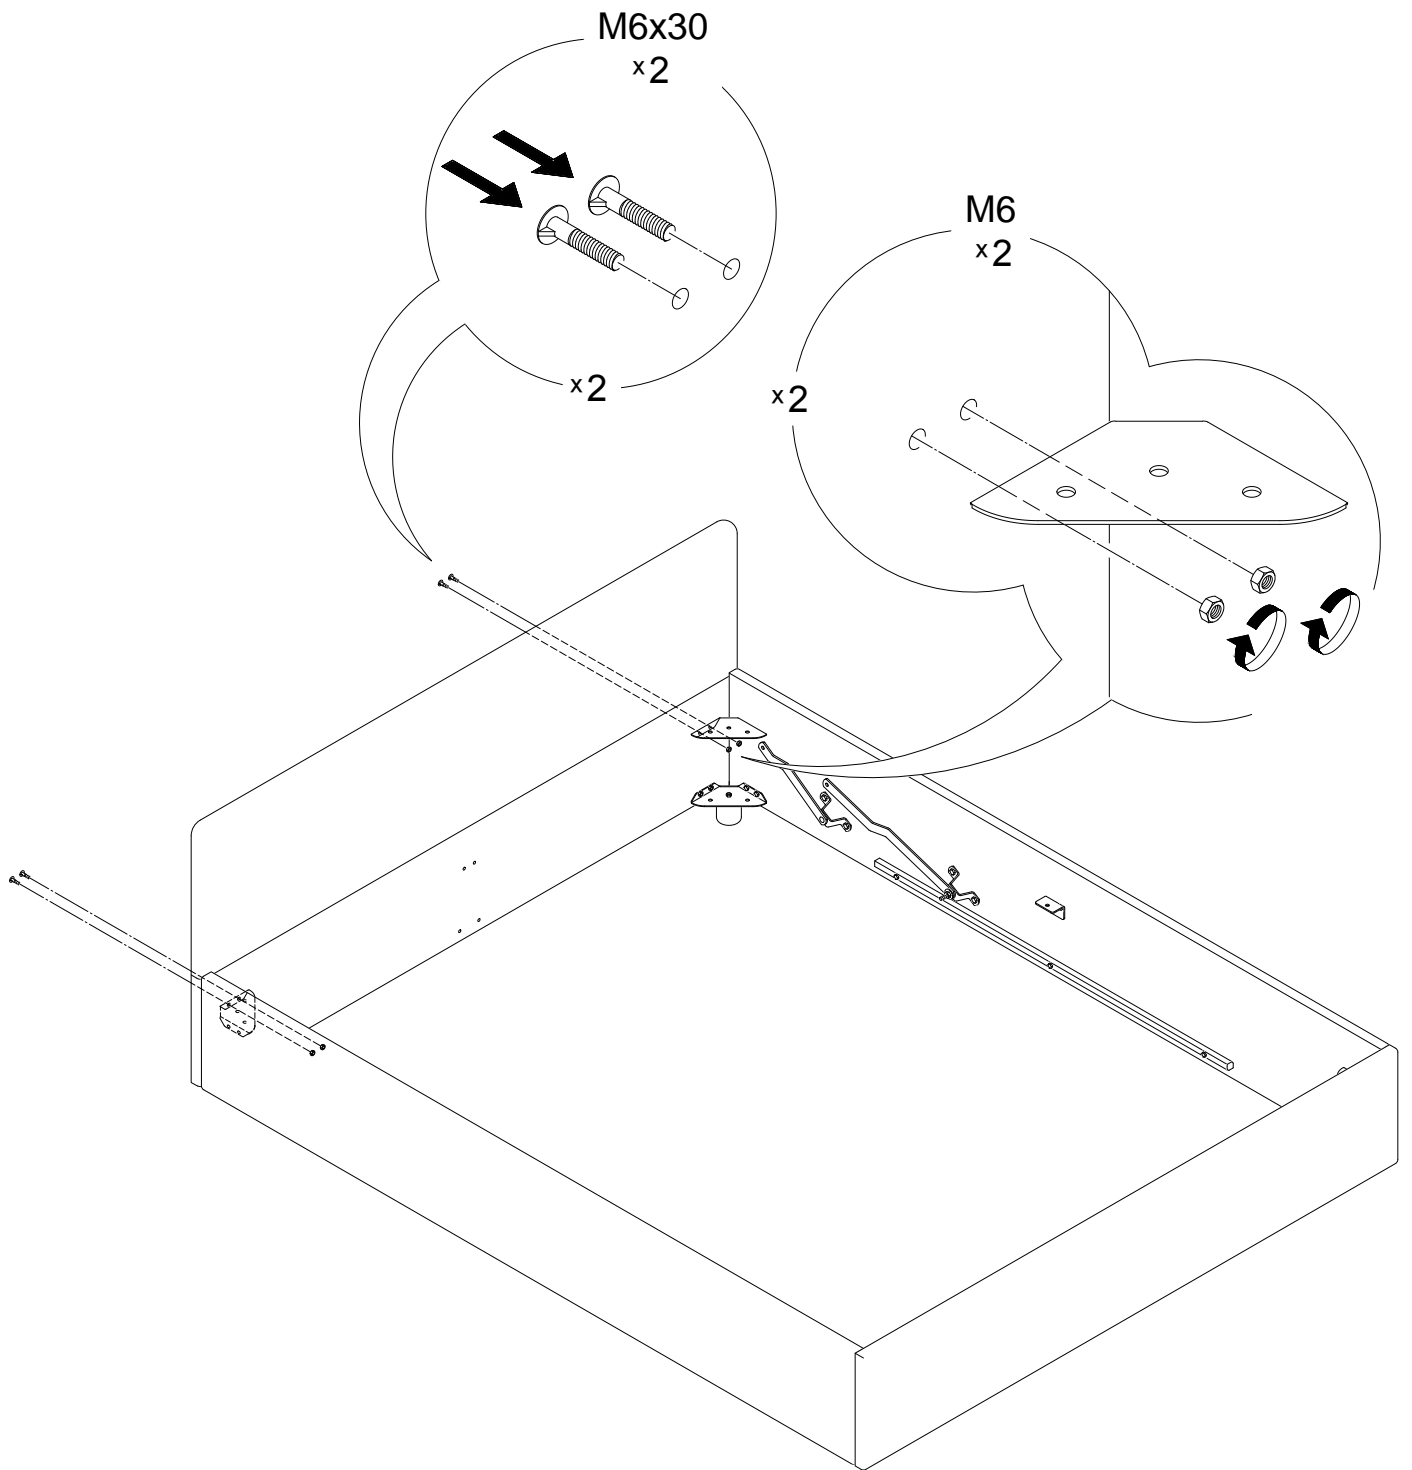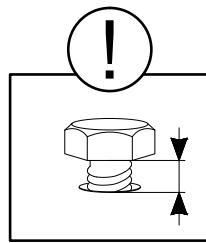


13

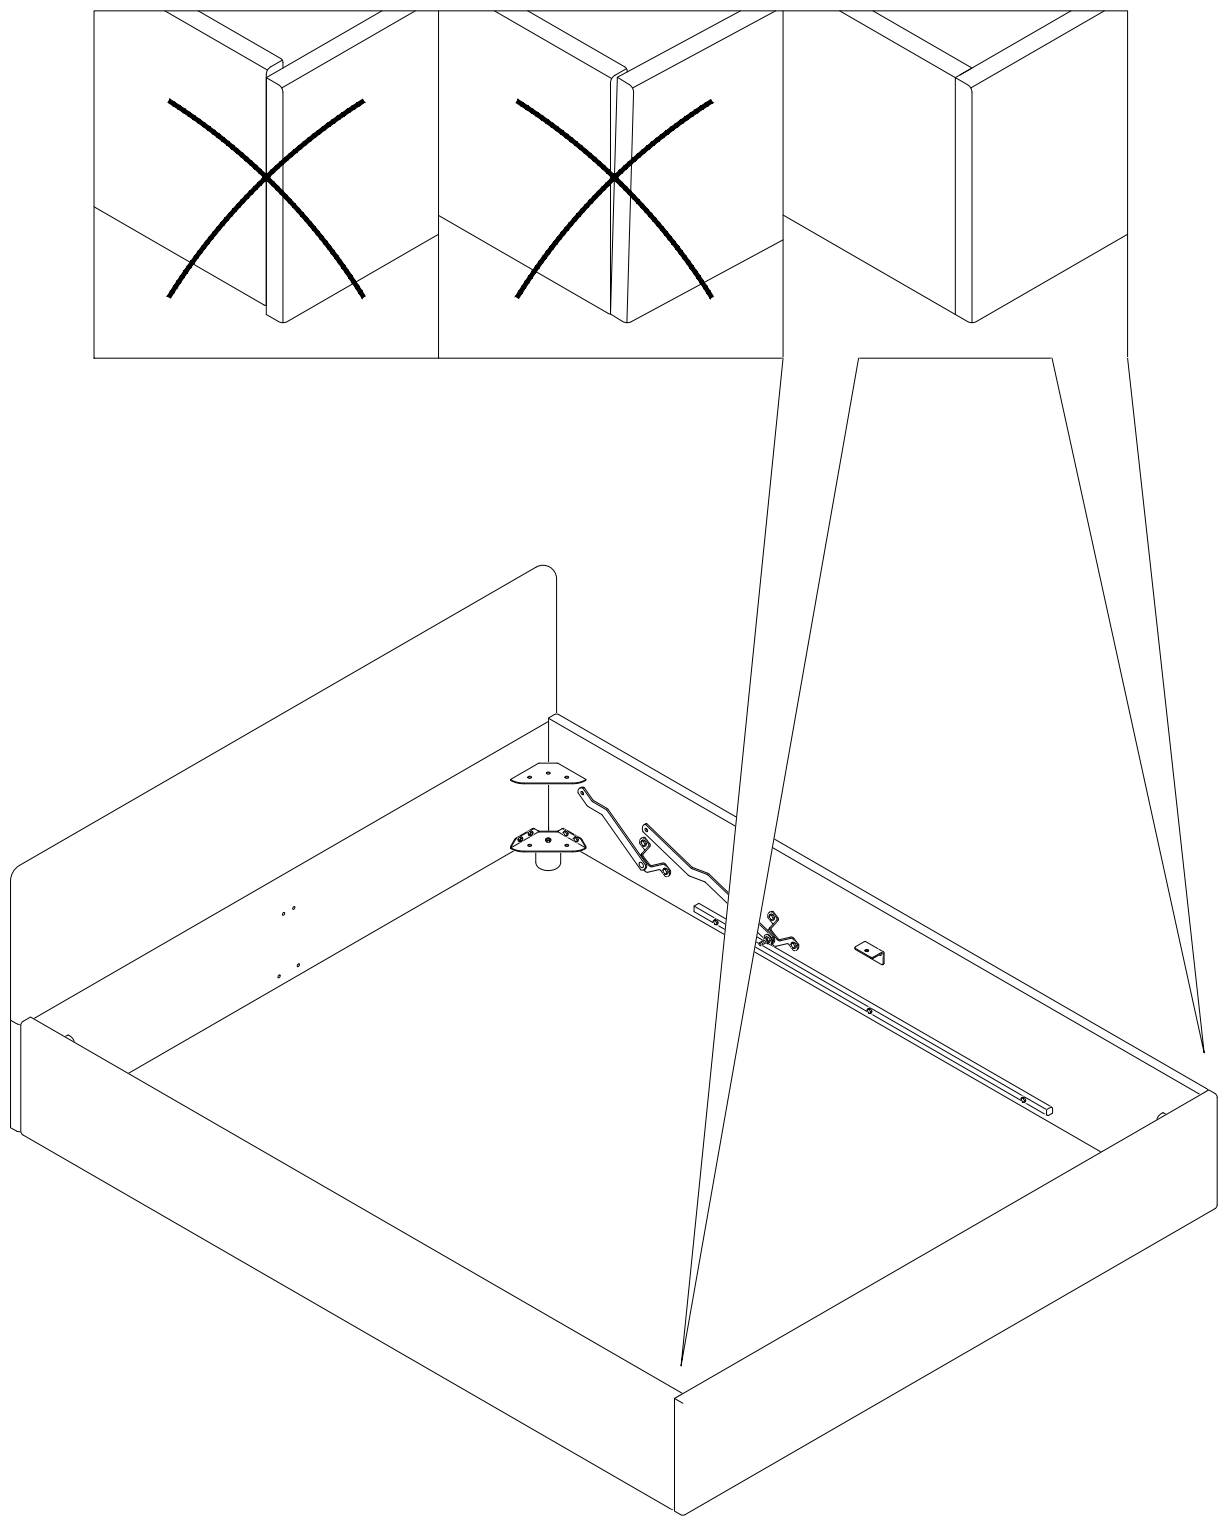



- 1
- 3
- 9
- 10
- 11
- 12

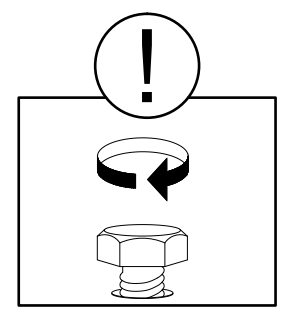





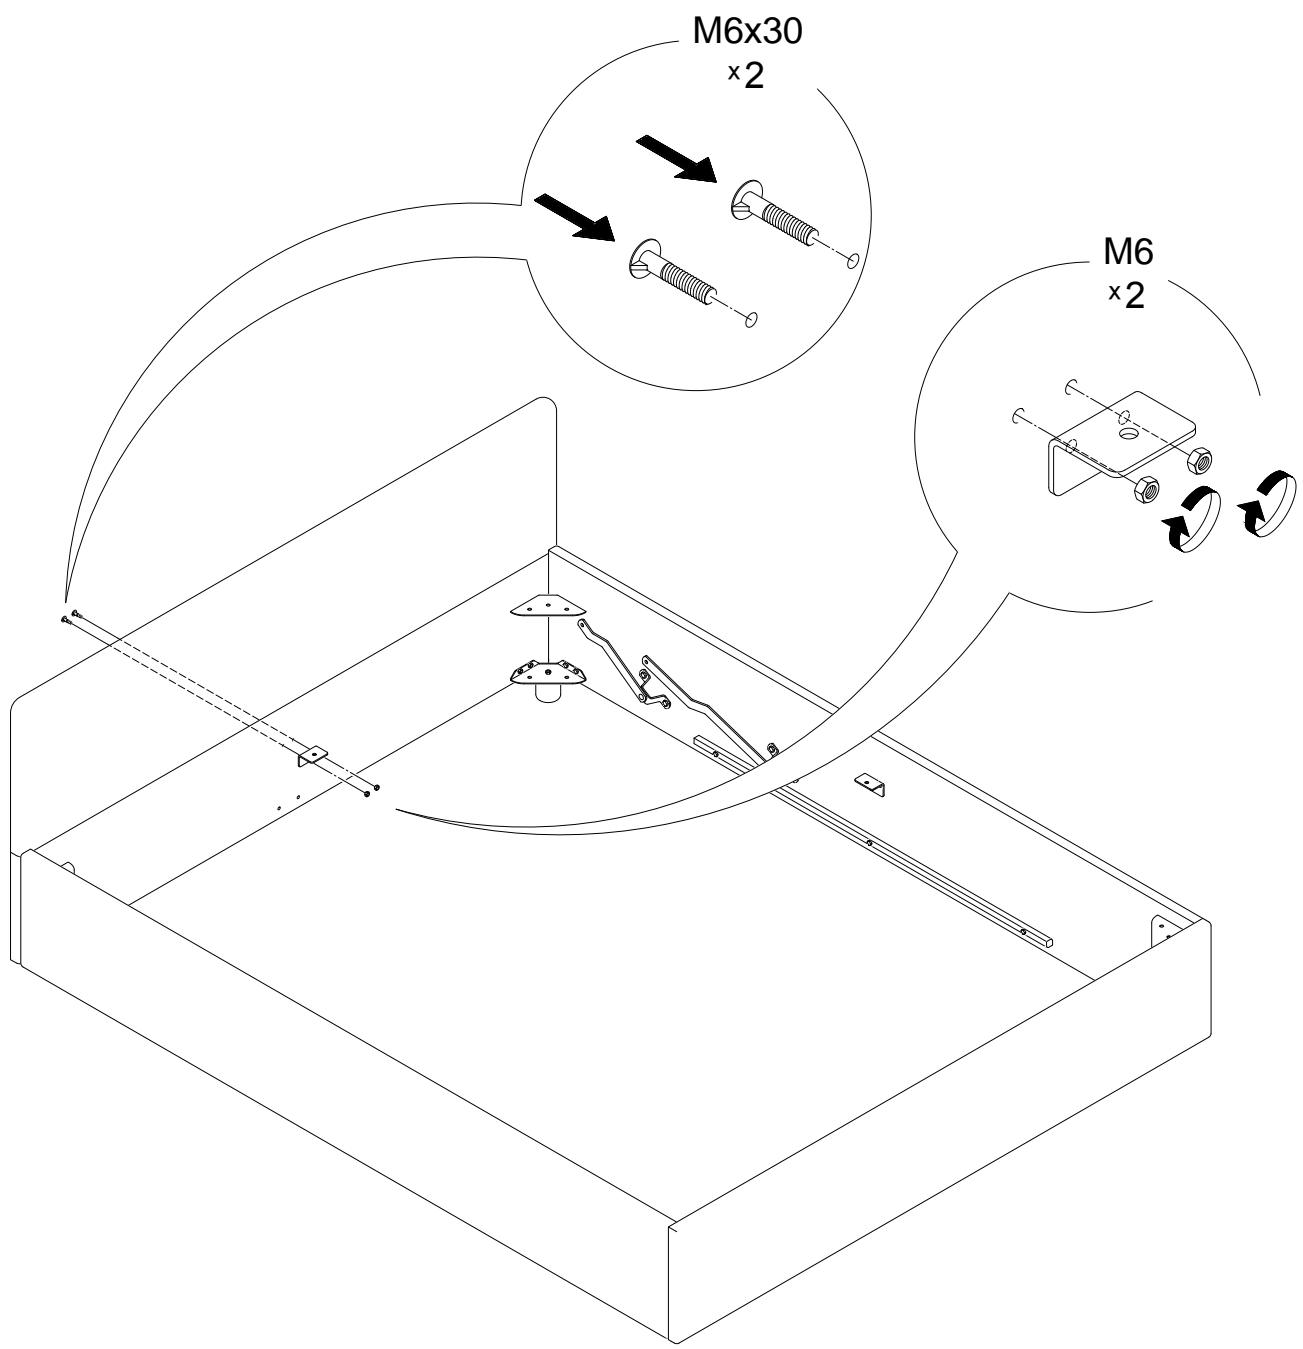


15

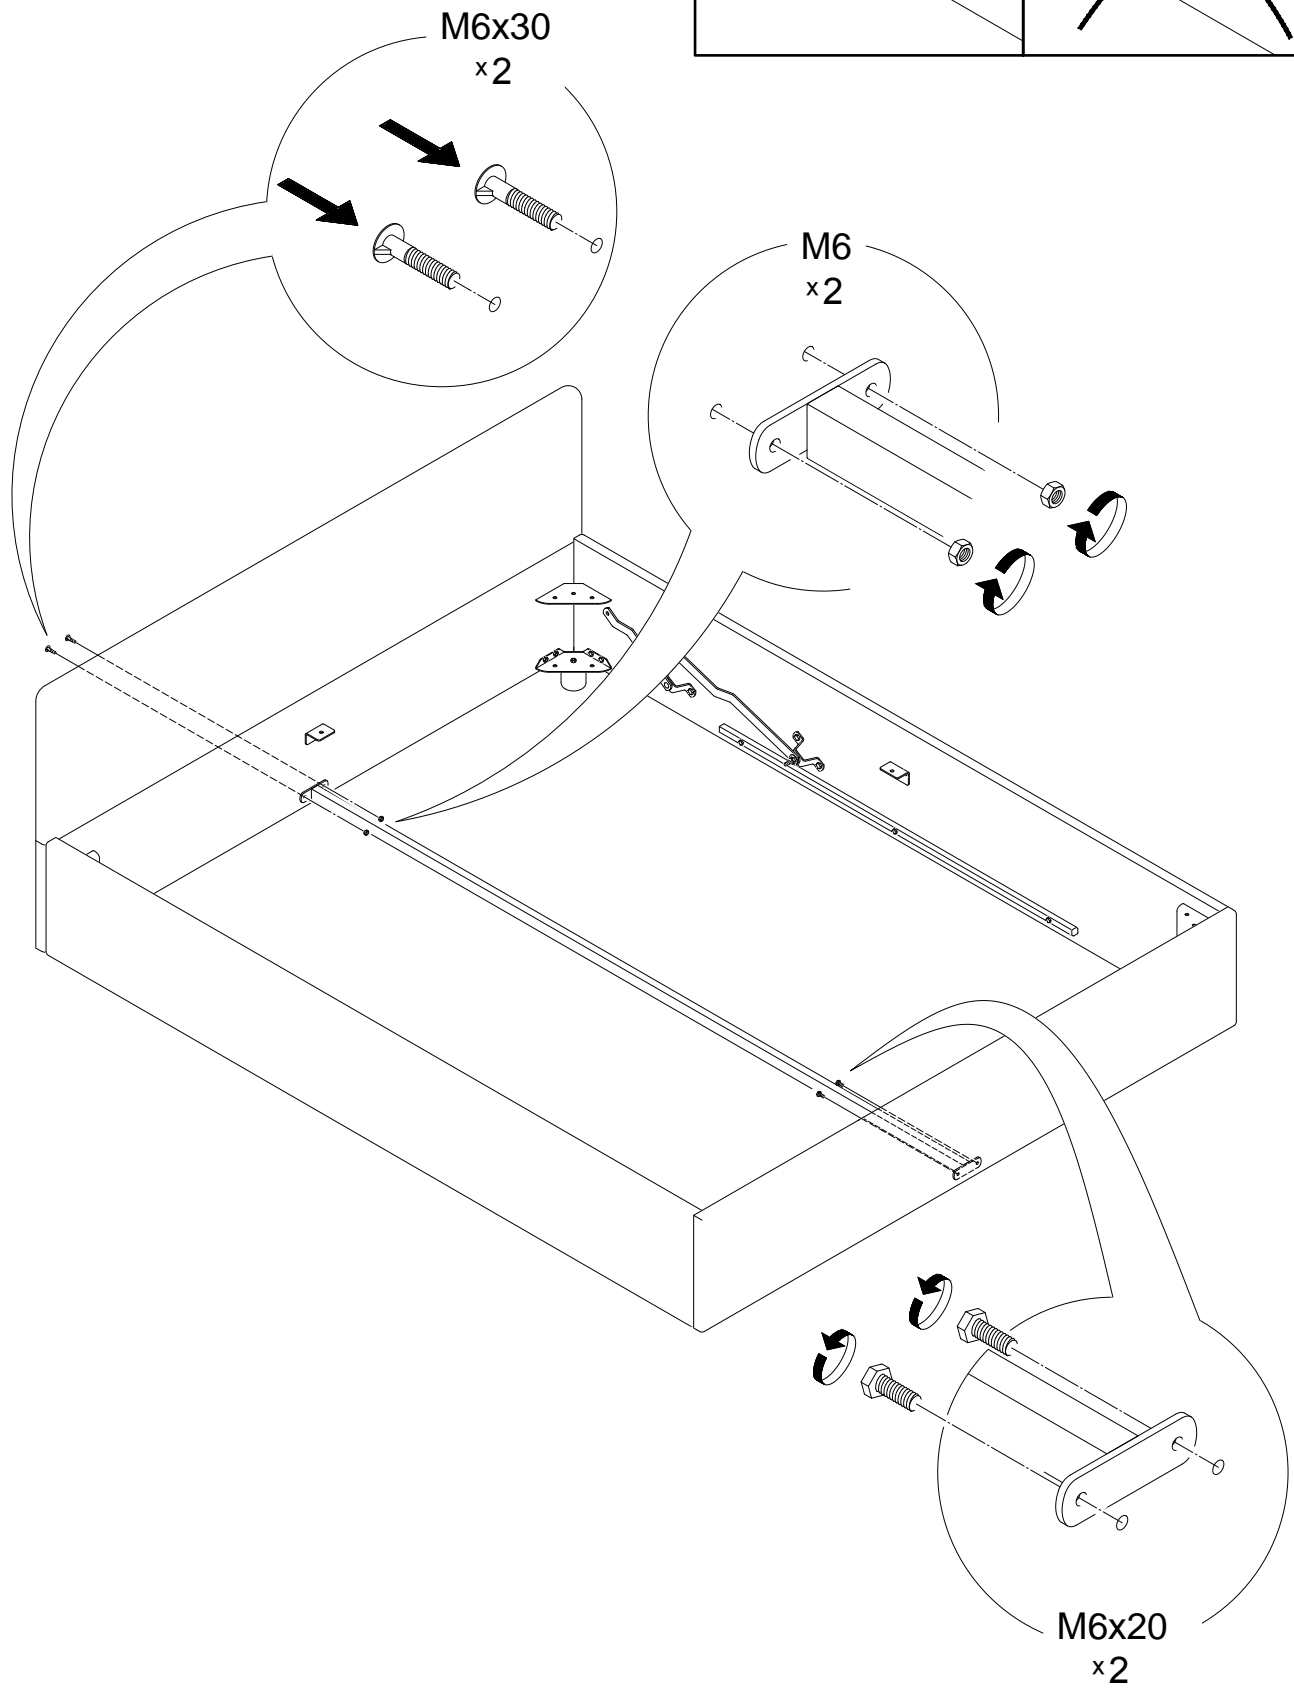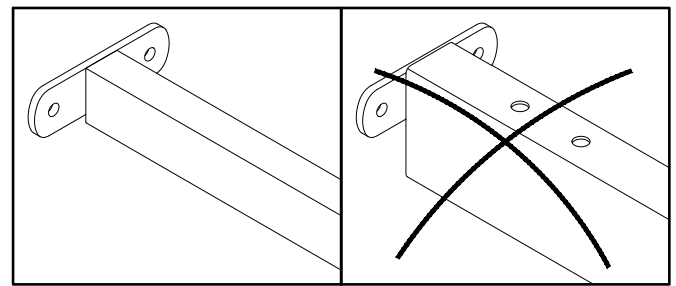


16

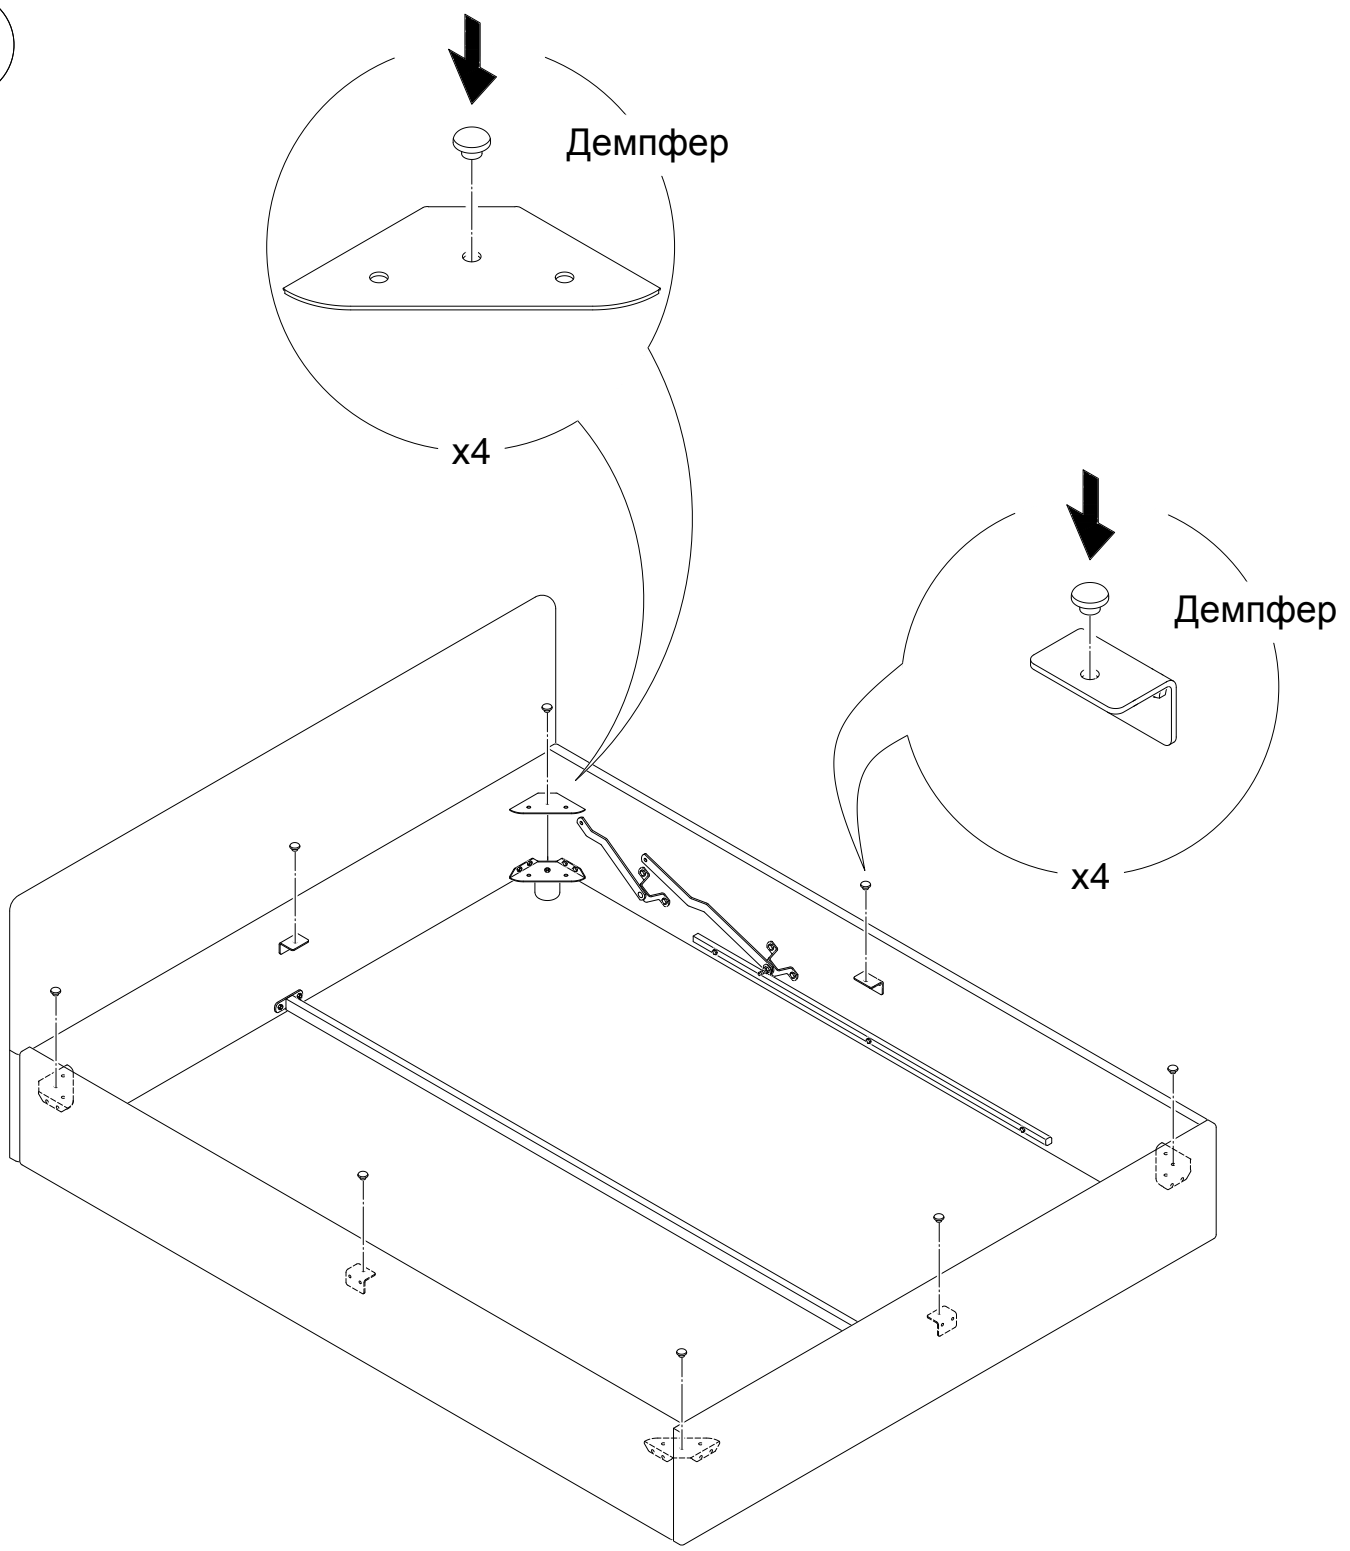



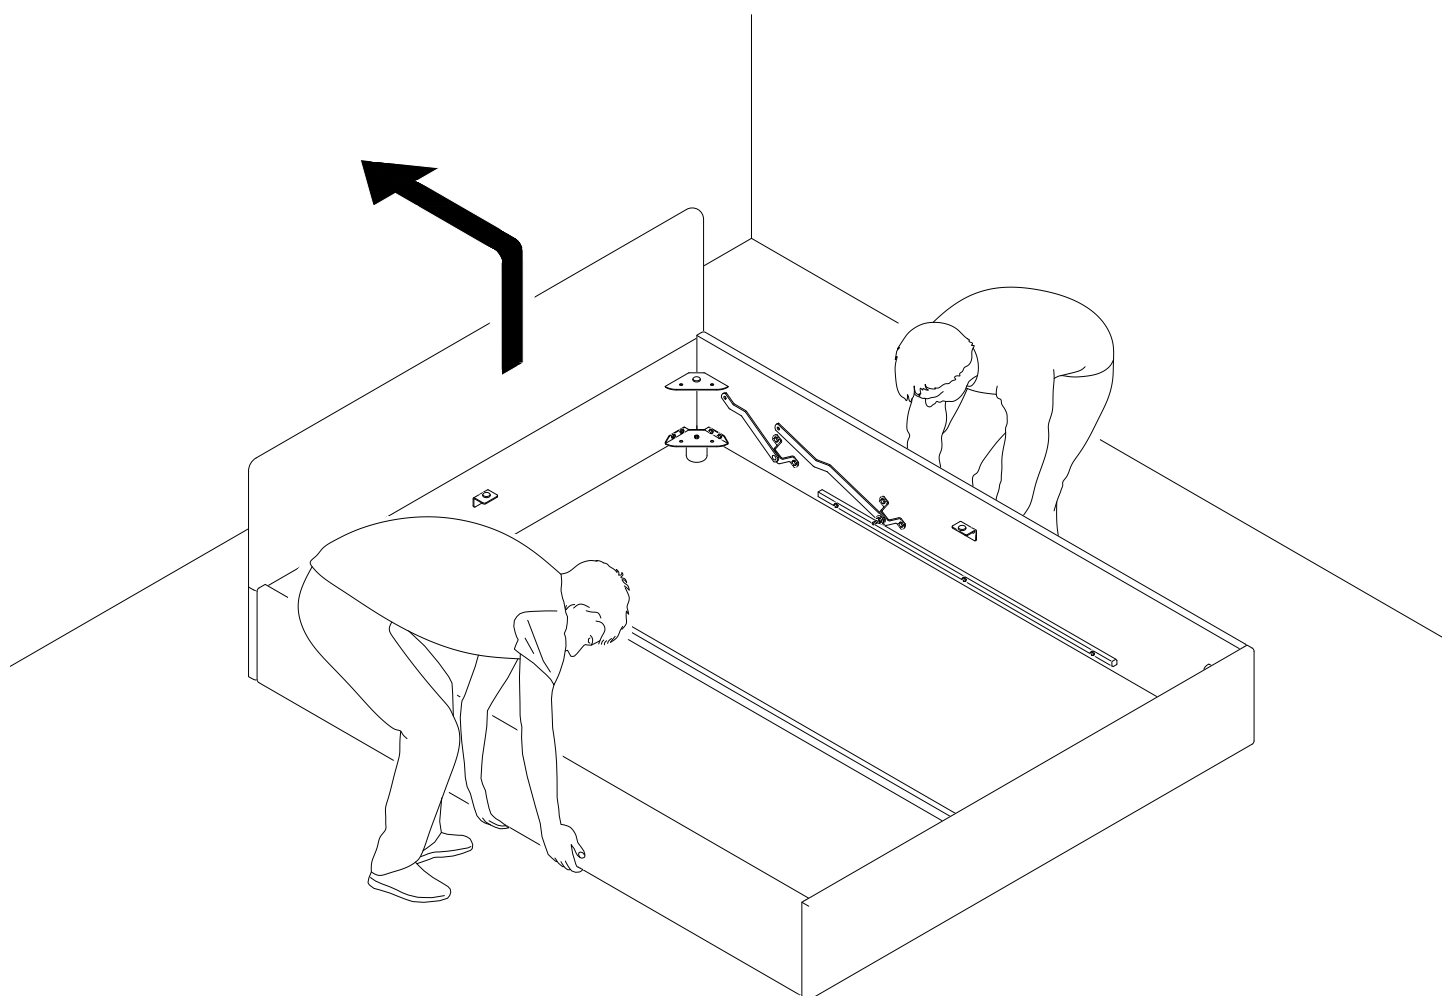
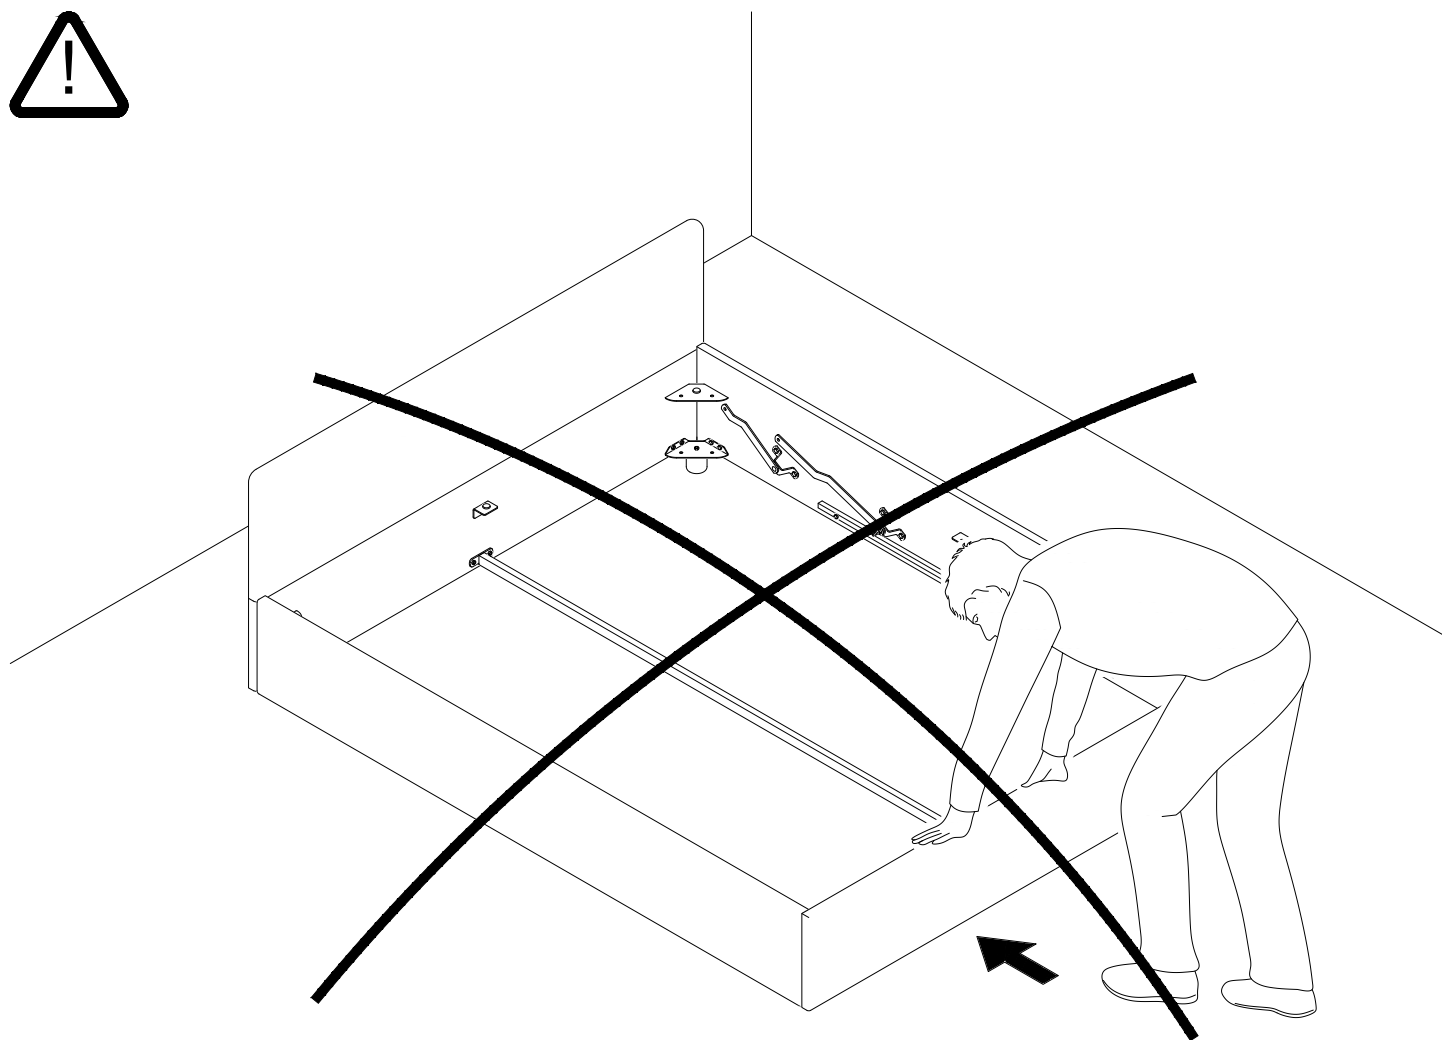


17

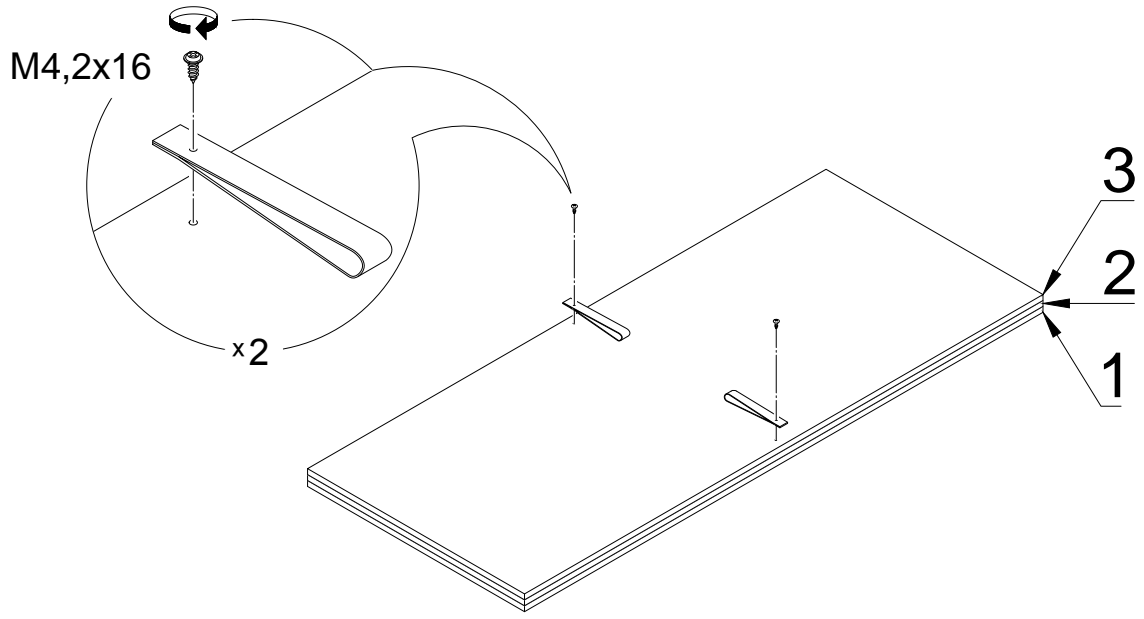


18

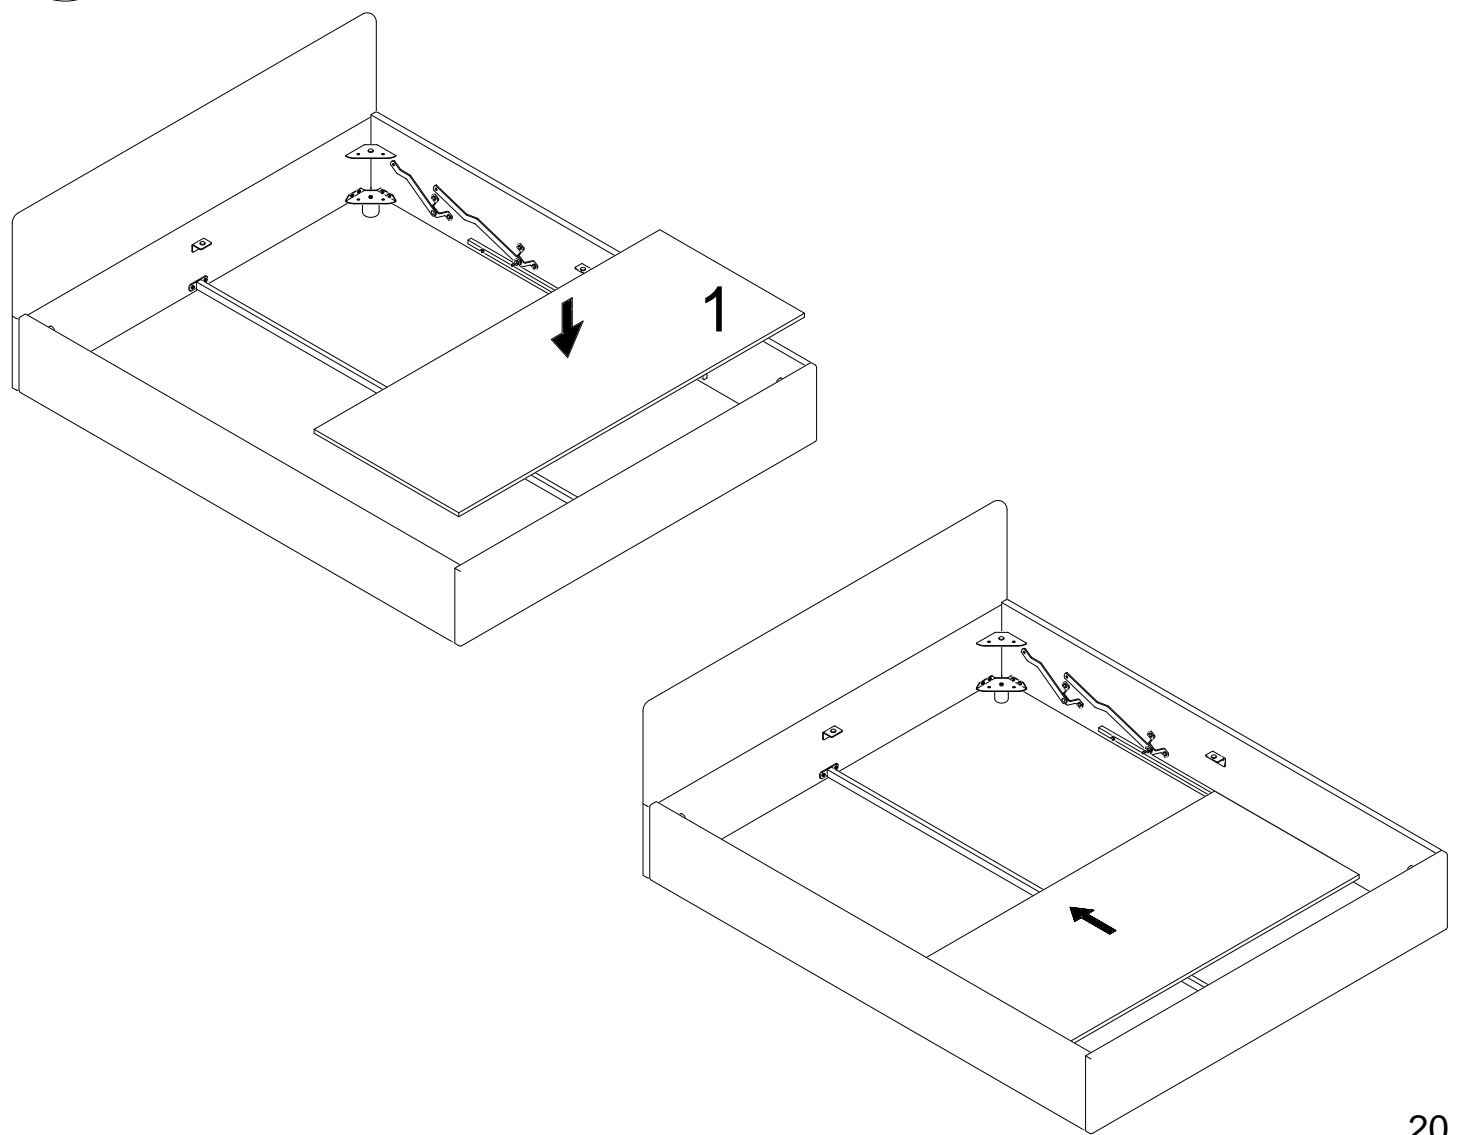

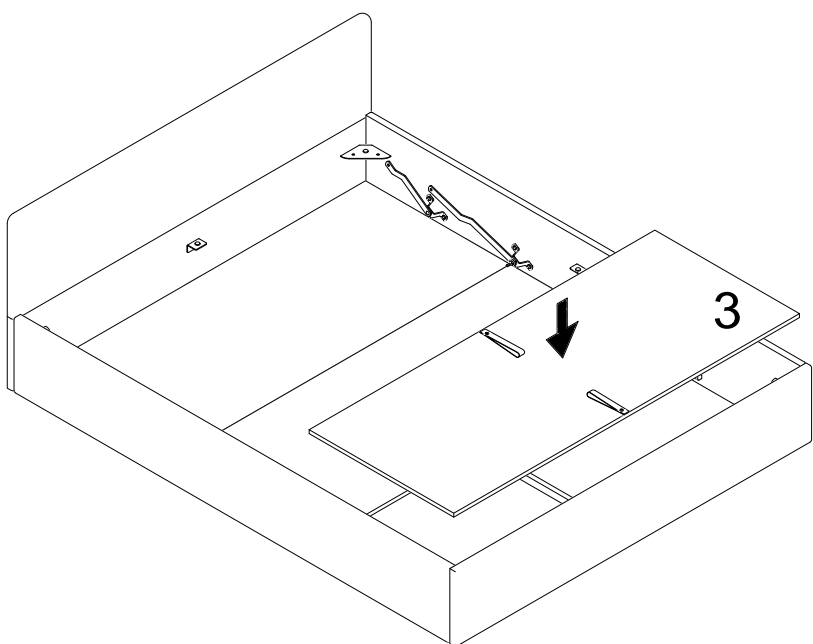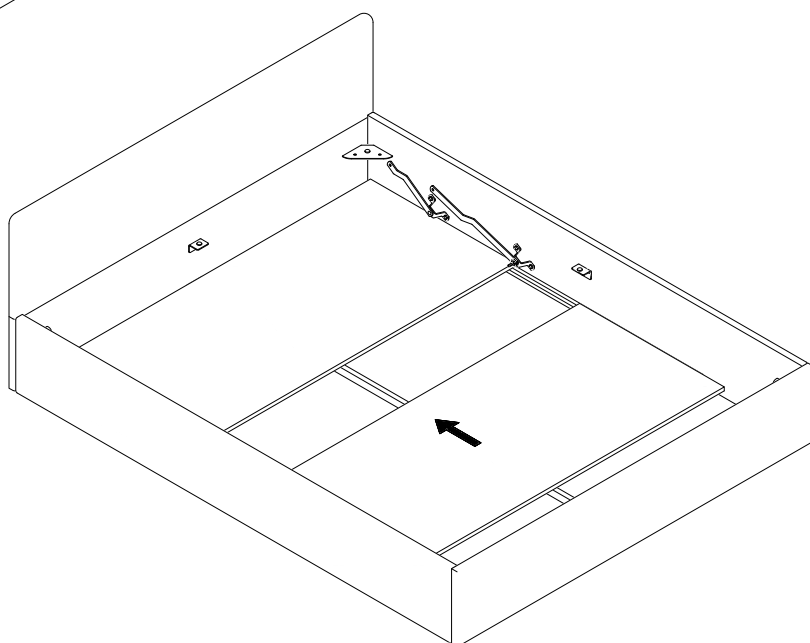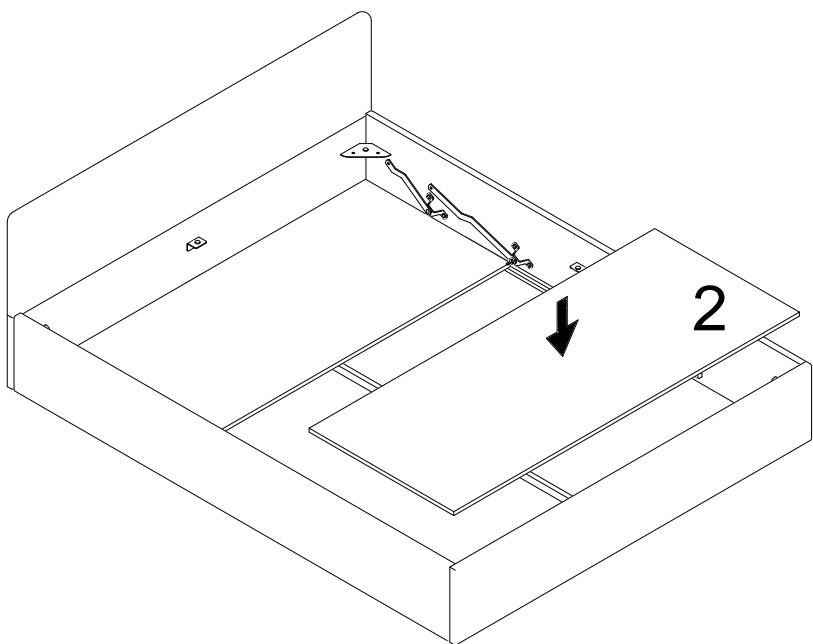




21

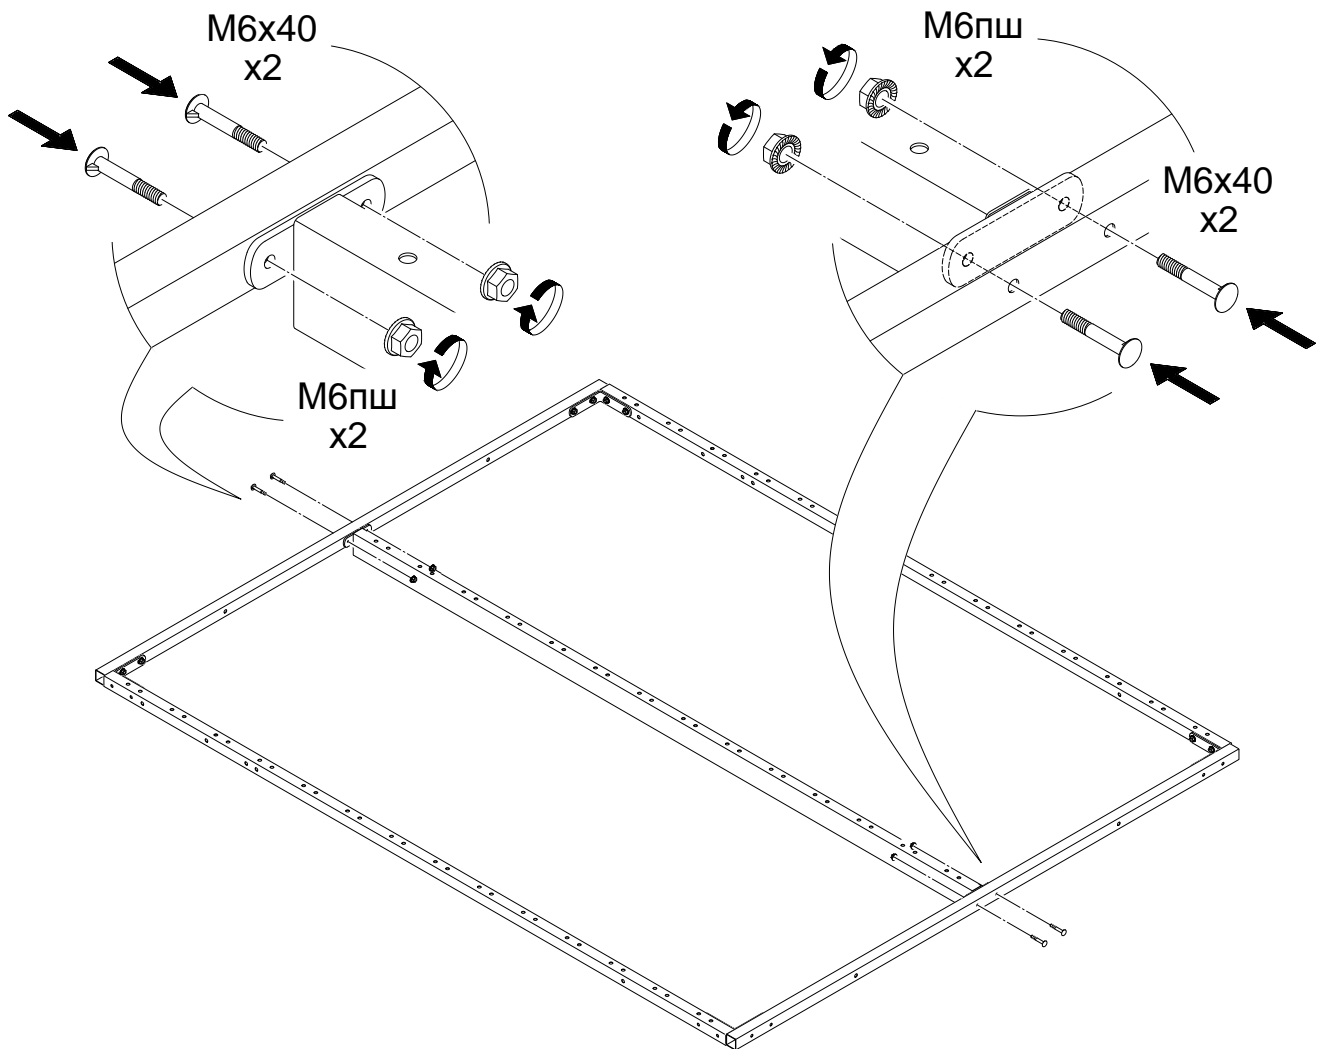


22

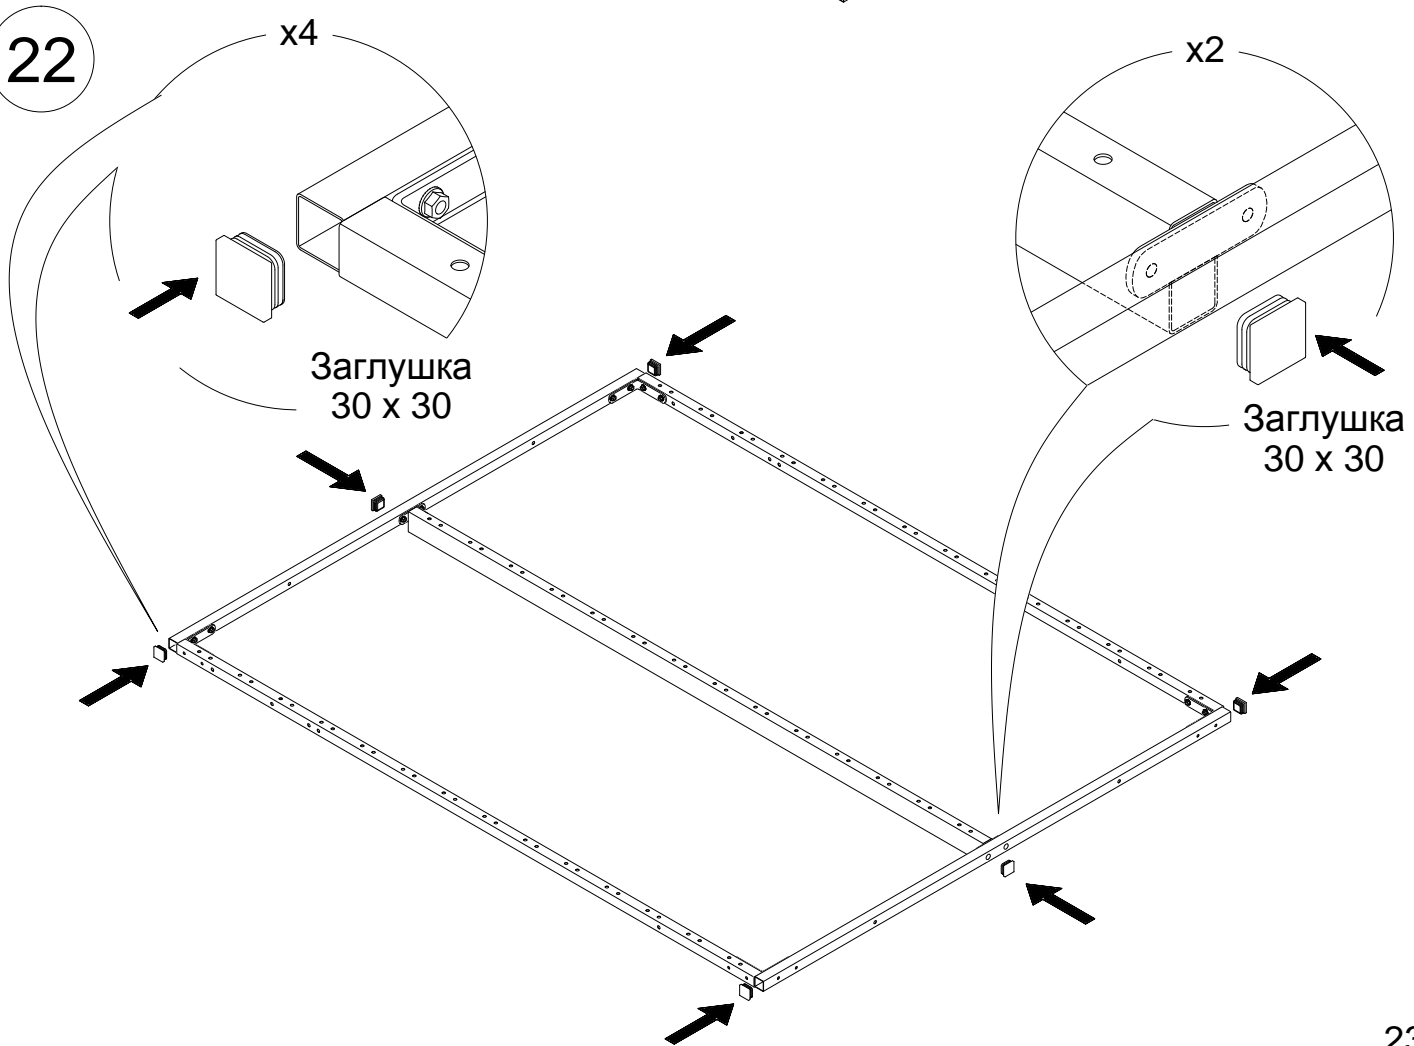





23

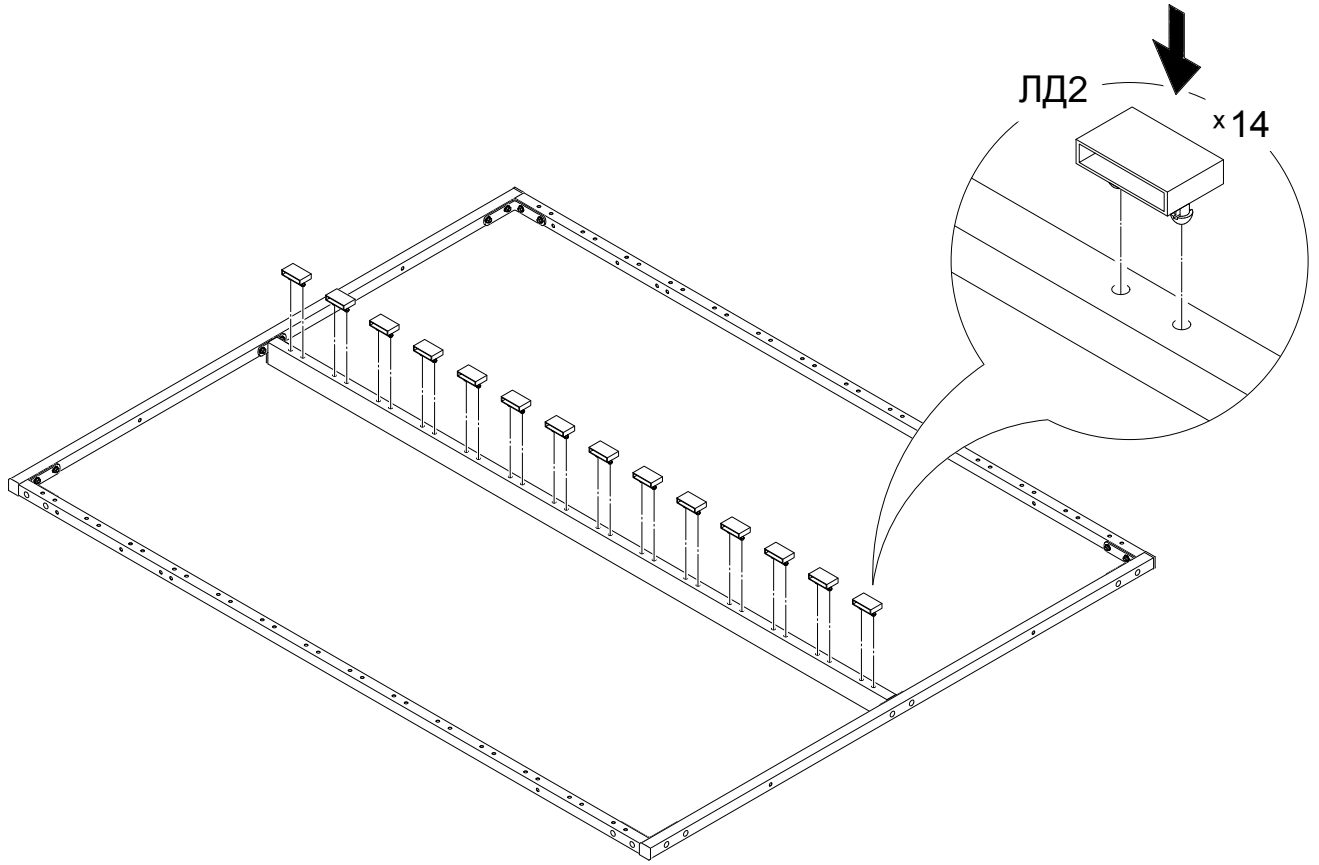


24




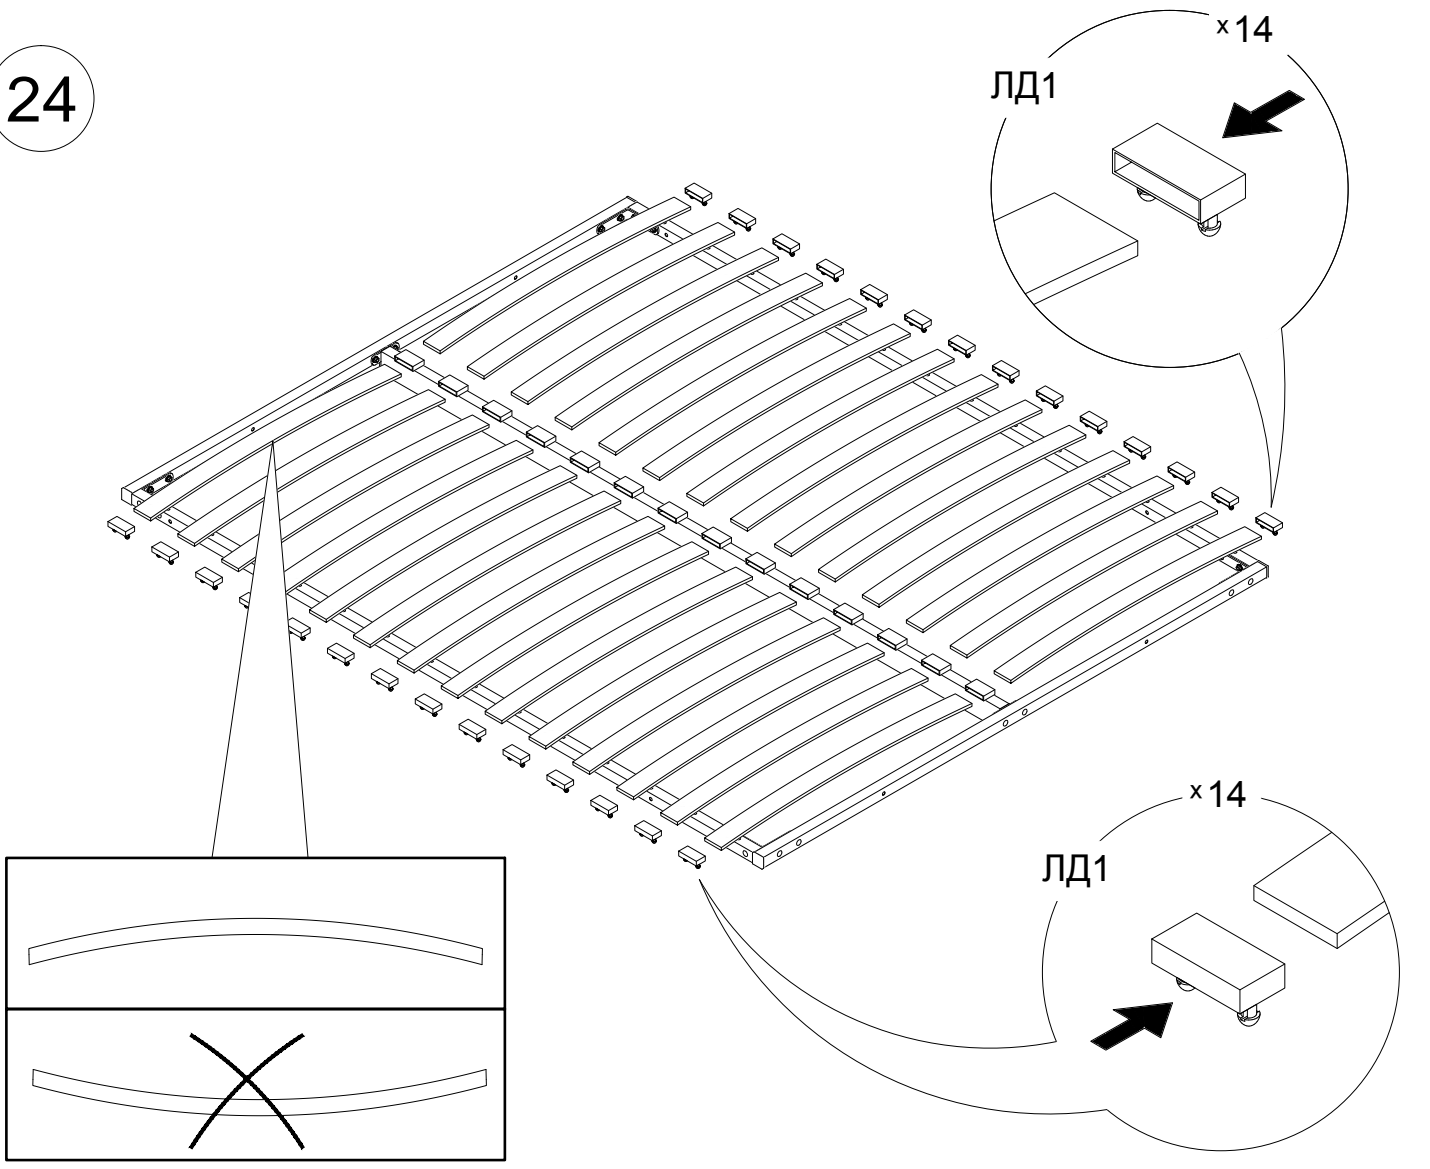




25

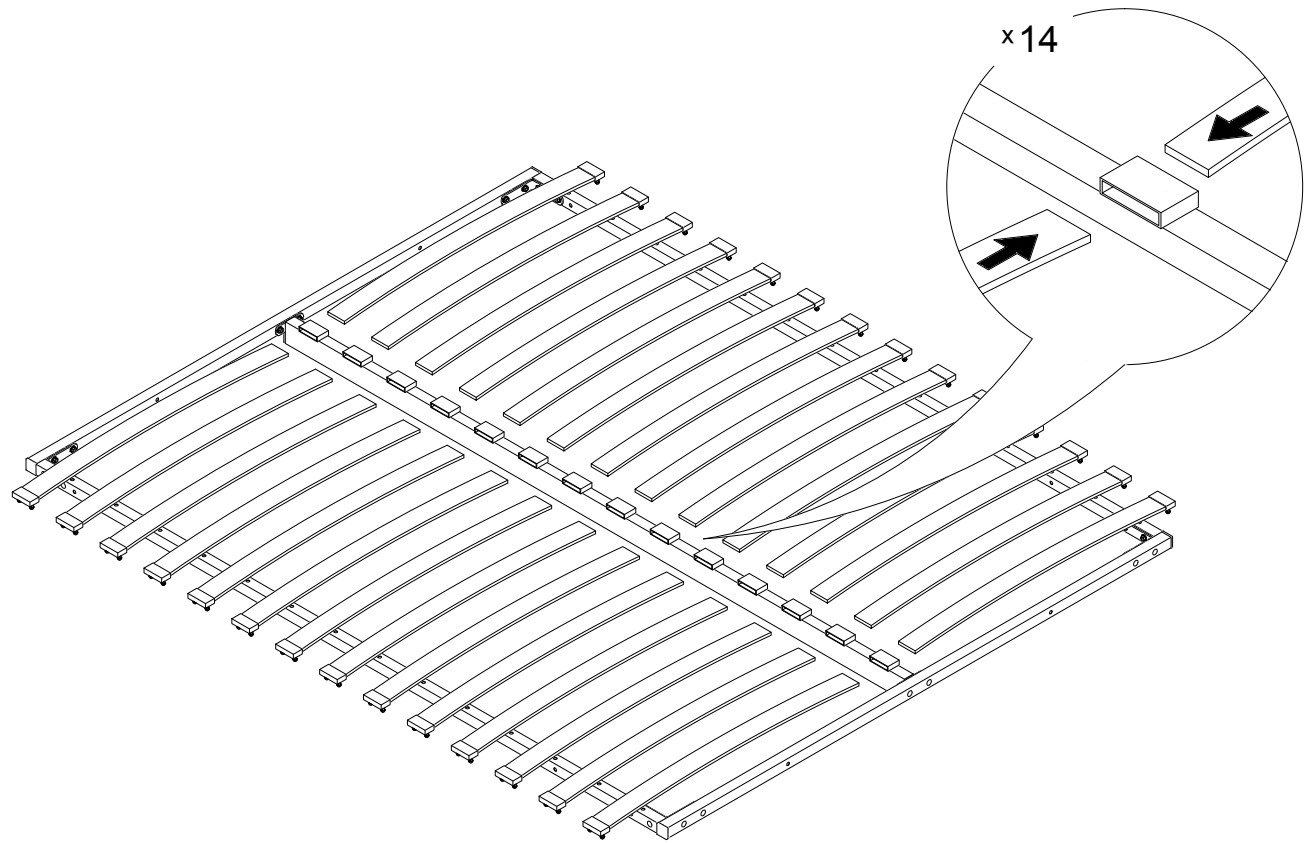

26

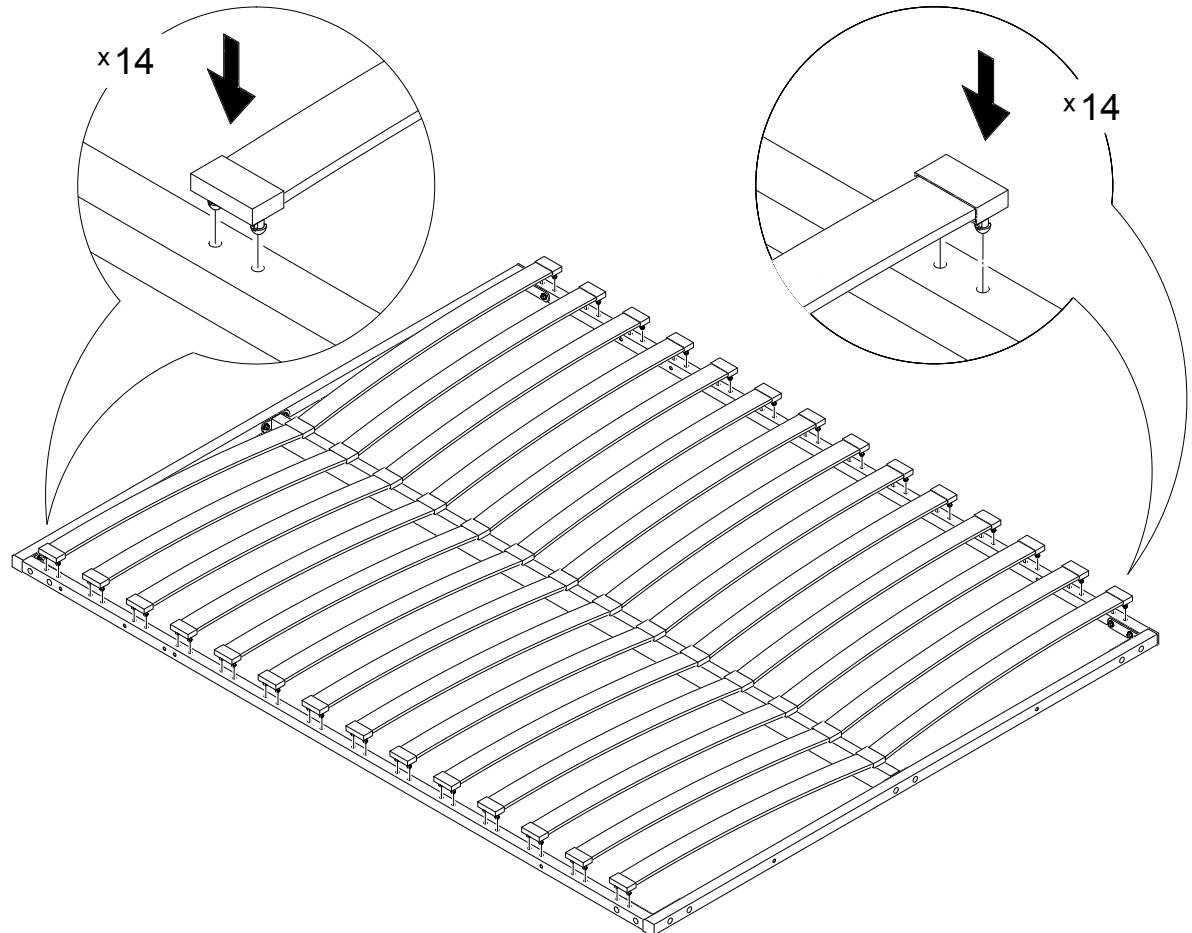


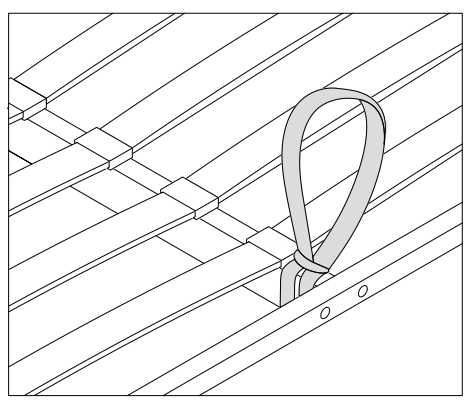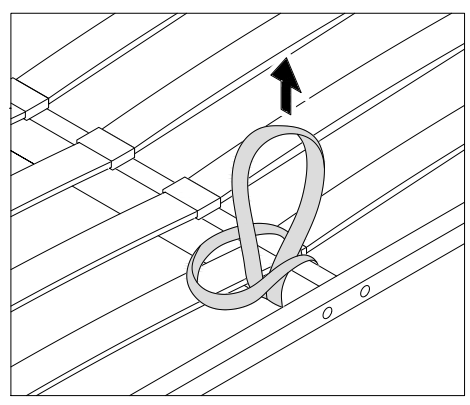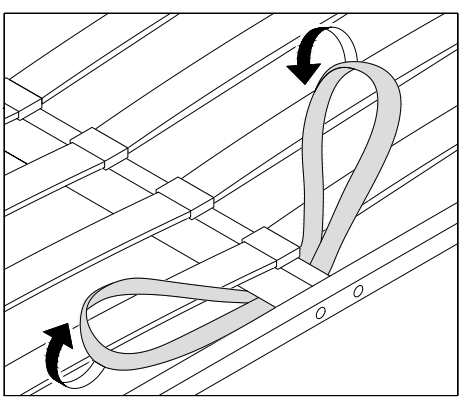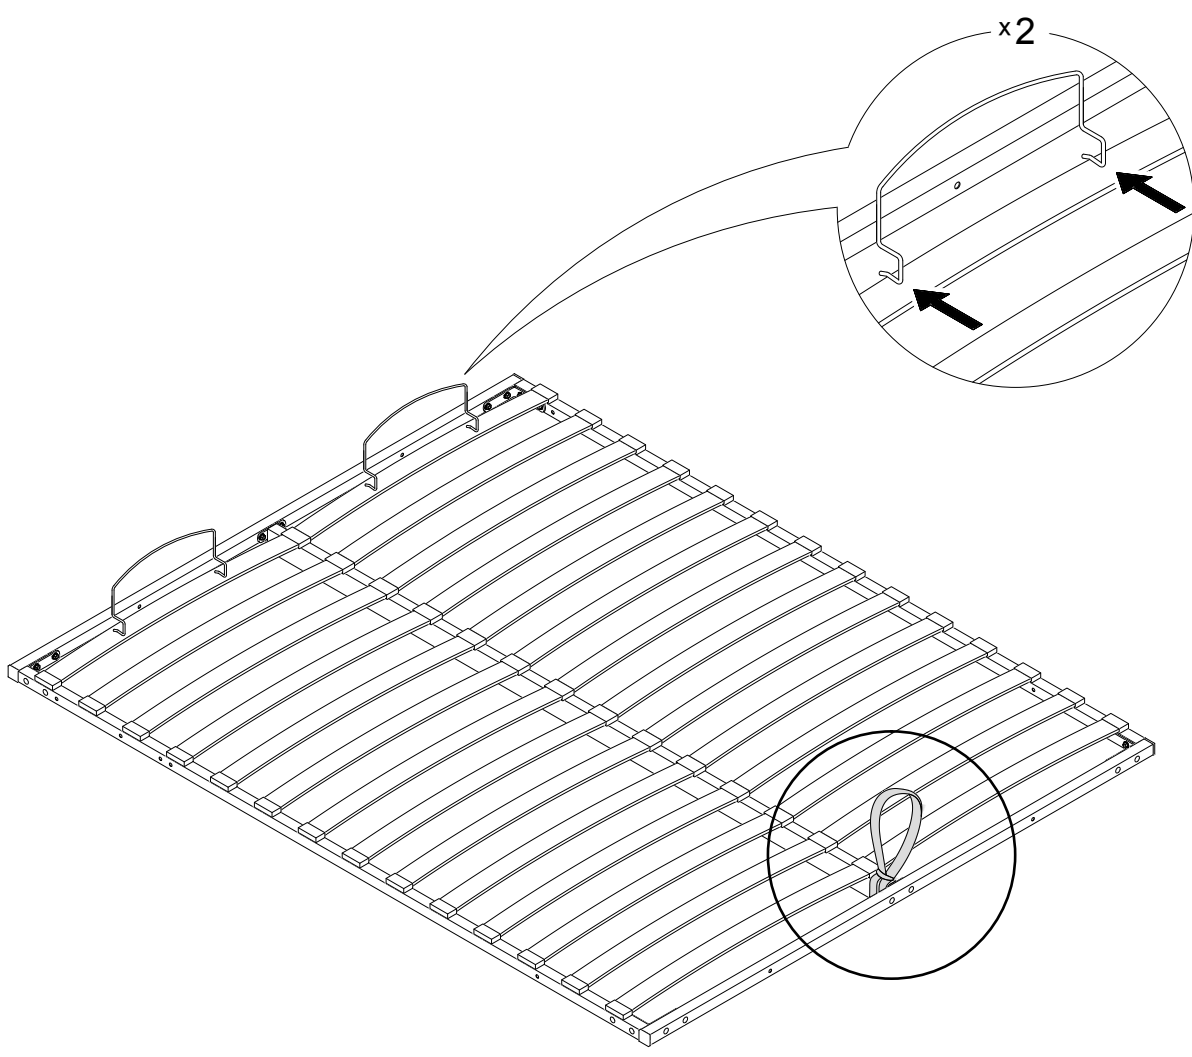


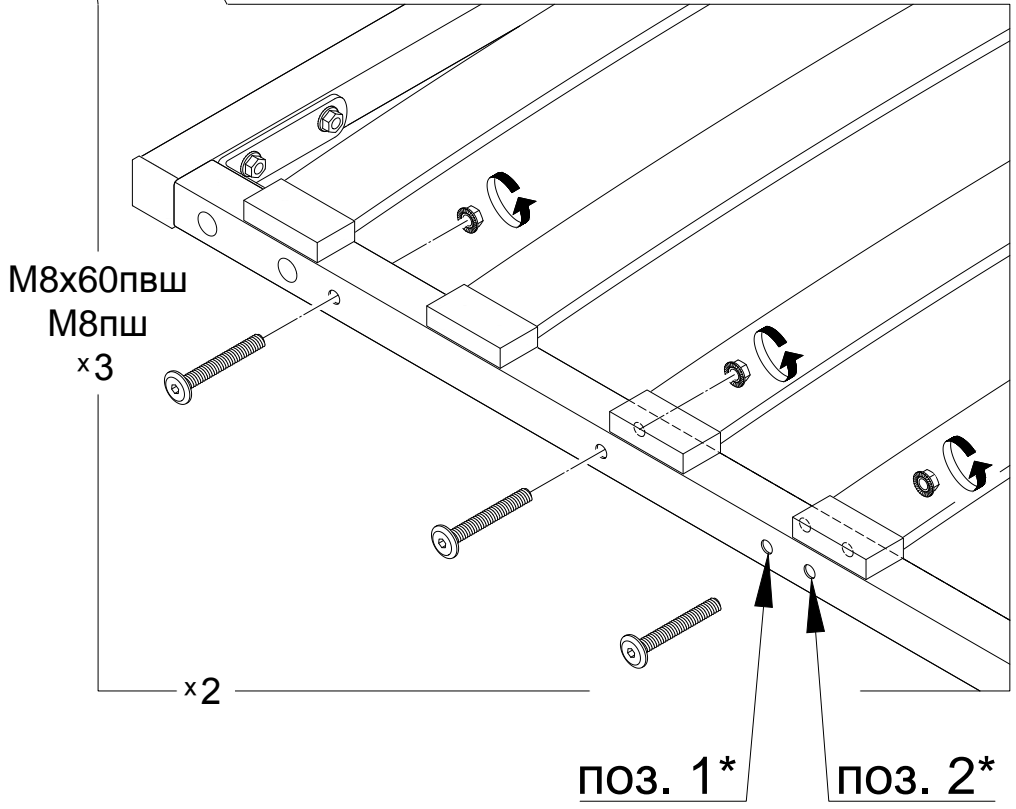
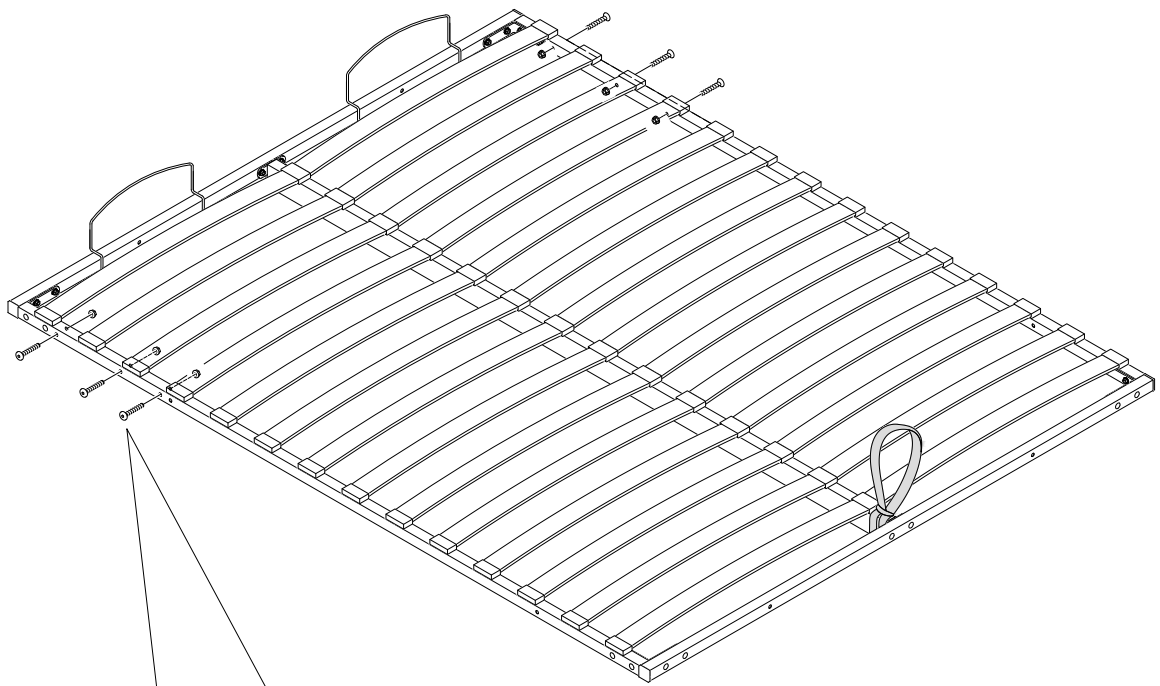





Матрас	Вес матраса, кг	№ поз.*
140x200	15-30	1
	30-47	2
160x200 180x200	12-30	1
	30-47	2

\* для оптимальной работы подъёмного механизма

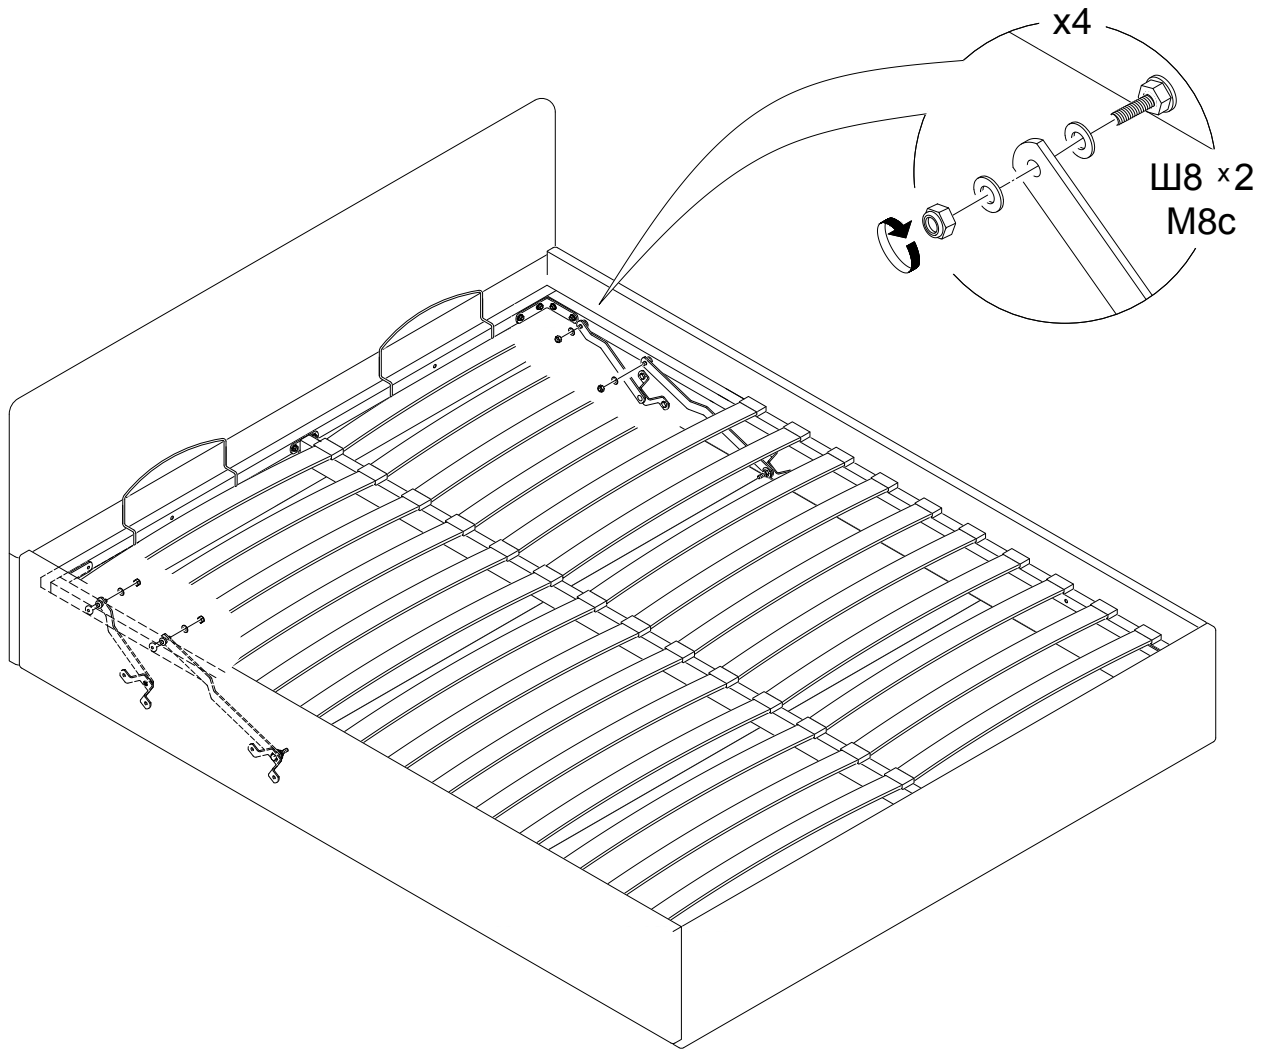

30

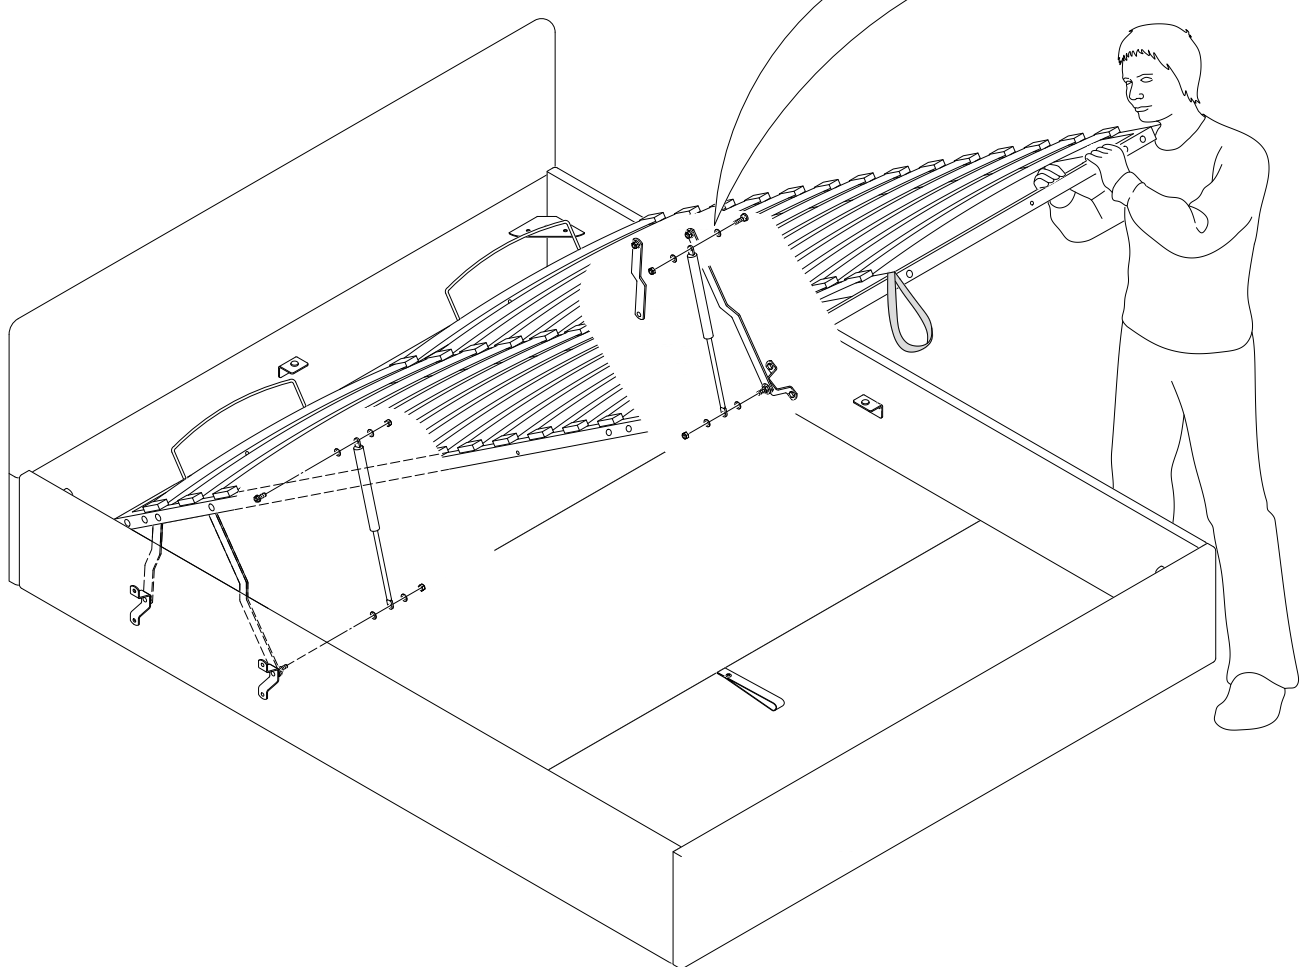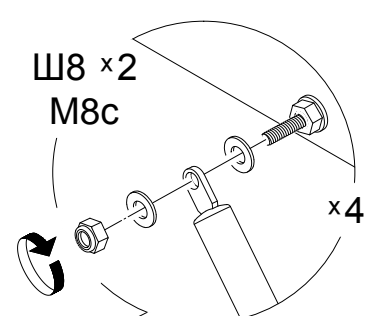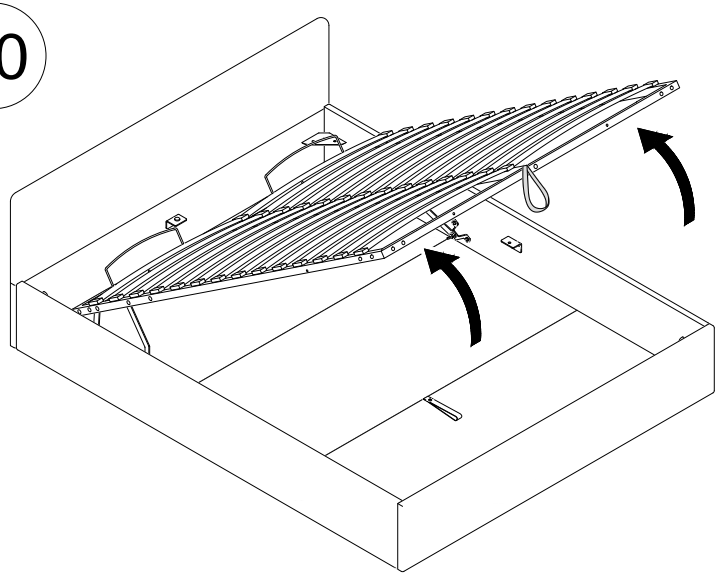

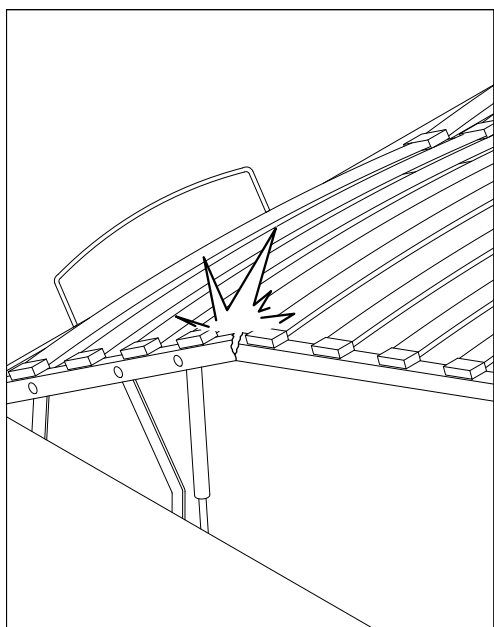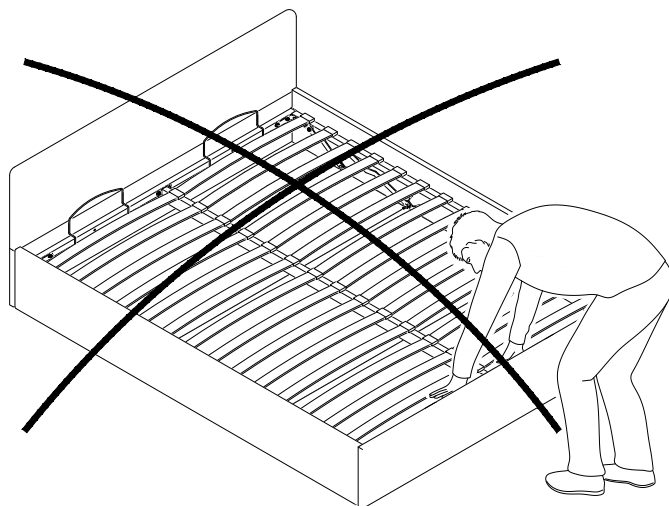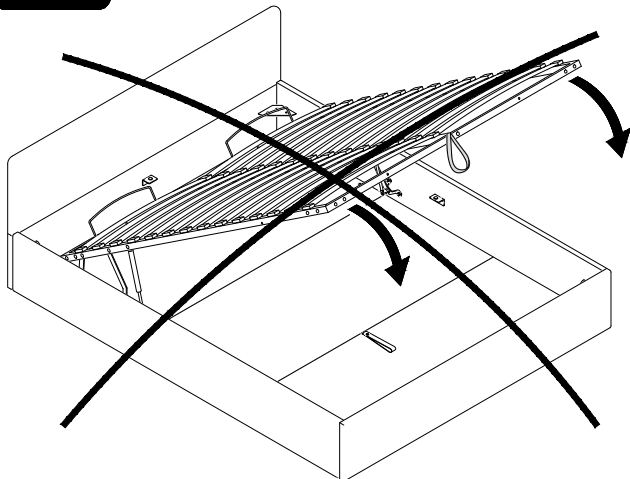

31

