

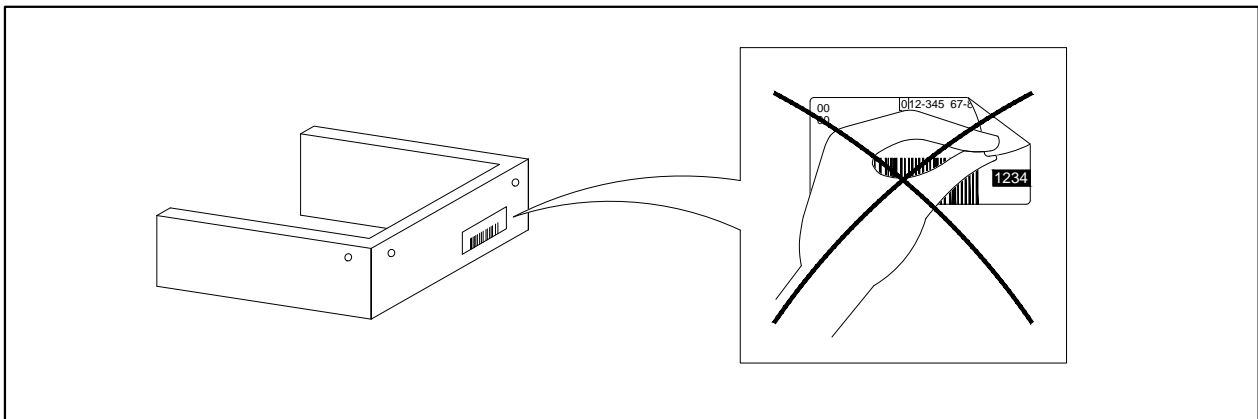
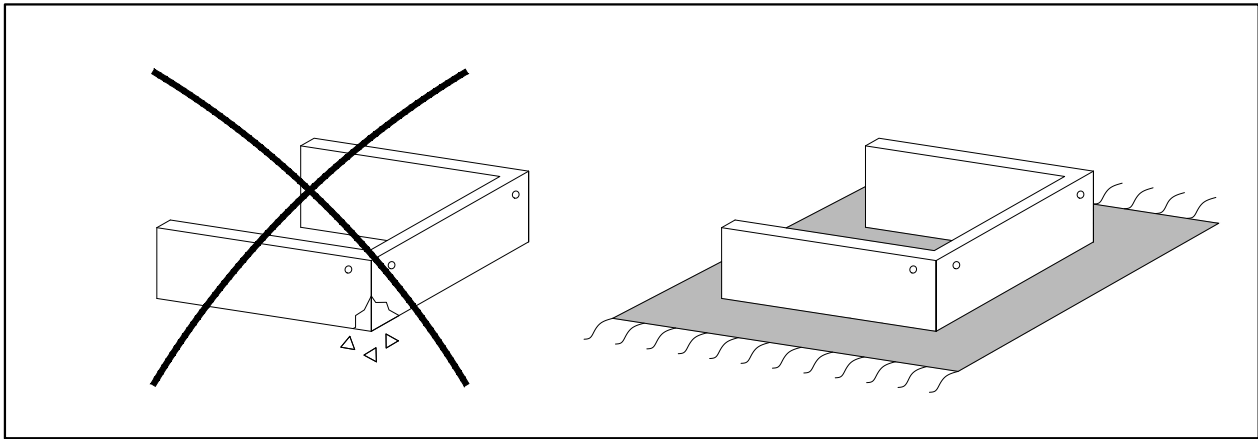
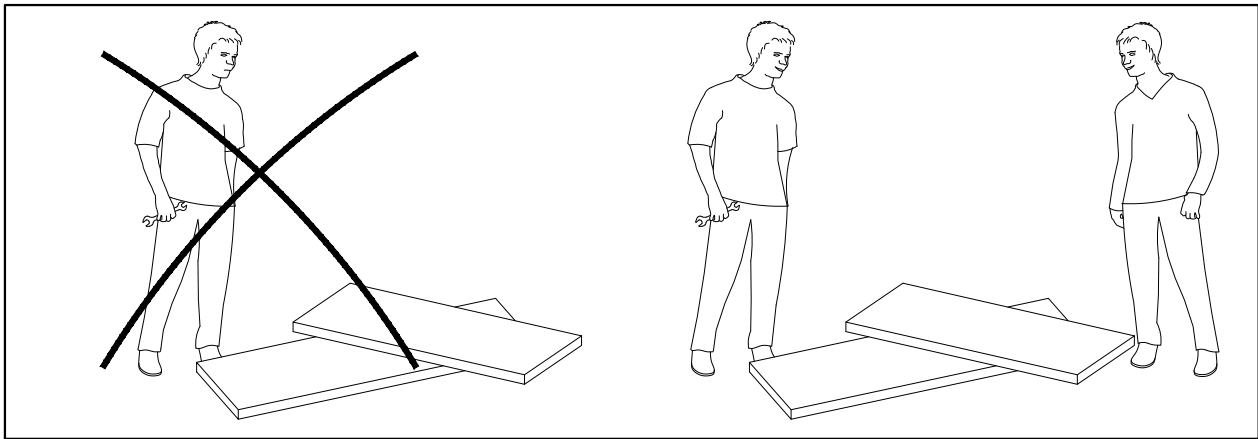


# Инструкция по сборке

## Кровать без подъёмного механизма


Дизайн 1220, 1221, 1222, 1223, 1224, 1226, 1227

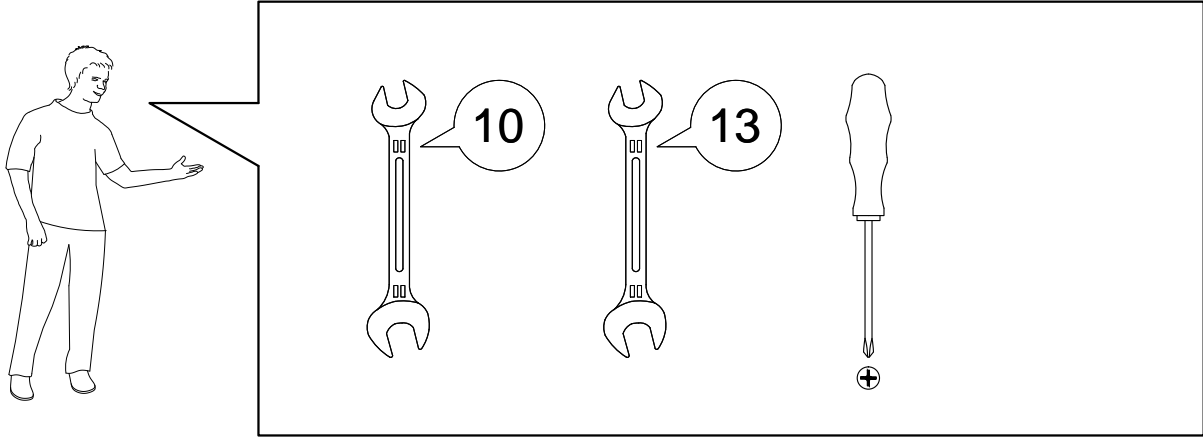

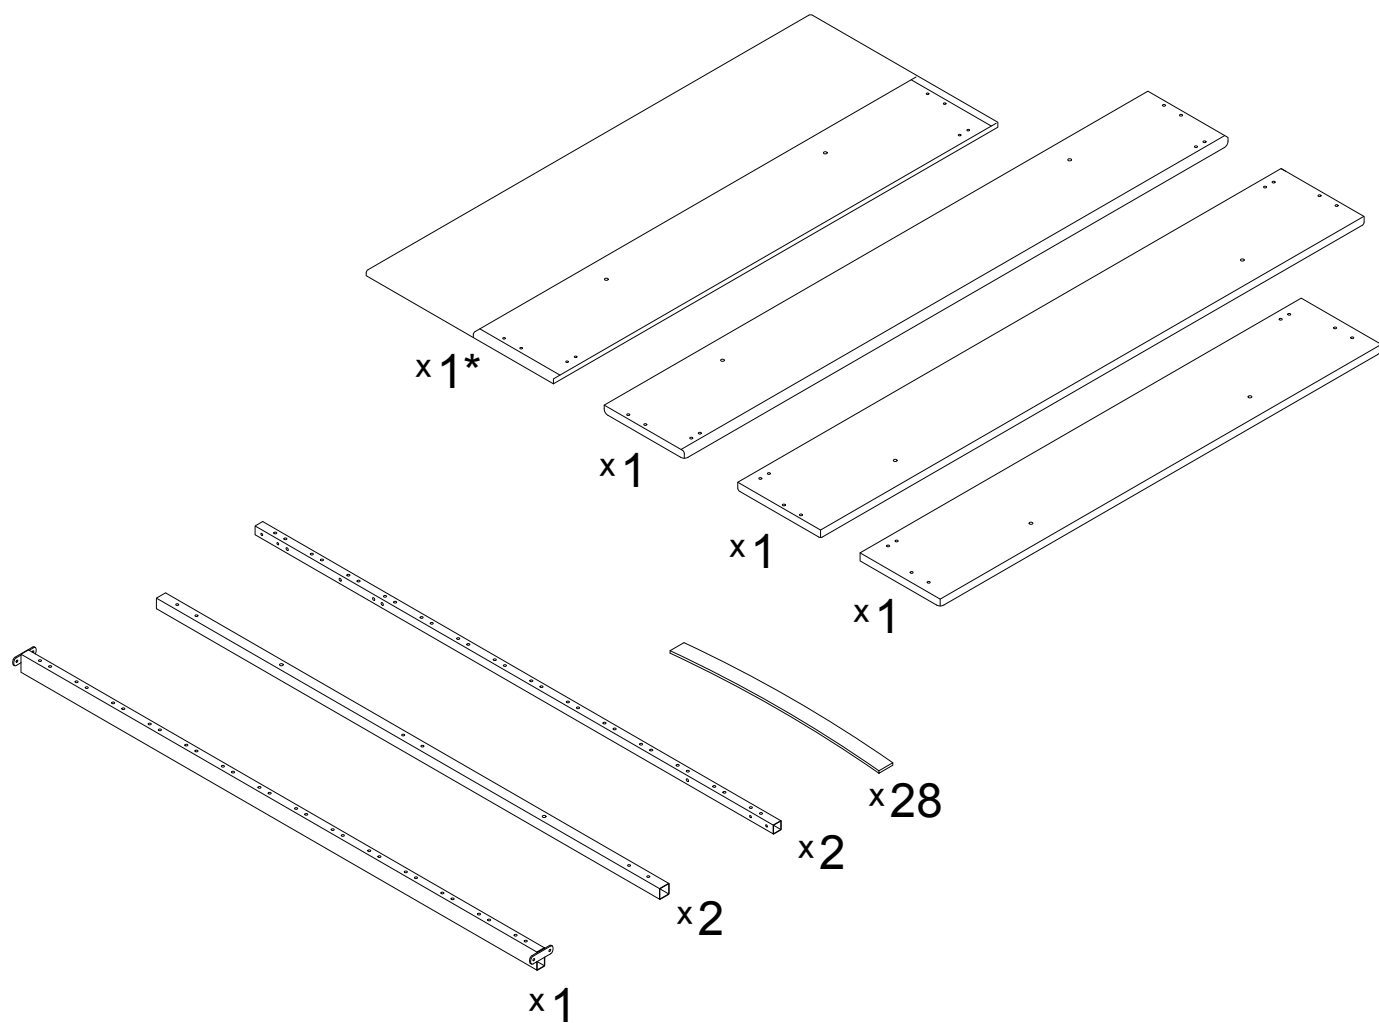


\*Дизайн спинки различается в зависимости от модификации кровати.


M 1:1

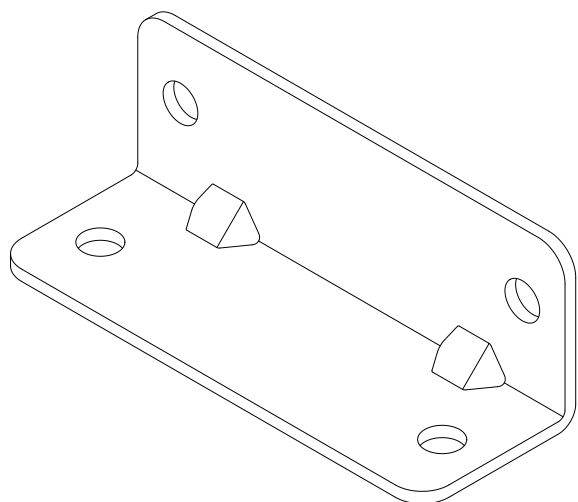

x4

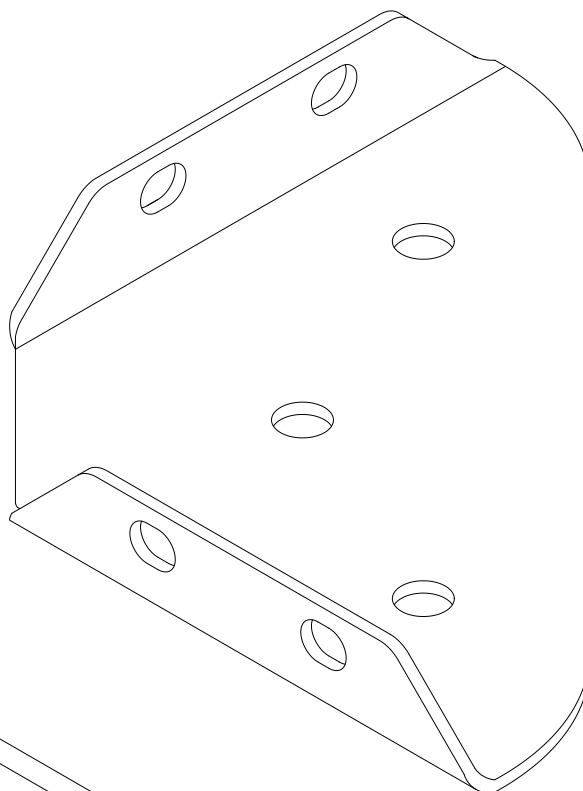


x4

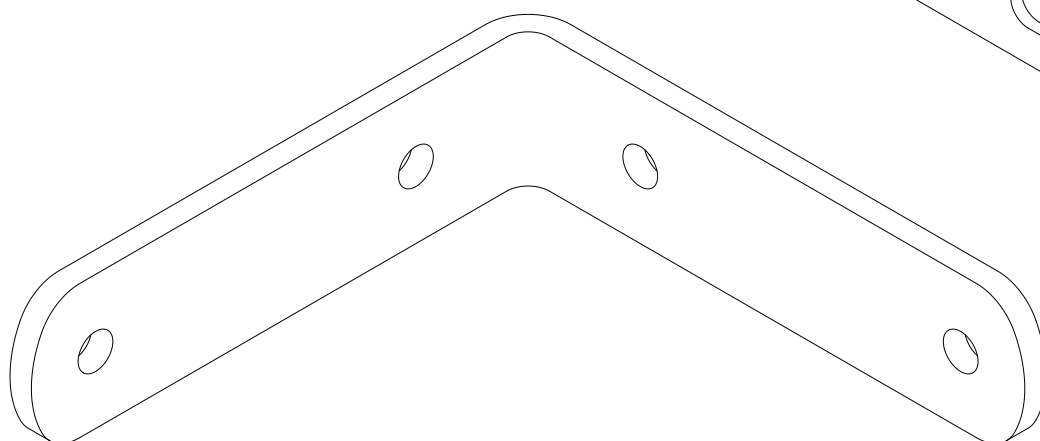


x4

ЛД1

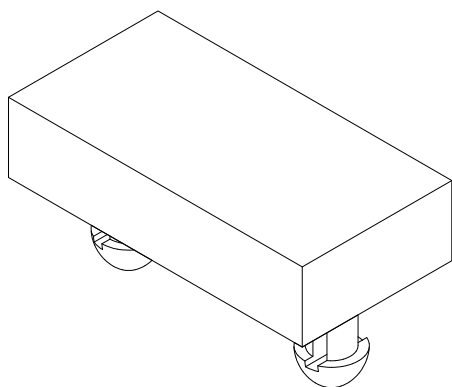















x28

ЛД2

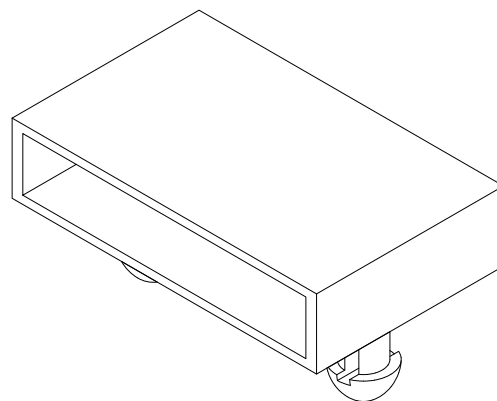


x14





# M 1:1

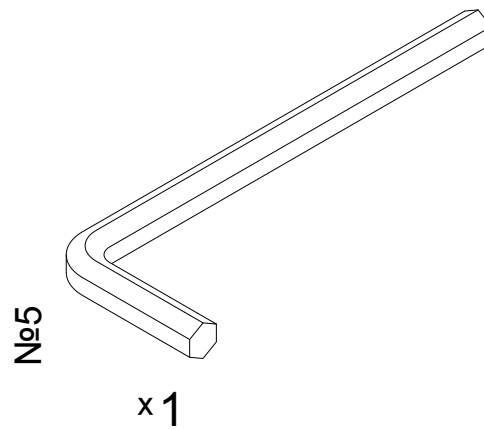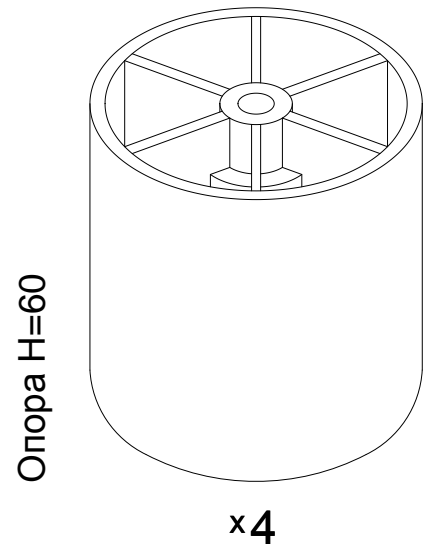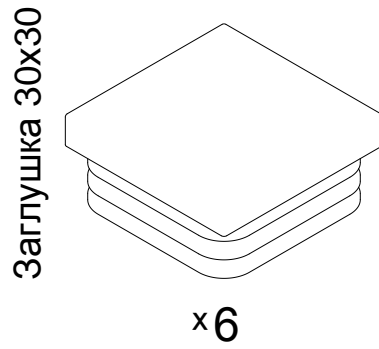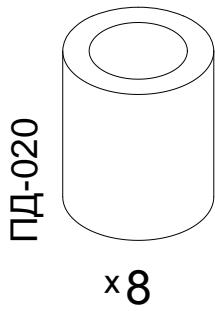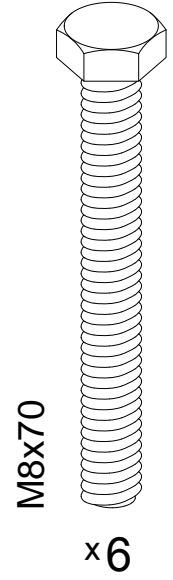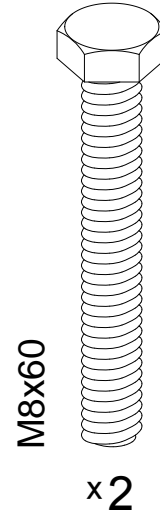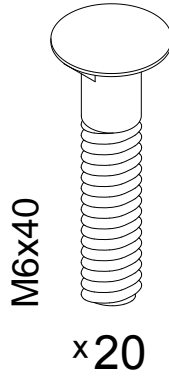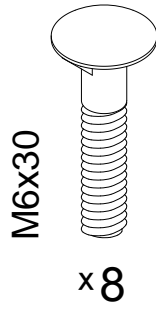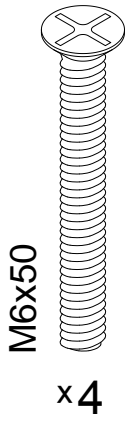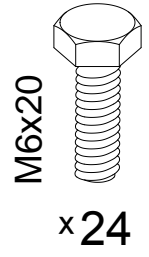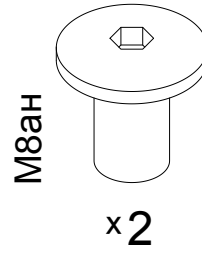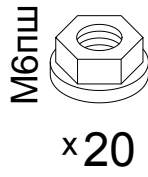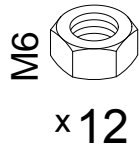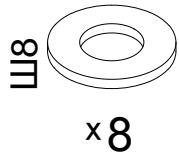


1

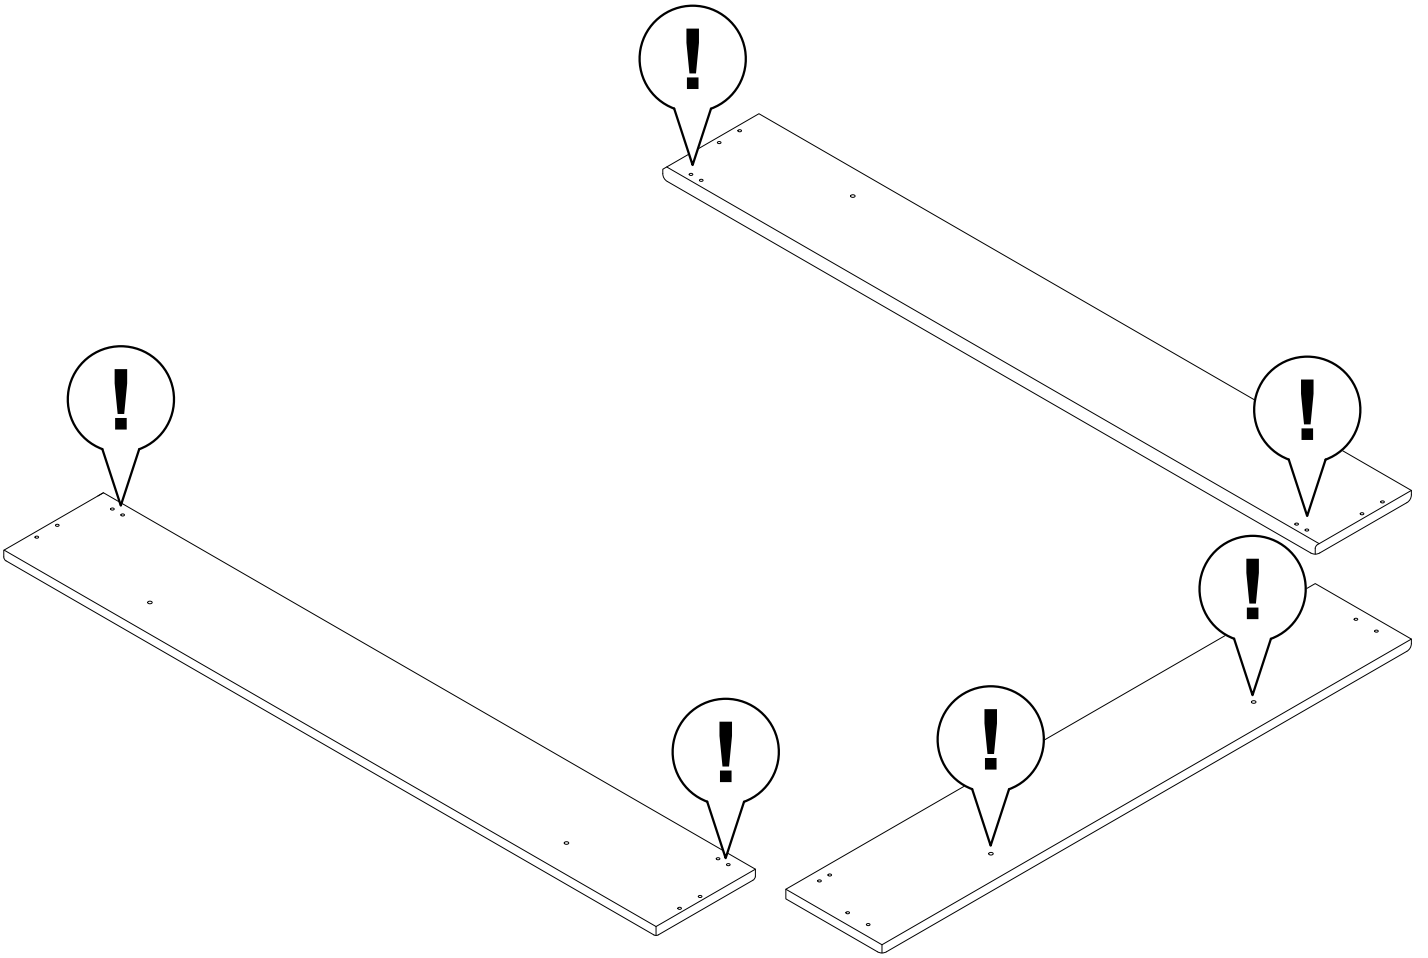

2

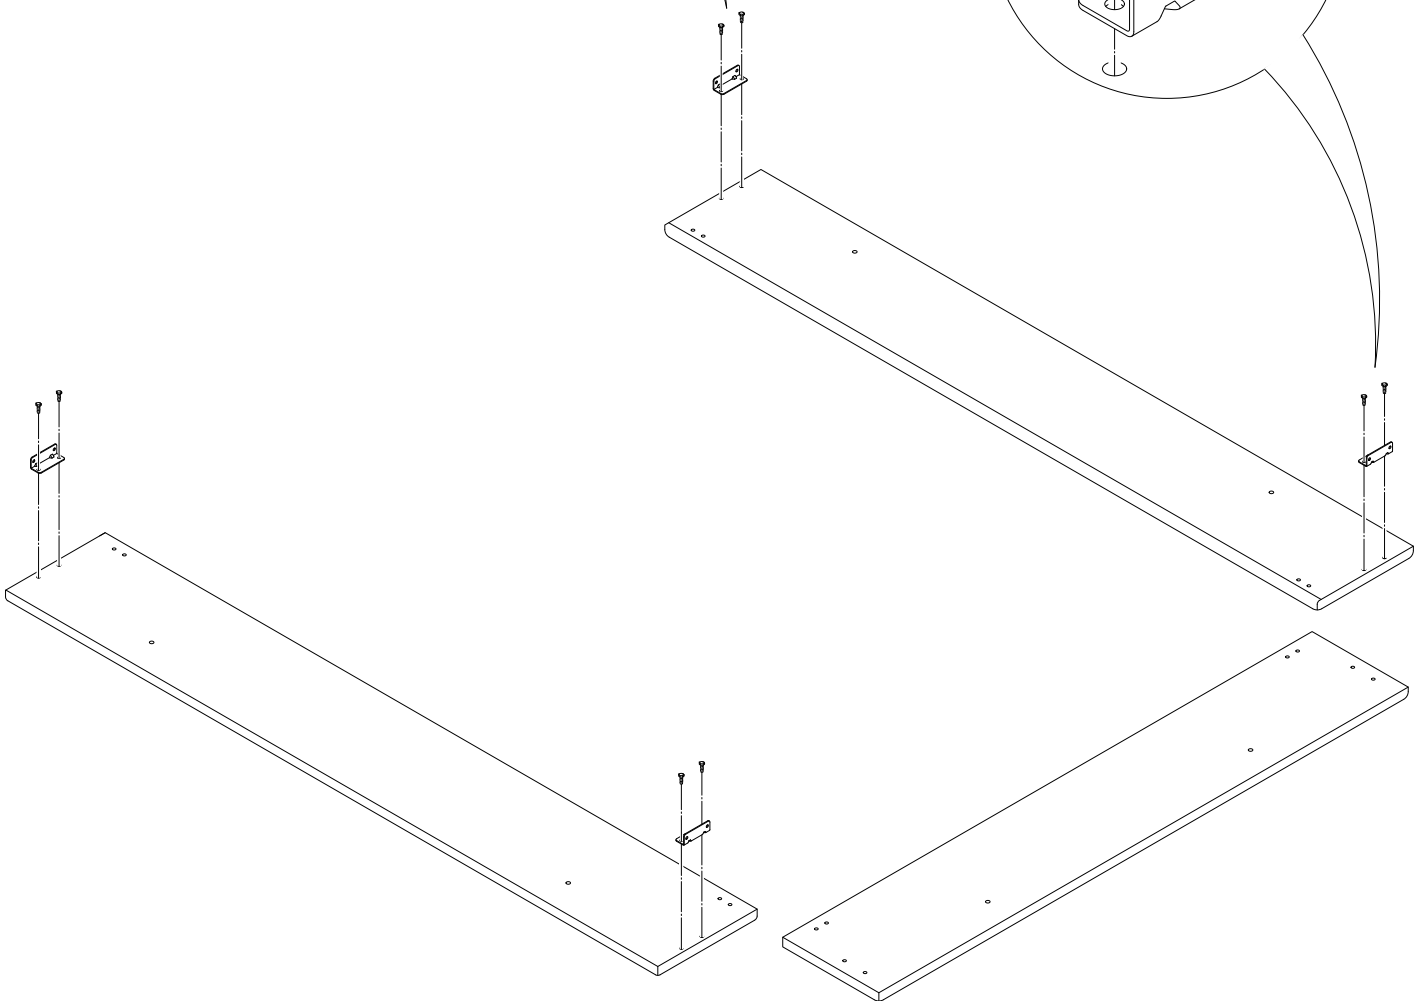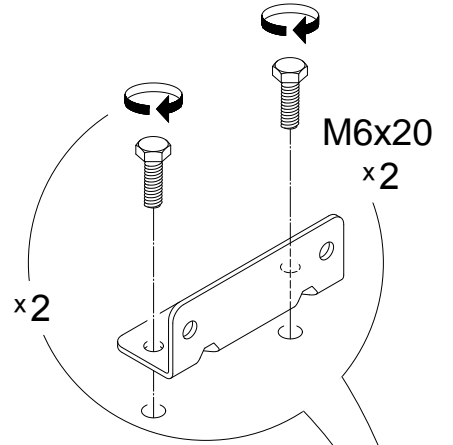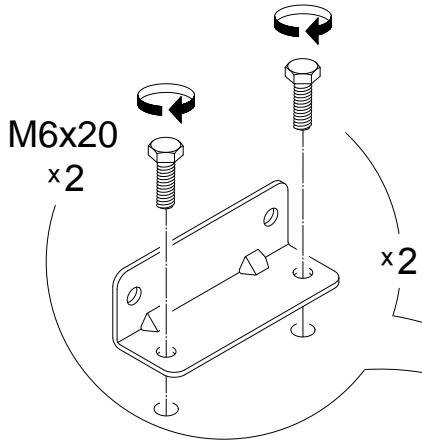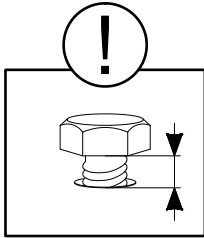


3

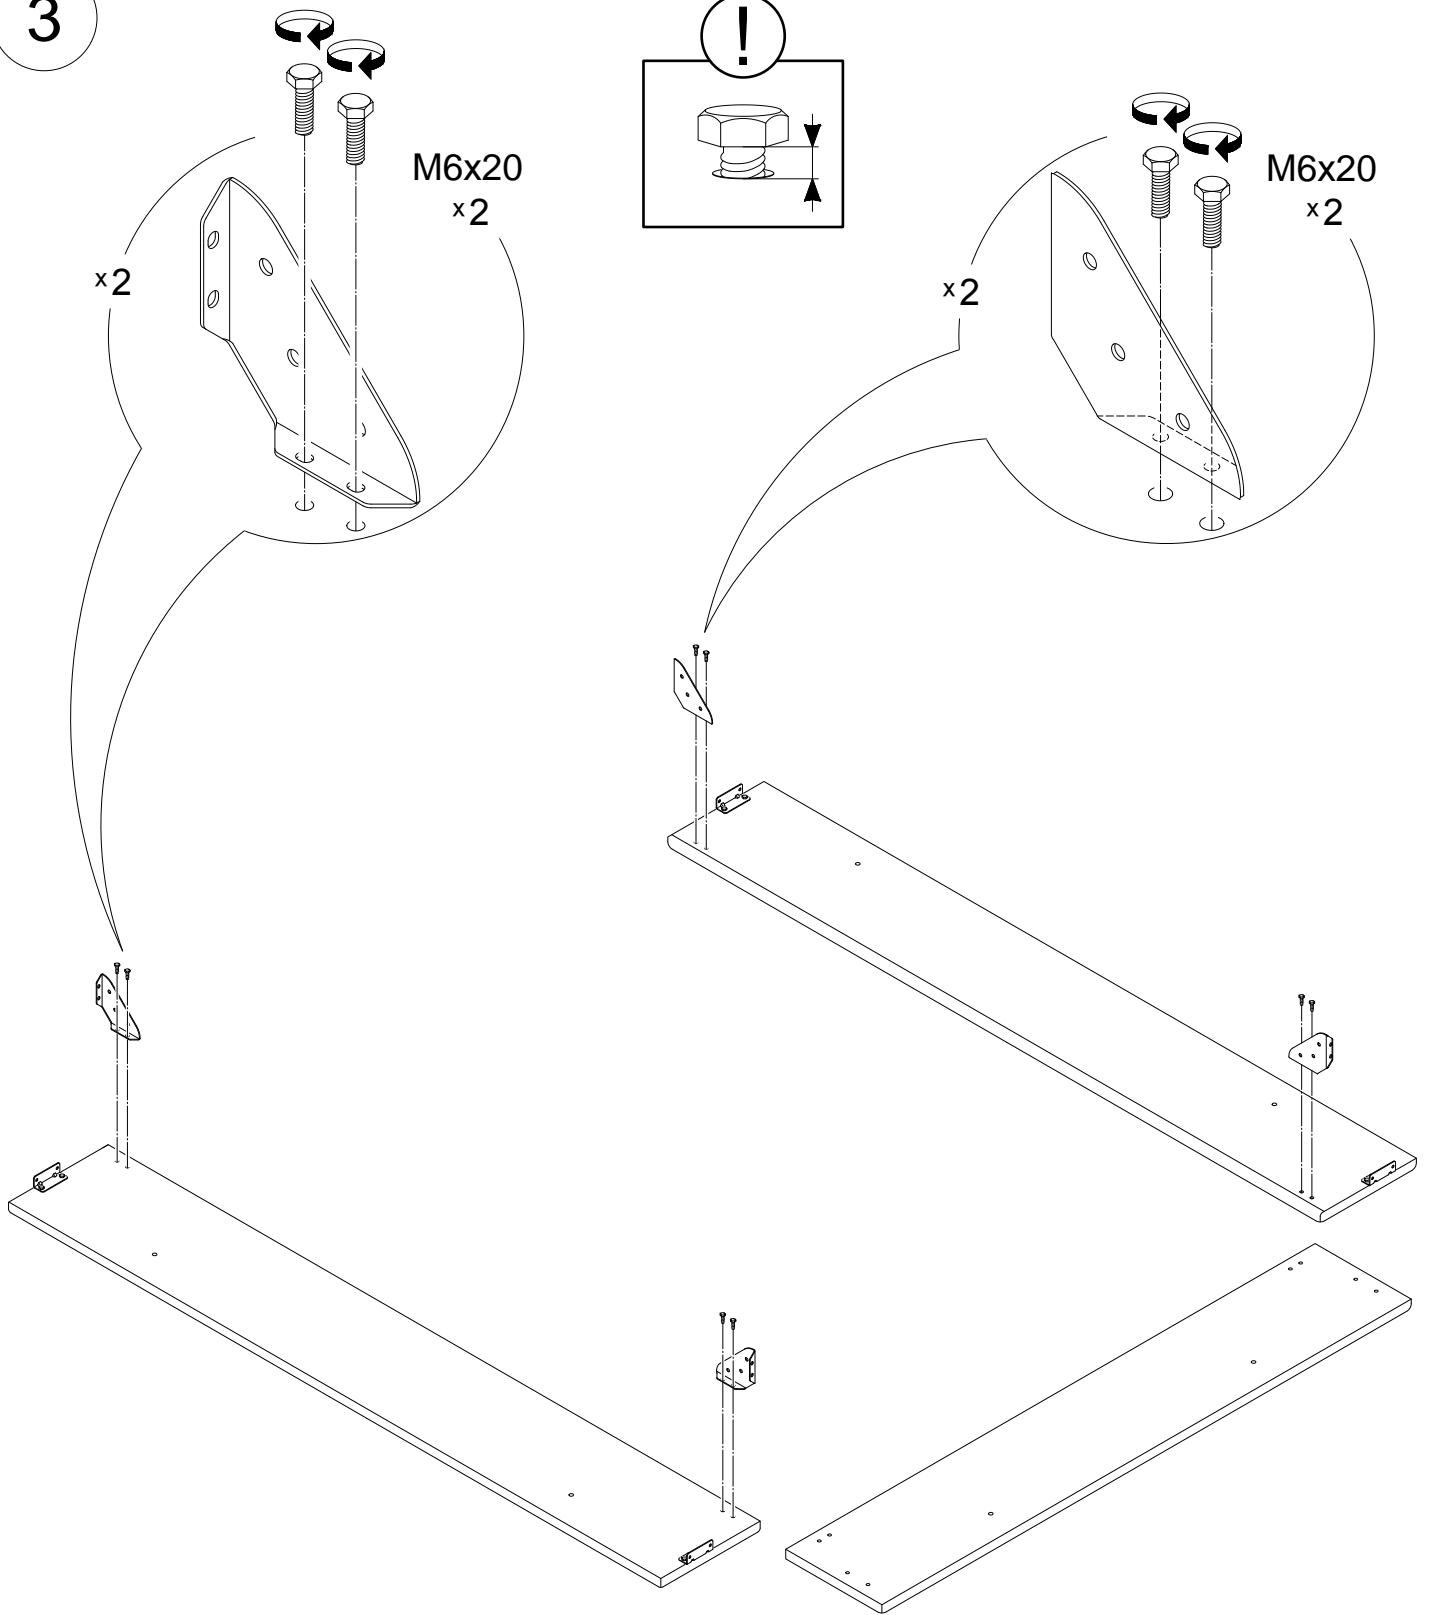






4

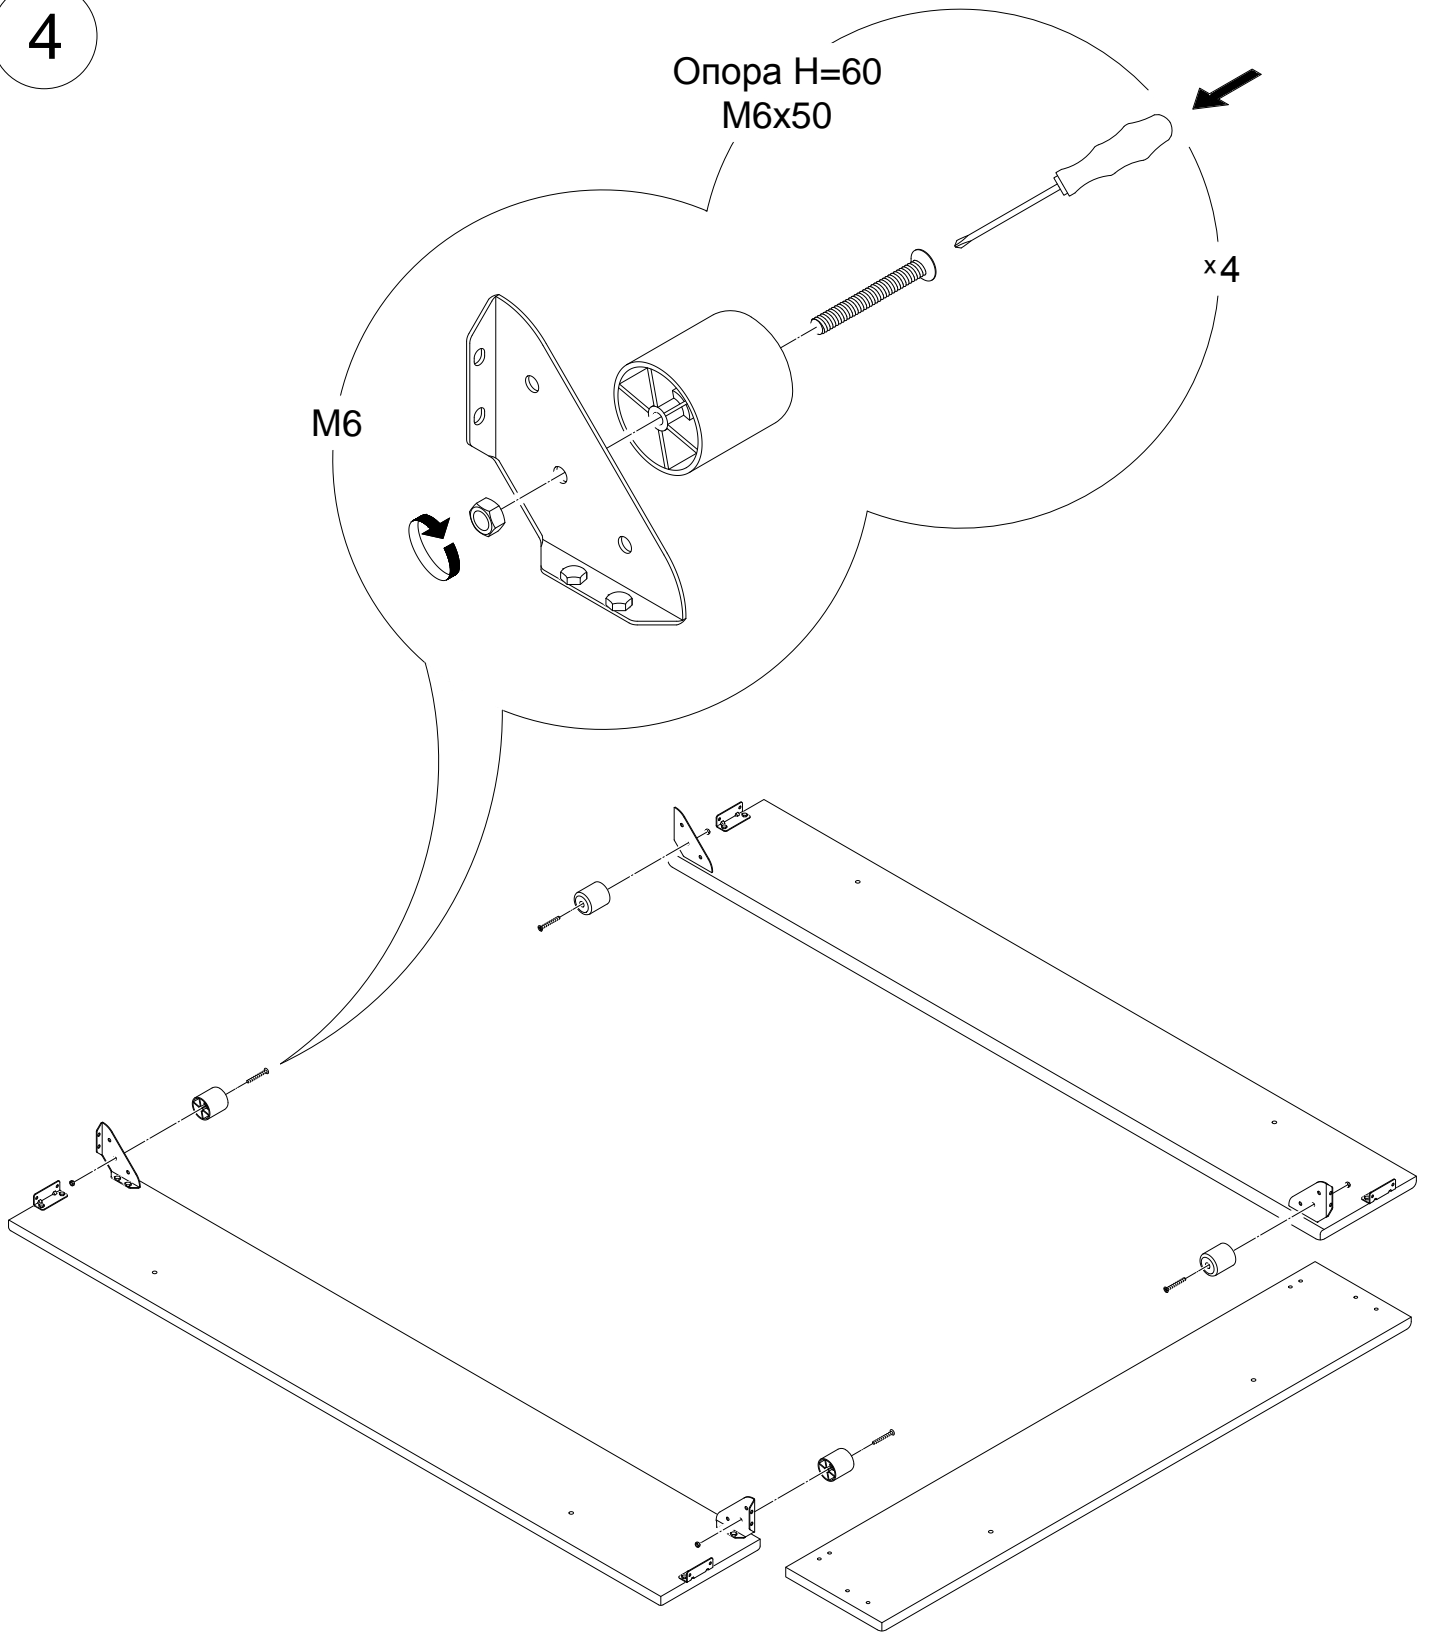



5

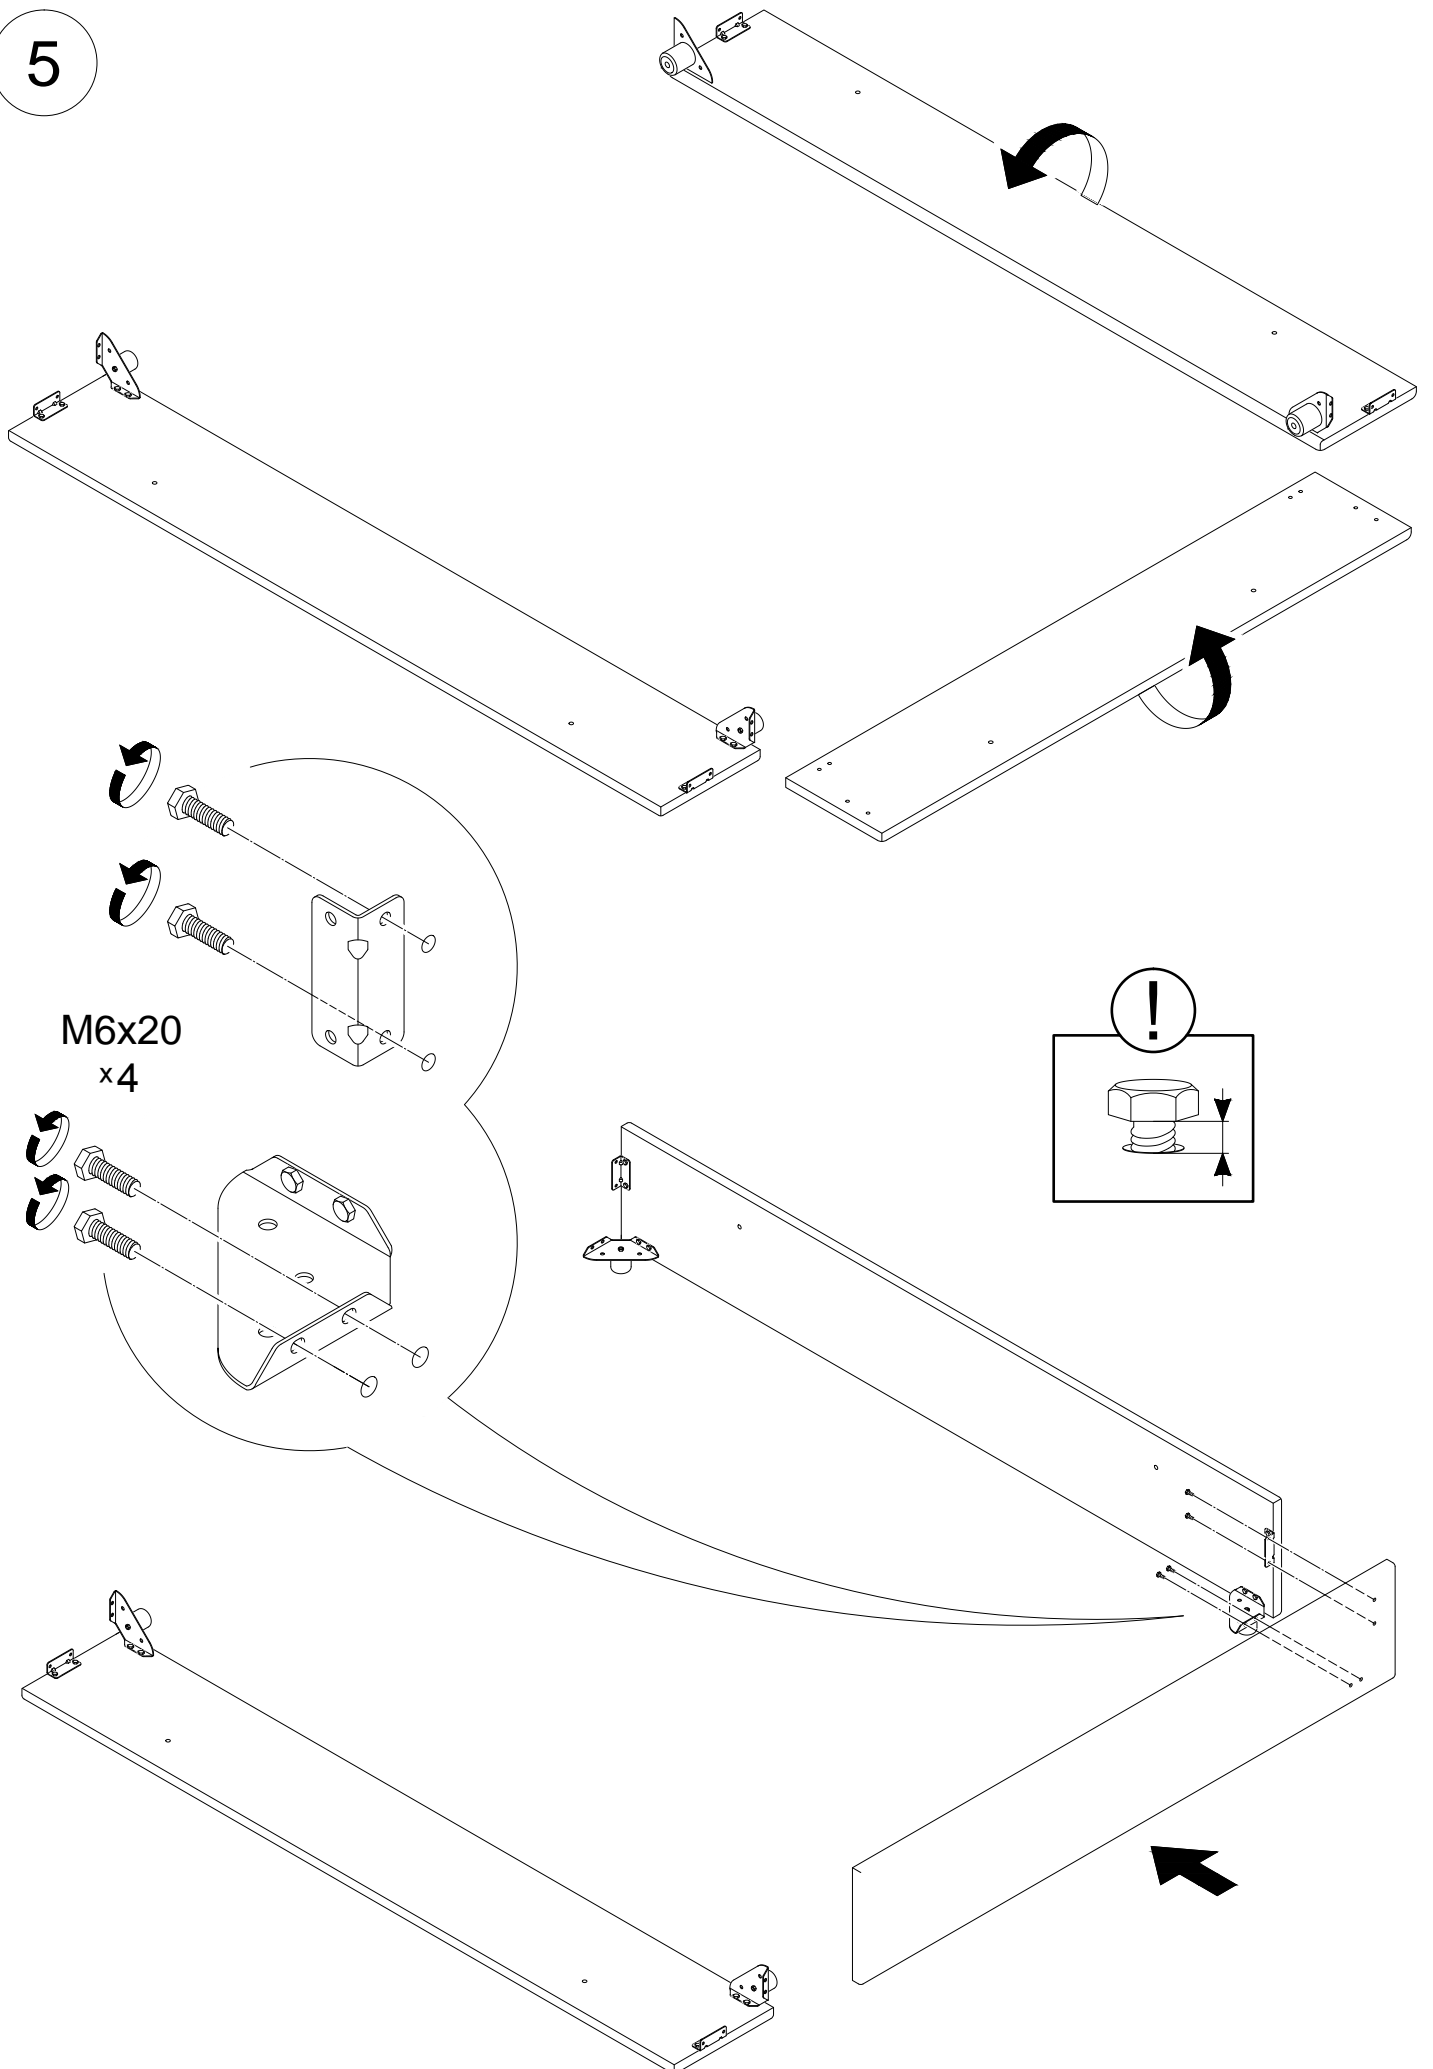



6

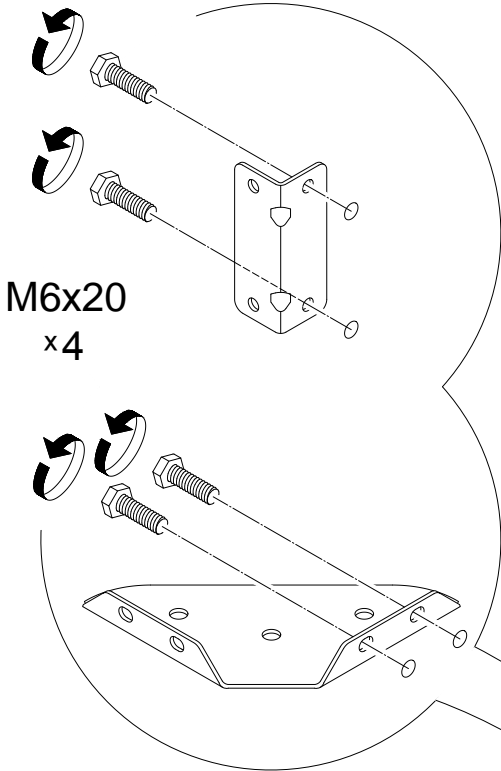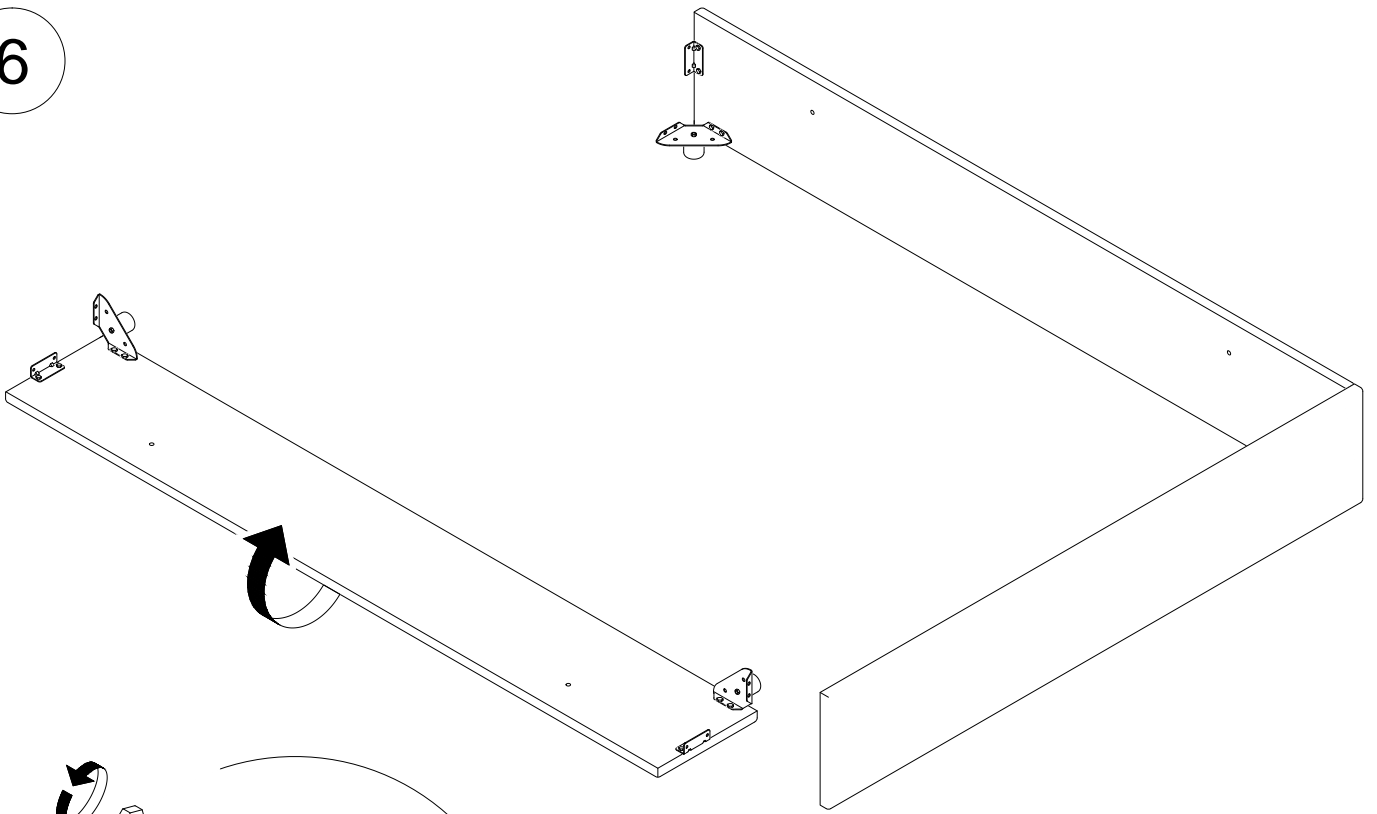



M6x20  
x4

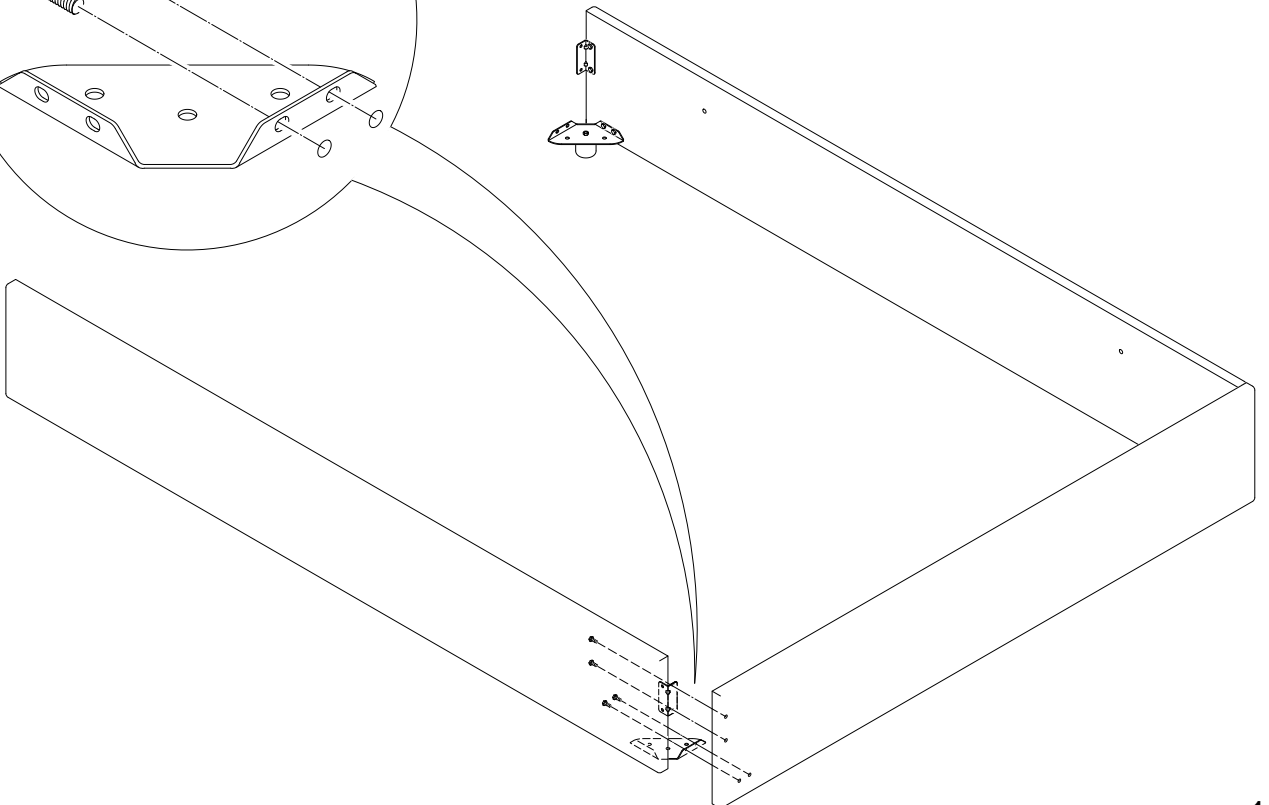
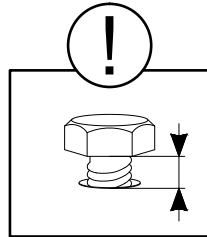


7

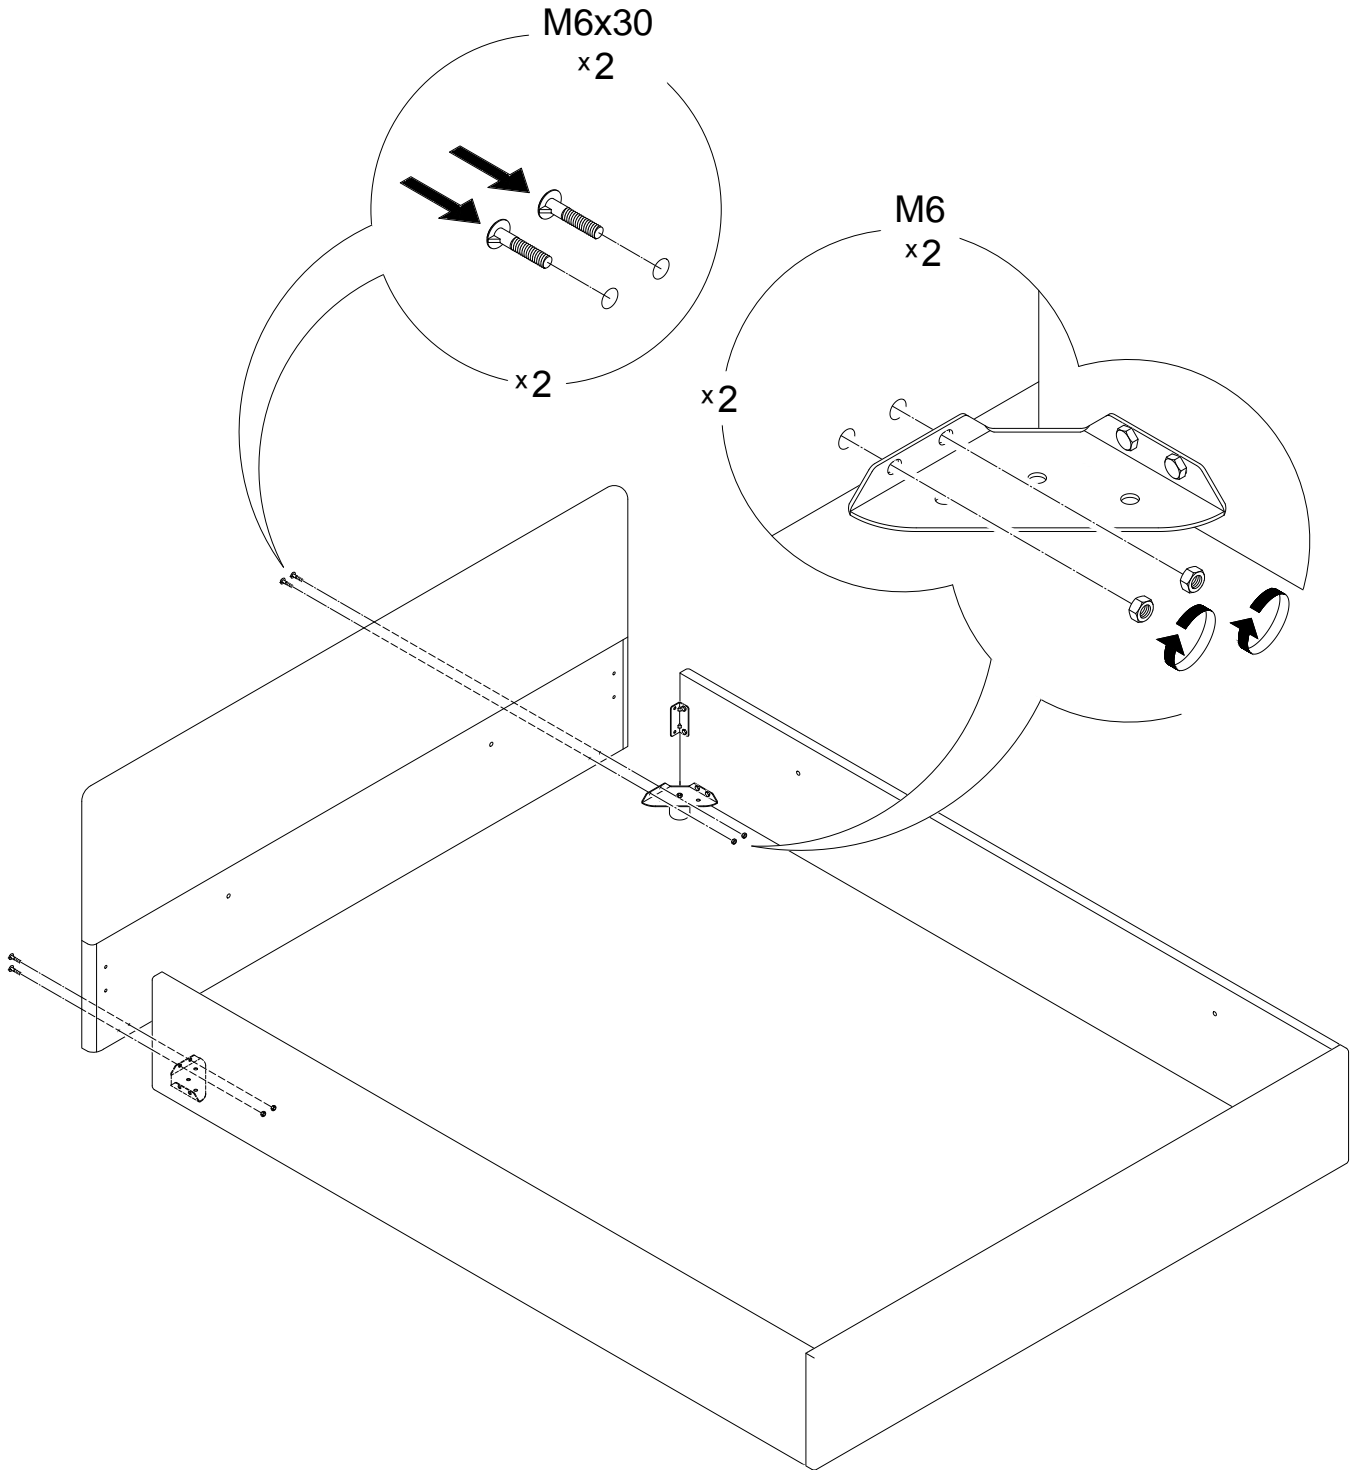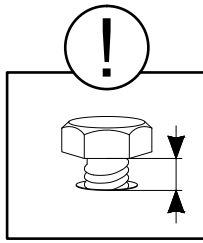




8

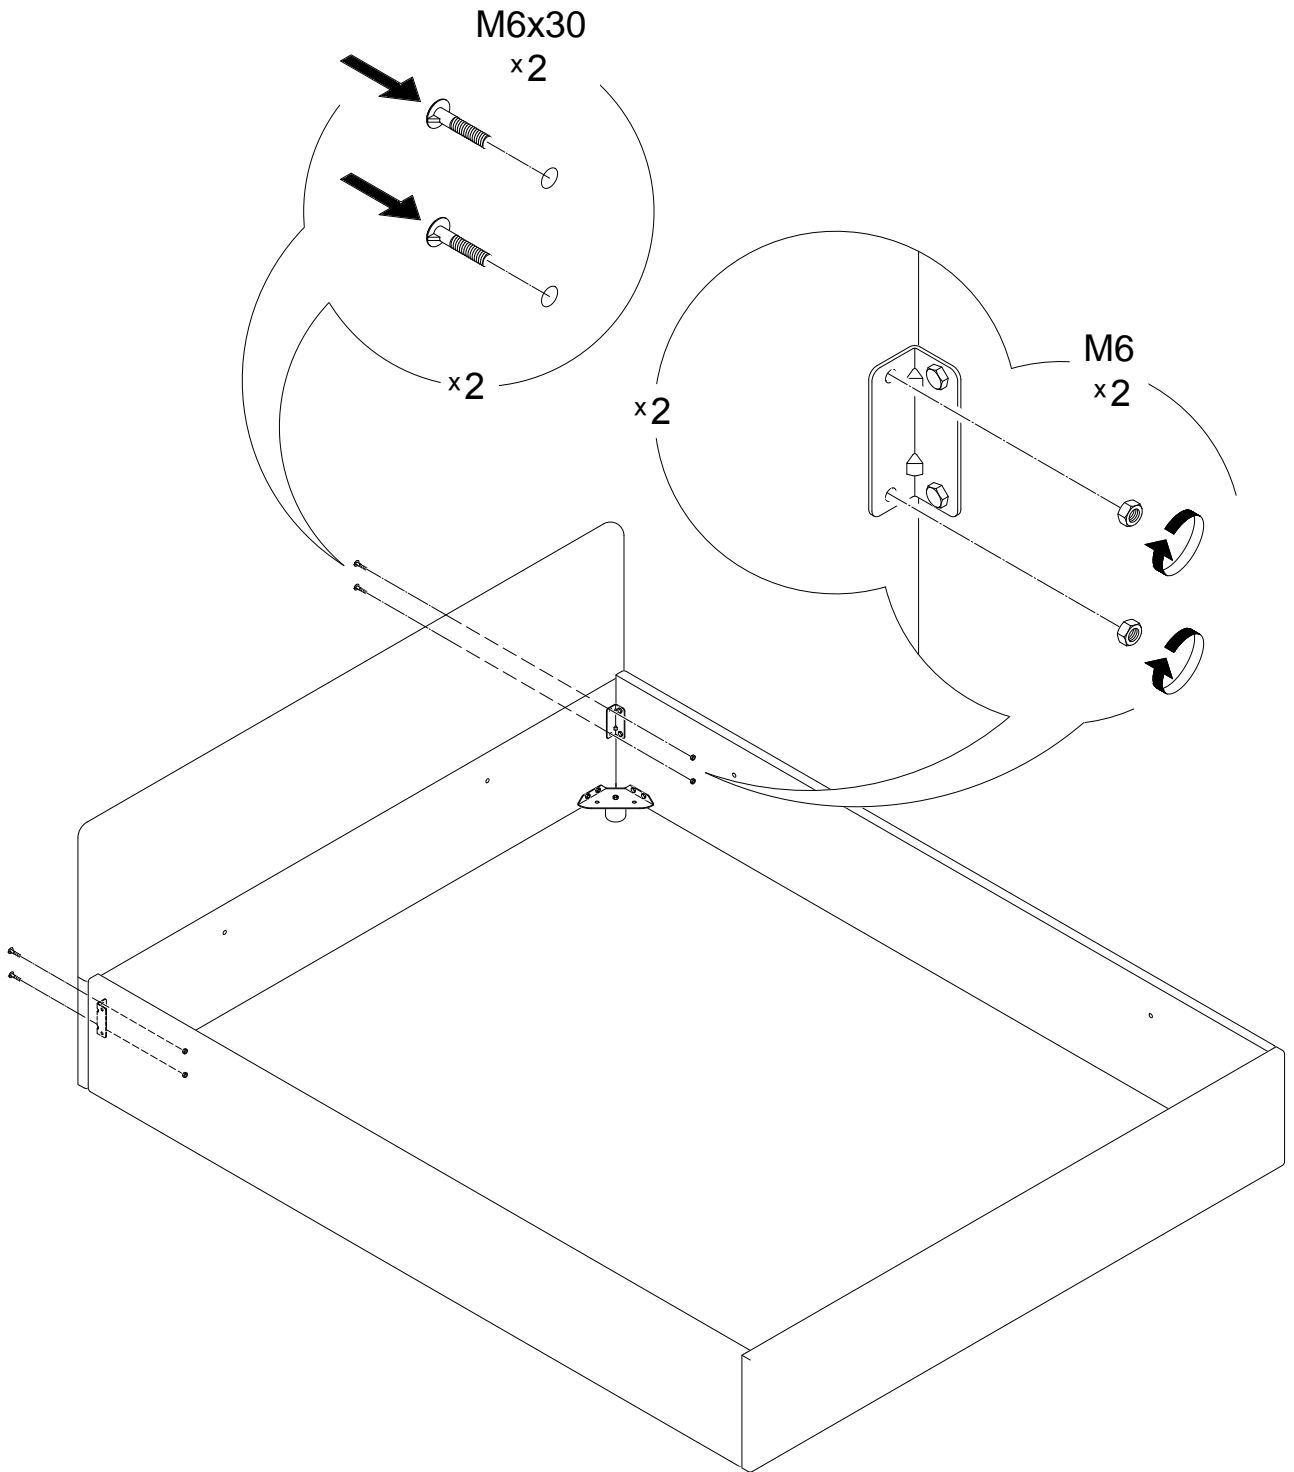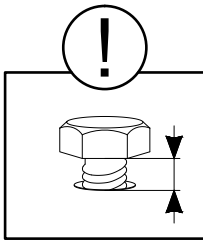

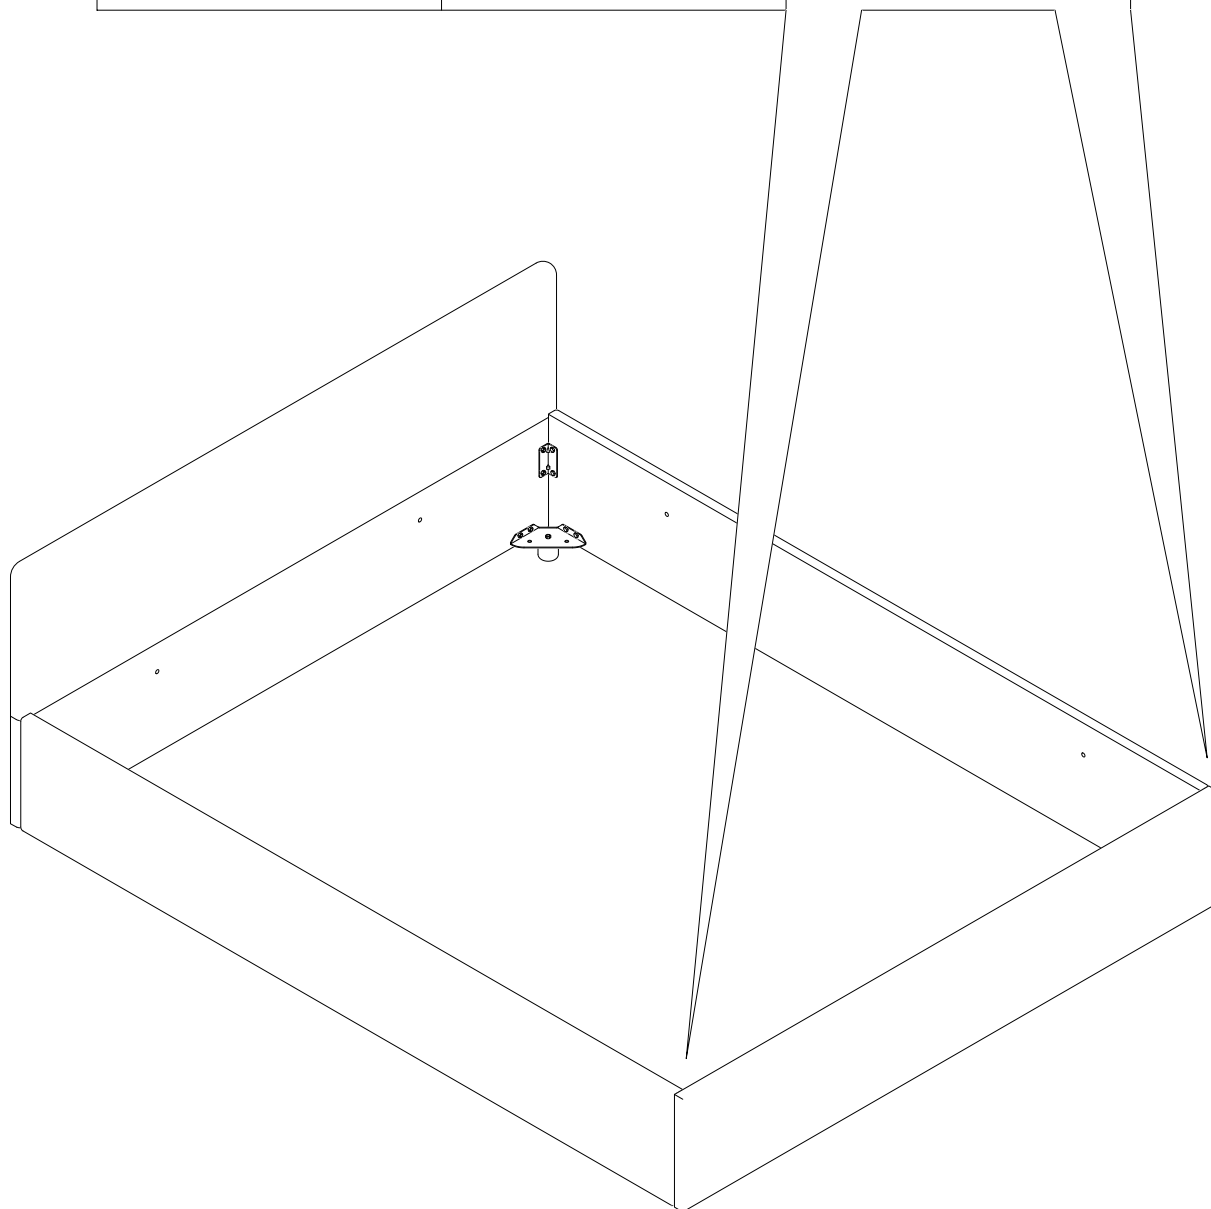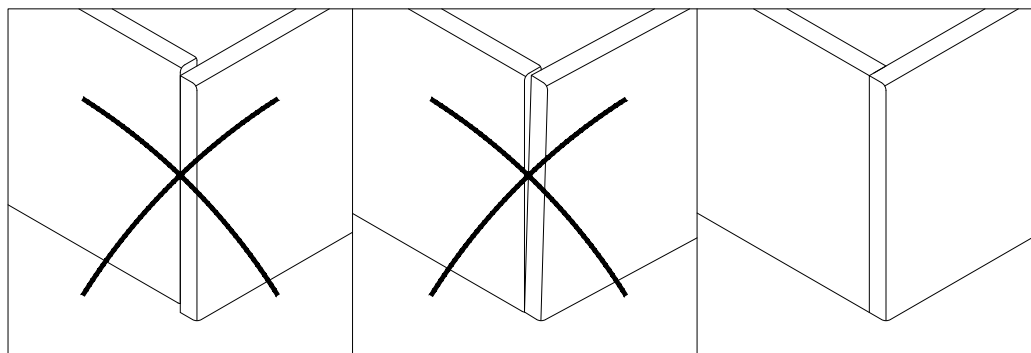


- 2
- 3
- 5
- 6
- 7
- 8

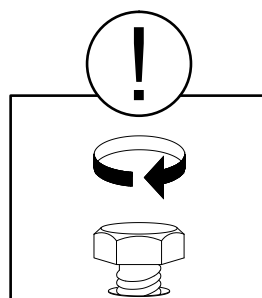


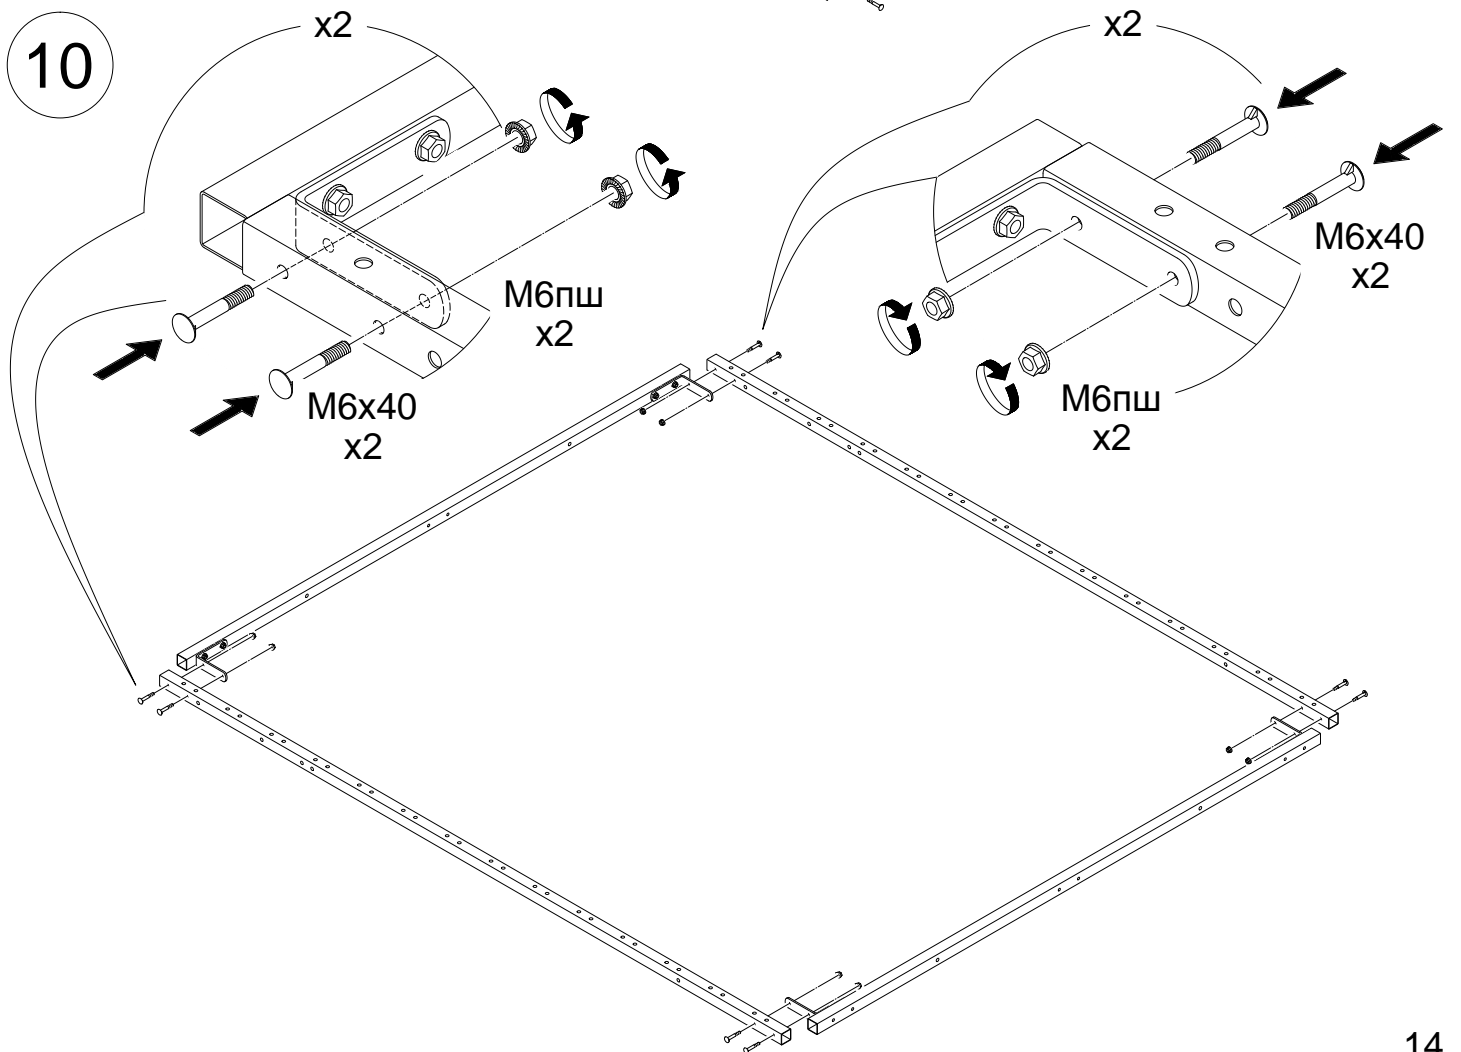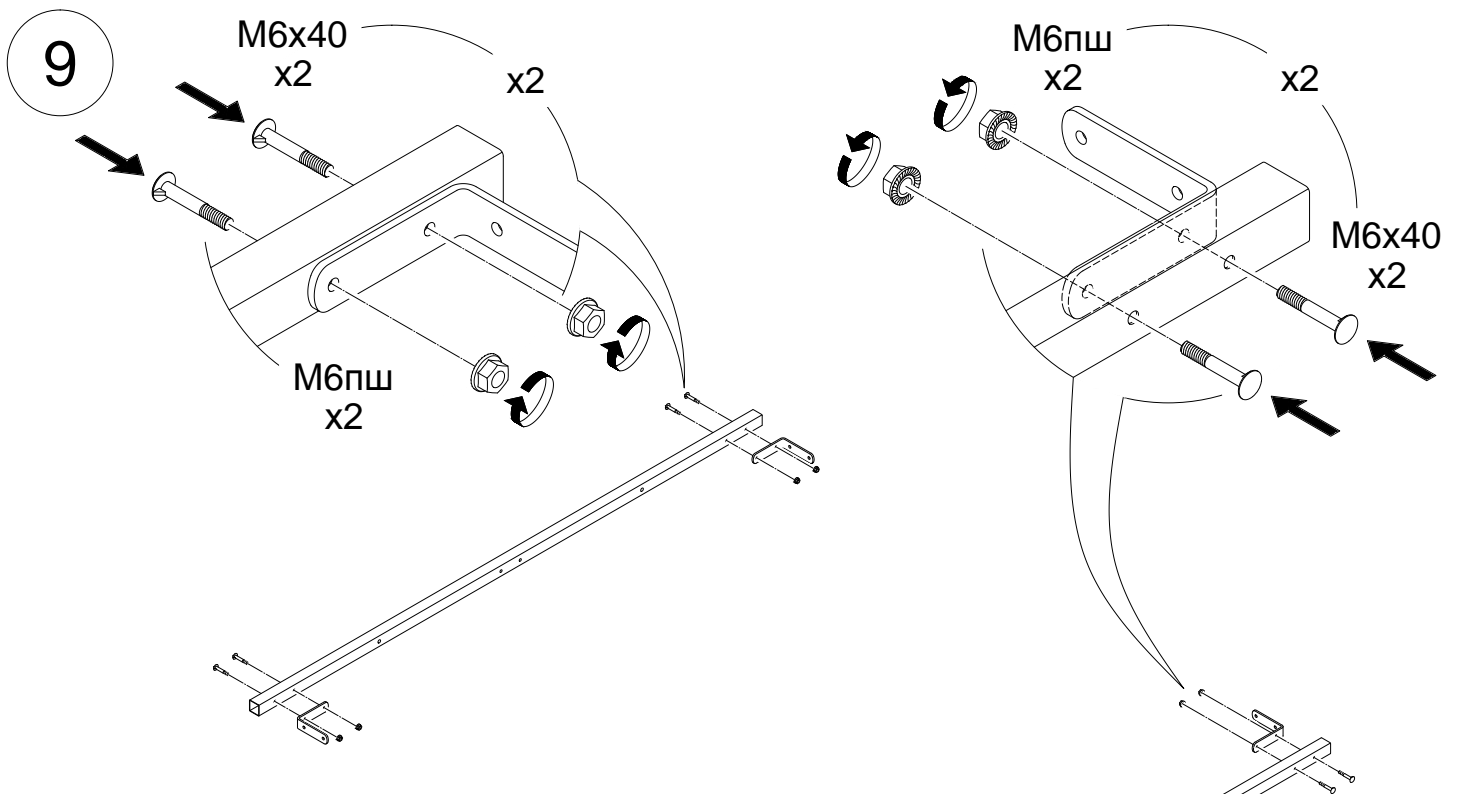

11

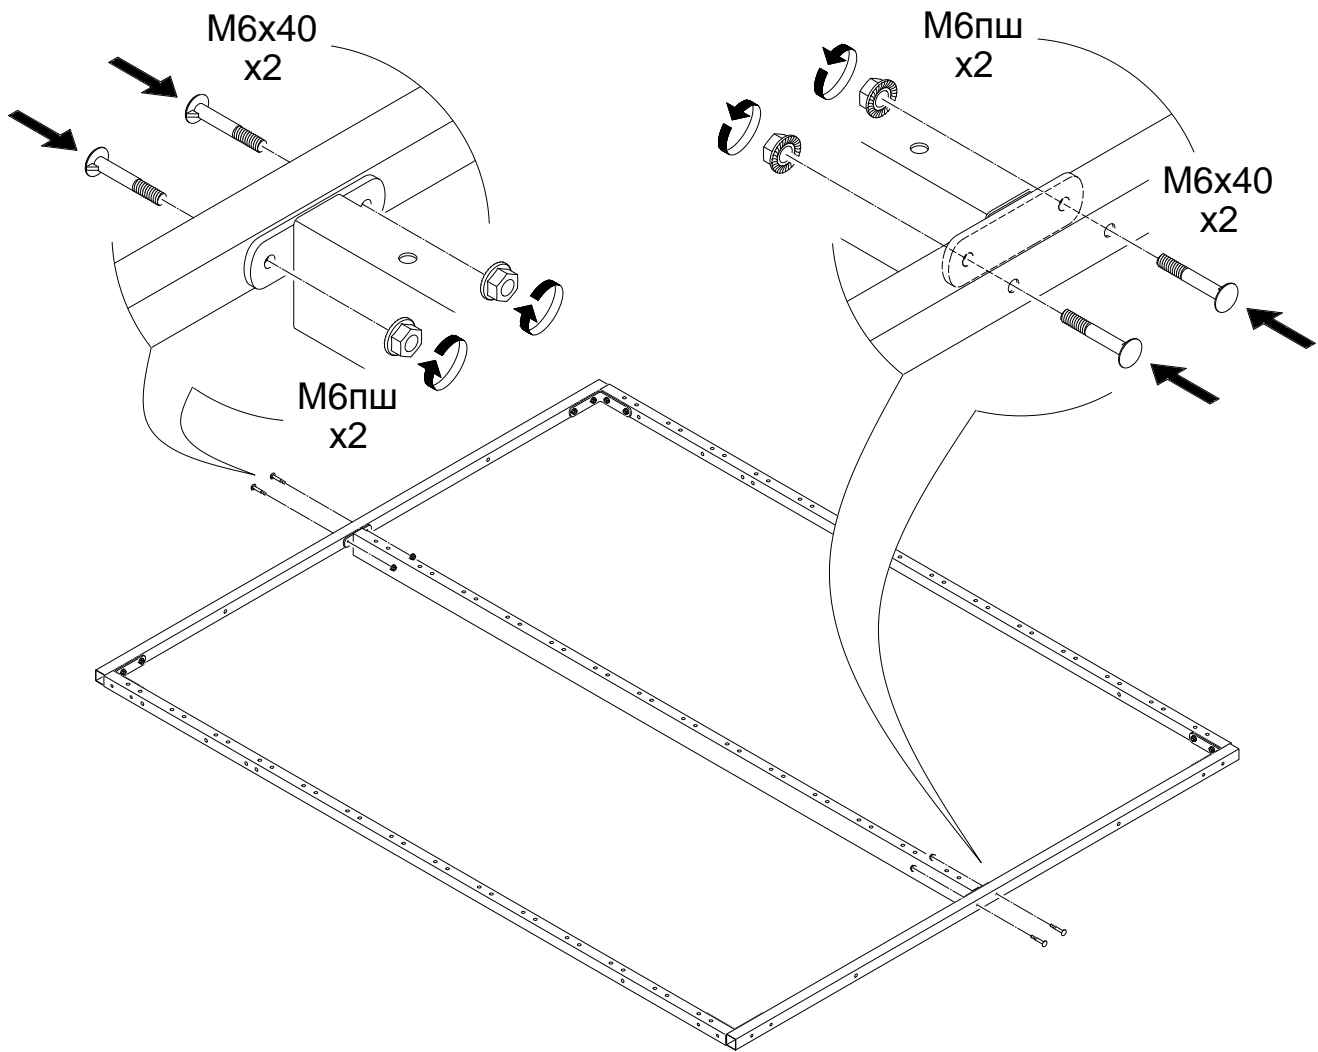


12

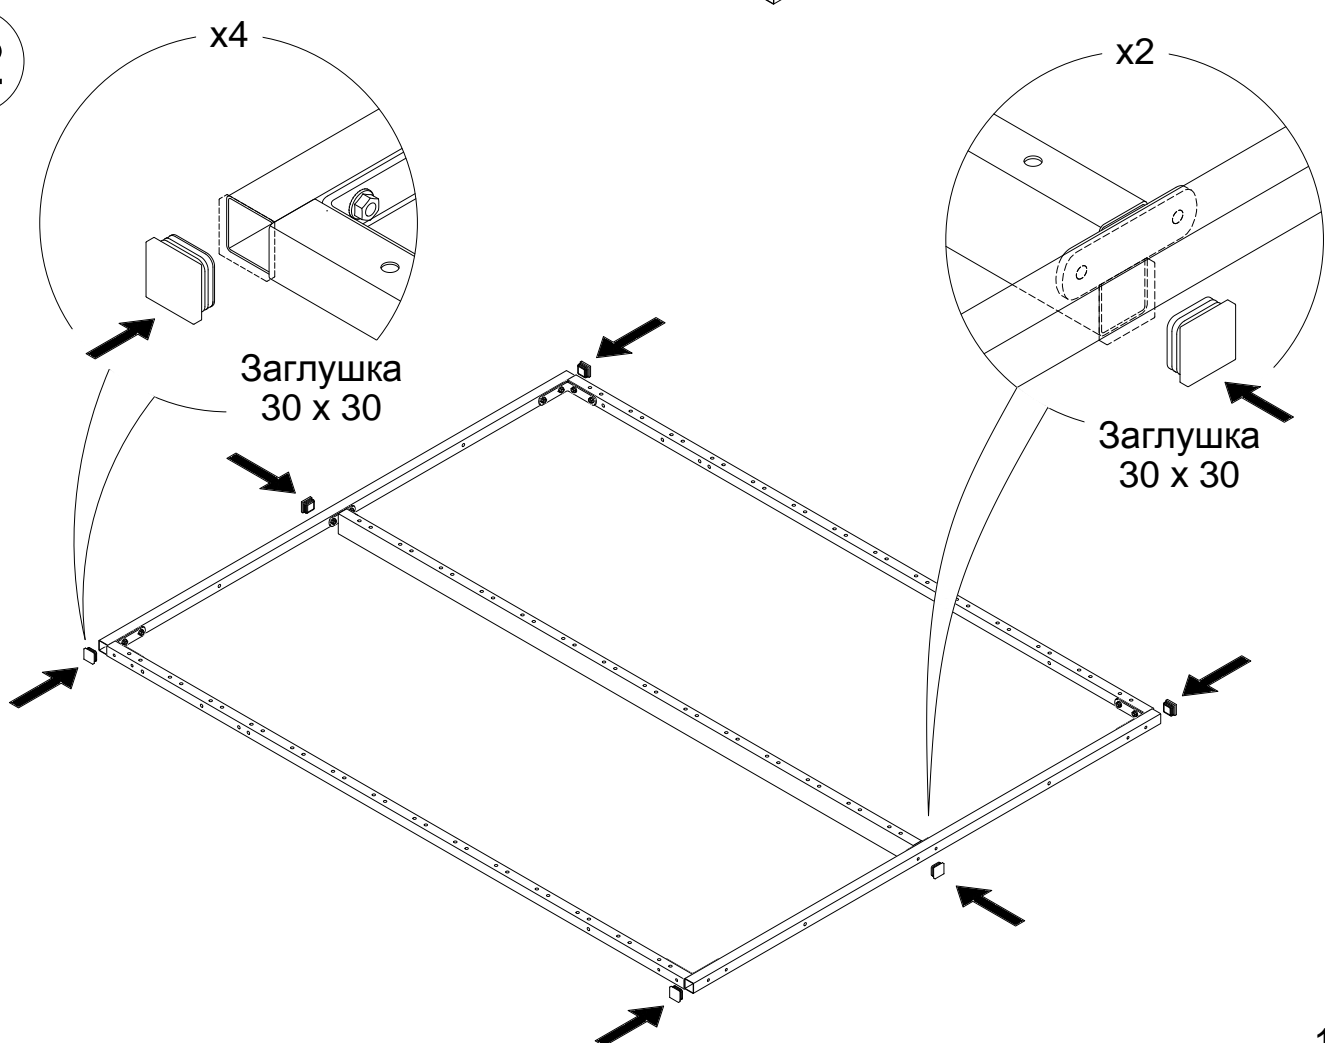





13

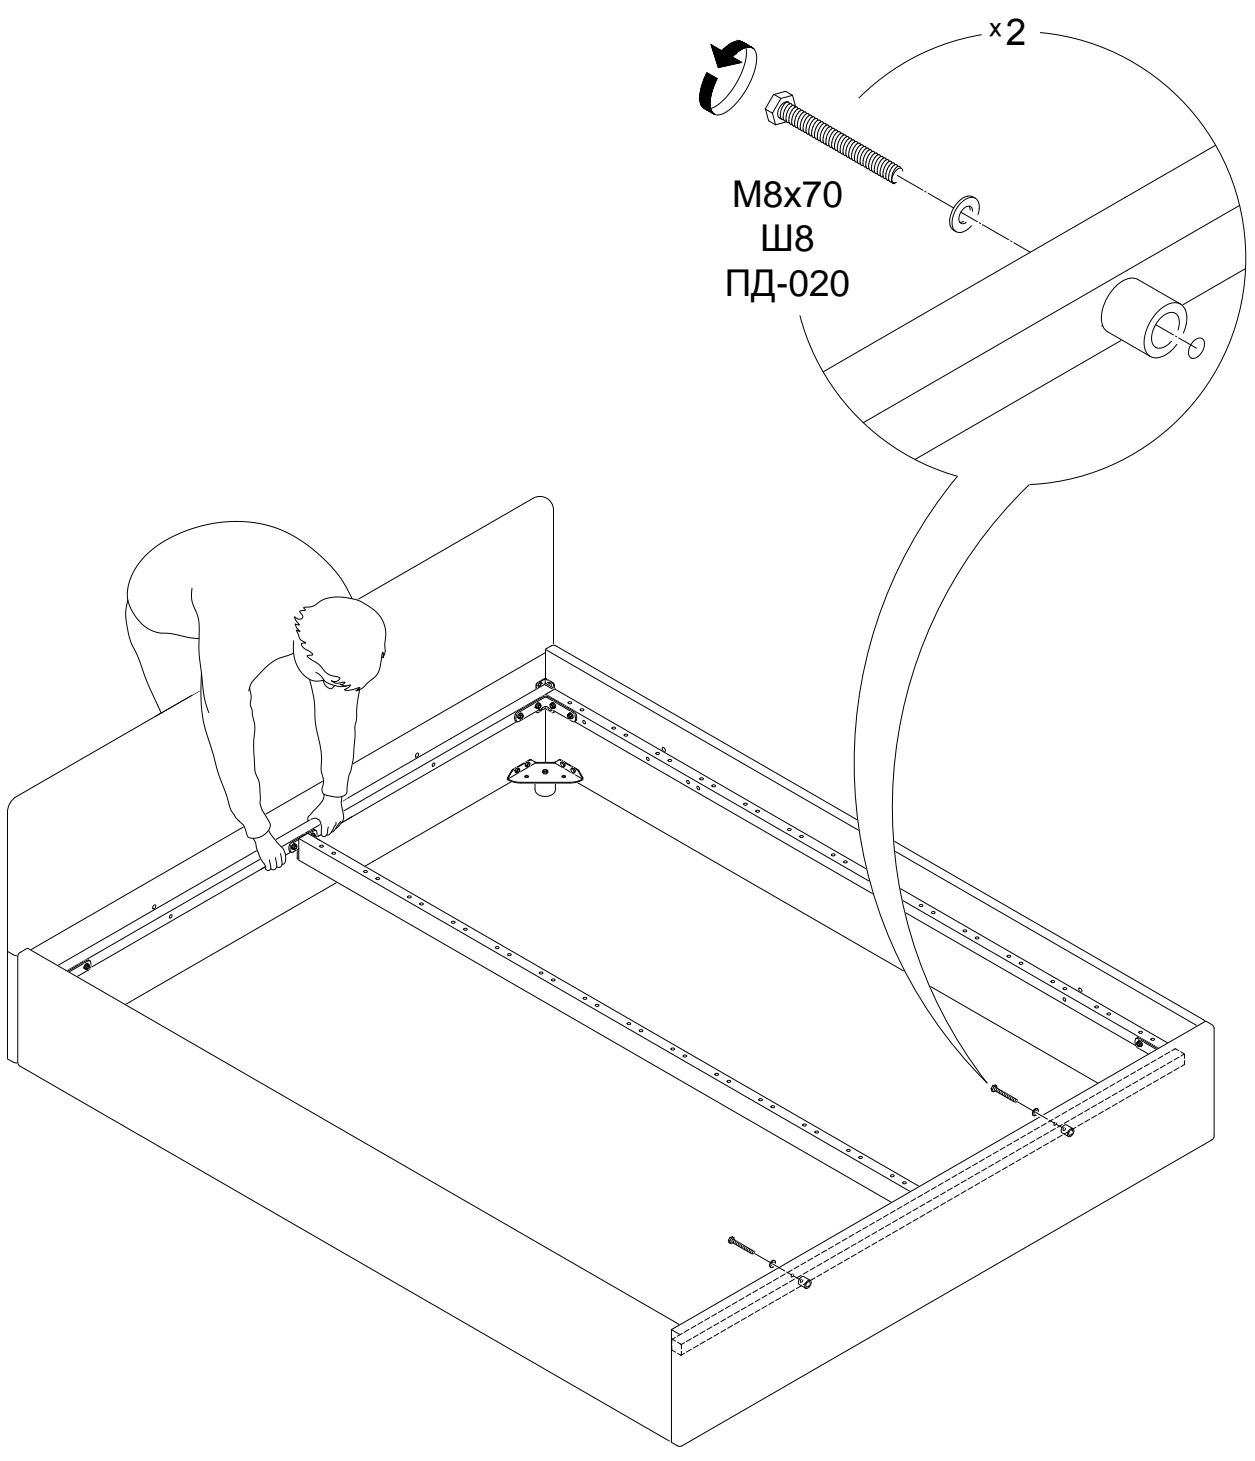


14

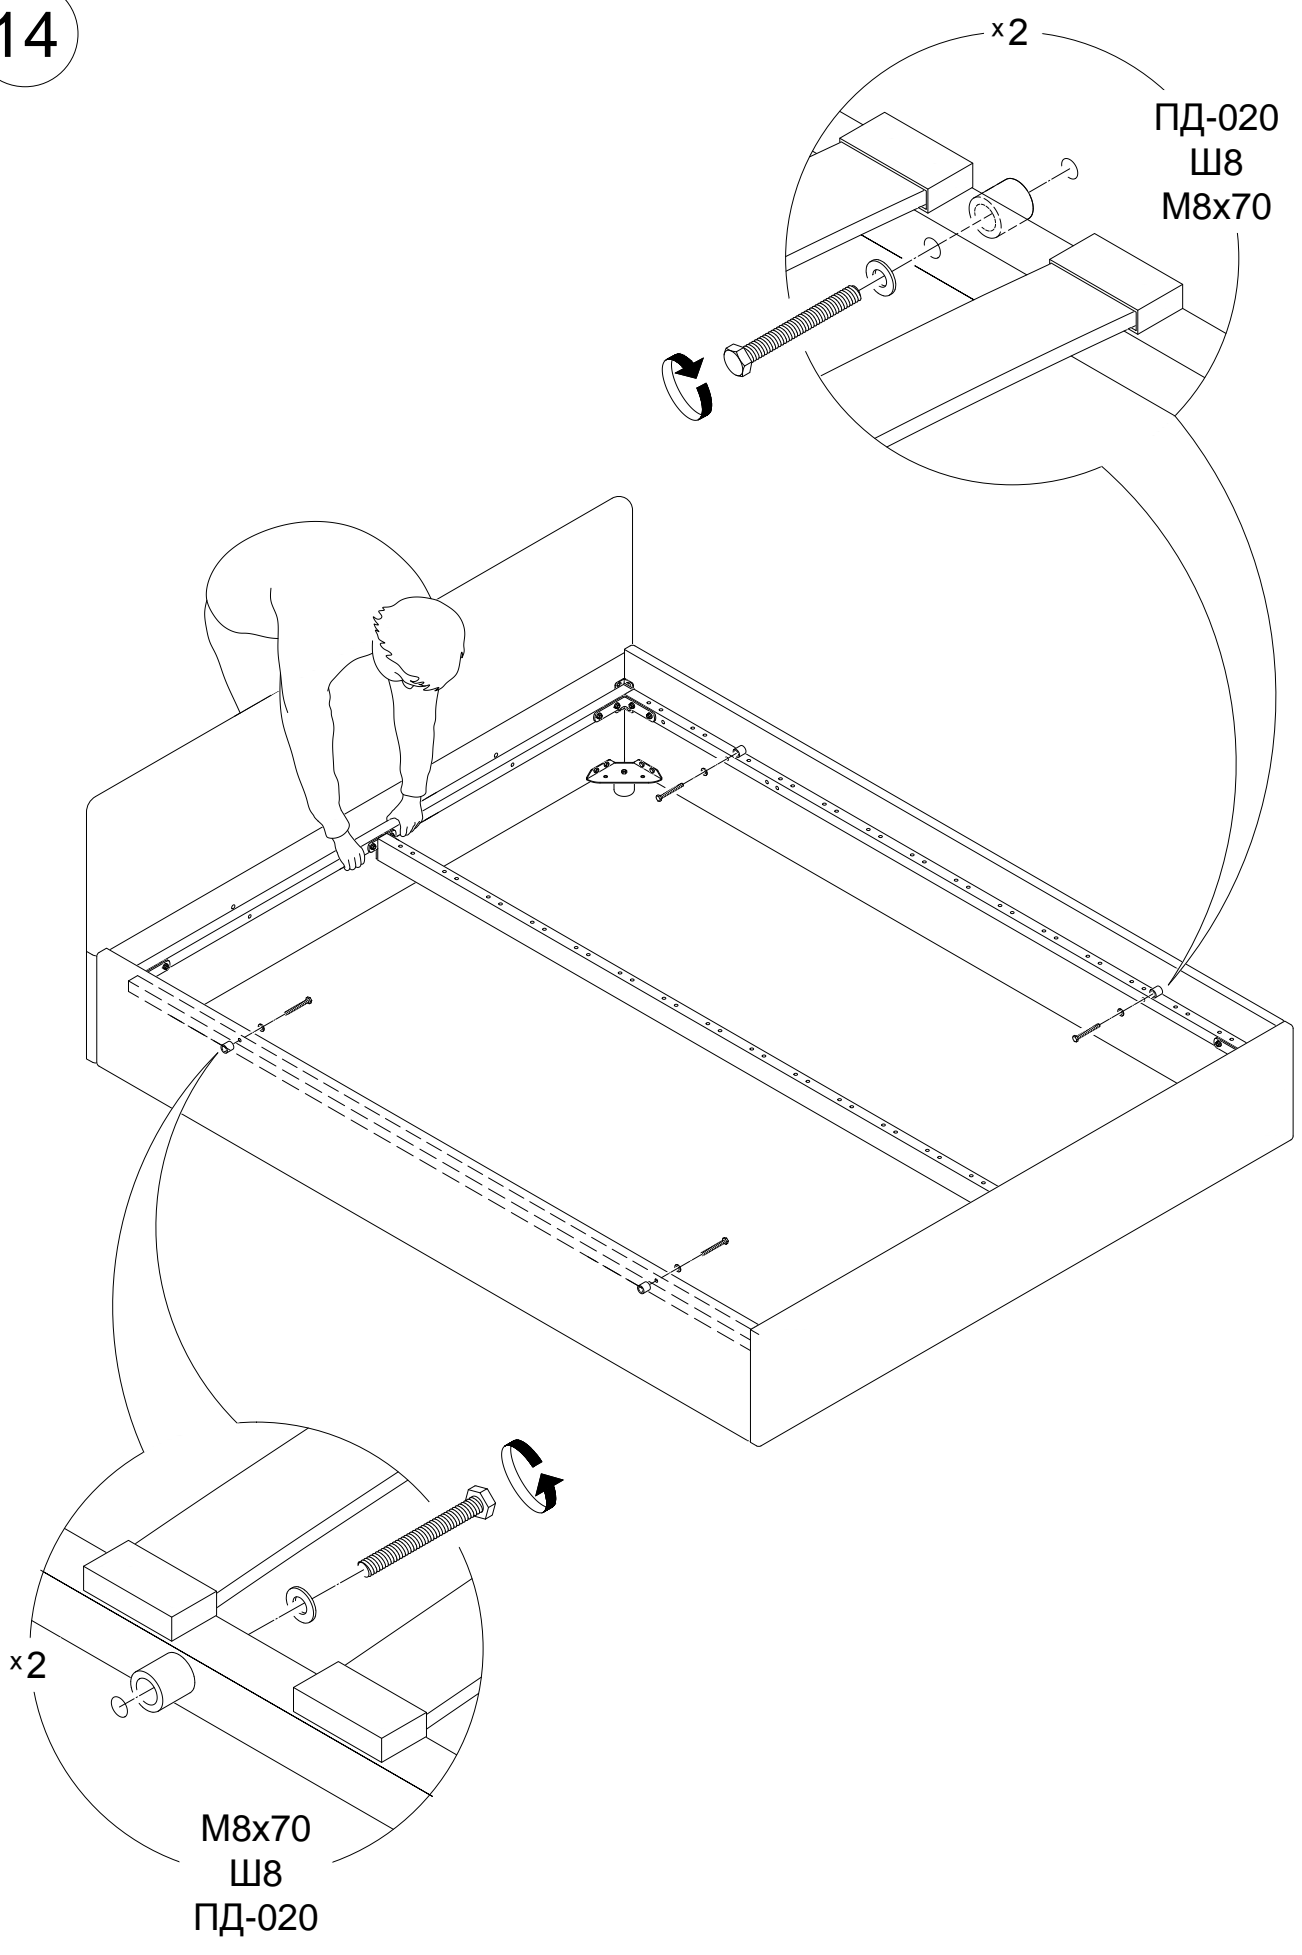

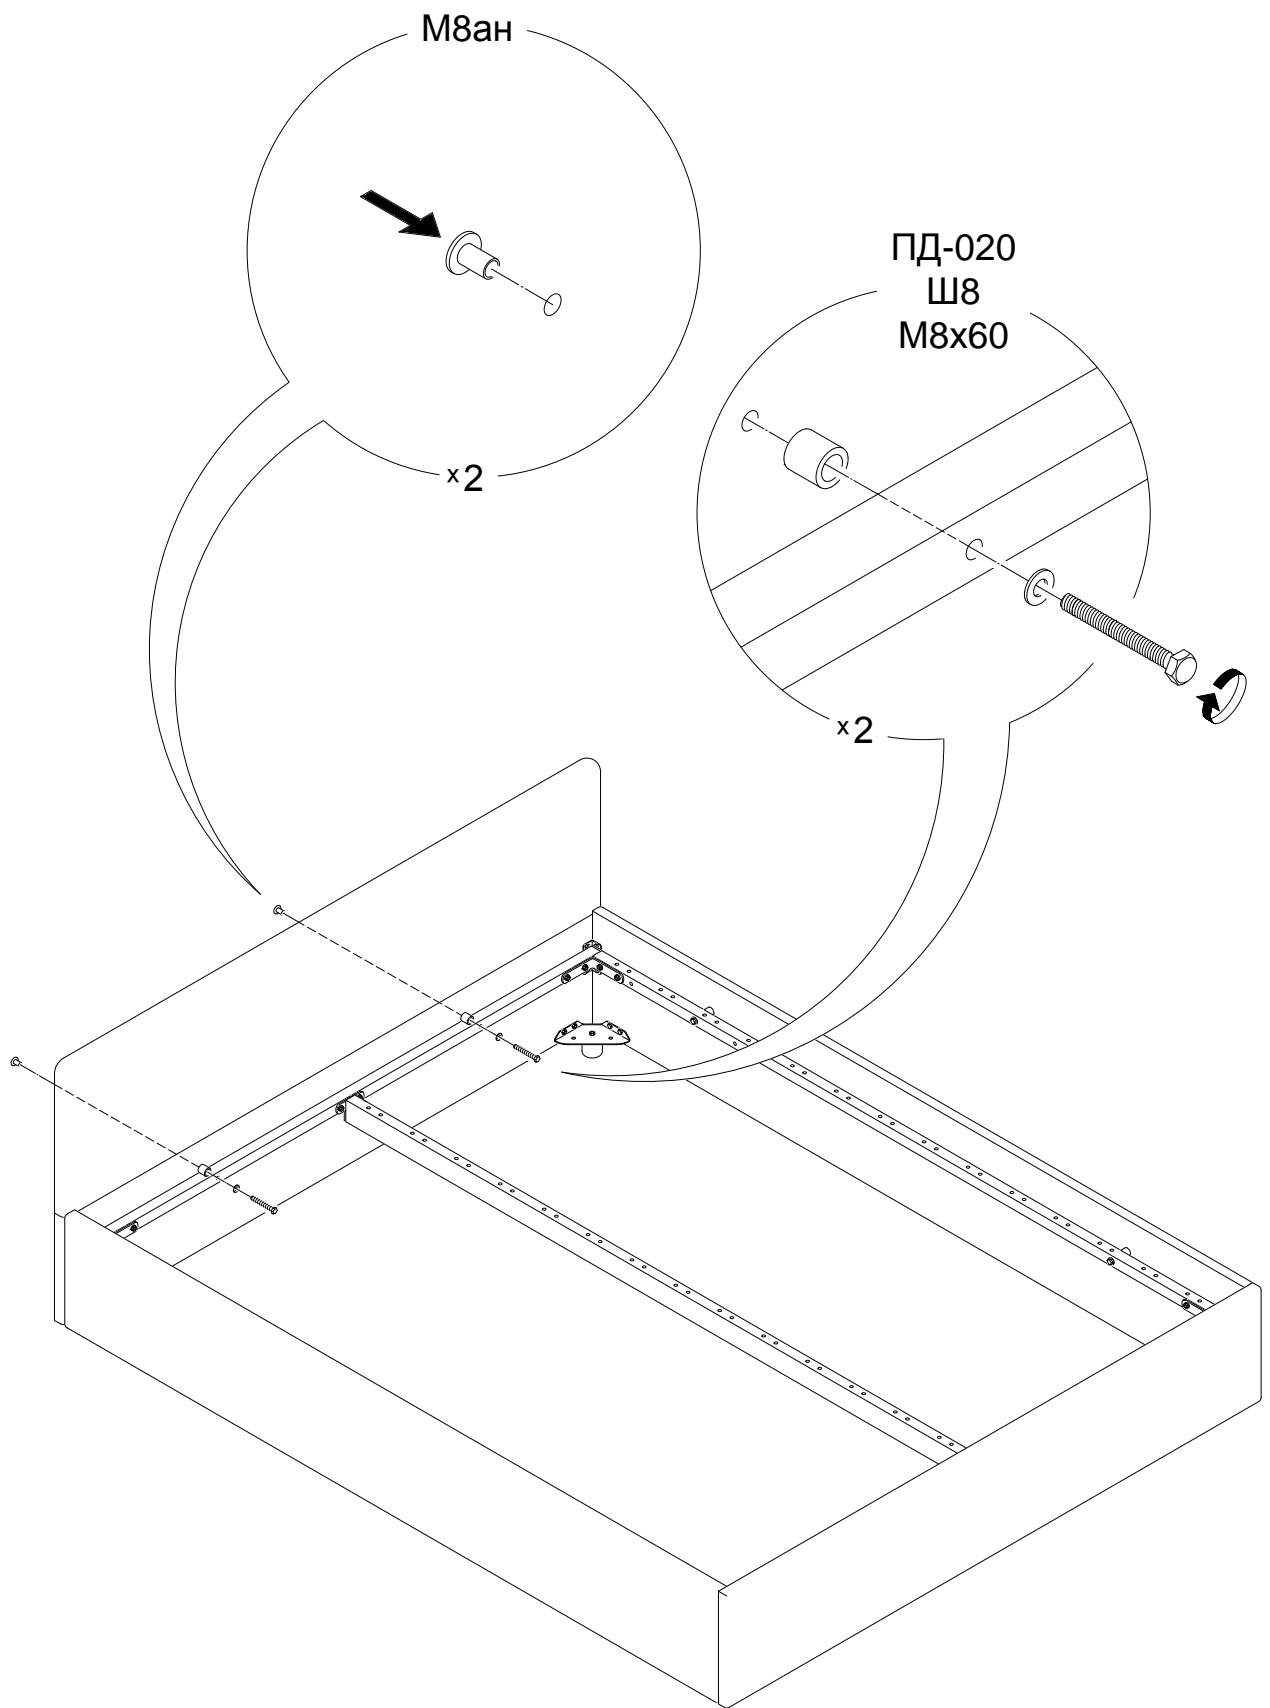

16

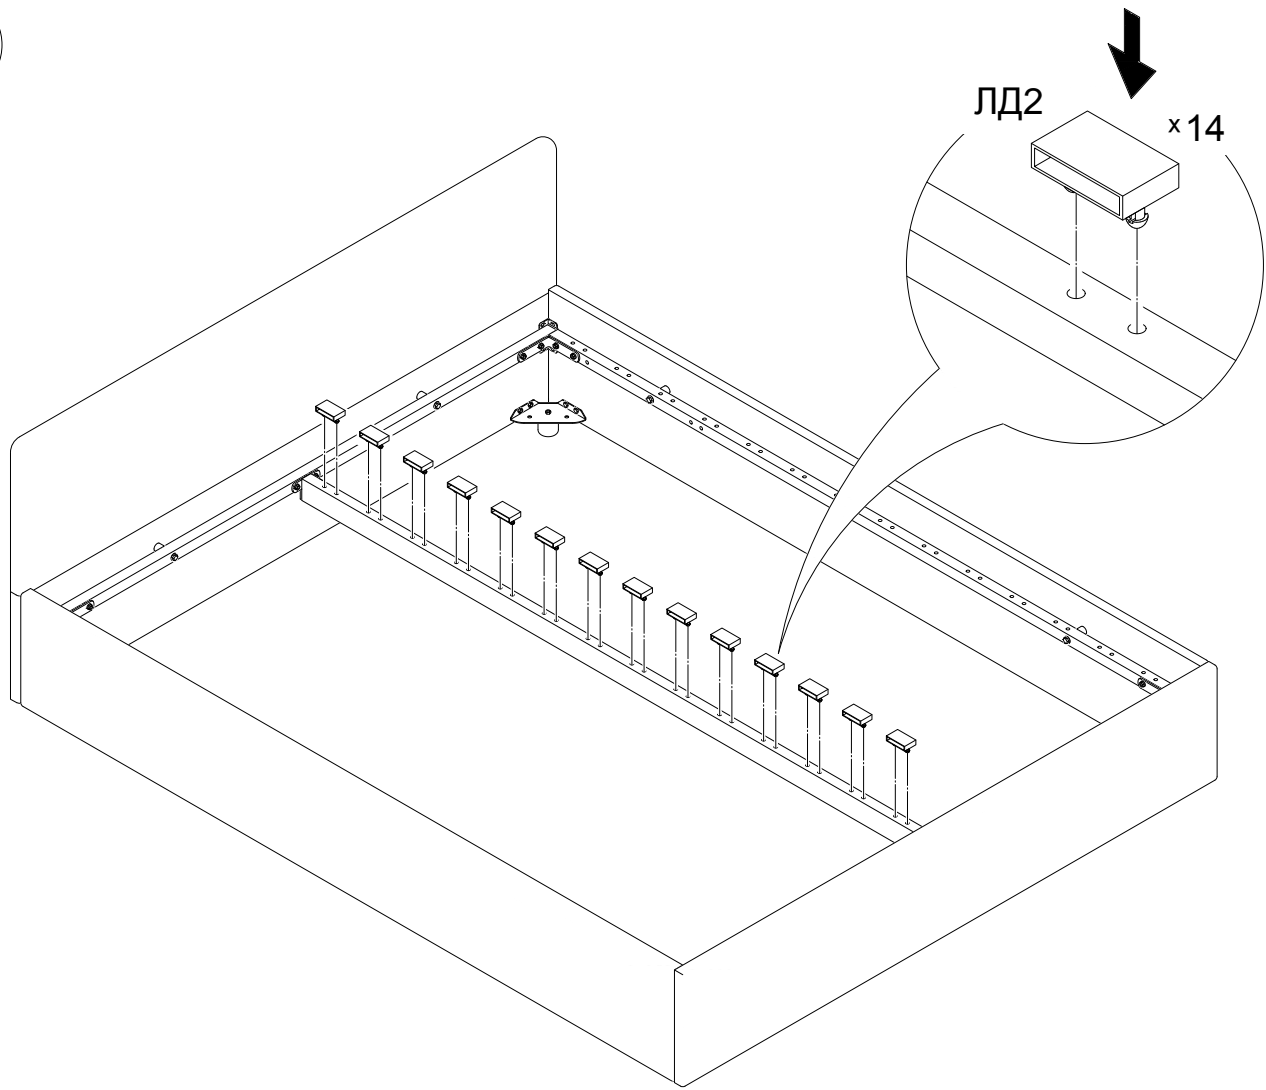

17

