




A	B	C (mm)		D
1	M130 306	500	270	1/1
2	M130 401	396	1505	1/1




1 

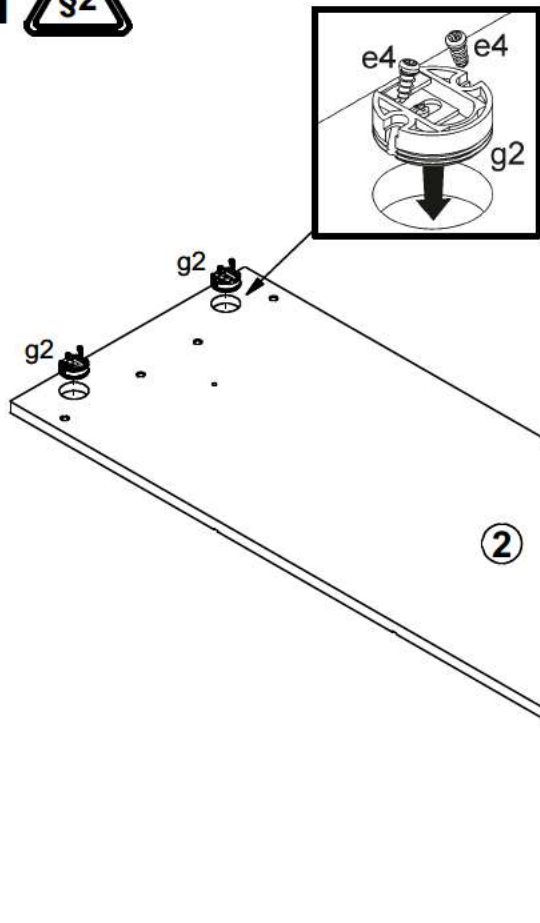


2 

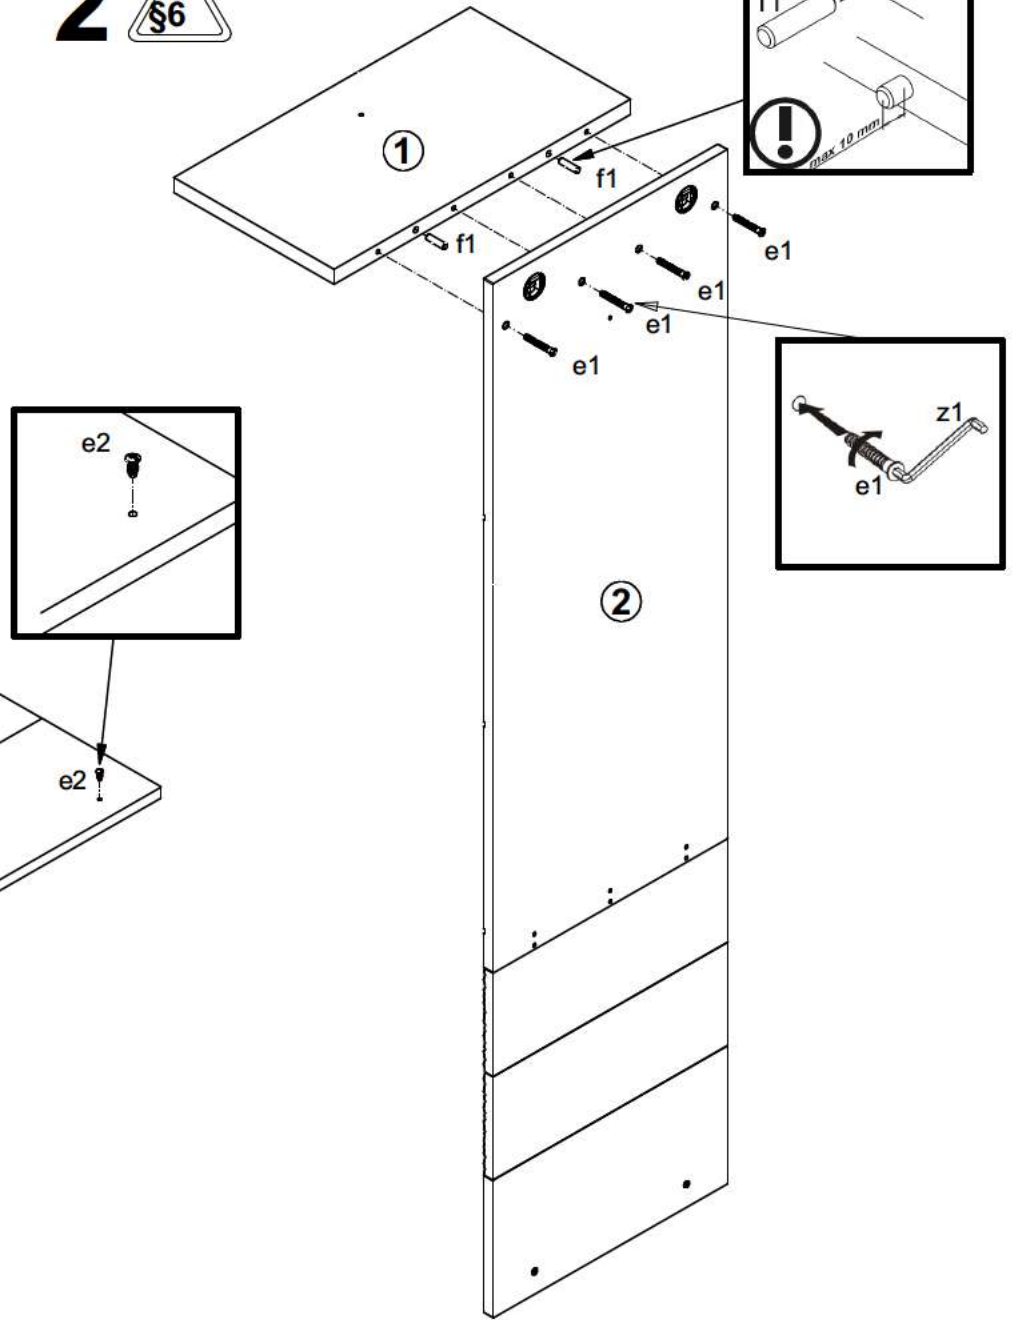


3

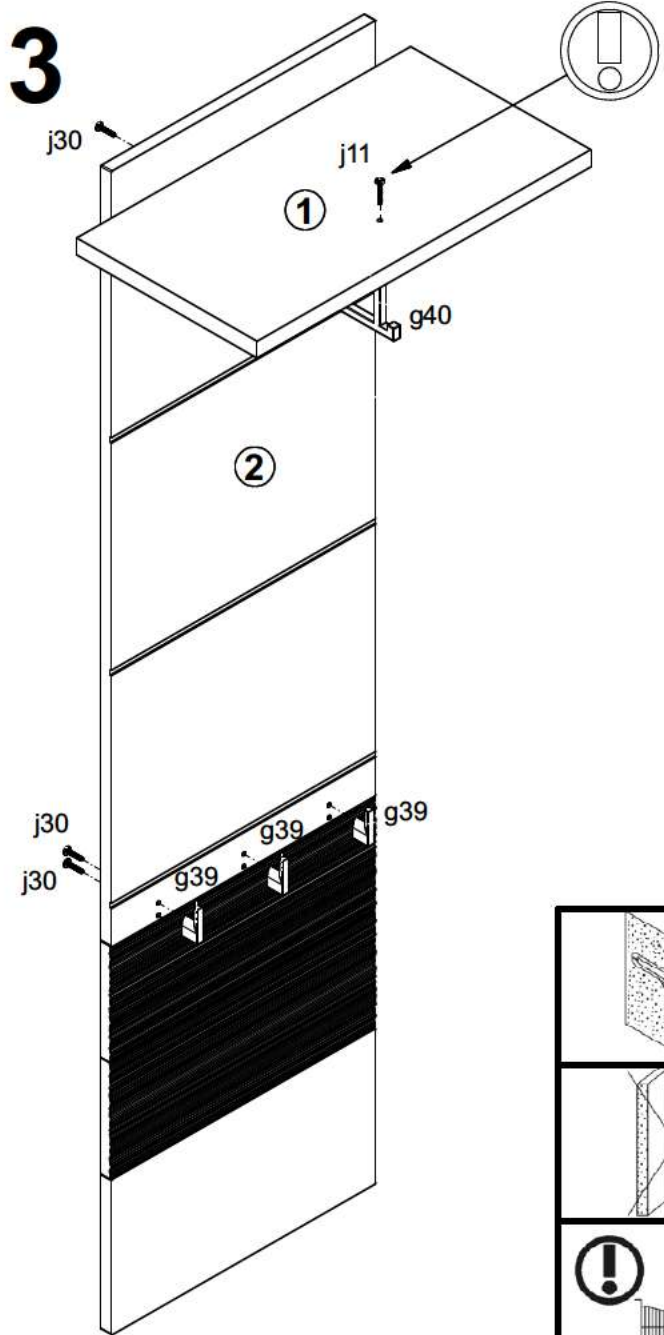

4

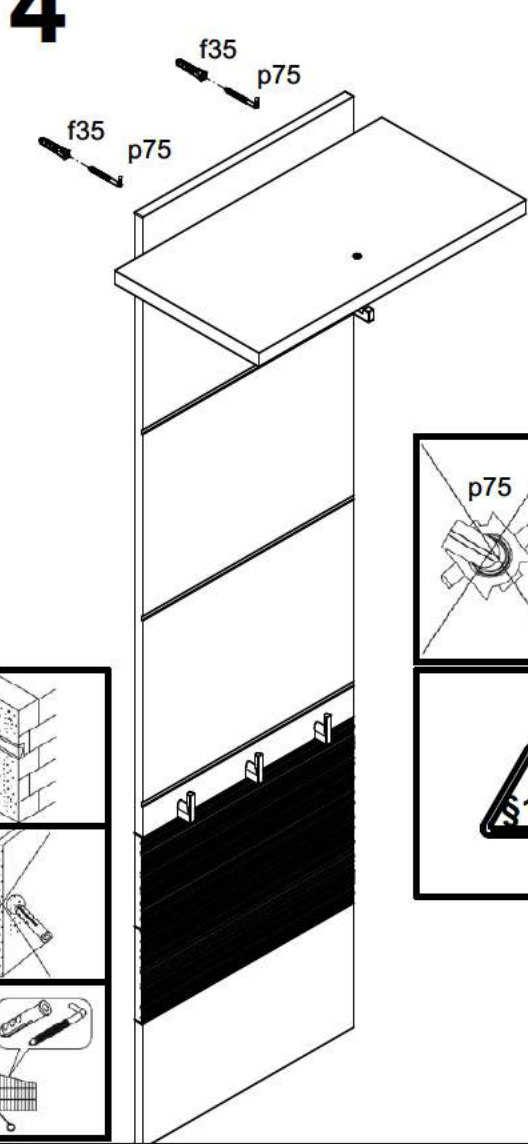

--	--	--	--	--

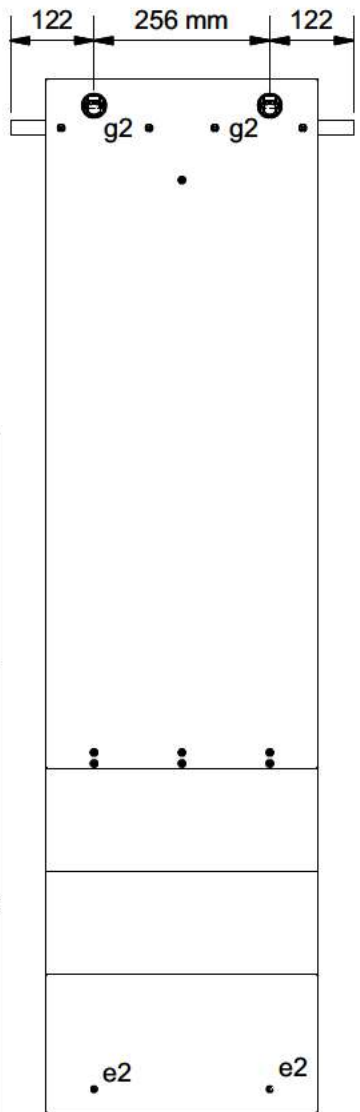

Three-step inset diagram showing the installation of a panel into a wall. Step 1: Panel is placed against the wall. Step 2: Screws are inserted into the panel. Step 3: Screws are tightened into the wall. A warning icon is present.


5

