
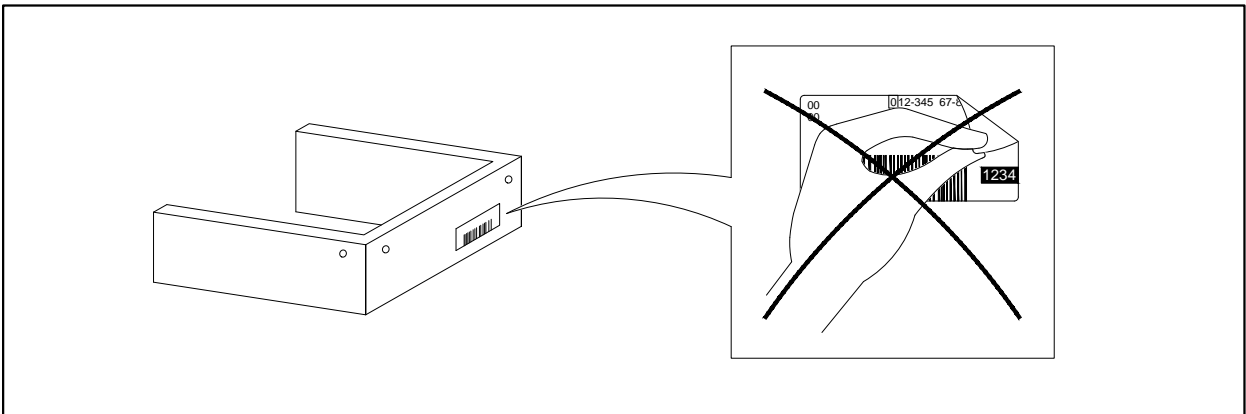
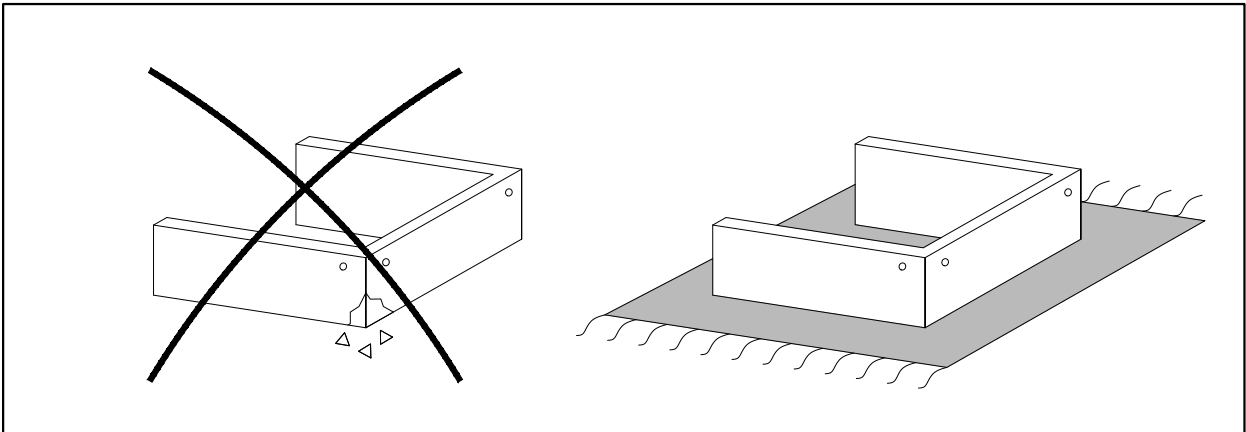
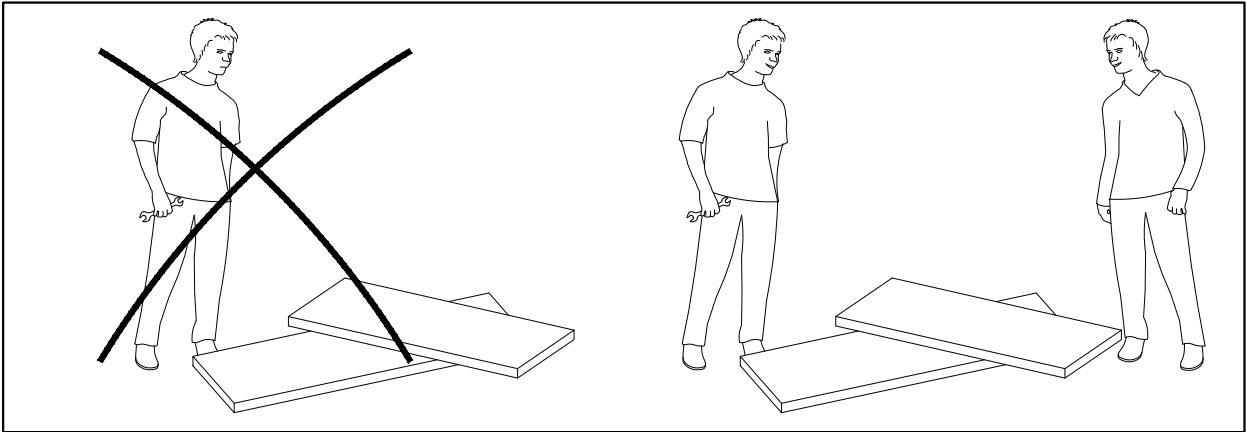
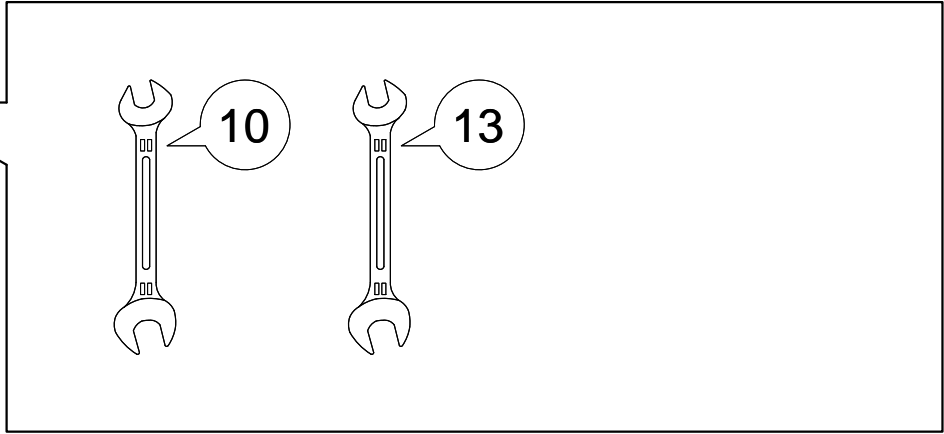



Инструкция по сборке

Кровать без подъёмного механизма


Дизайн 1232

(120x200, 140x200, 160x200, 180x200)

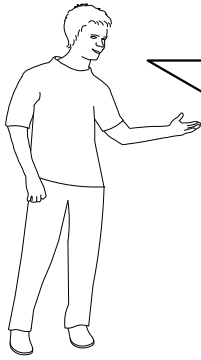


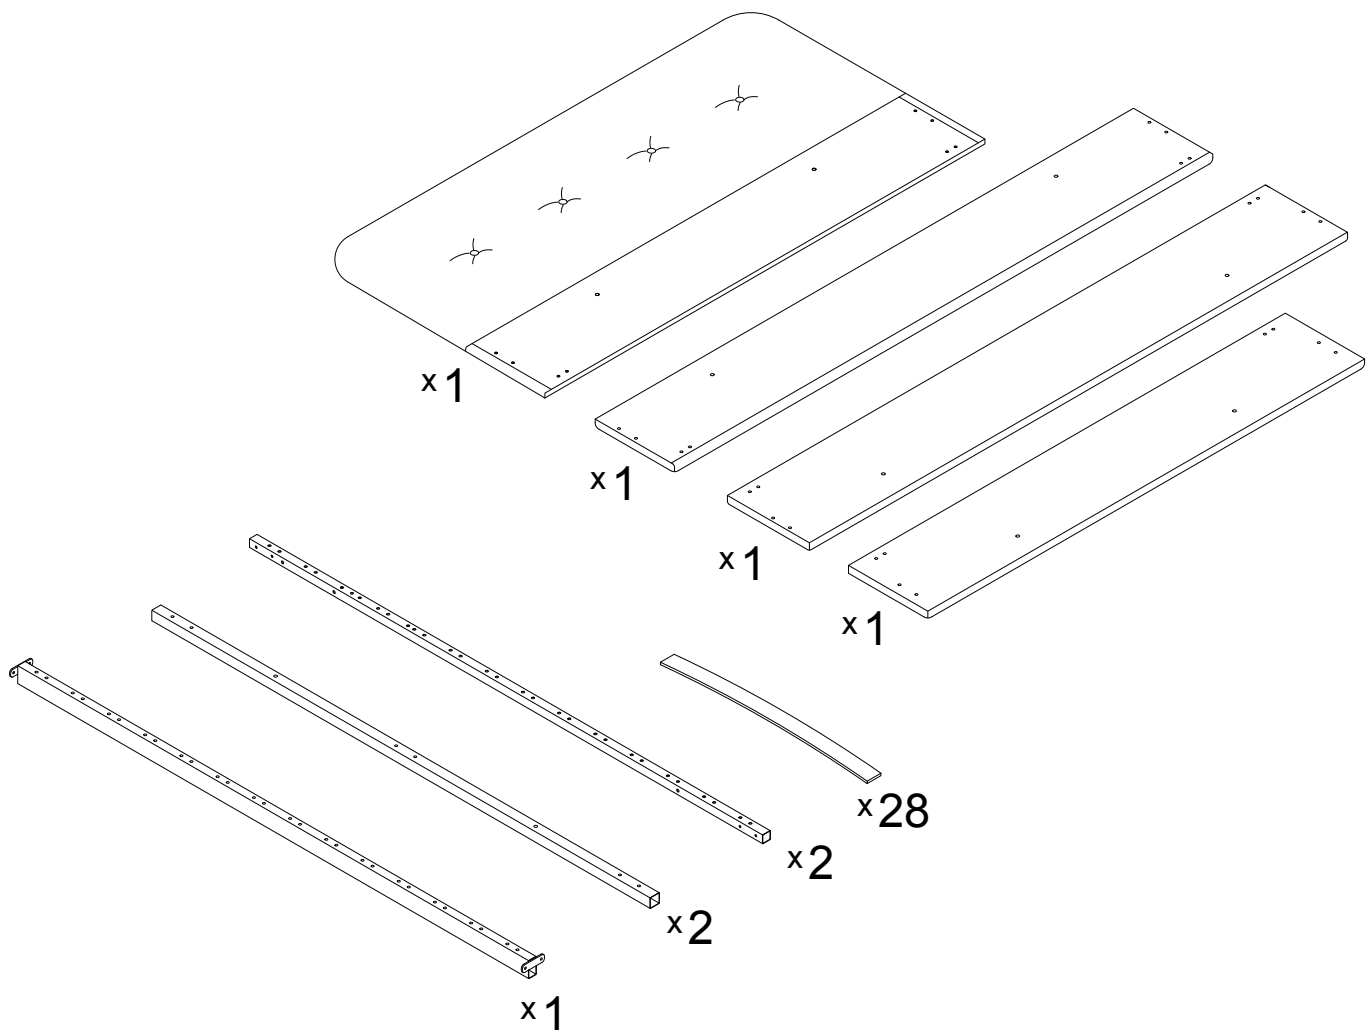


M 1:1

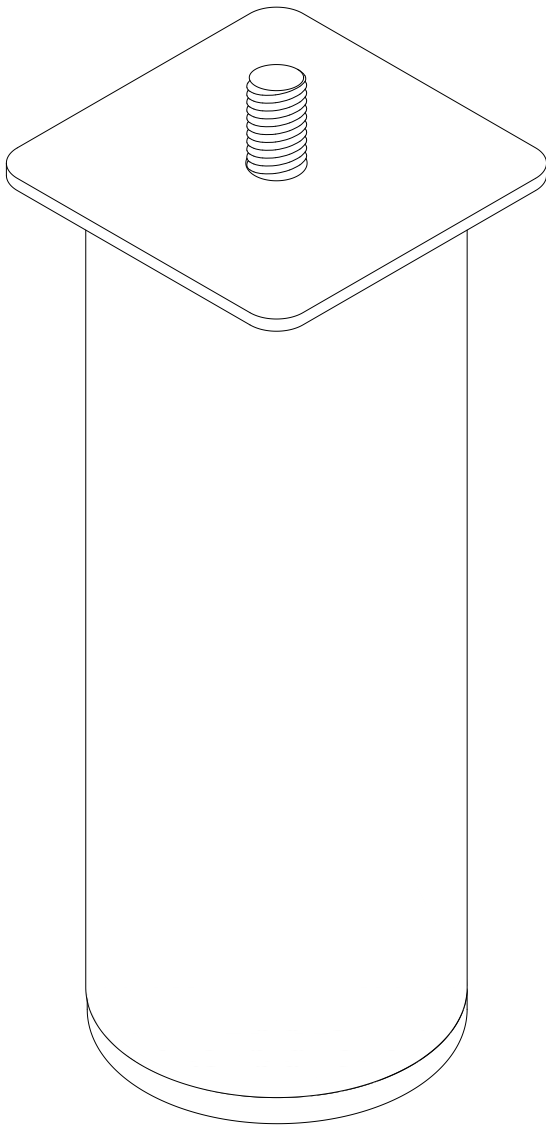


x4

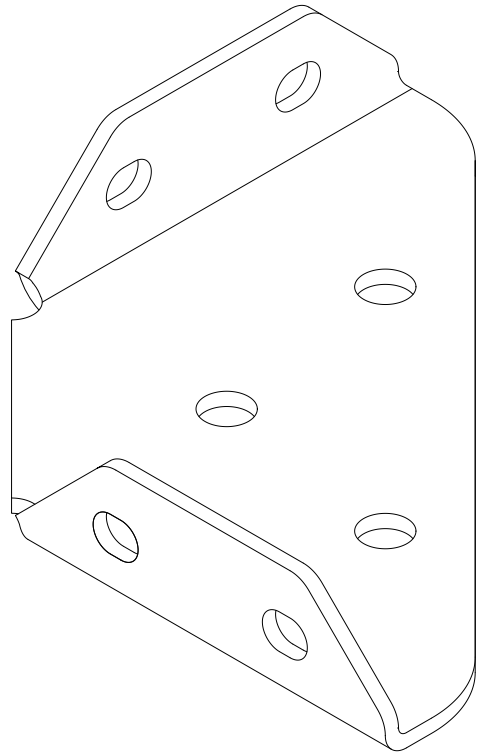

x4













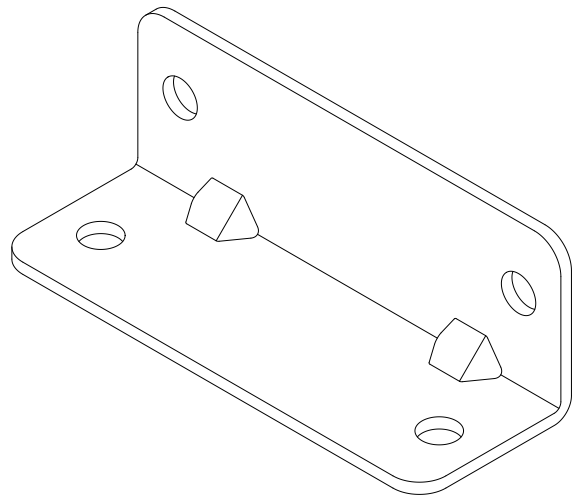


x4

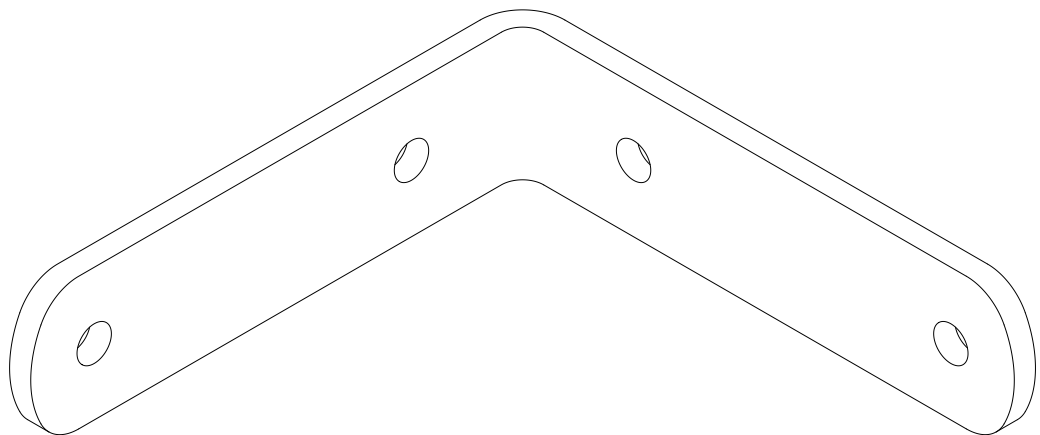


x4


M 1:1

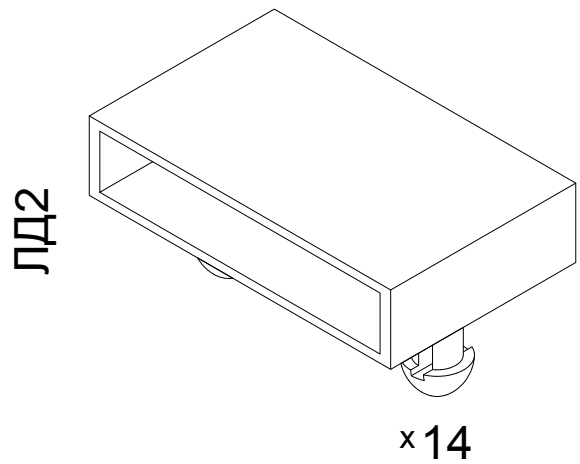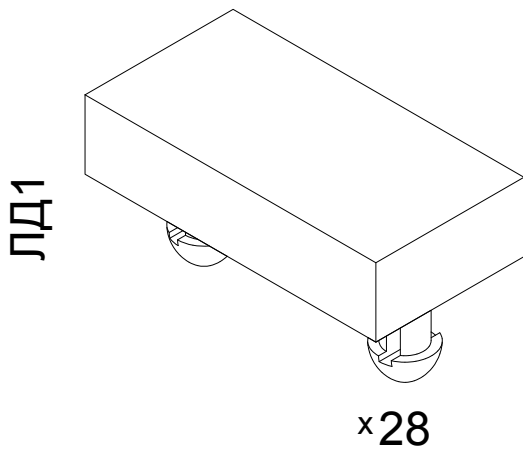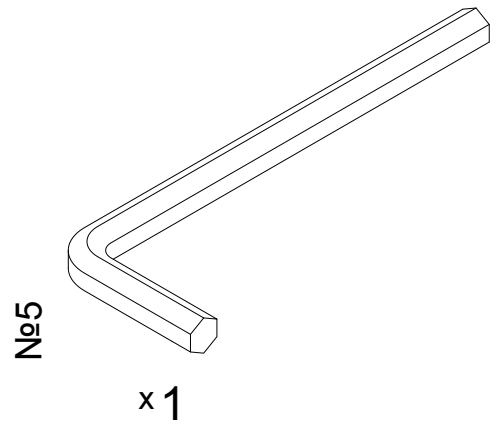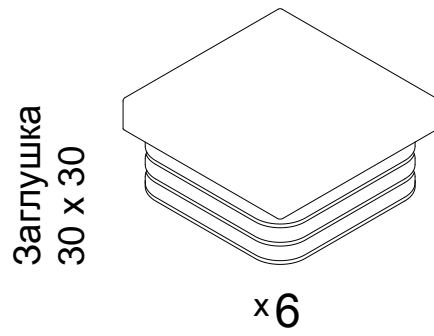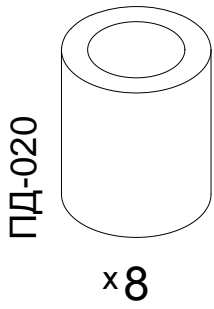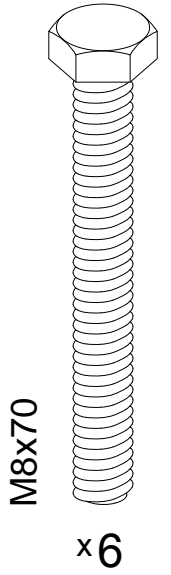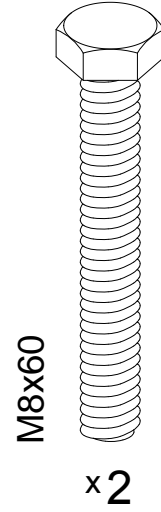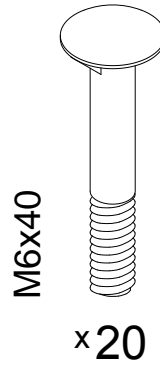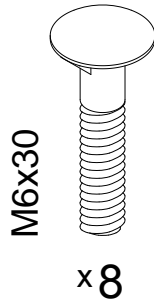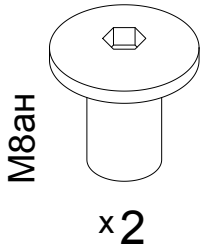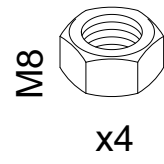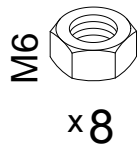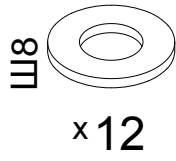


1

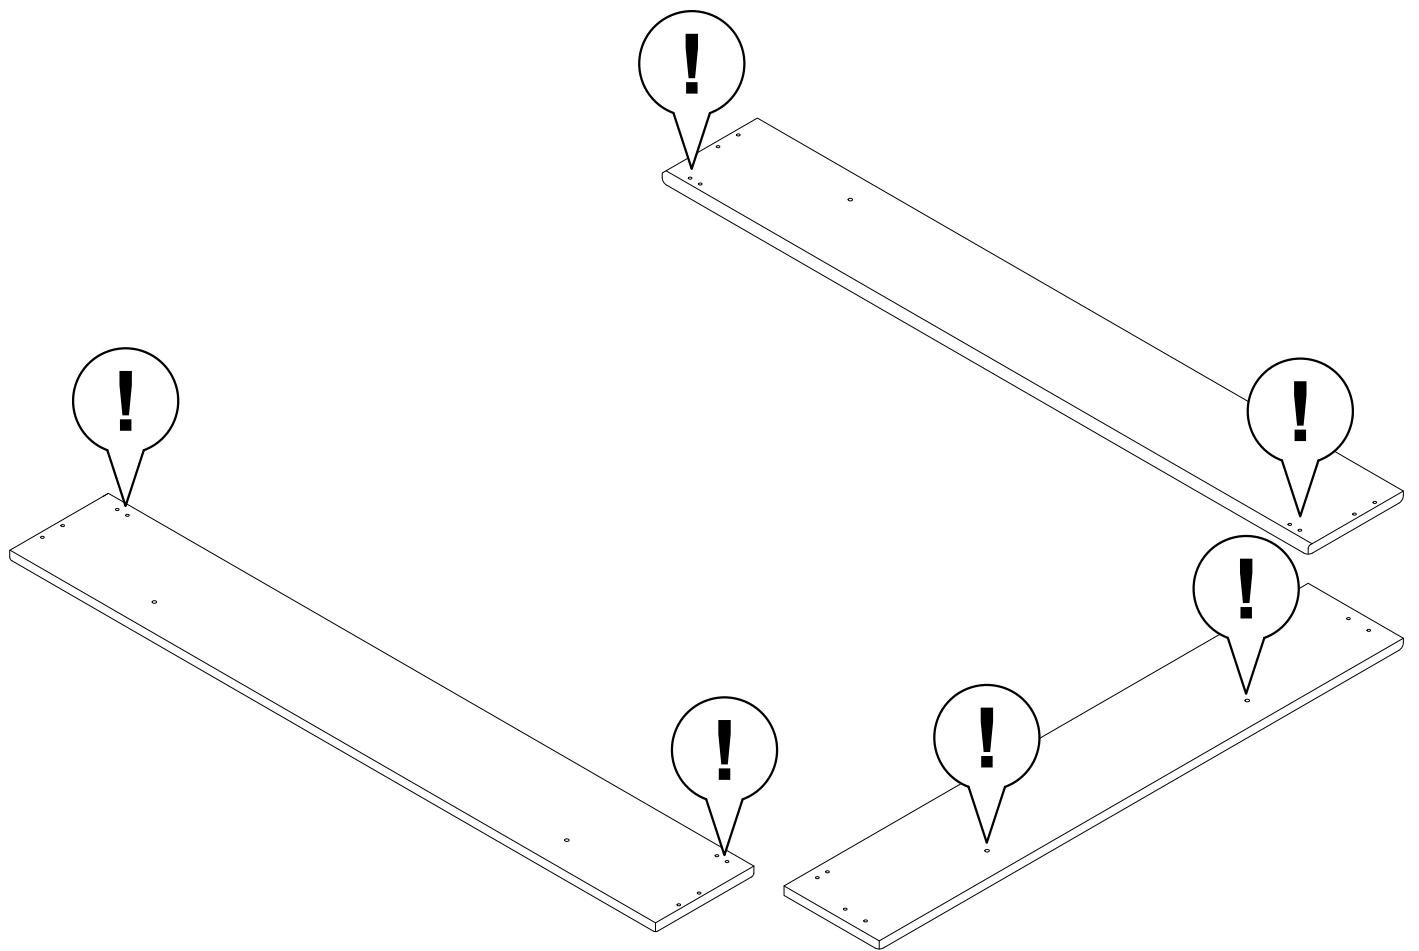



2

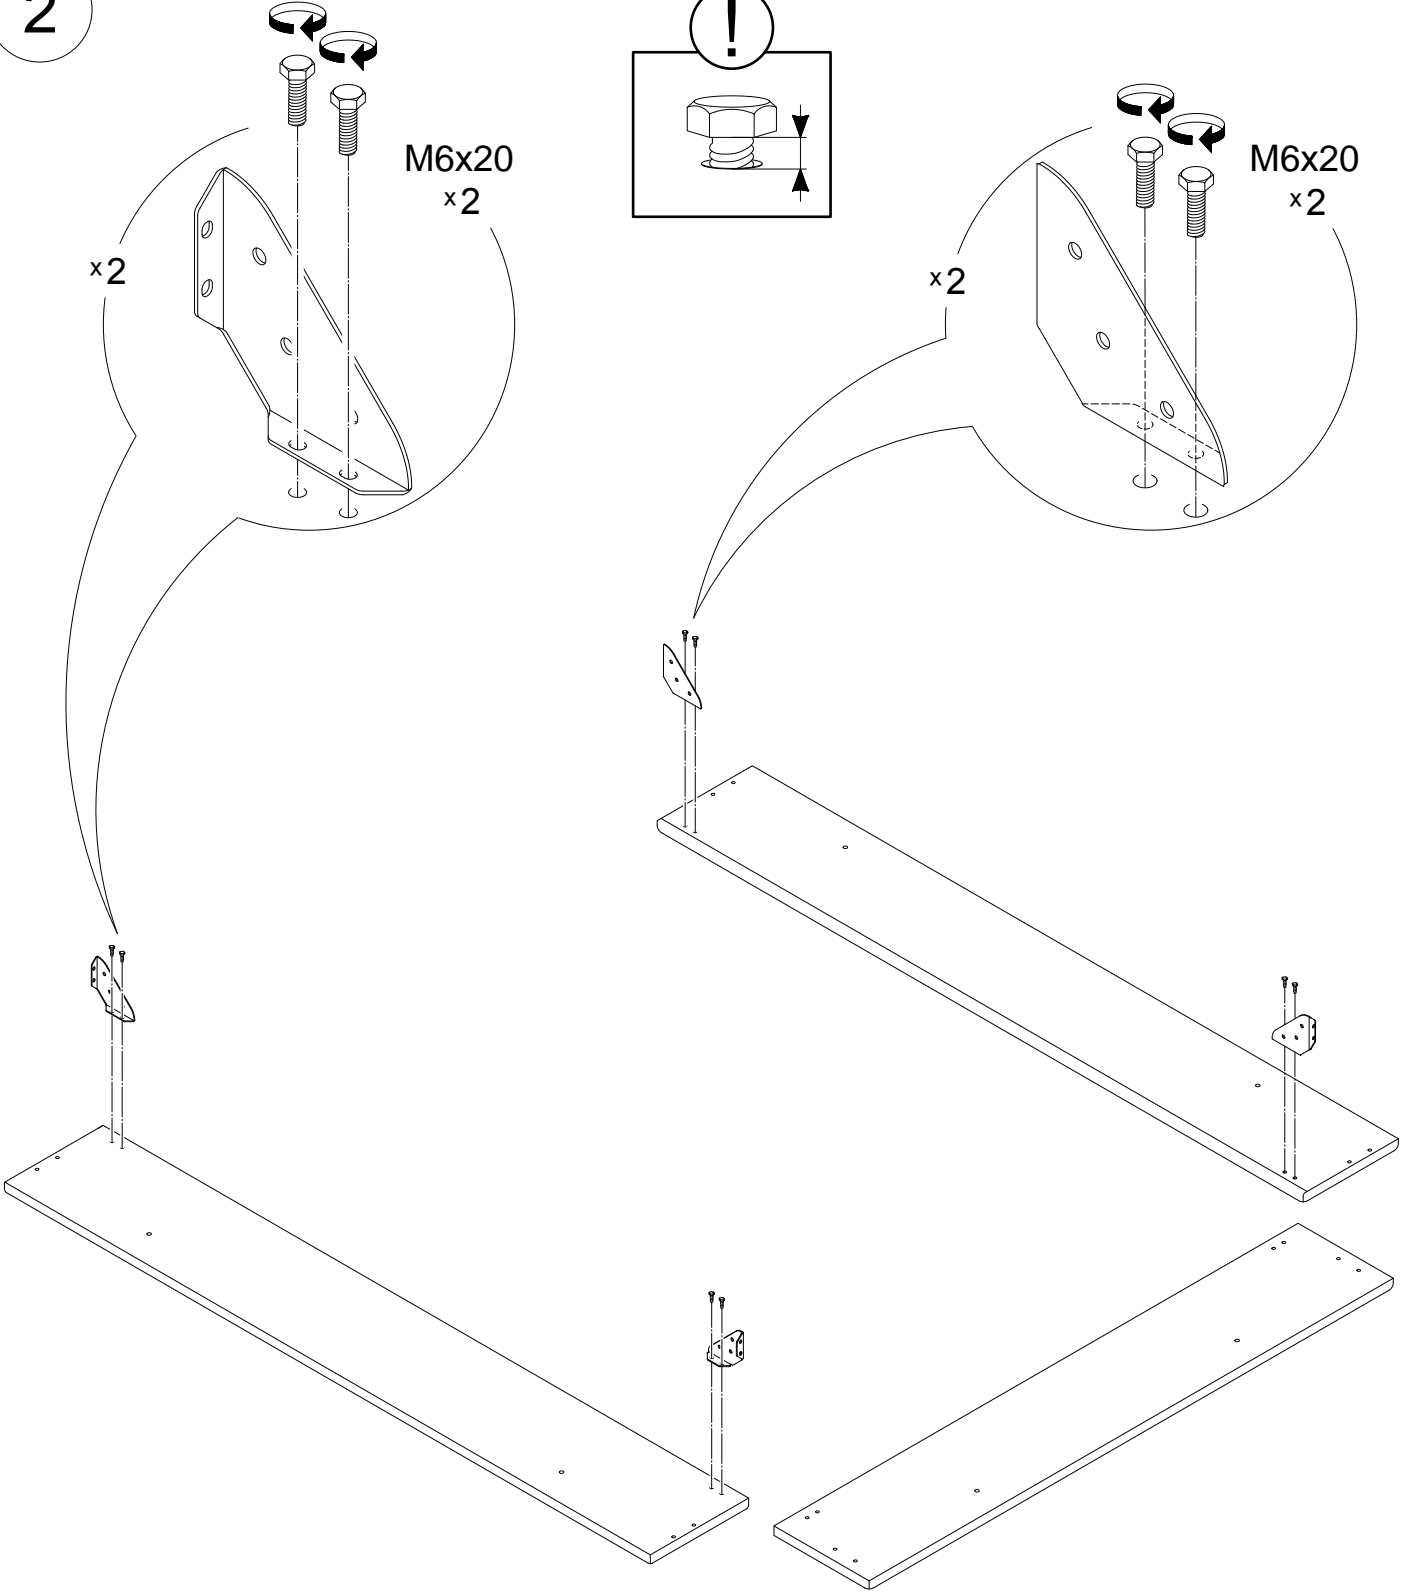


3

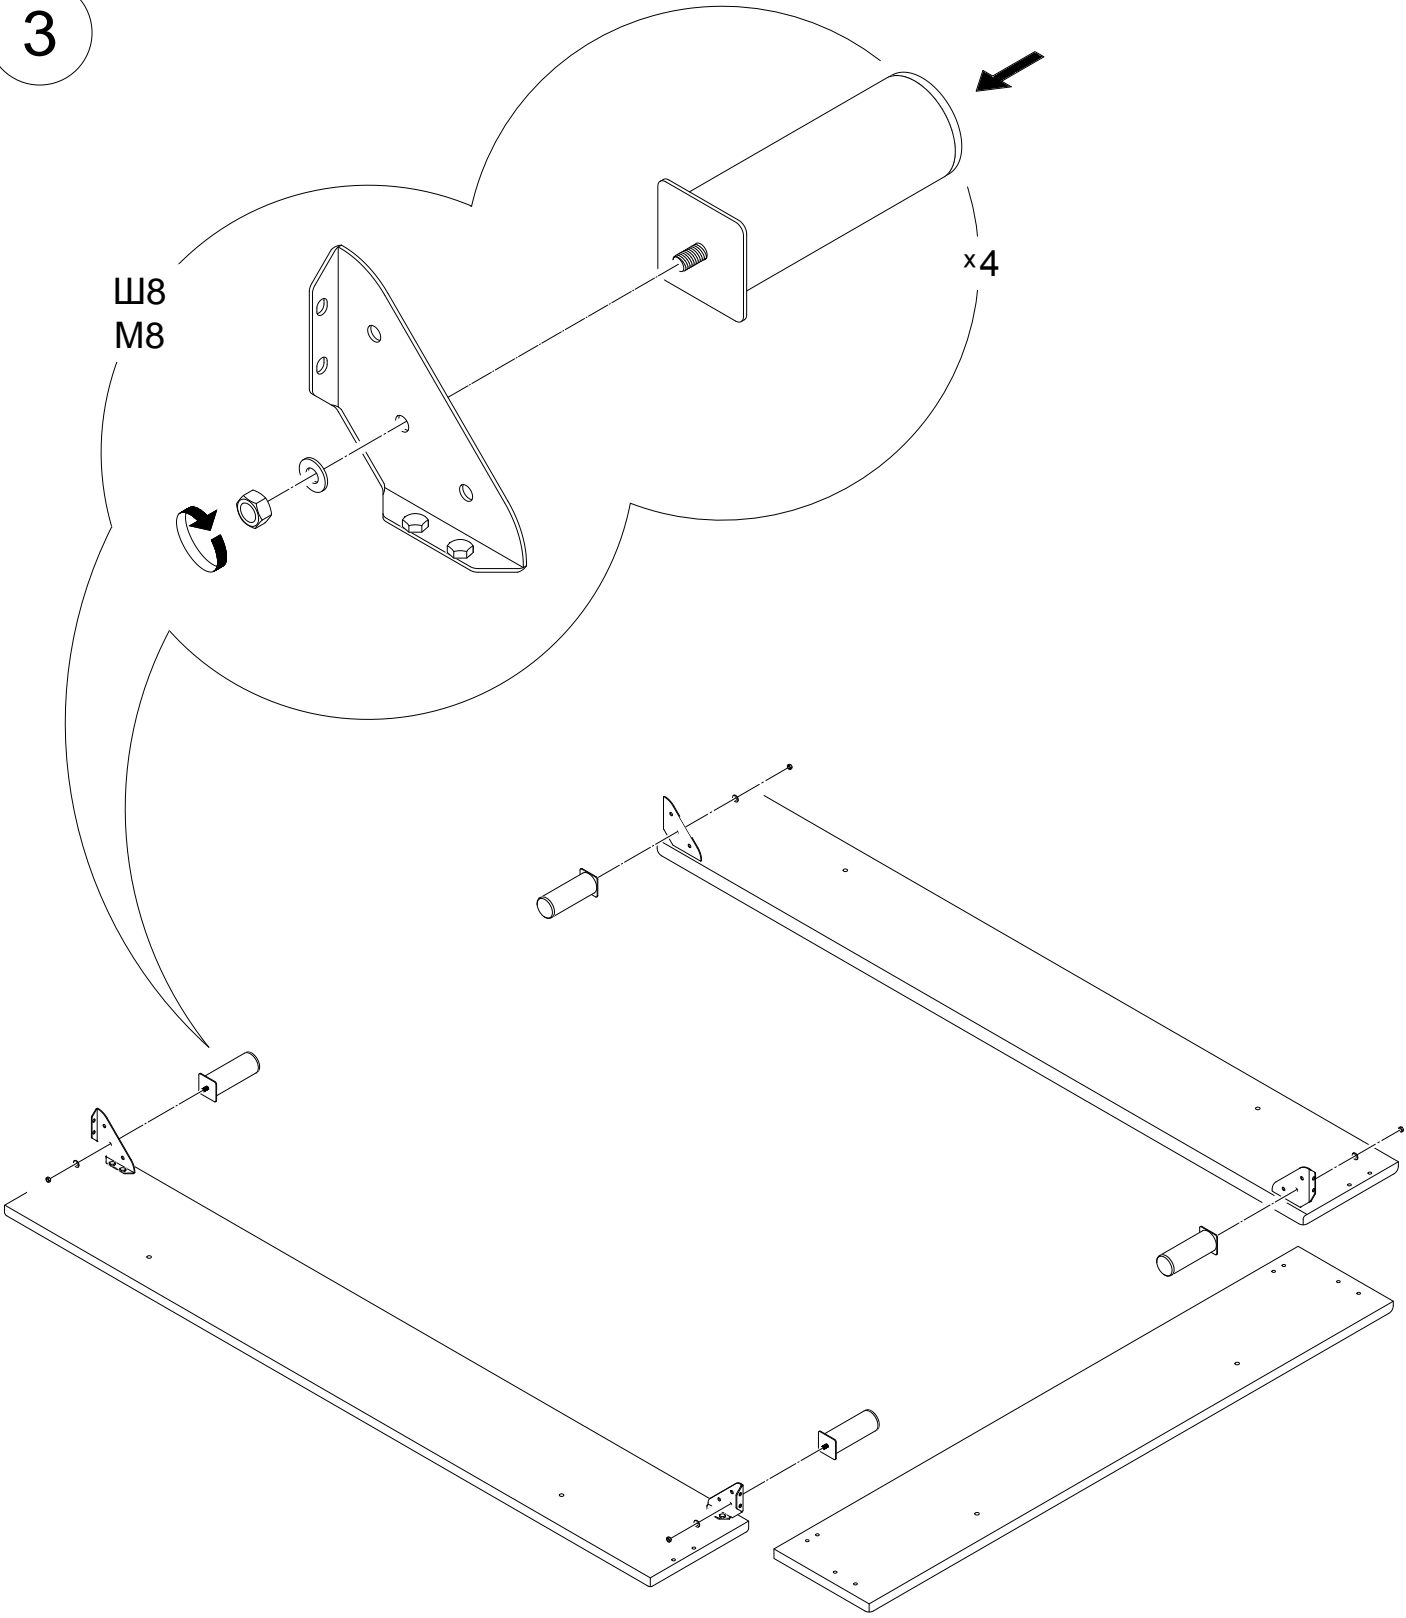



4

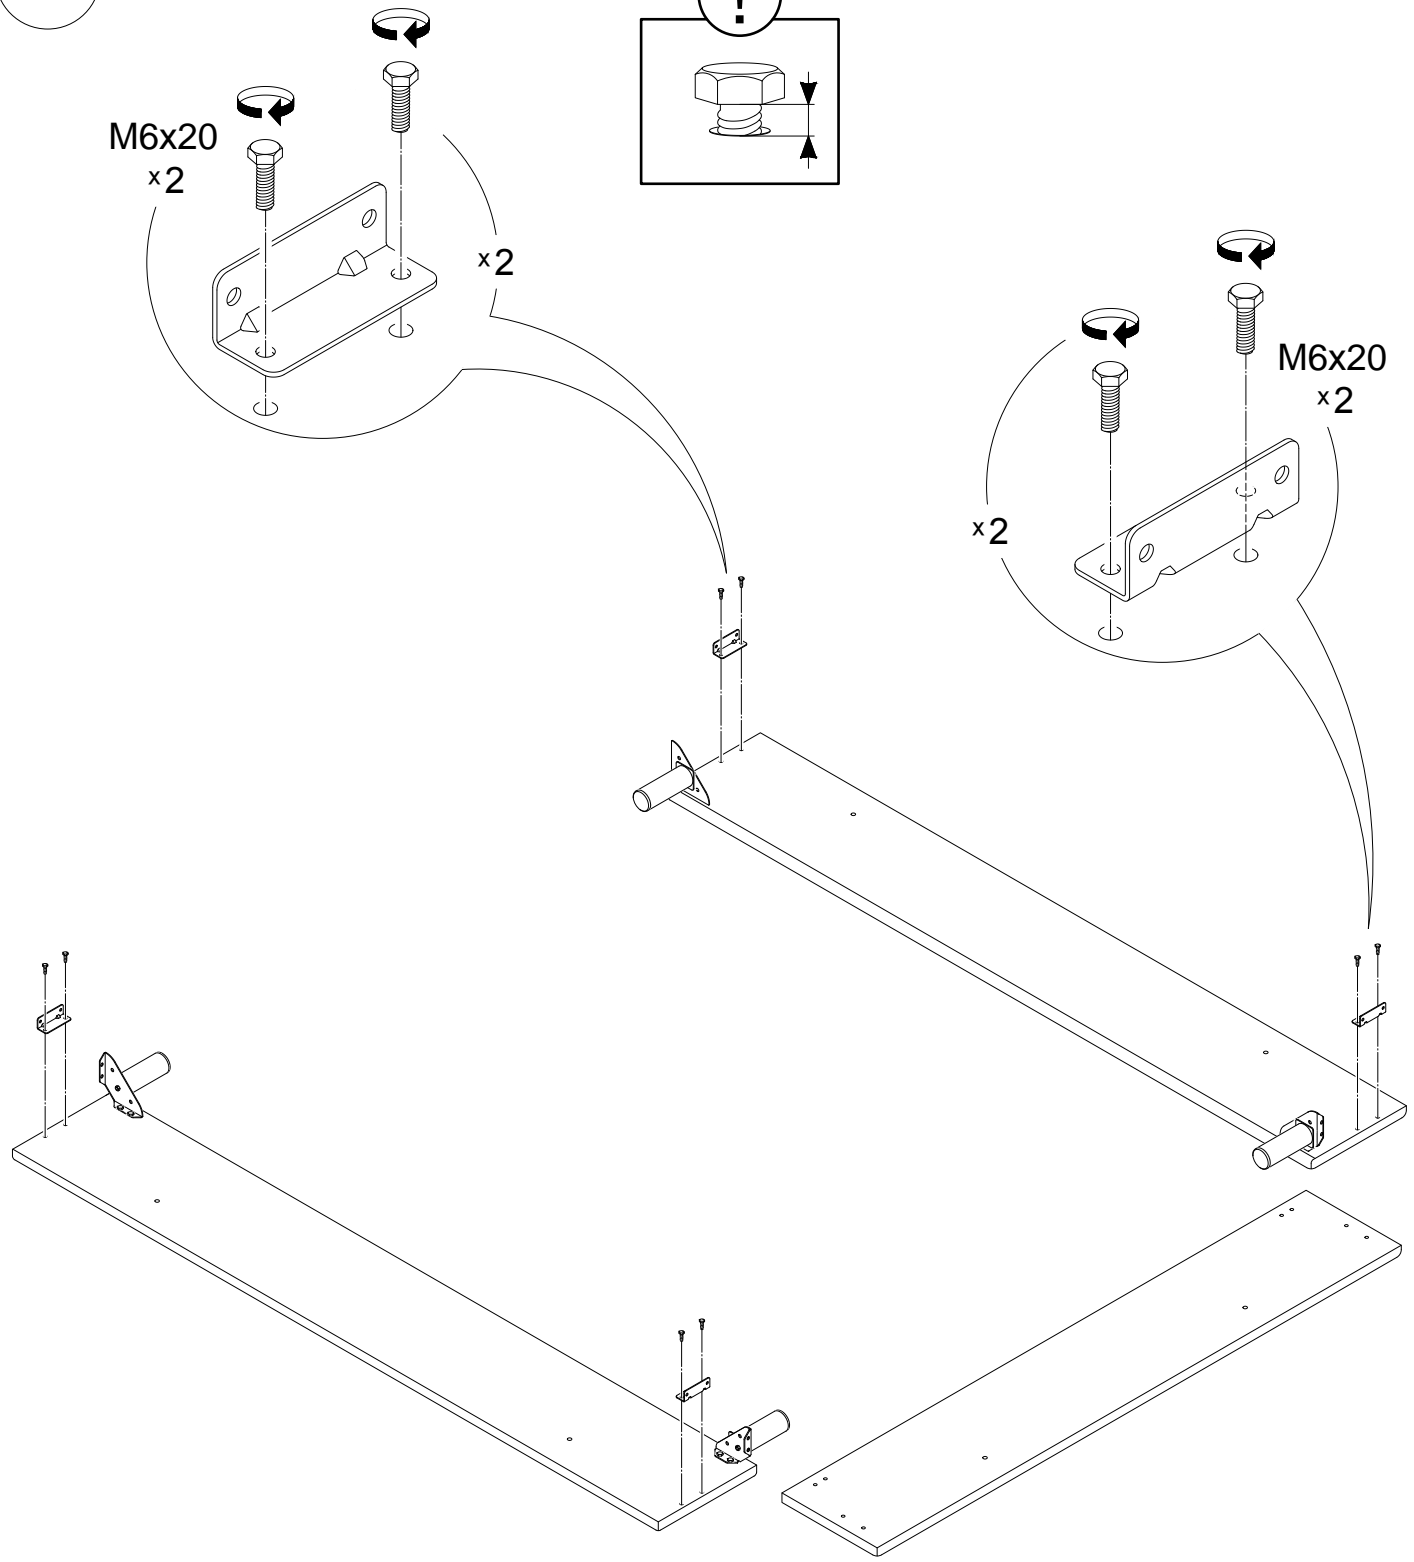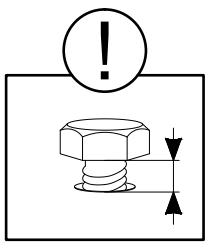



5

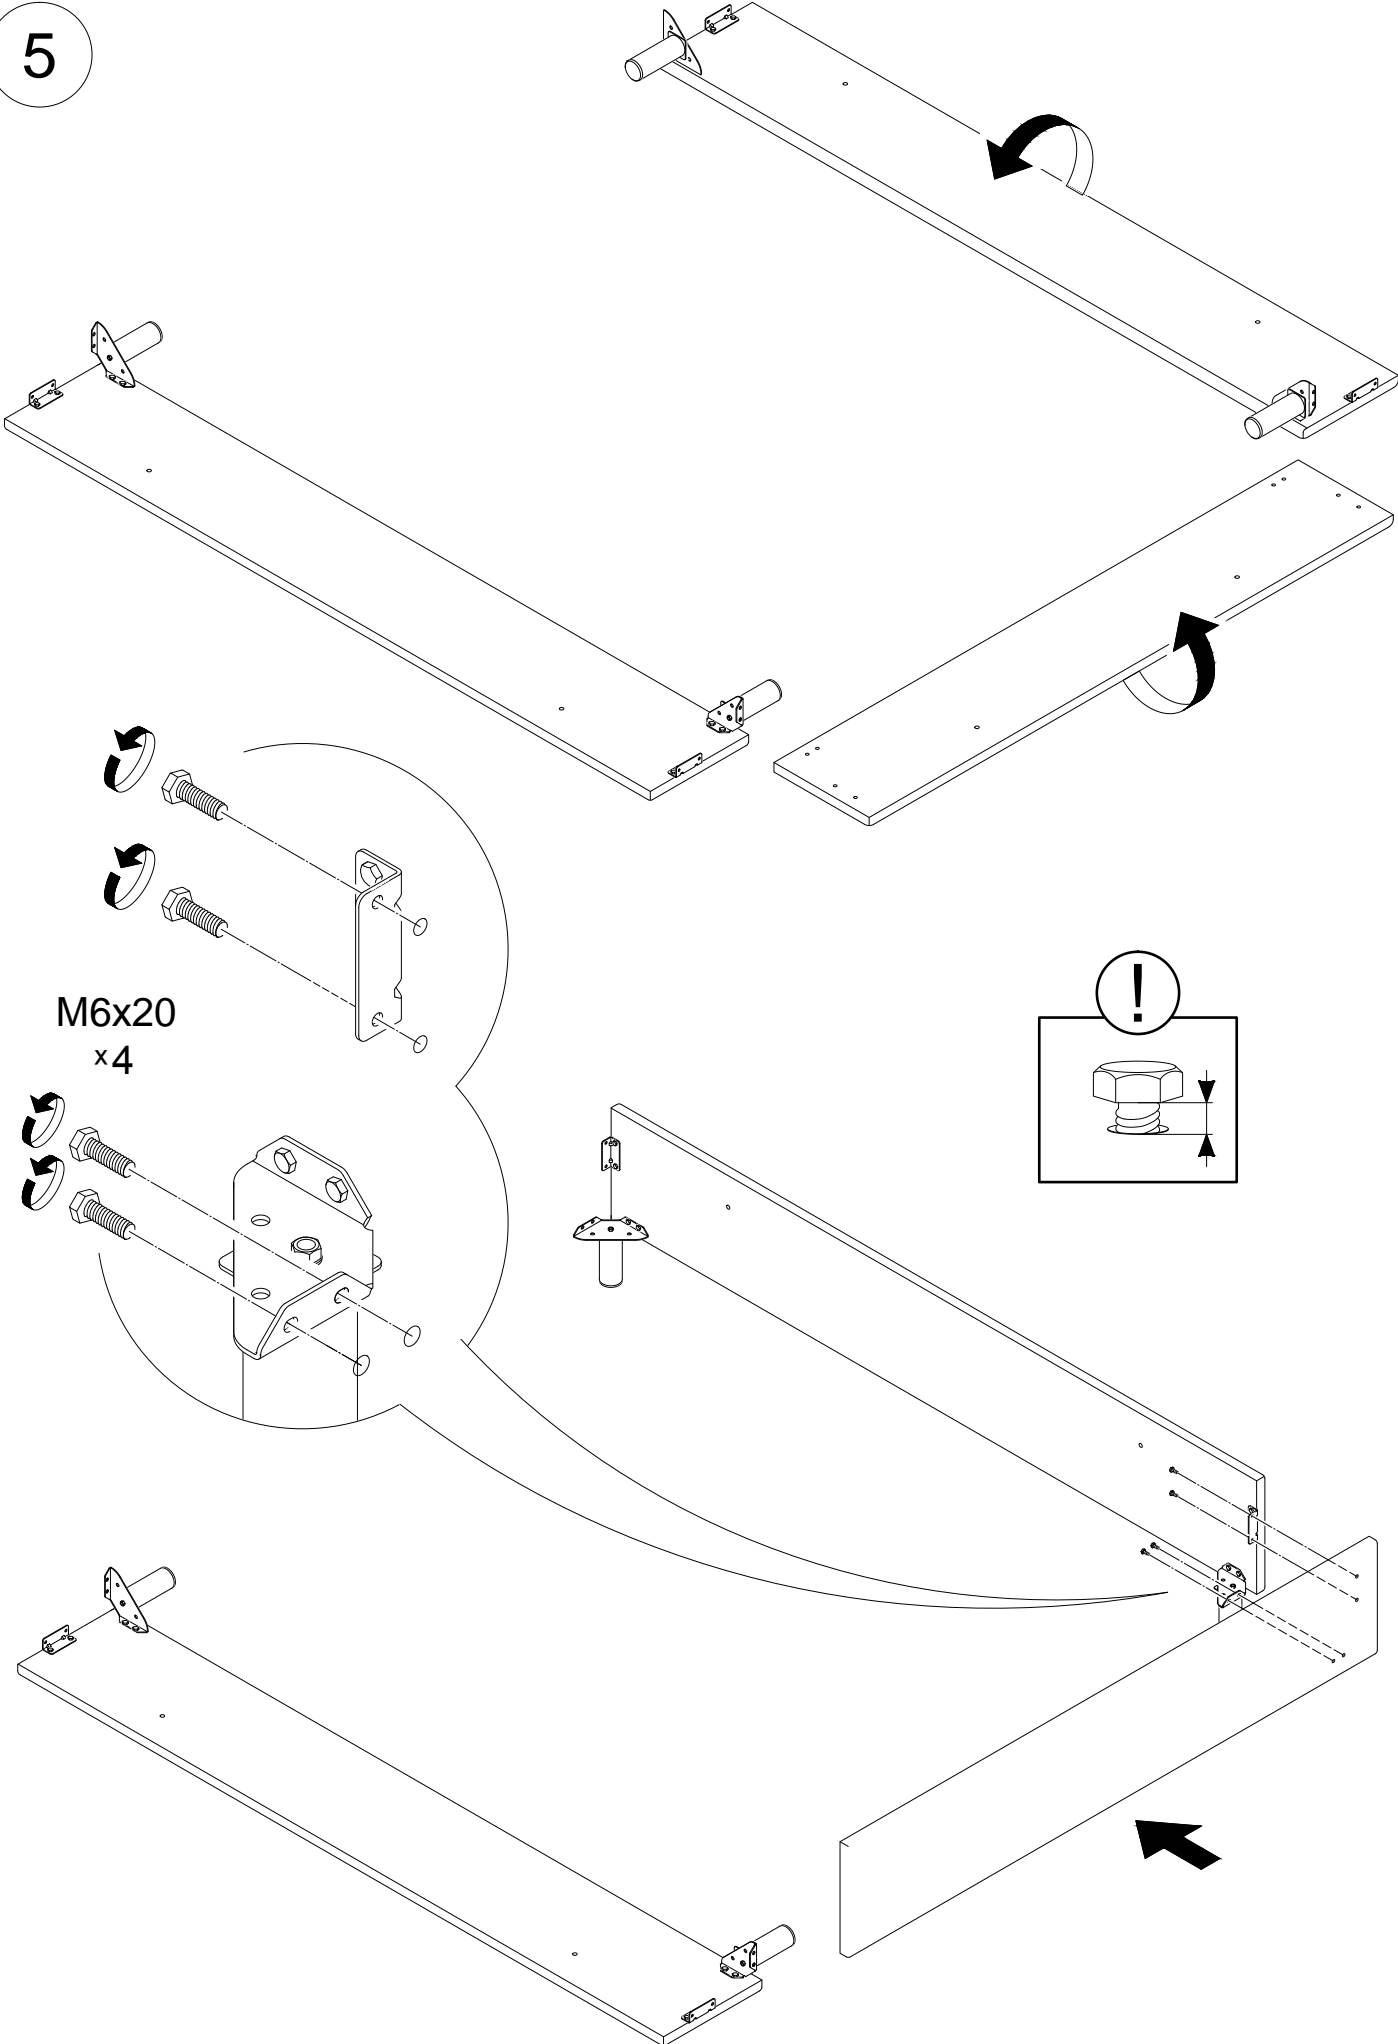



6

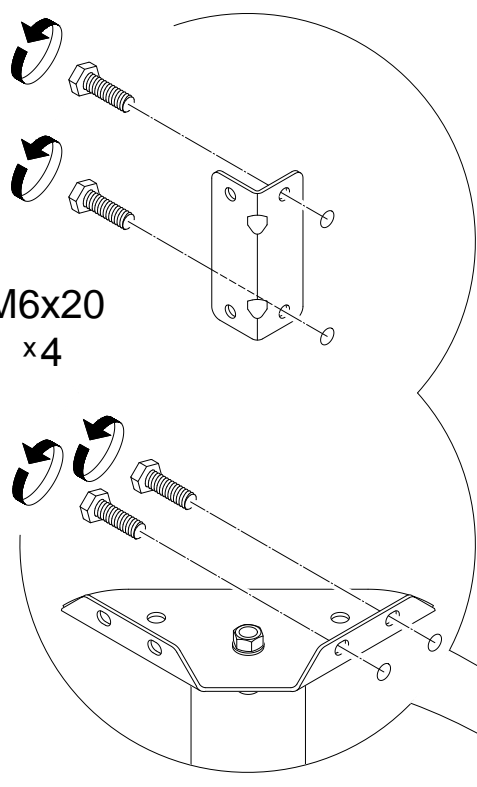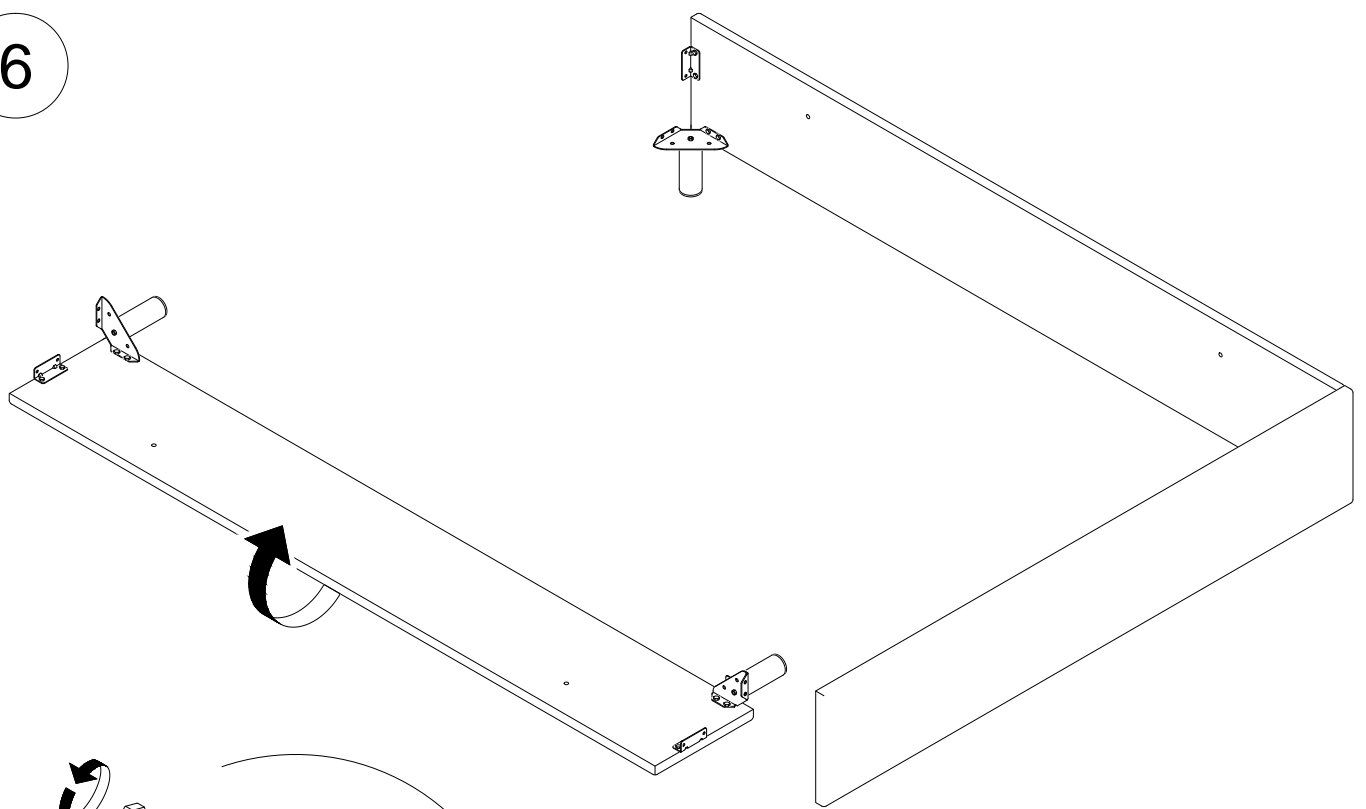



M6x20
x4

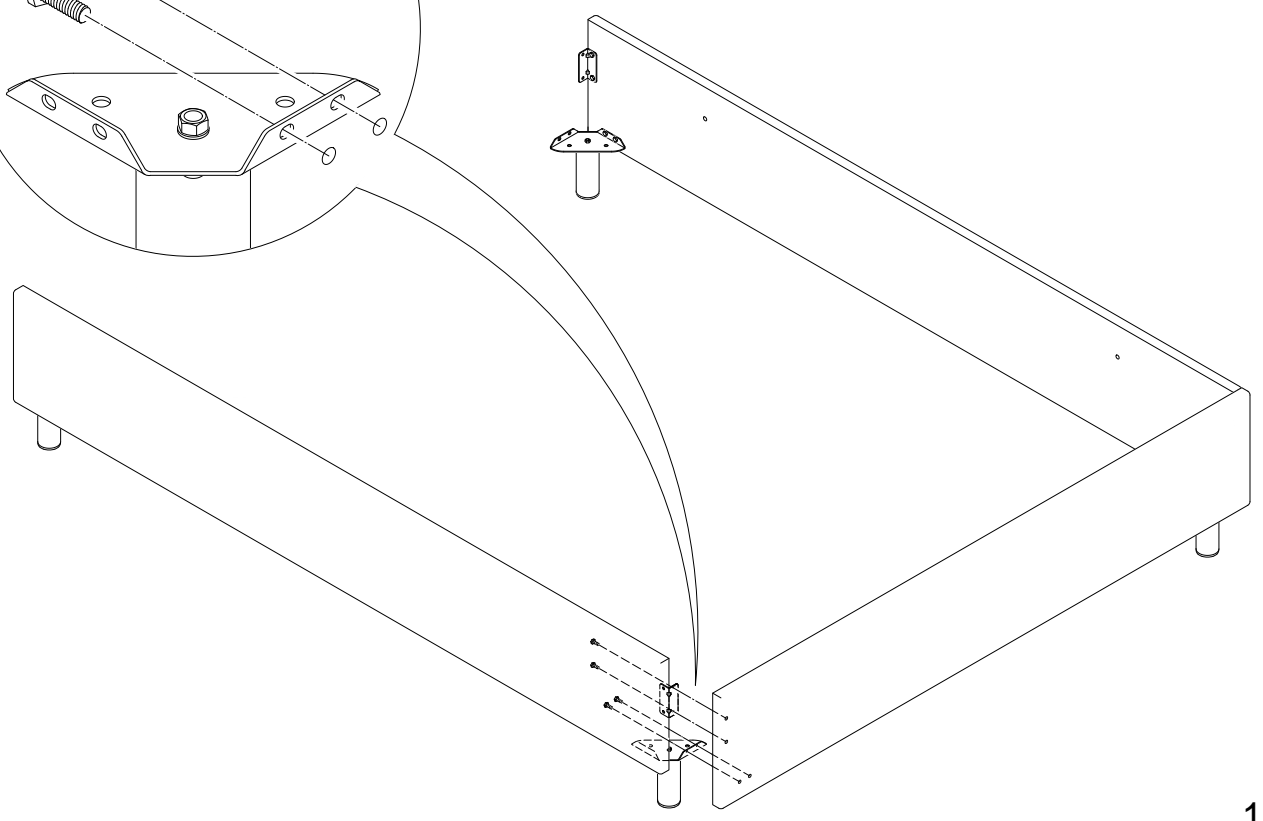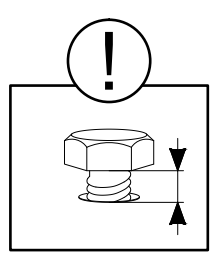


7

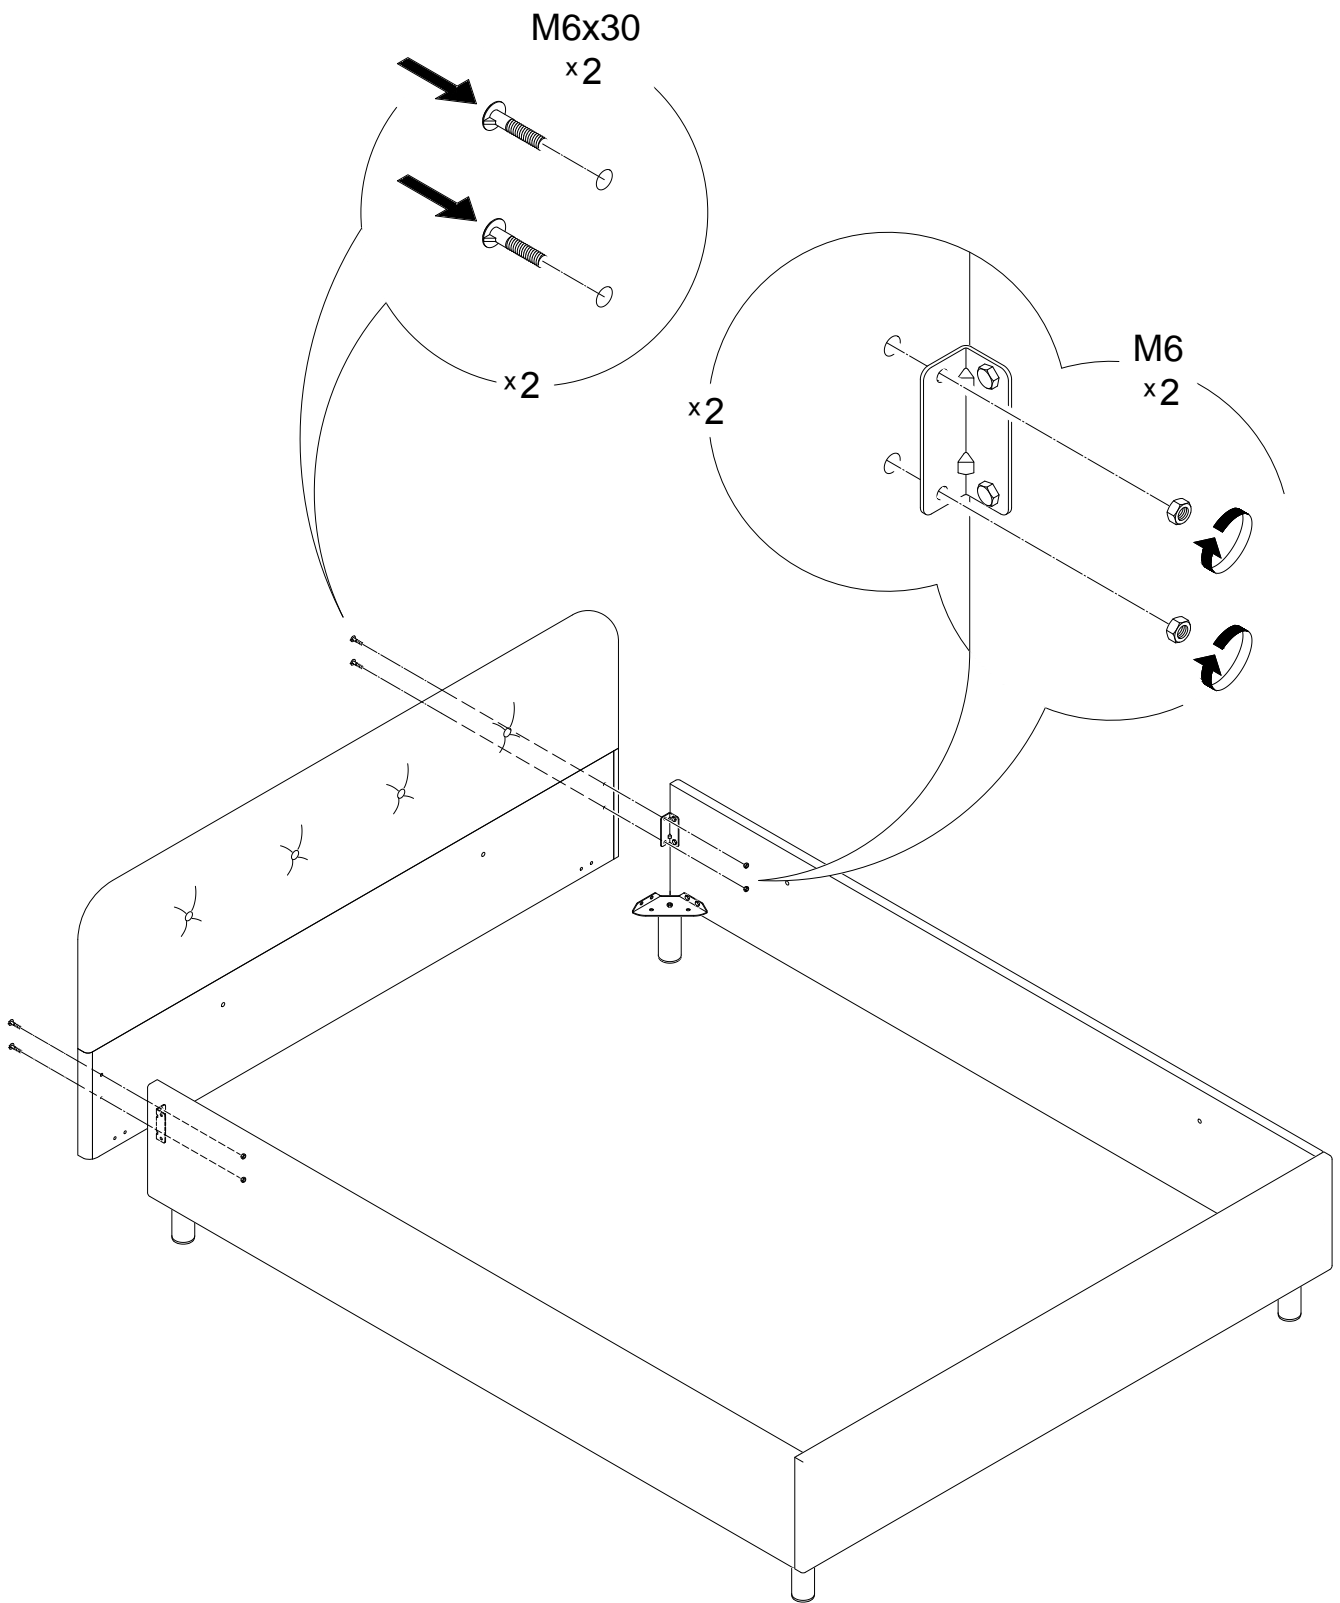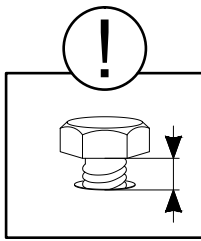




8

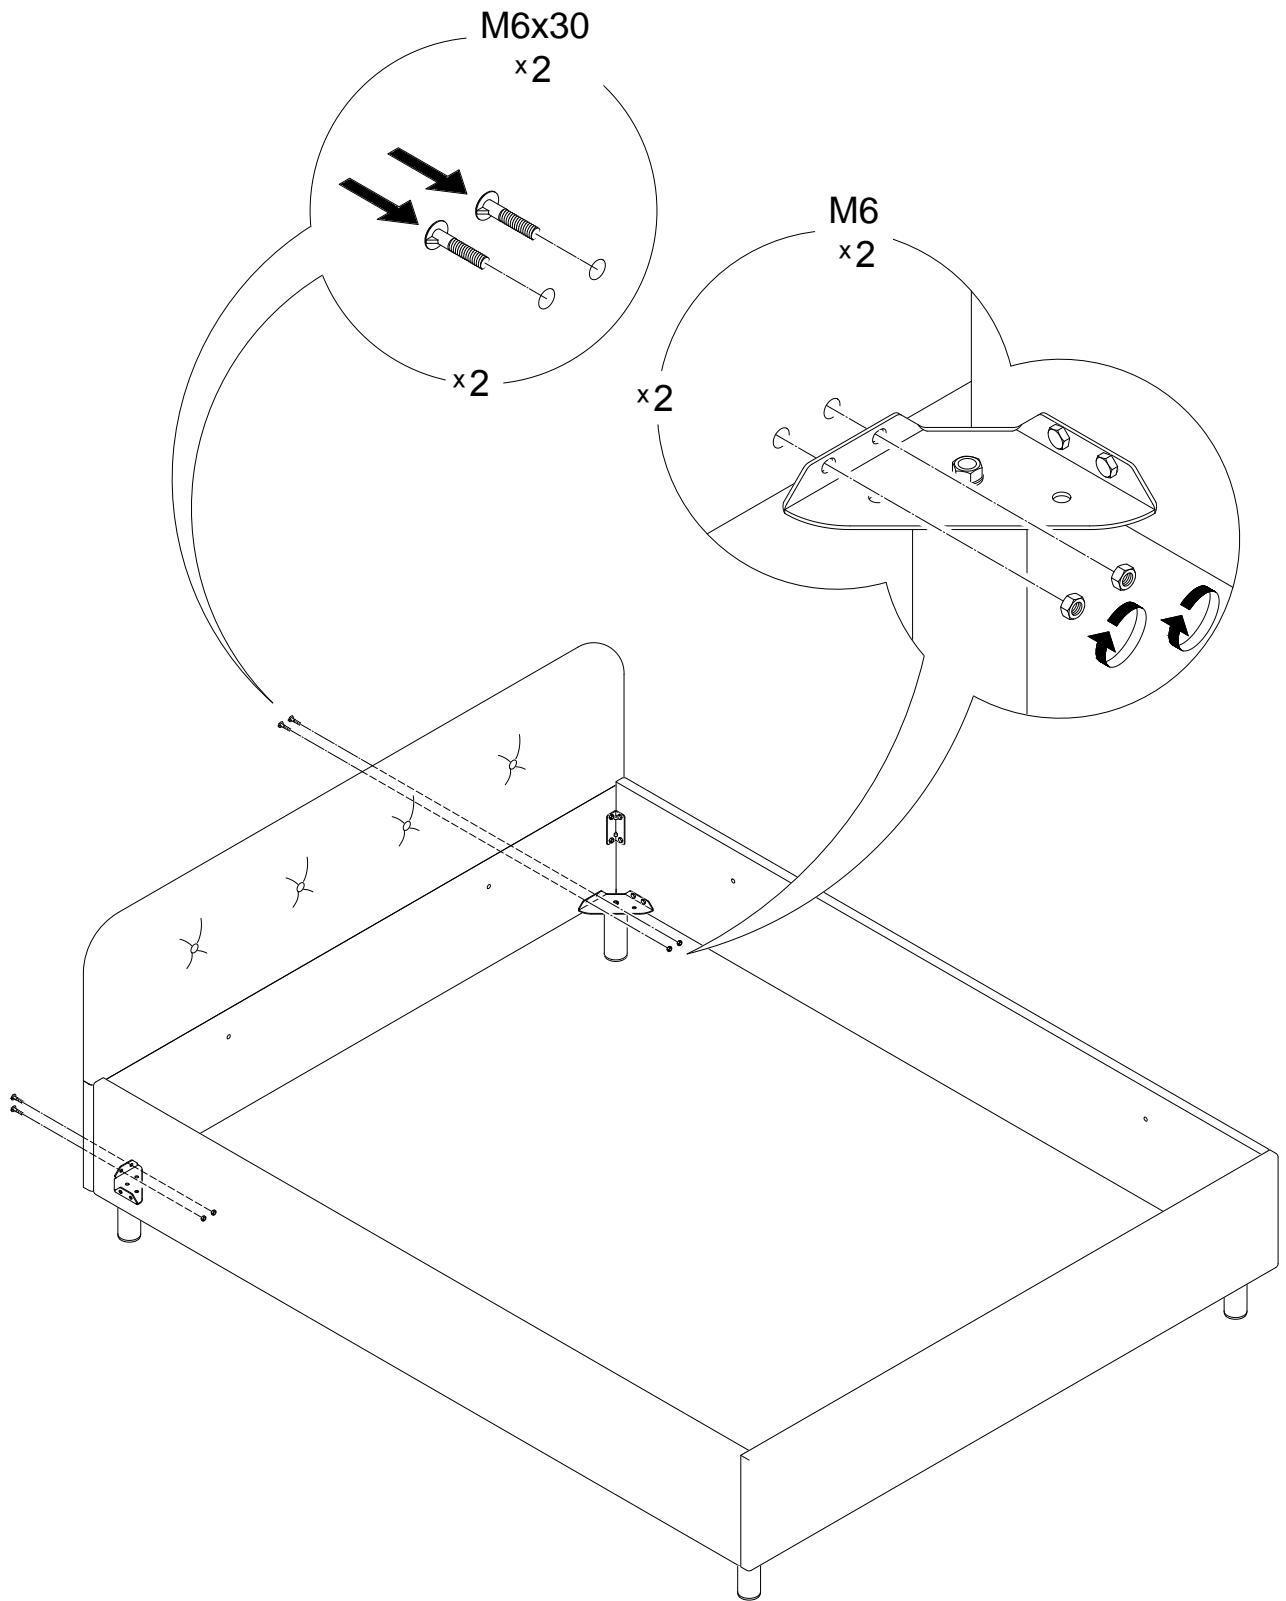
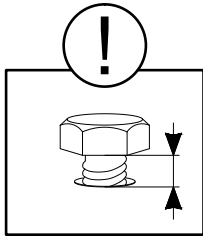


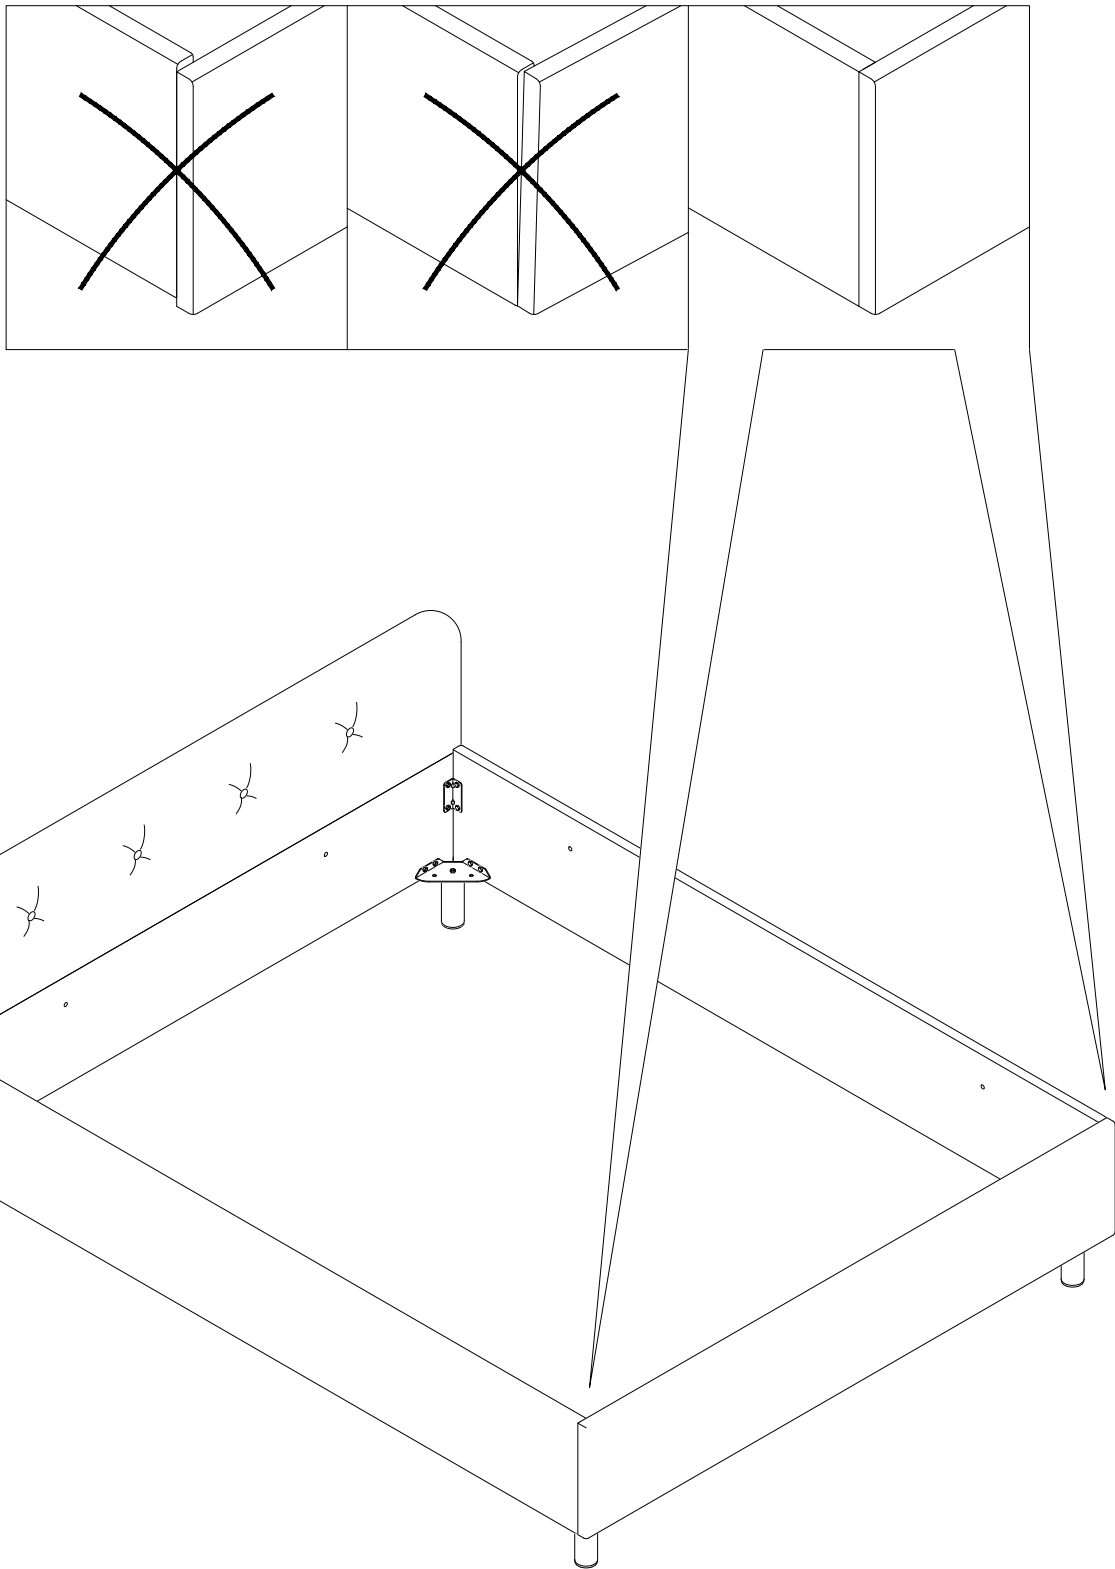


- 2
- 4
- 5
- 6
- 7
- 8

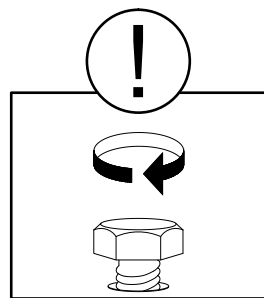

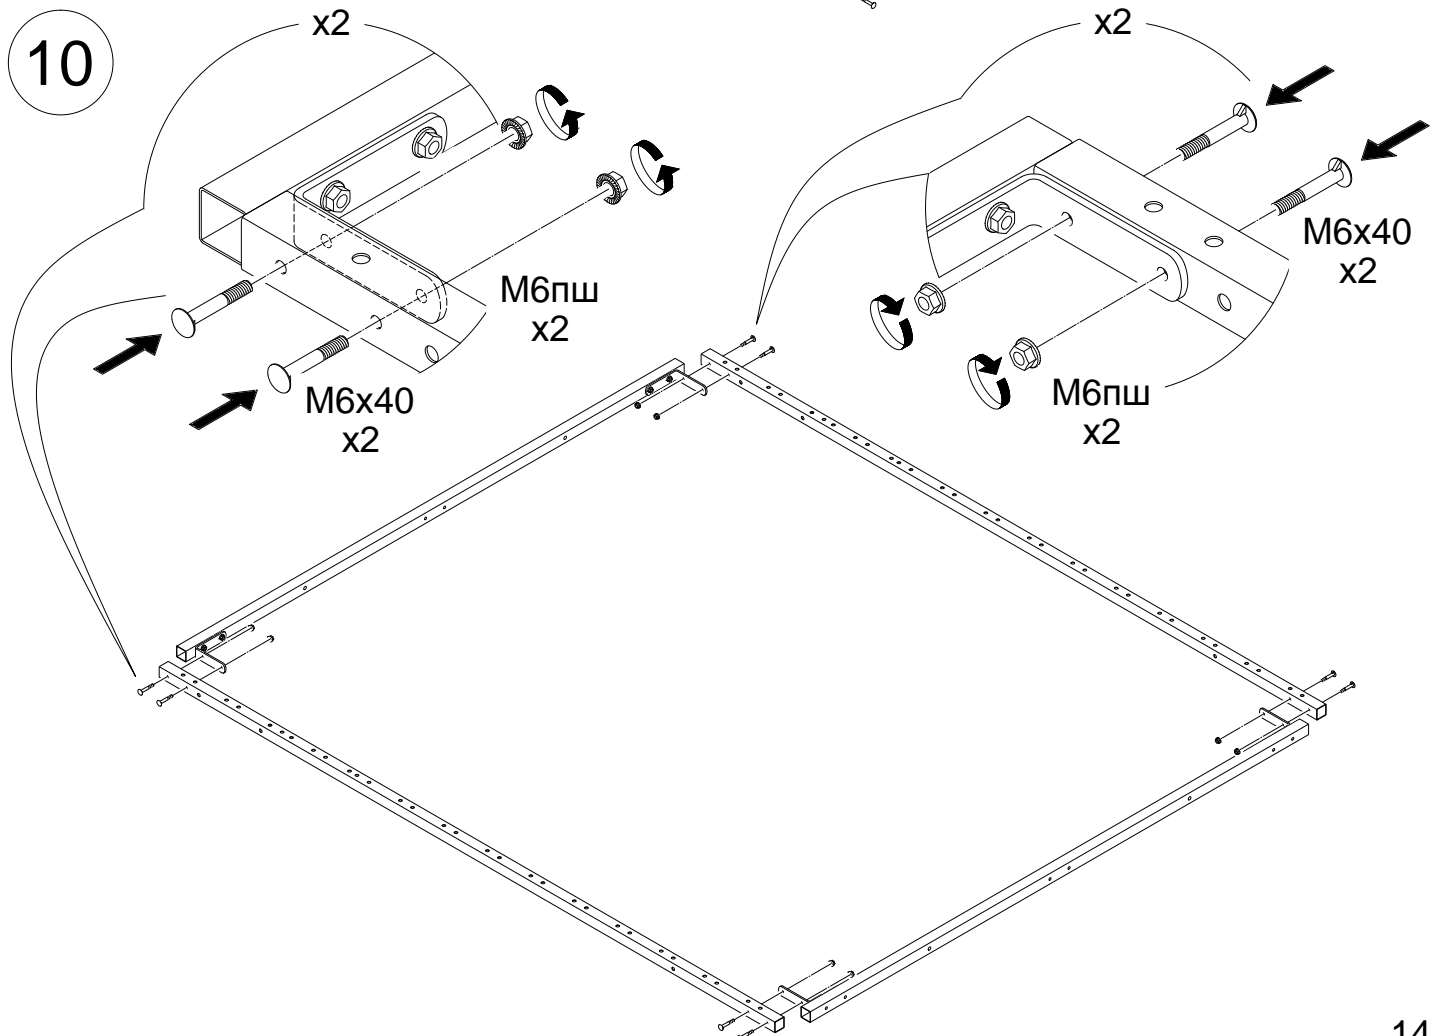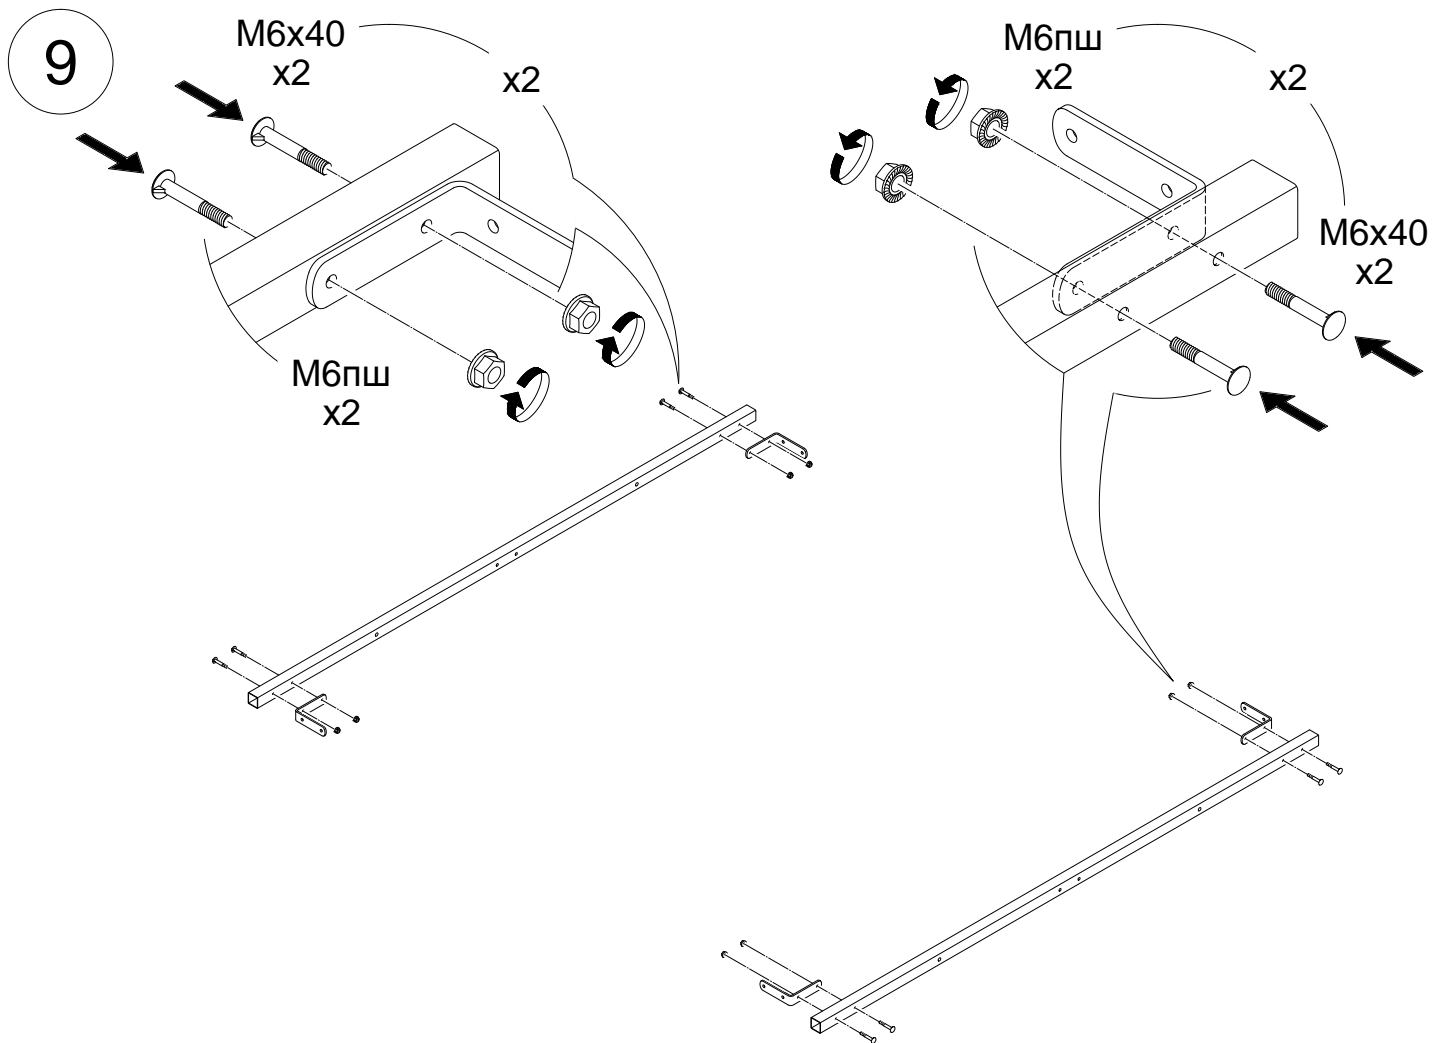


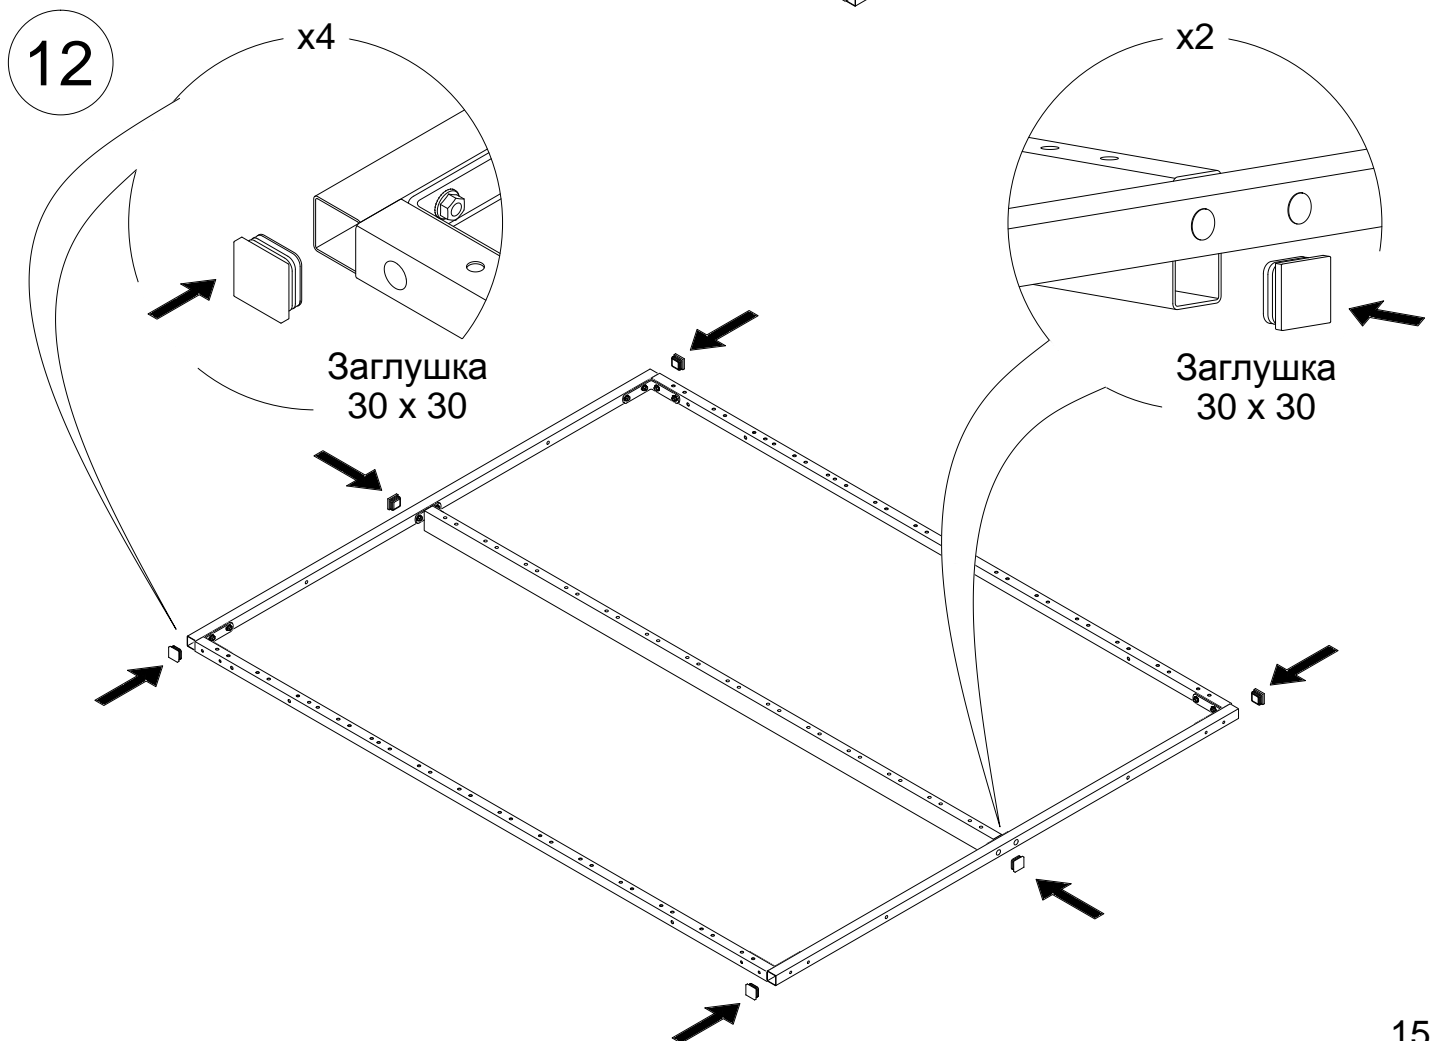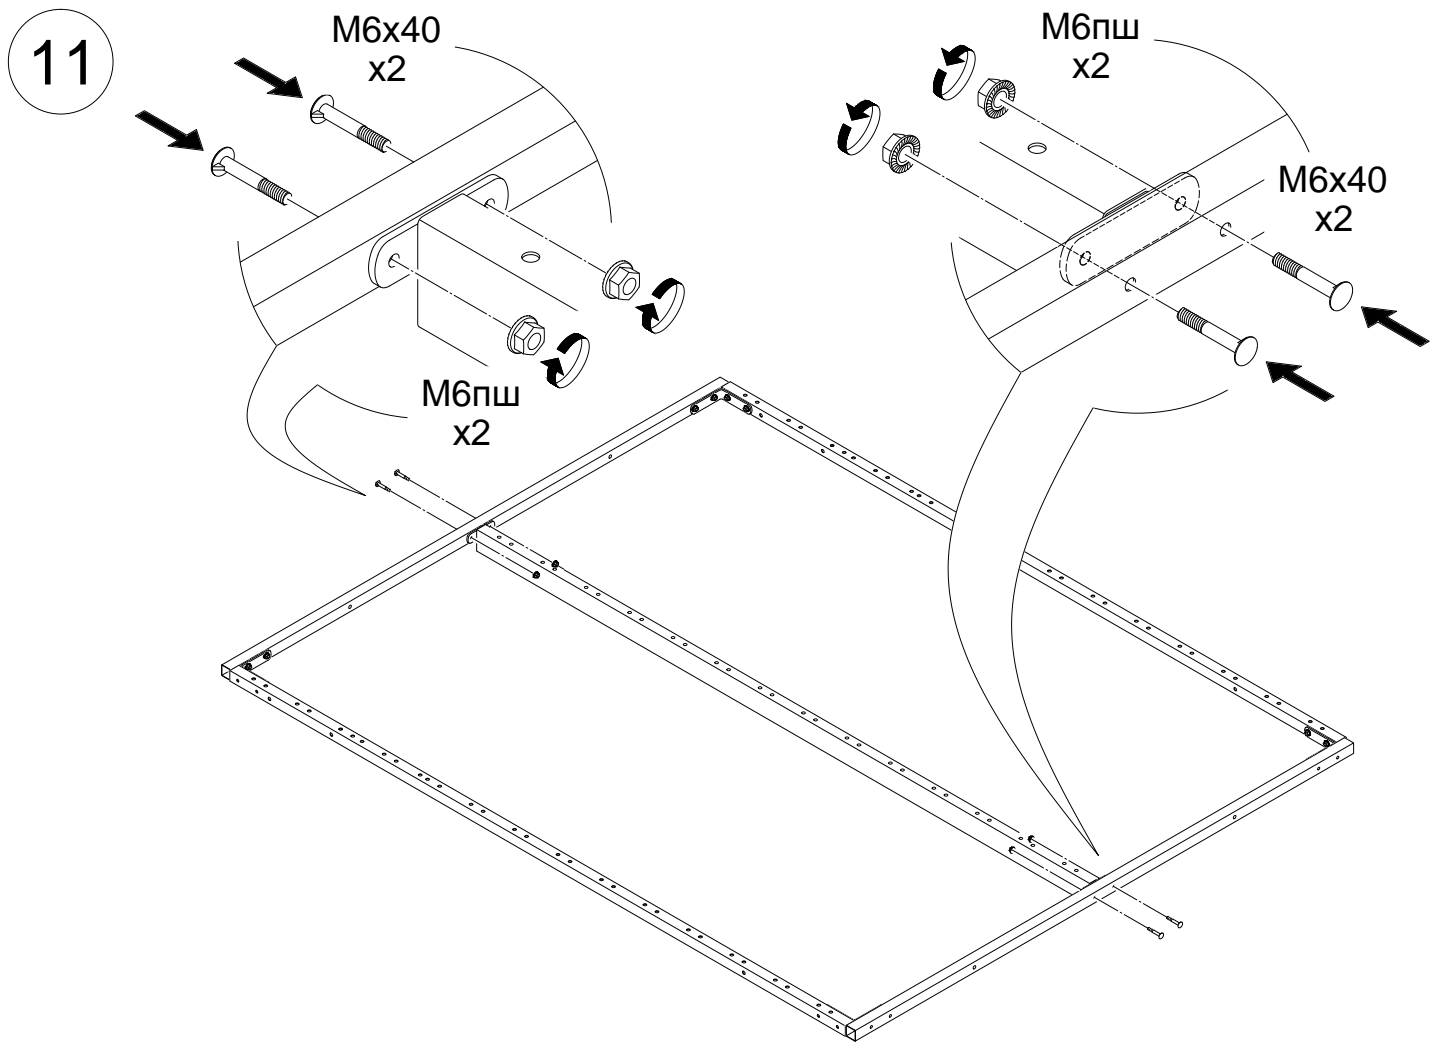


13

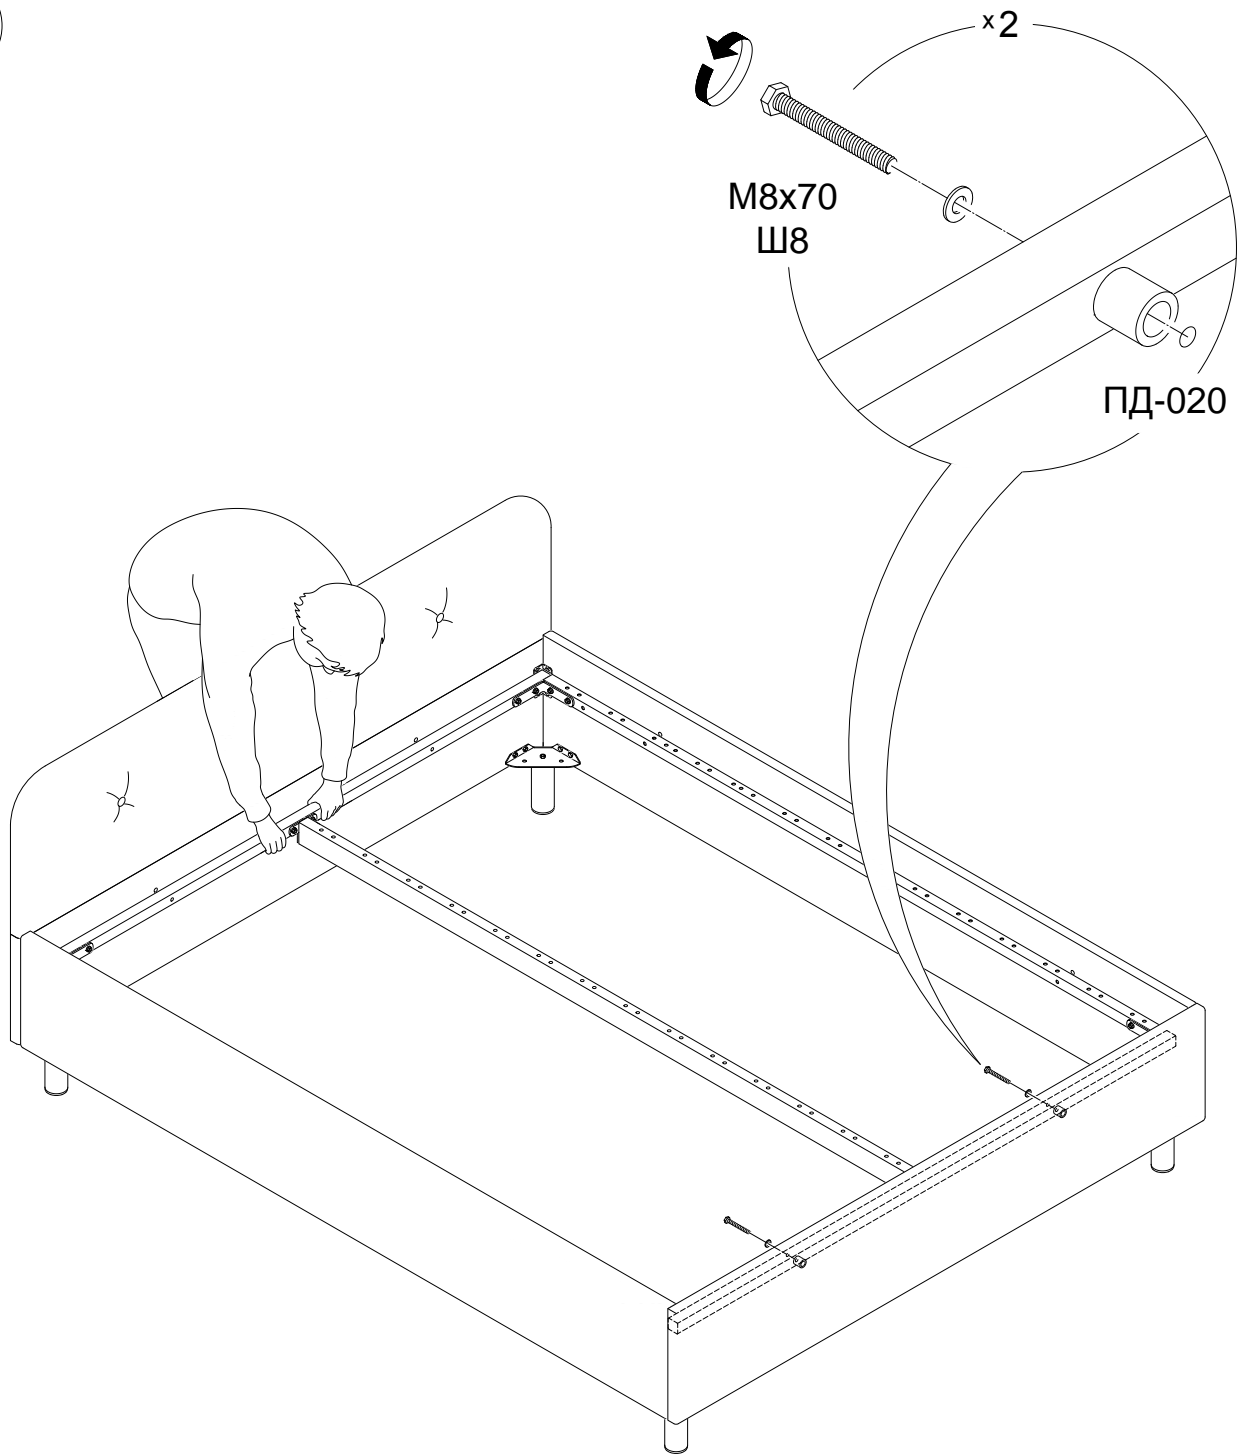


14

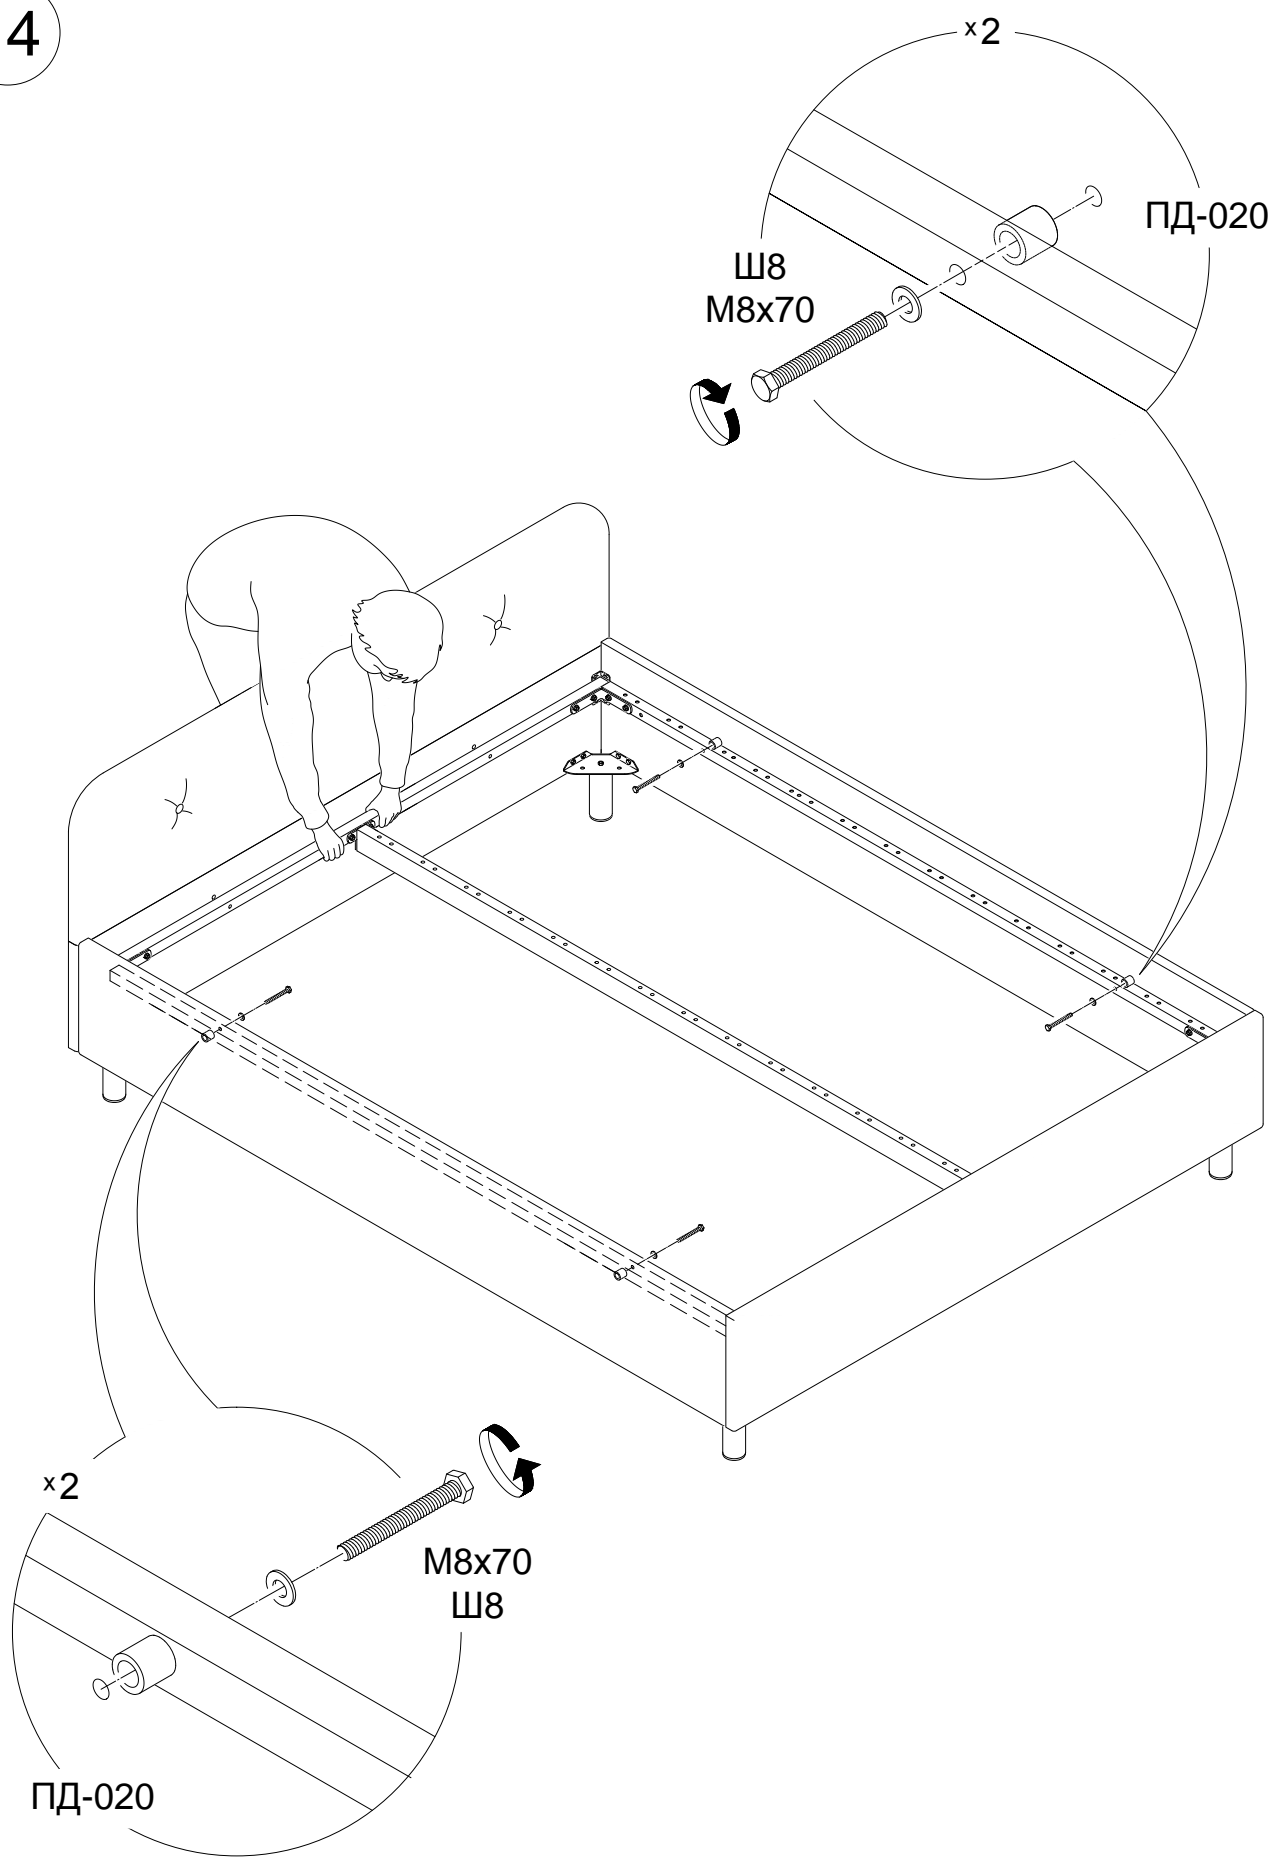


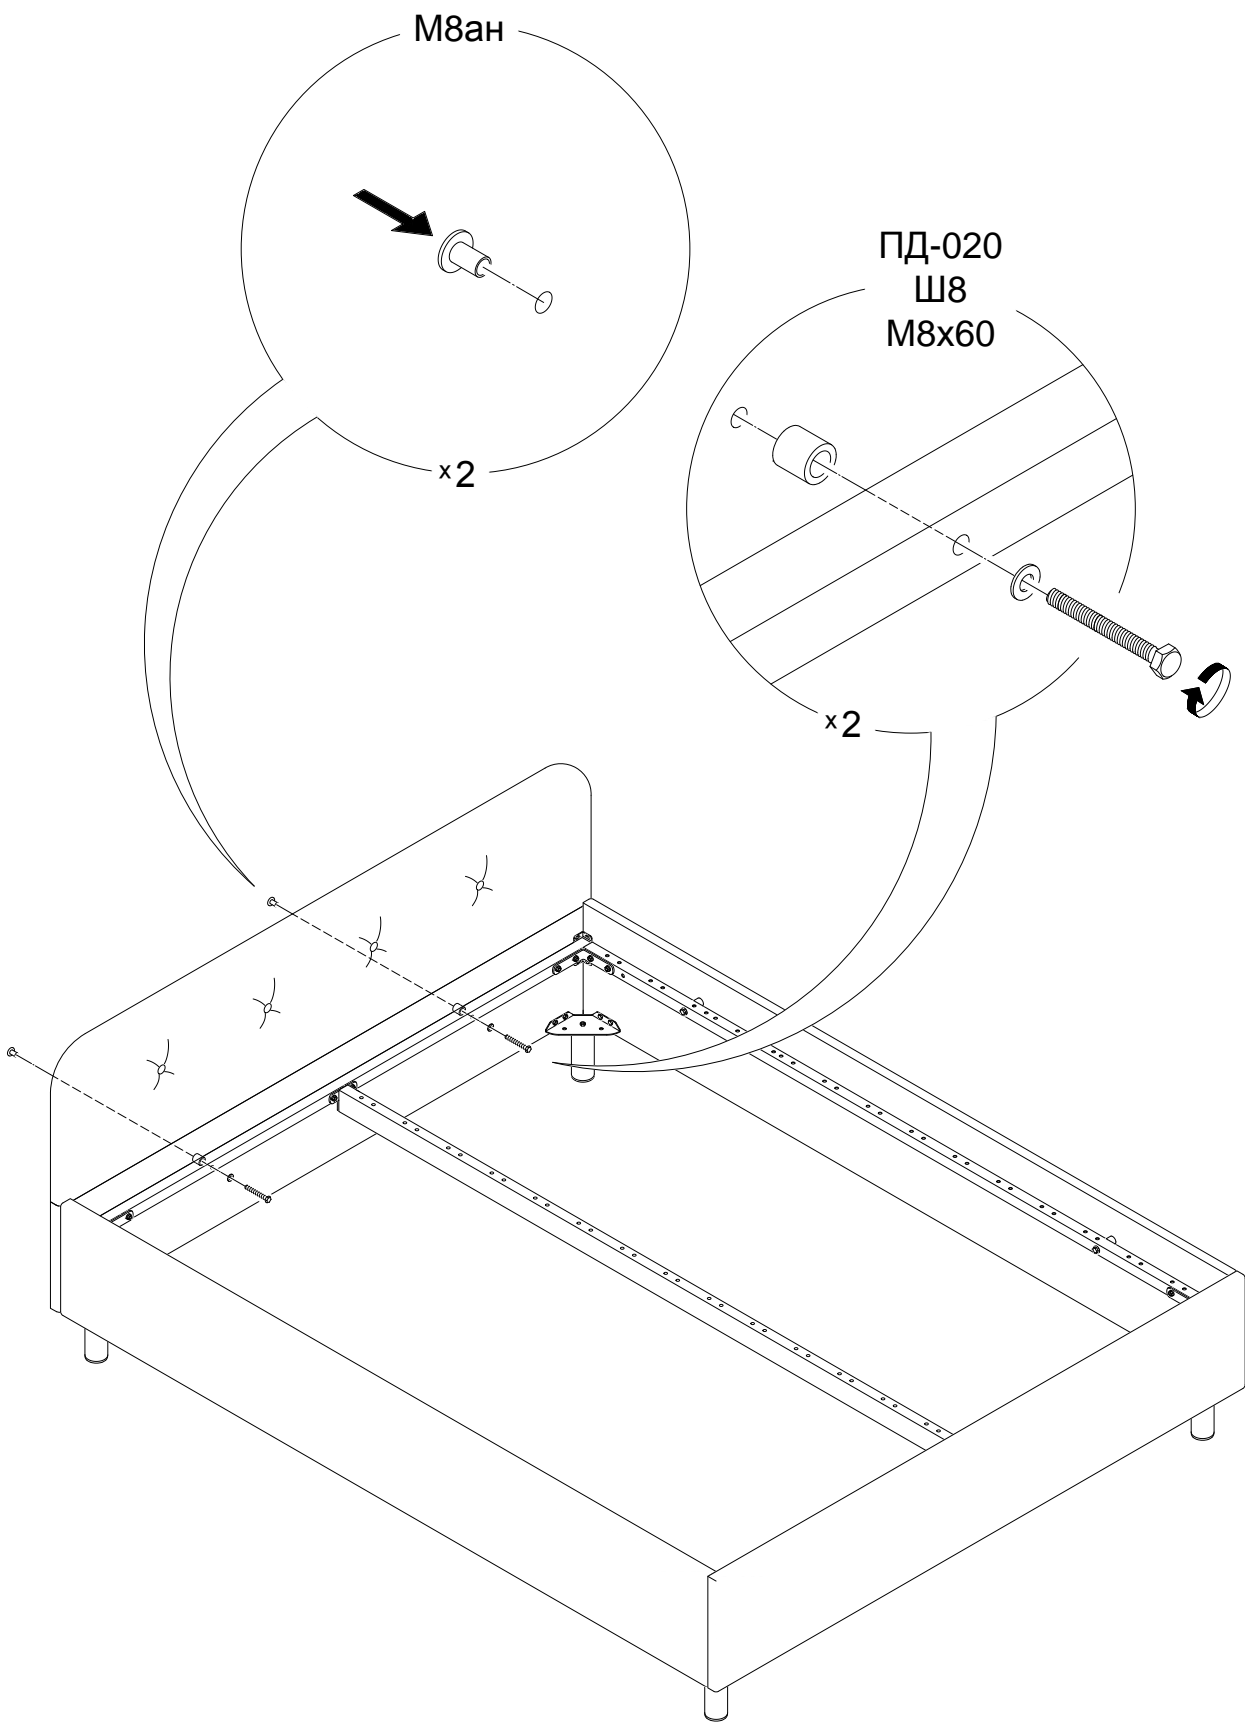


16

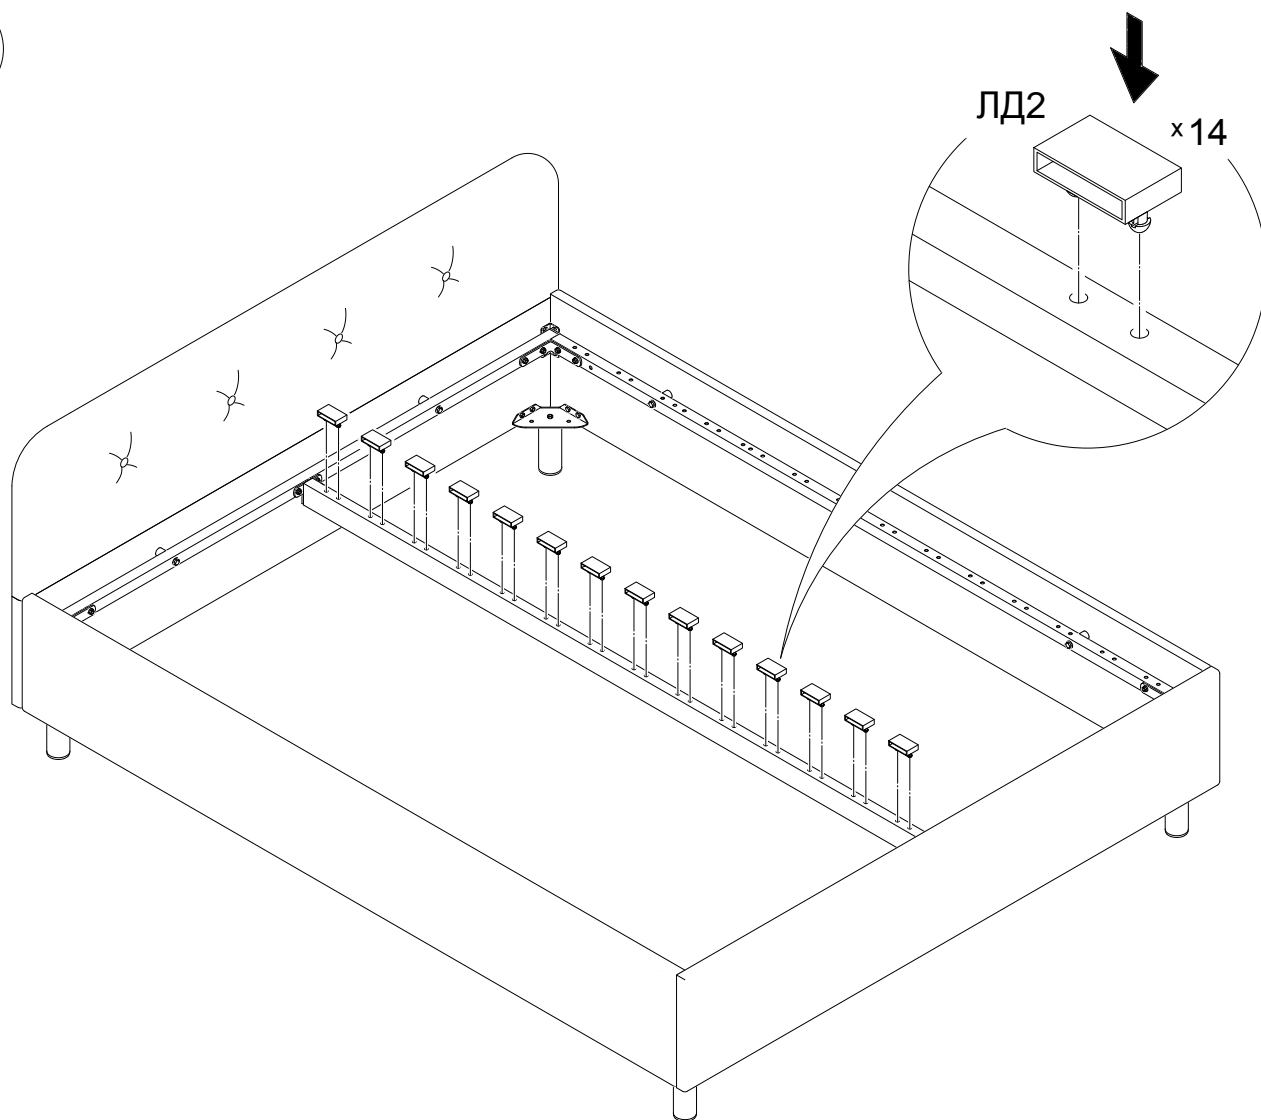

17

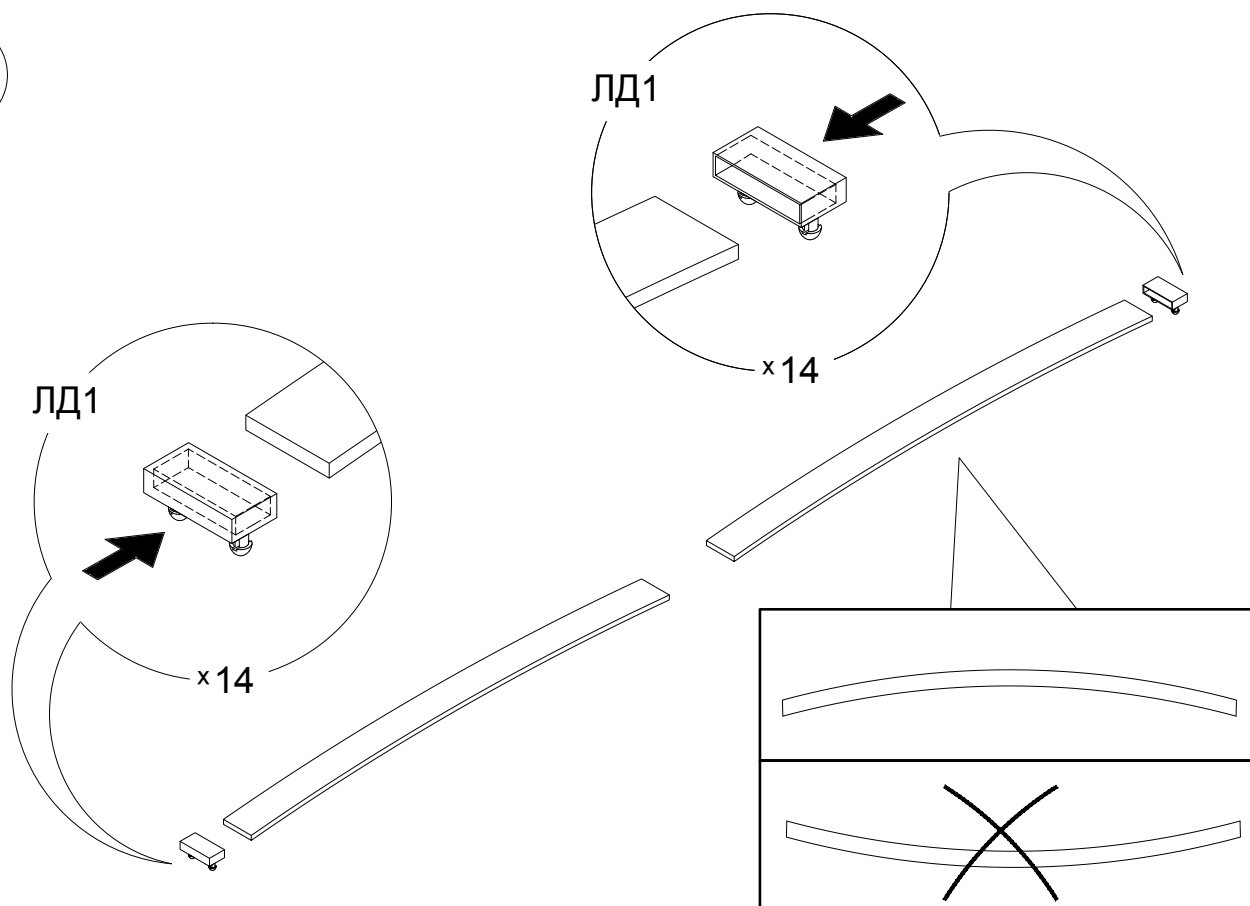

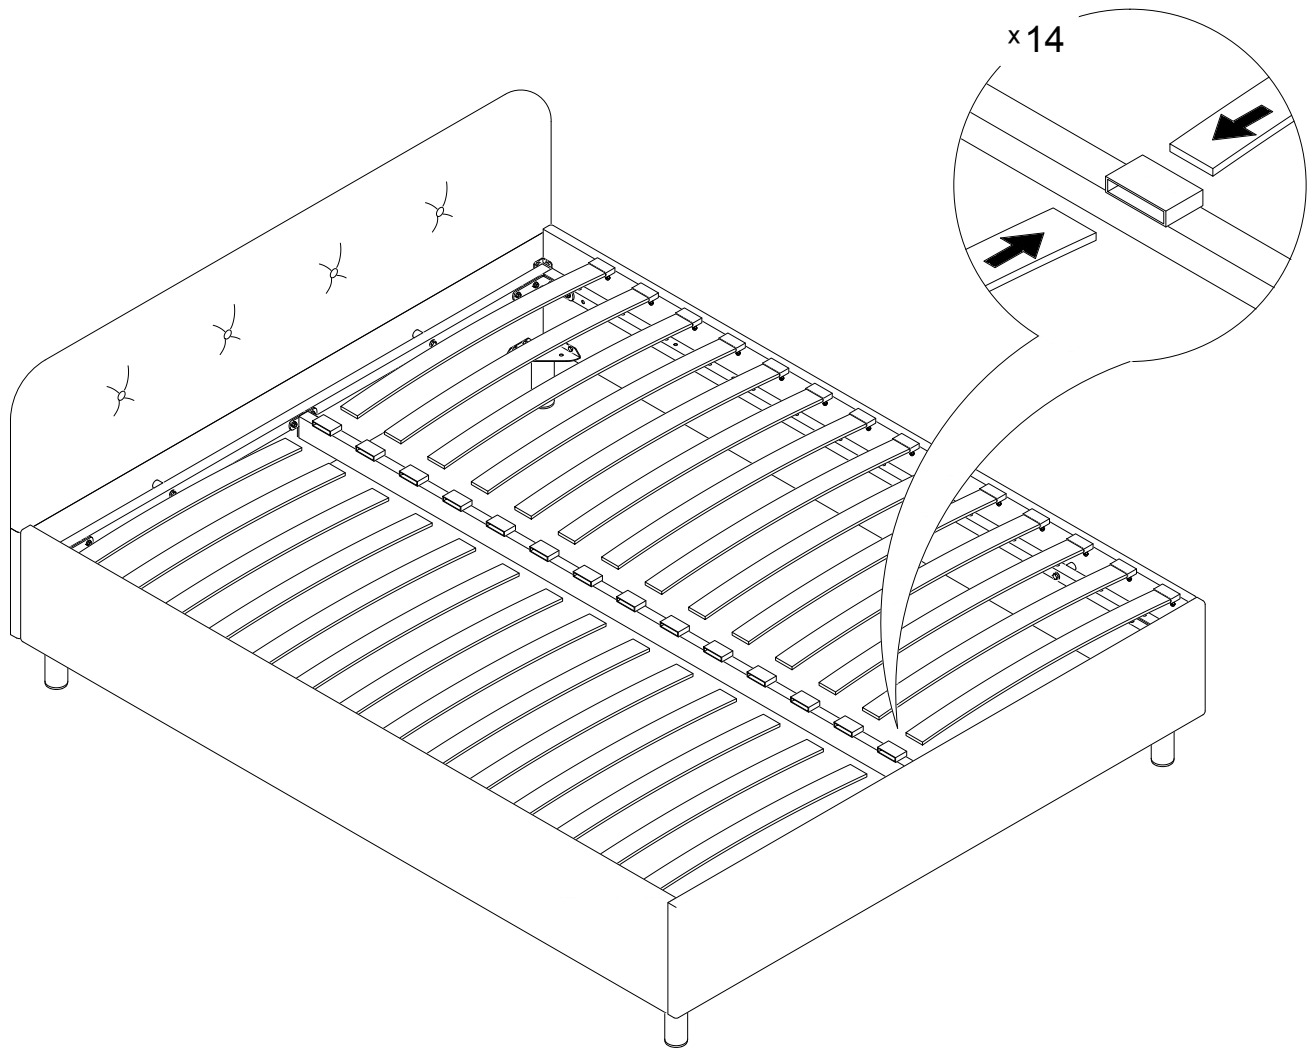

19

