

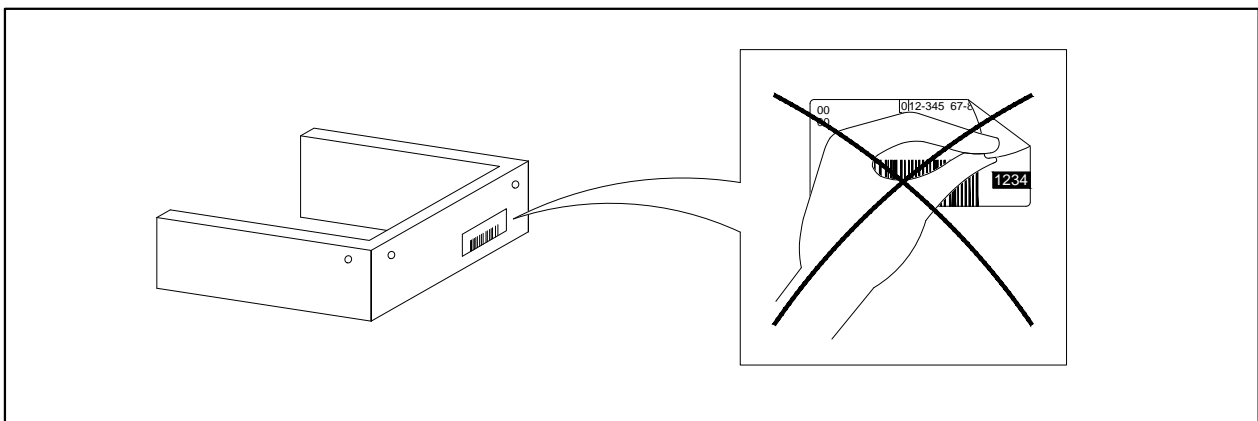
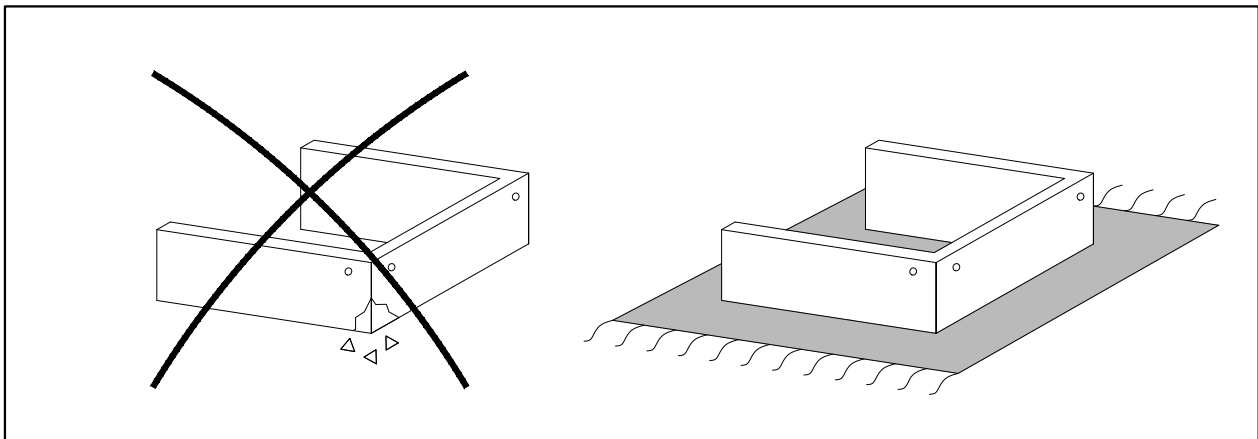
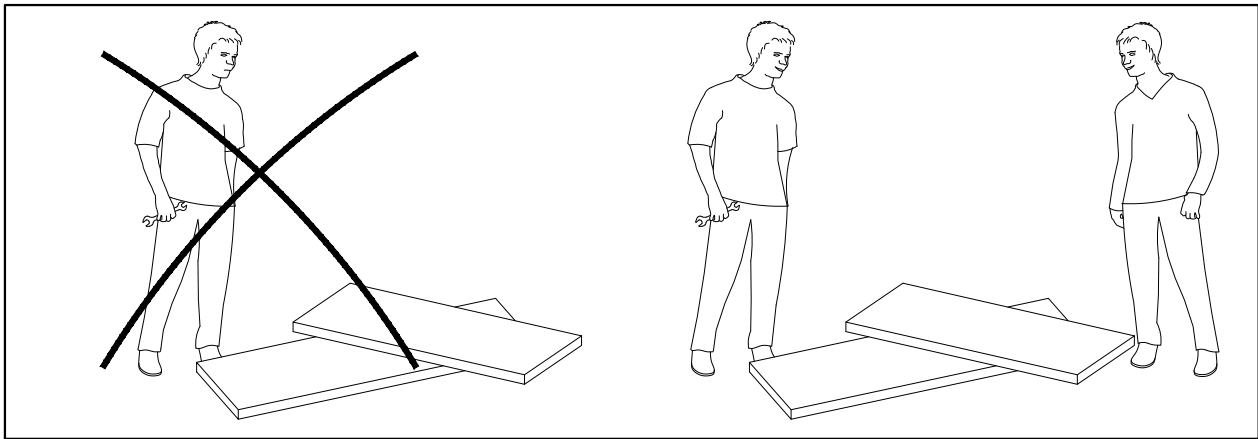


Инструкция по сборке


Кровать без подъёмного механизма

Дизайн 1230

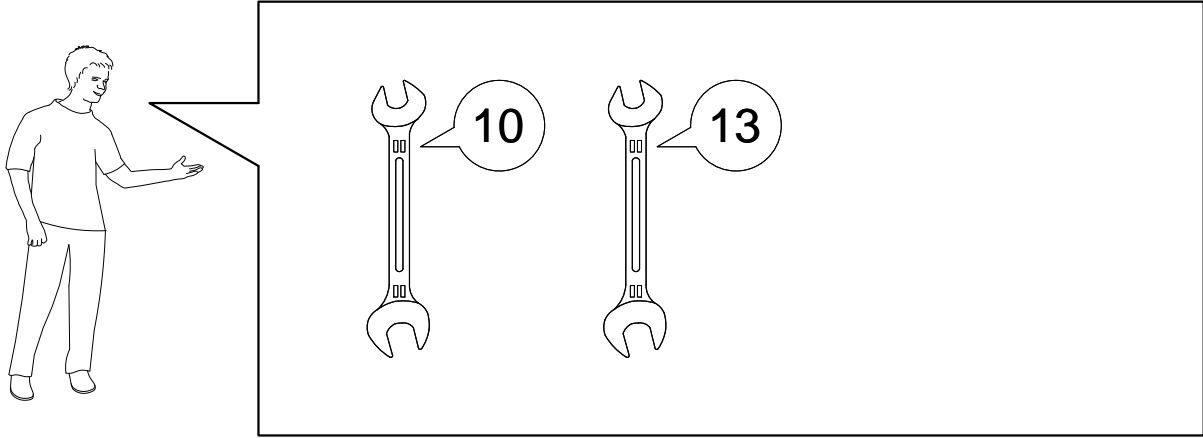


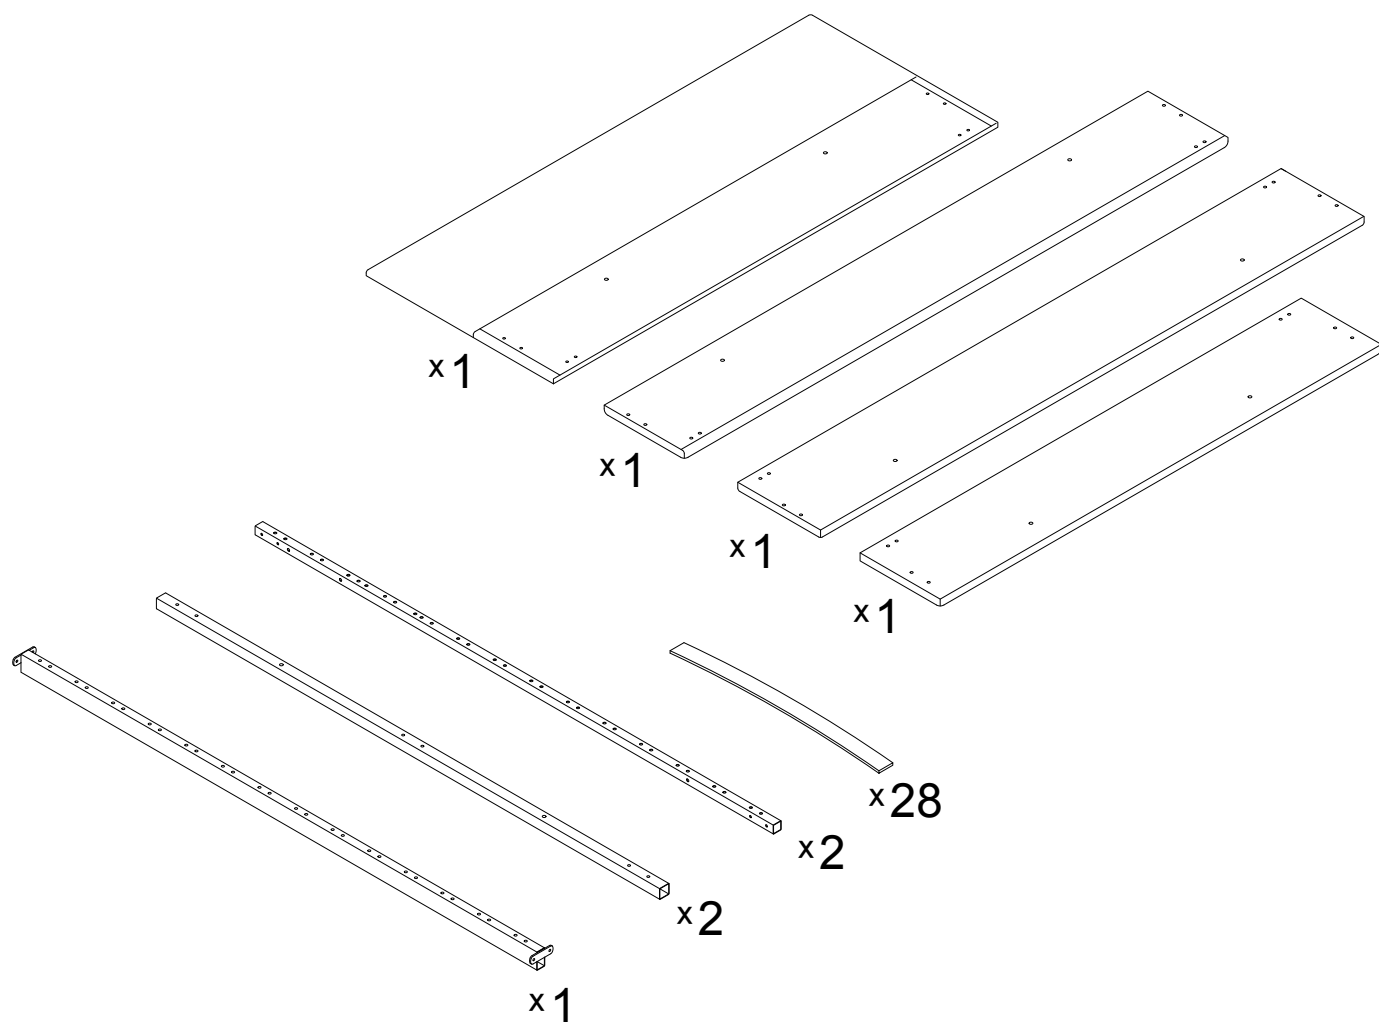


M 1:1

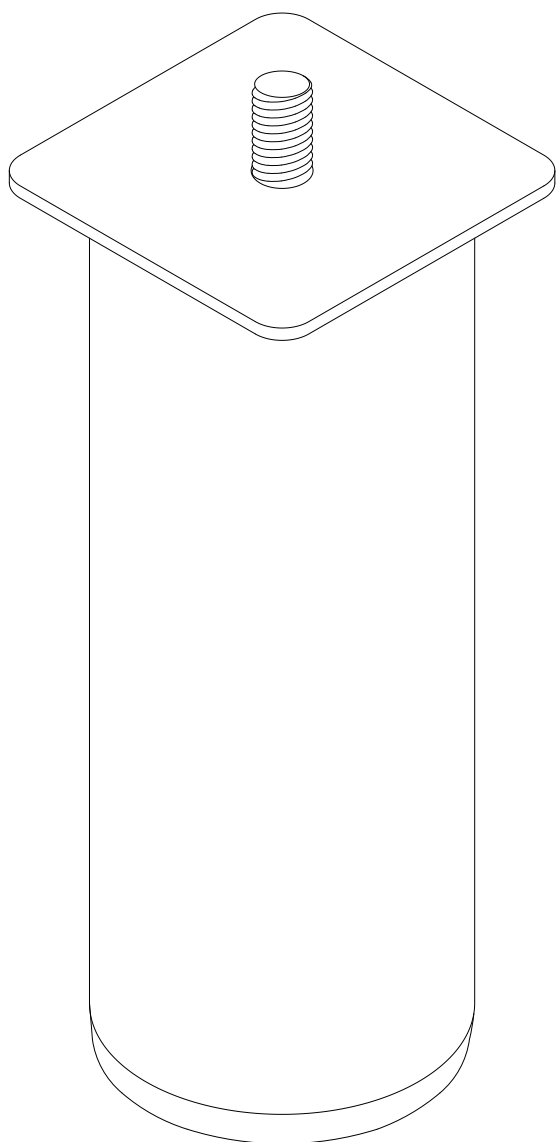


x4

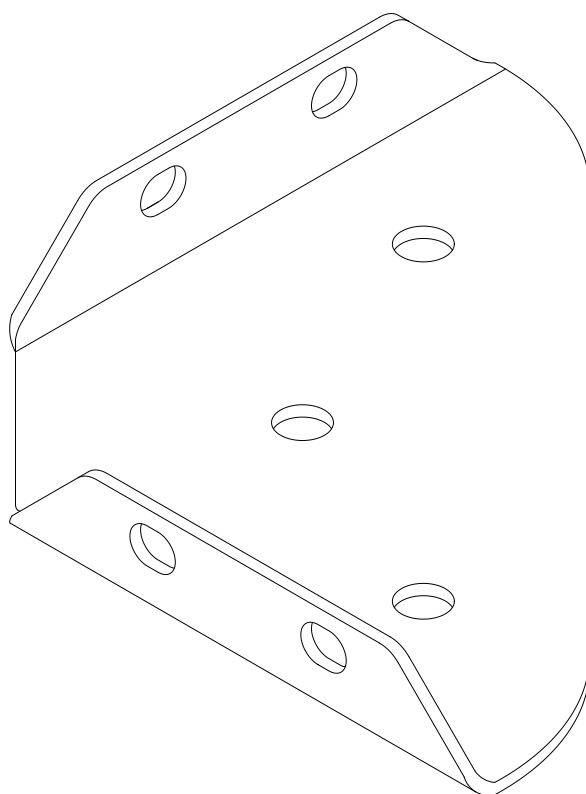

x4













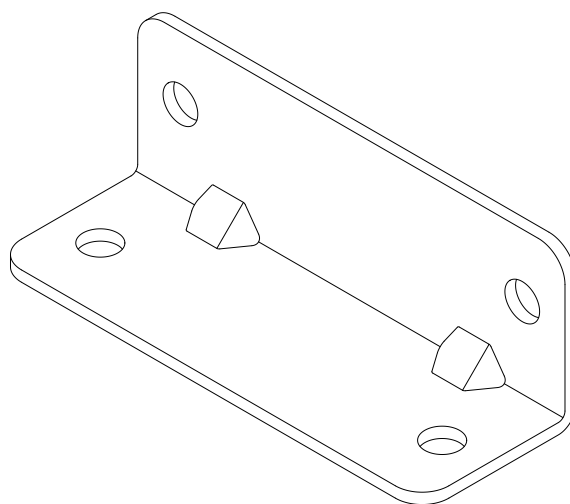


x4

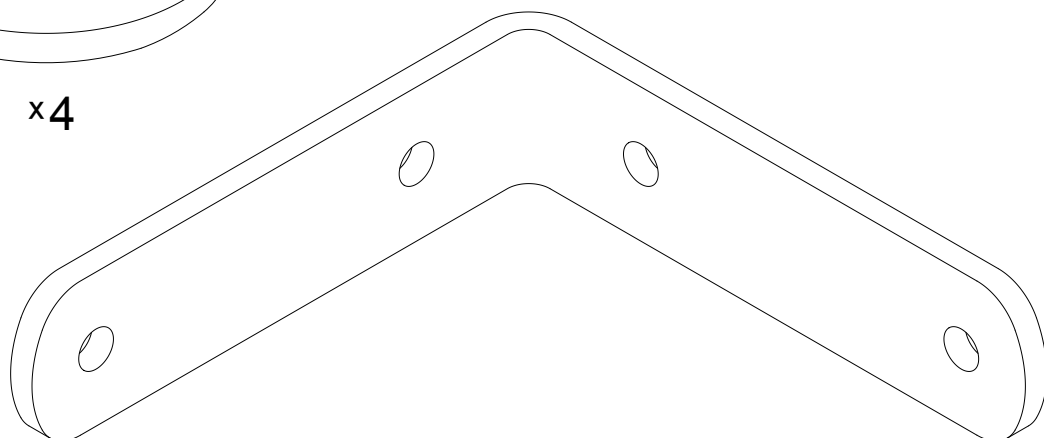


x4


M 1:1

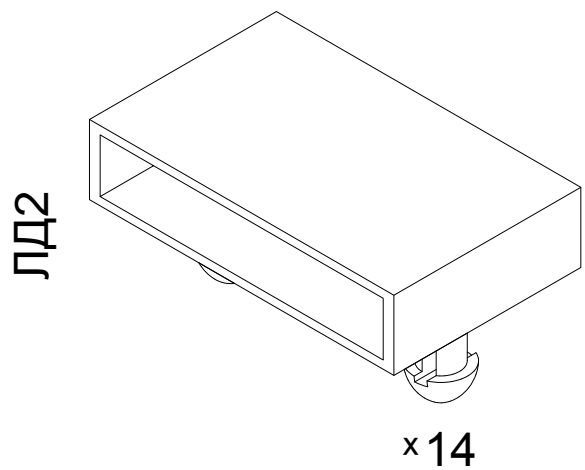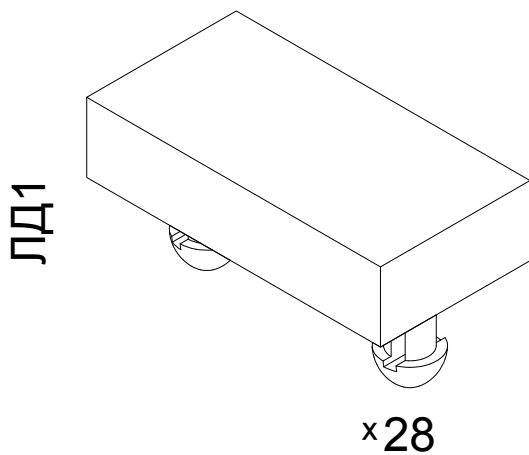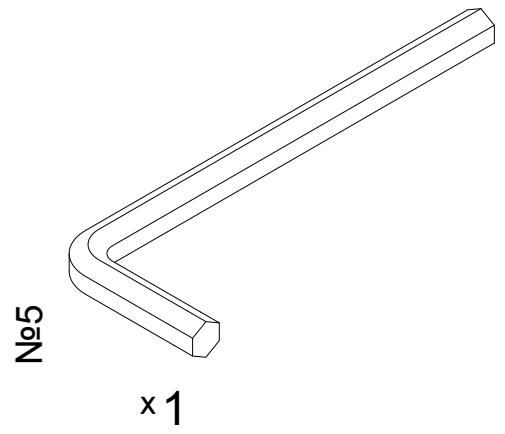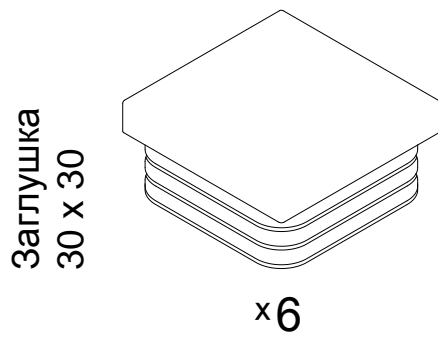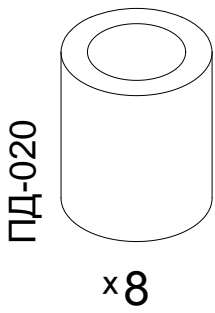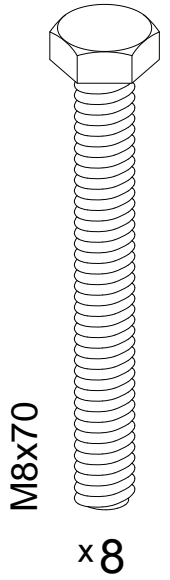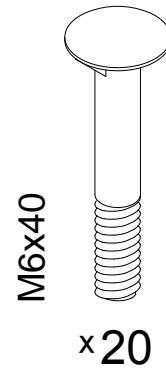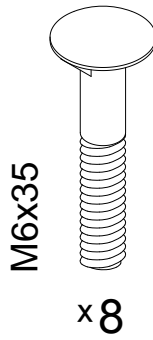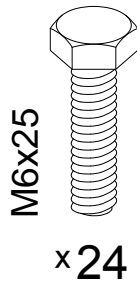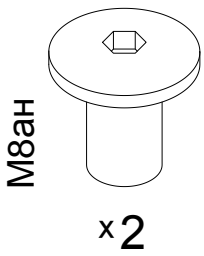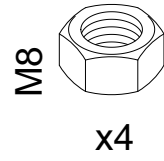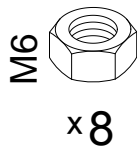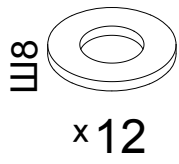


1

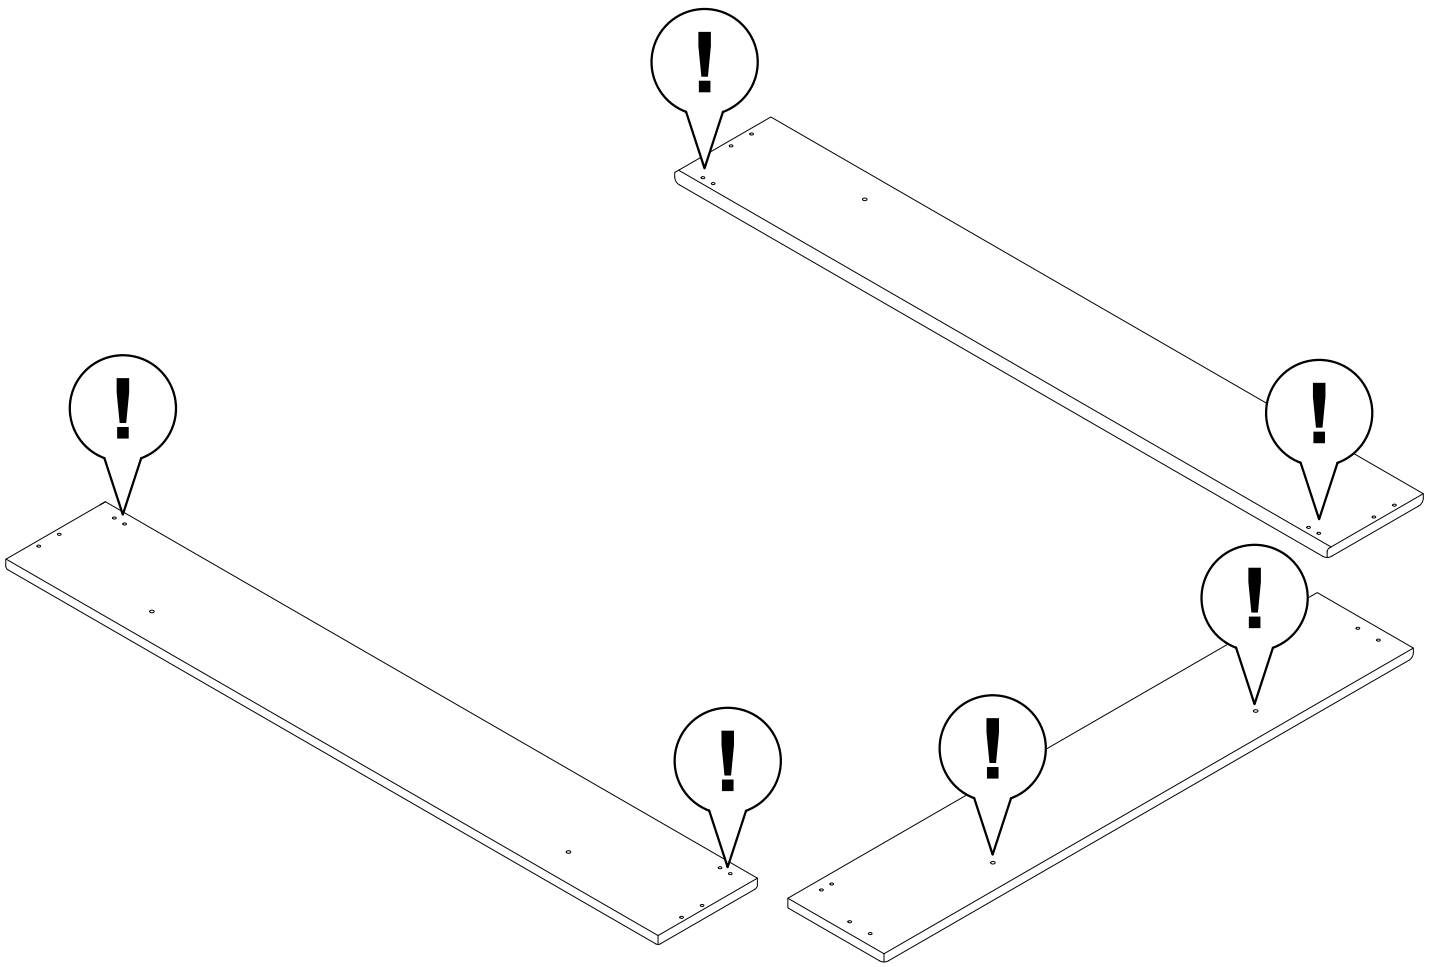


2

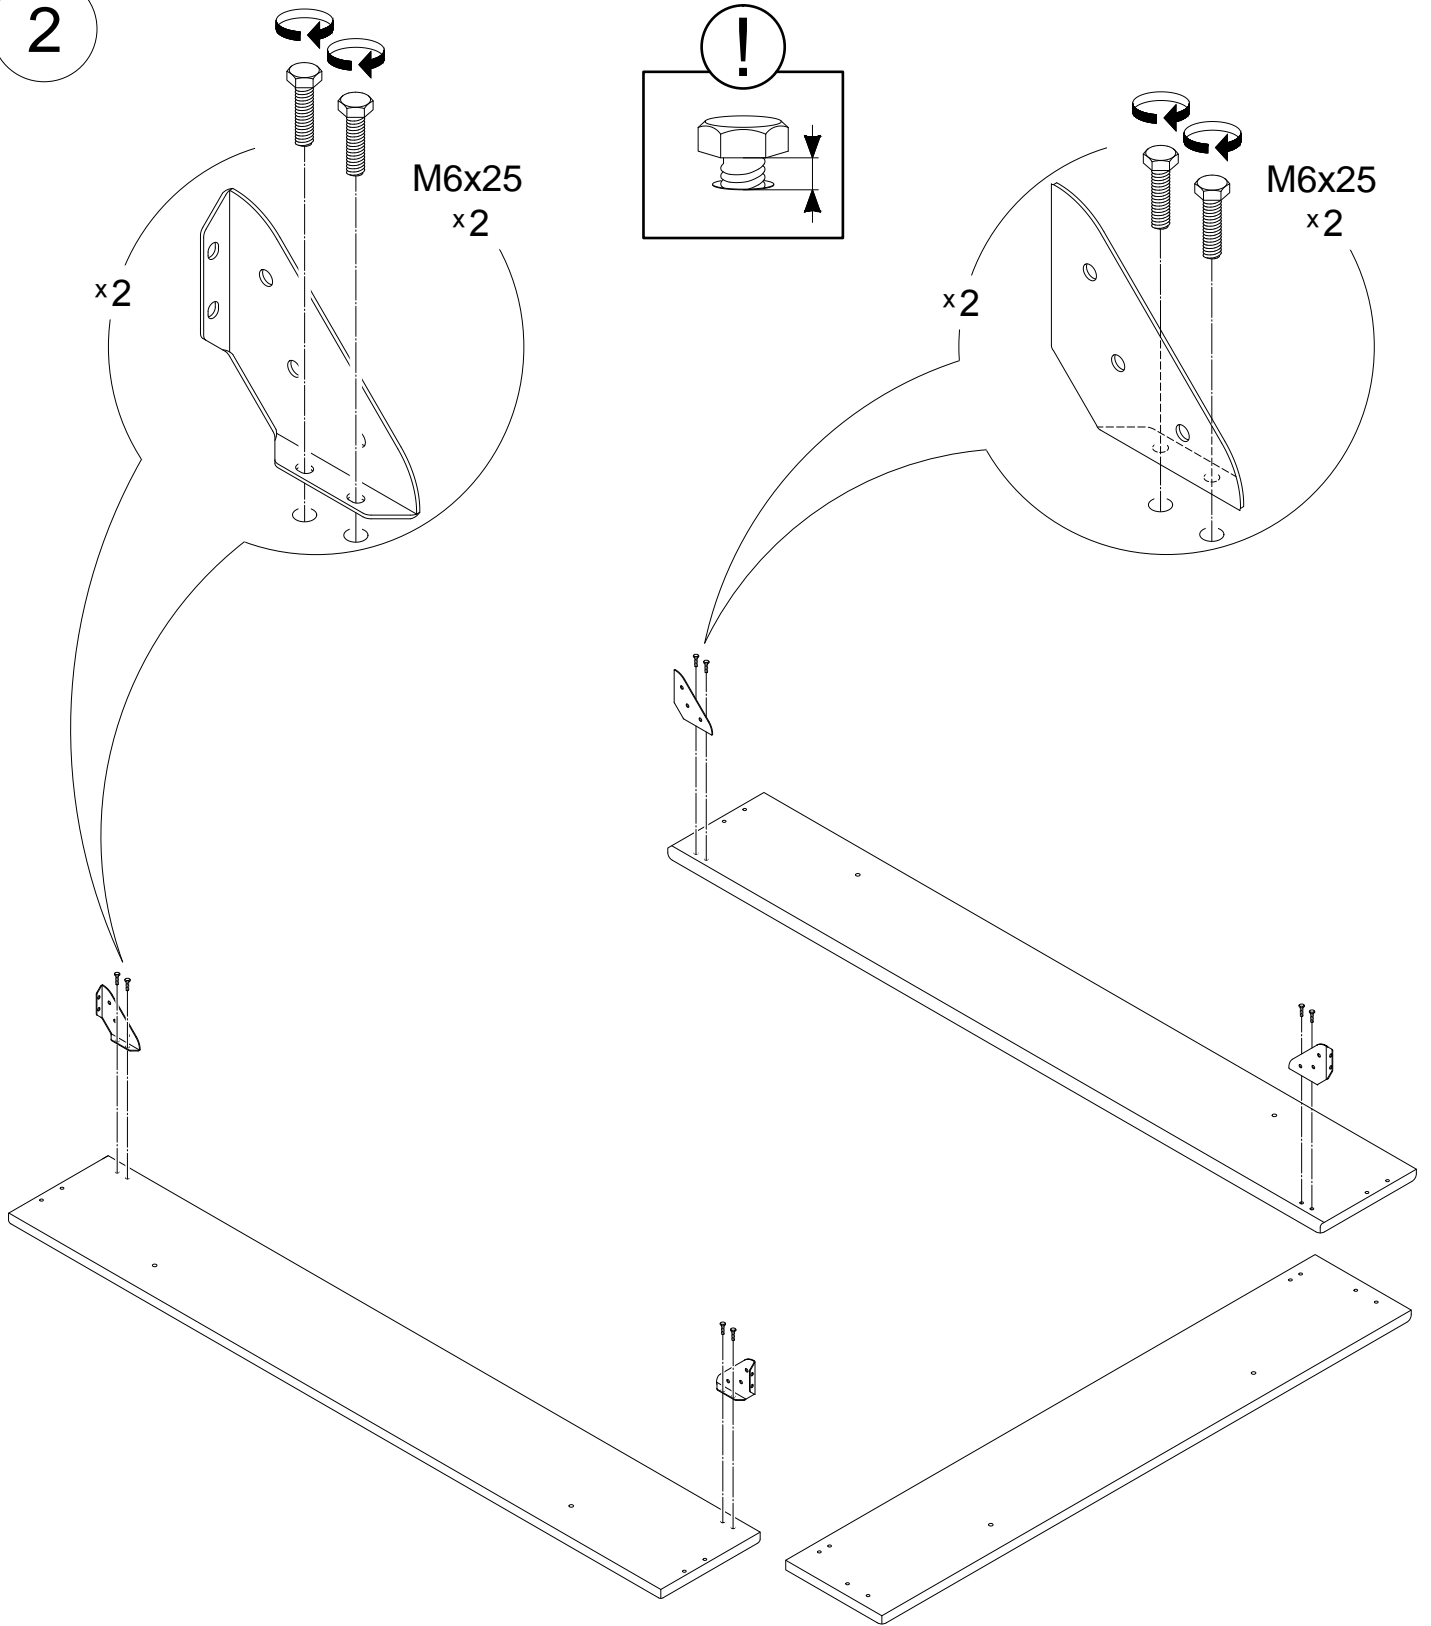


3

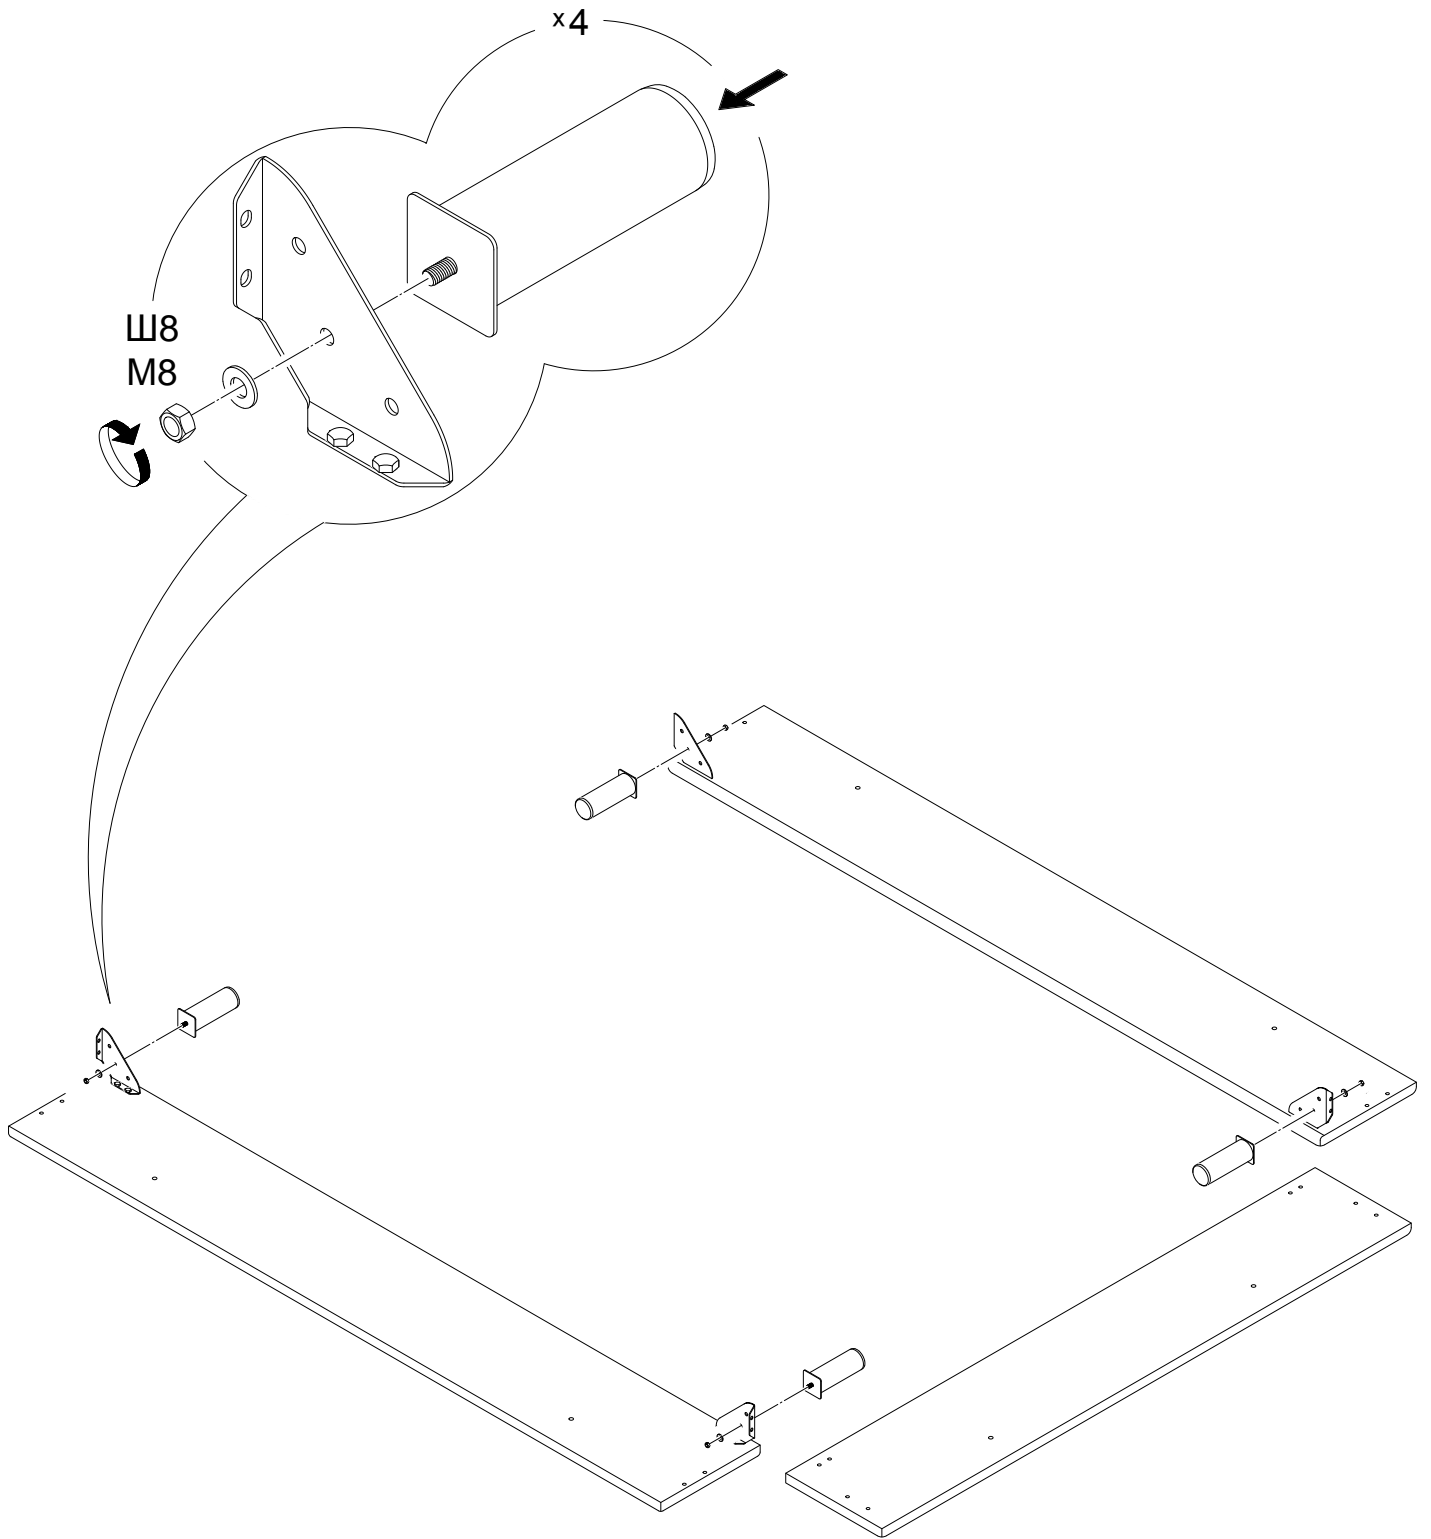





4

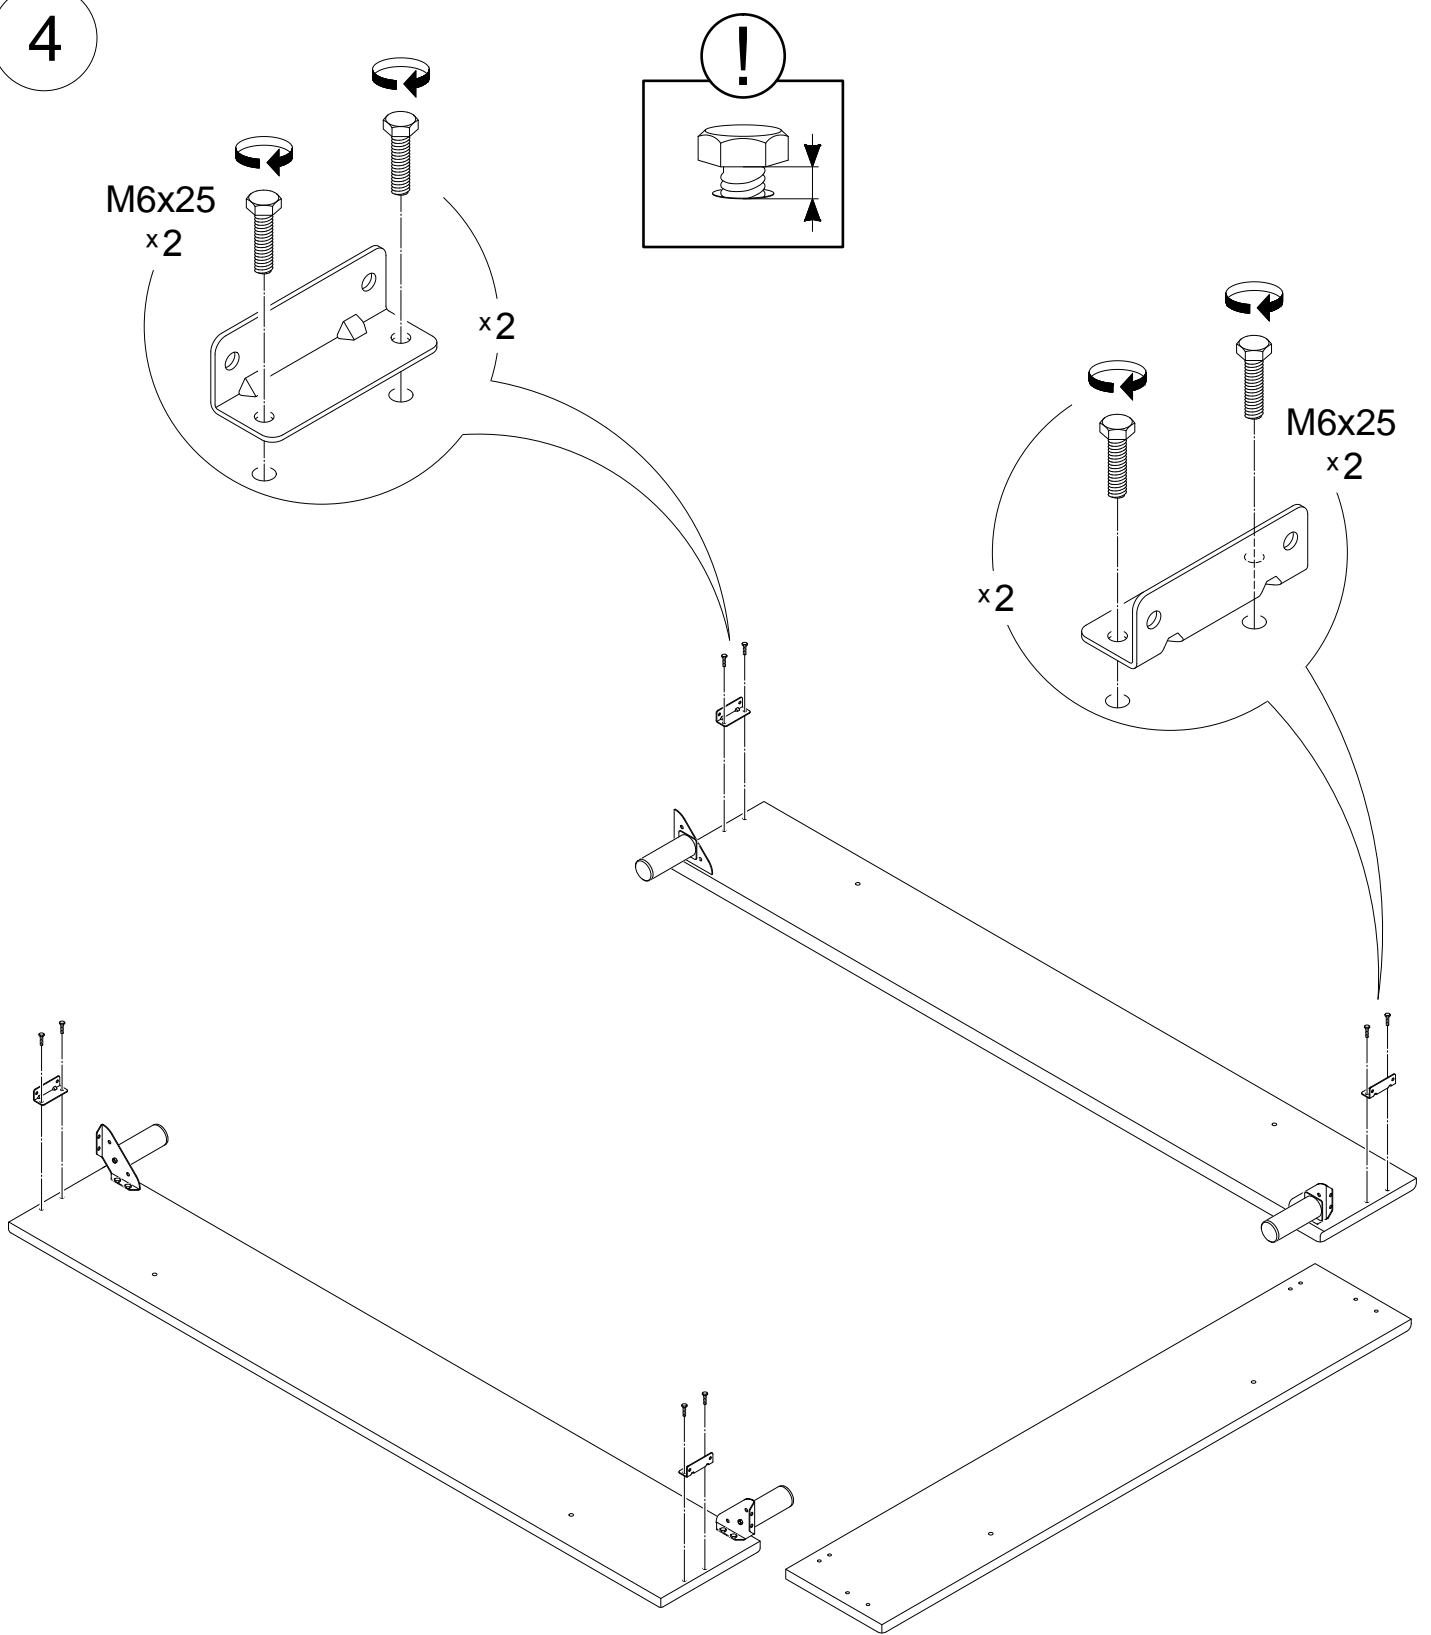



5

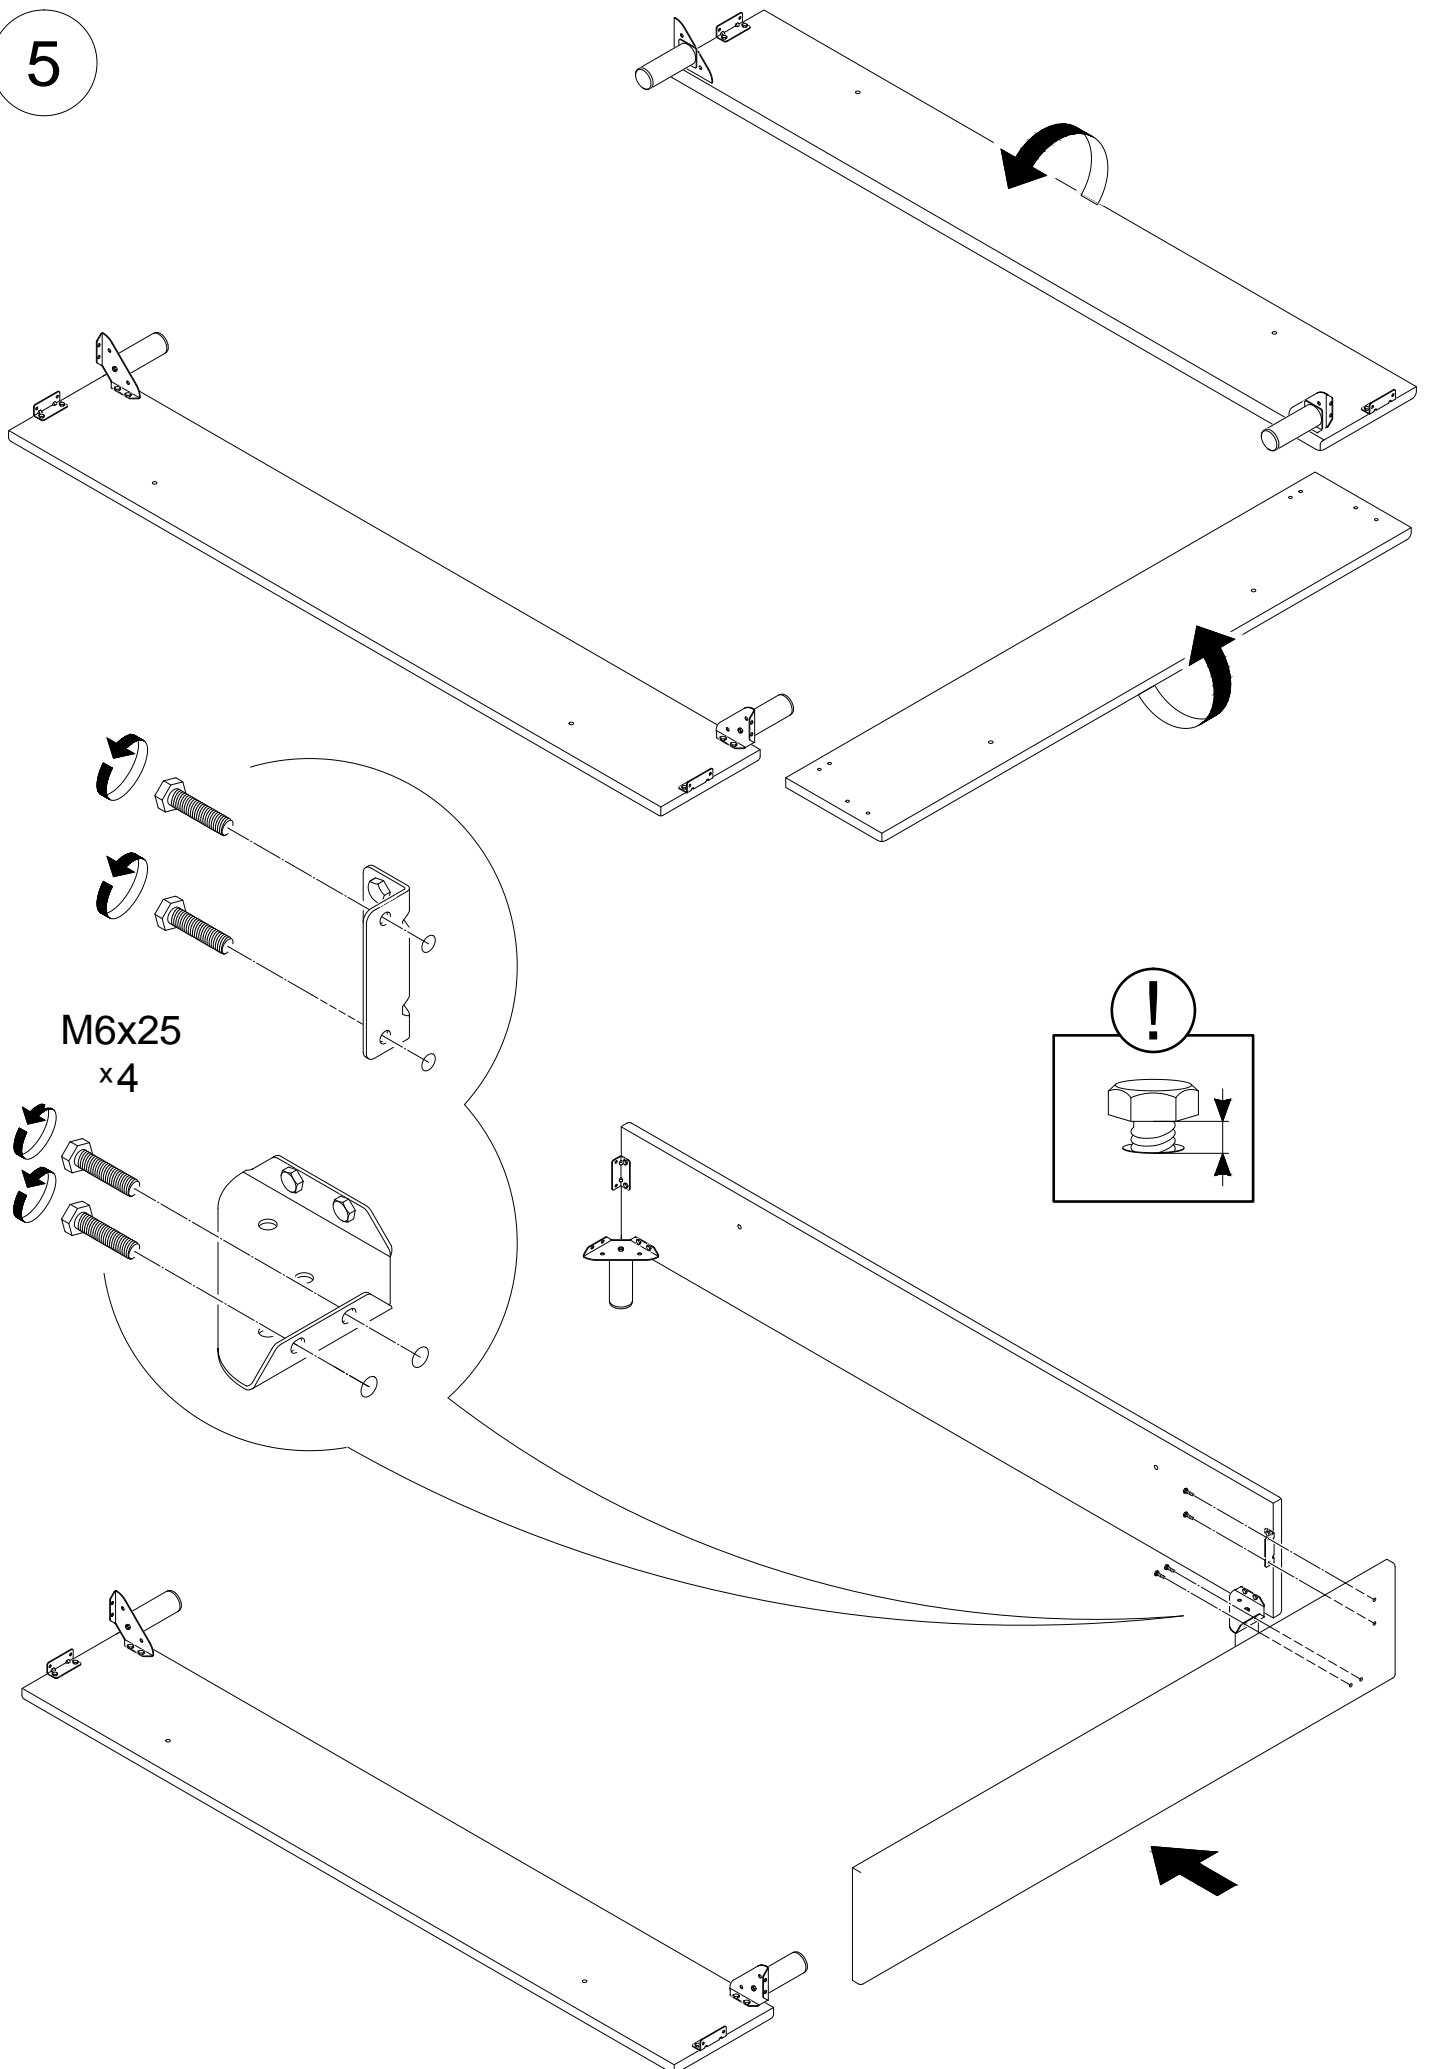



6

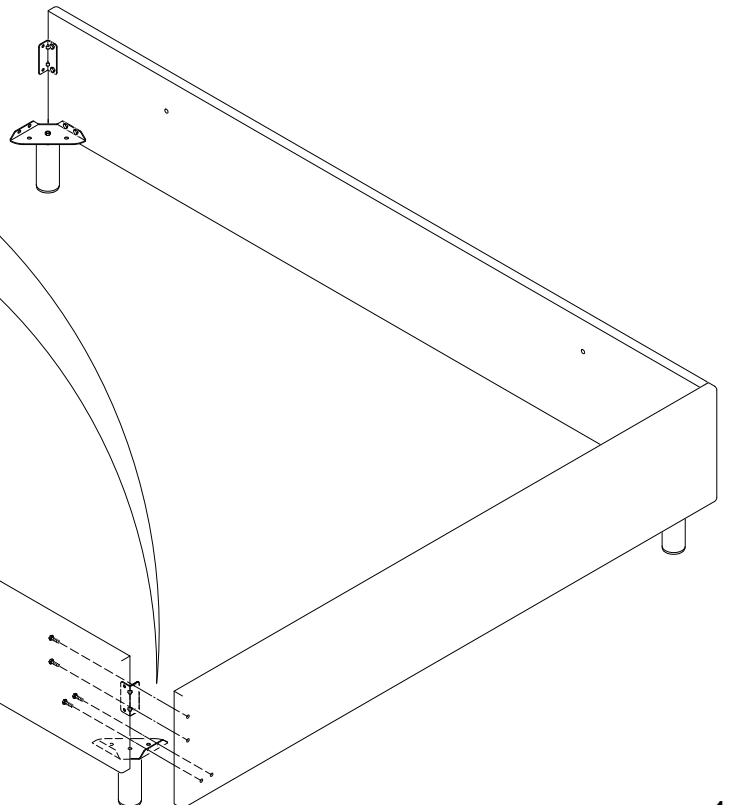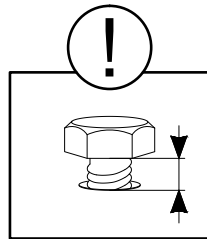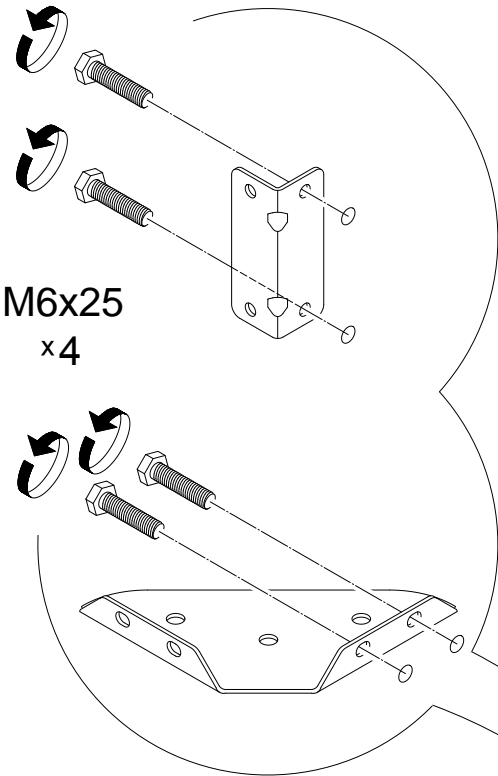
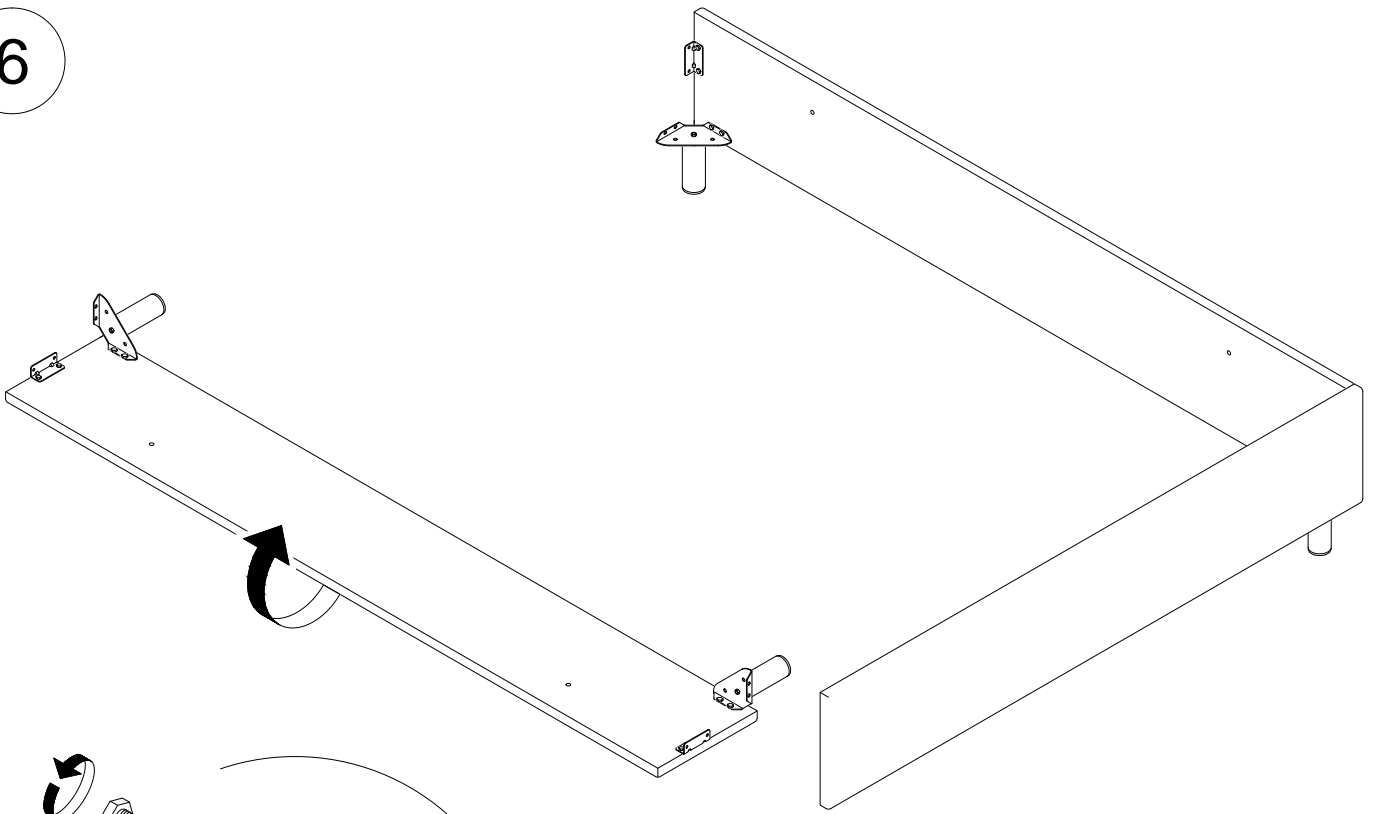


7

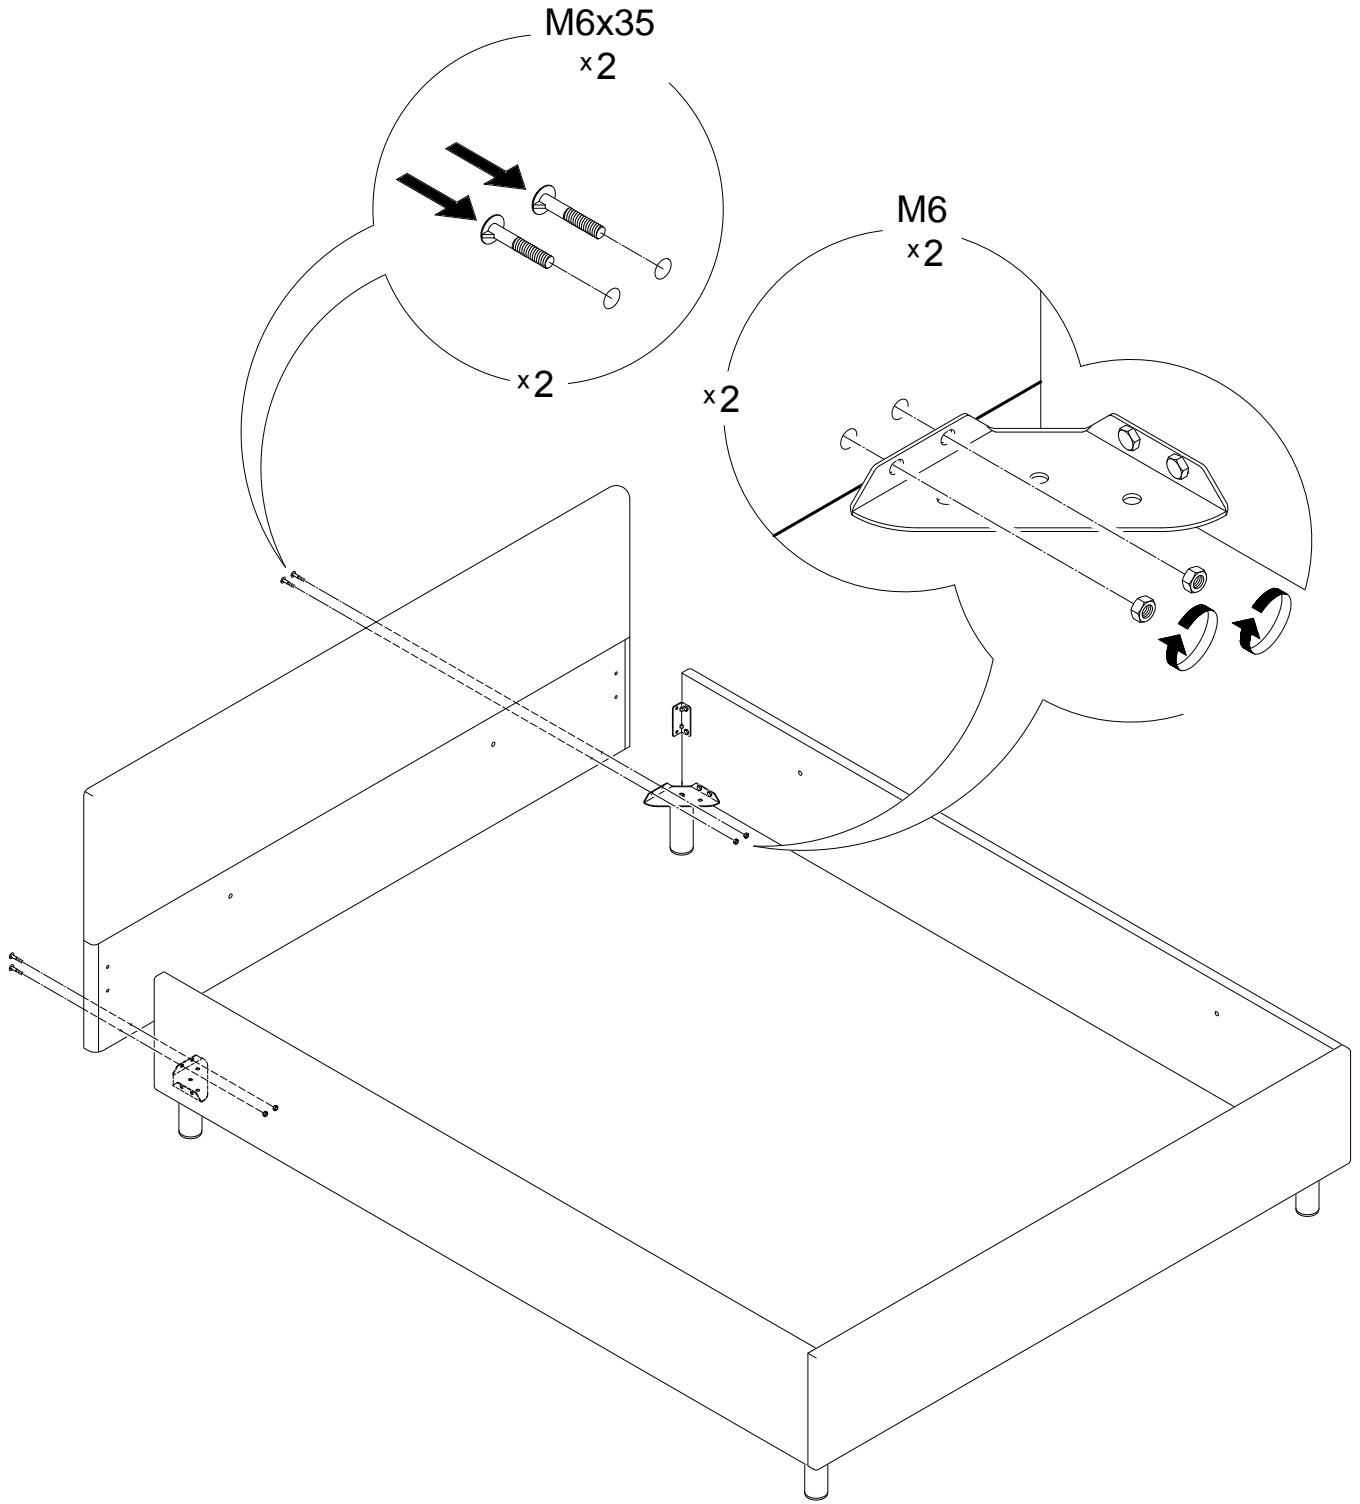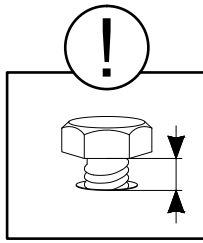




8

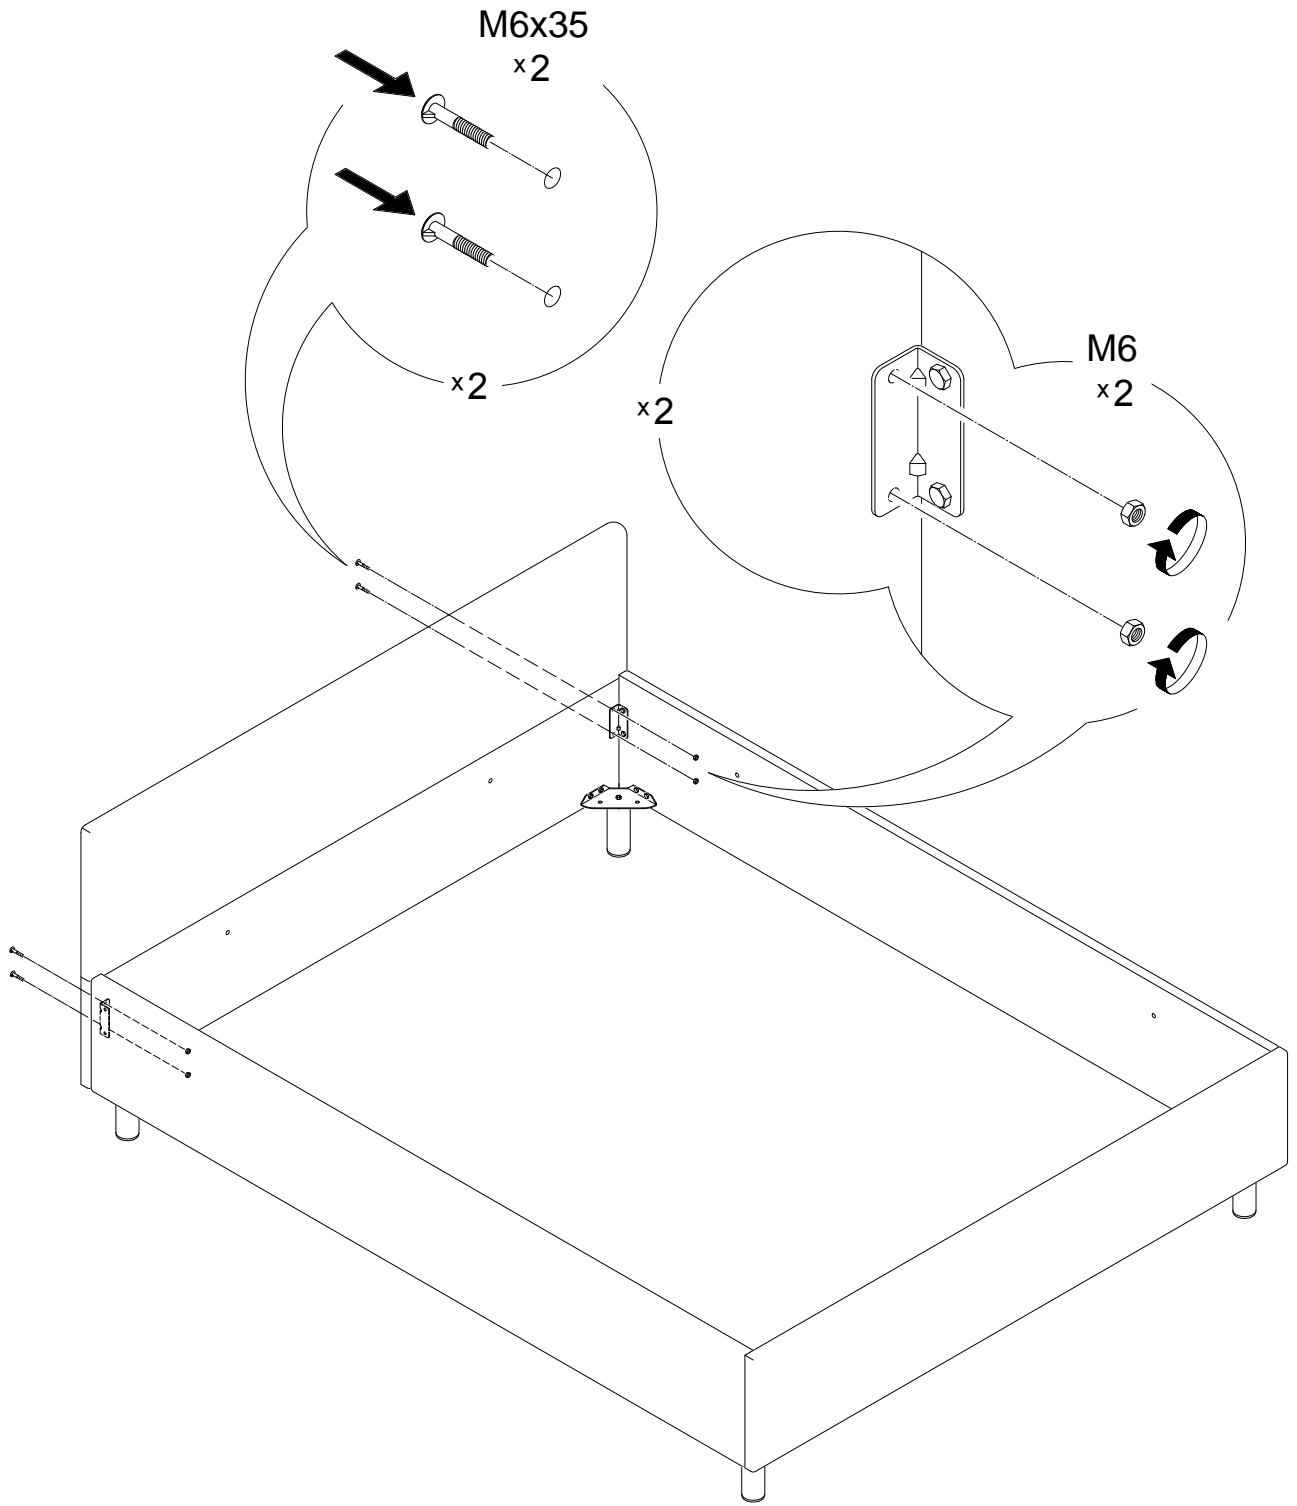
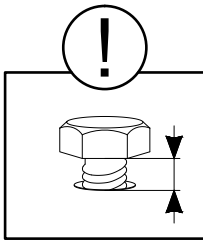


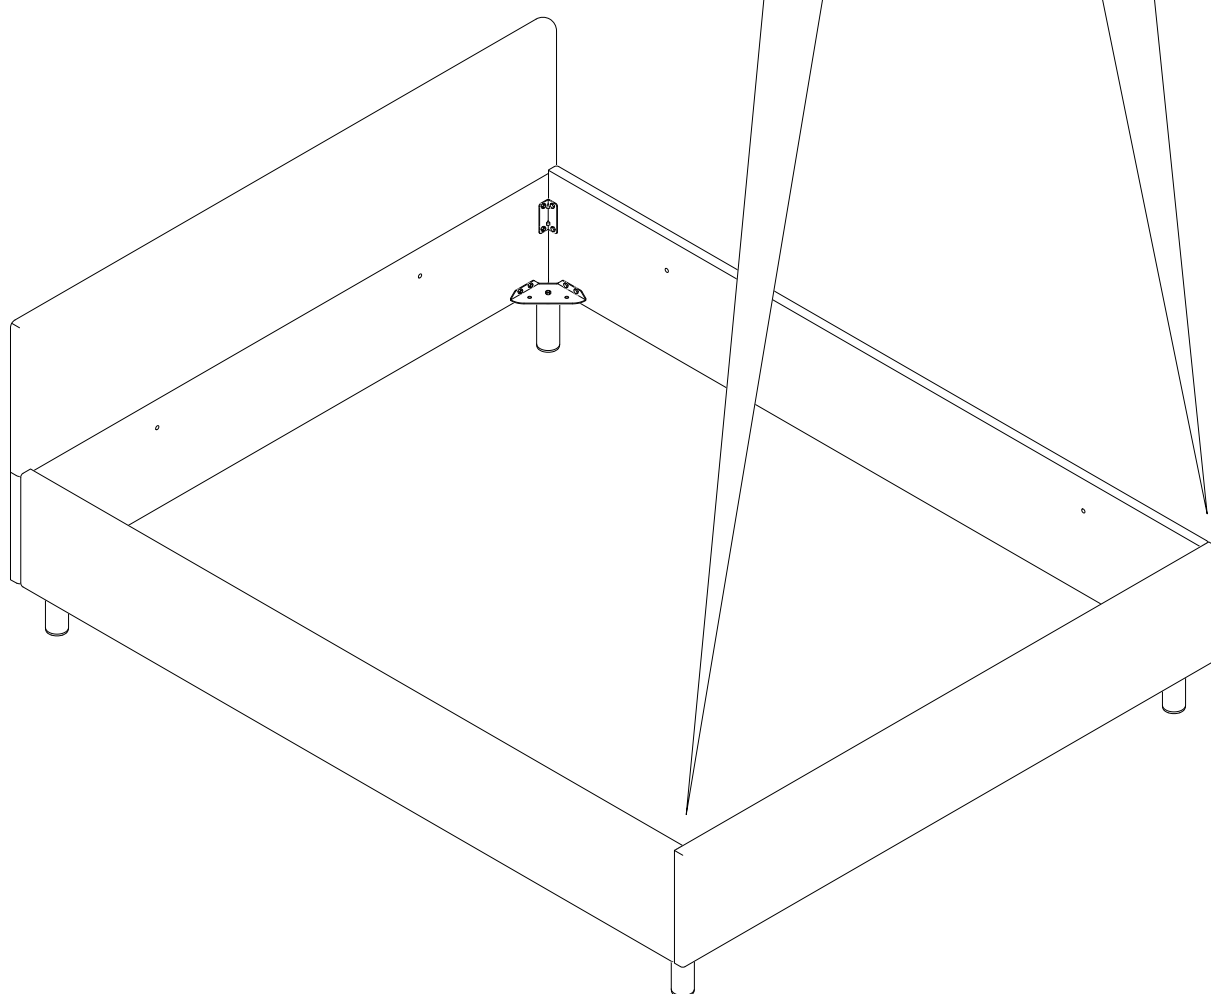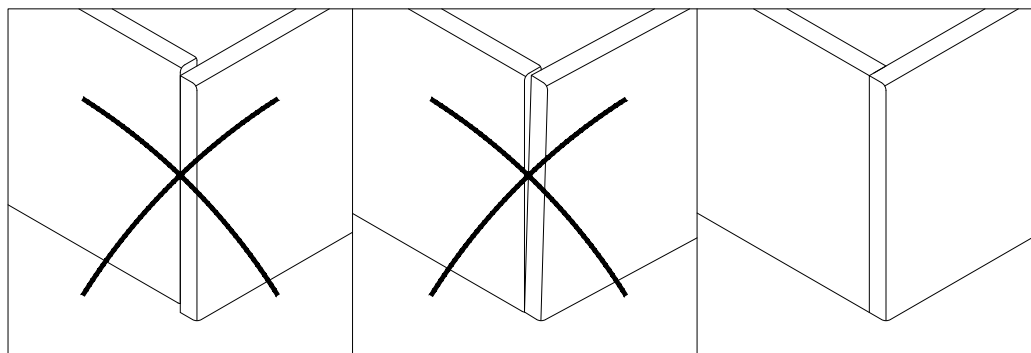


- 2
- 4
- 5
- 6
- 7
- 8

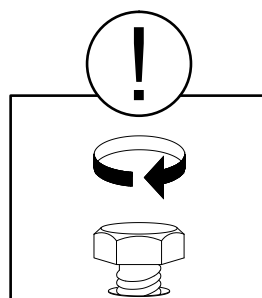

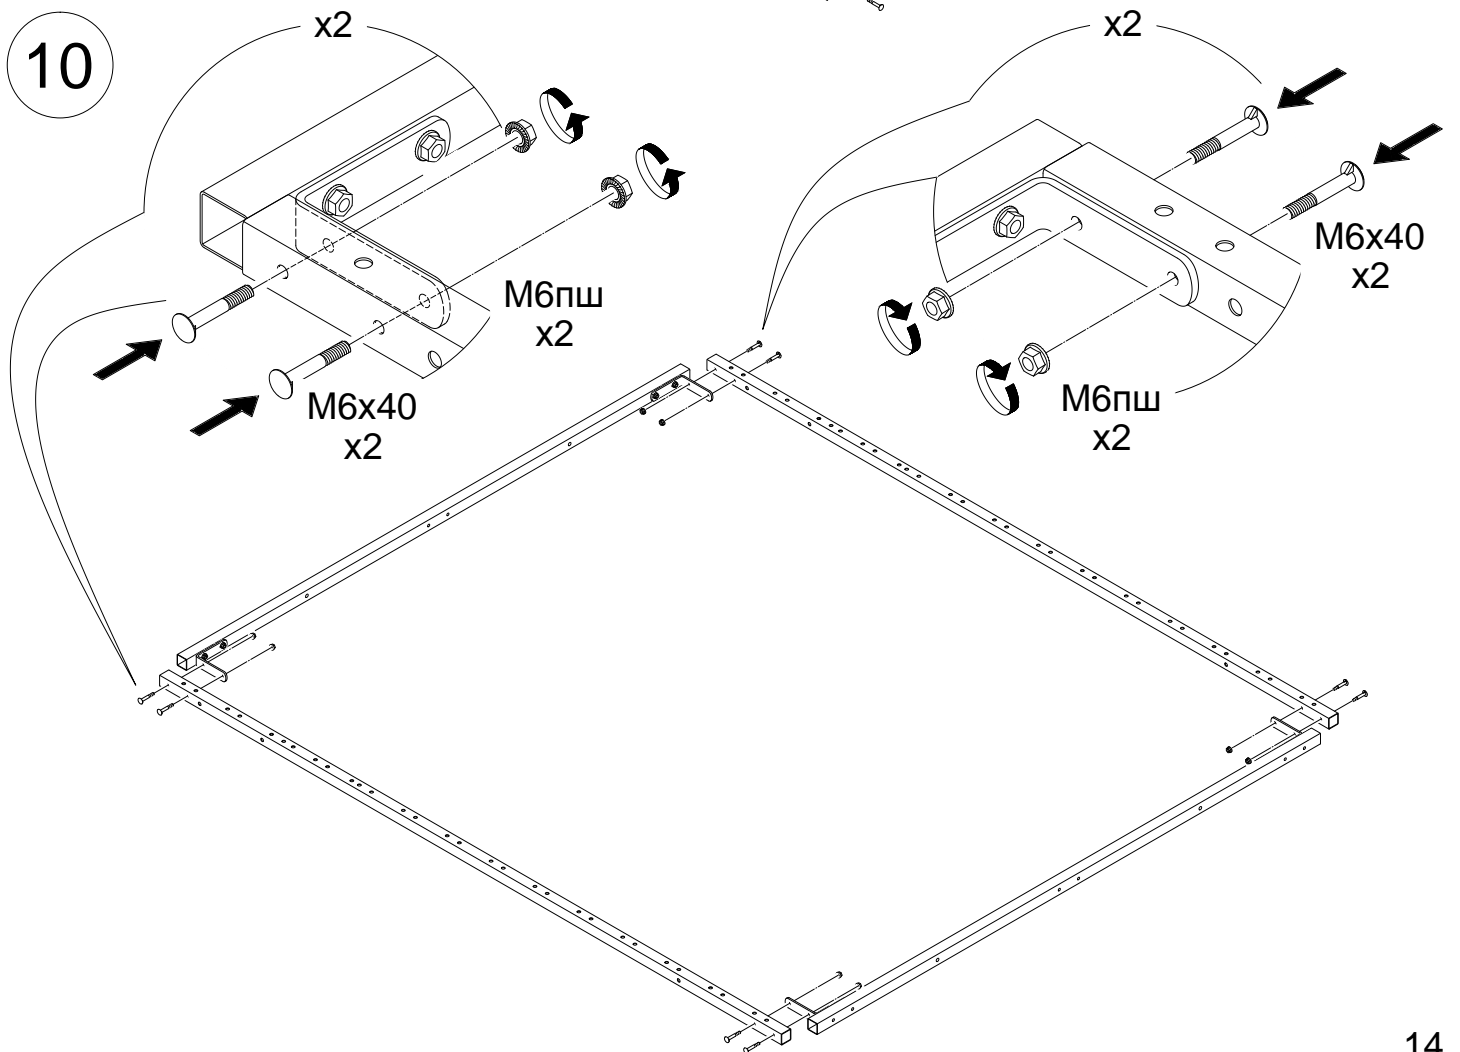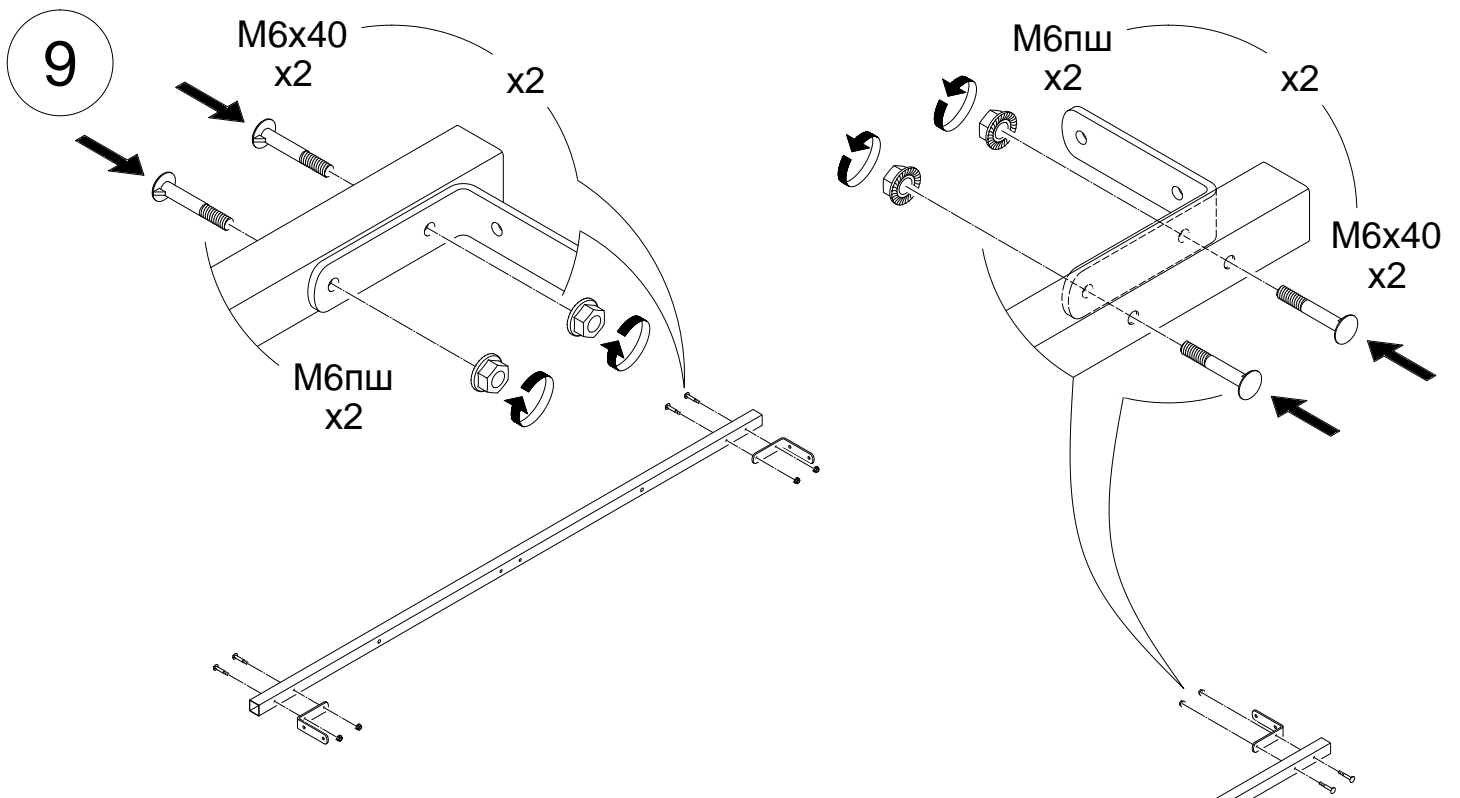


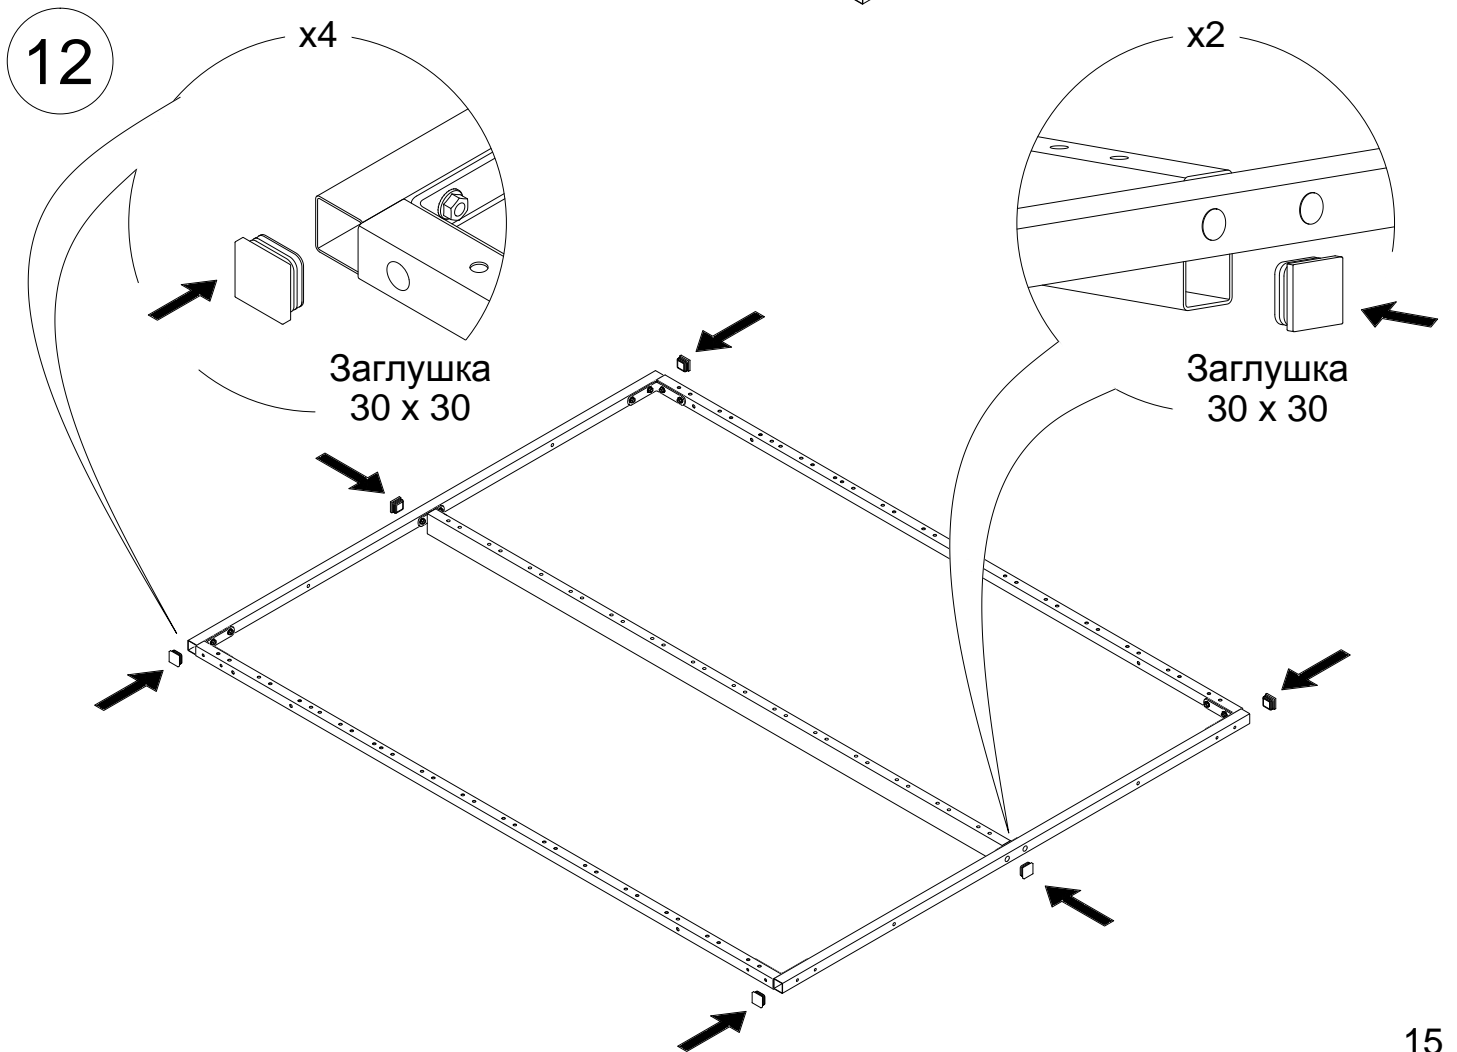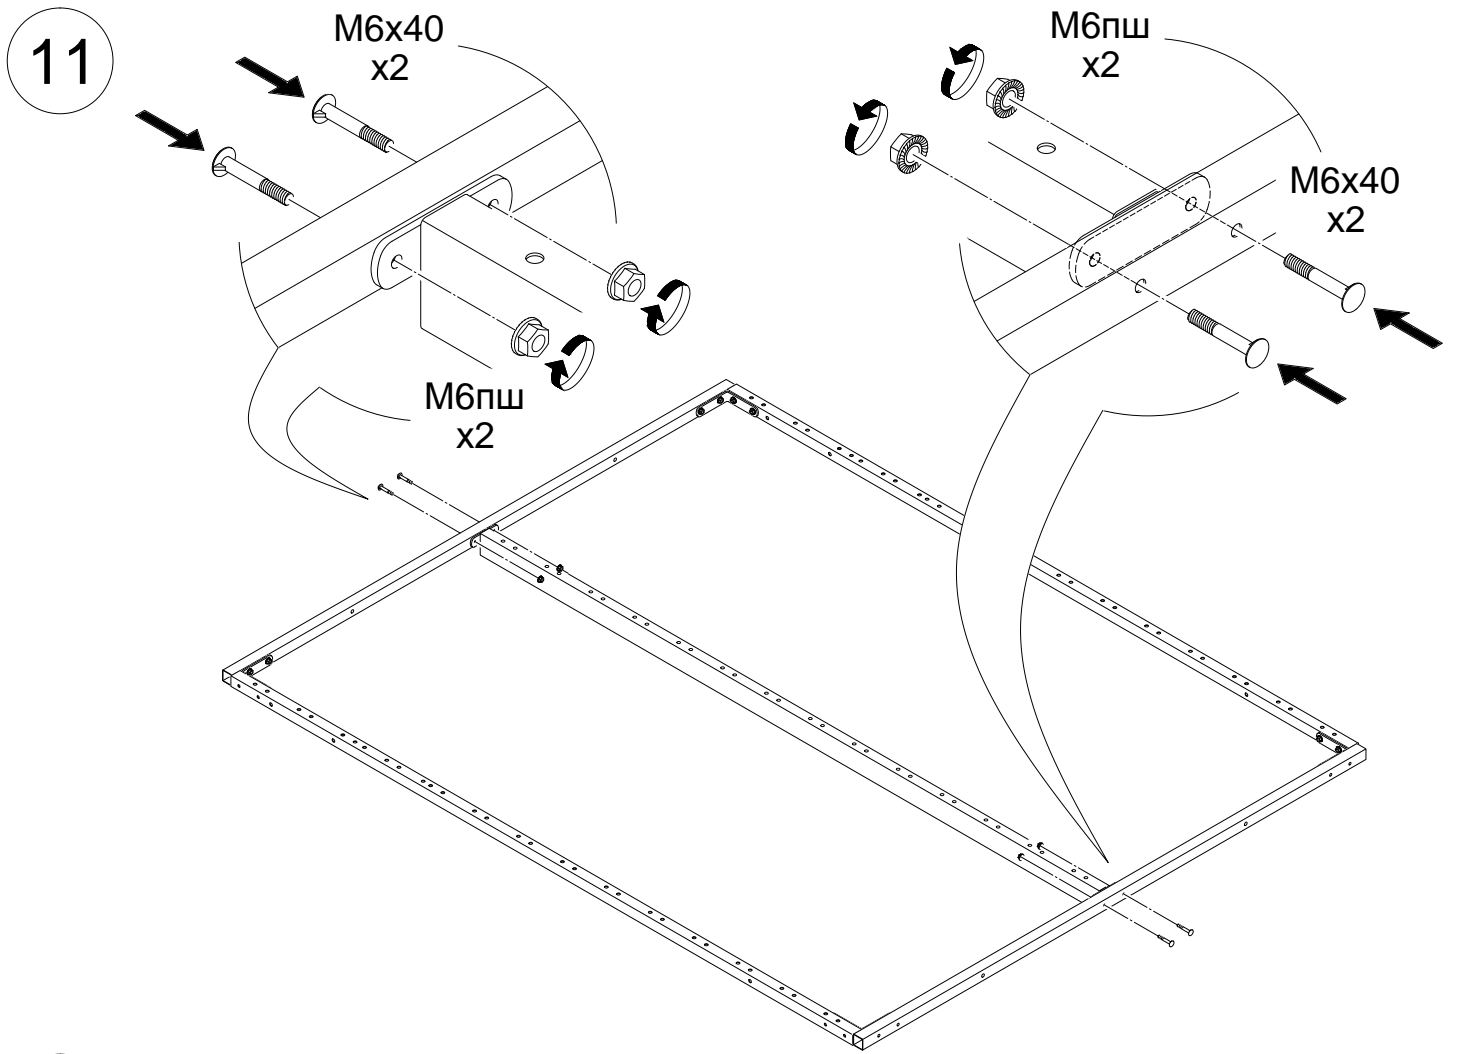


13

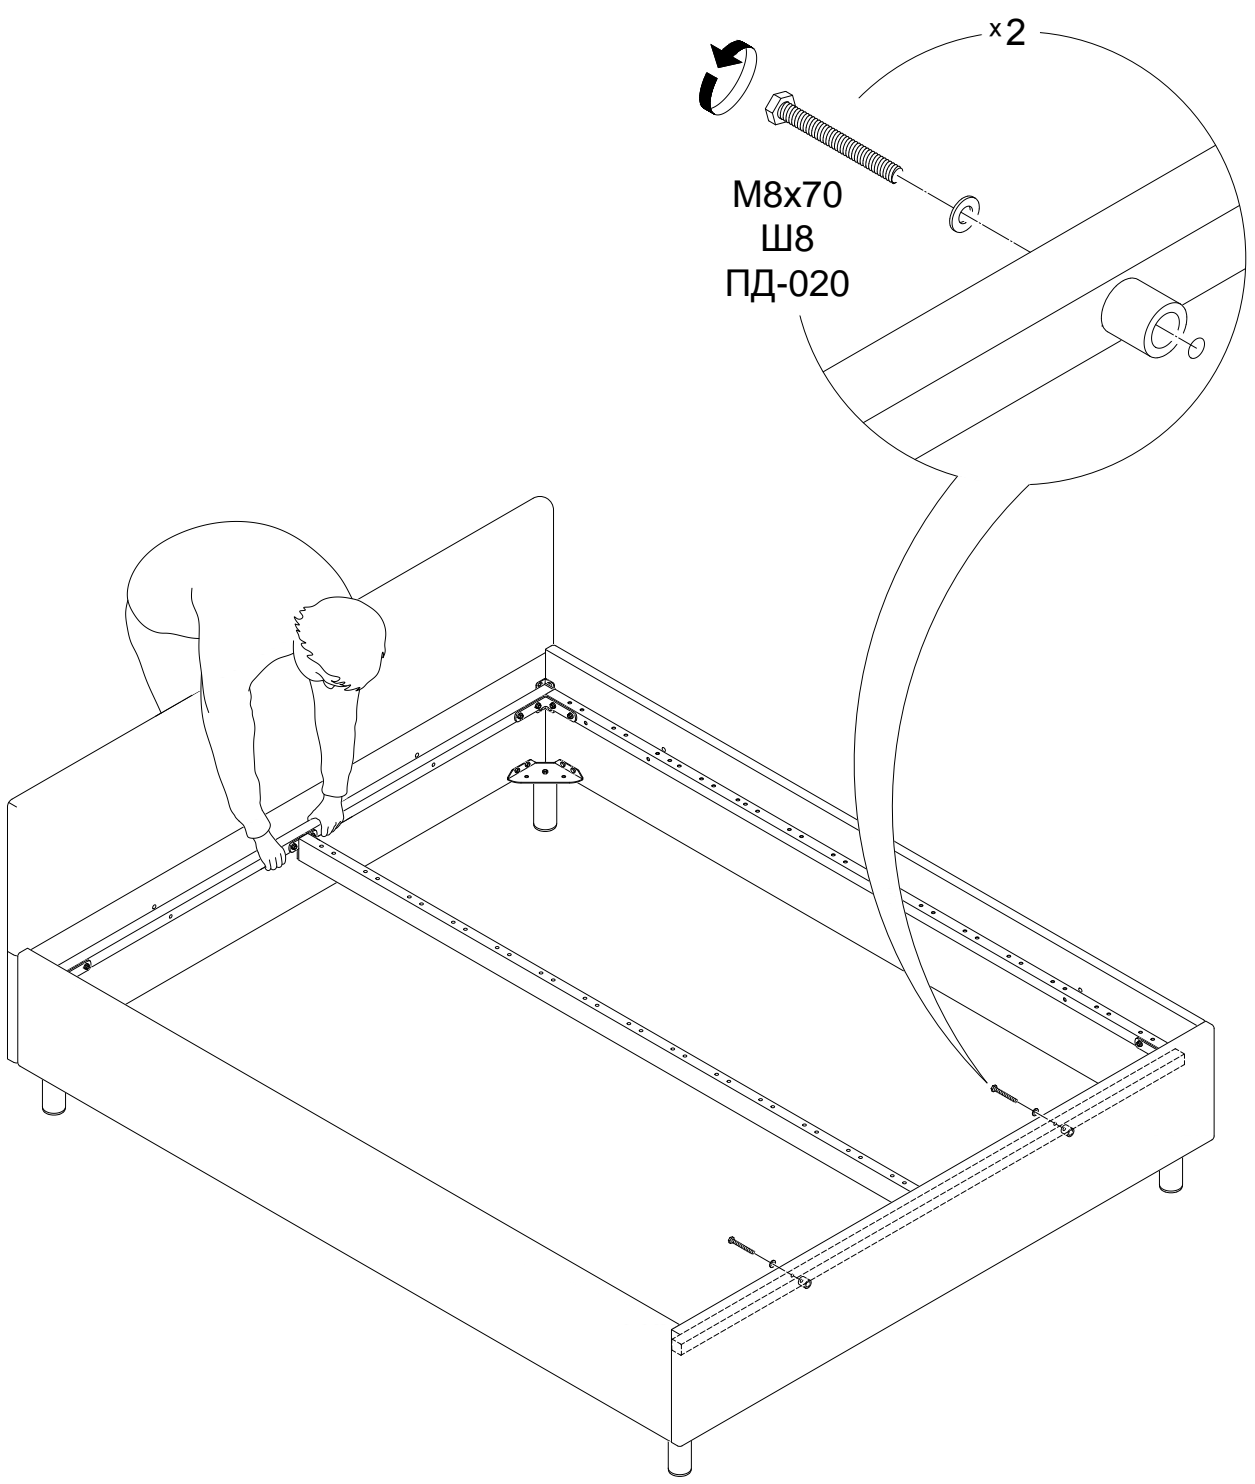


14

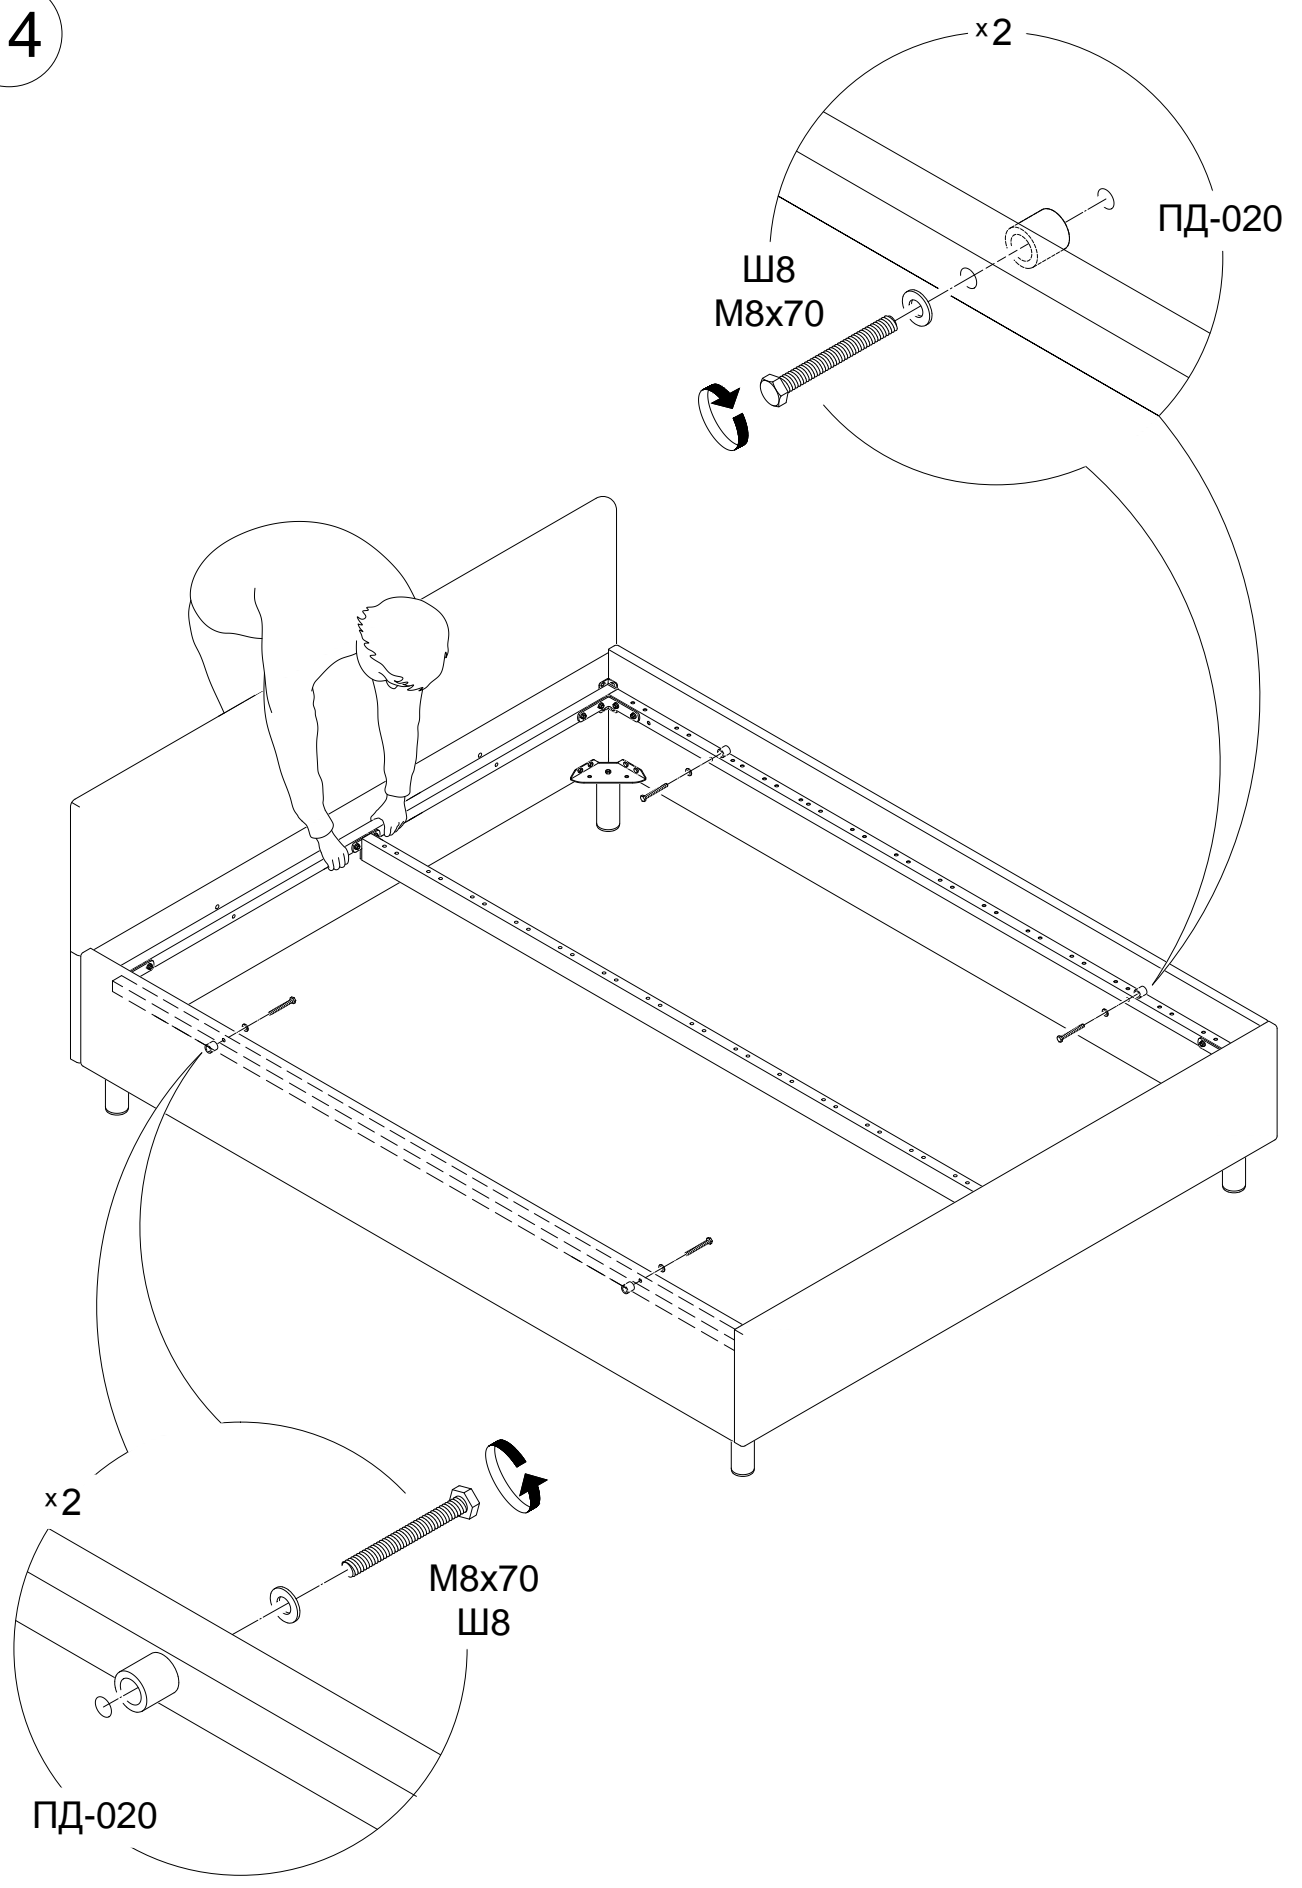

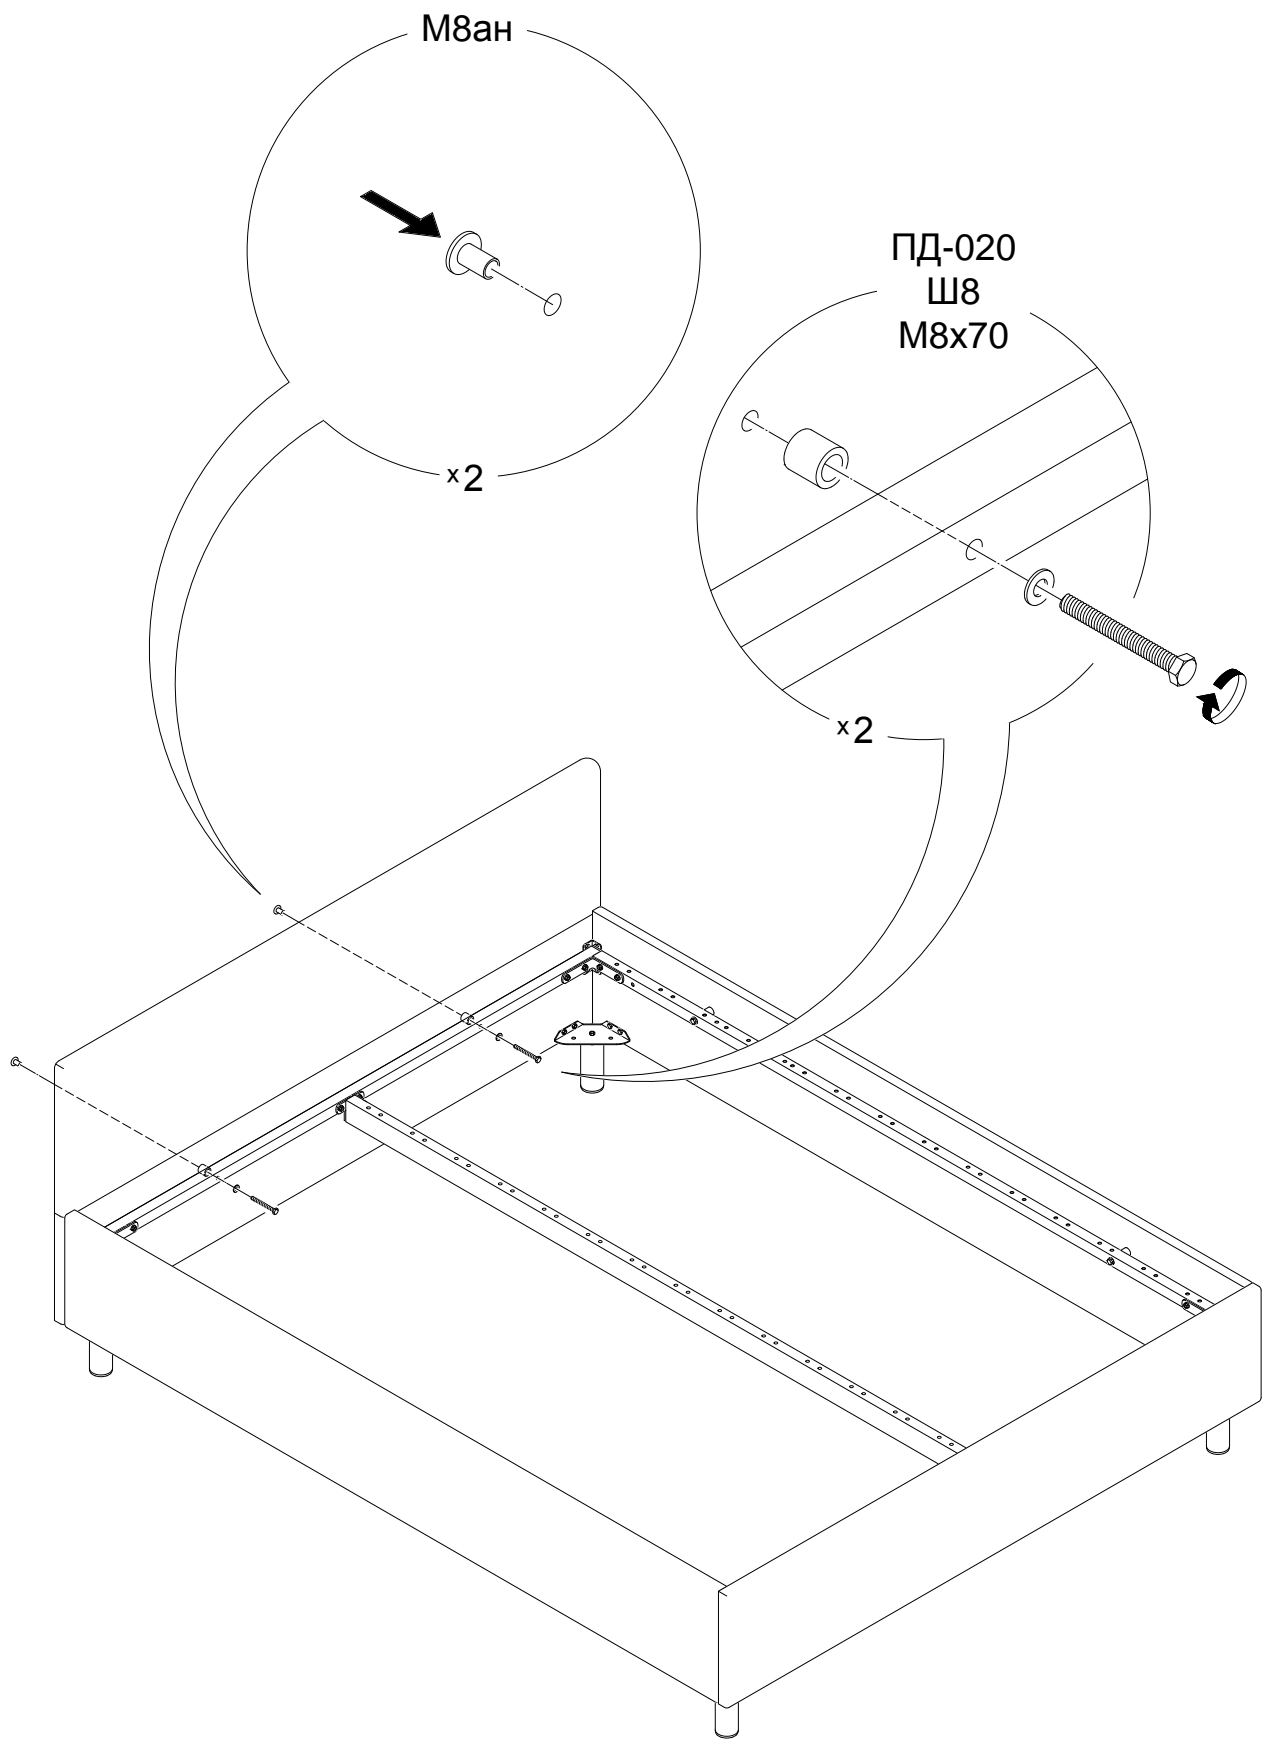

16

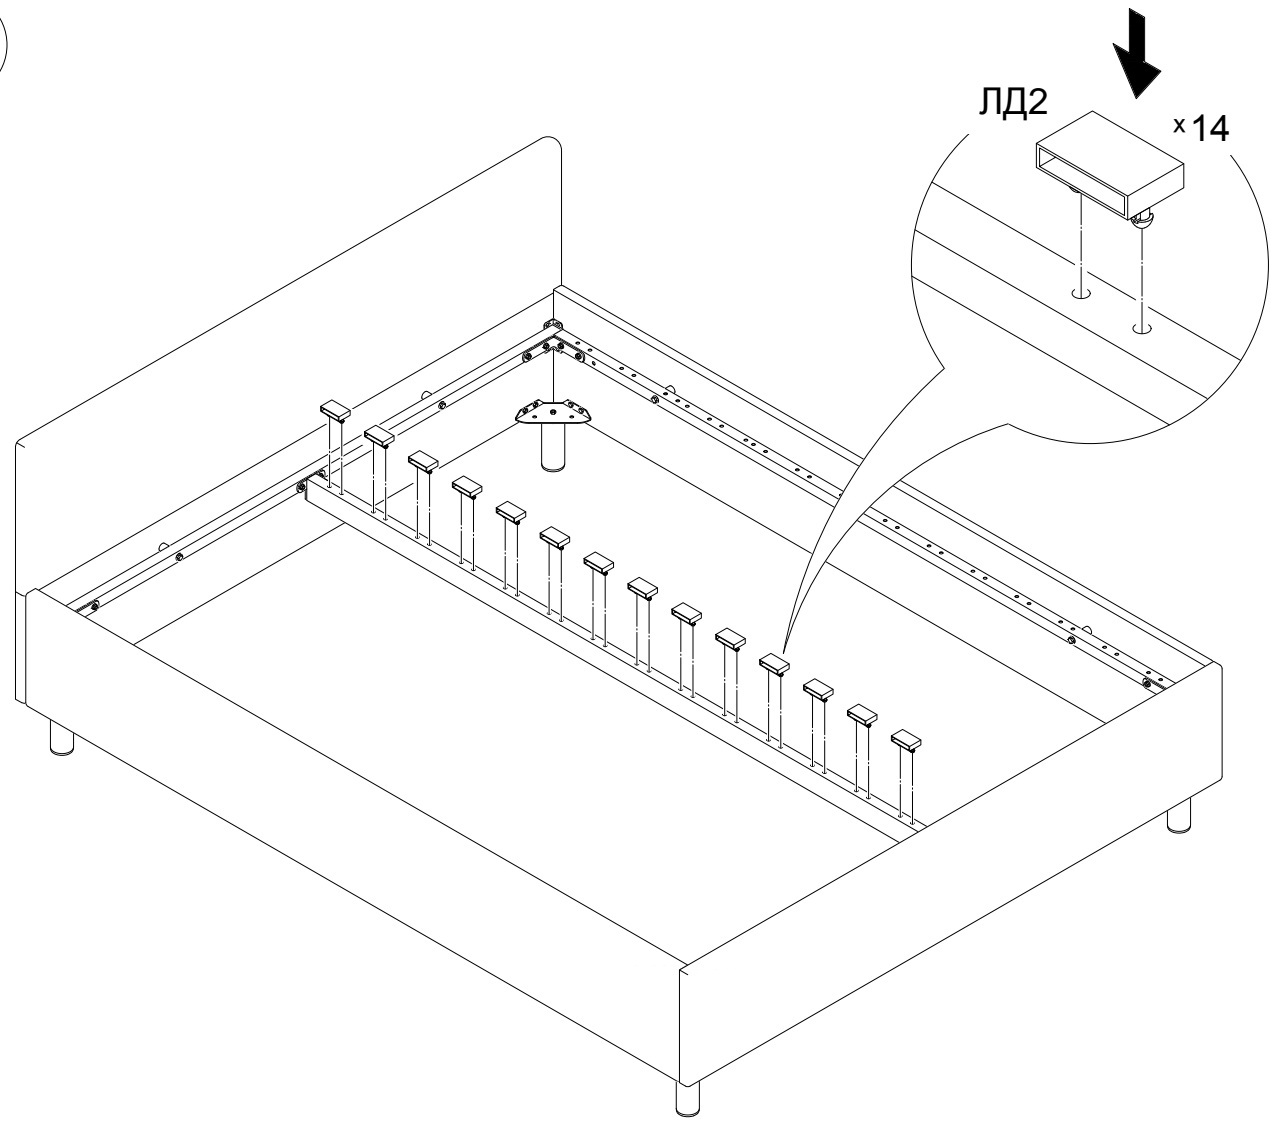

17

