

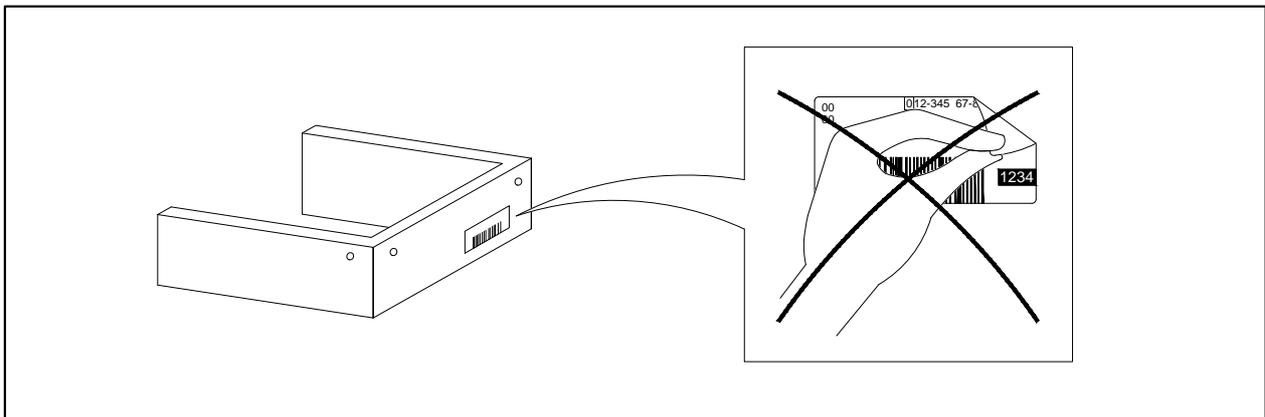
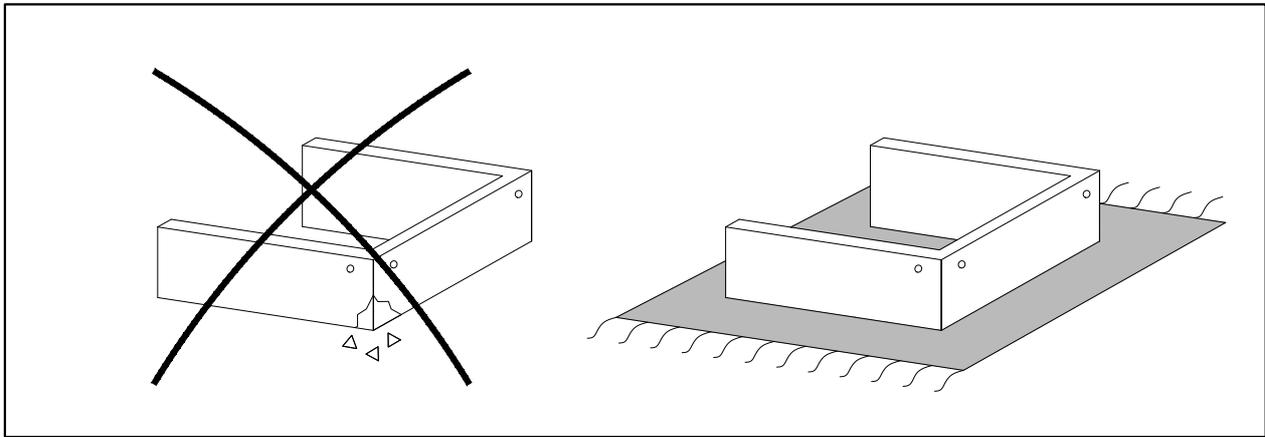
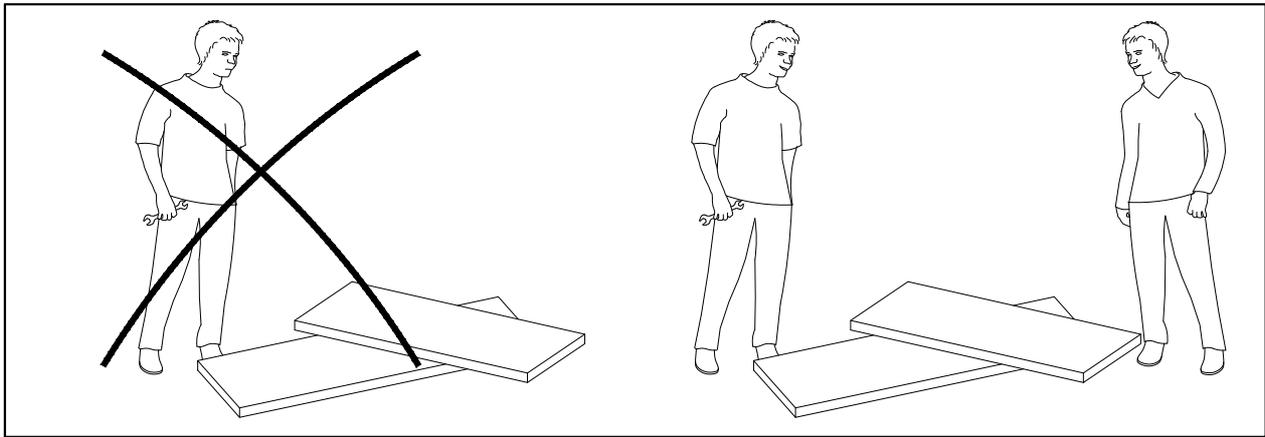


Инструкция по сборке

Кровать без подъёмного механизма


Дизайн 1220, 1221, 1222, 1223, 1224, 1226, 1227, 1228

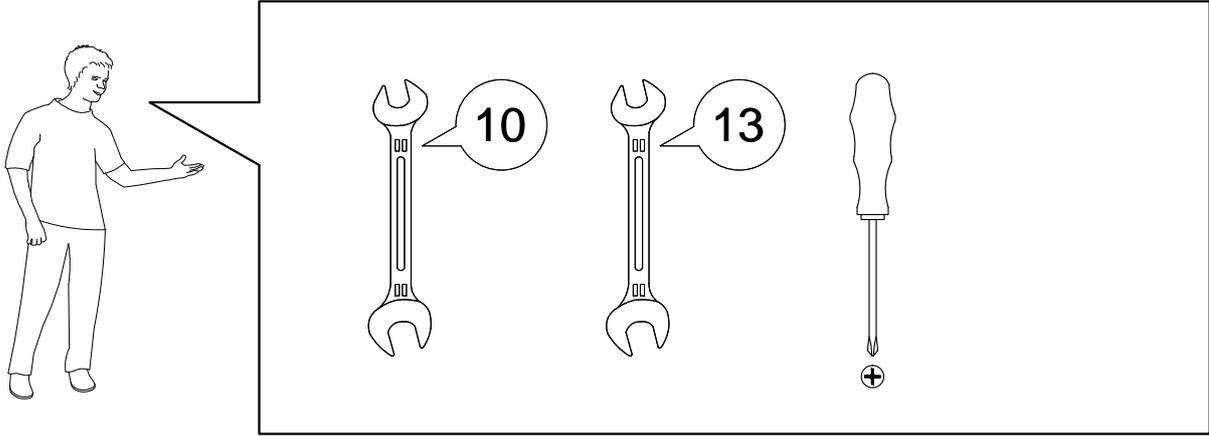

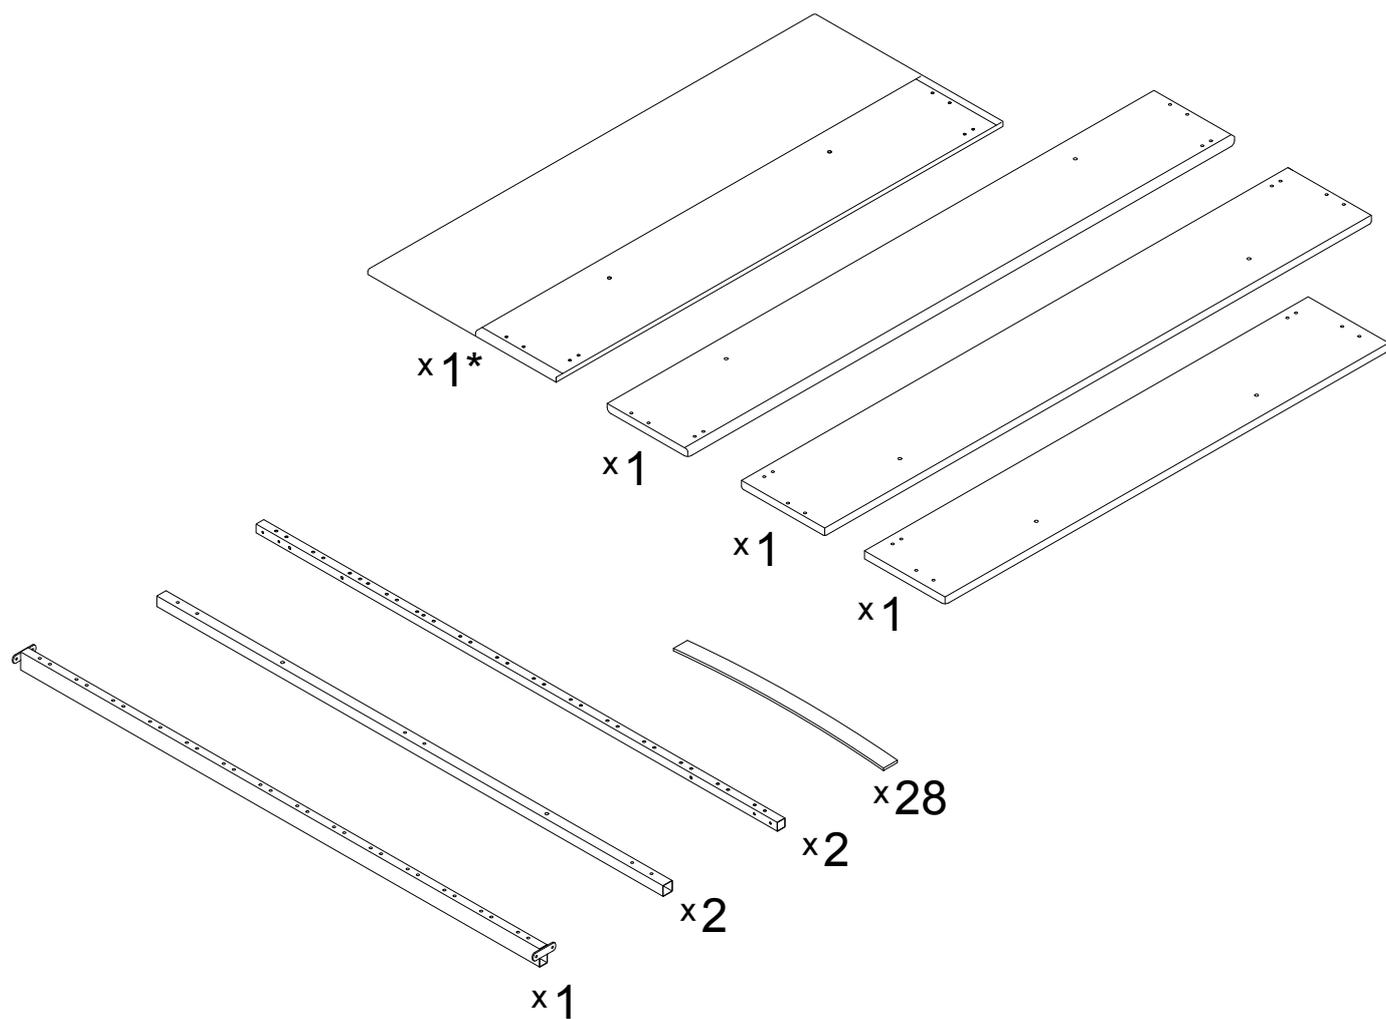


* Изголовье различается в зависимости от дизайна кровати.


M 1:1

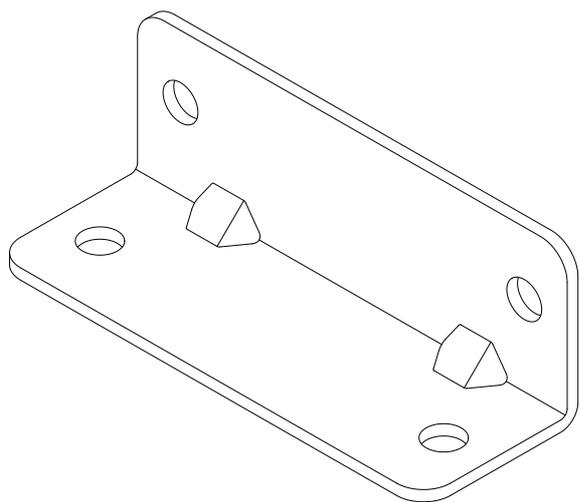

x4

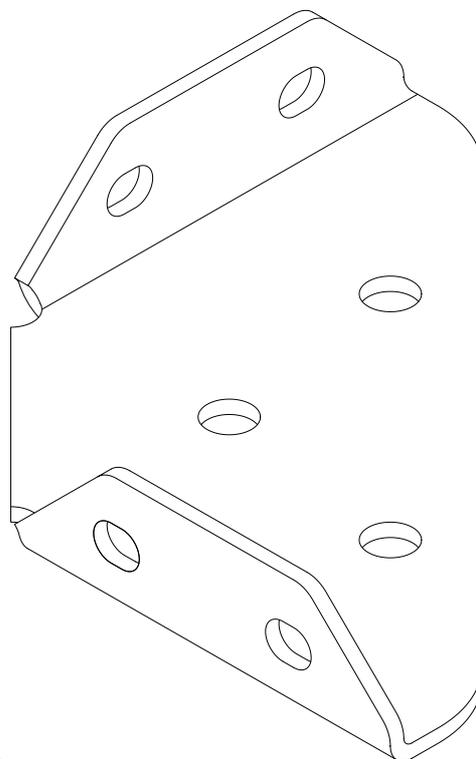


x4

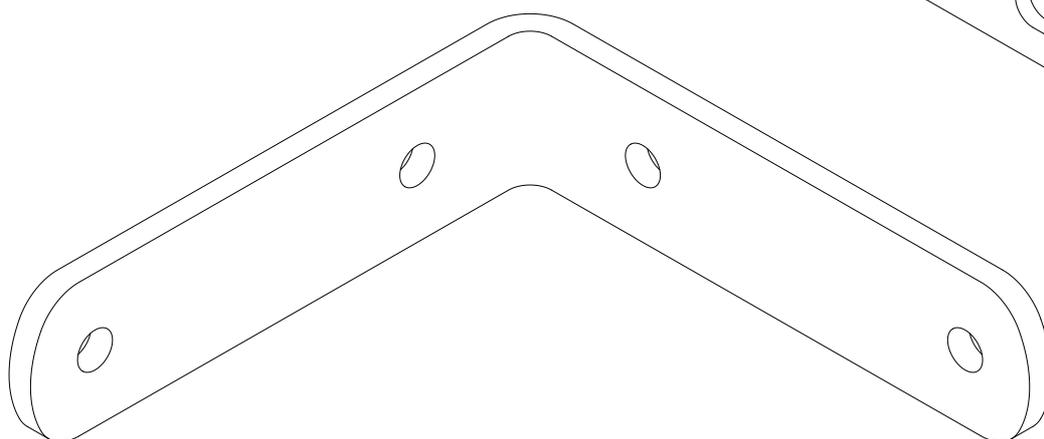


x4

ЛД1

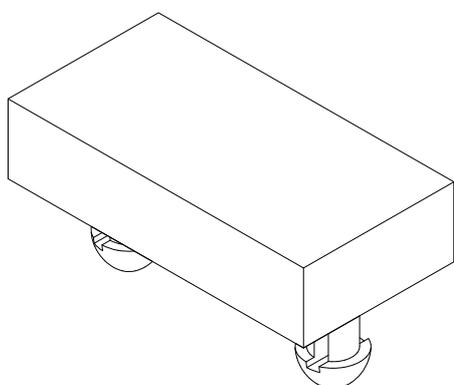













x28

ЛД2

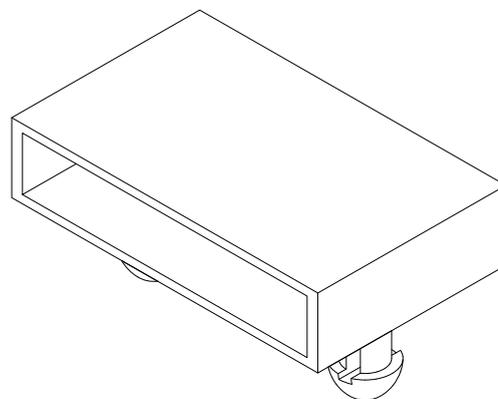


x14


M 1:1

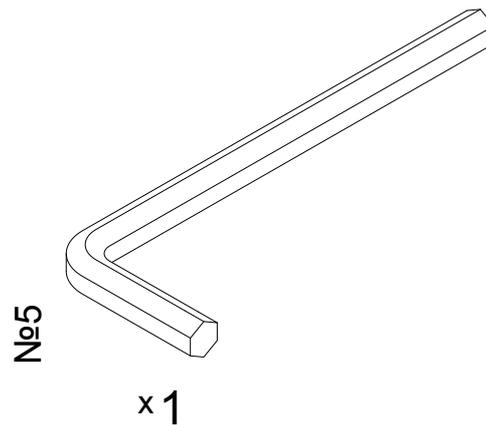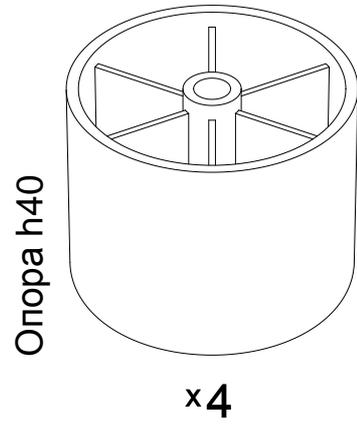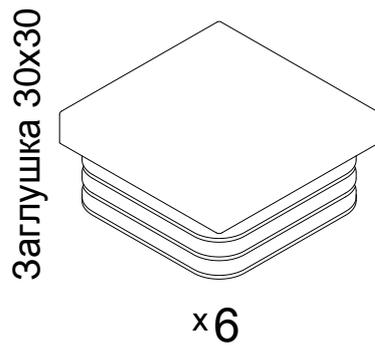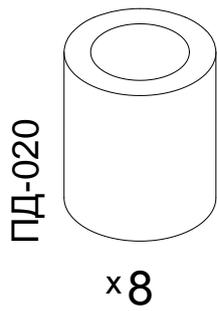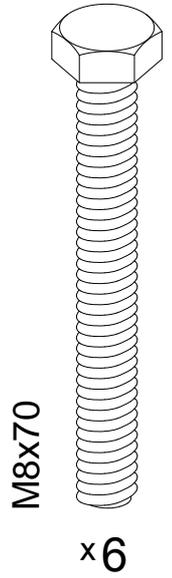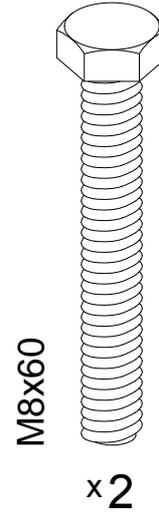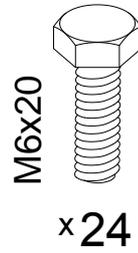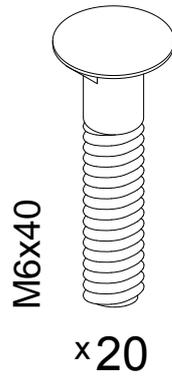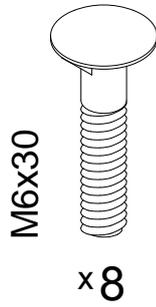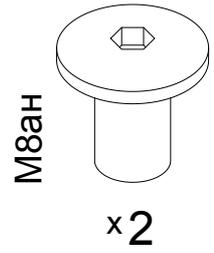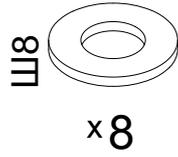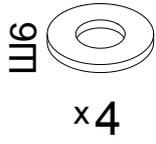


1

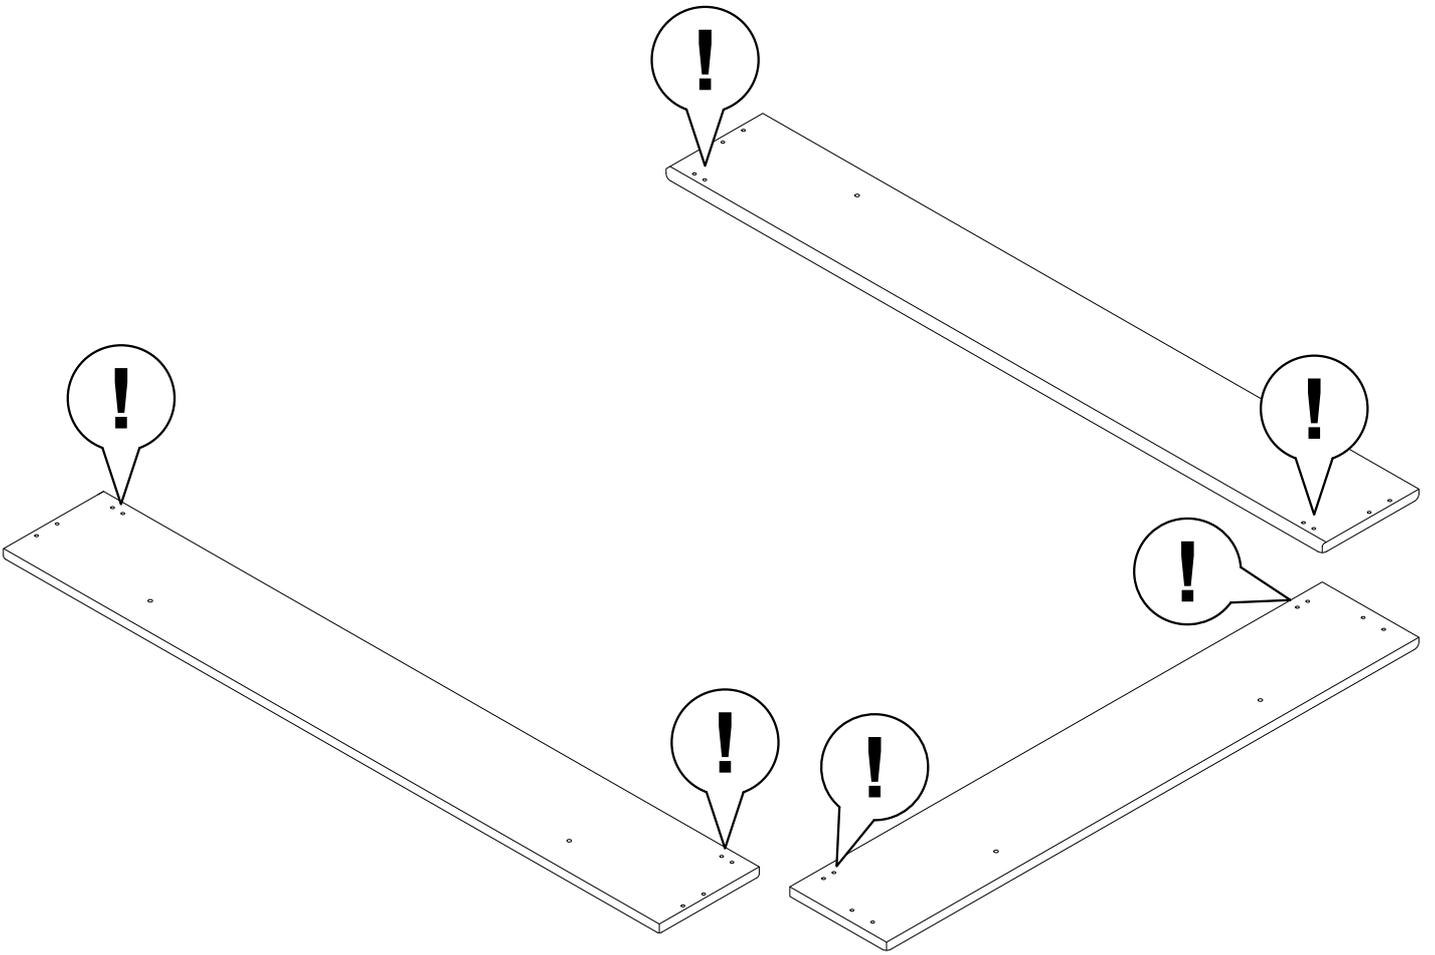


2

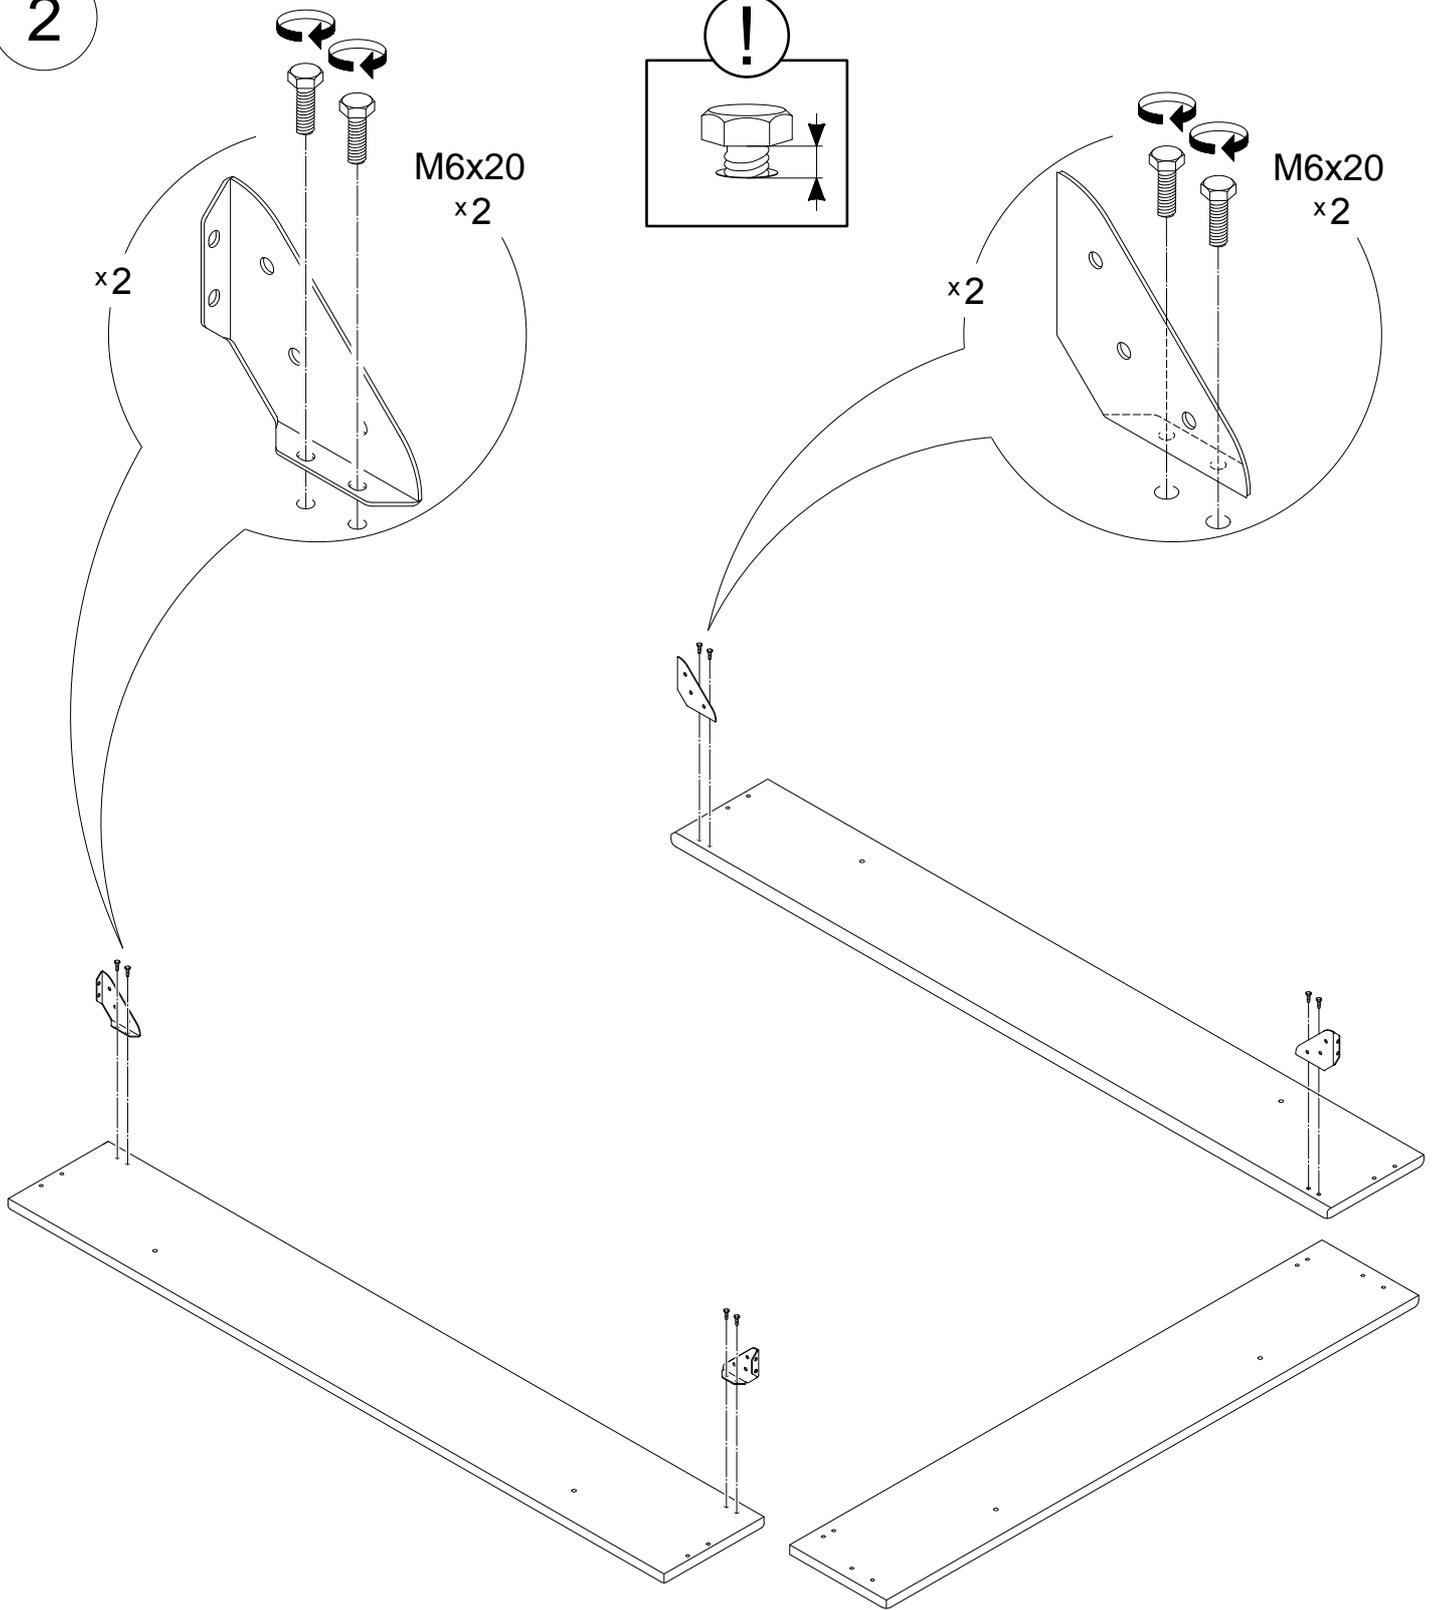


3

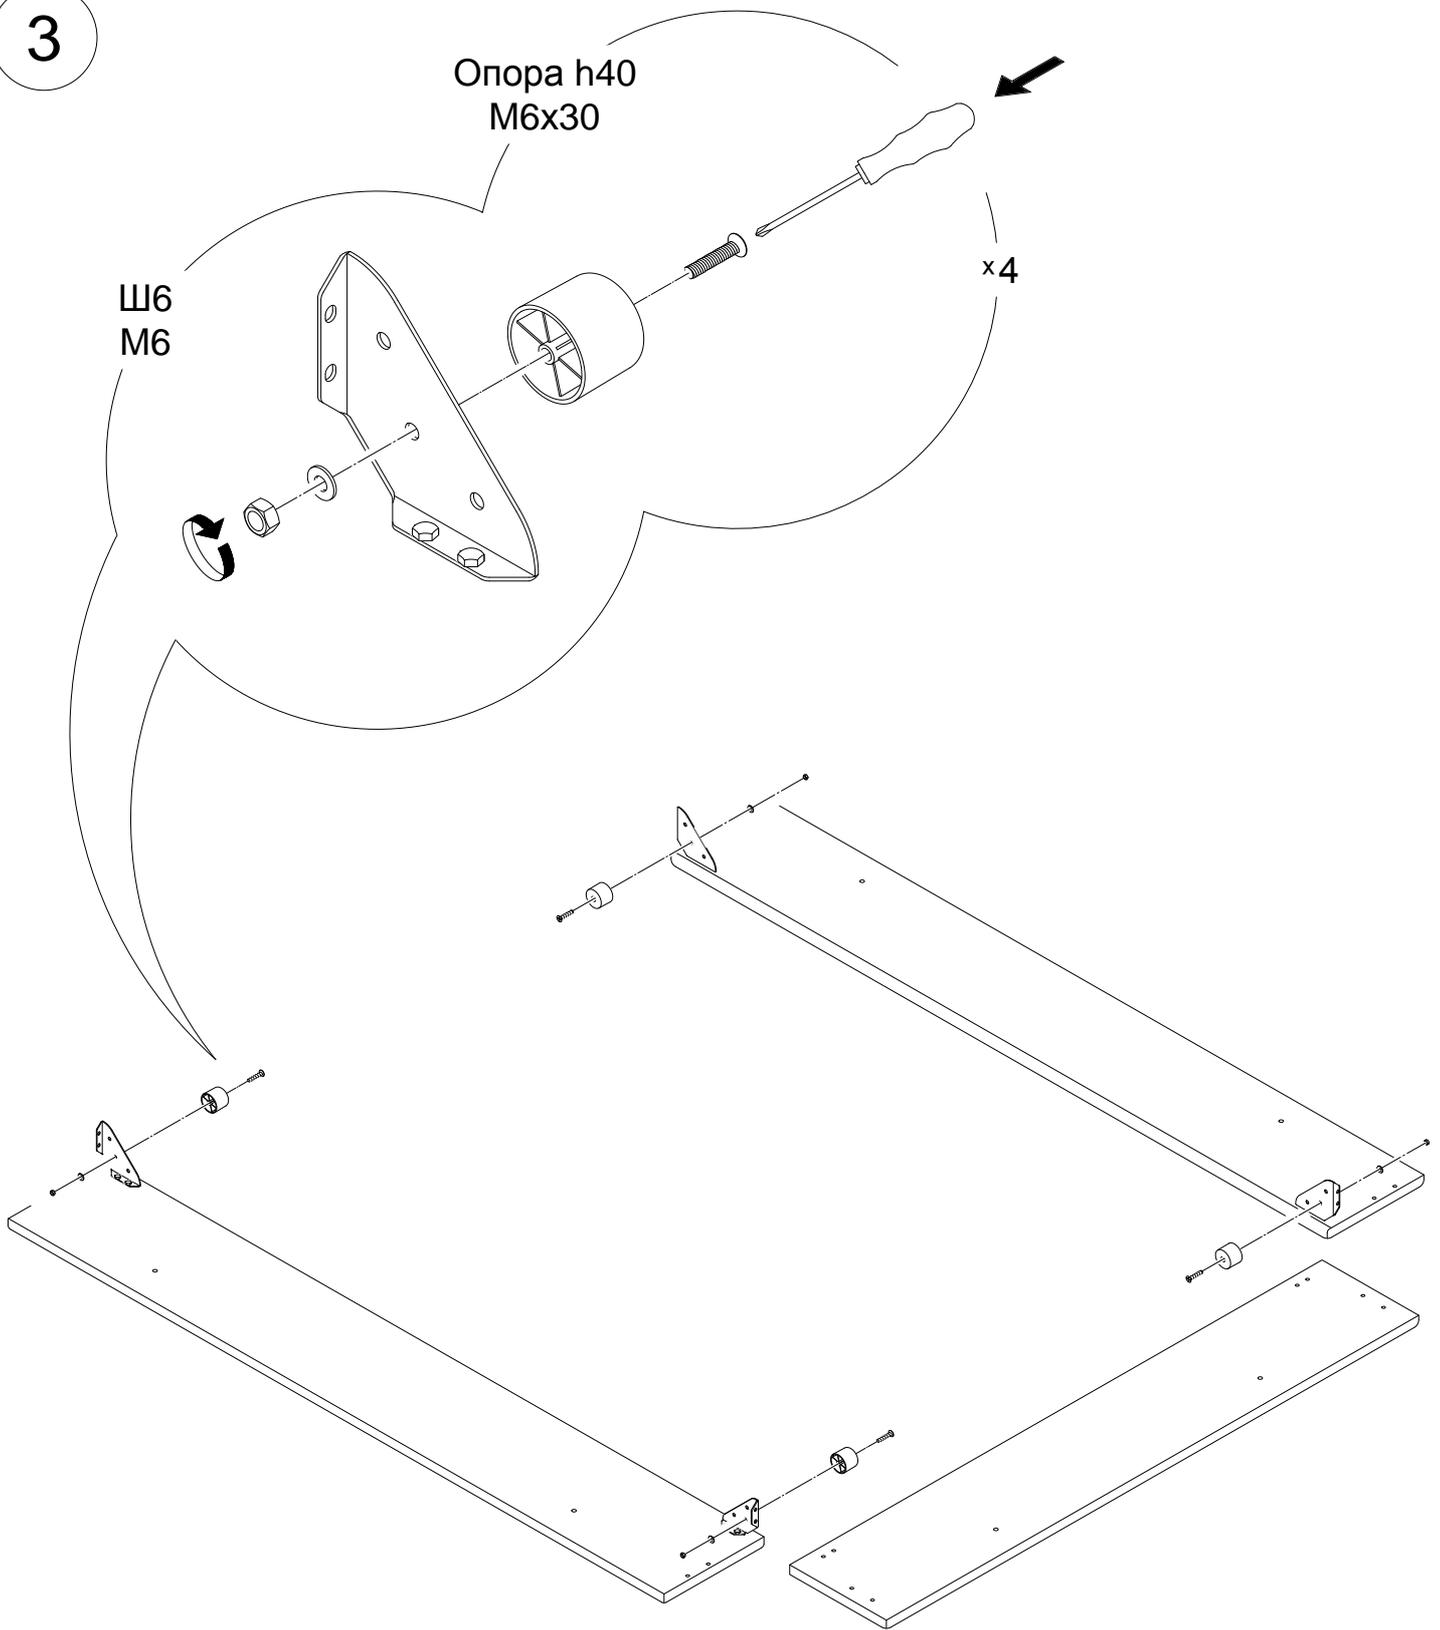



4

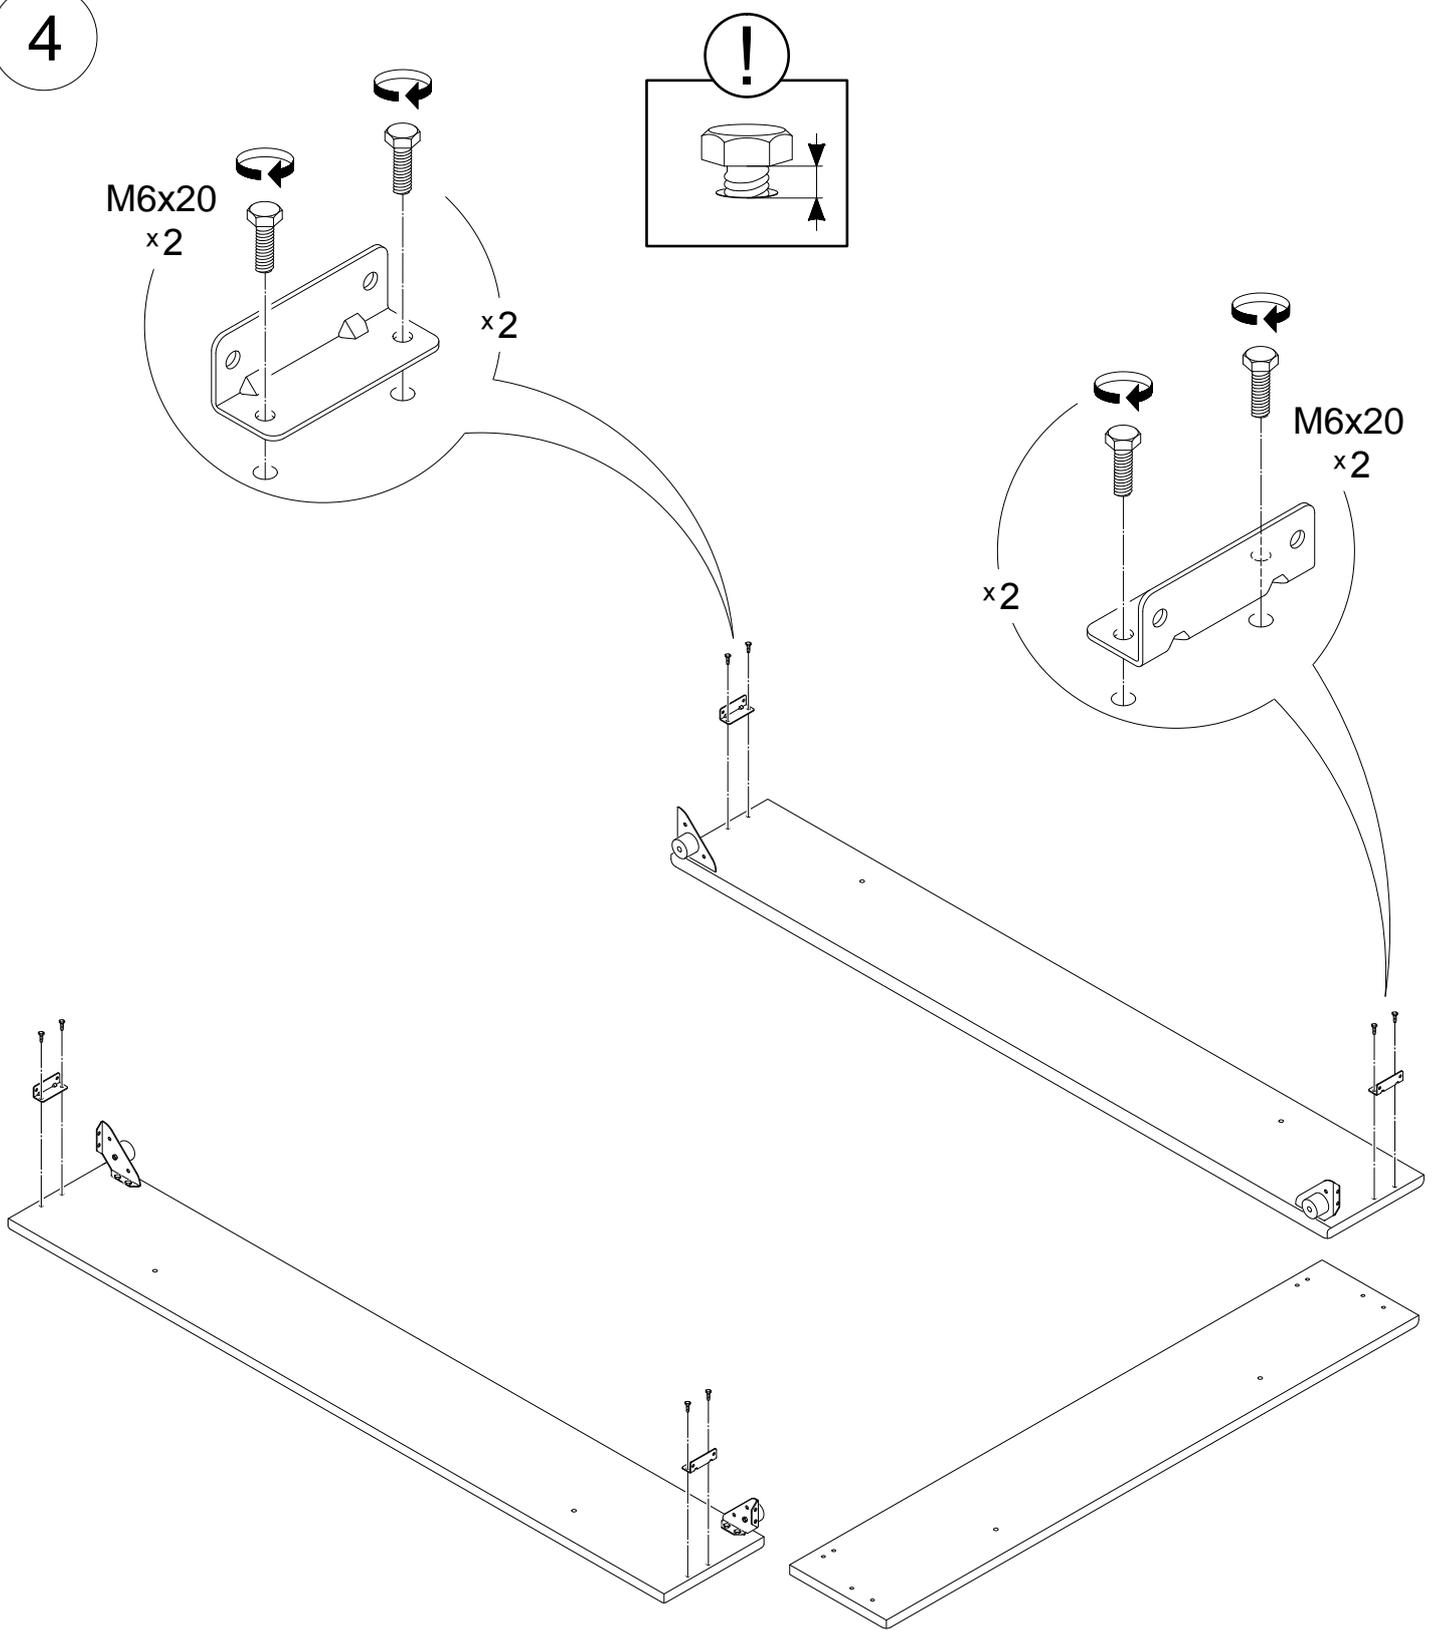




5

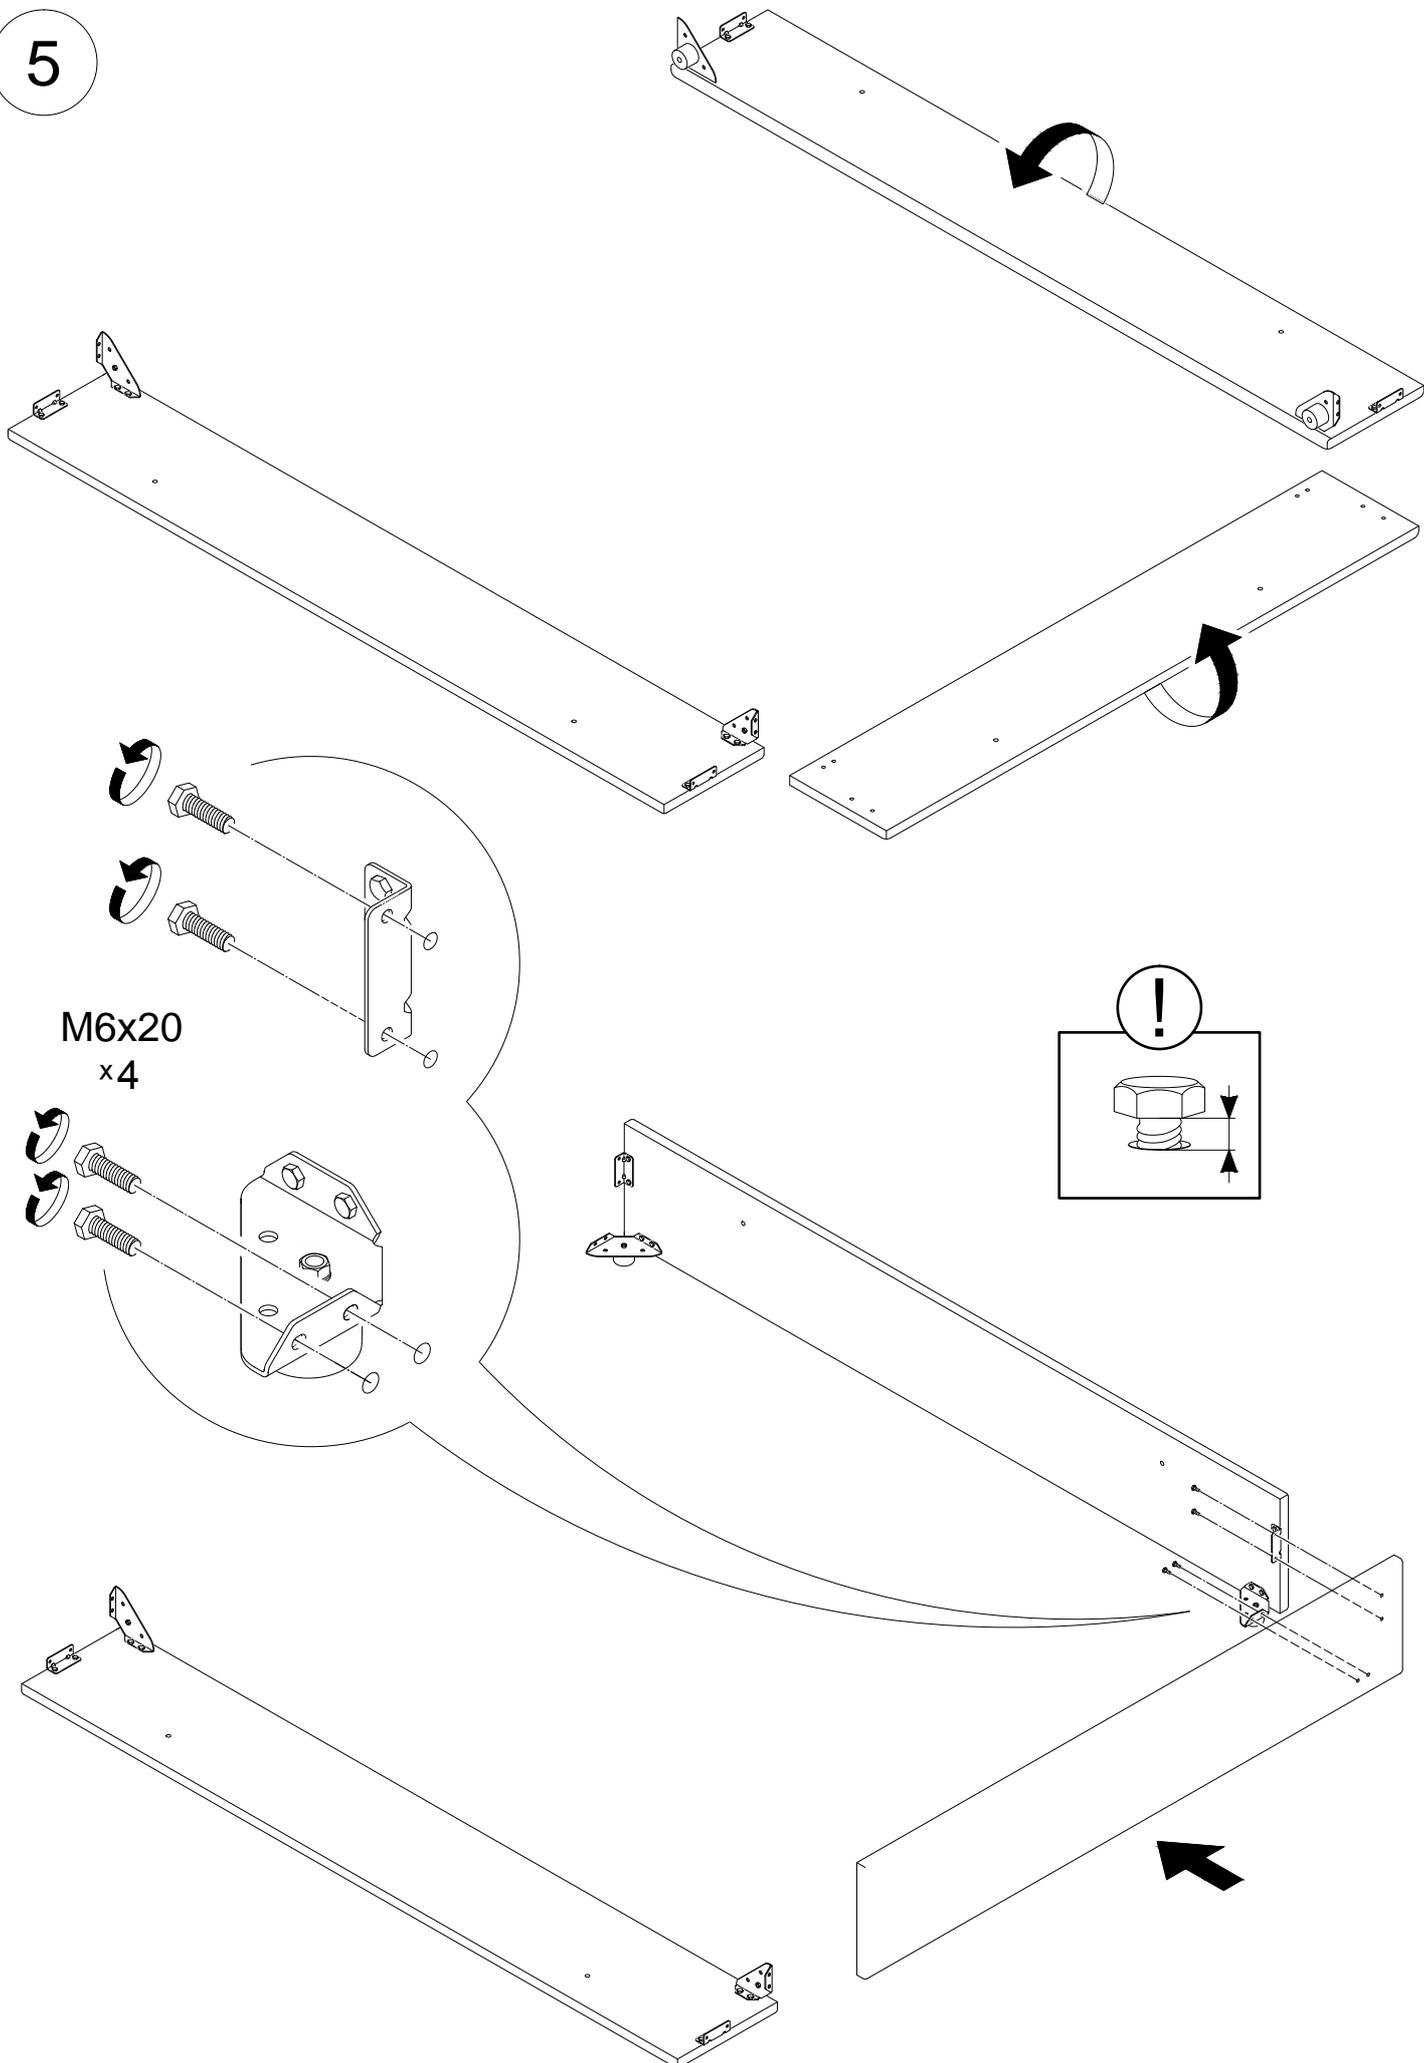



6

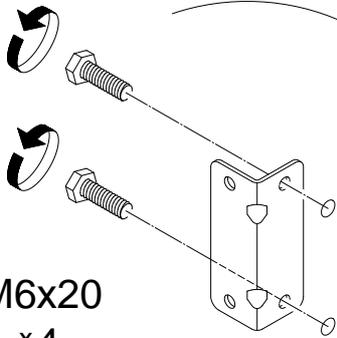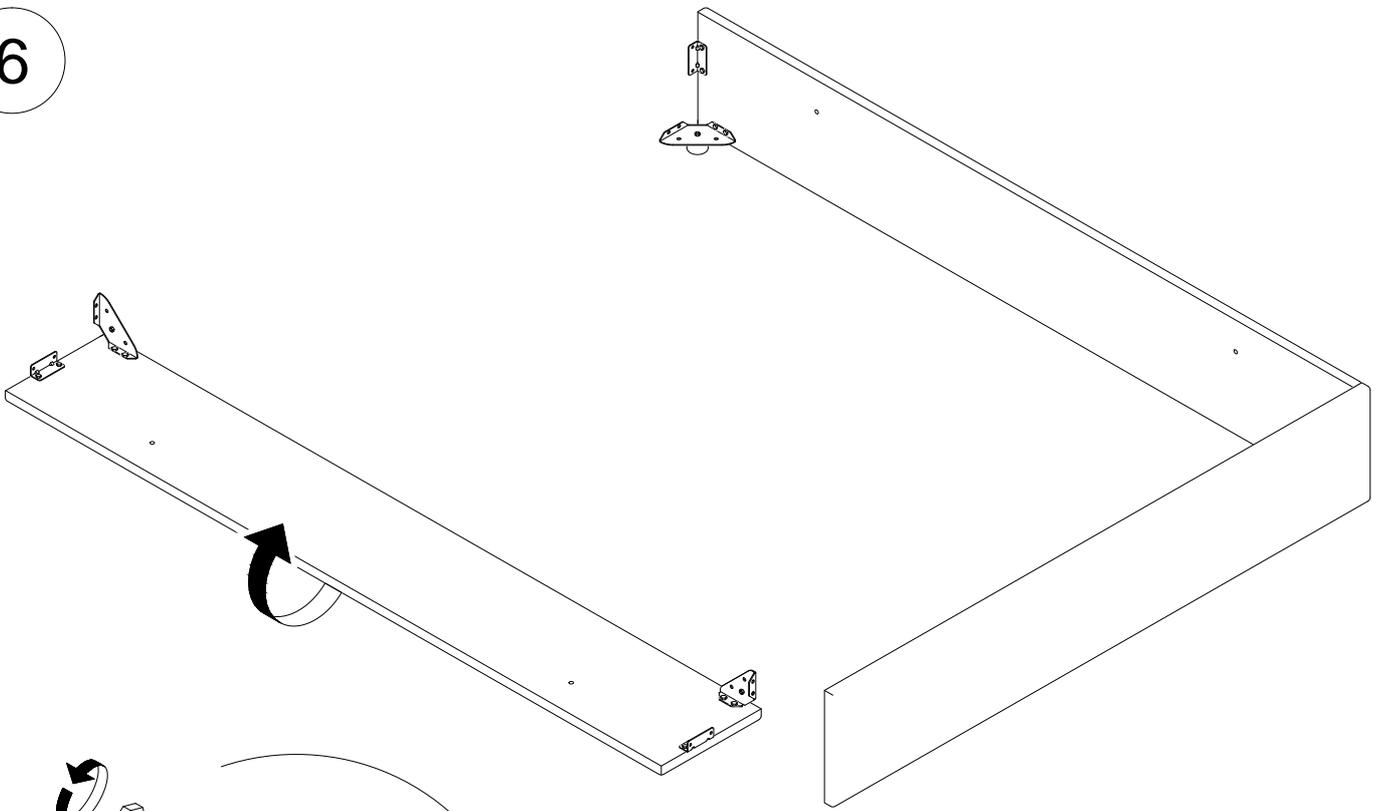



M6x20
x4

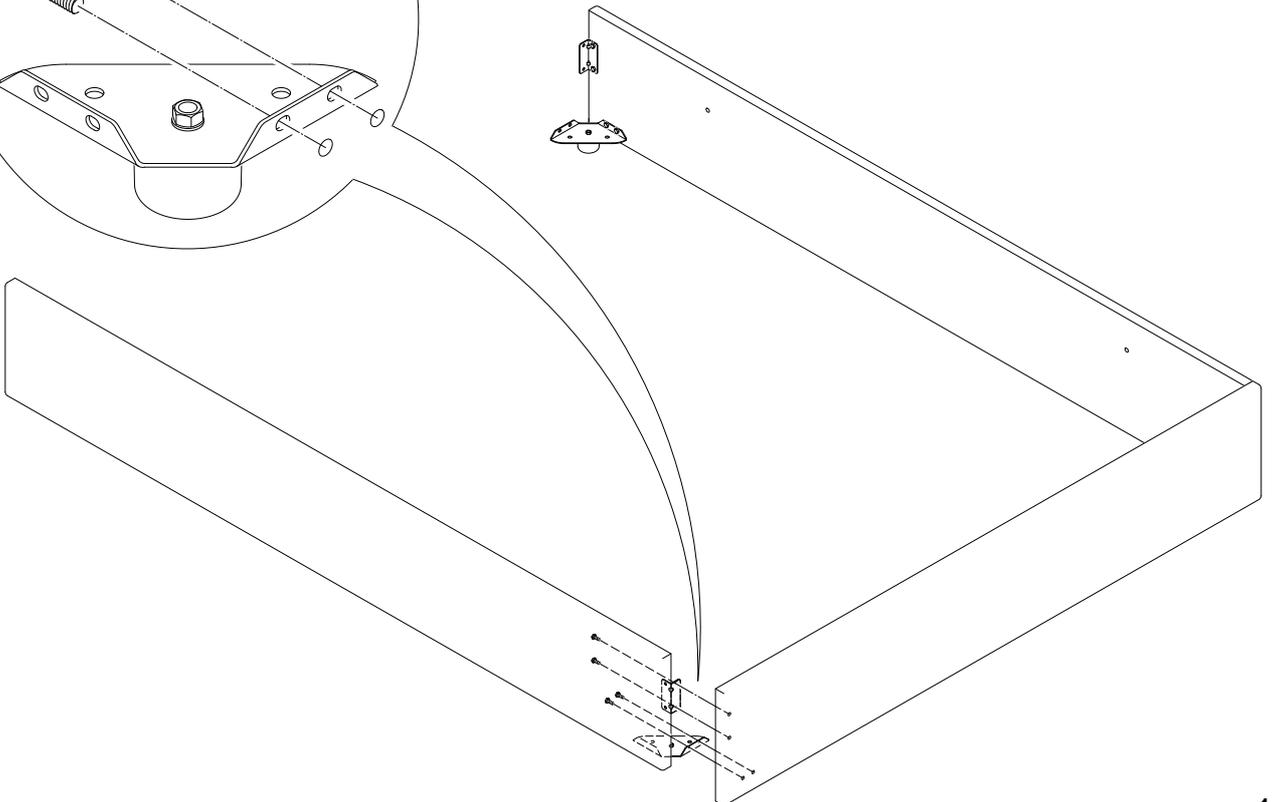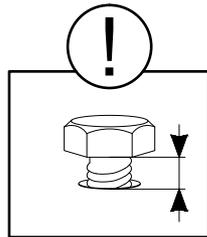
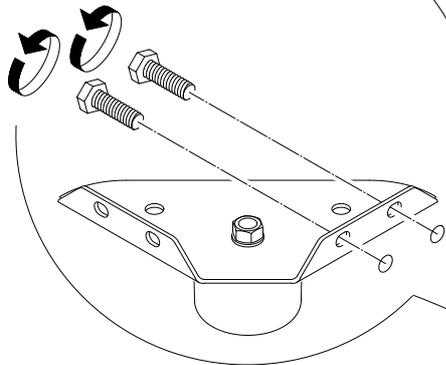


7

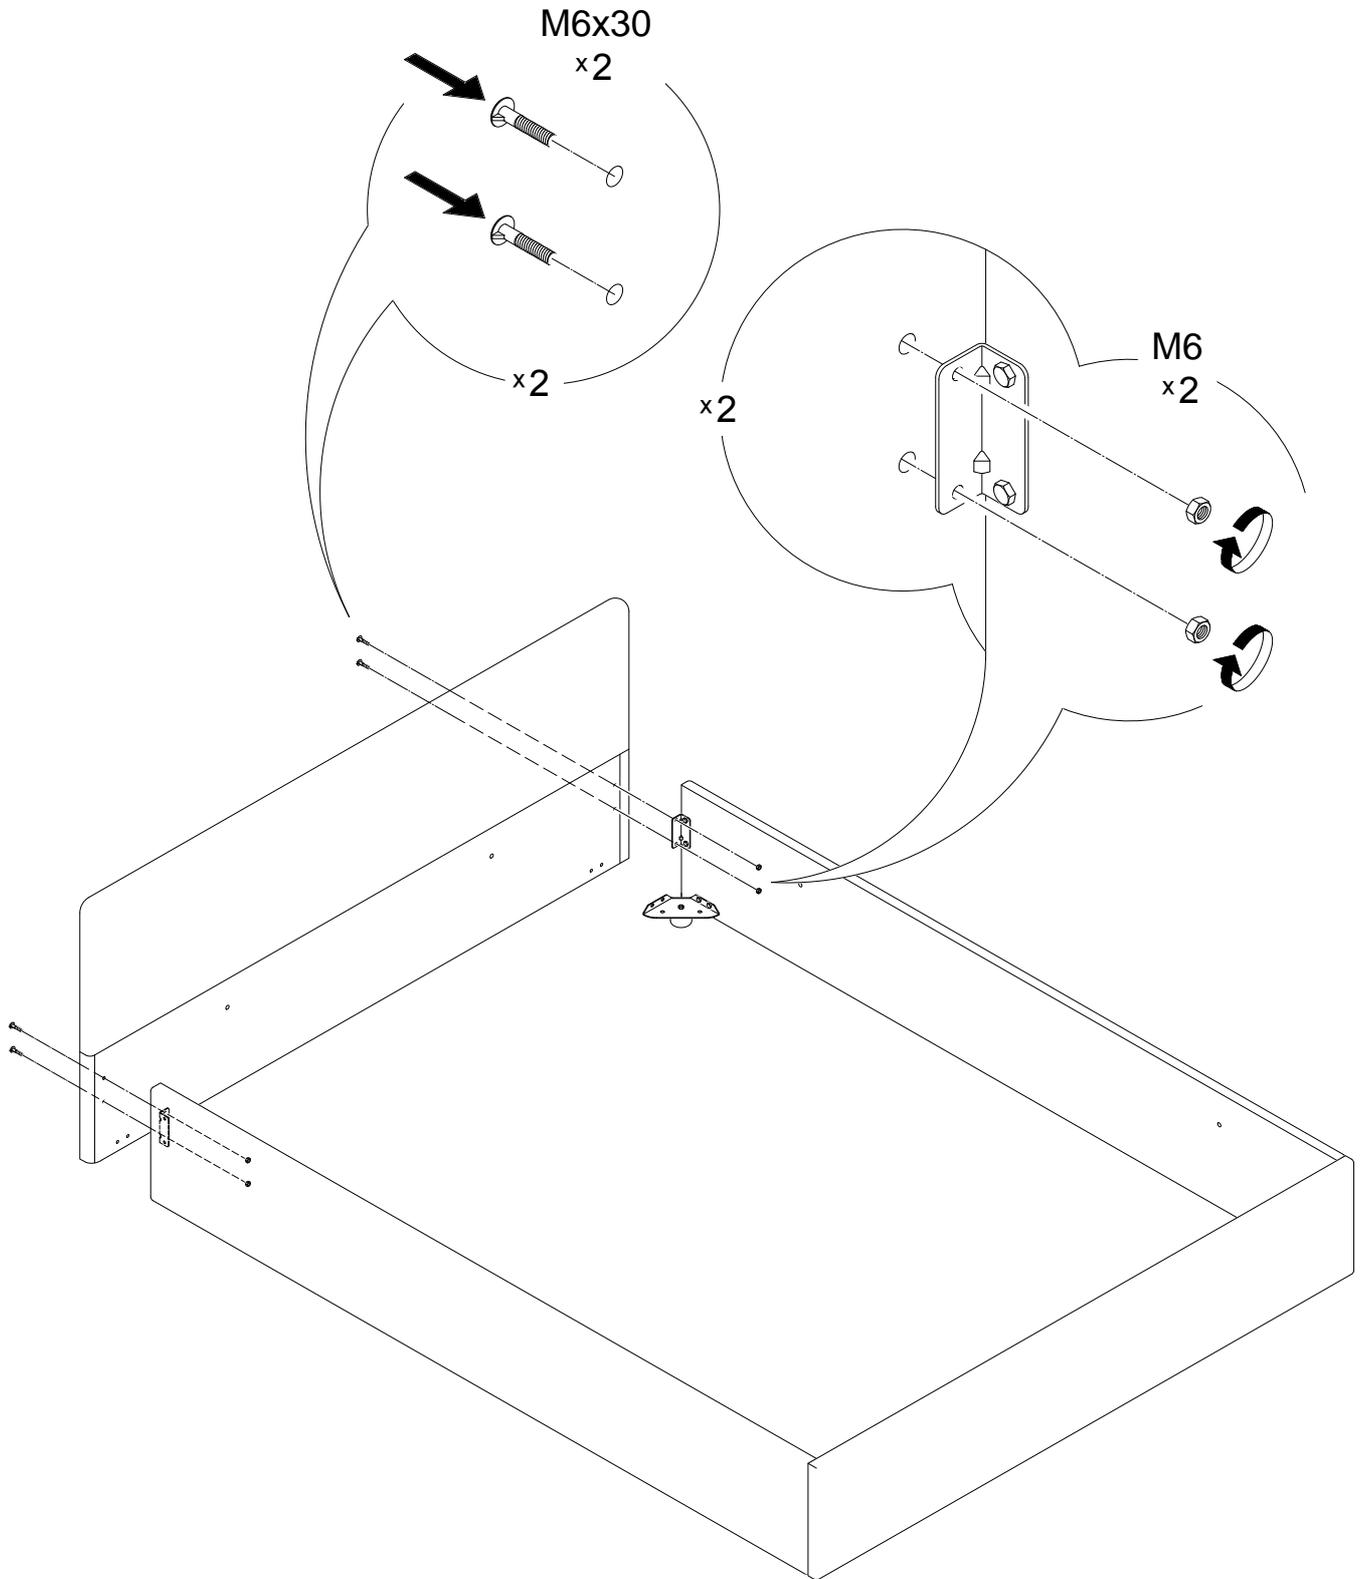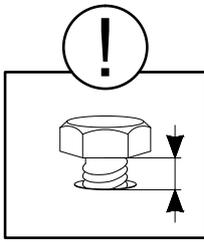




8

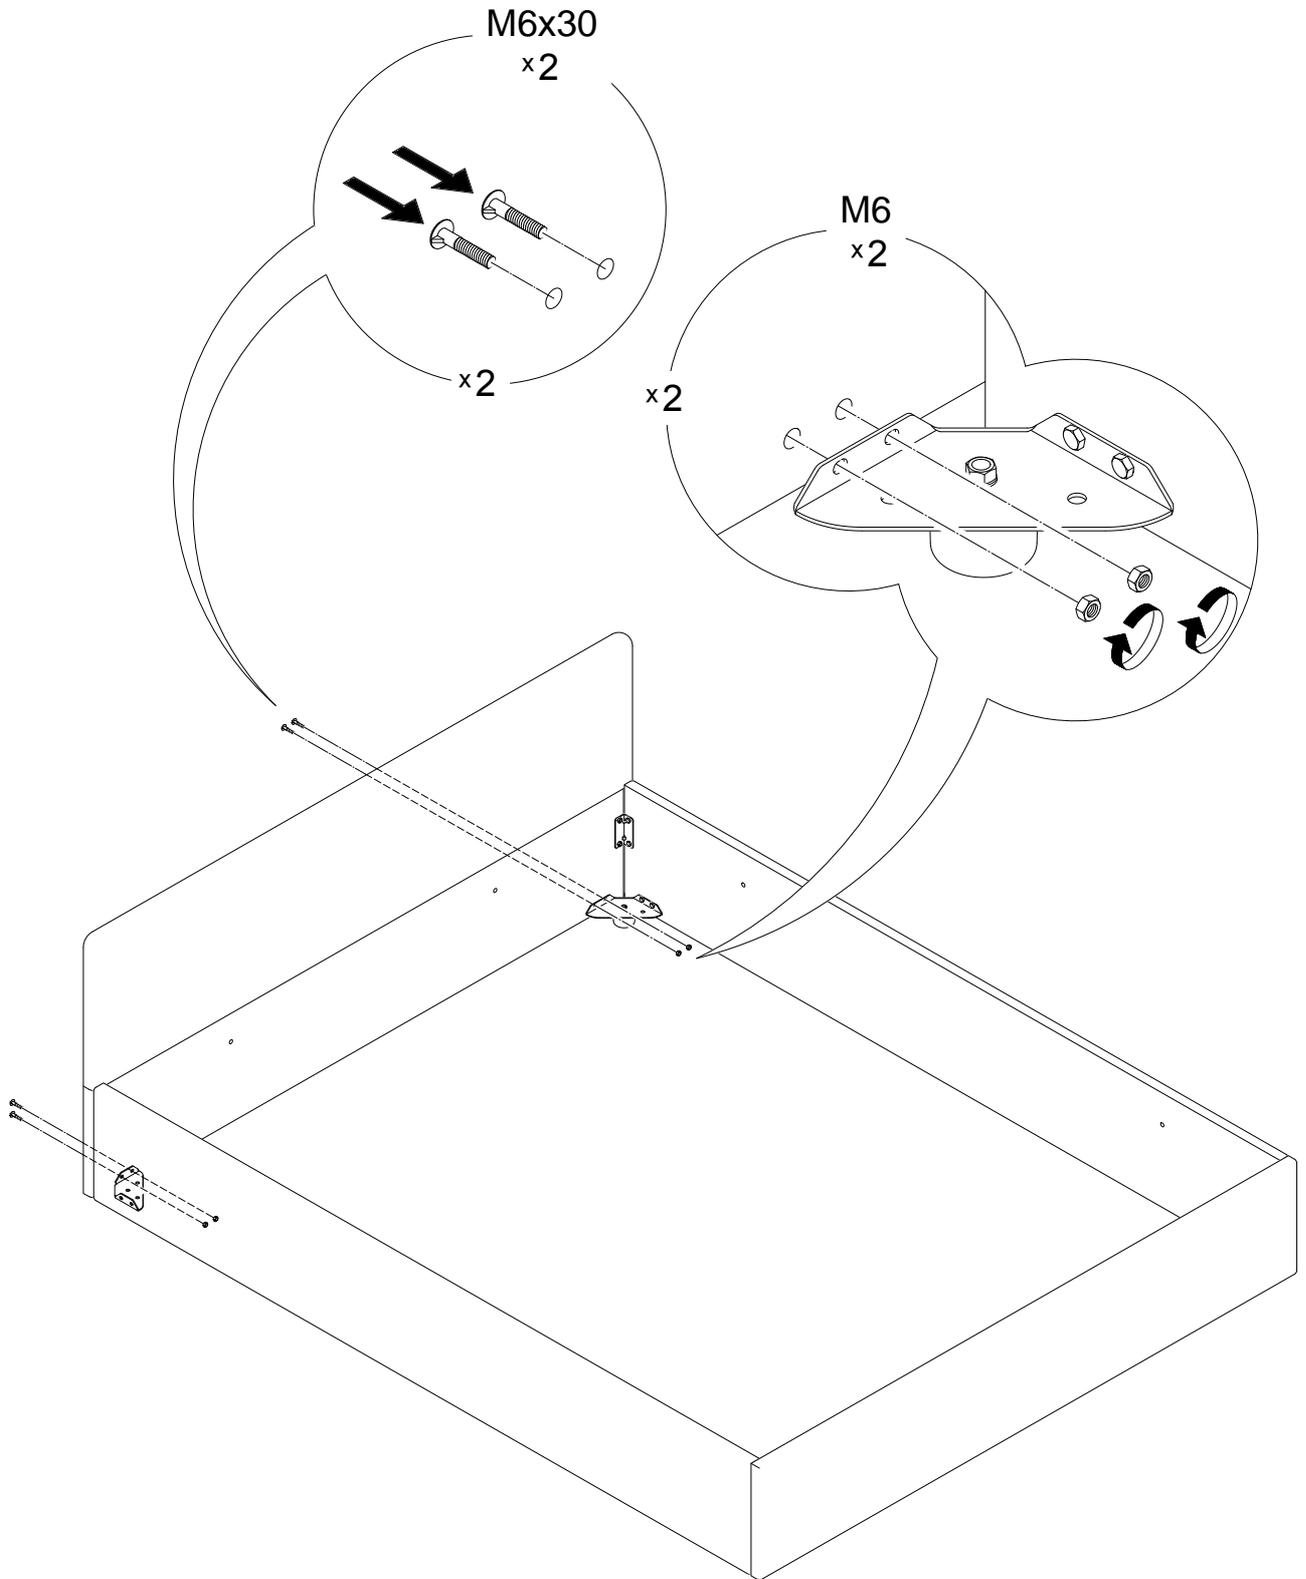
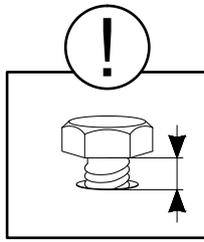


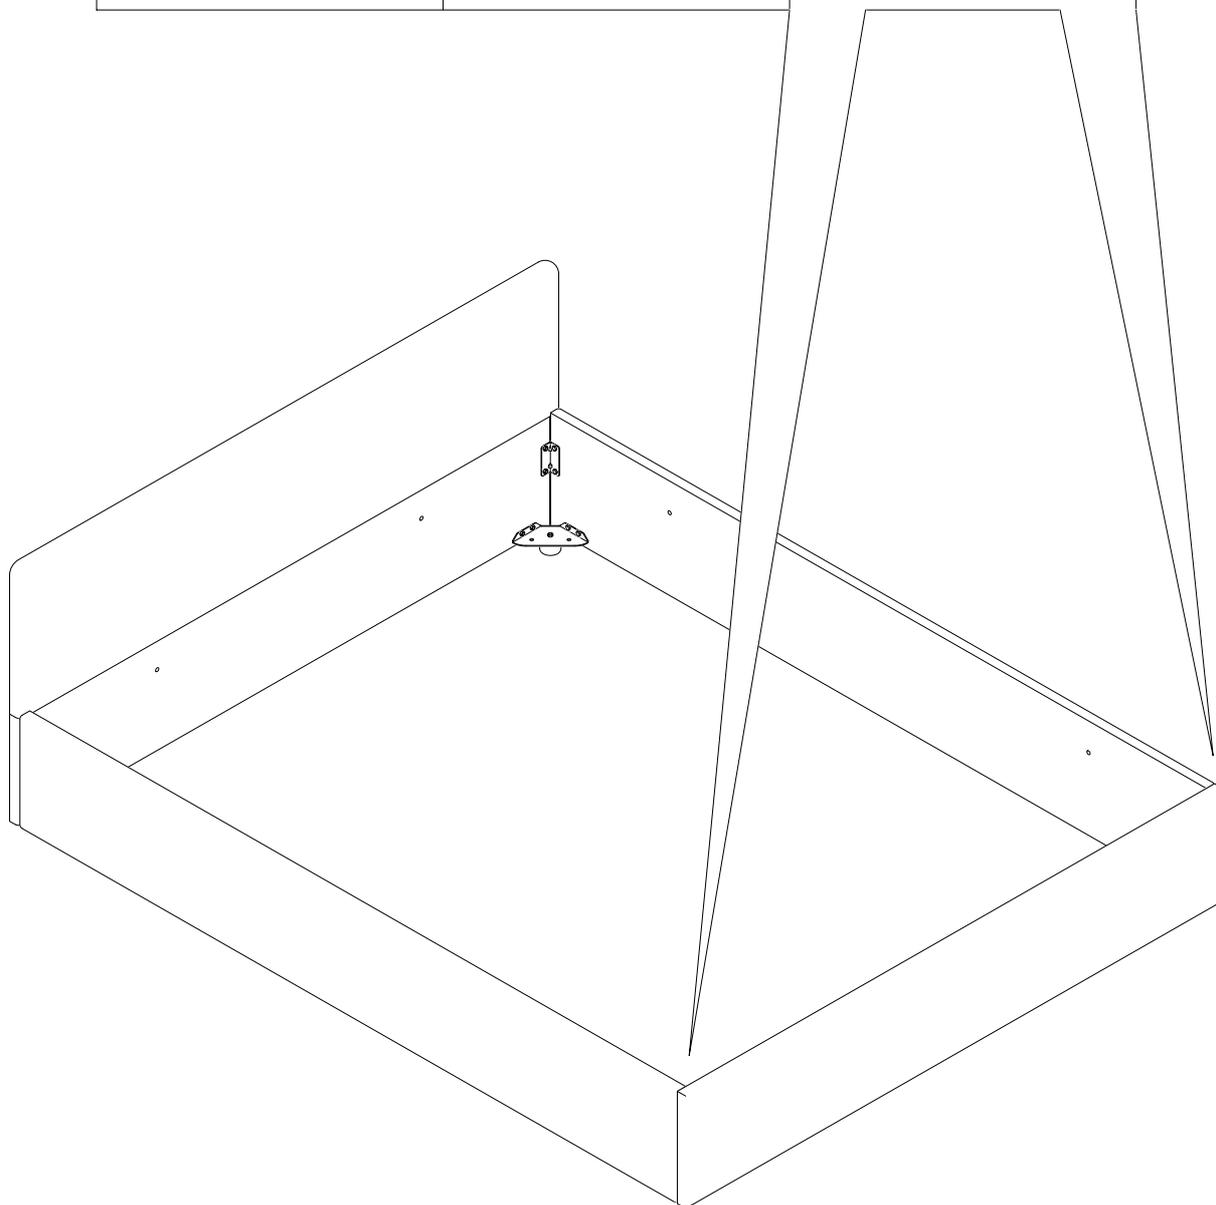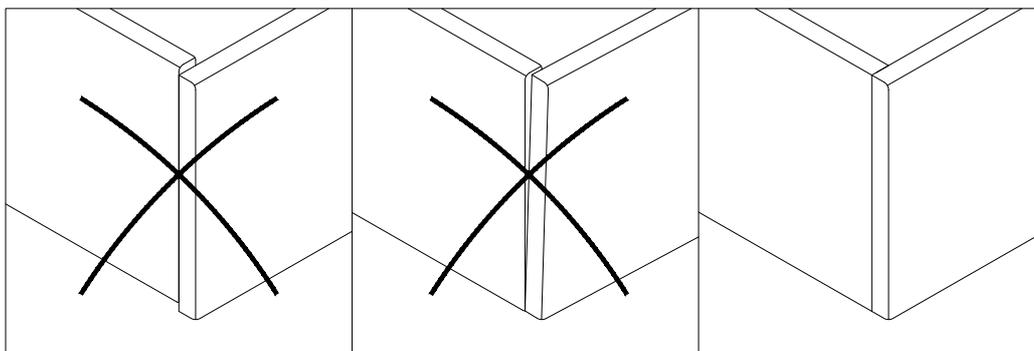


- 2
- 4
- 5
- 6
- 7
- 8

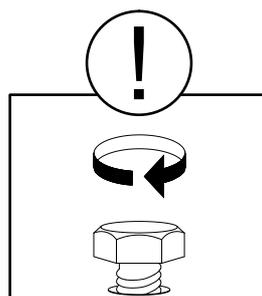


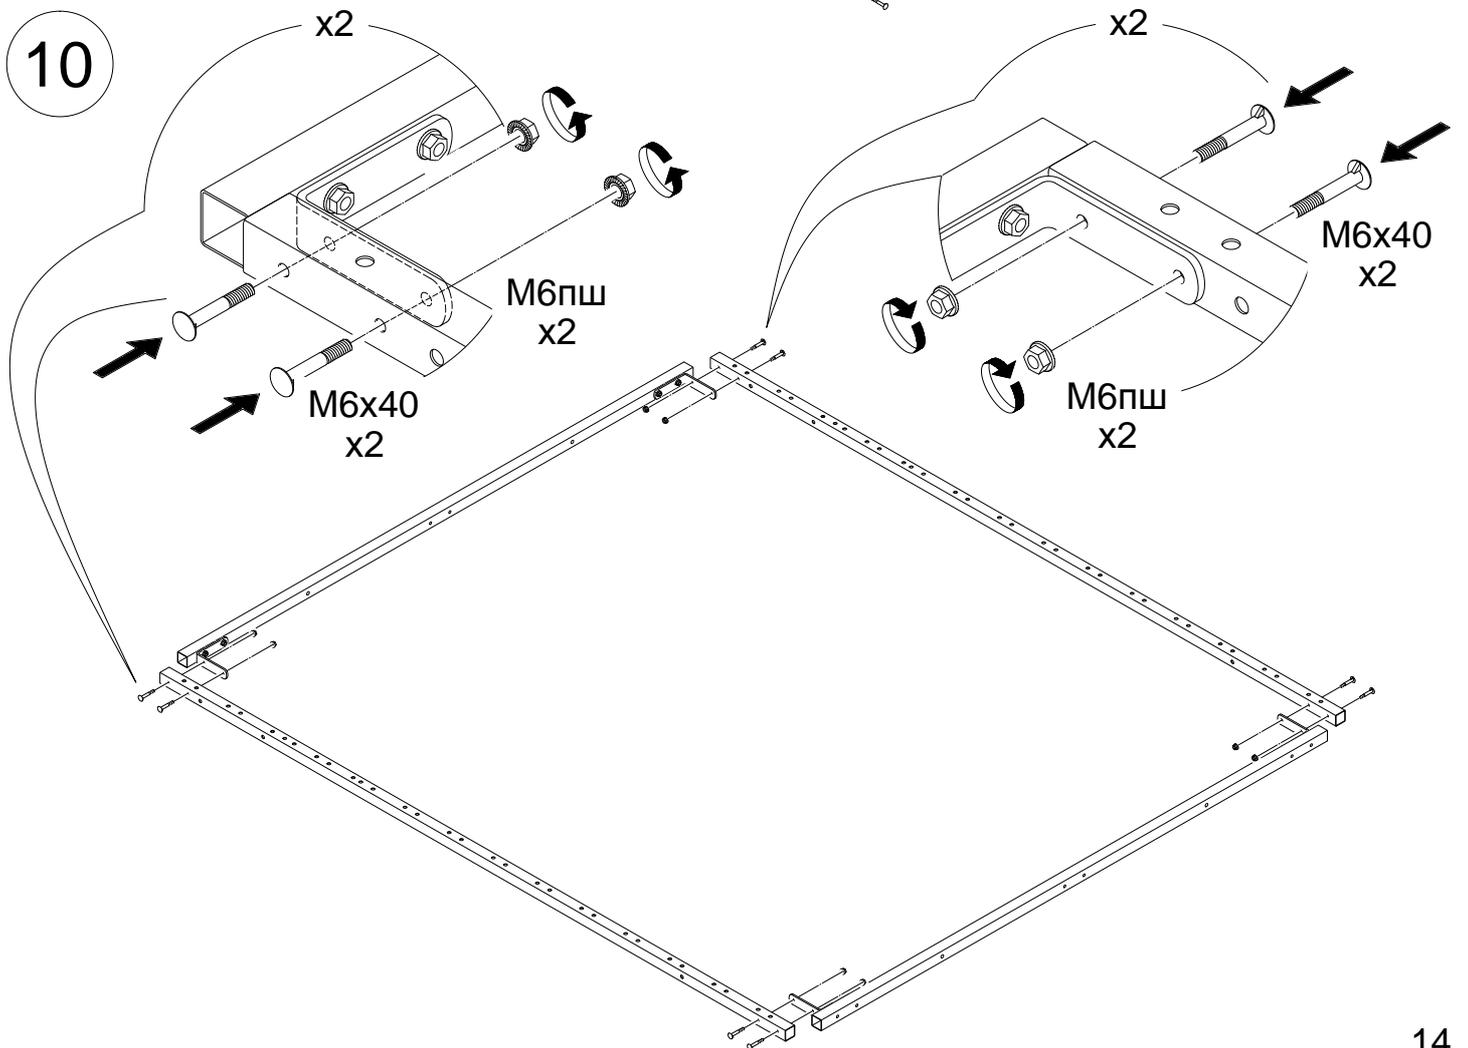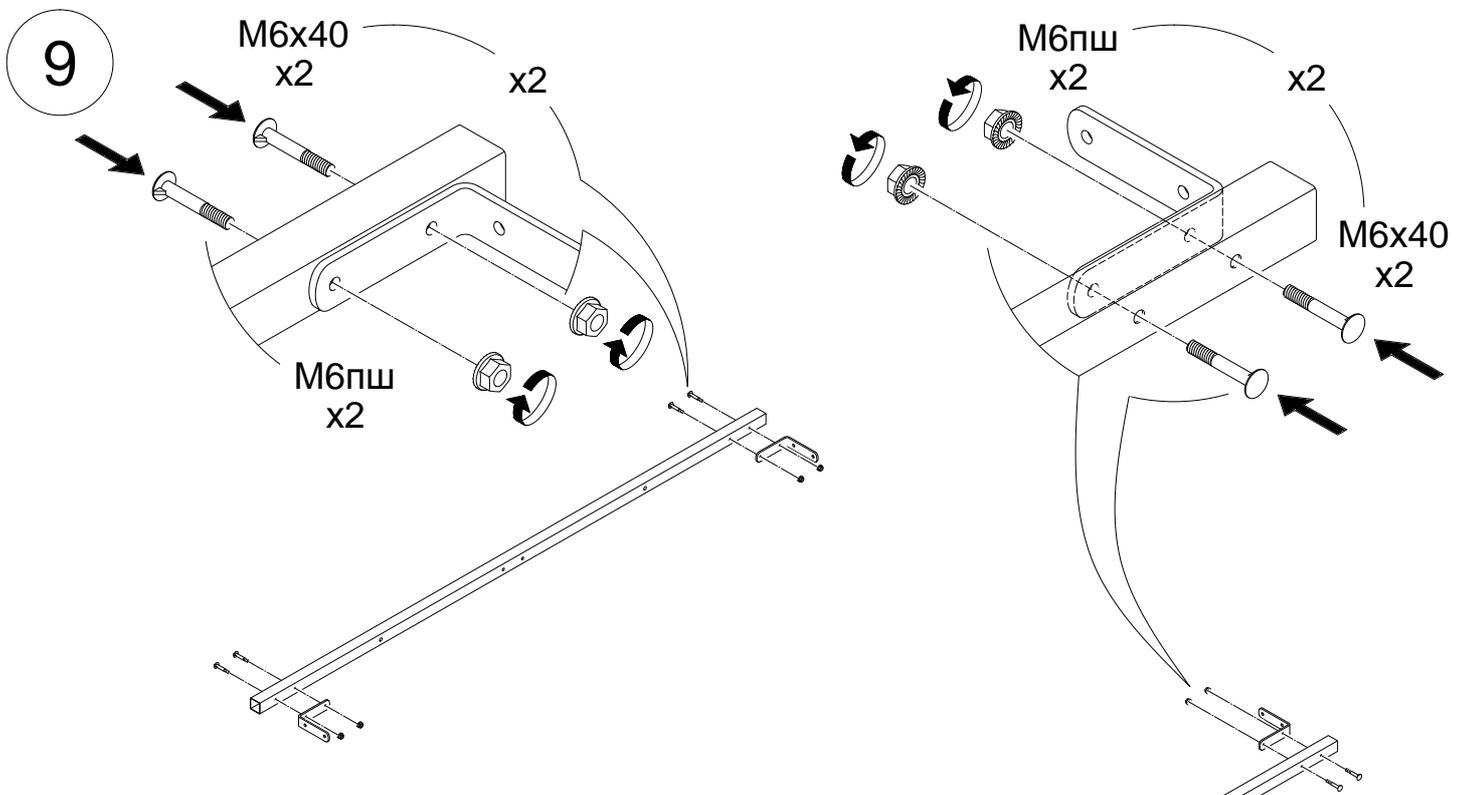


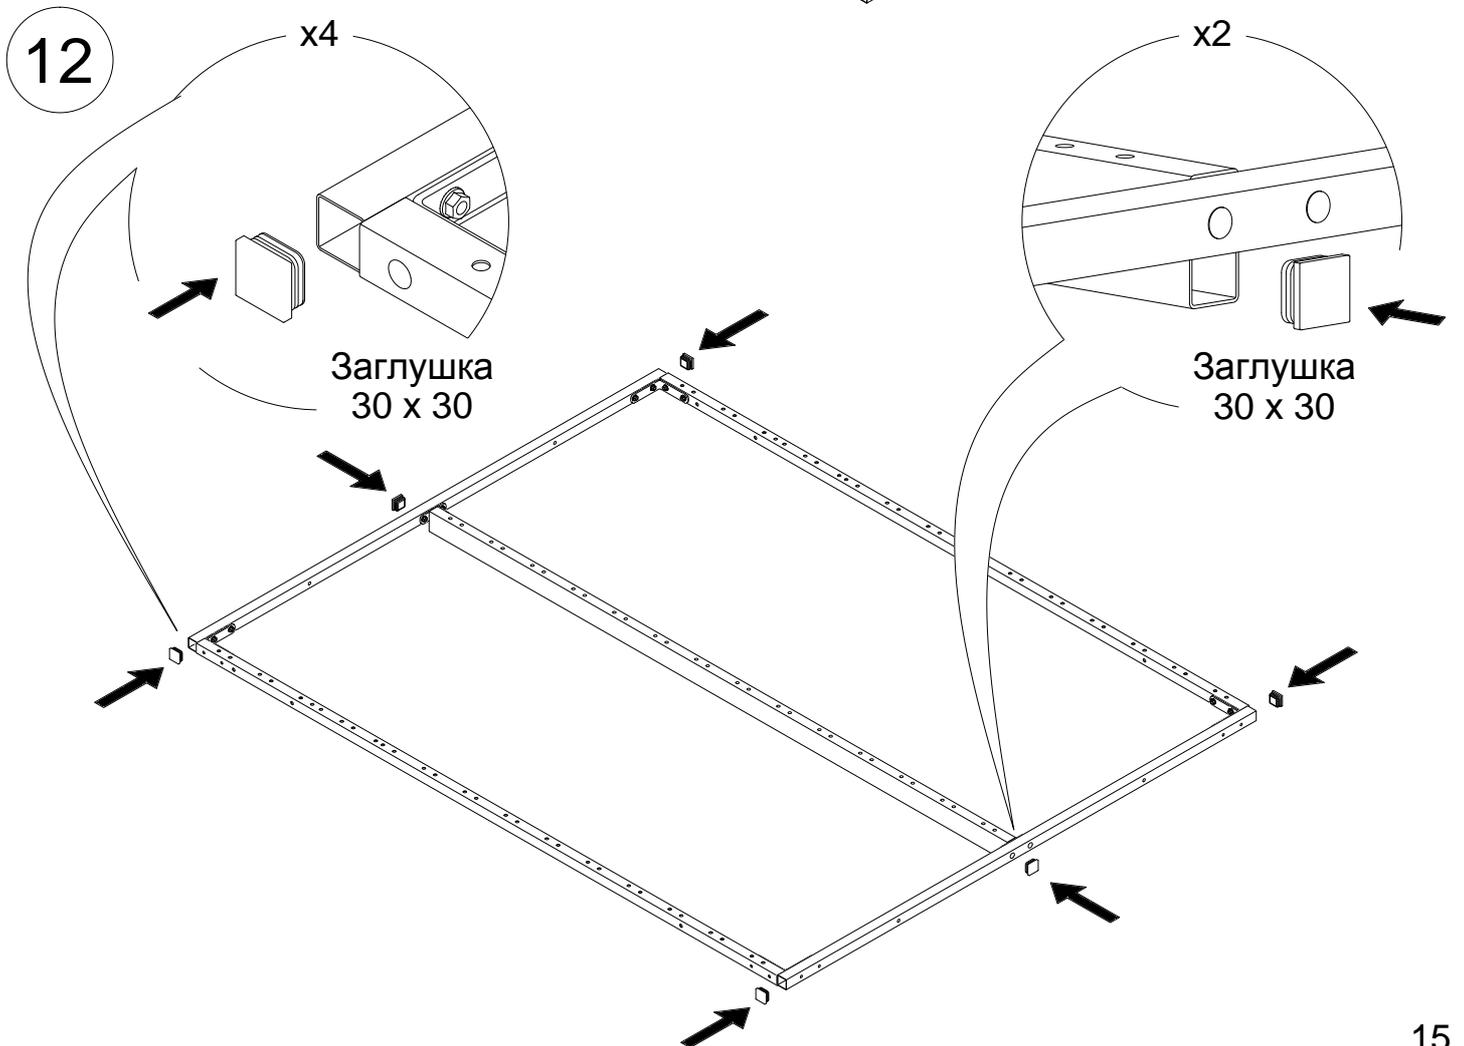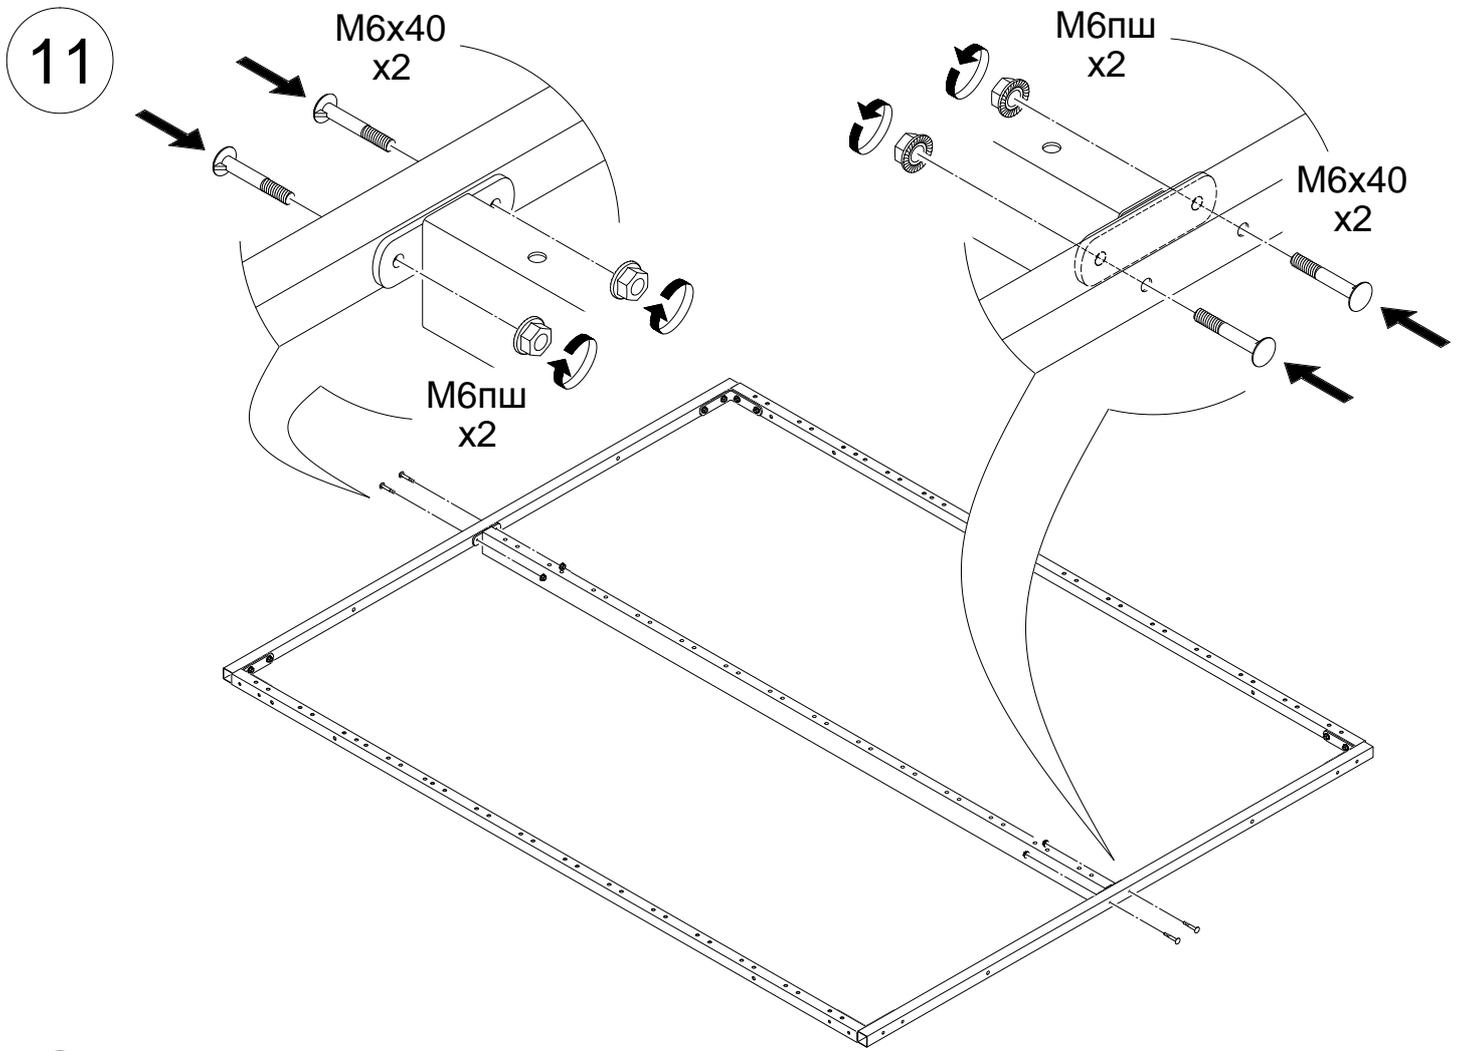


13

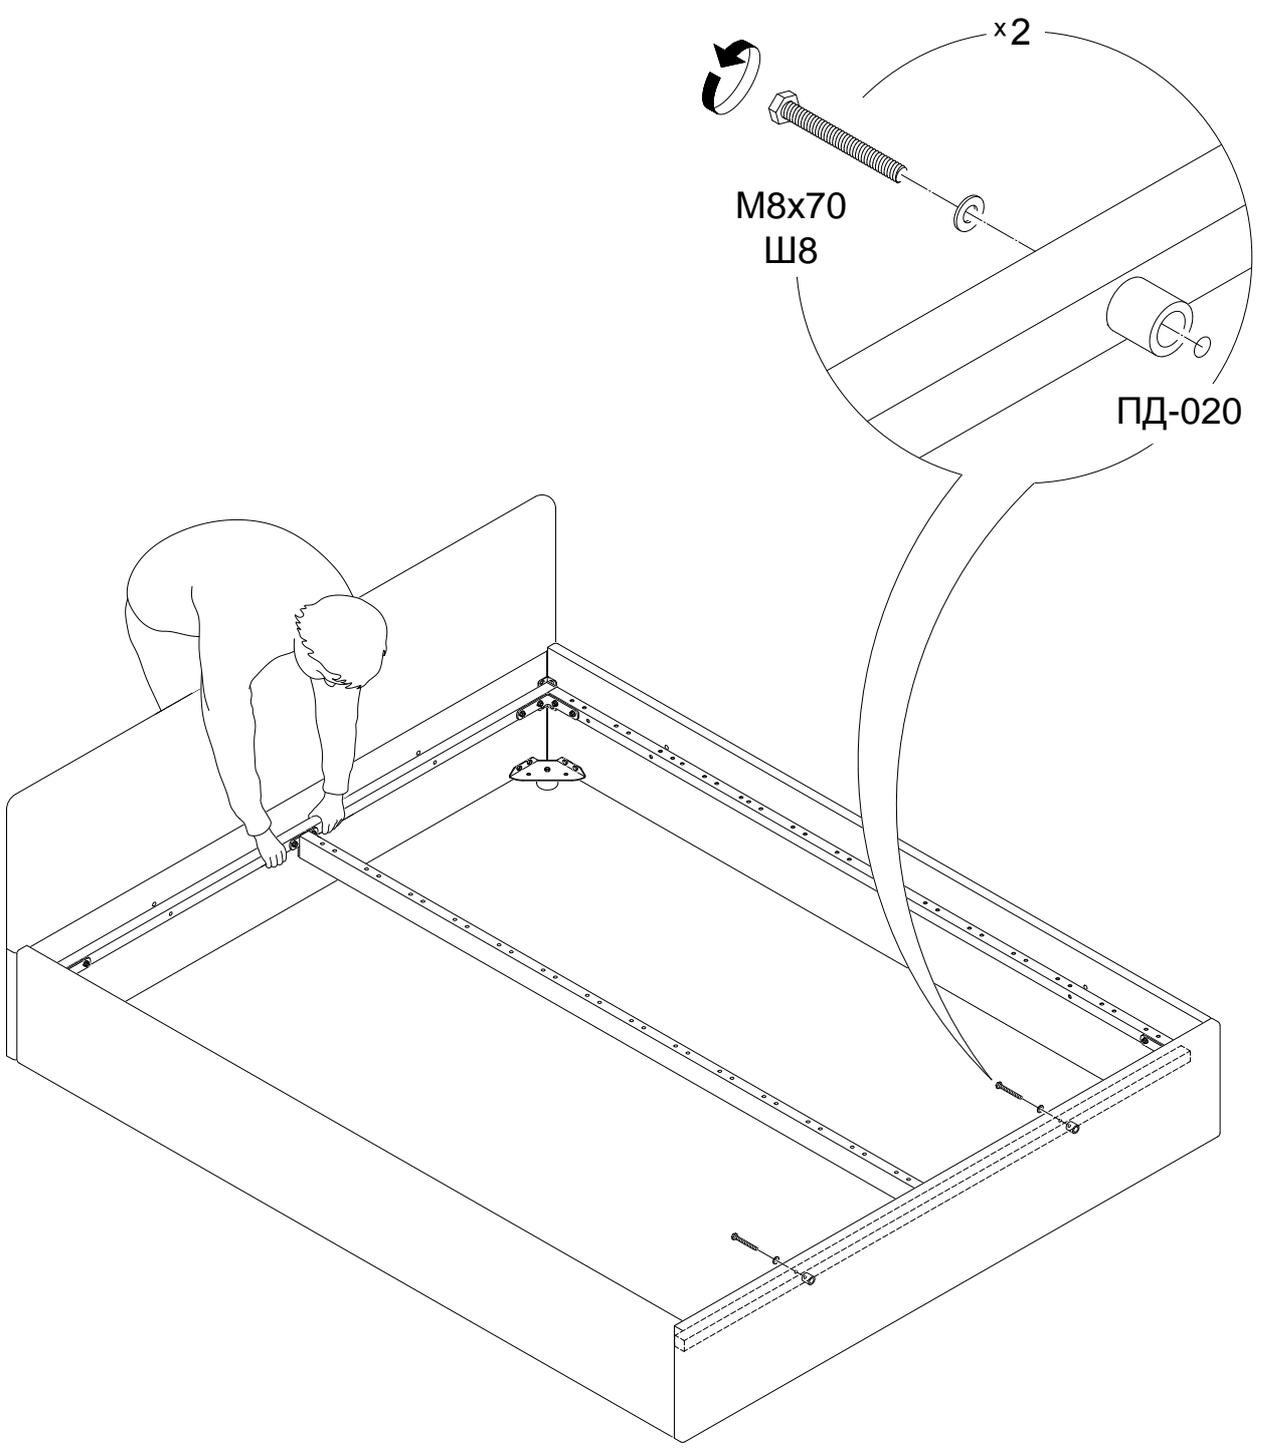

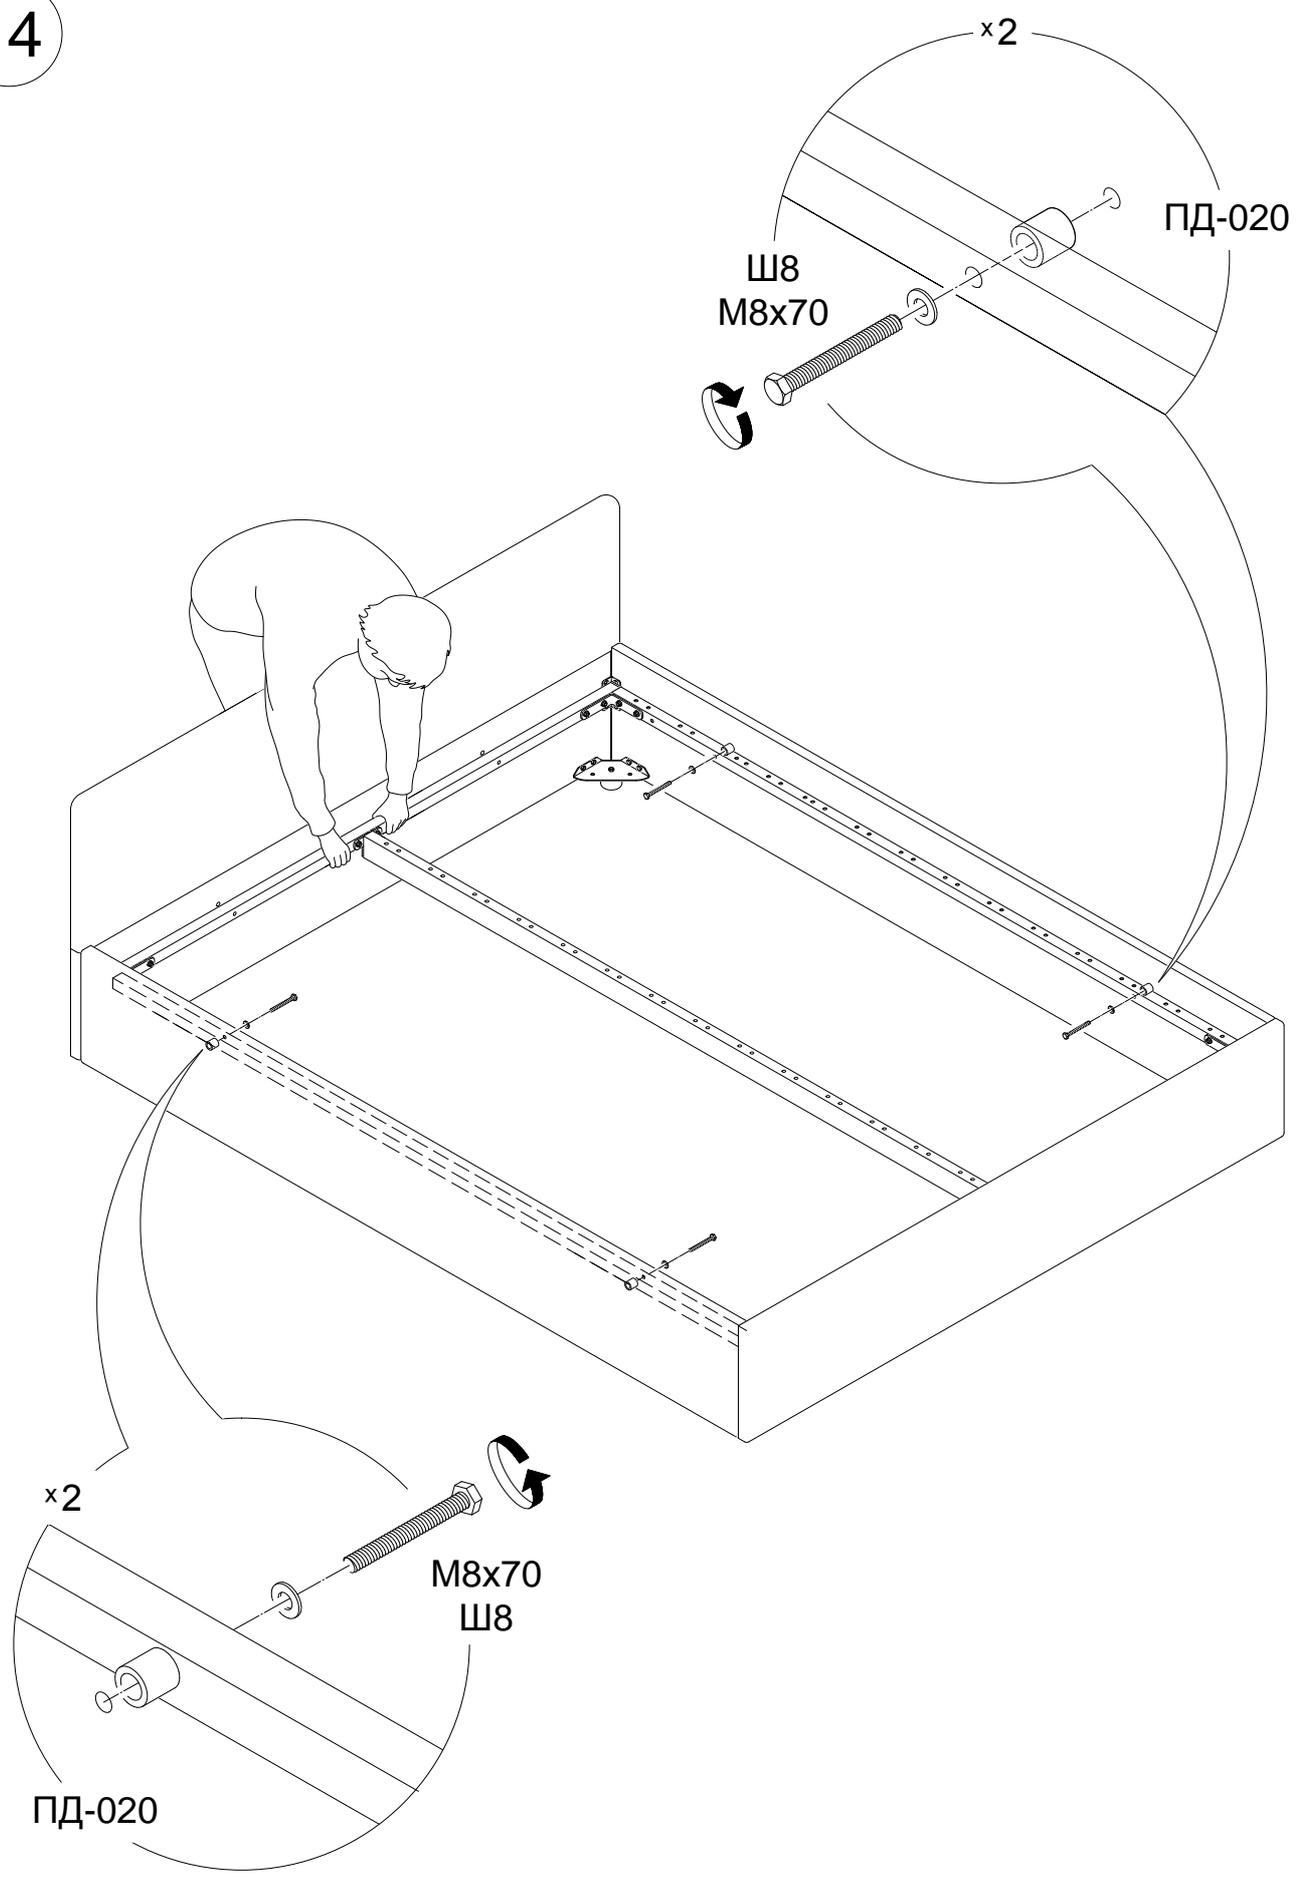

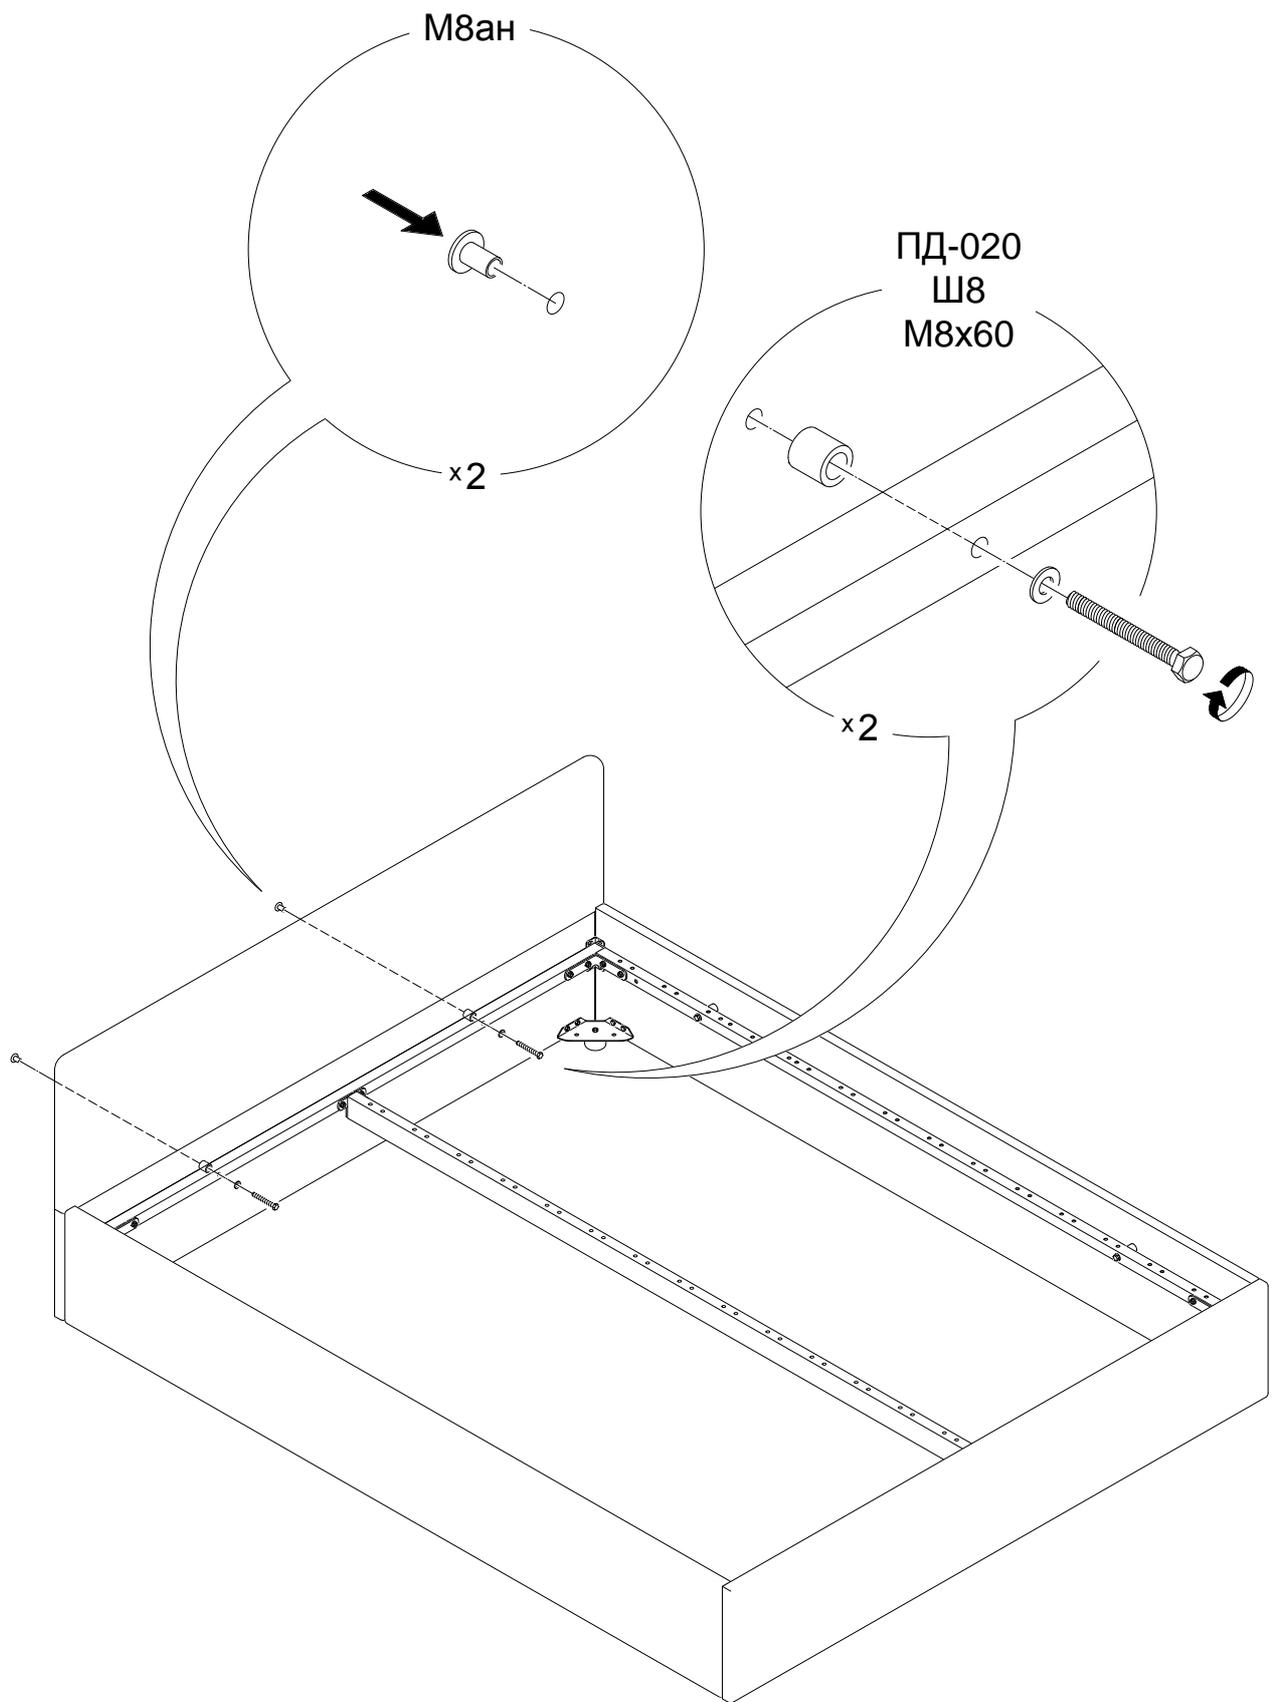

16

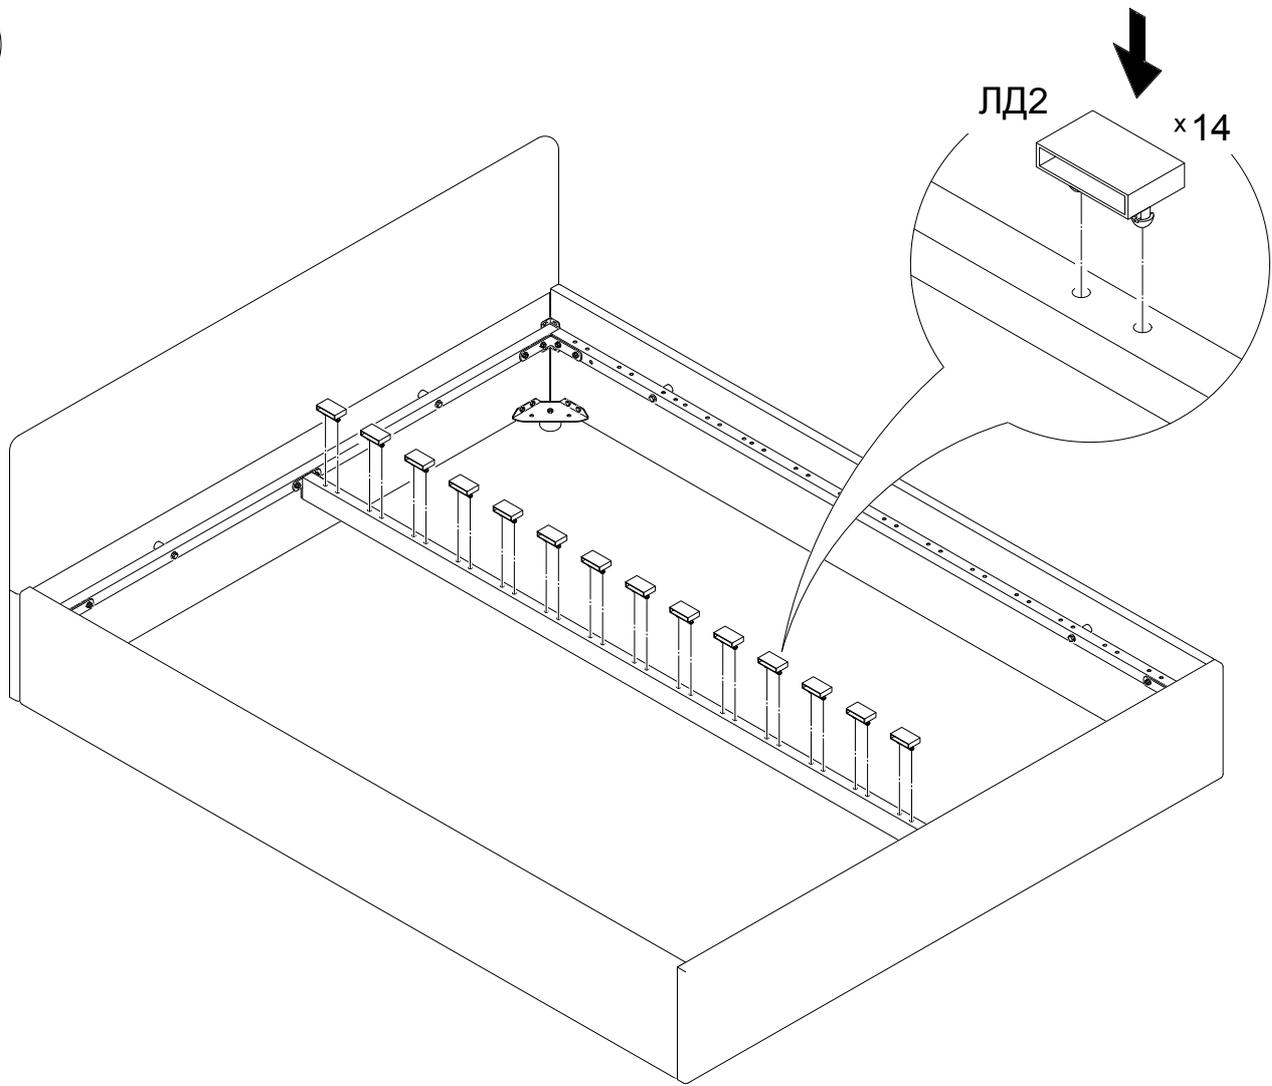

17

