
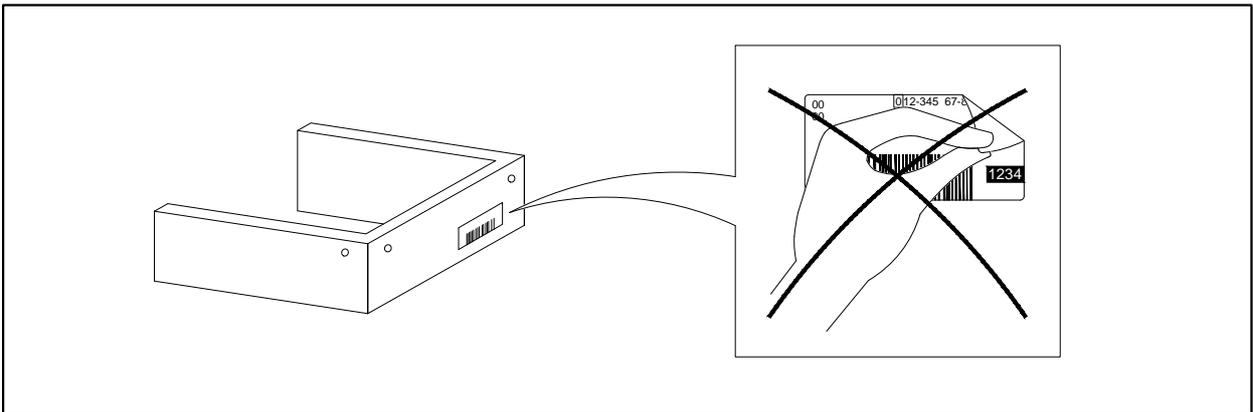
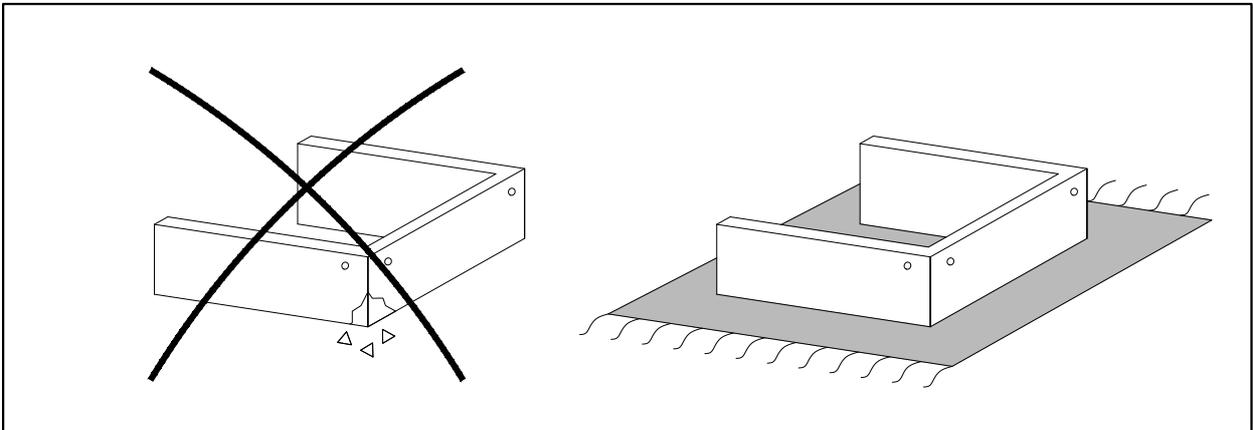
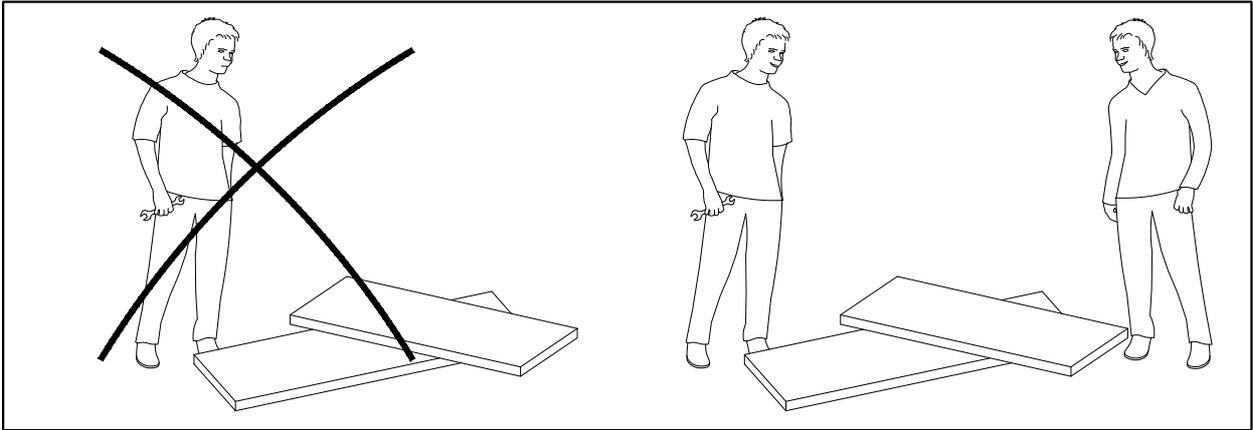
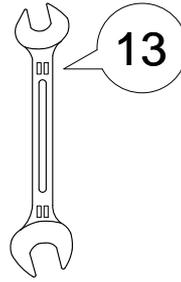
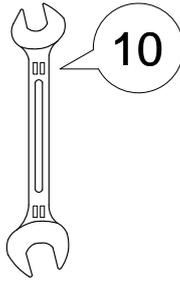



# Инструкция по сборке

Кровать без подъёмного механизма


Дизайн 1232

(90x200)













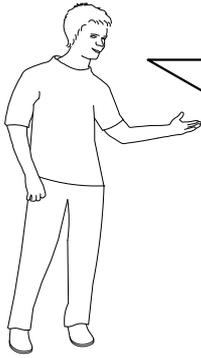


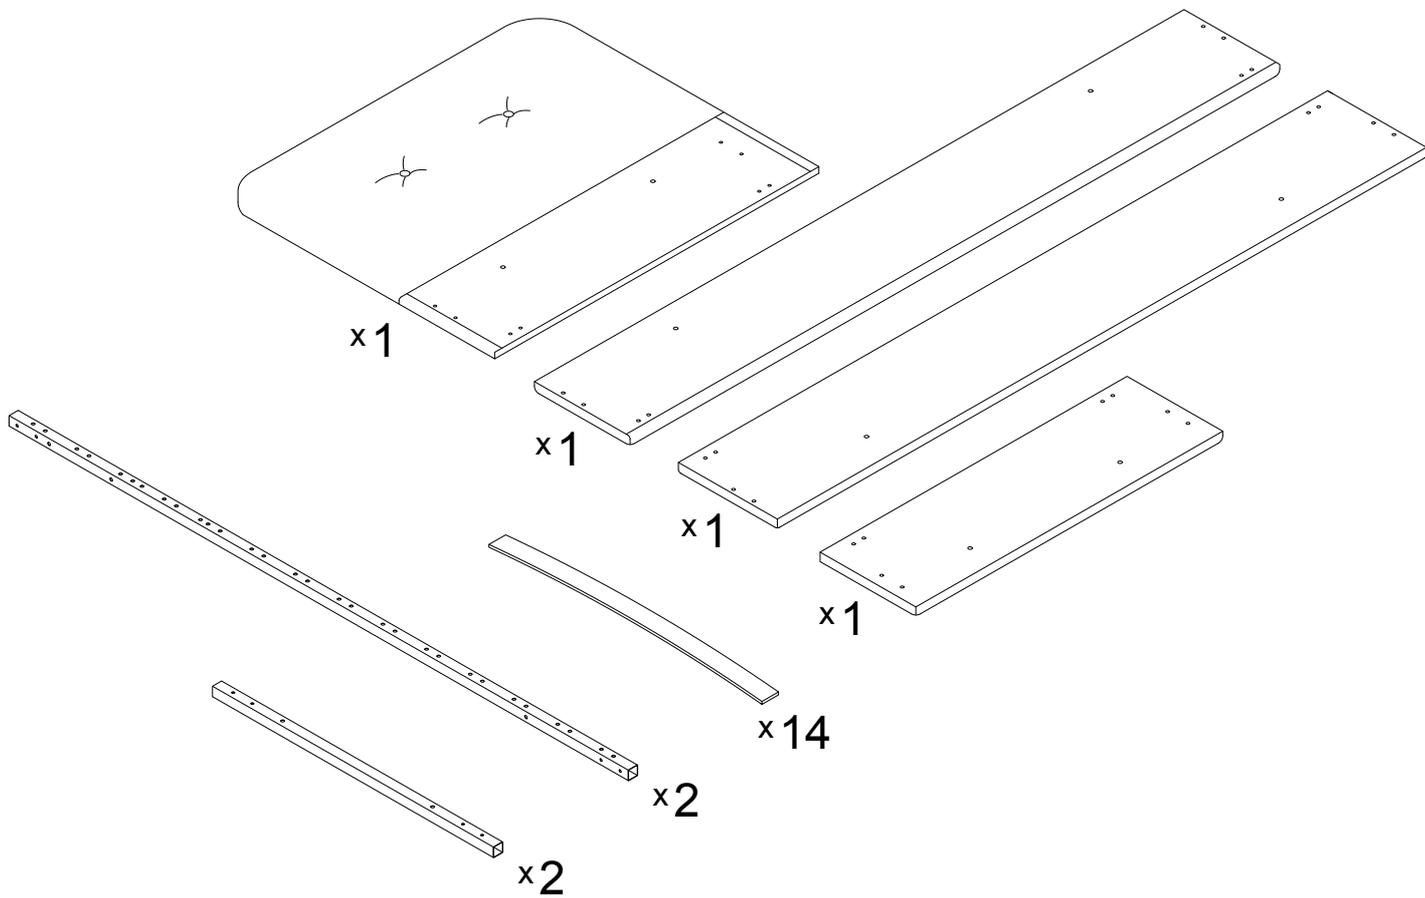


M 1:2

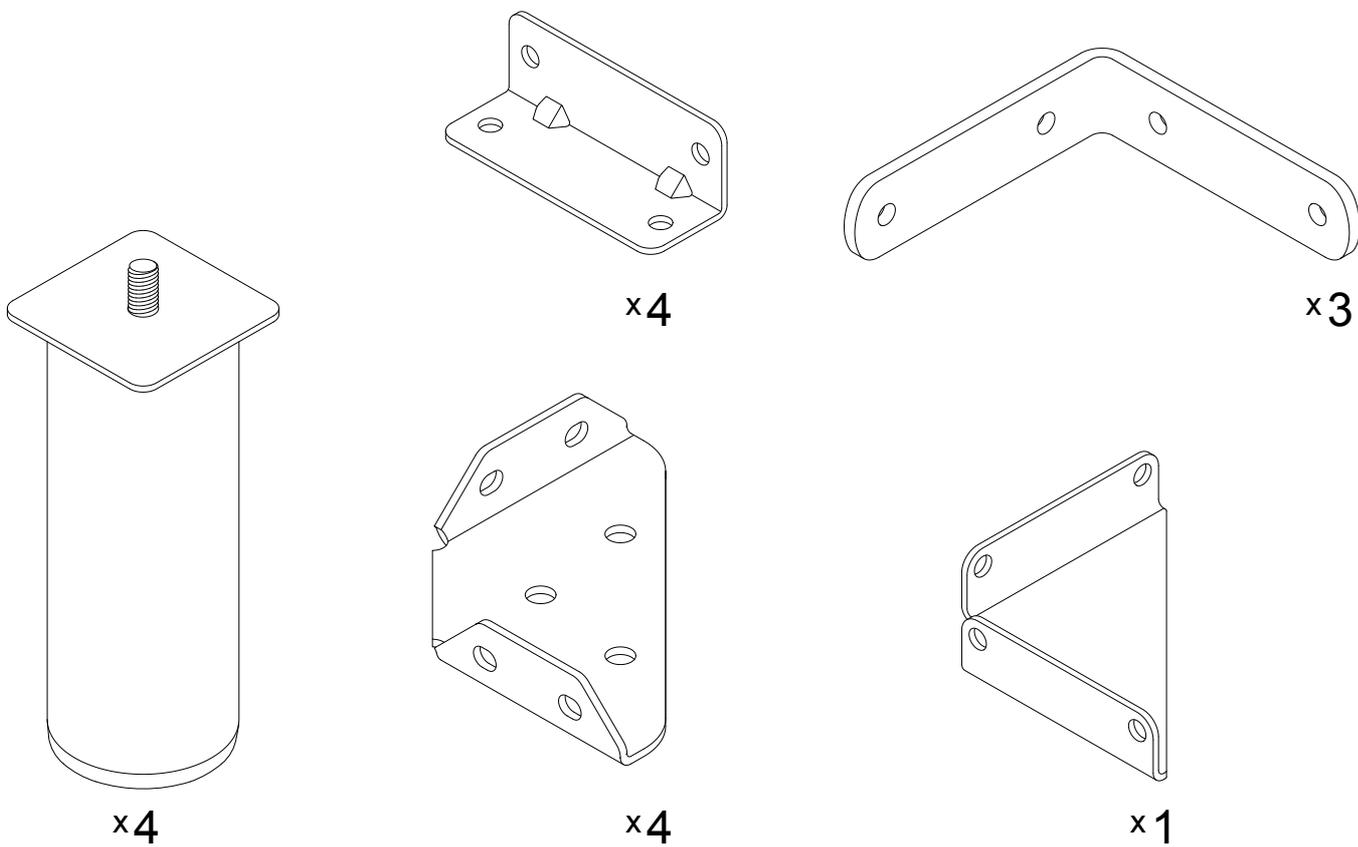



# M 1:1

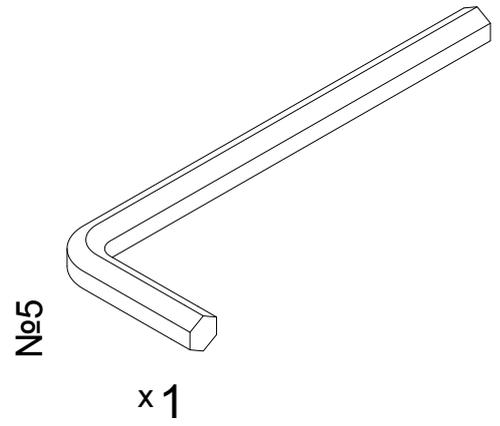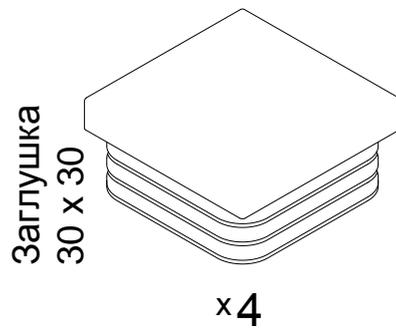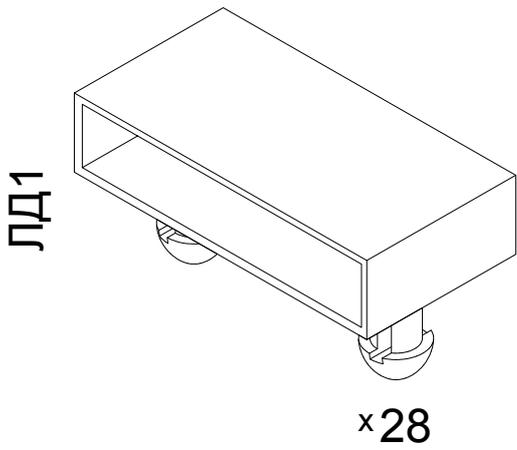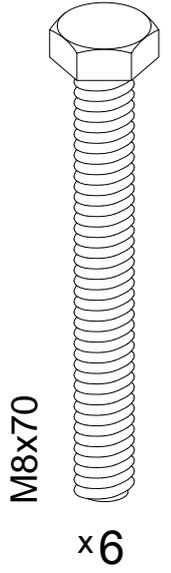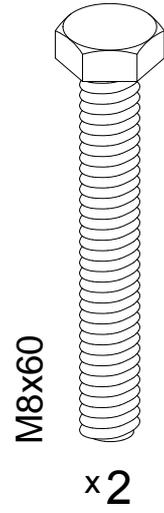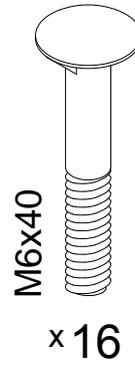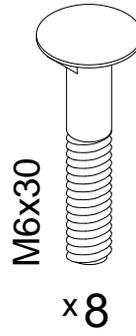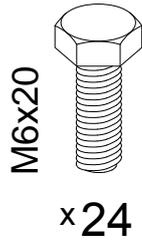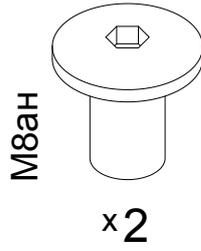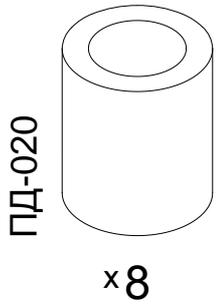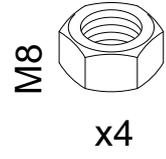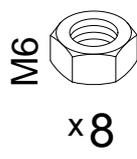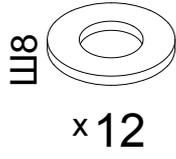

1

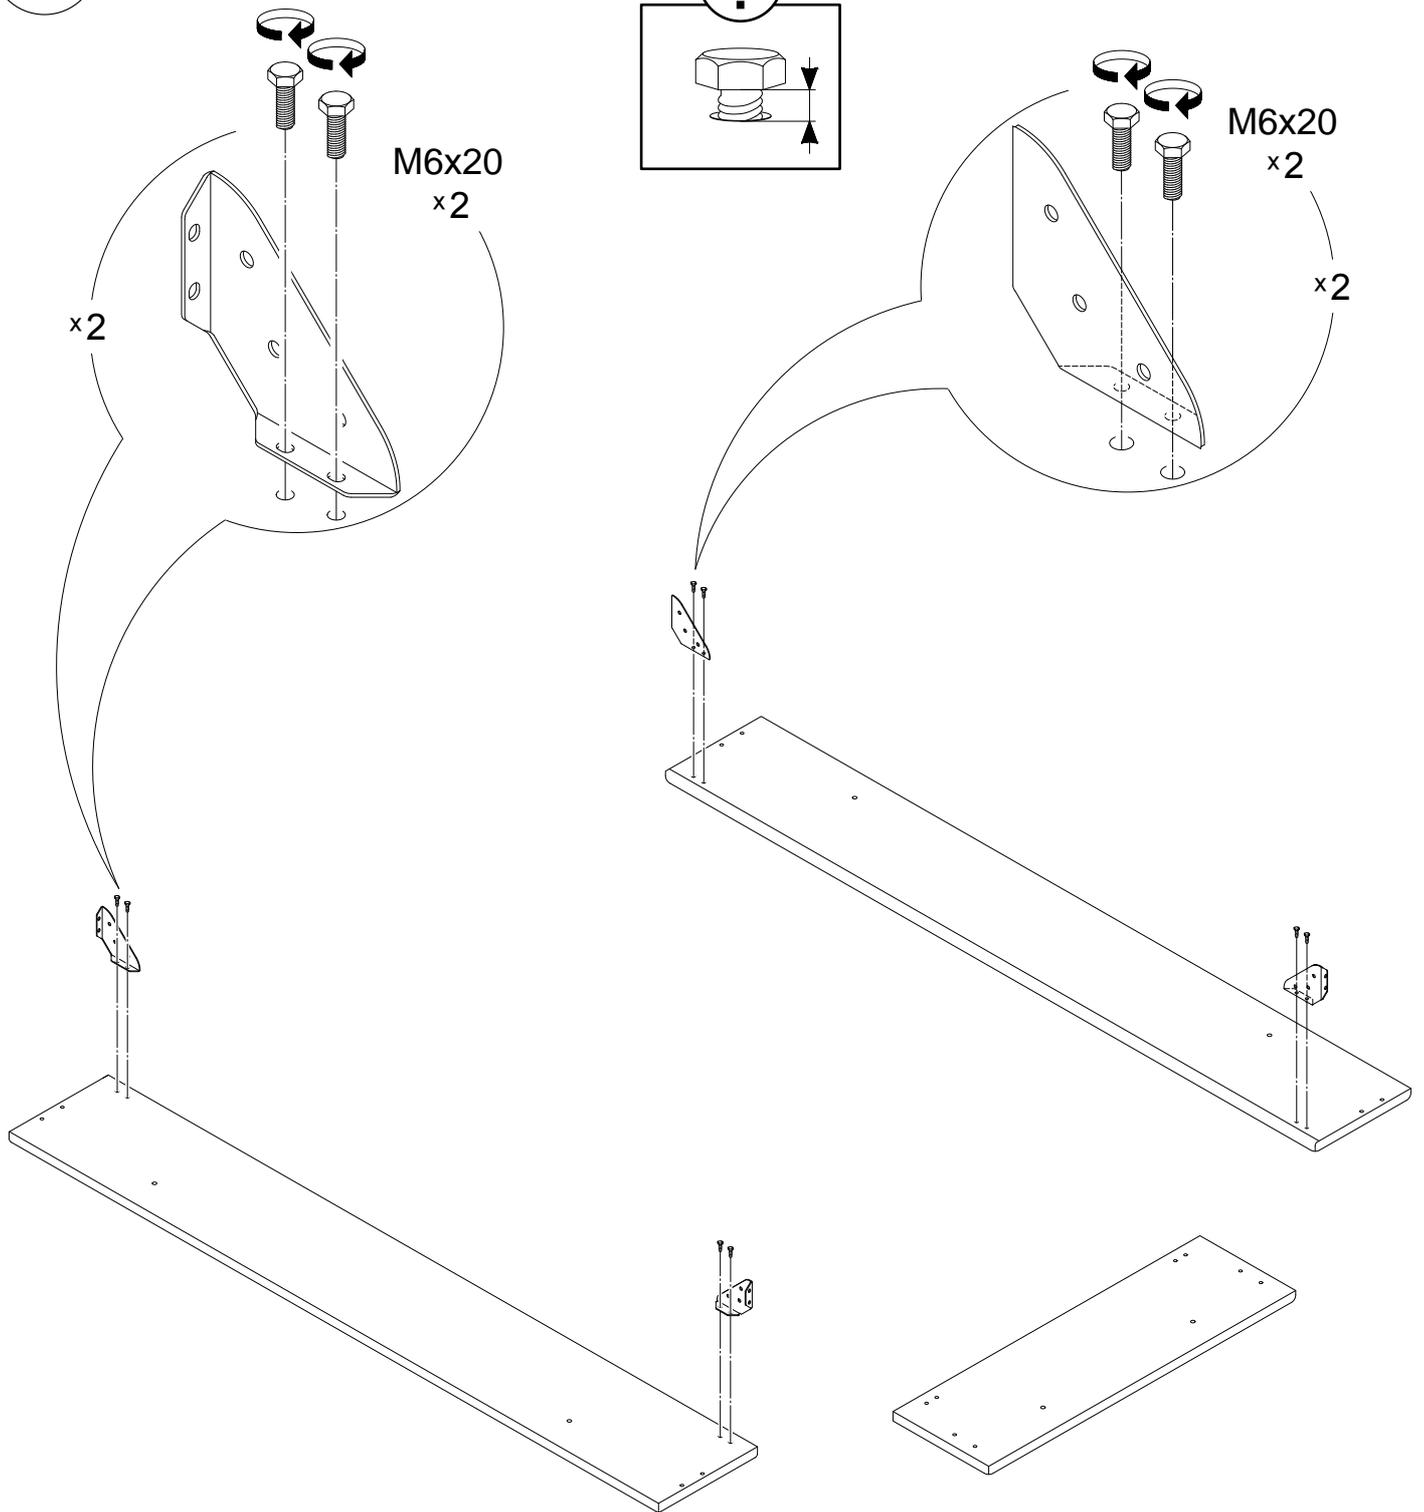

2

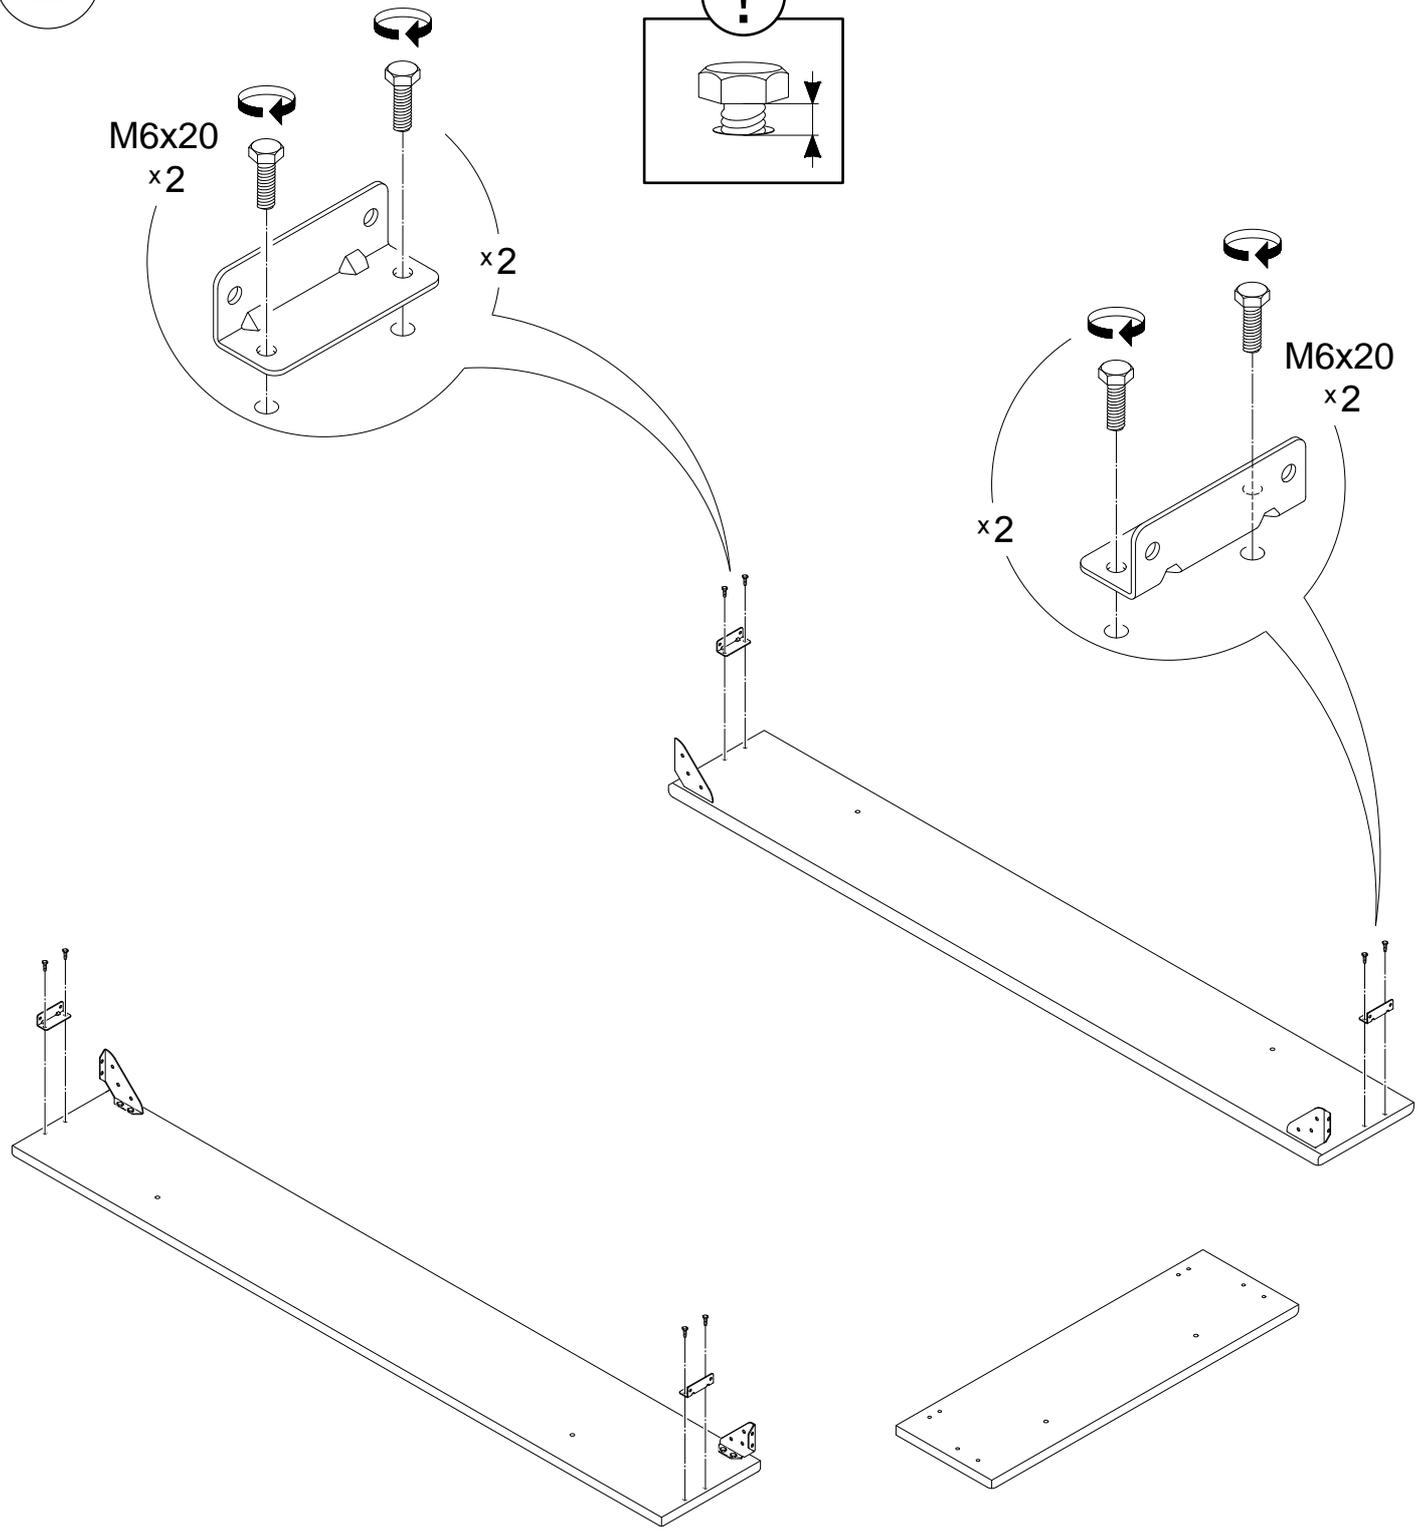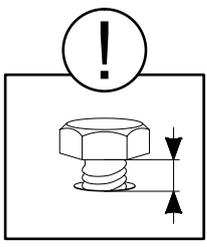


M6x20  
x2

x2


M6x20  
x2

x2


3

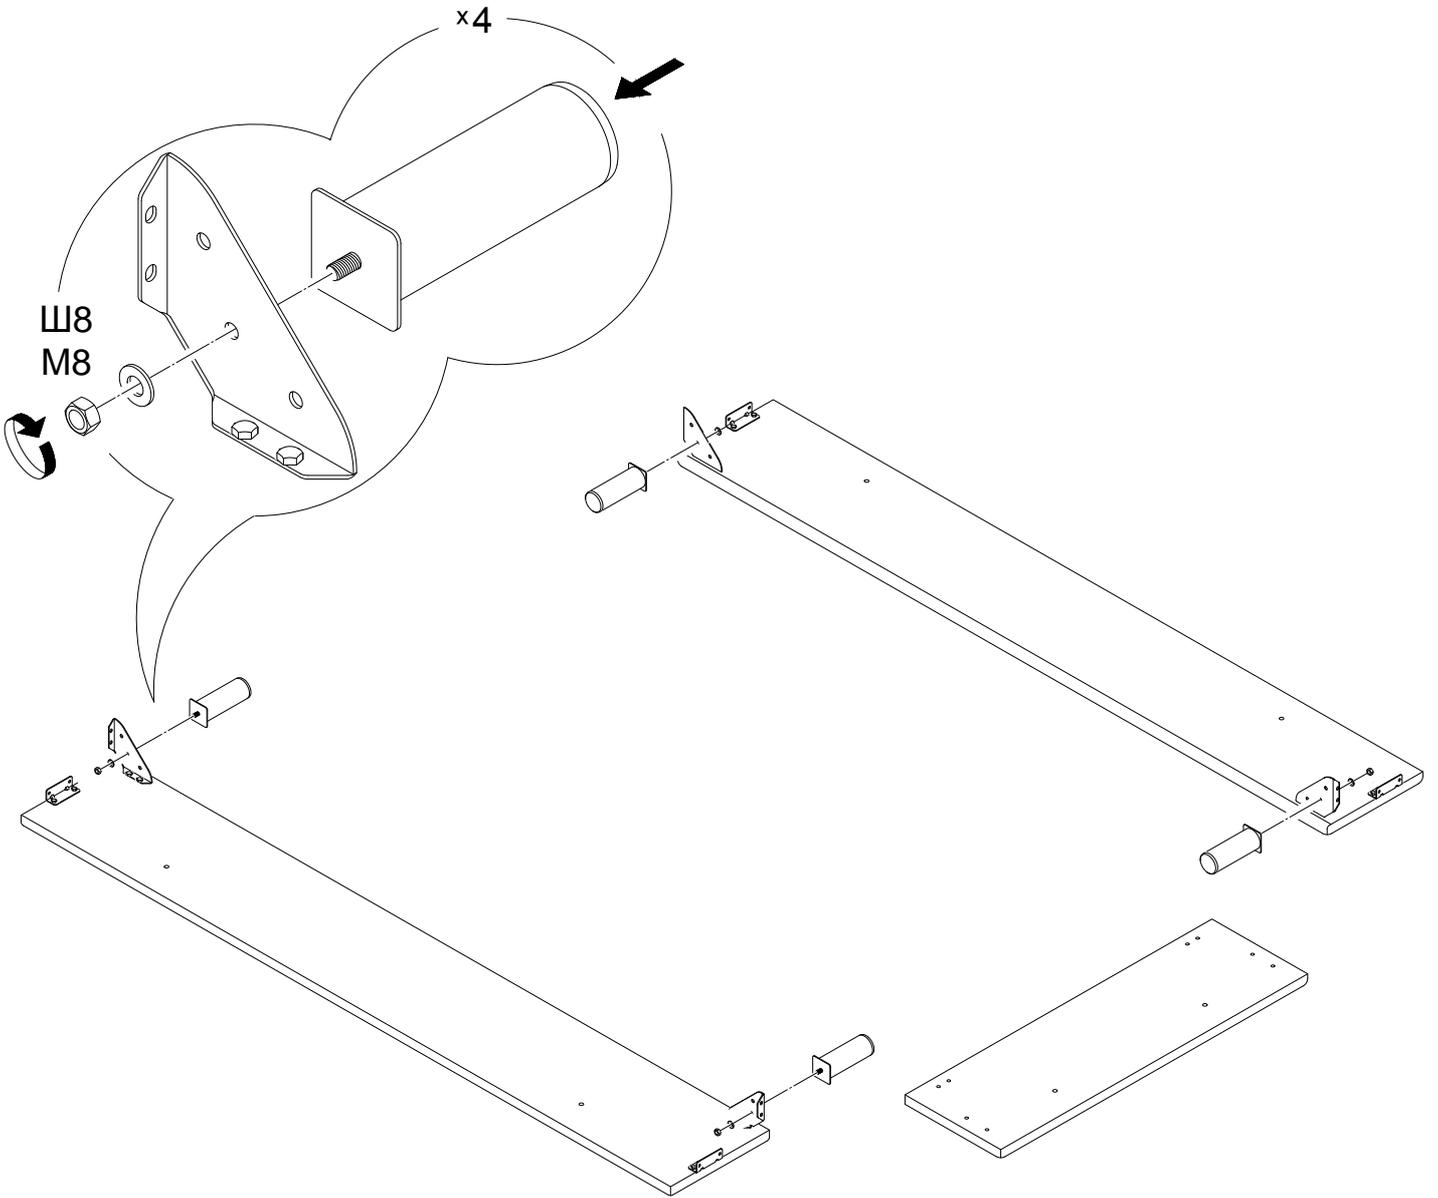

4


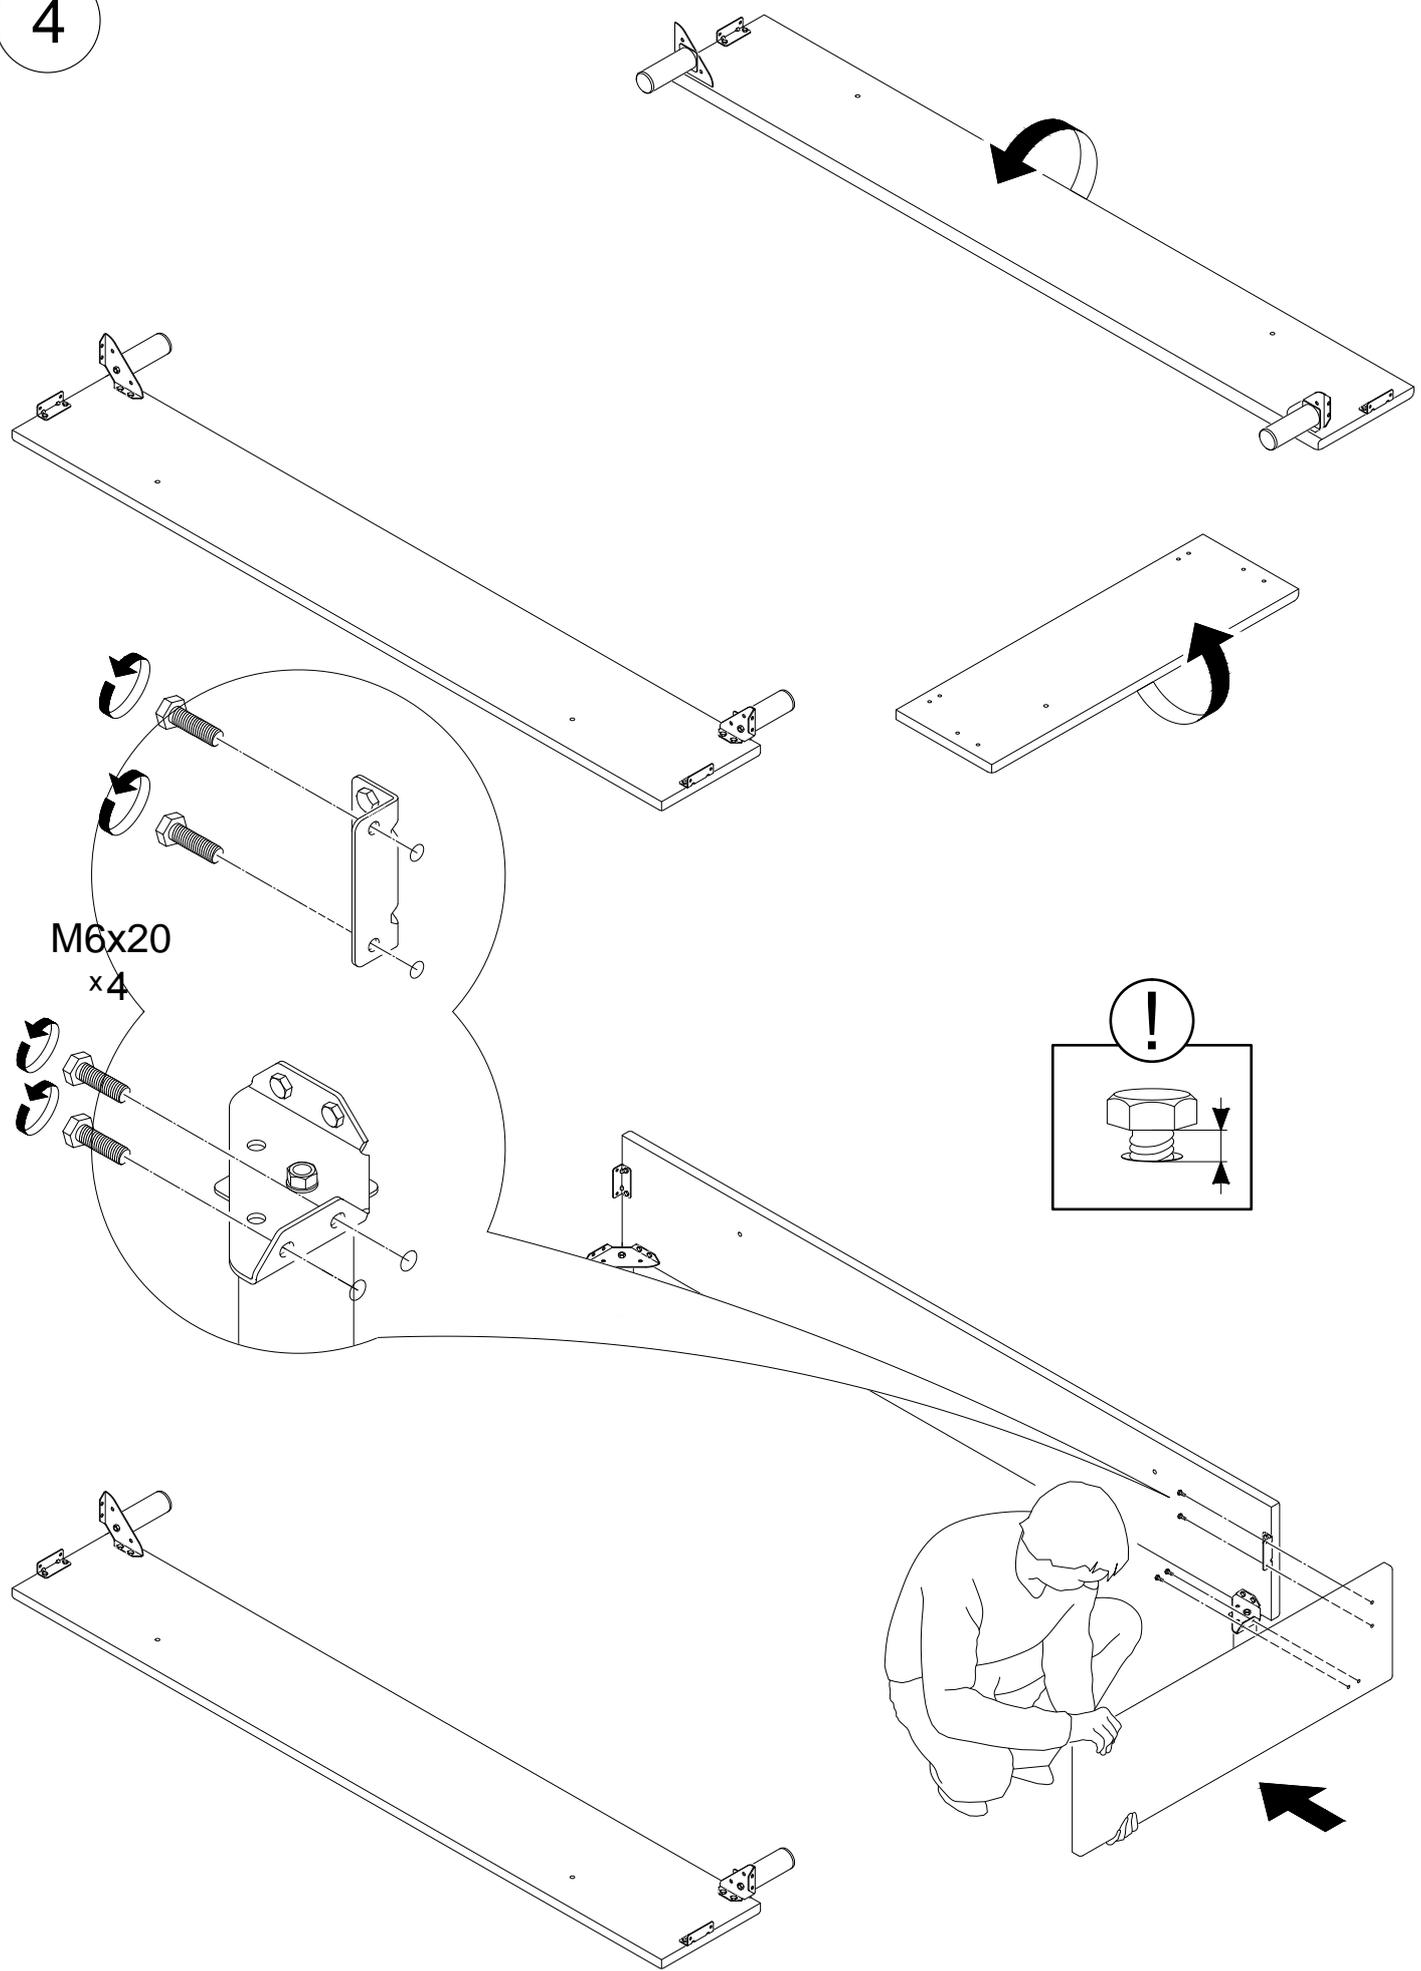


5


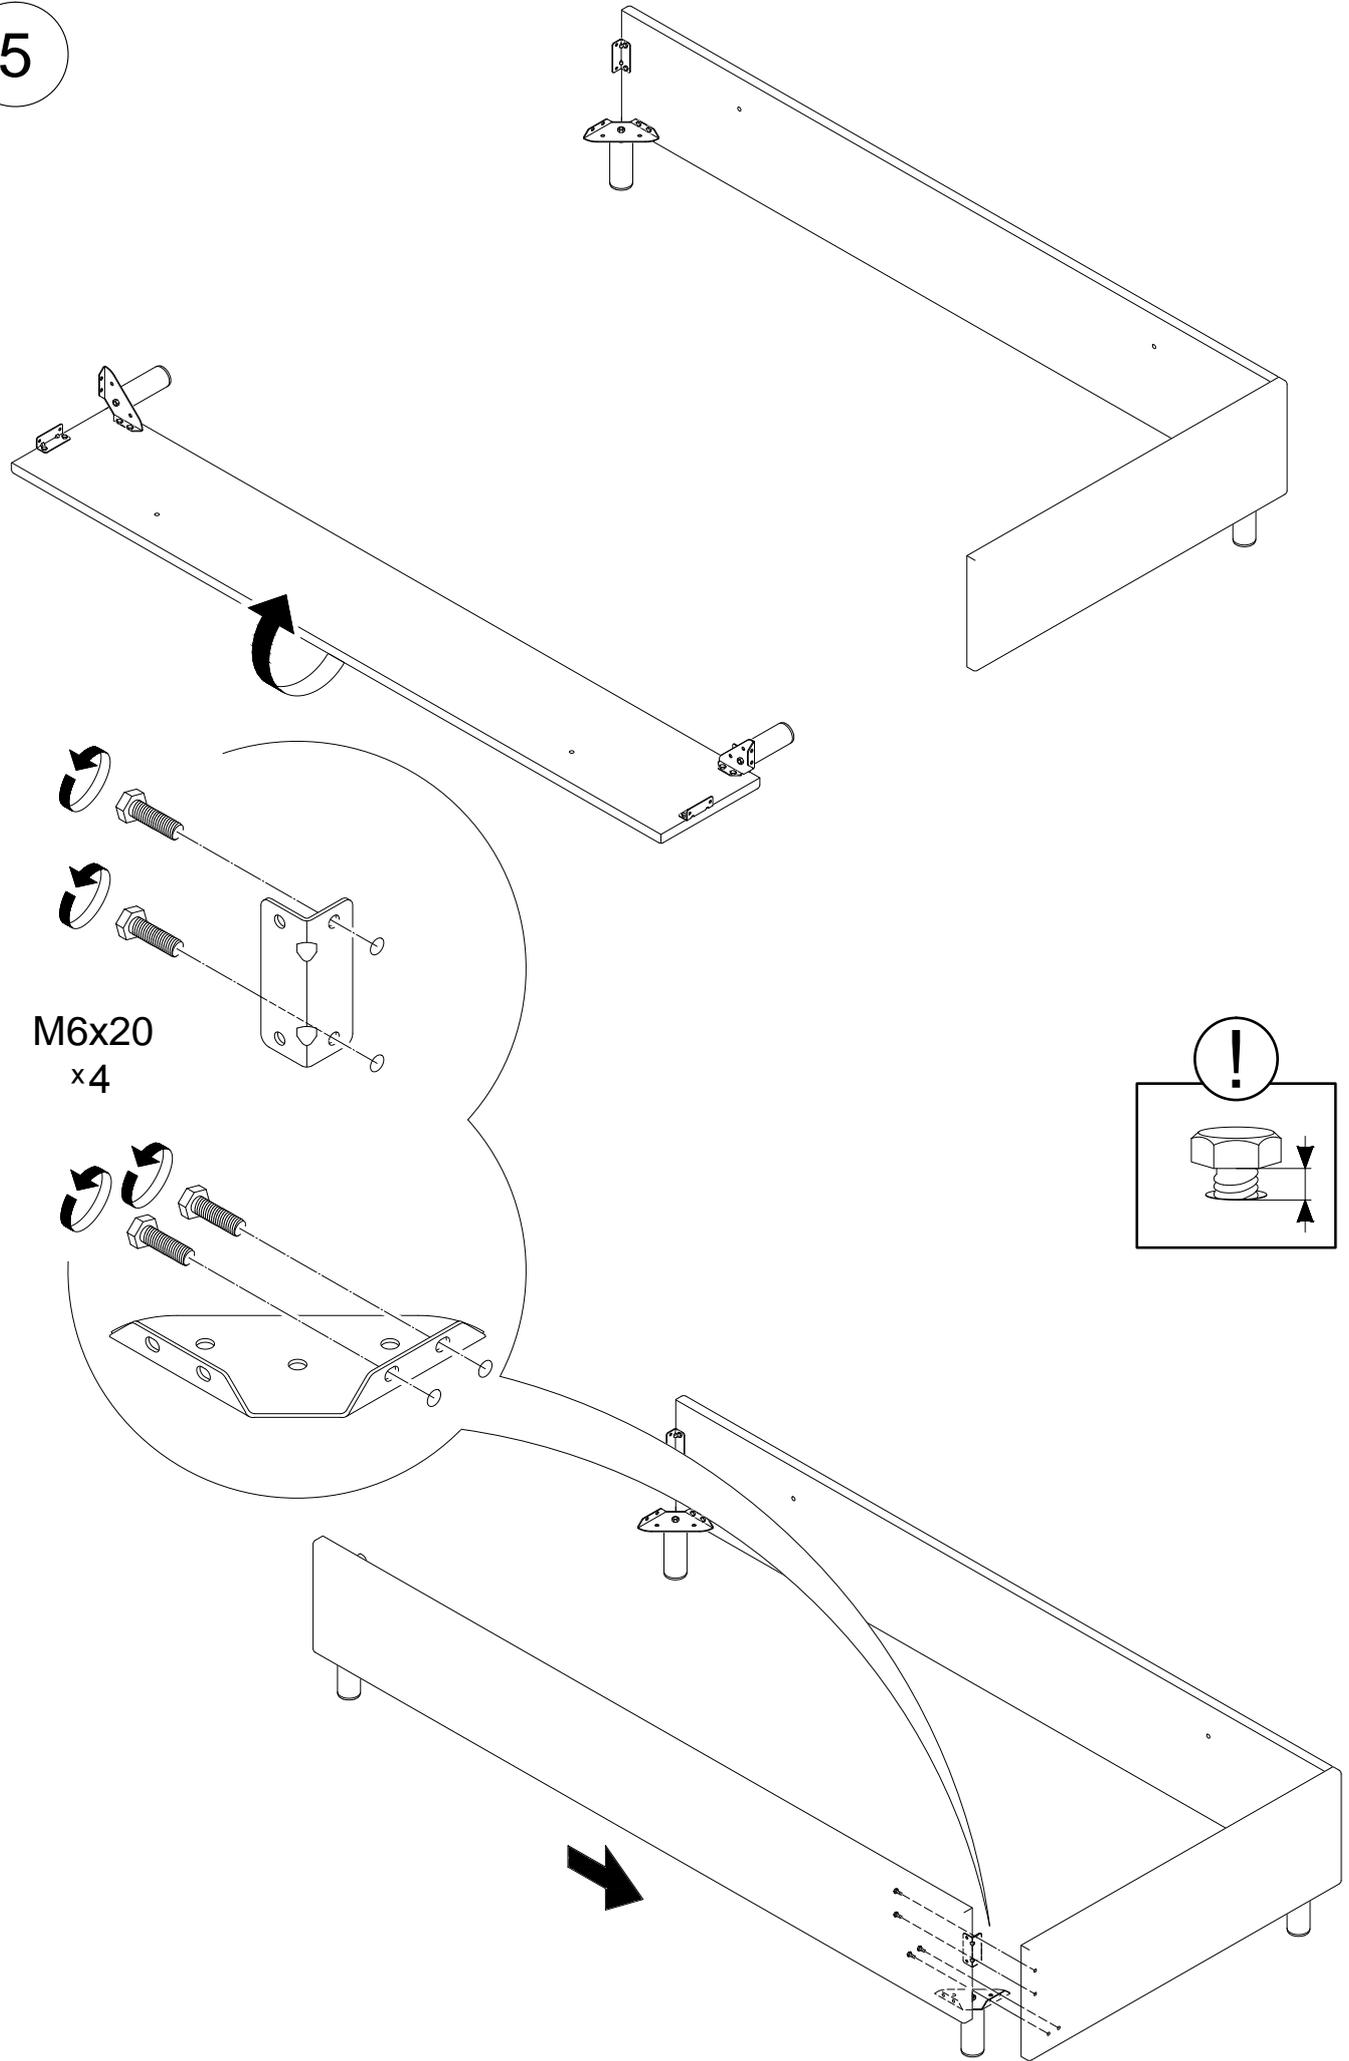


M6x20  
x4


6

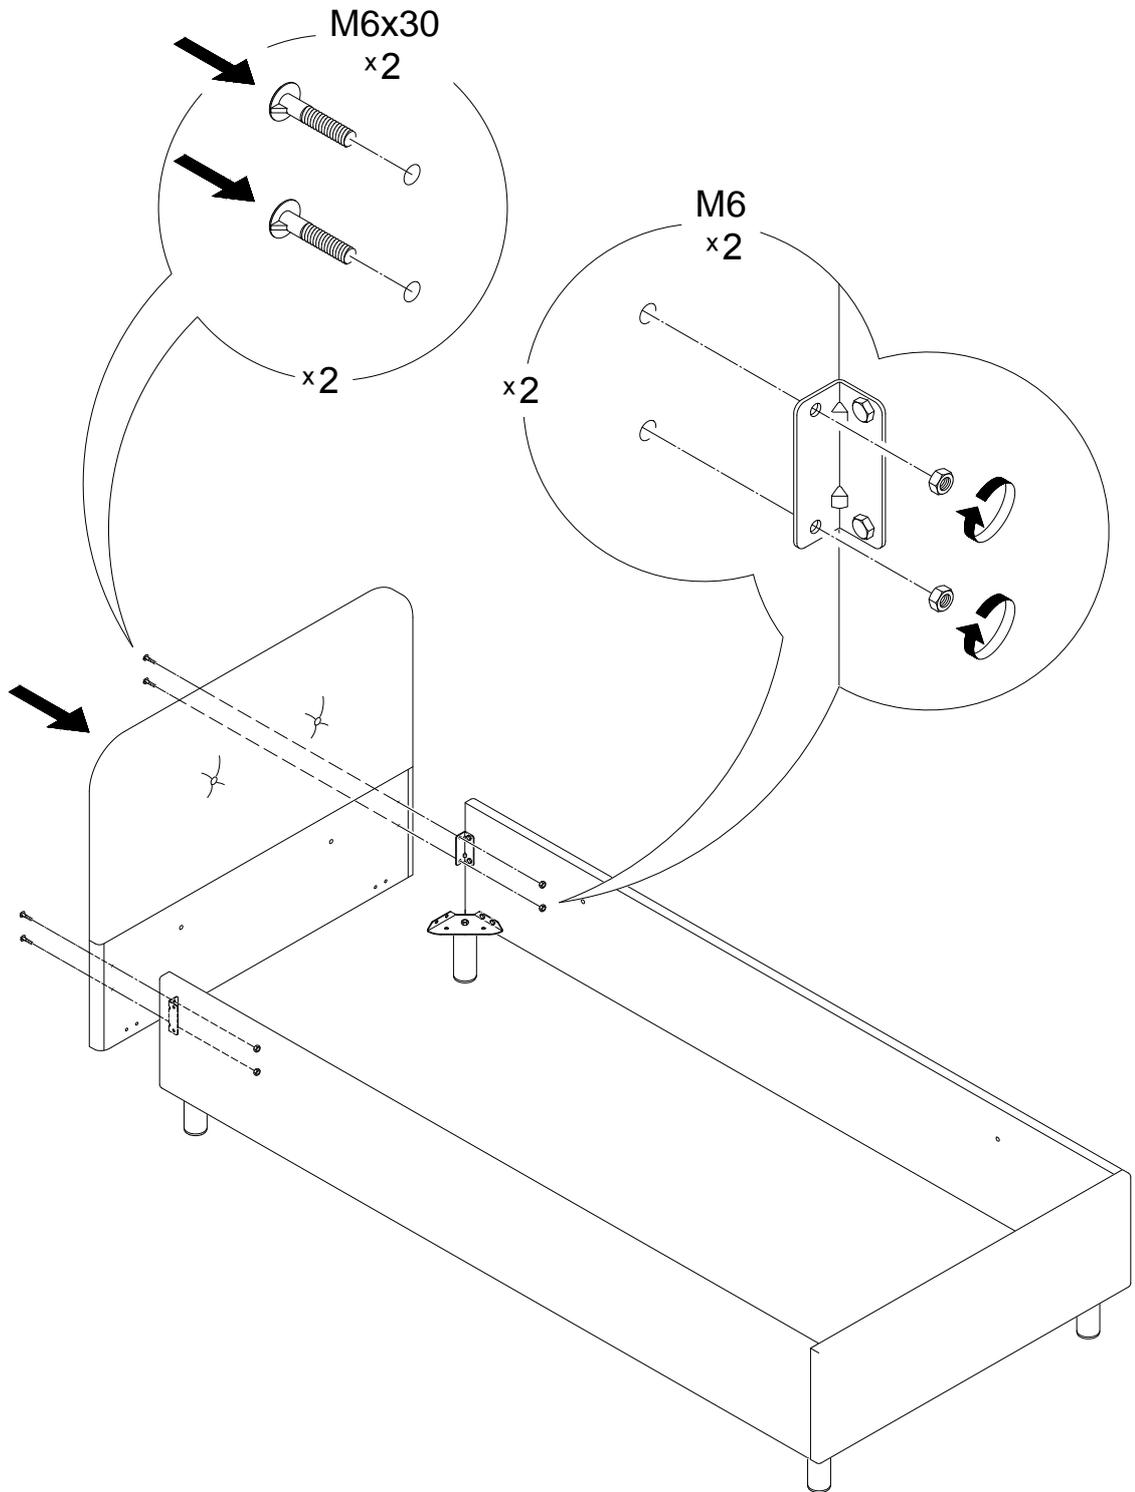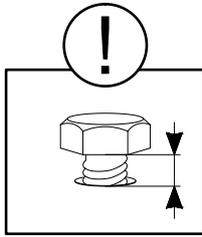


7



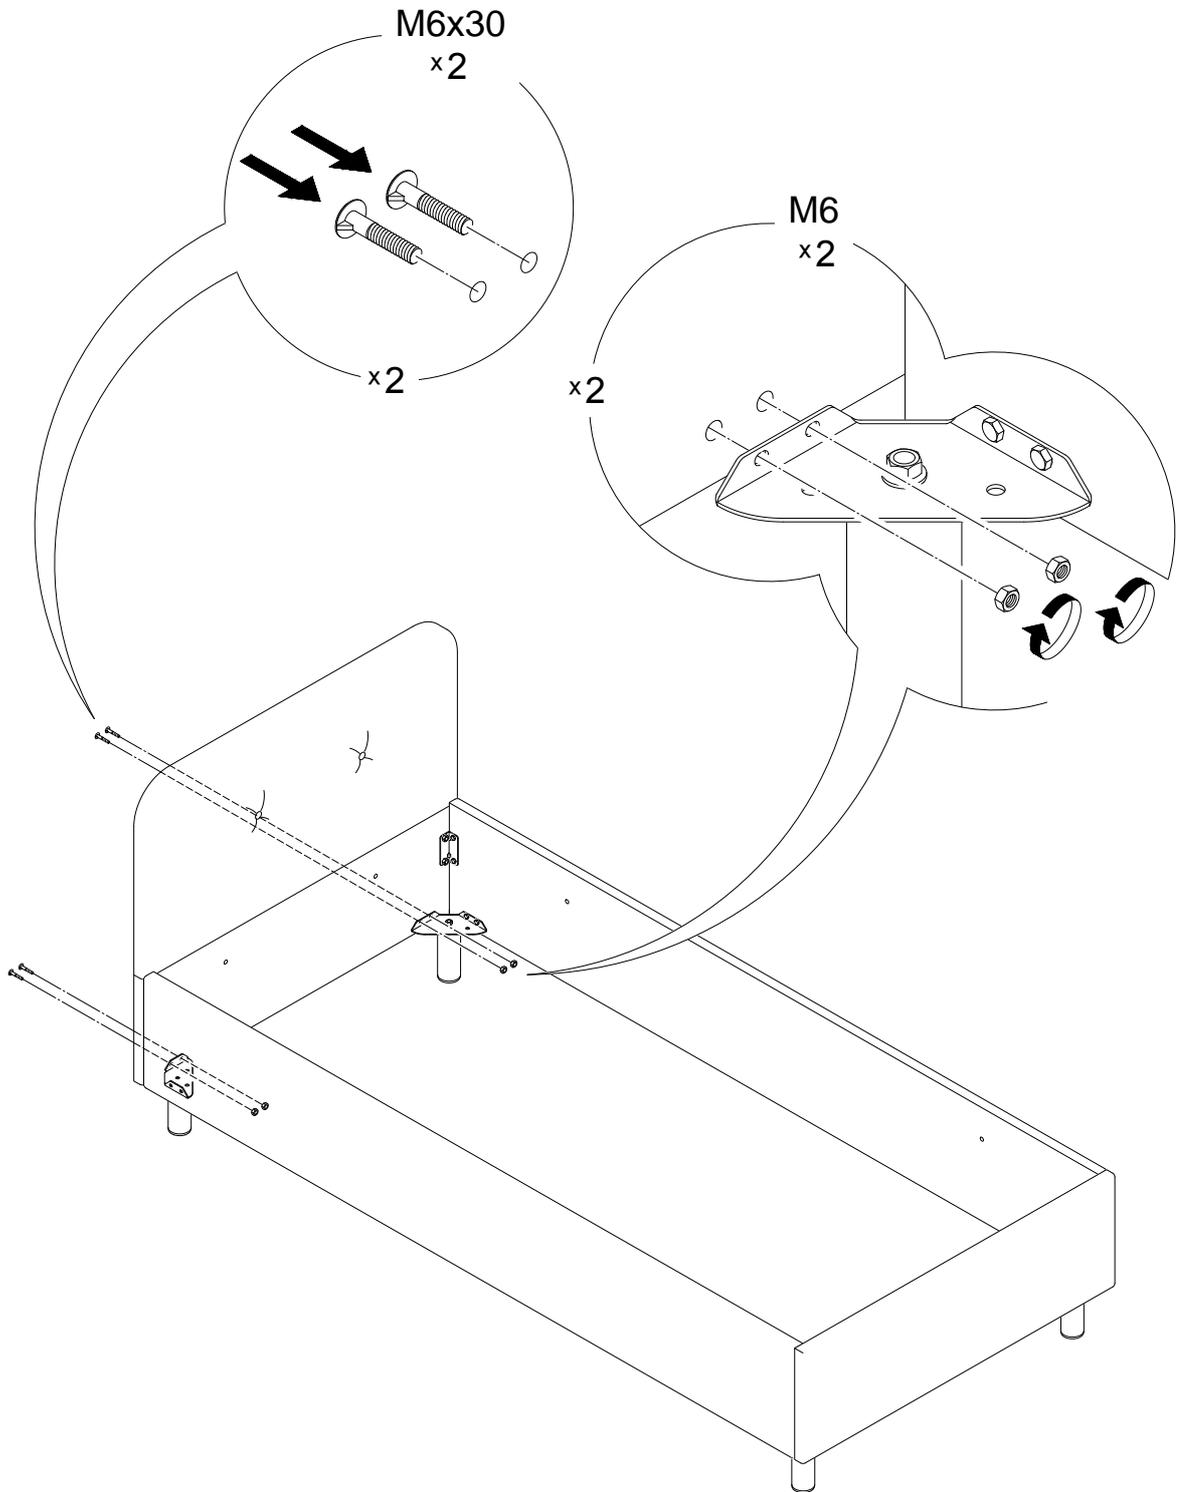
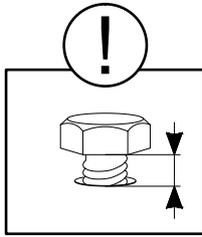


8

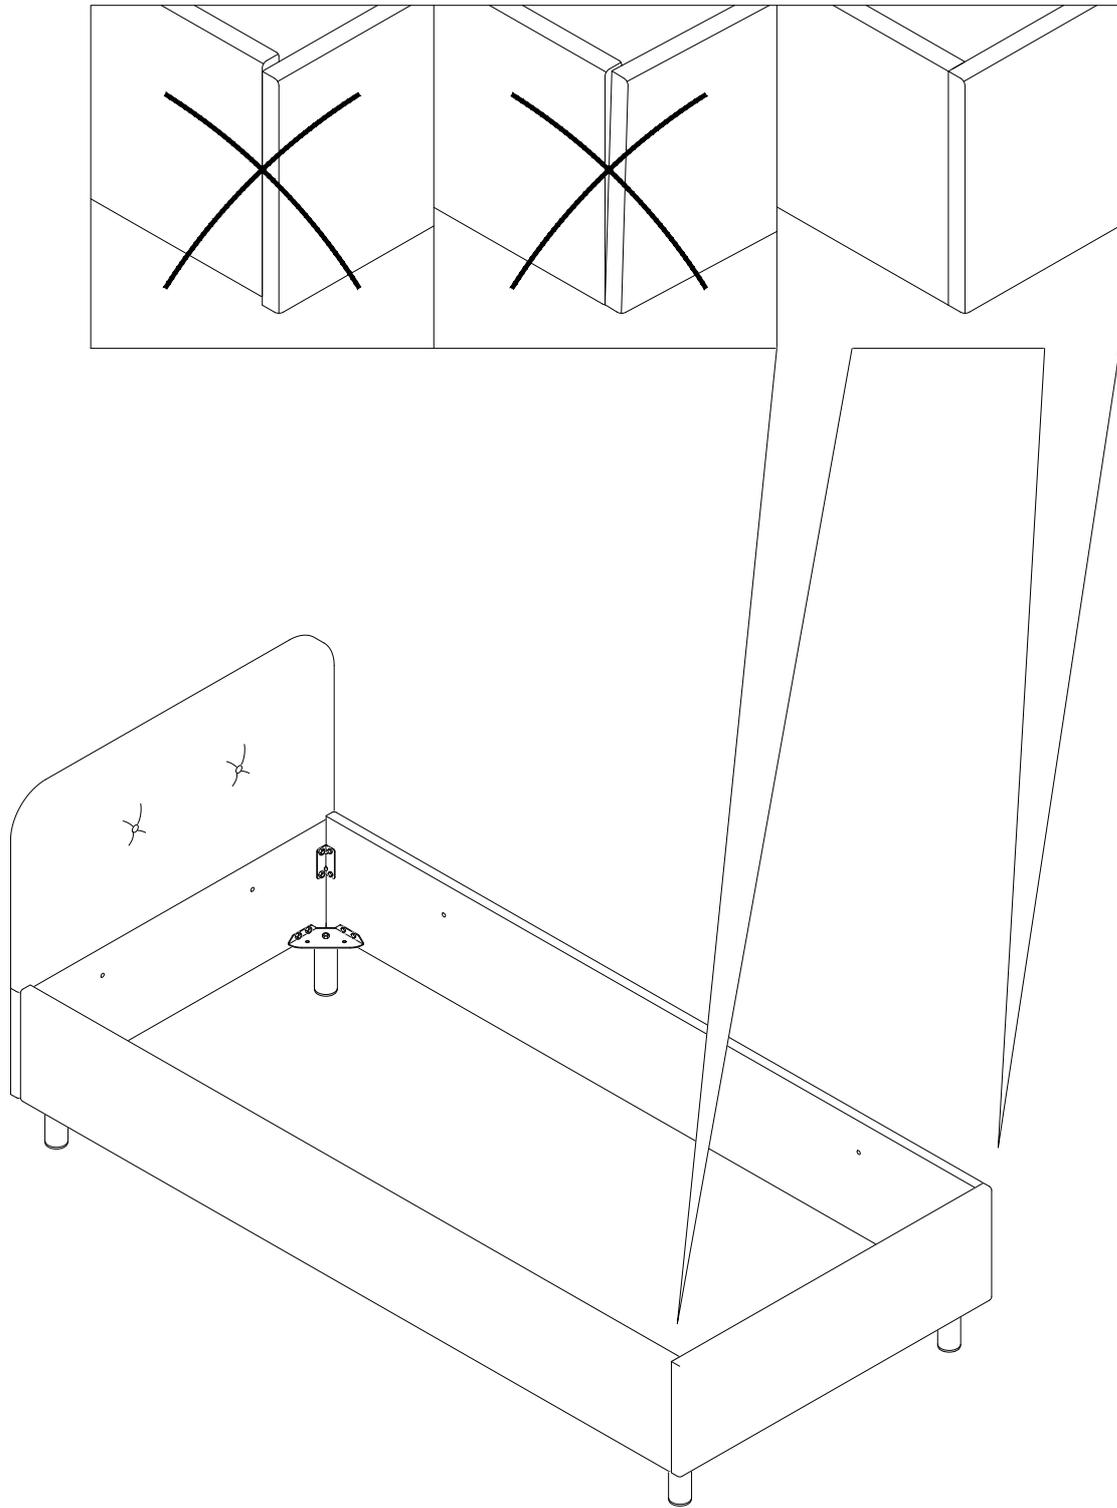


- 1
- 2
- 4
- 5
- 6
- 7

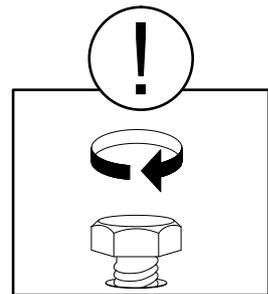


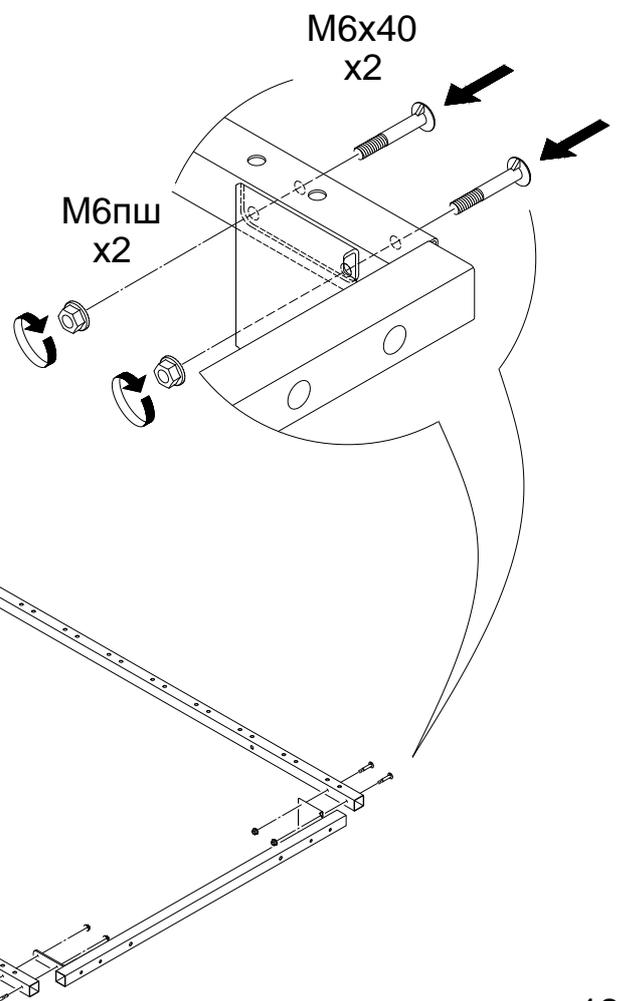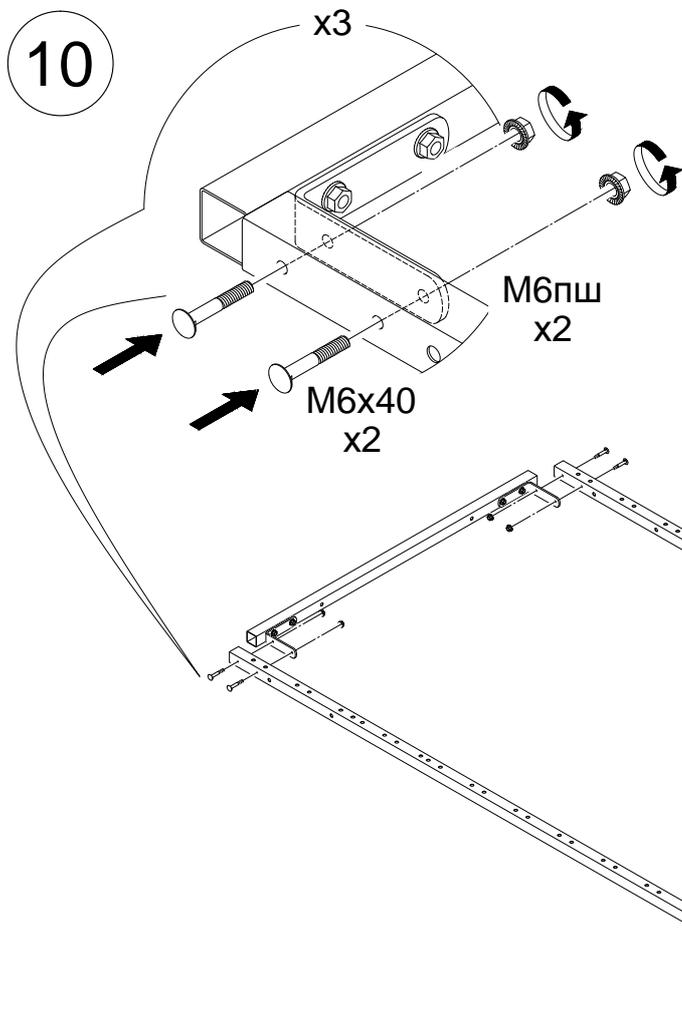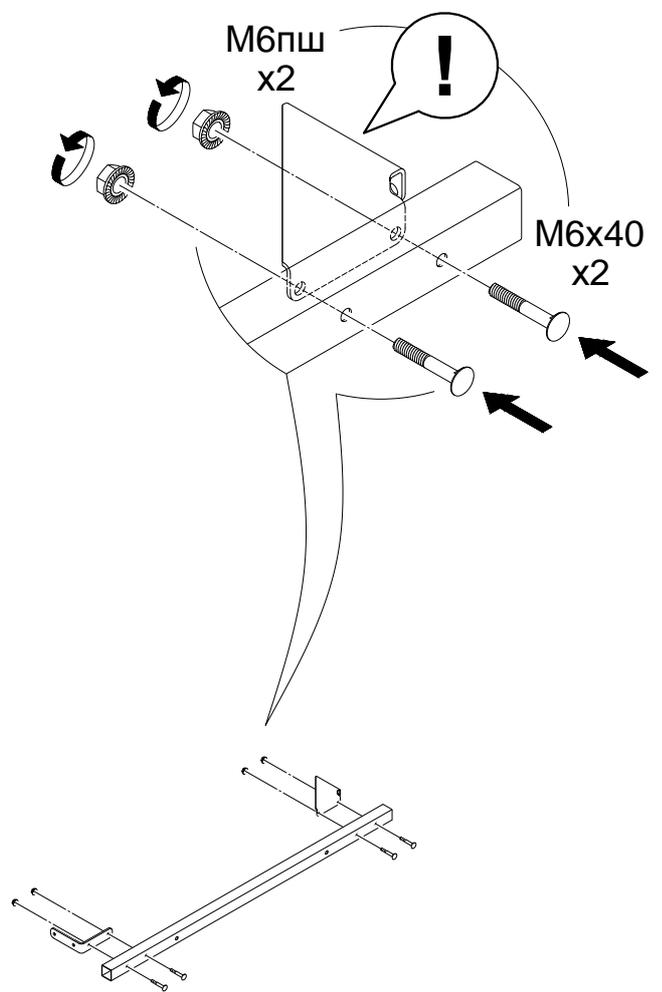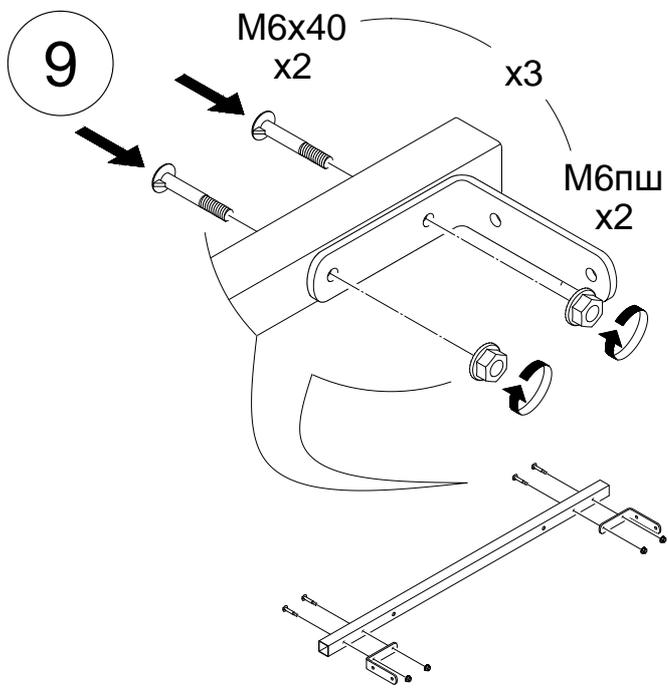


11

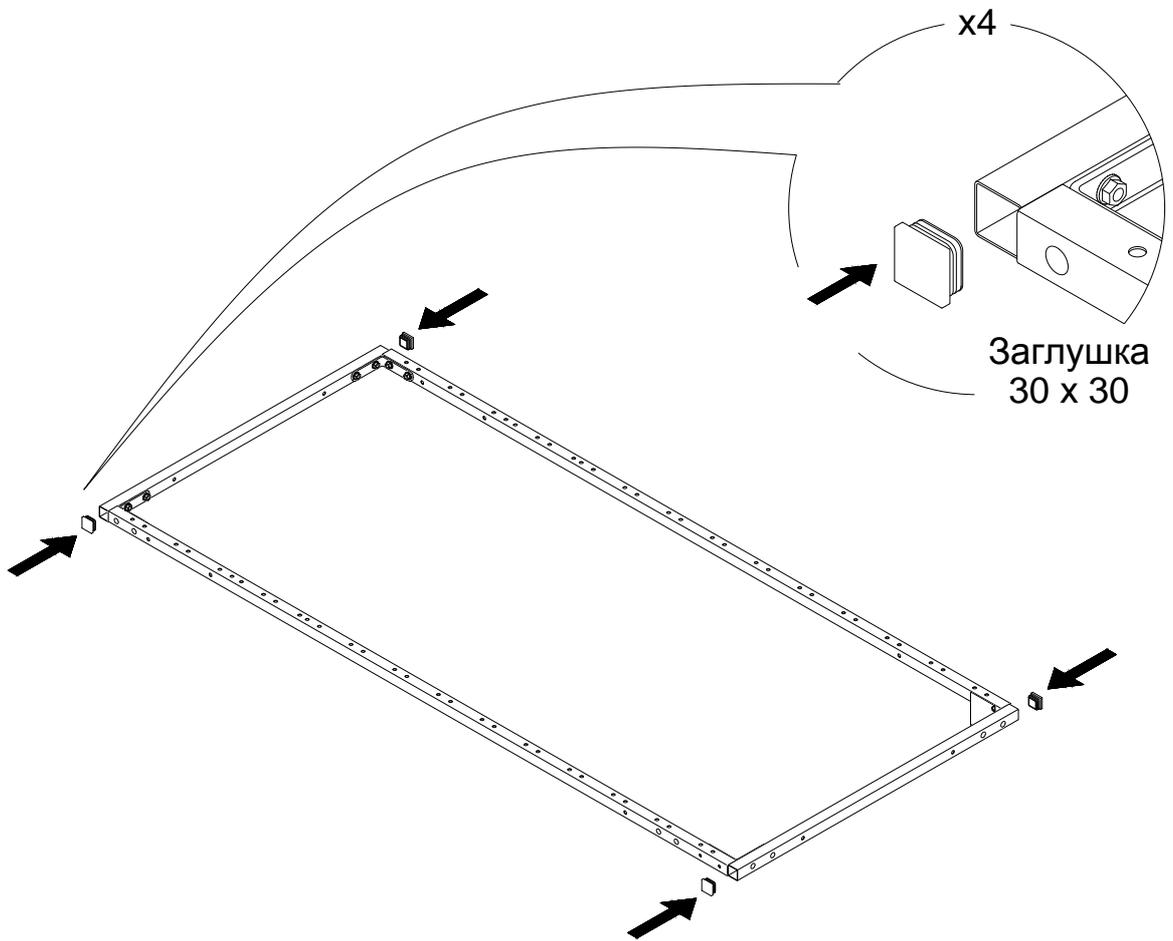

12

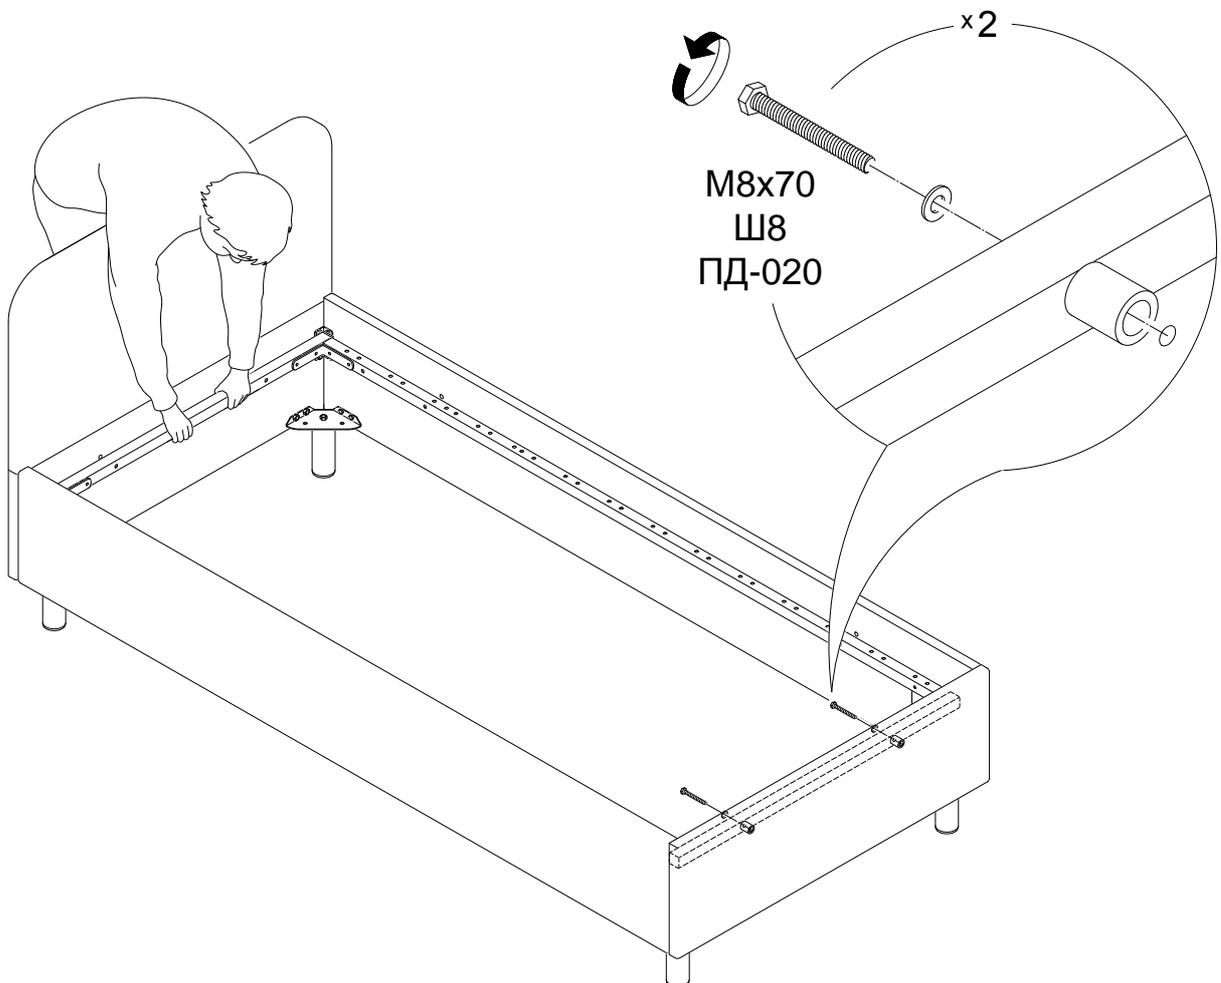

13

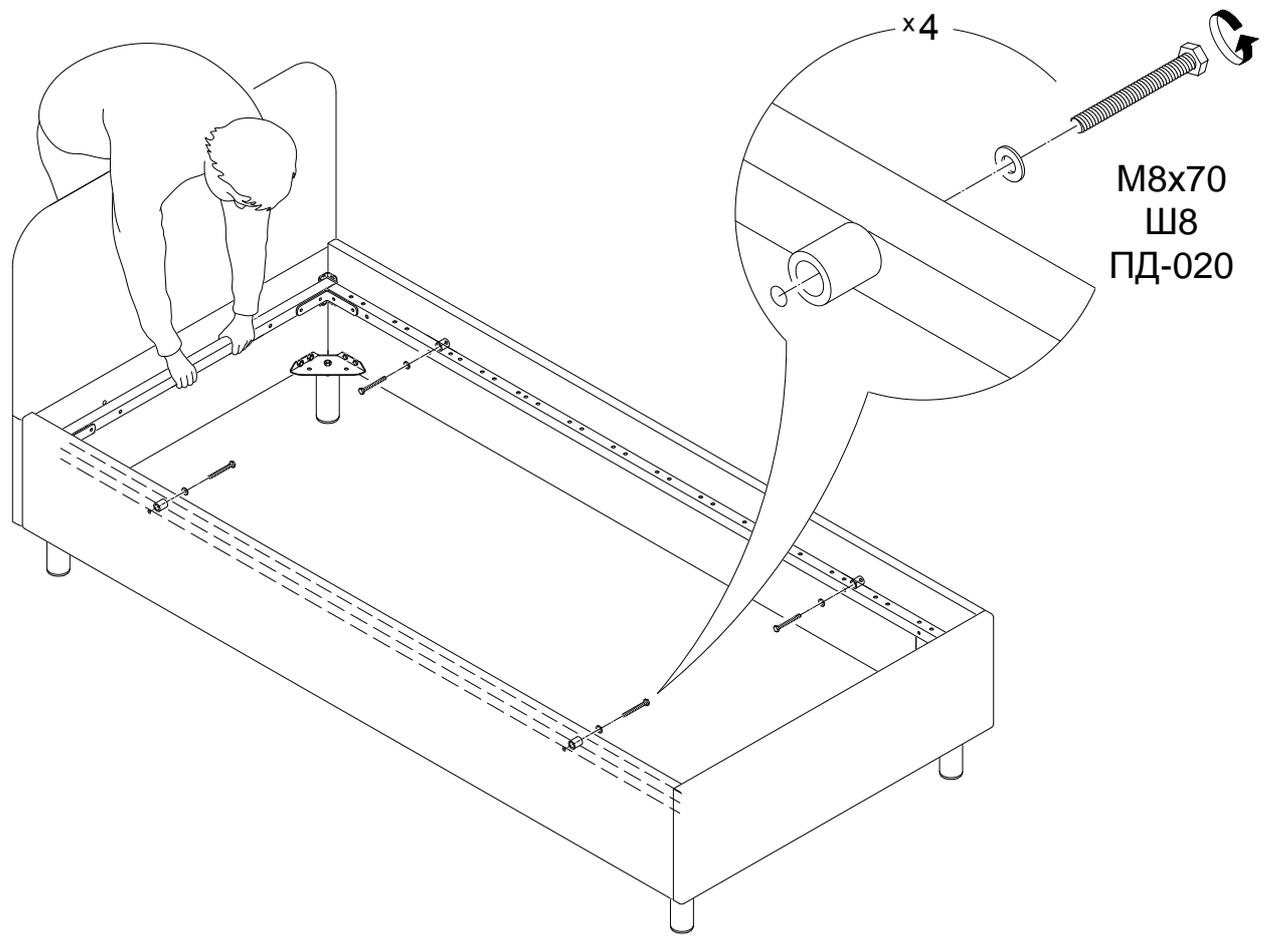

14

