

Einbauanleitung
 Fitting instructions
 Istruzioni di montaggio
 Notice de montage
 Instrucciones de montaje
 Monteringsanvisning

CORTECO







AUDI A6
 AUDI A7
 AUDI A8

80001782
 80001756

04.11 ->
 10.10 ->
 11.09 ->



The Perfect Change.

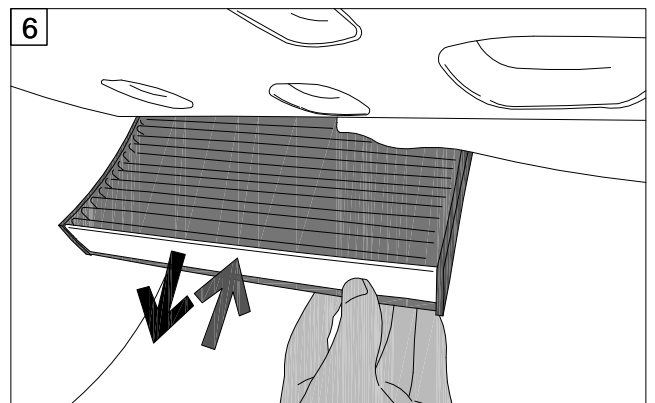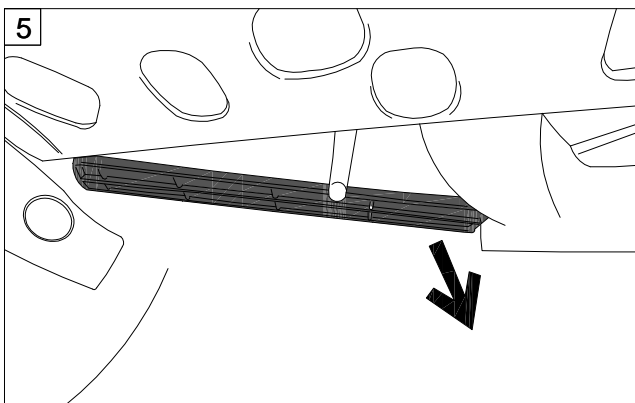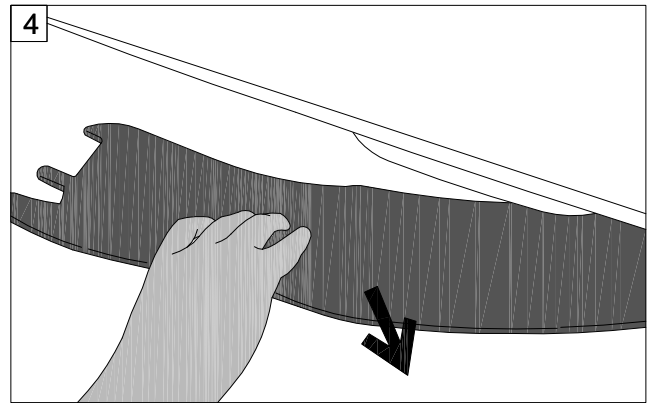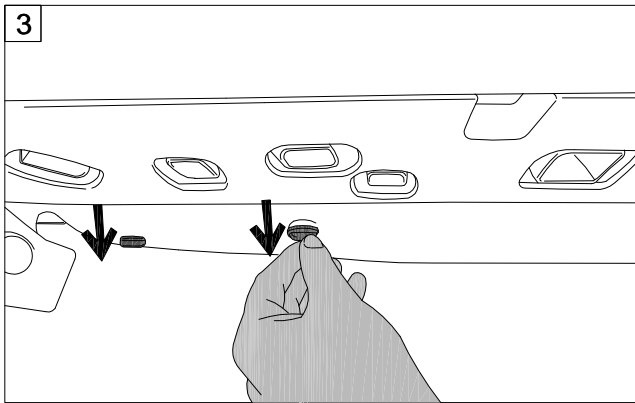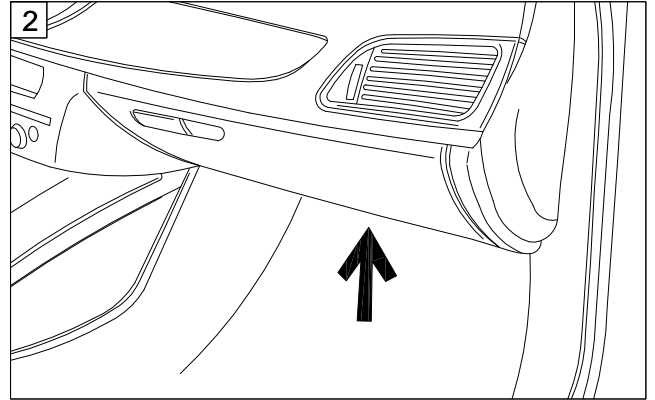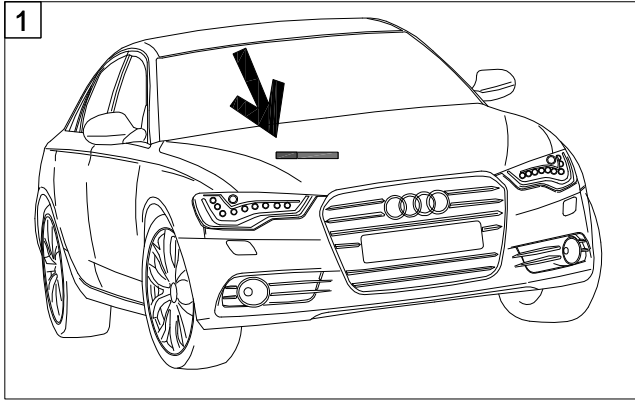

7

365

| | | | | | | |
|---|---|---|---|---|---|-------|
| 0 | 1 | 5 | 0 | 0 | 0 | km |
| 0 | 1 | 0 | 0 | 0 | 0 | Miles |