

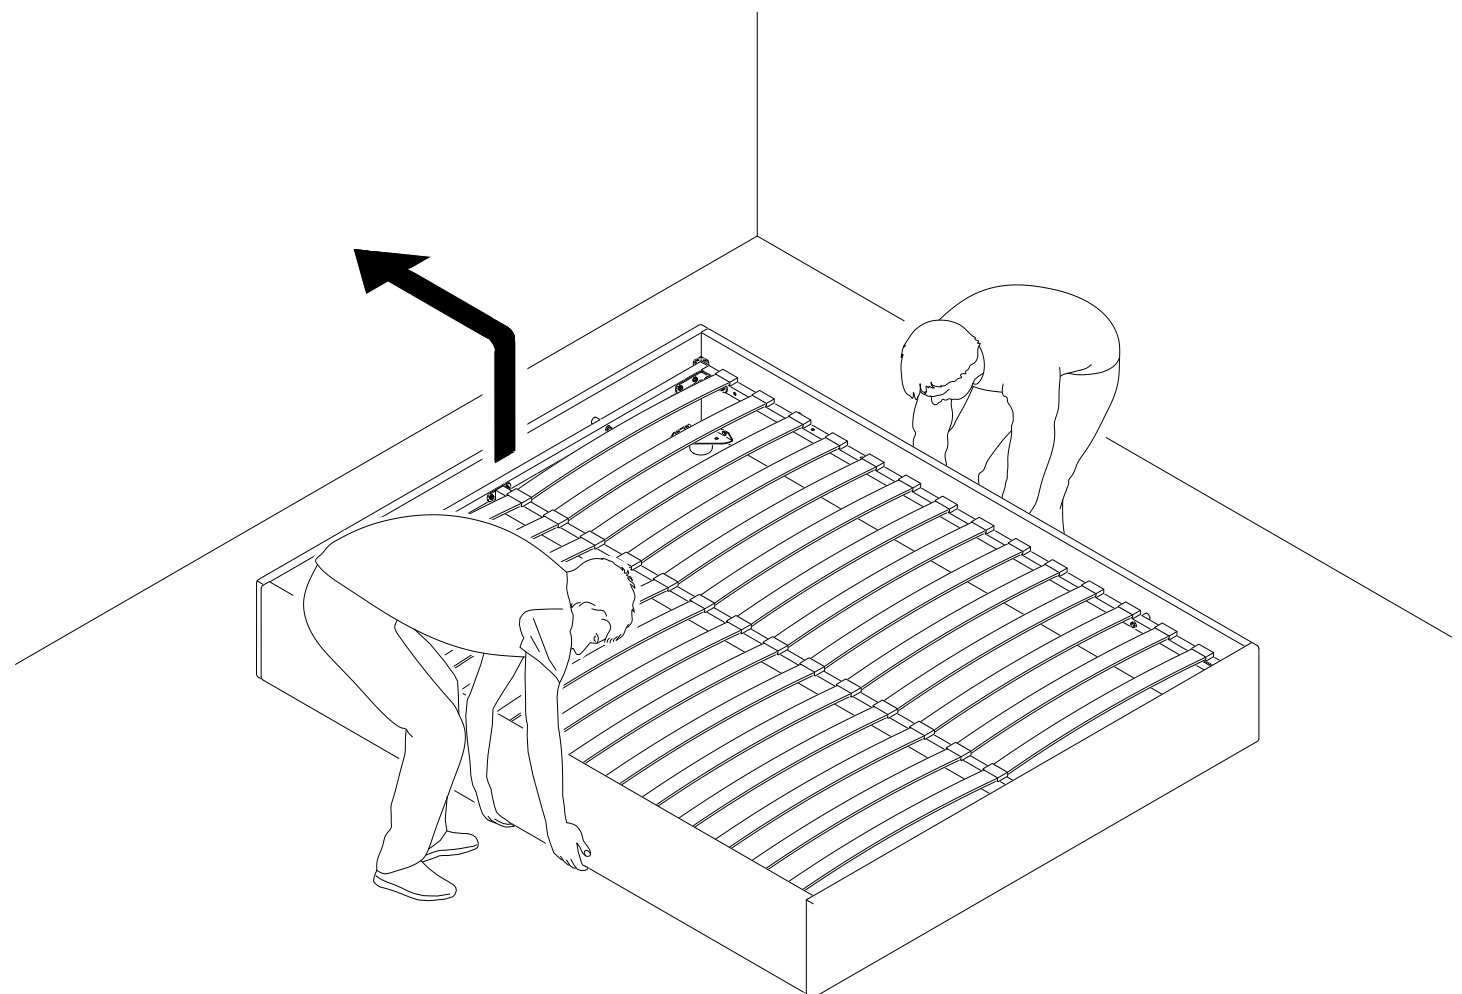
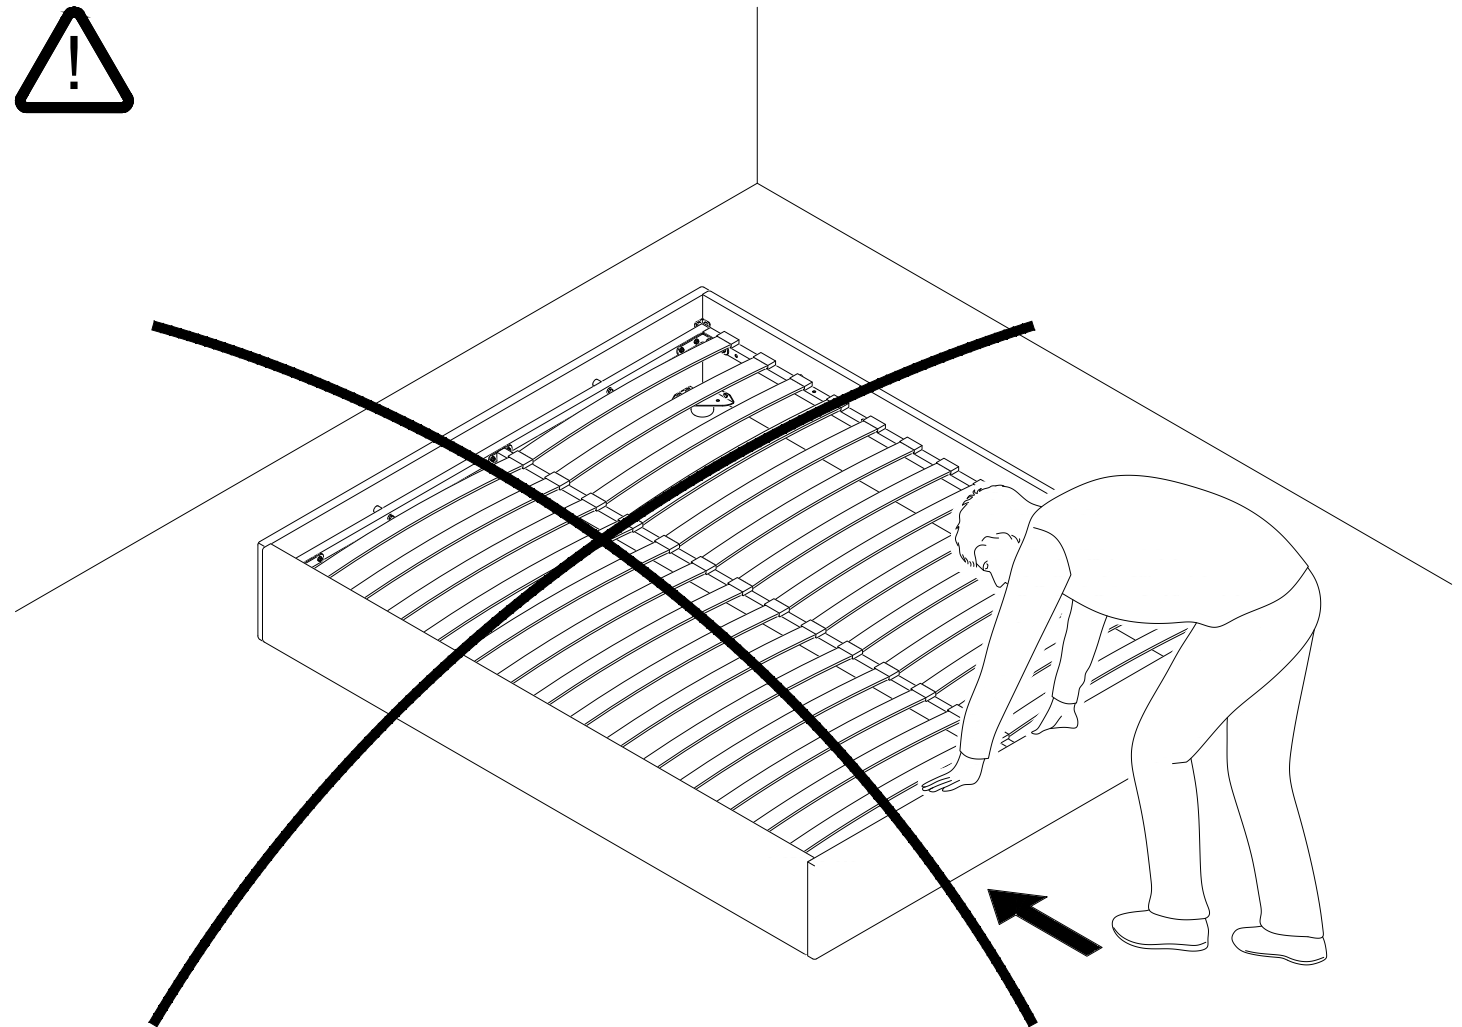
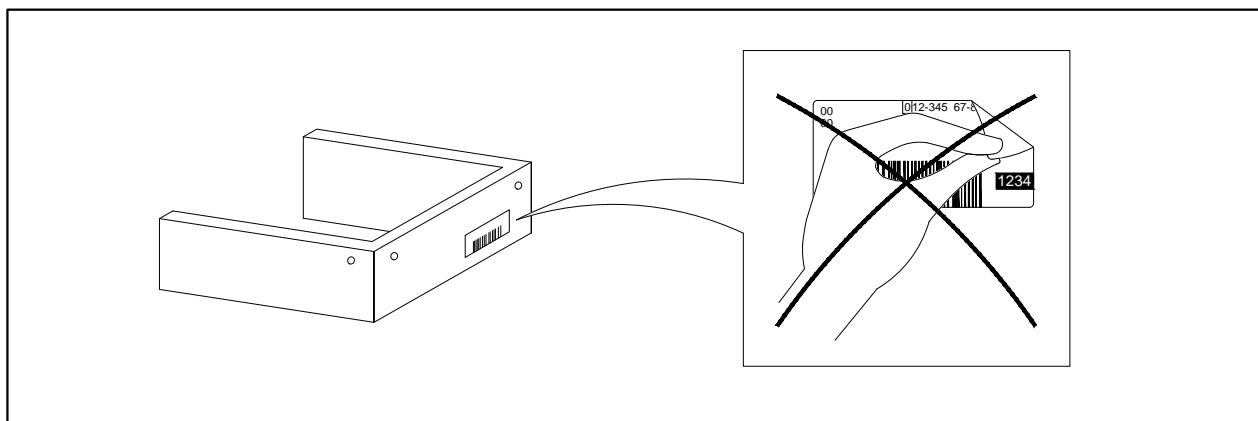
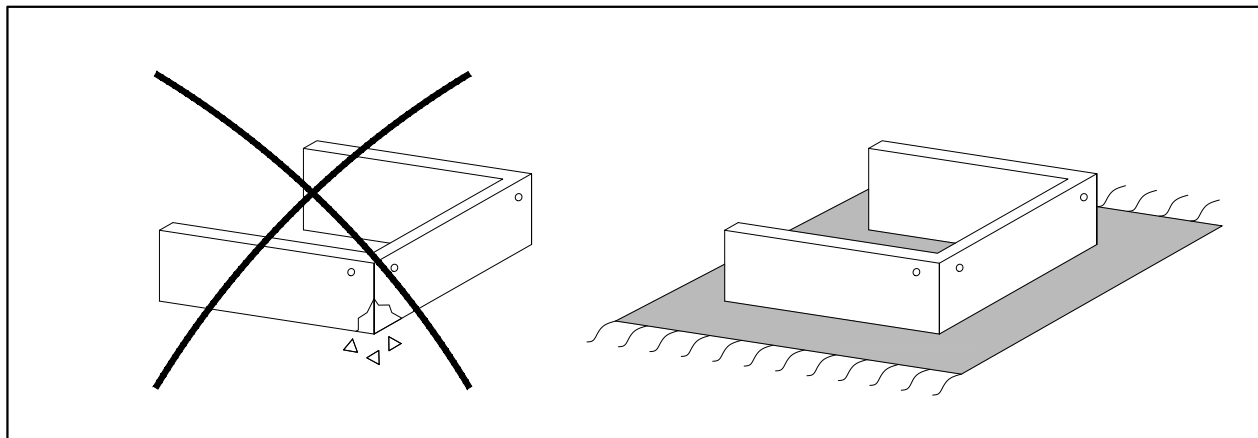
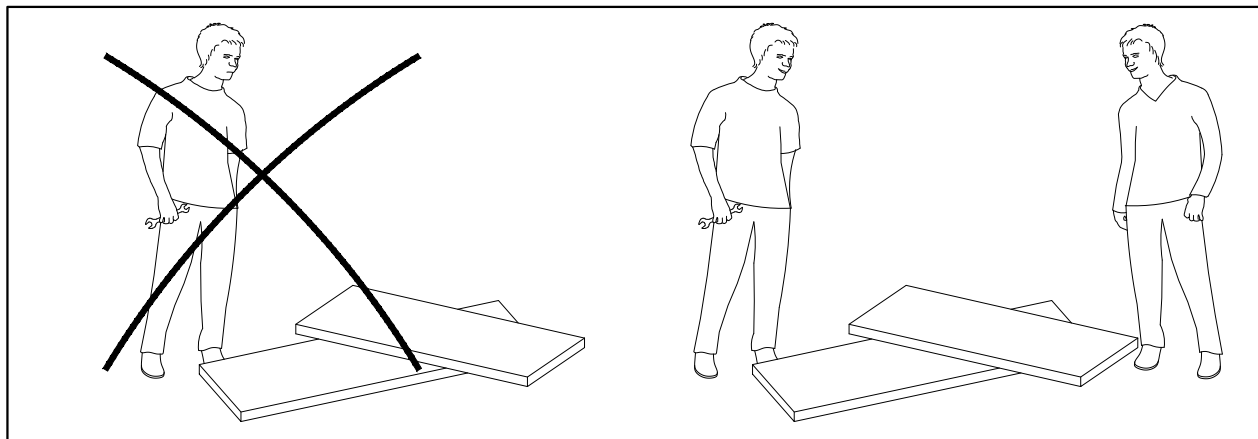
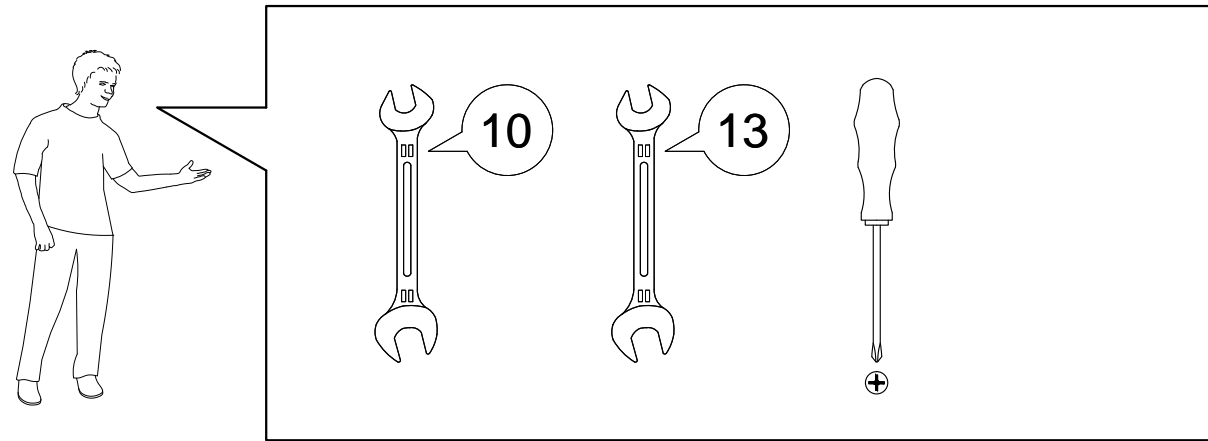


Инструкция по сборке





Кровать без подъёмного механизма Дизайн 1240

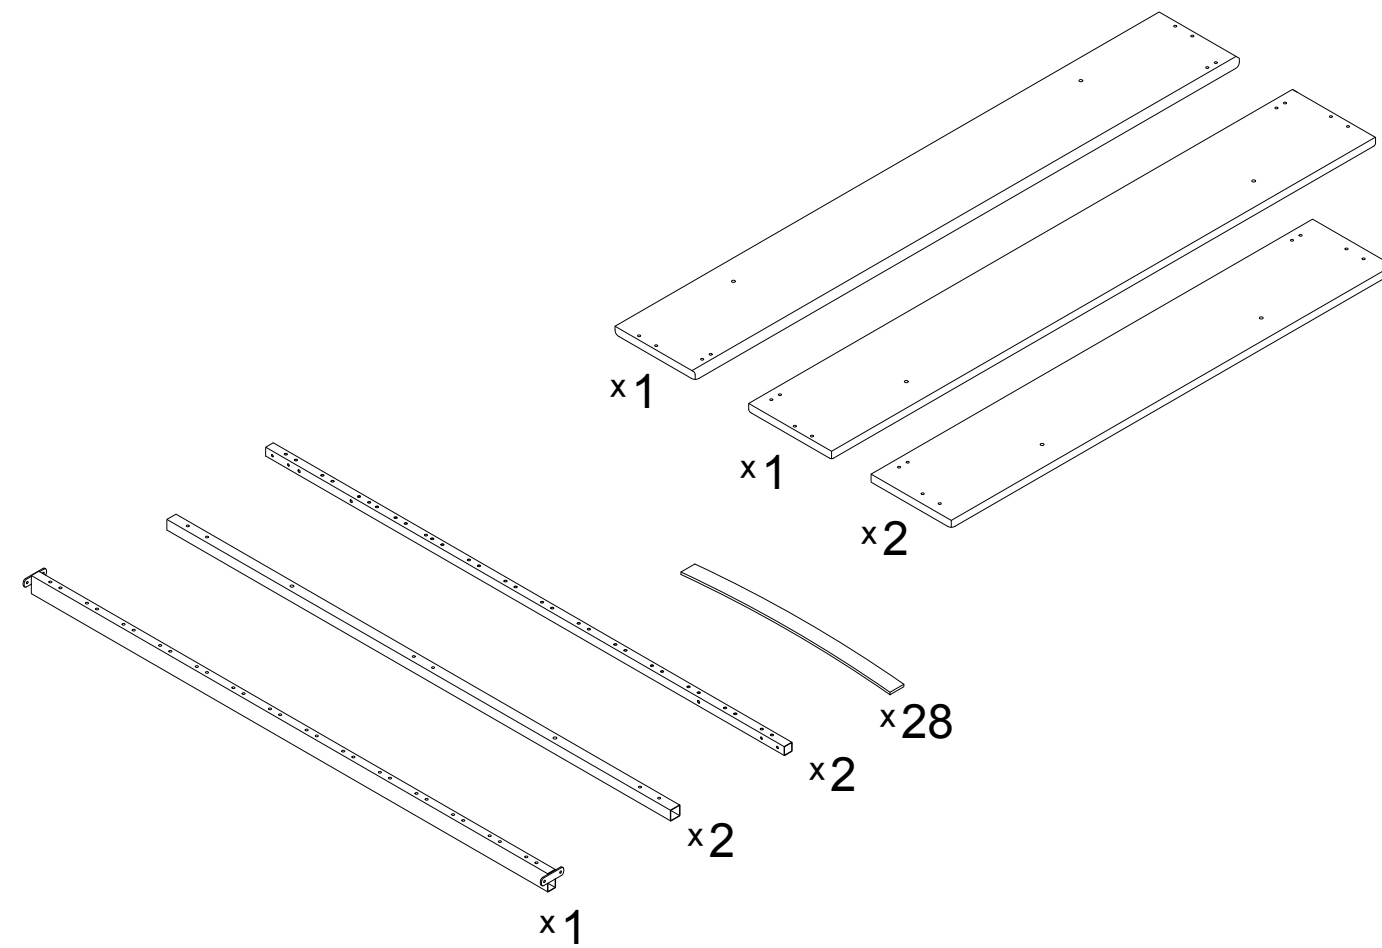

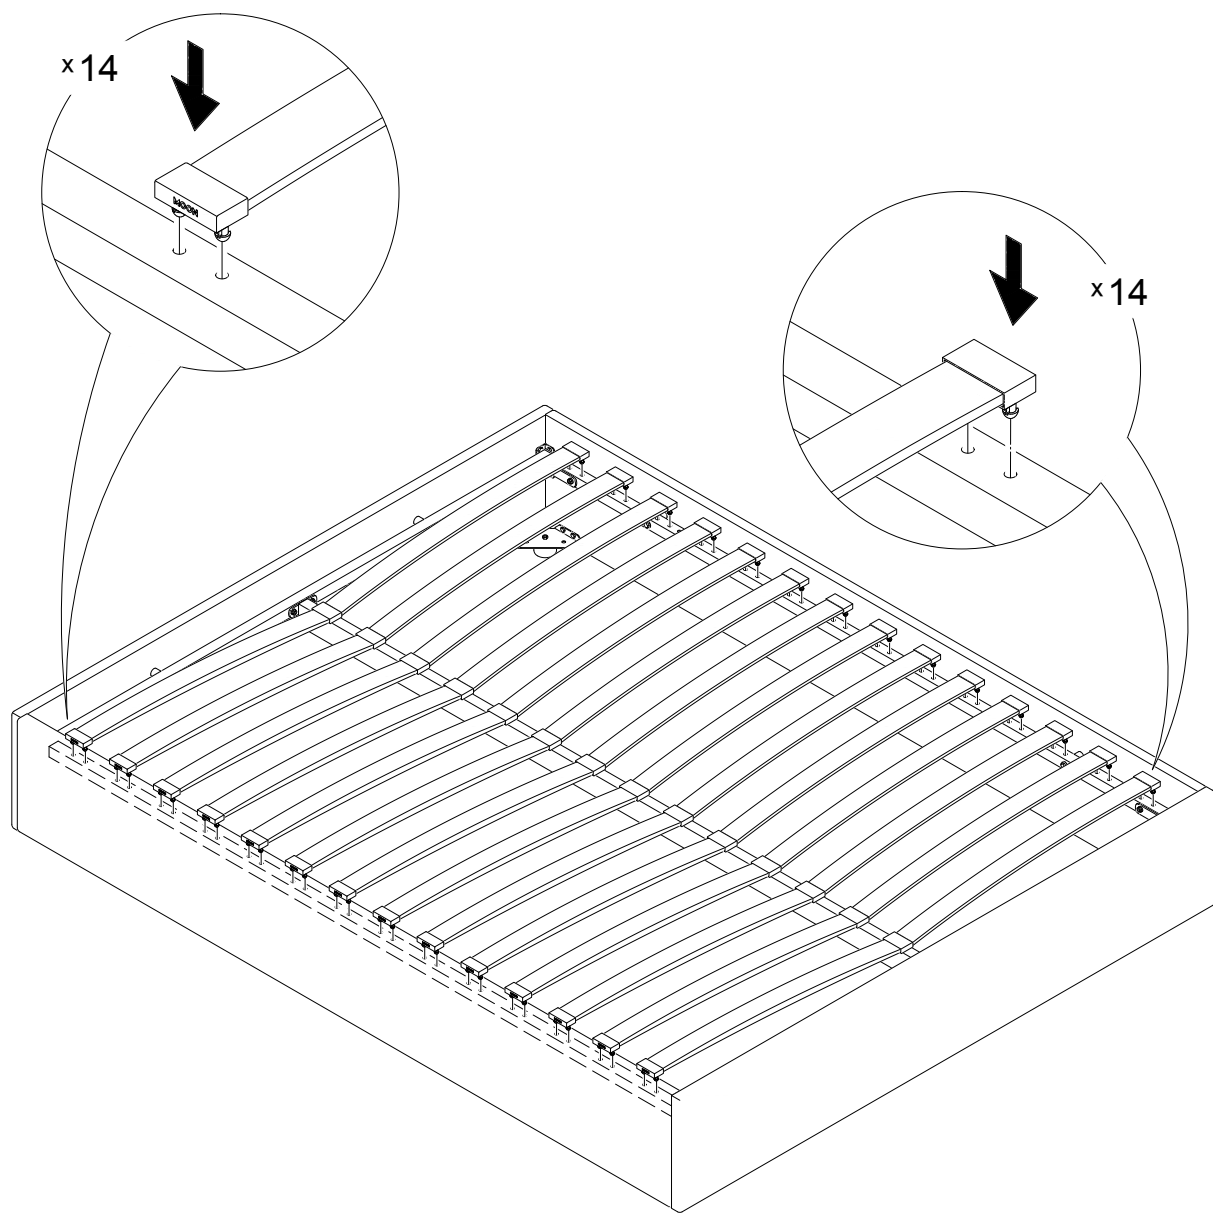


M 1:1


19

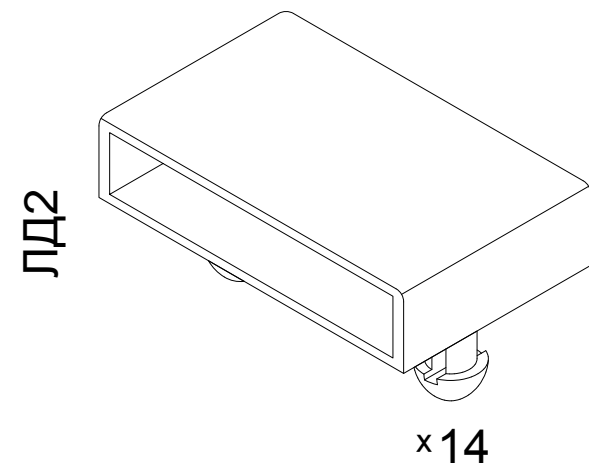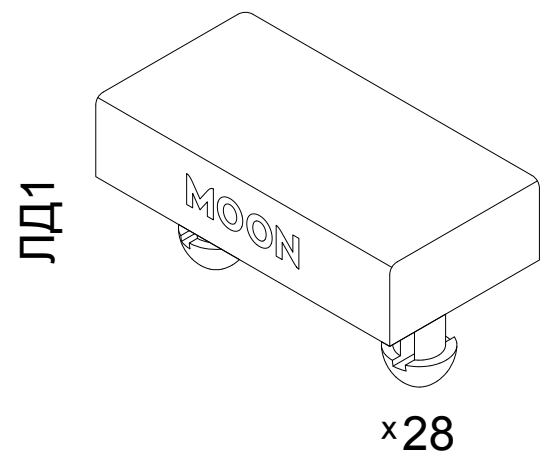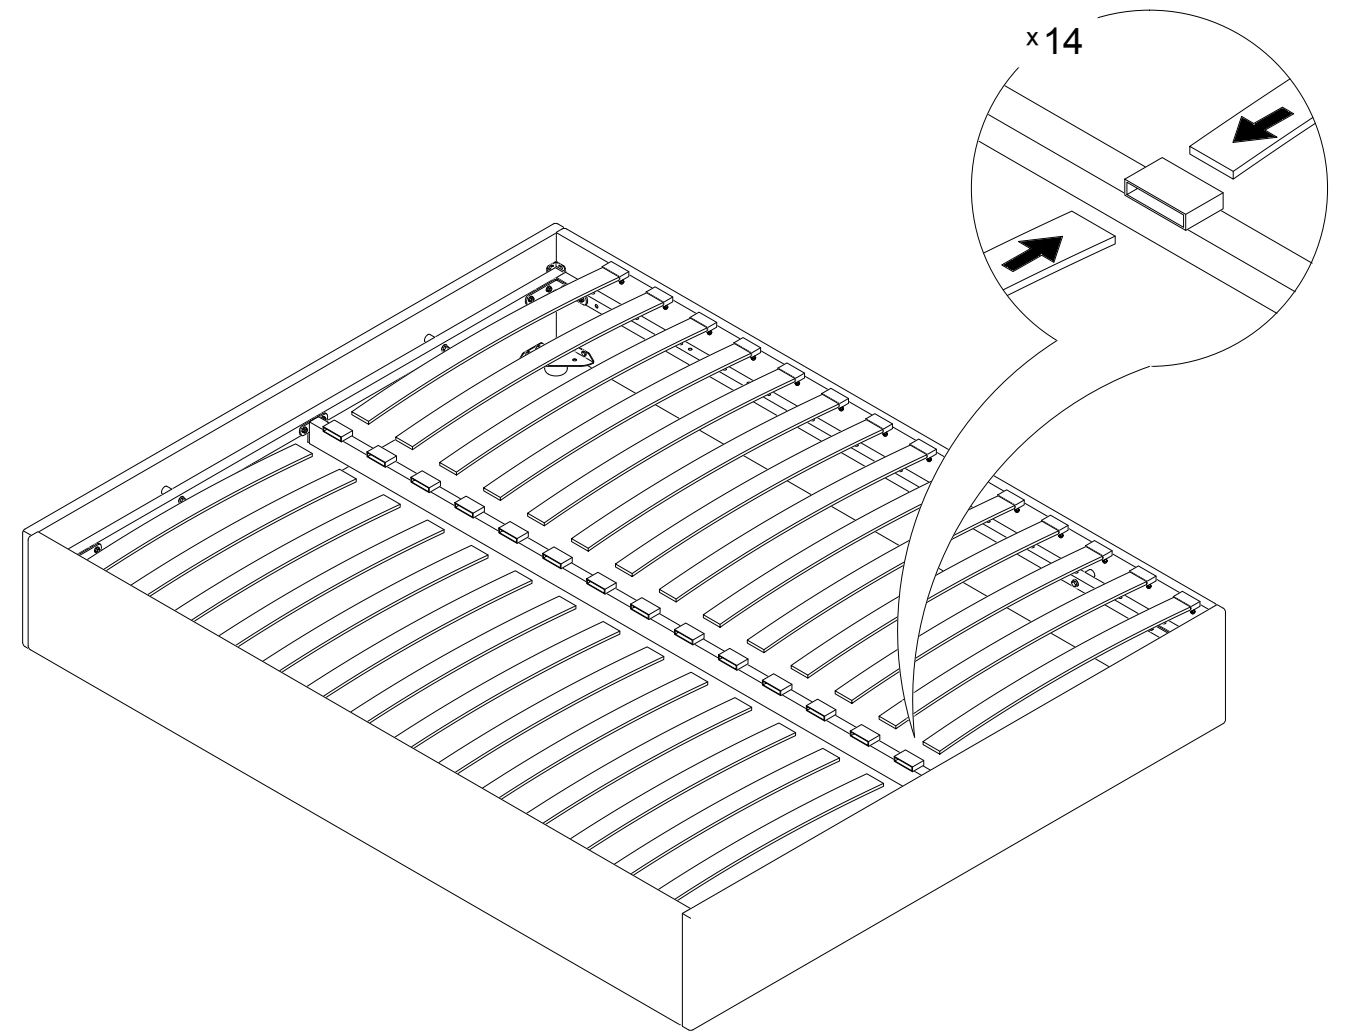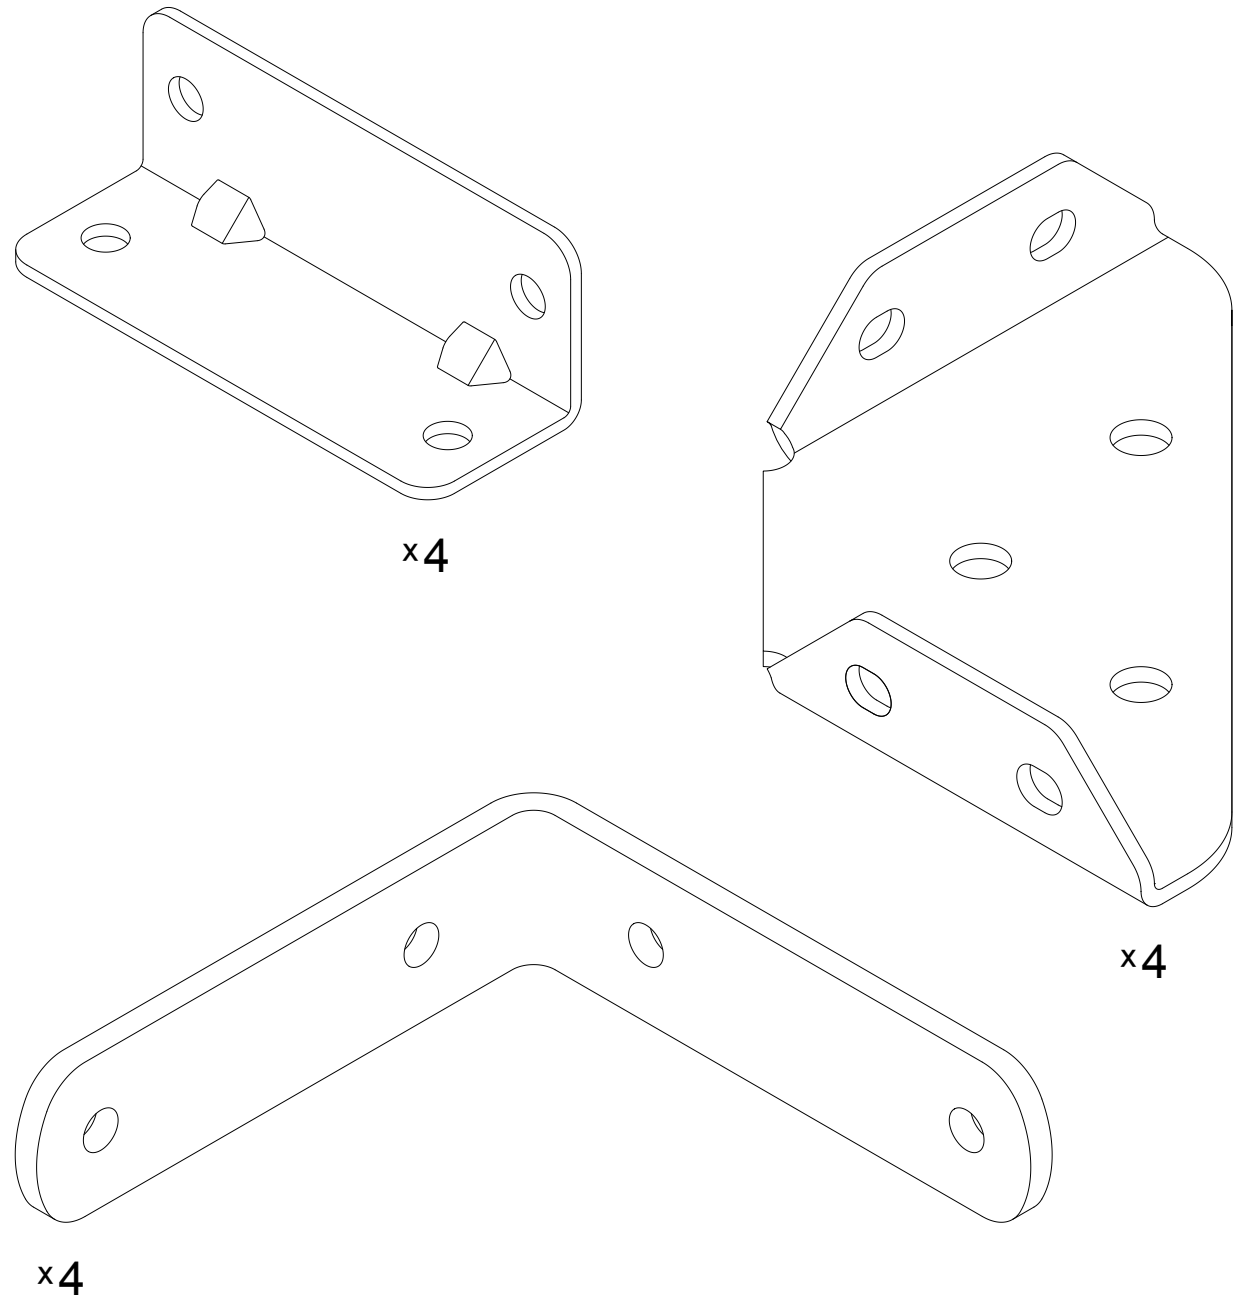



17

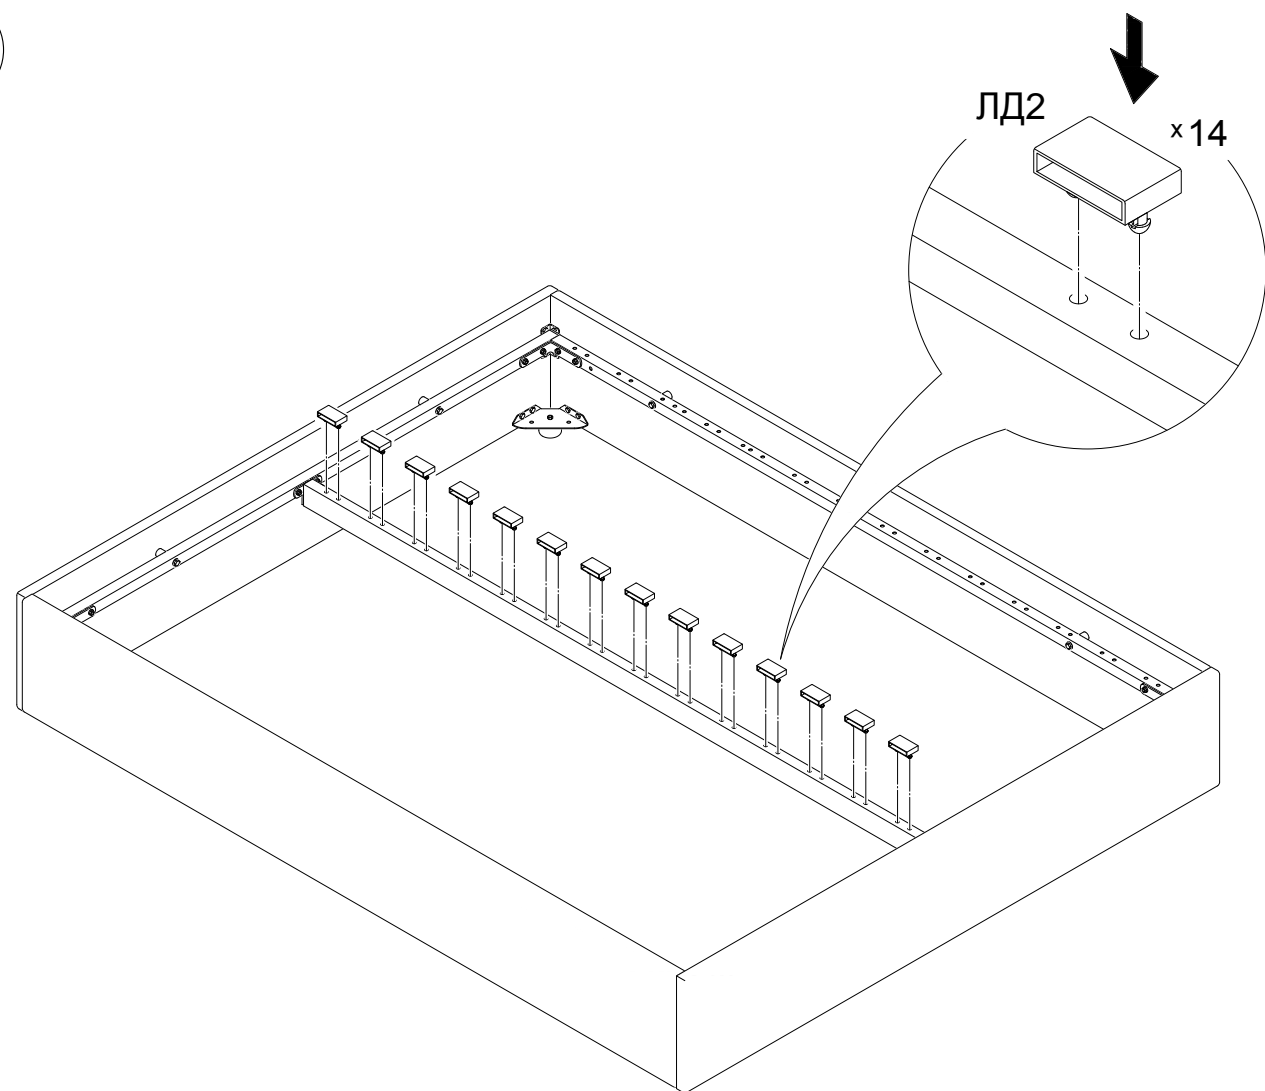


M 1:1

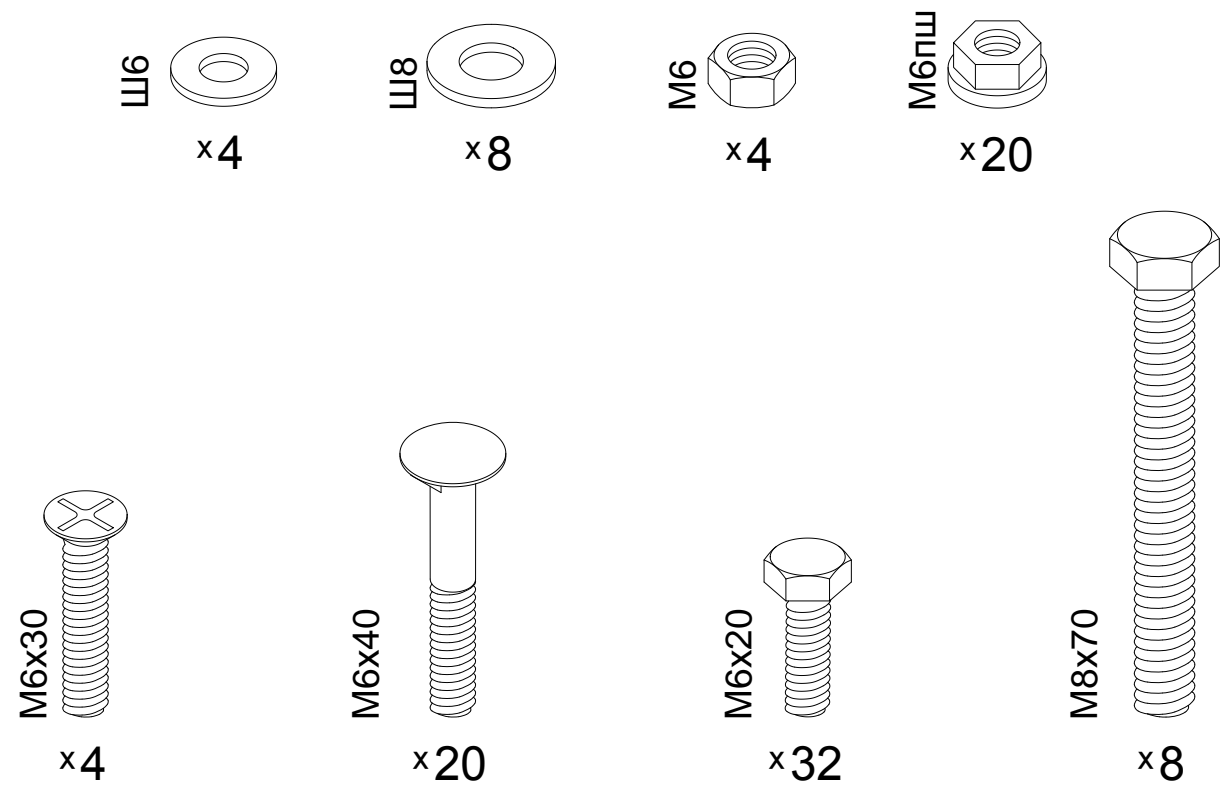


18

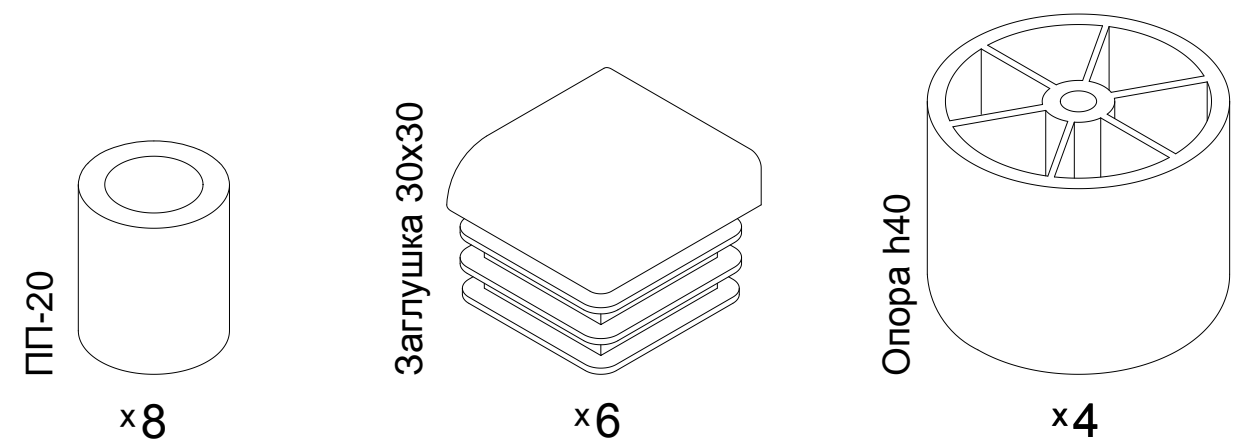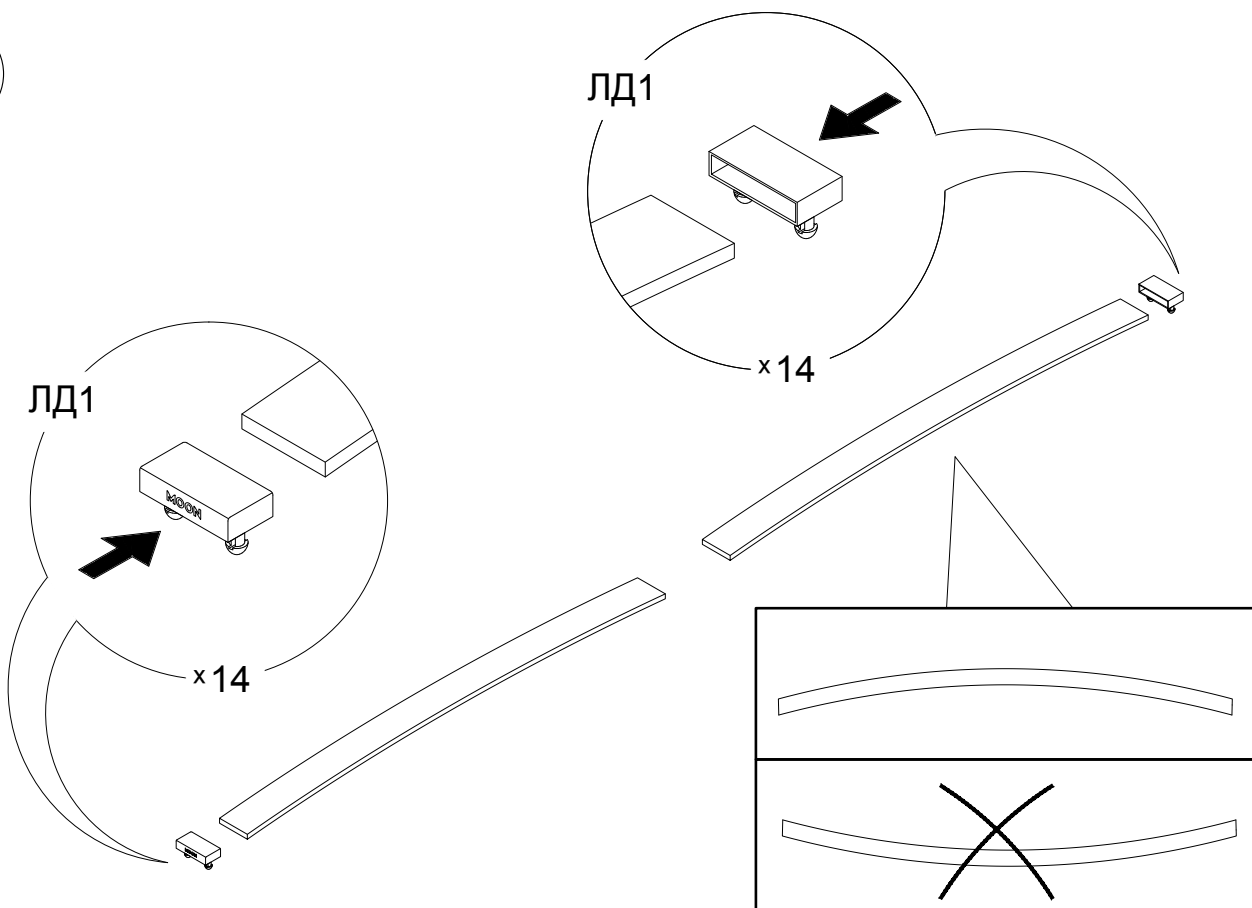


1

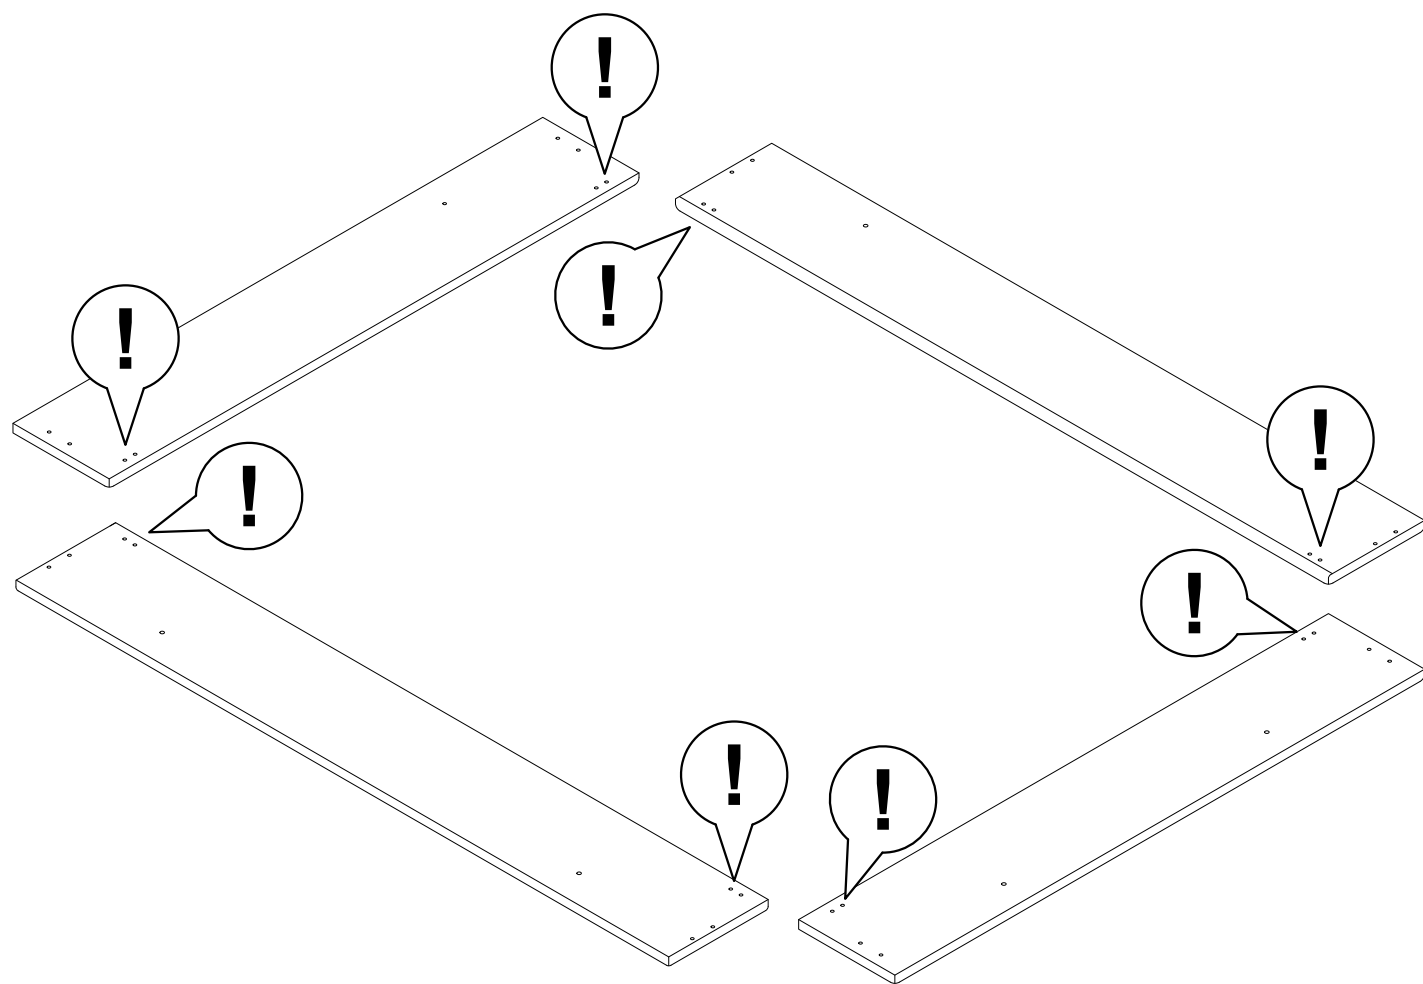


16

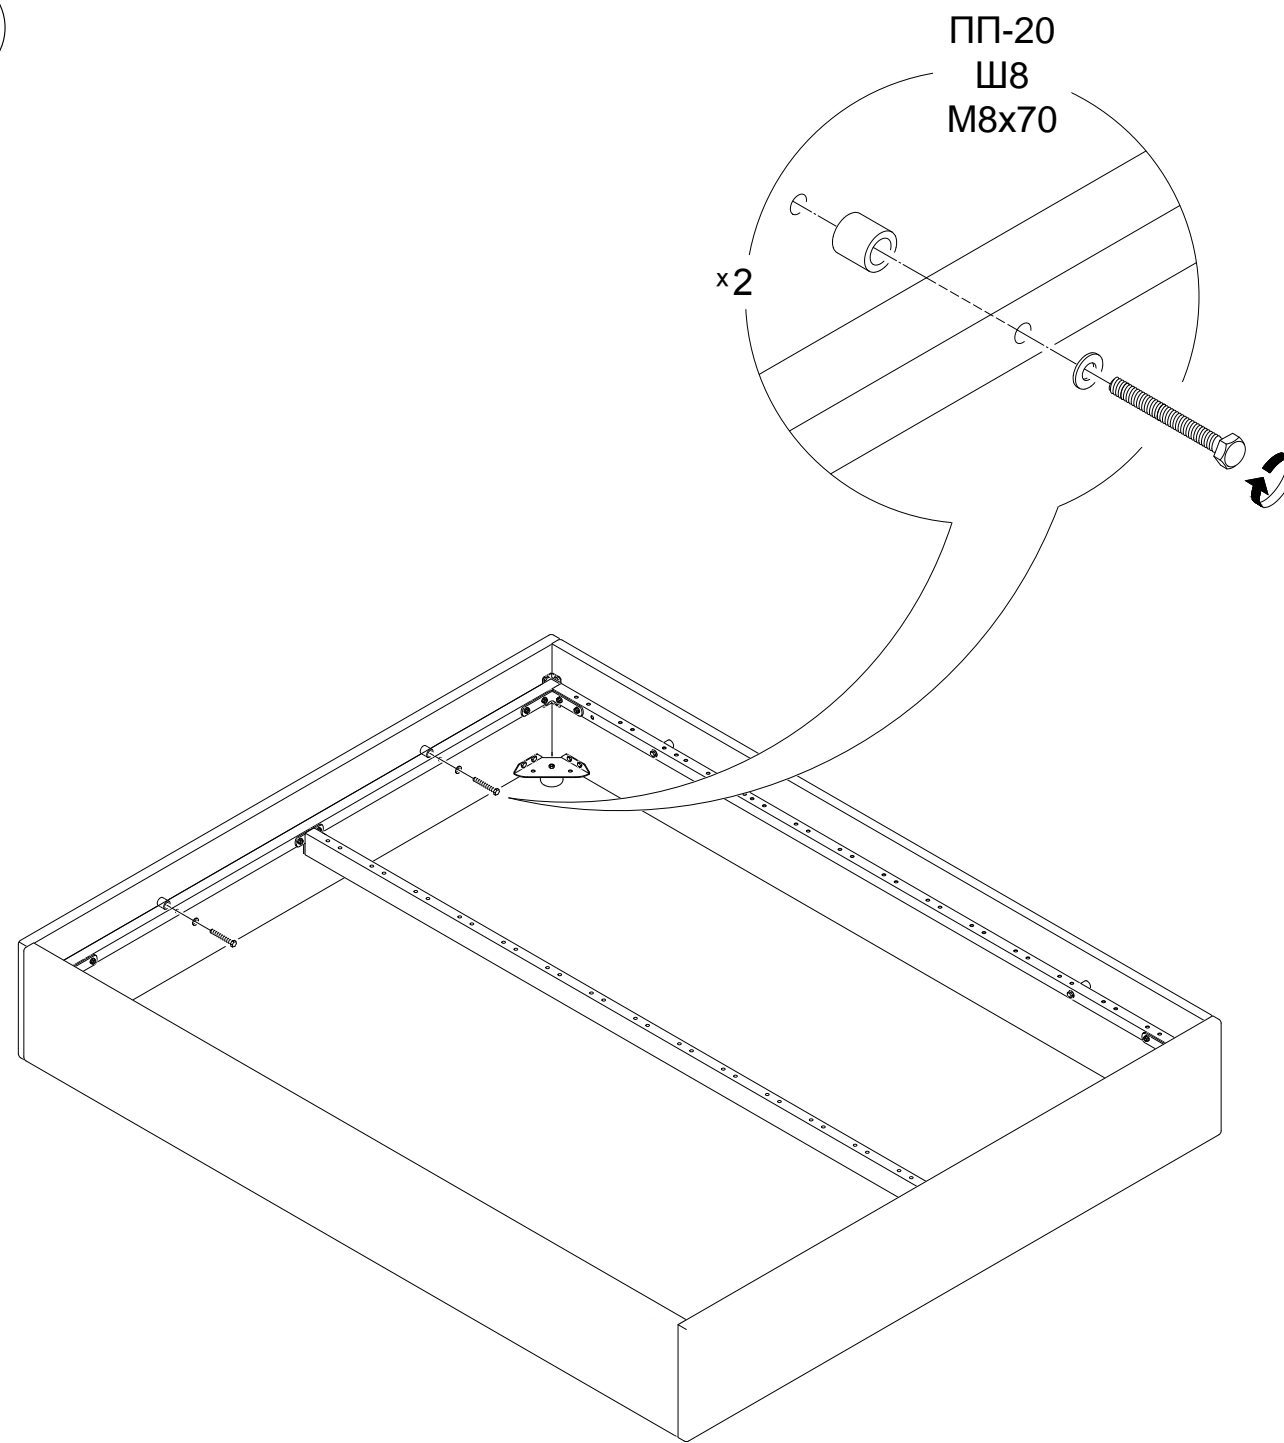


15

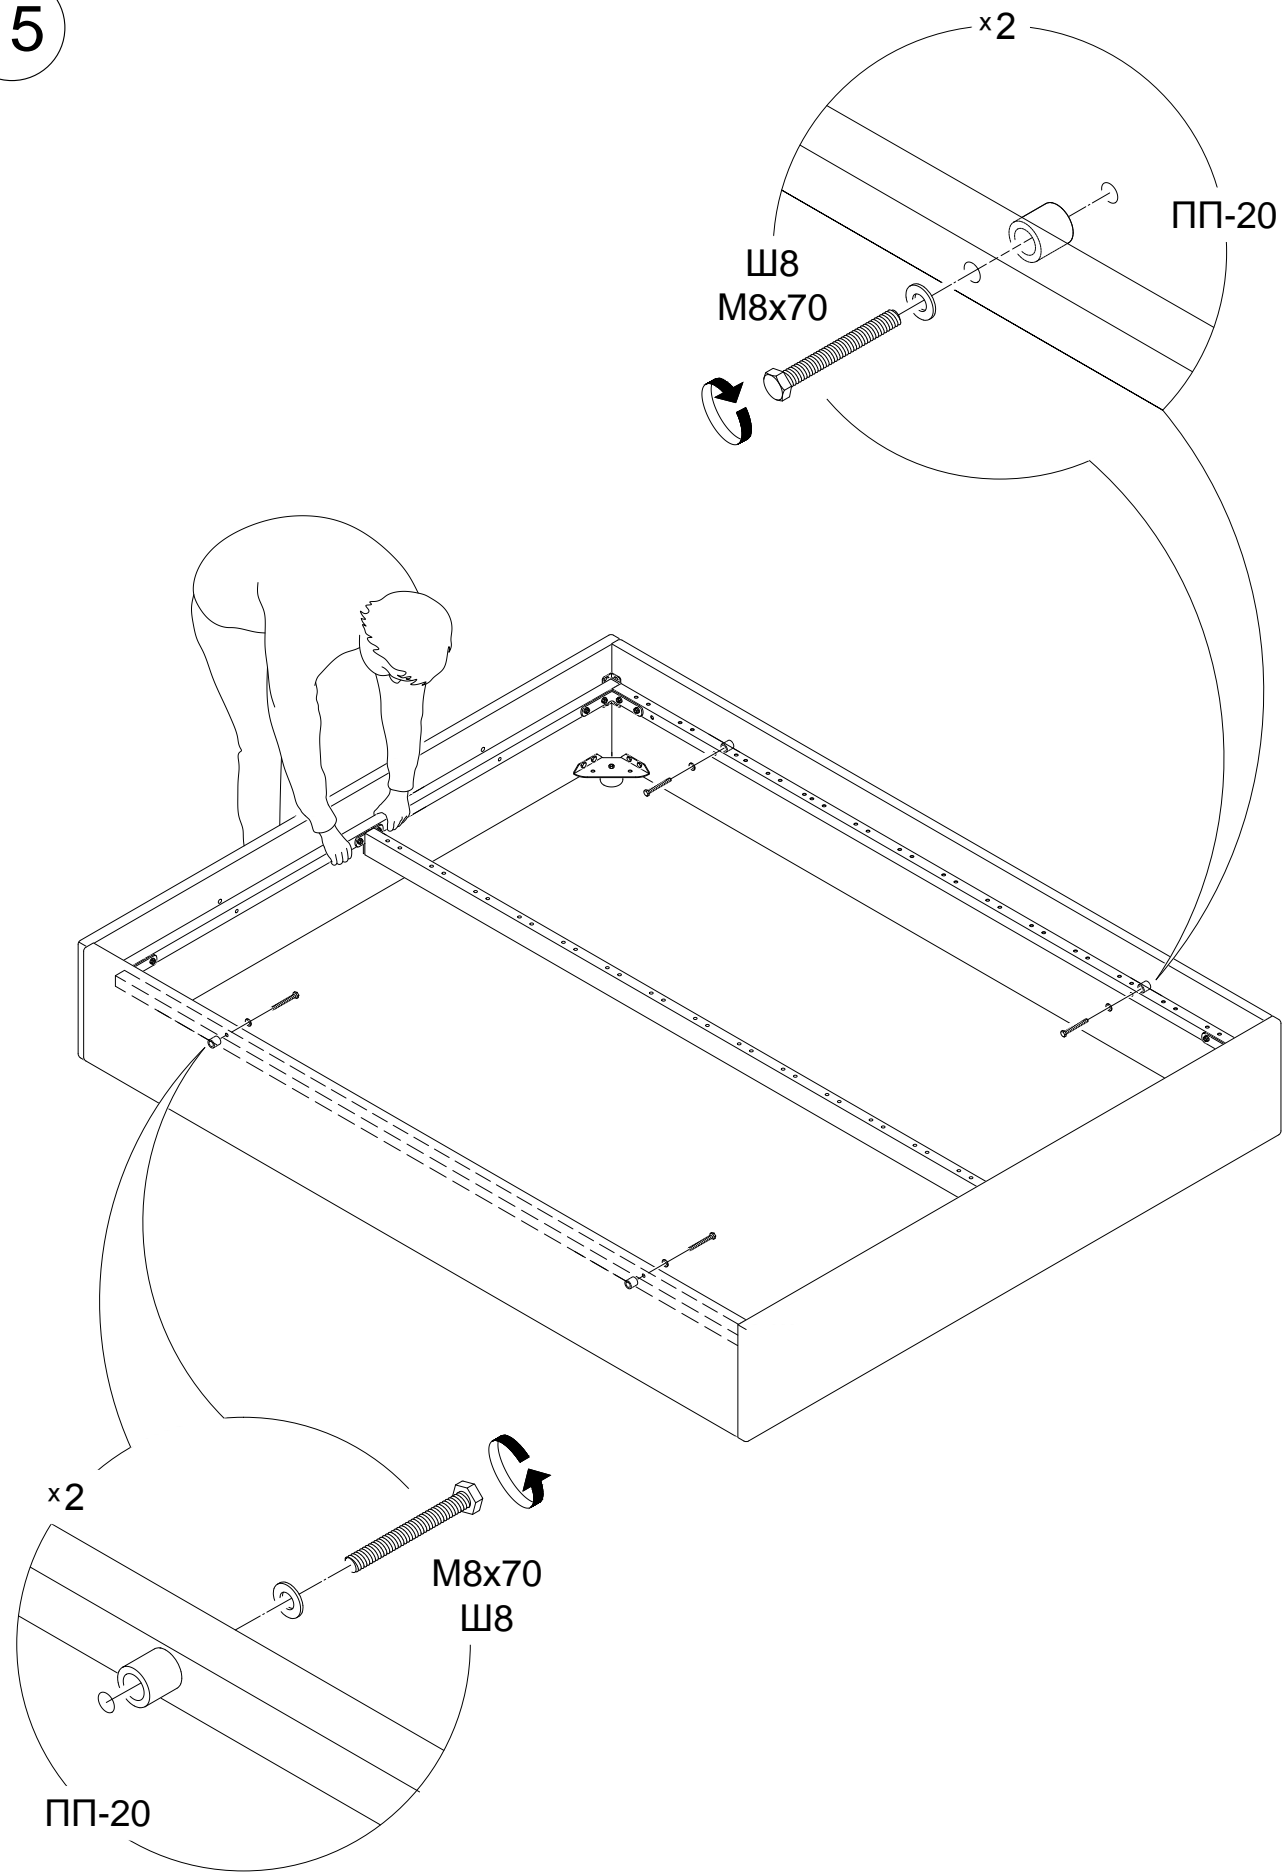


2



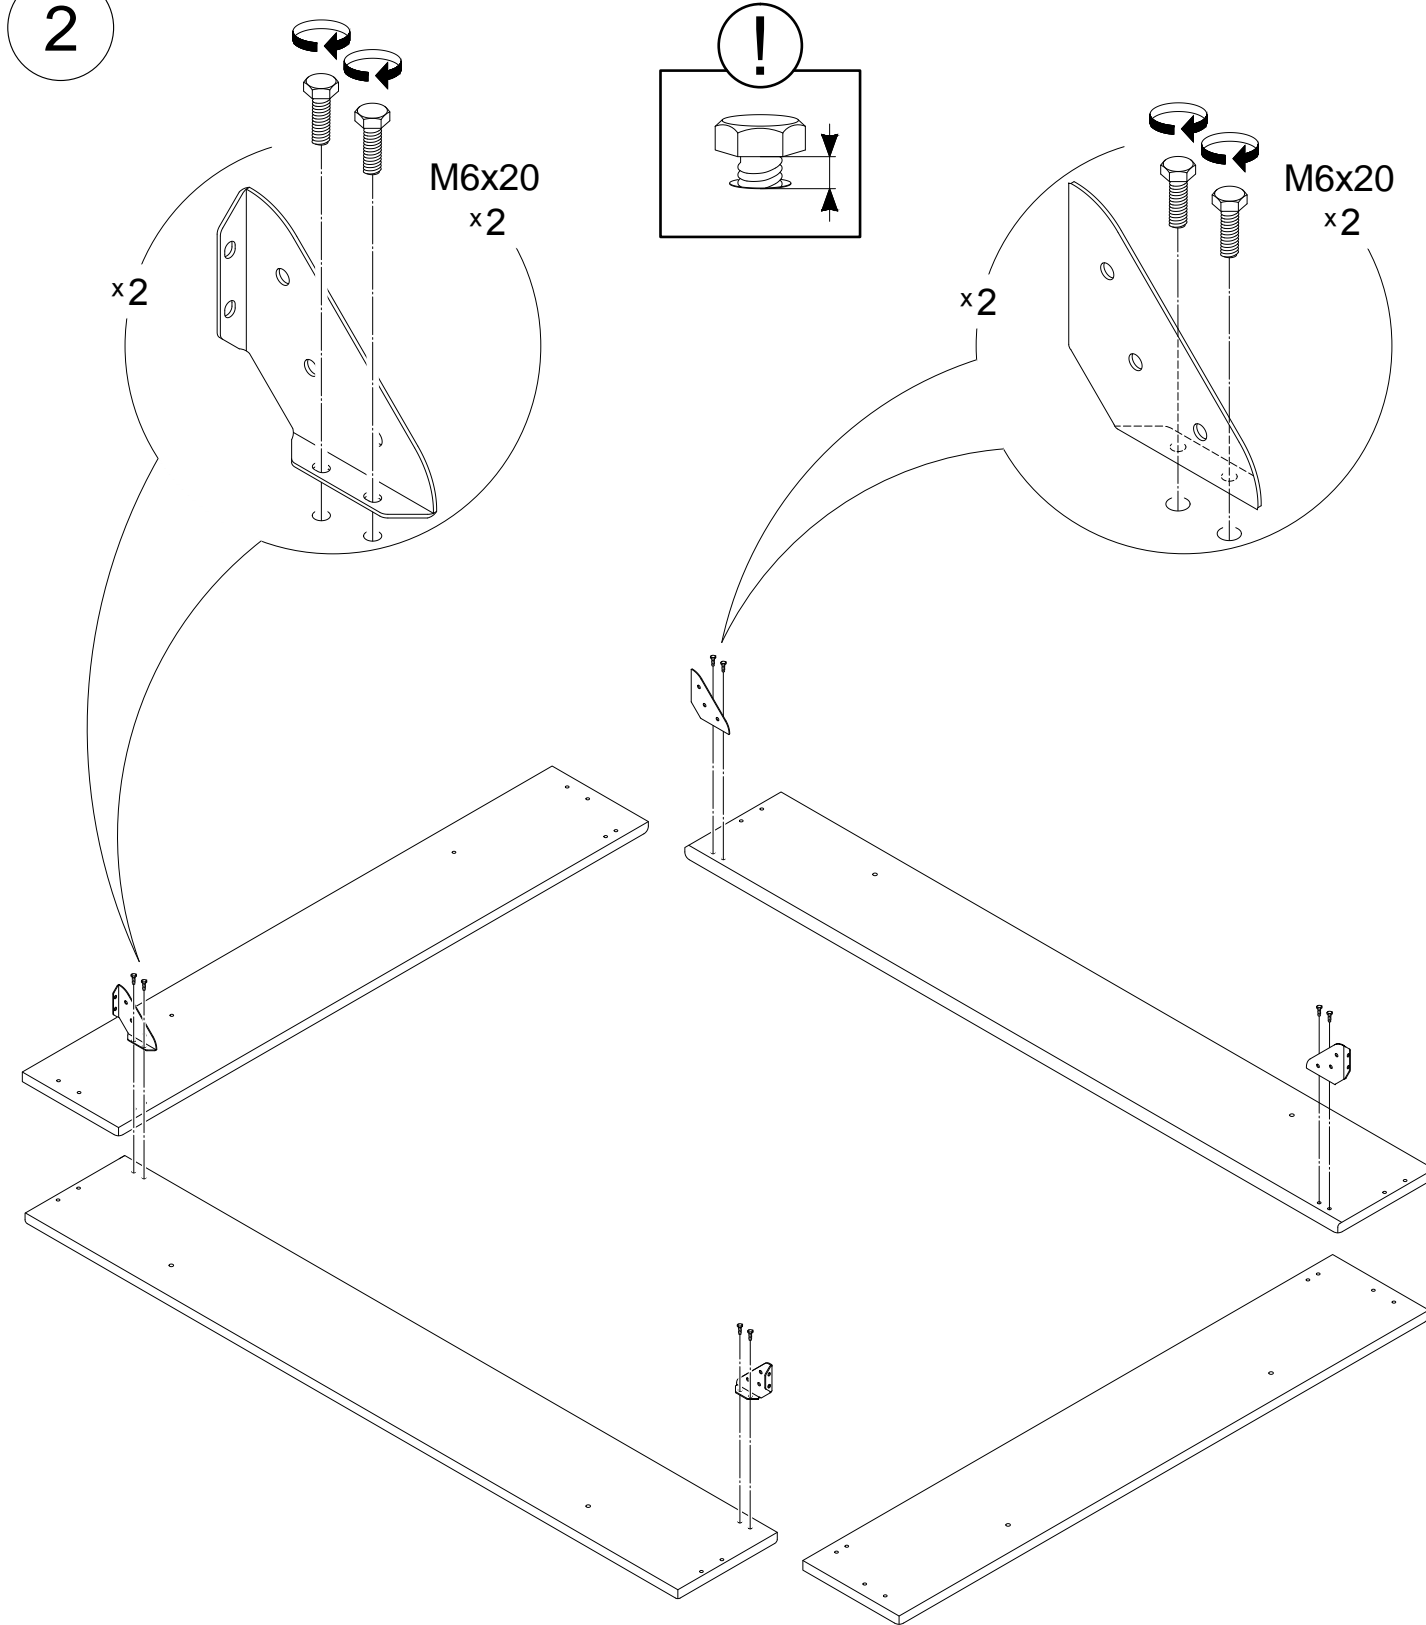


3

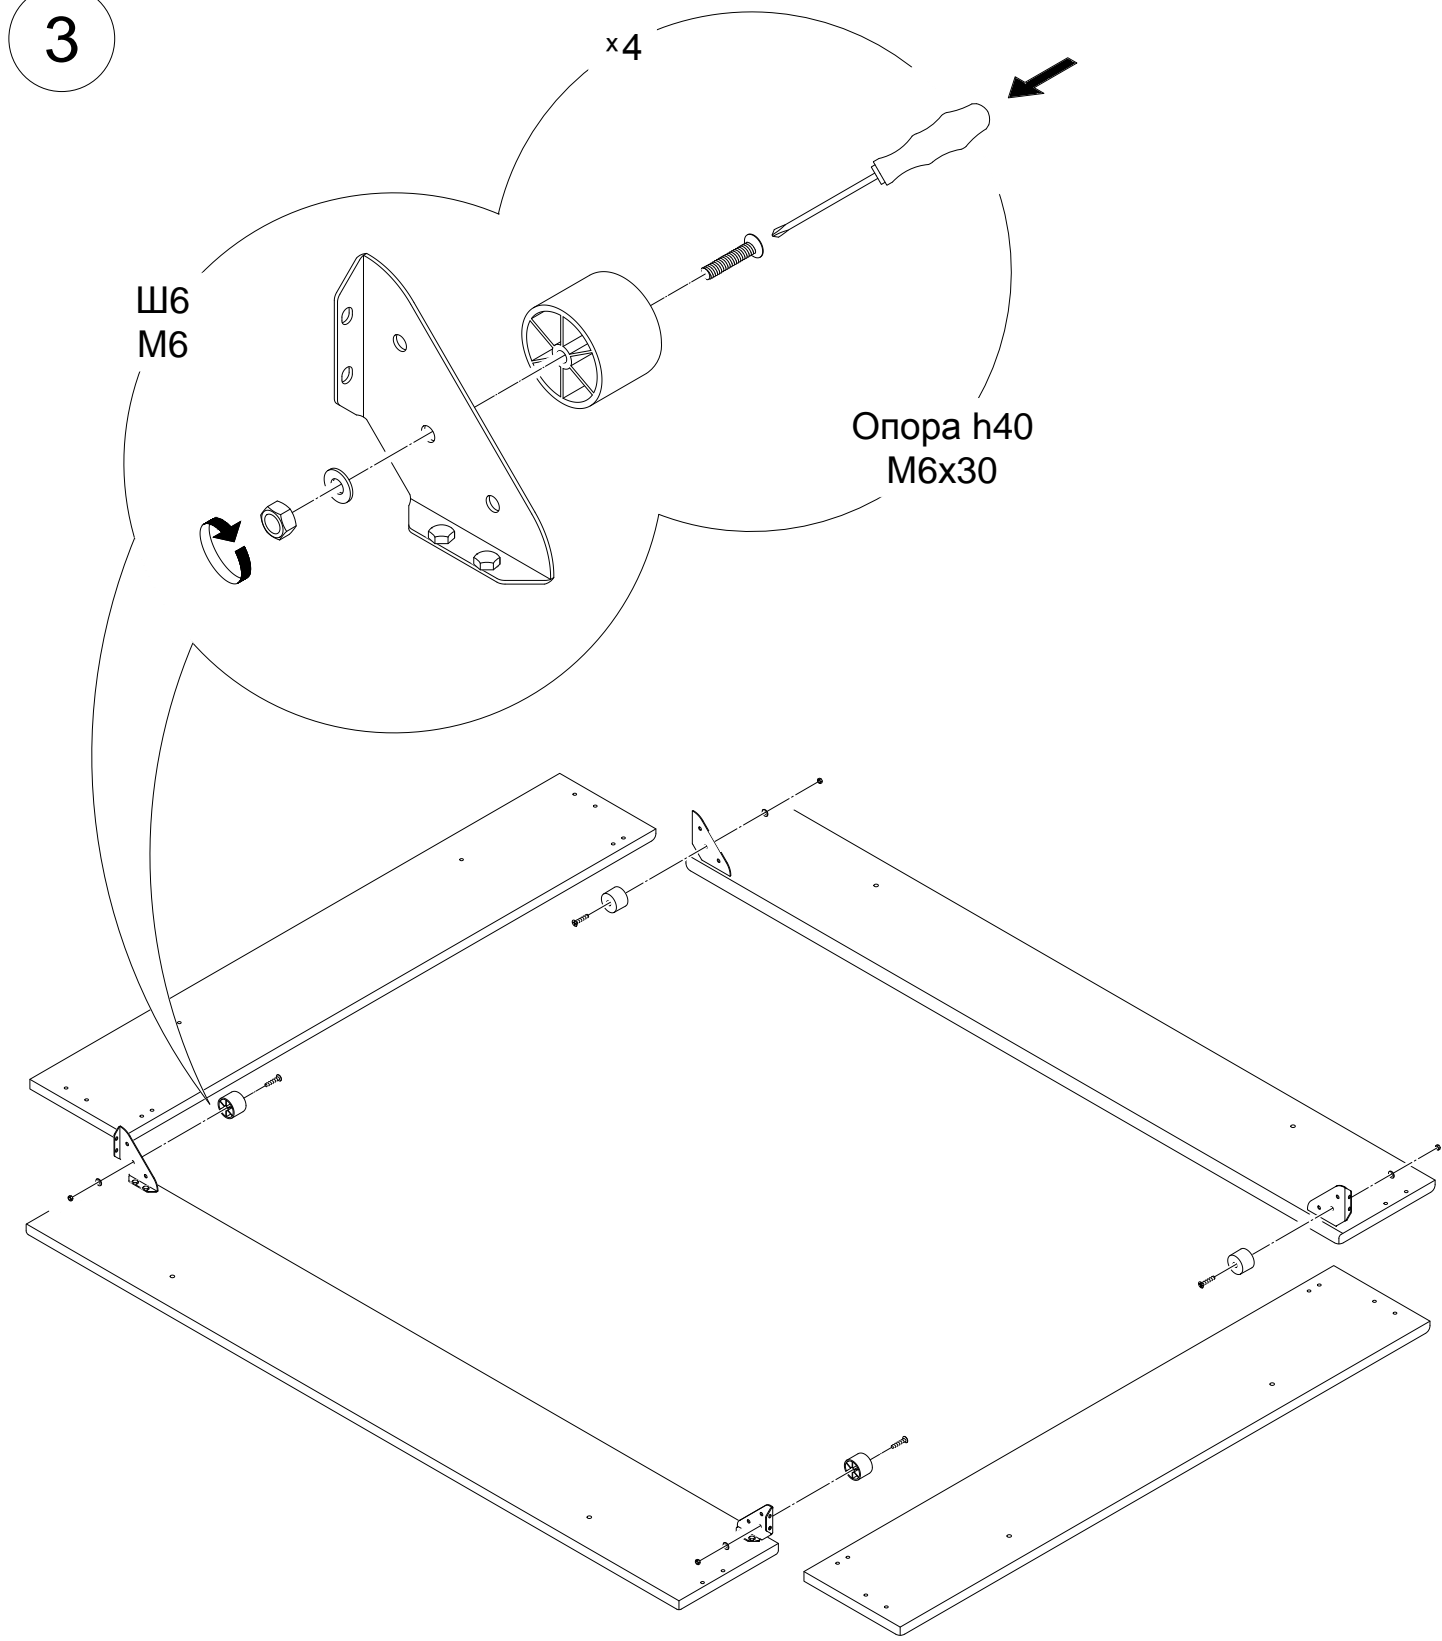


14

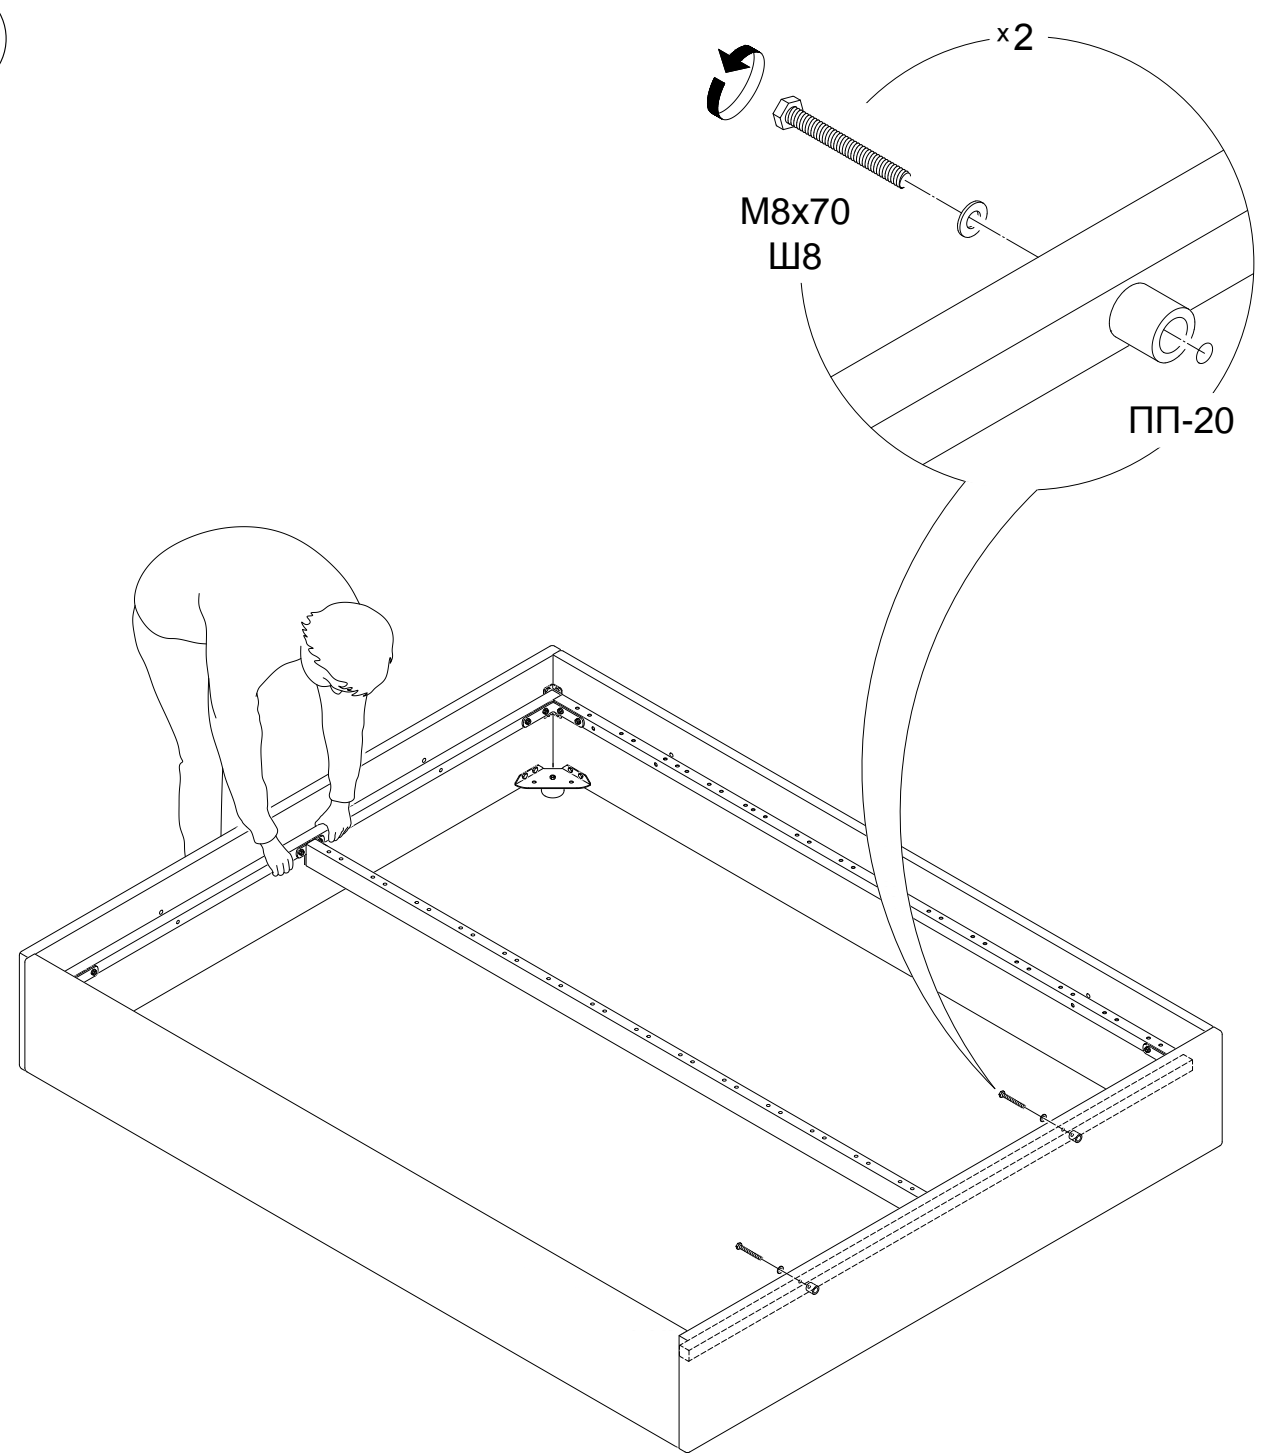


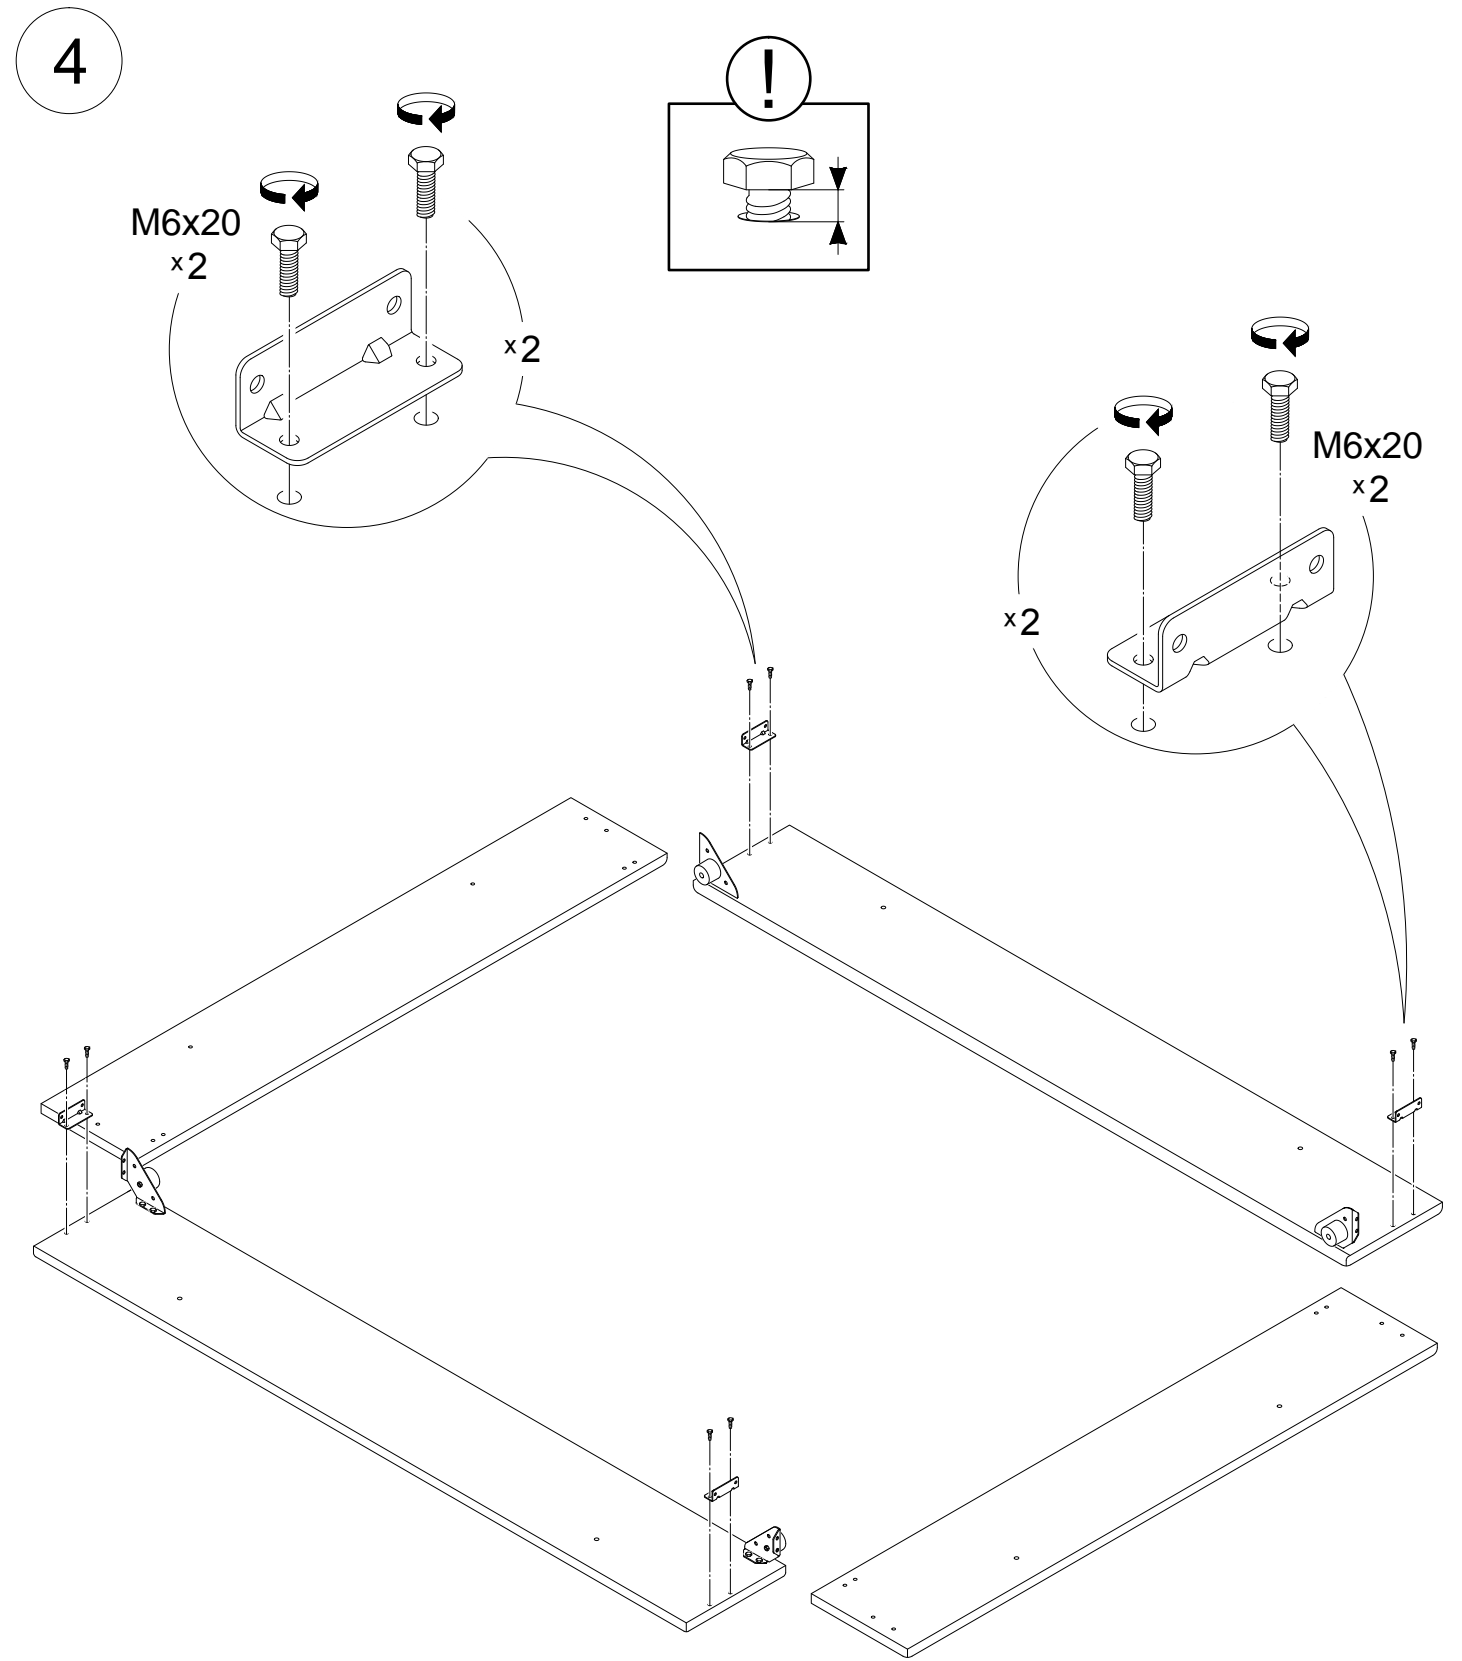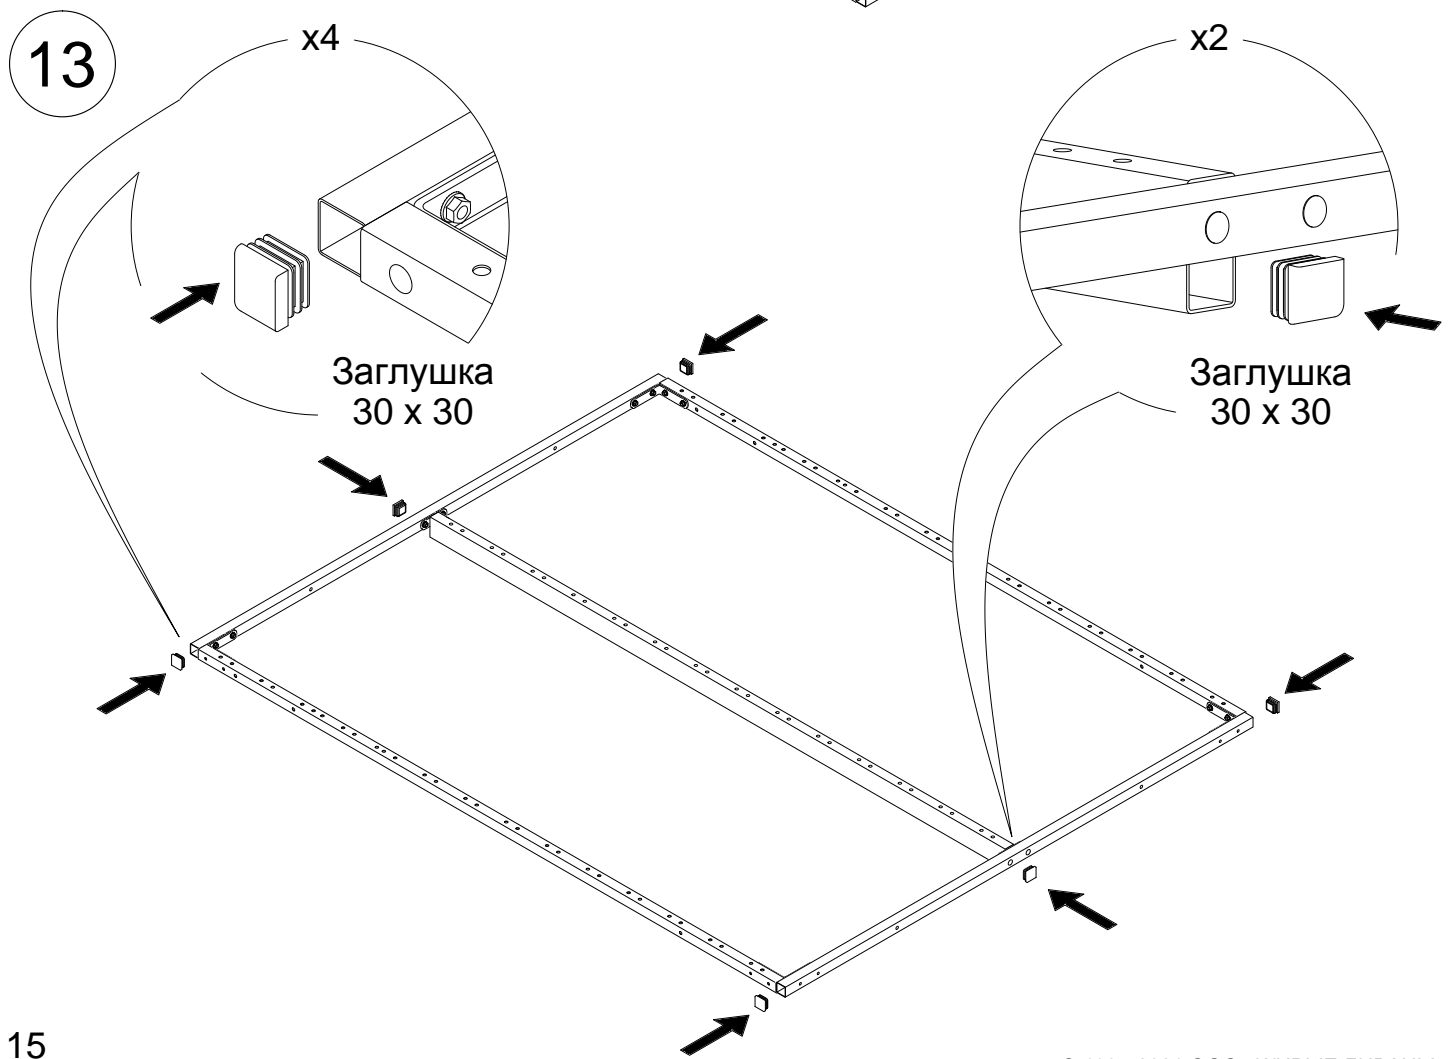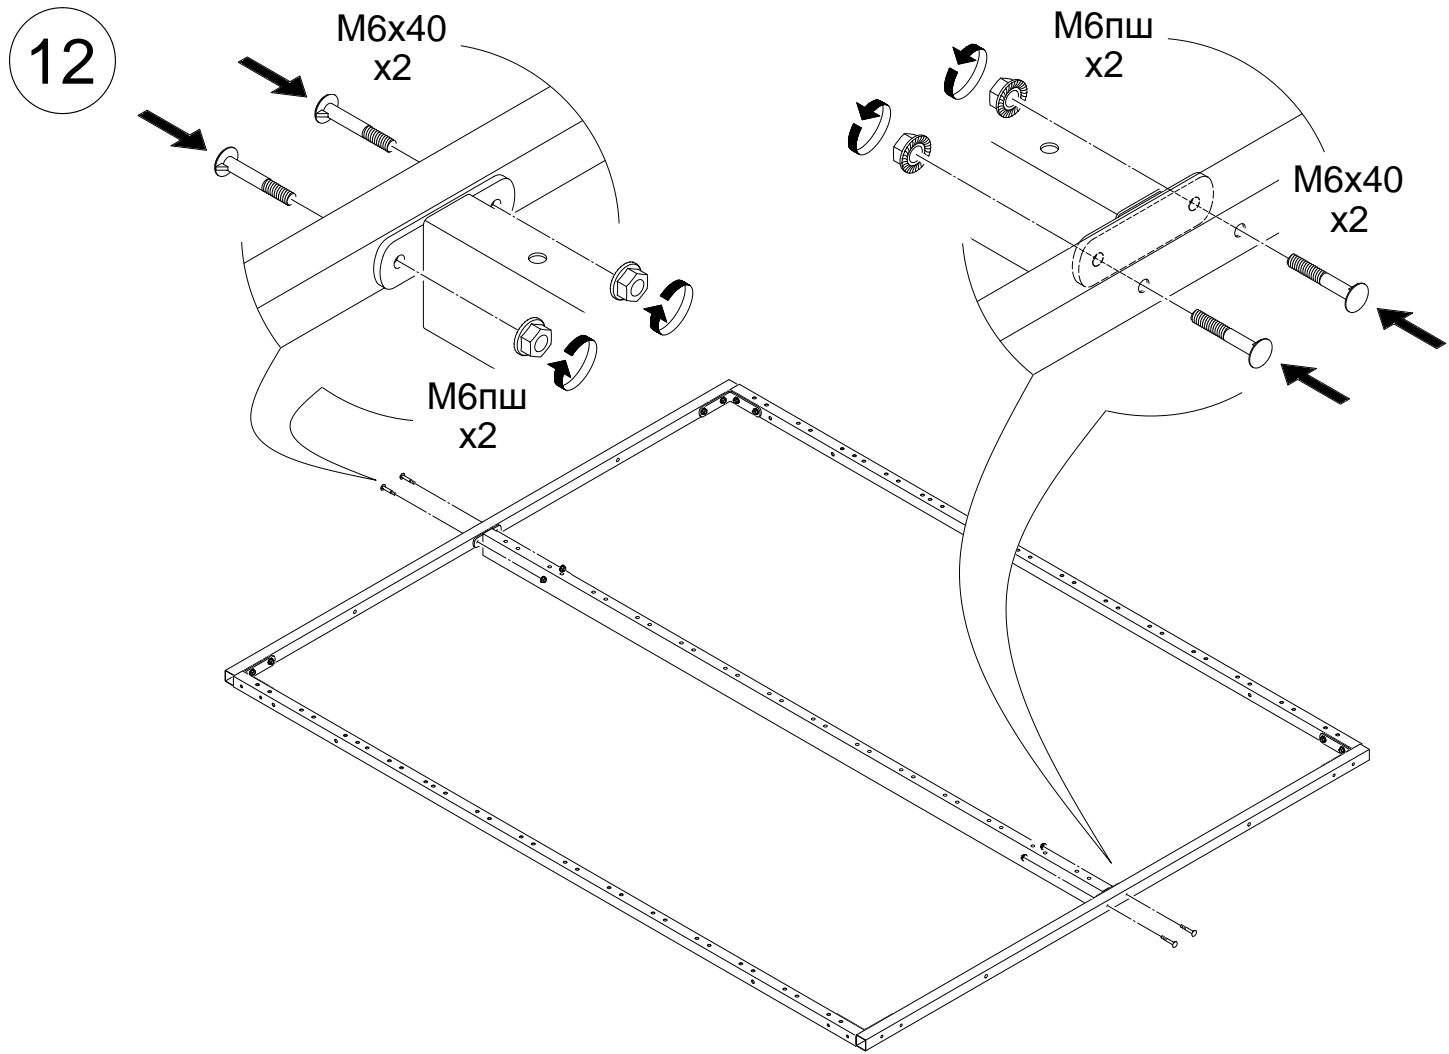


5

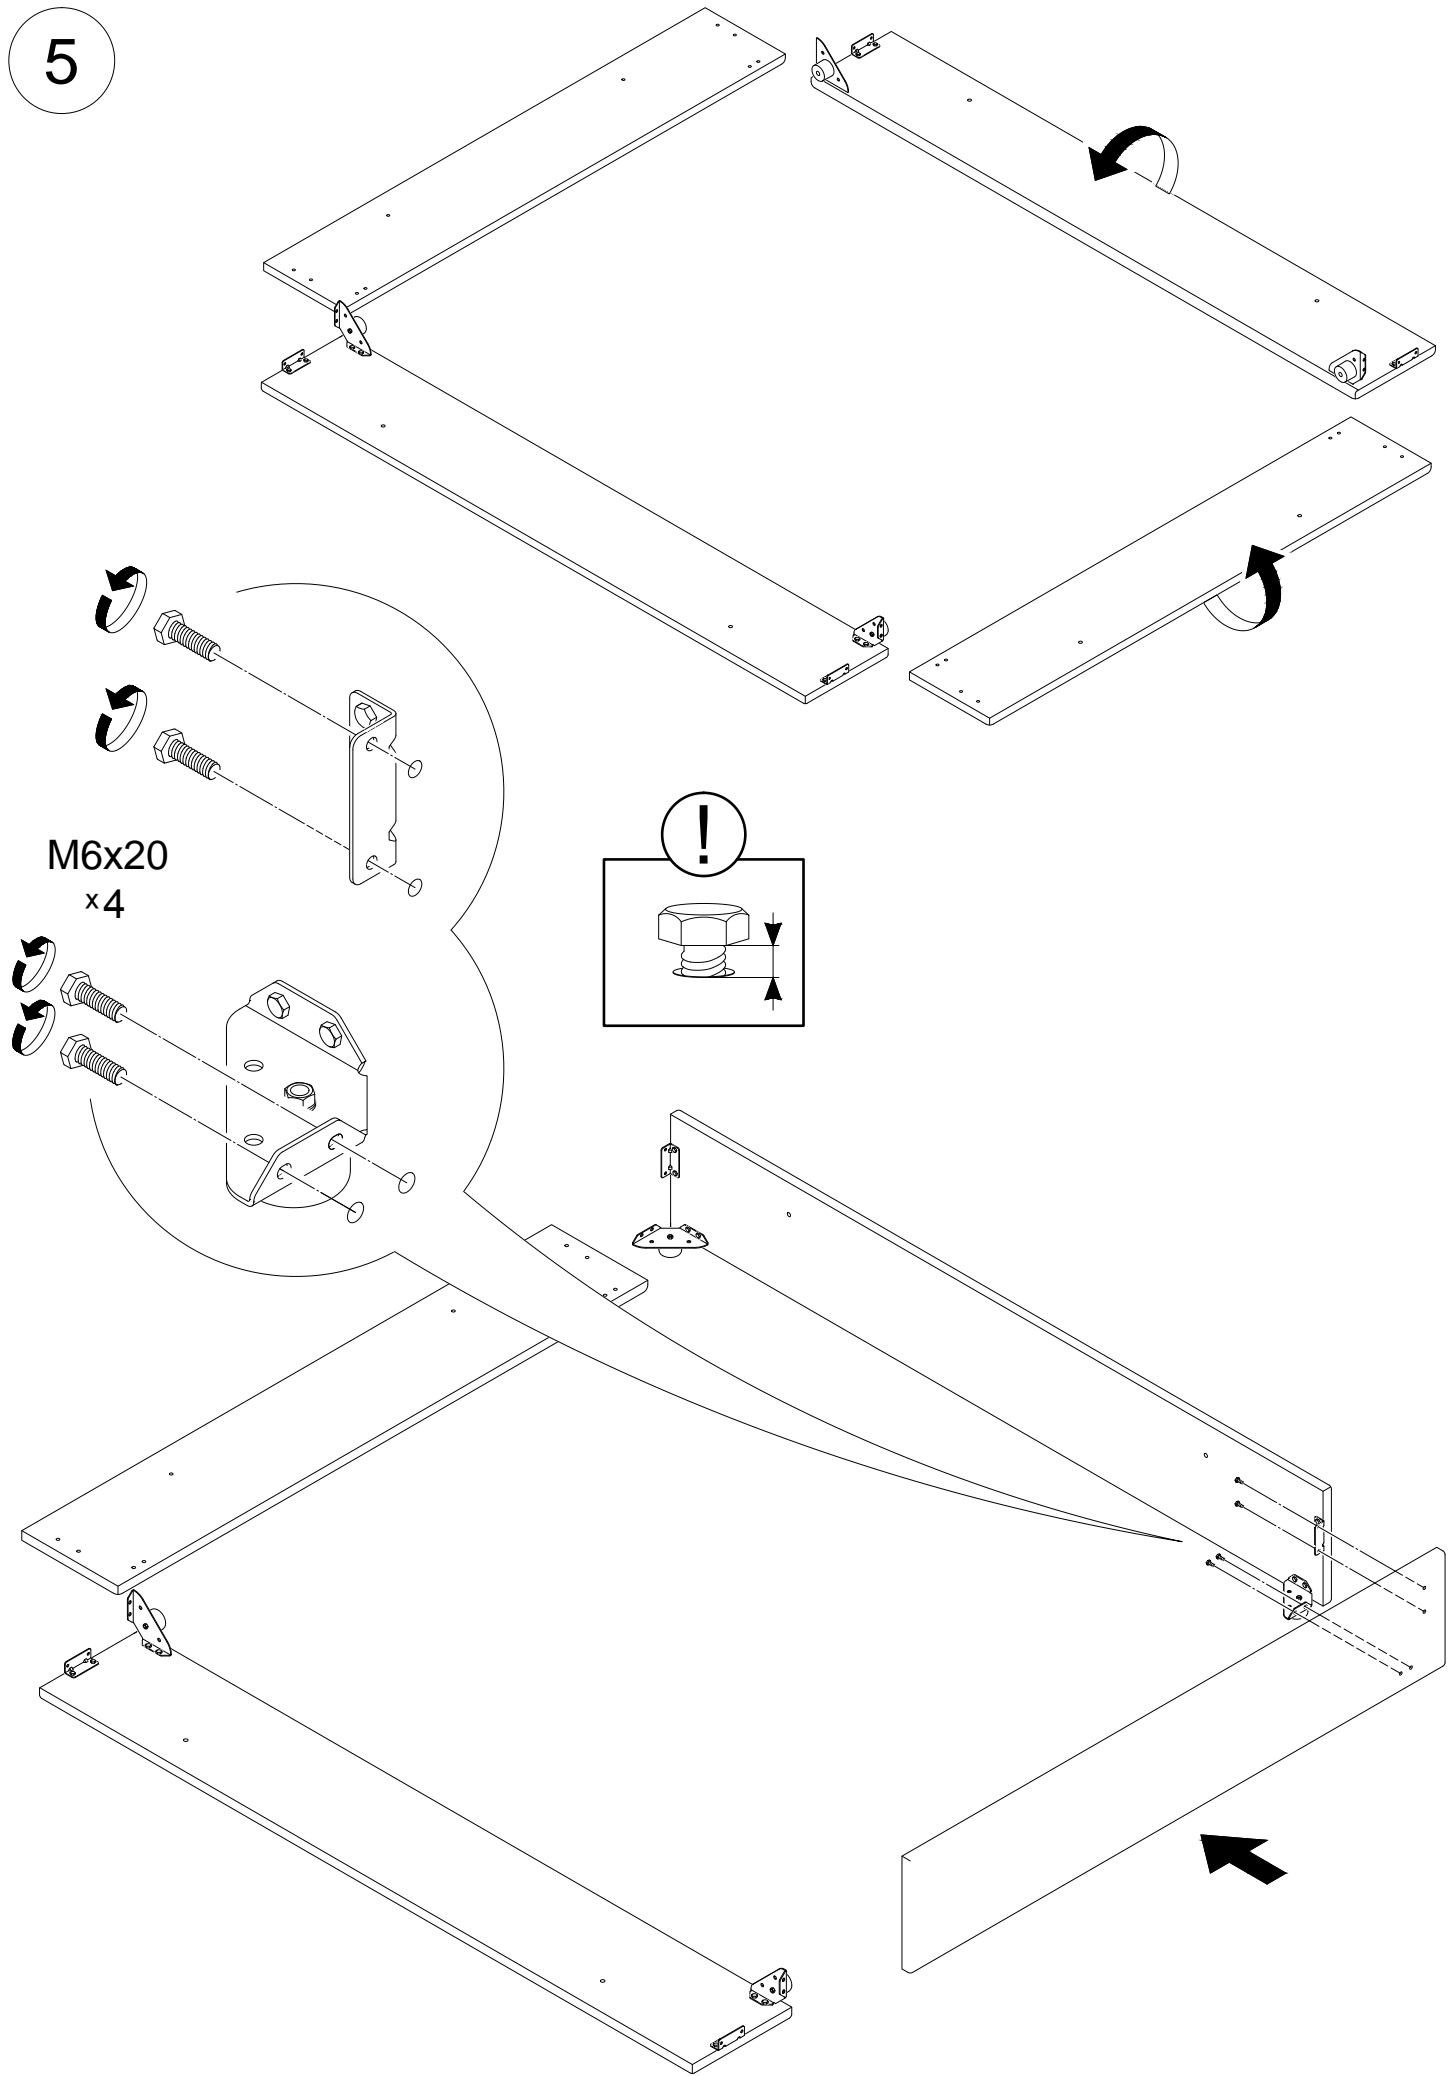


10

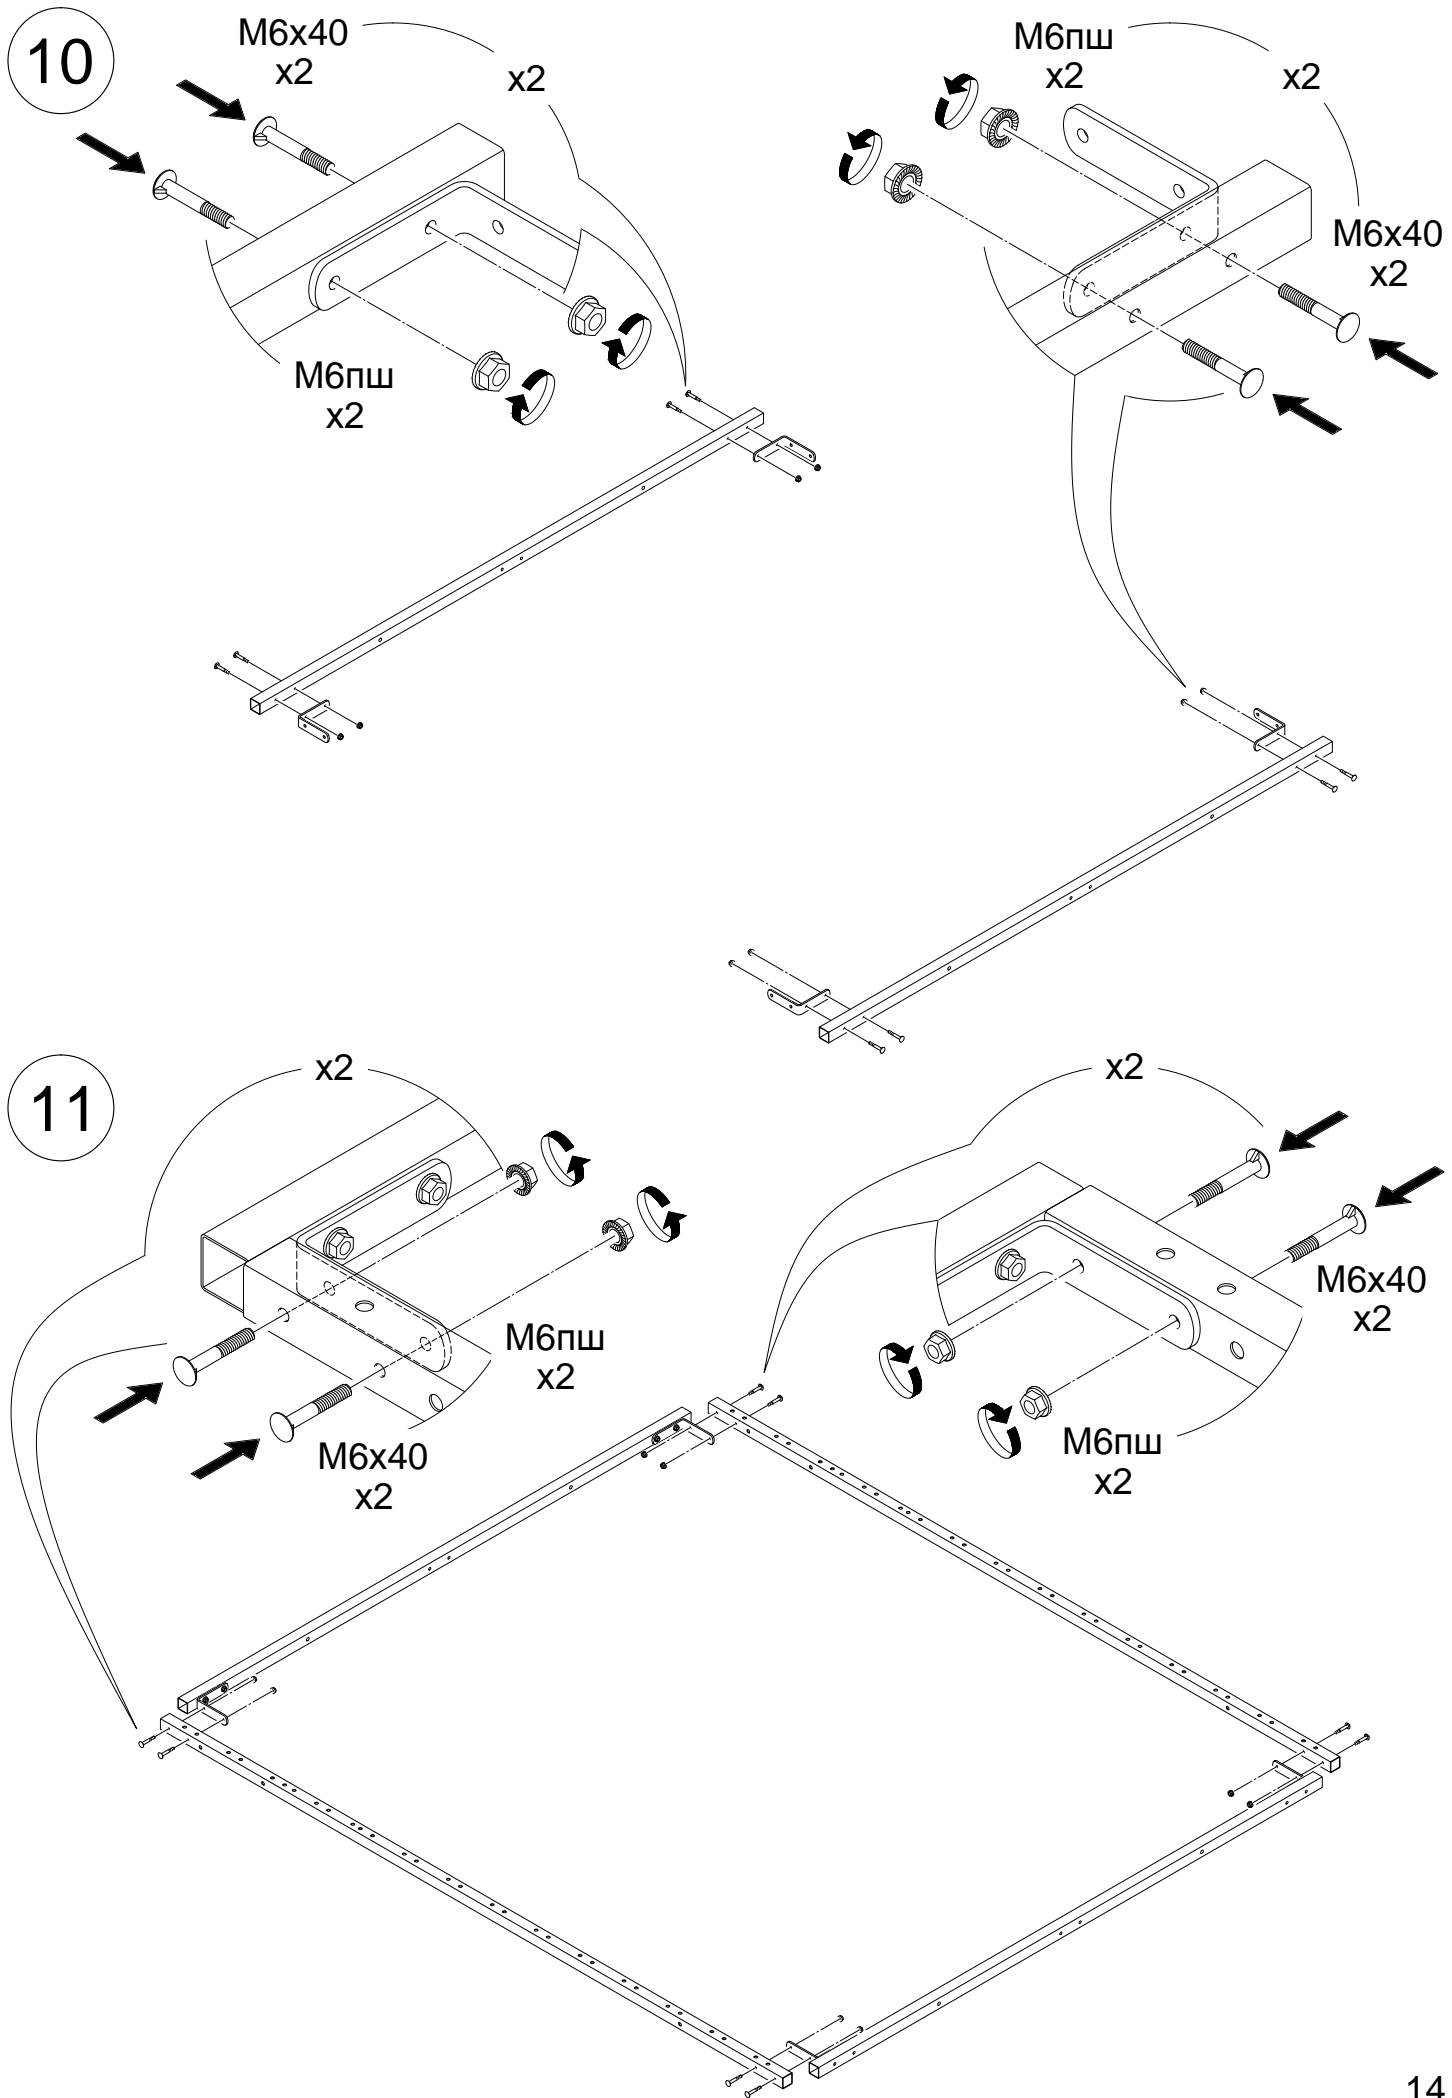


11

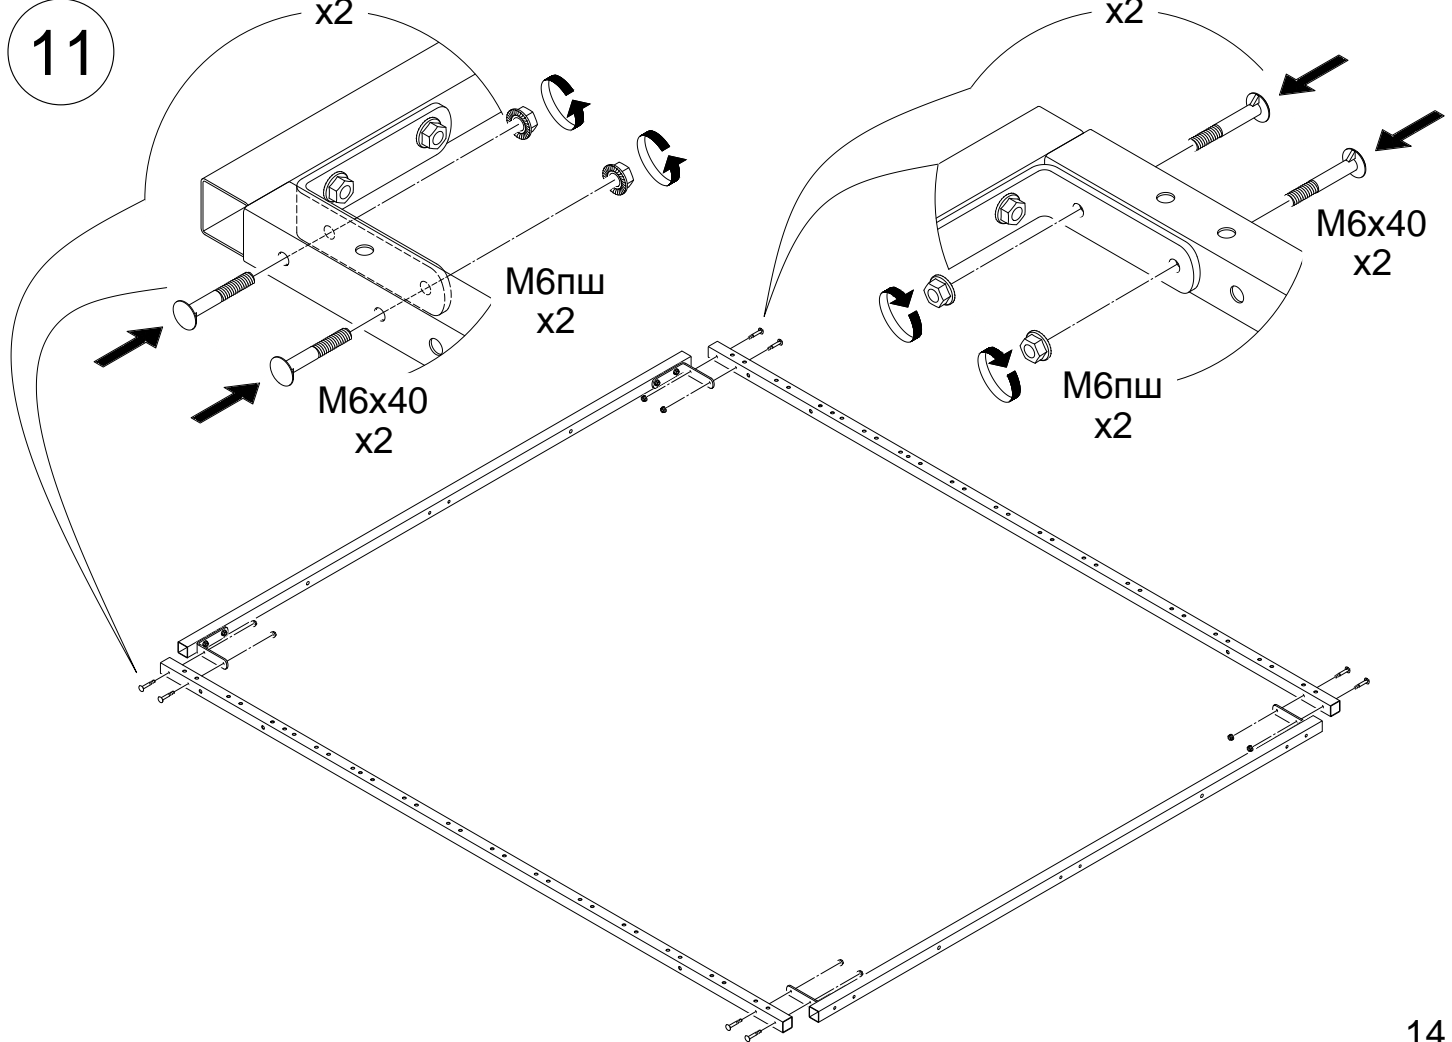


9

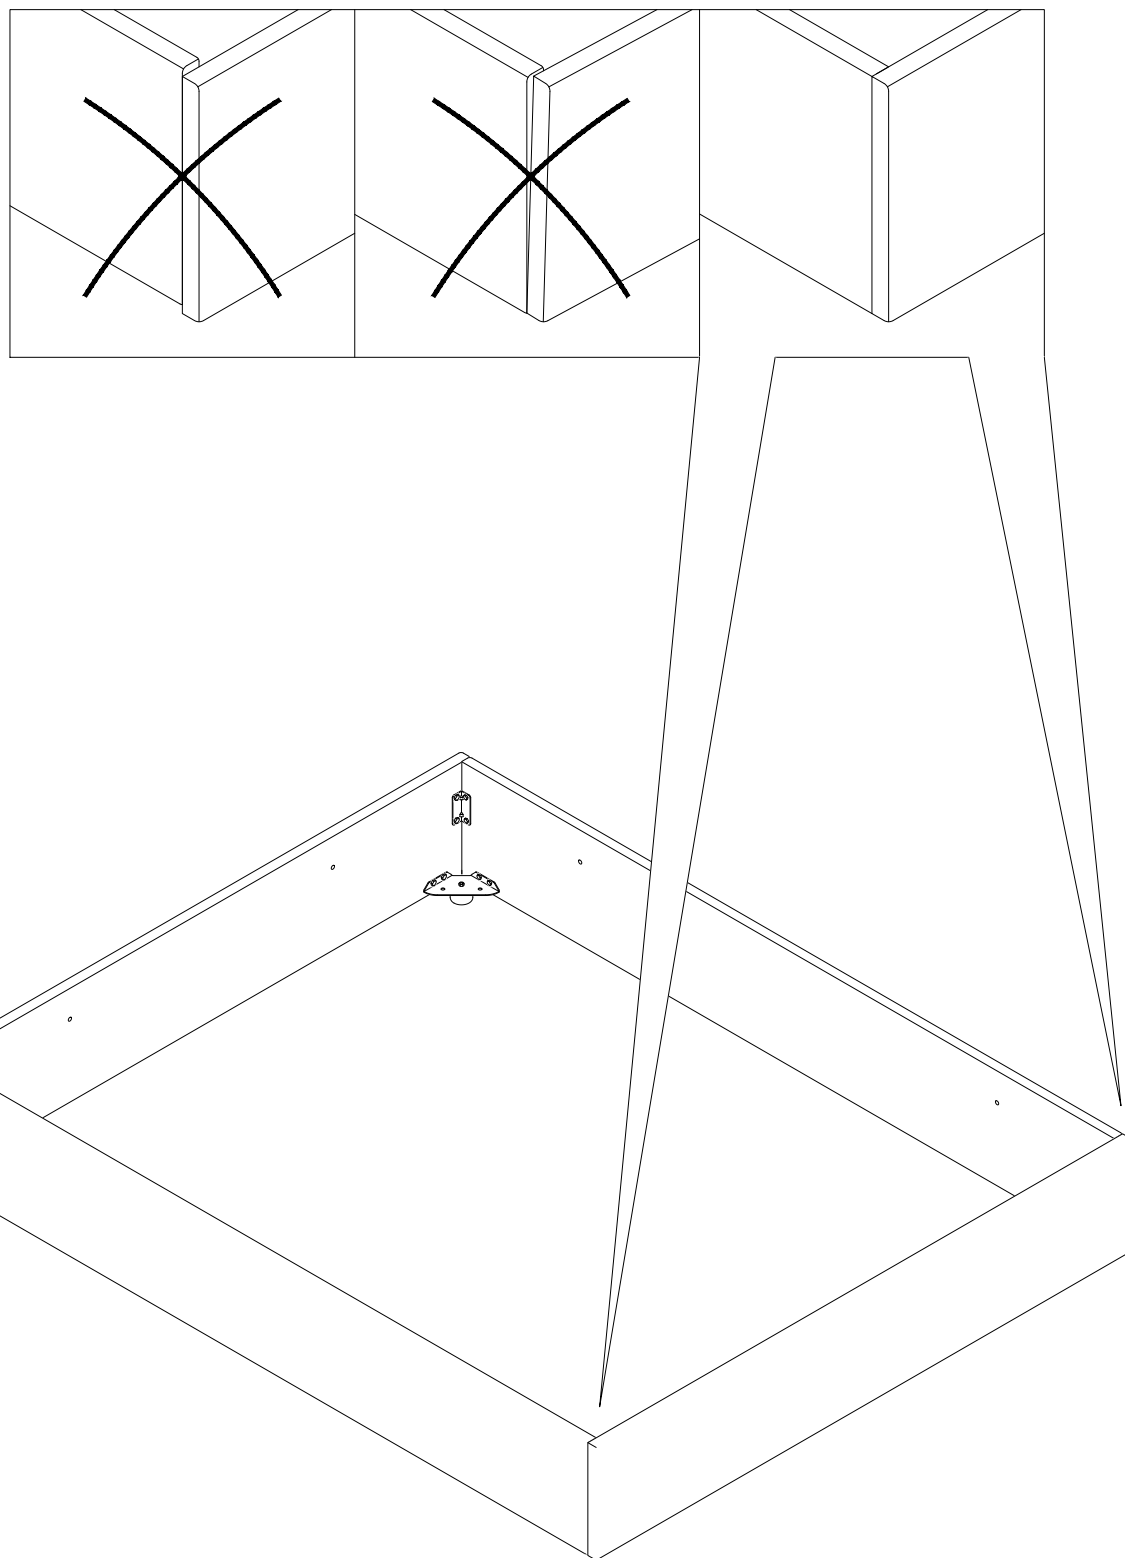





6

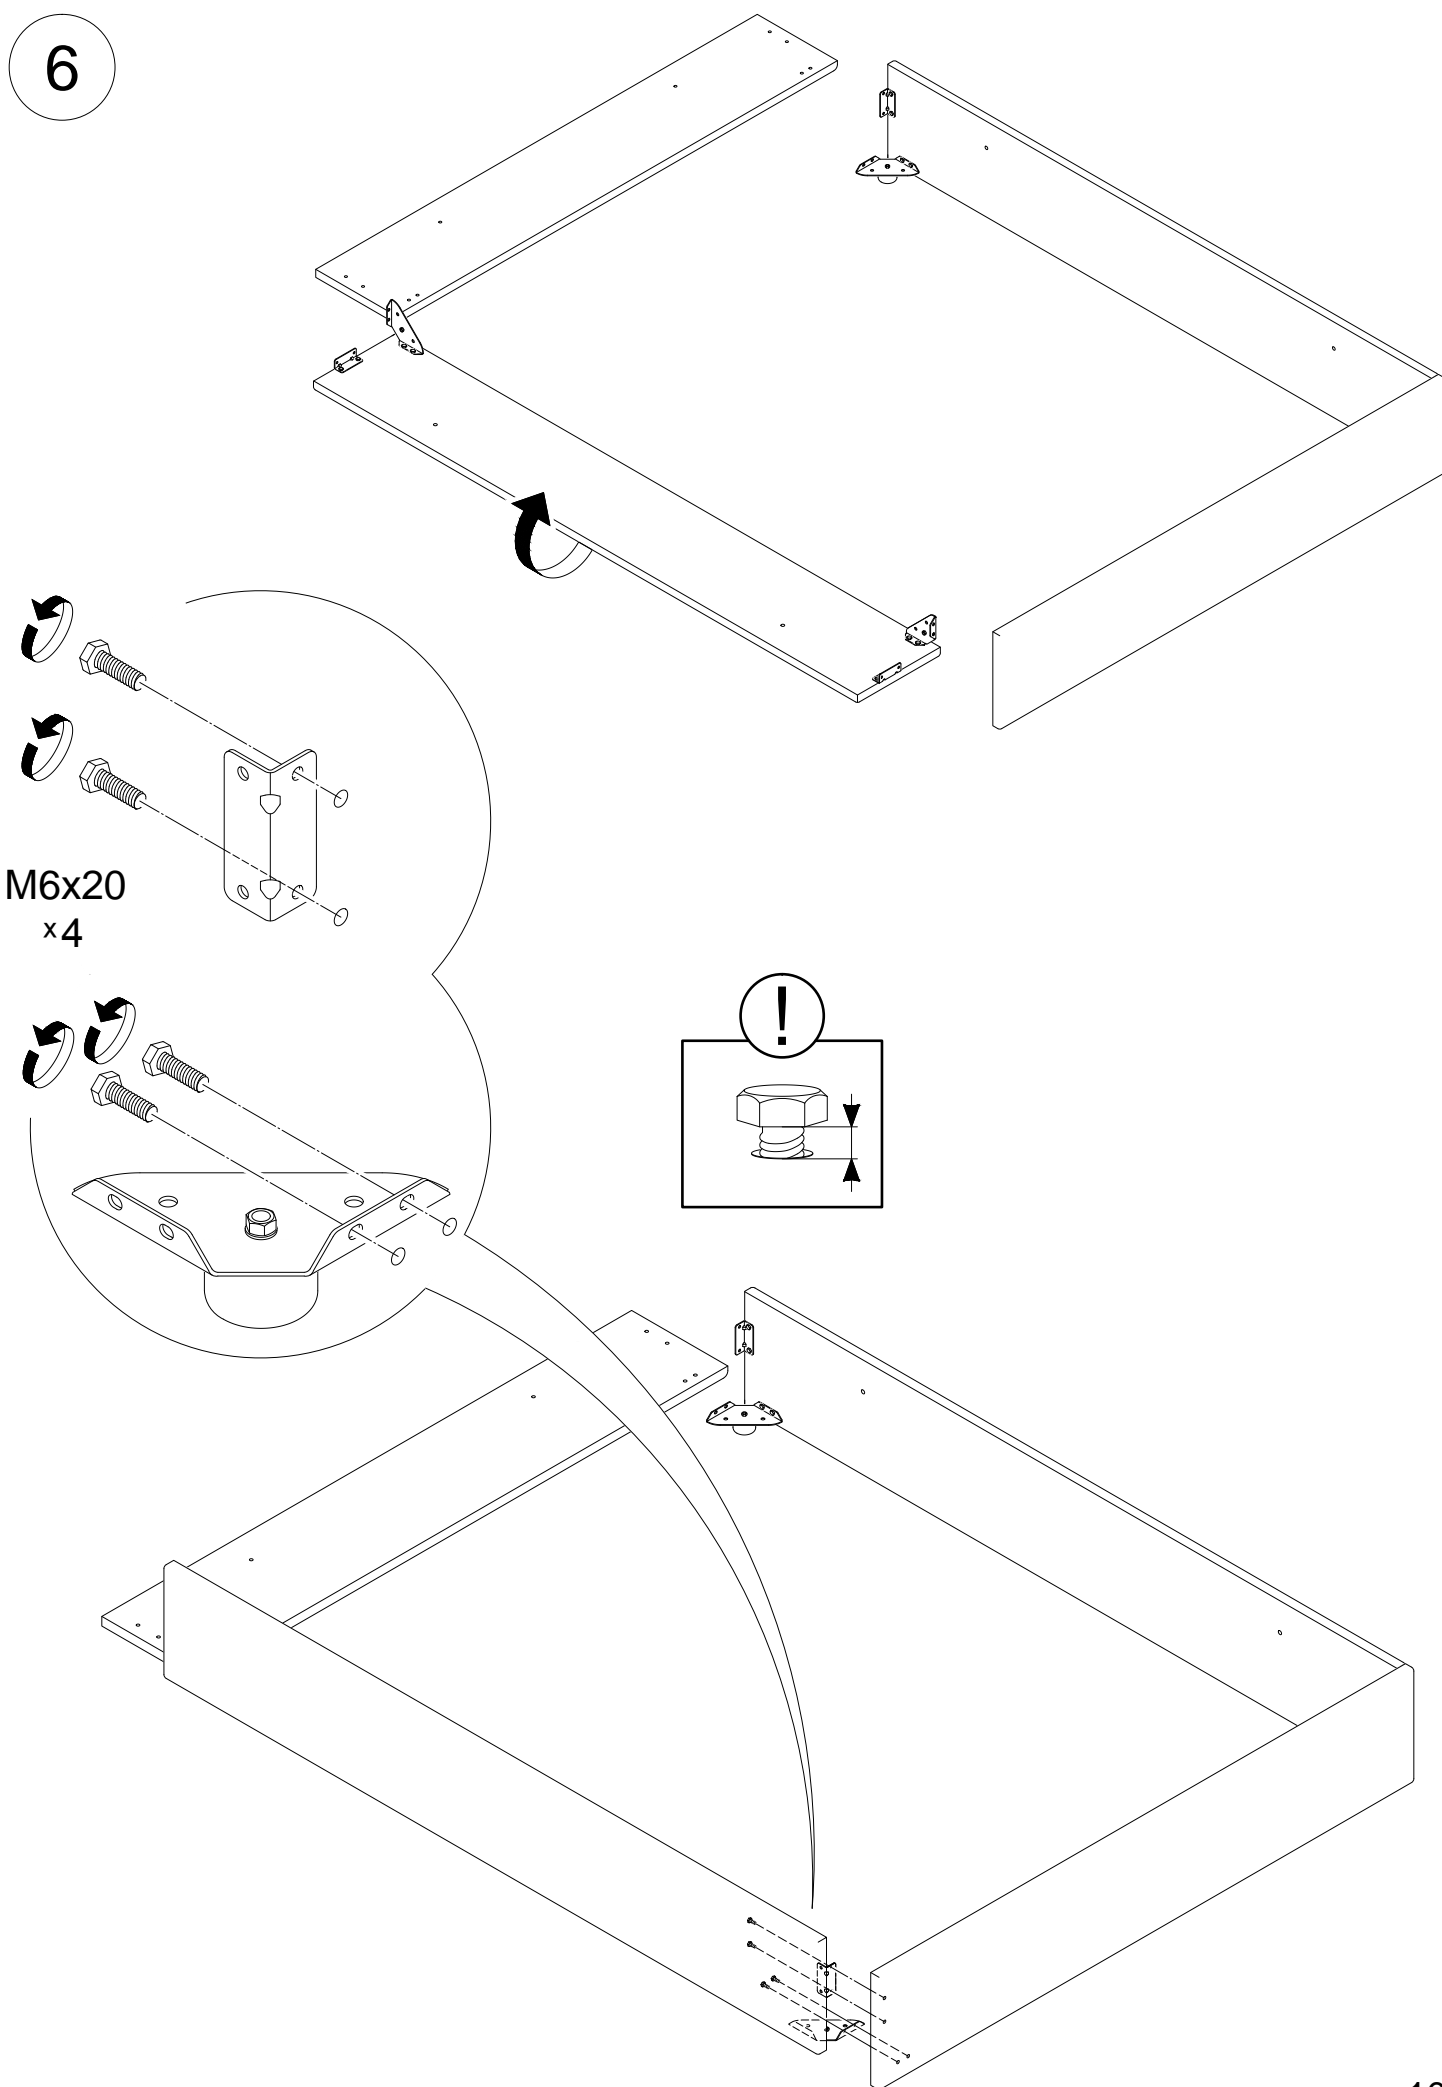

2 4 5 6 7 8

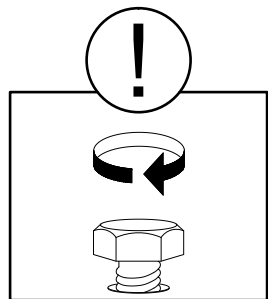

7

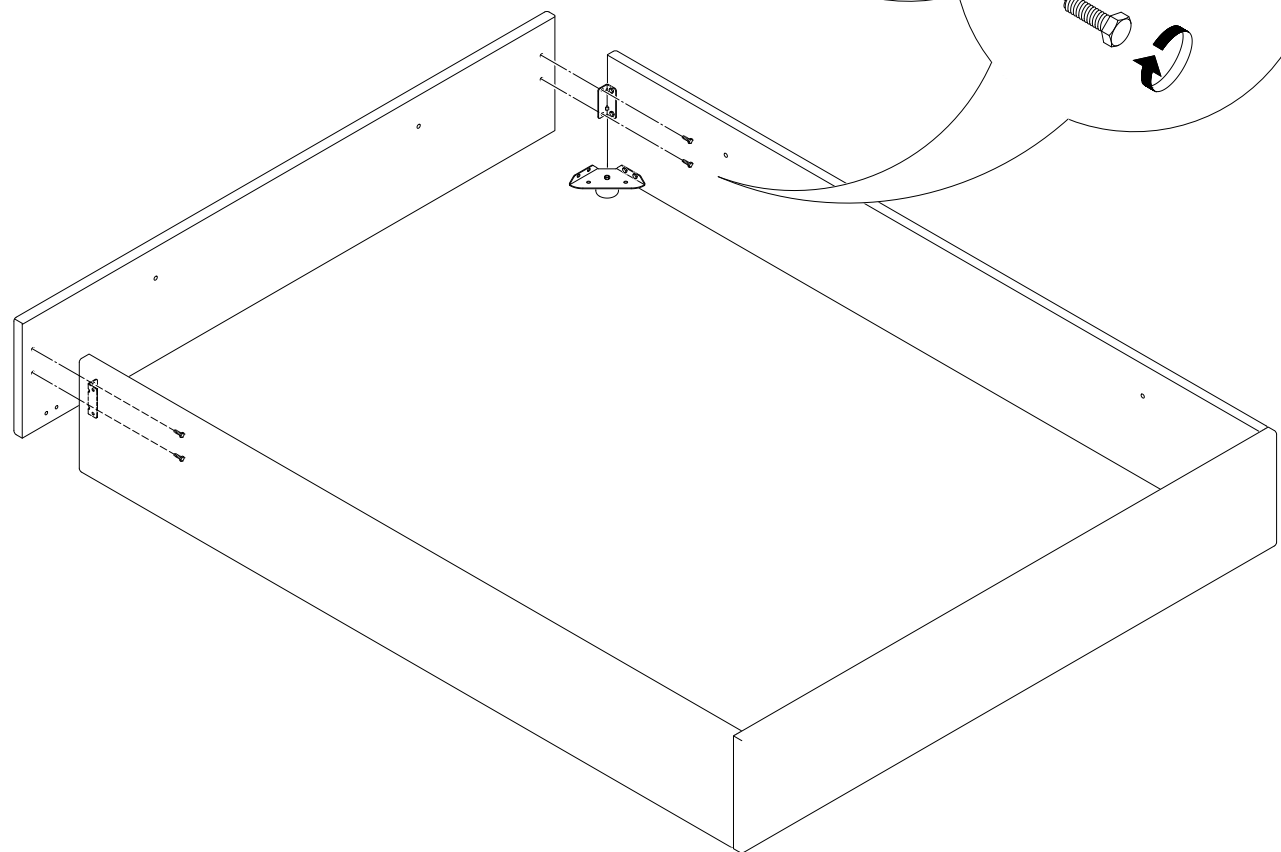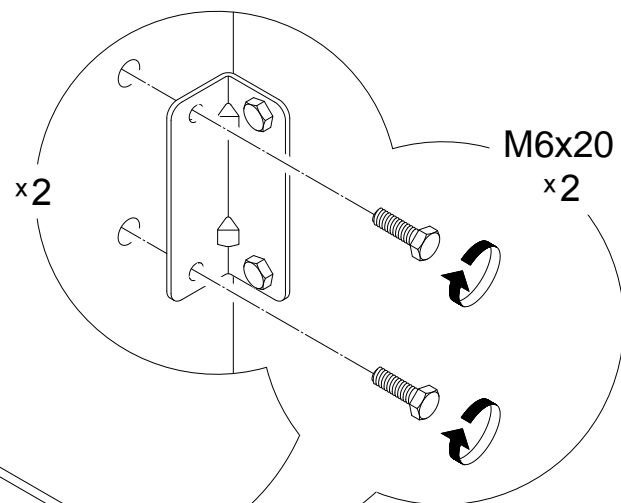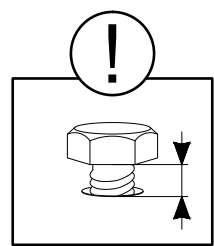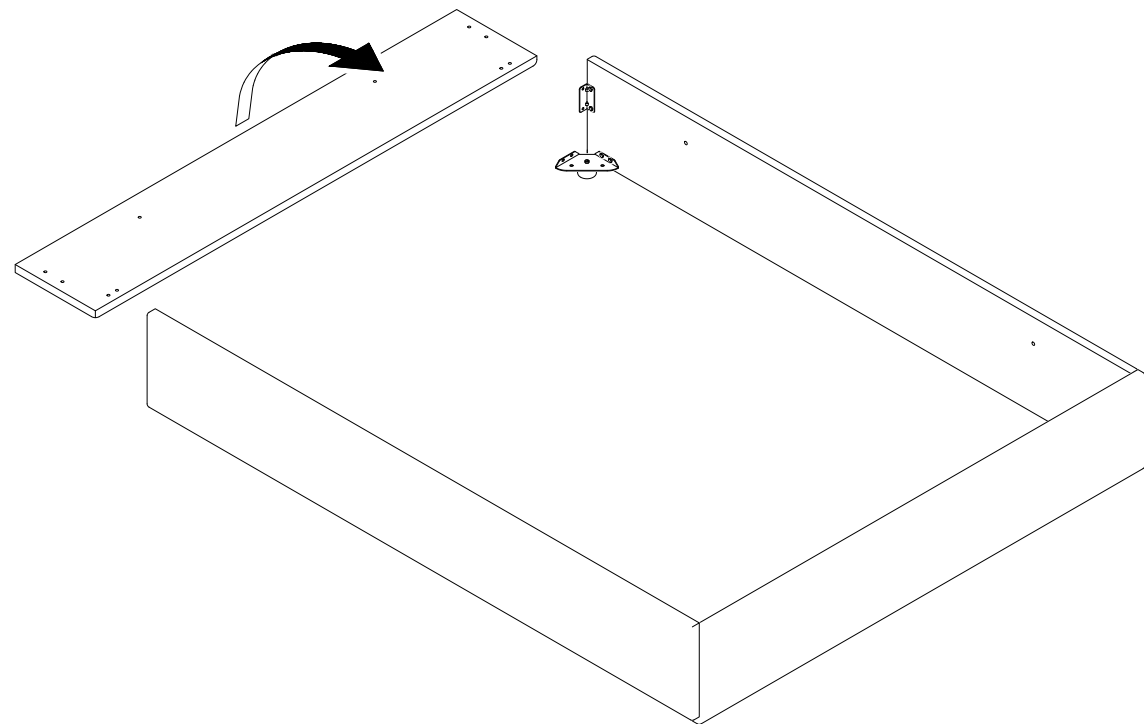

8

