


THE WHOLE BATHROOM Instruction Book

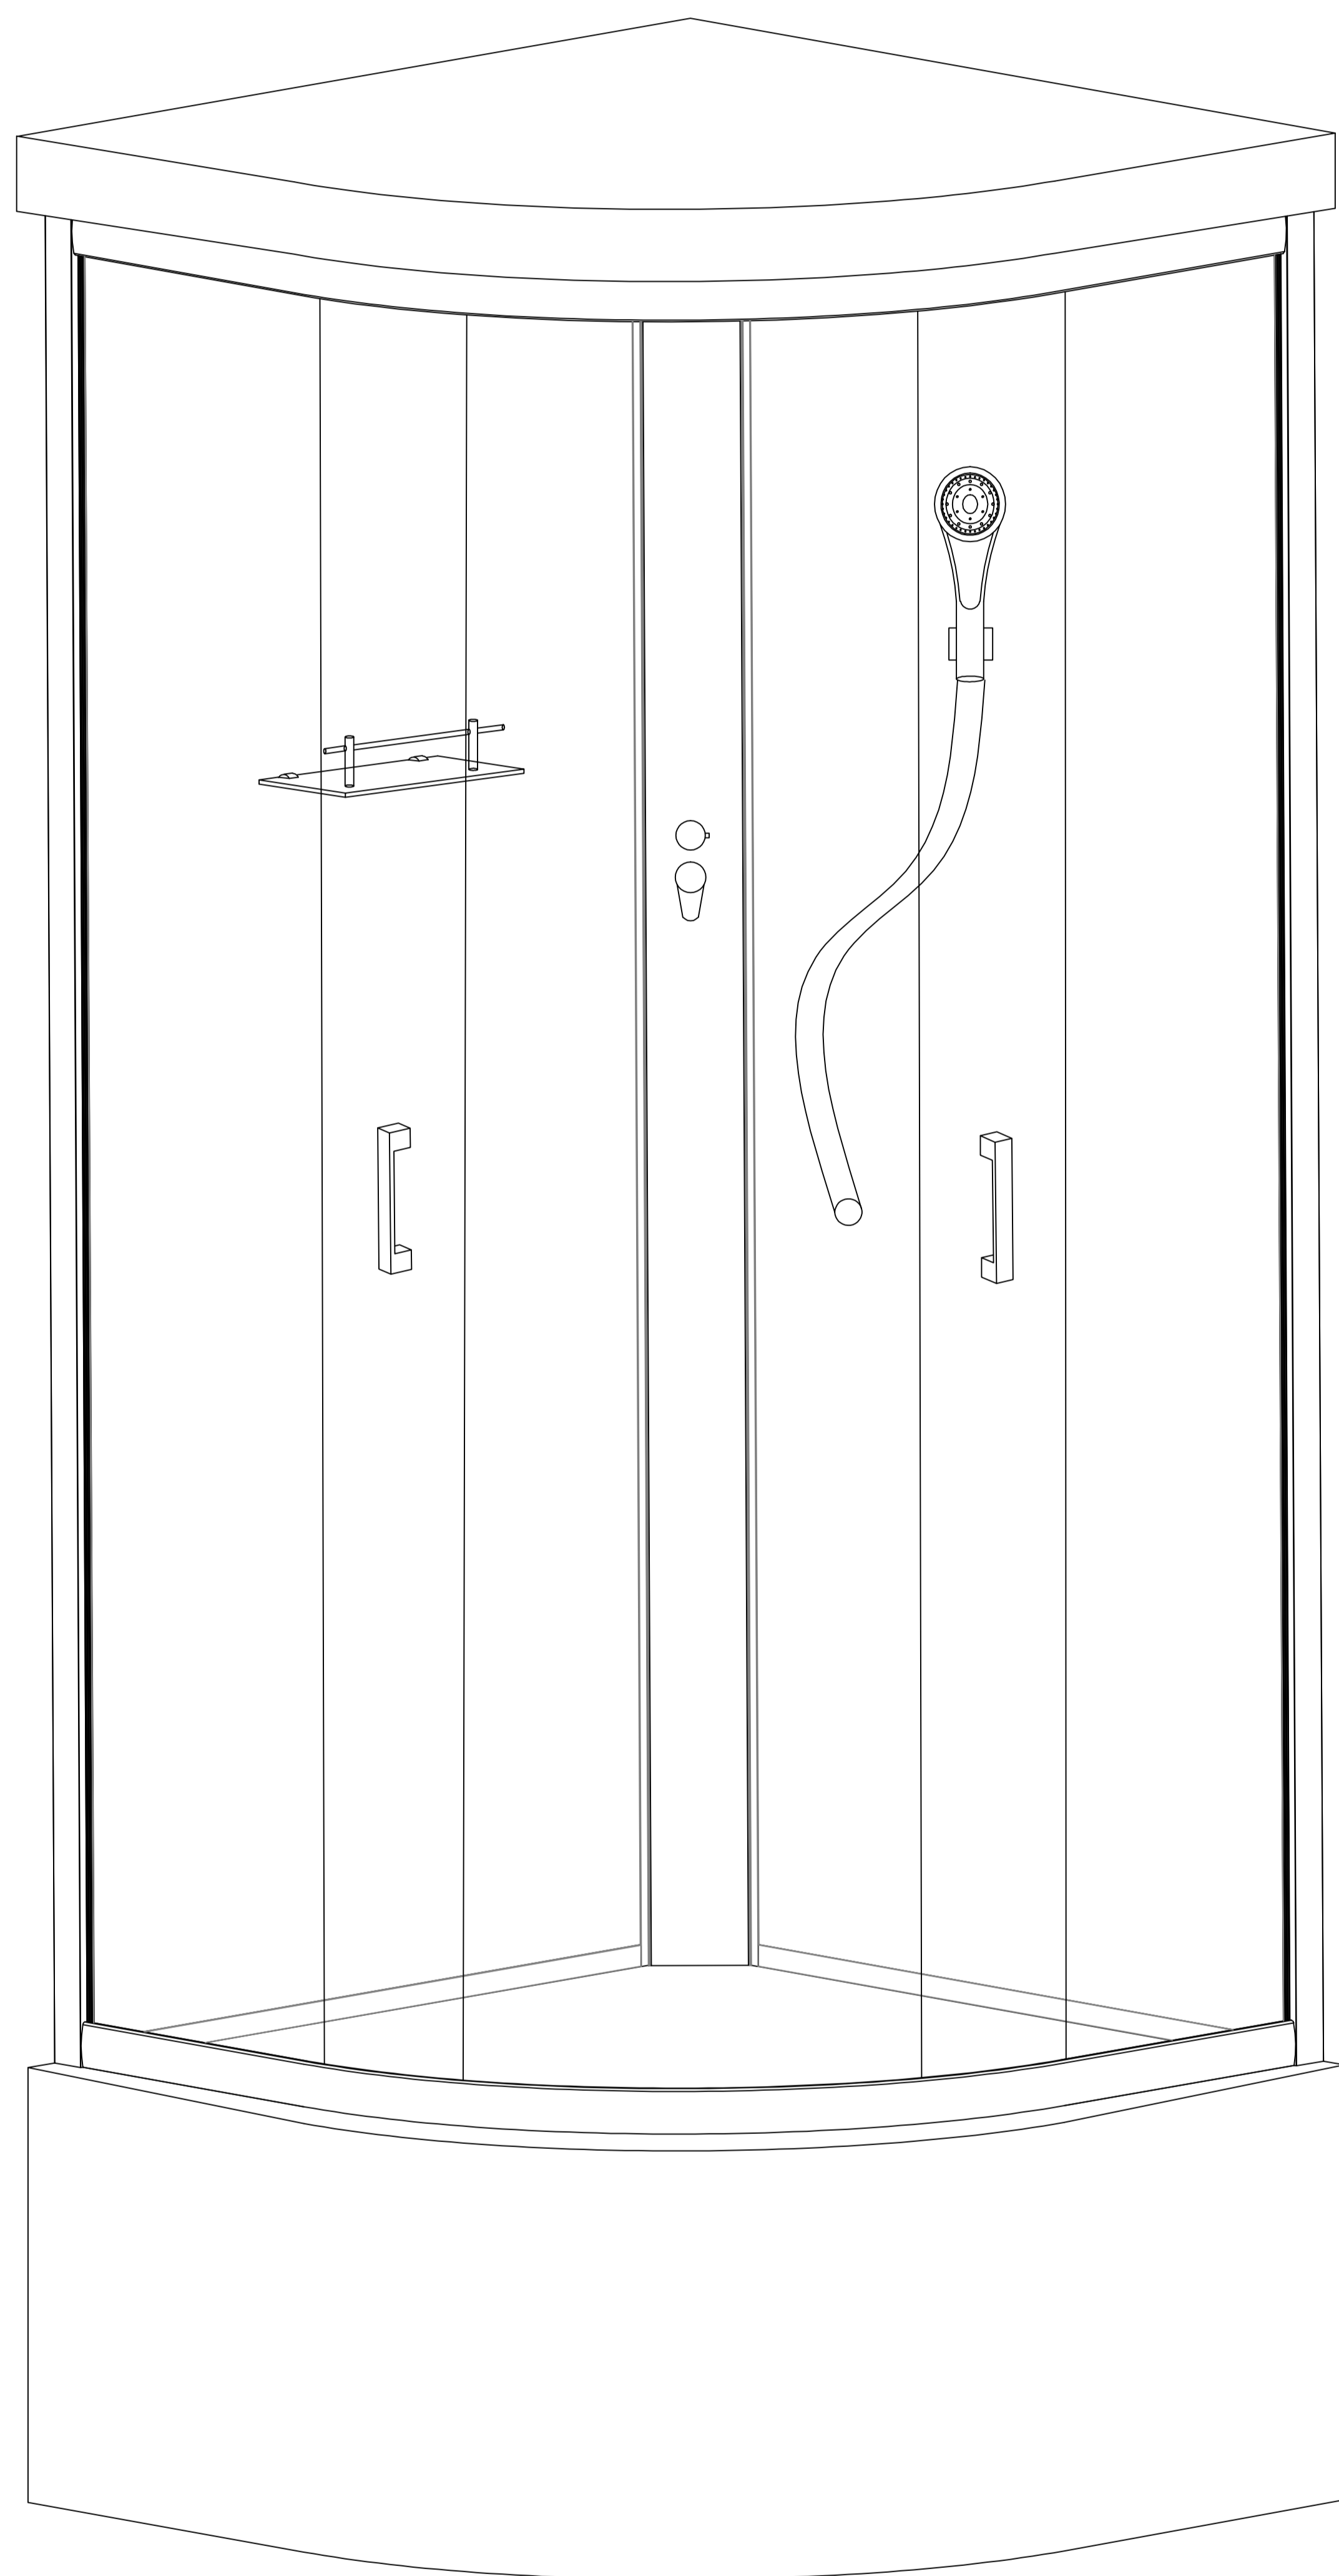


A1		X2	E1		X8	K1		X4
B1		X2	F1		X16	L1		X4
C1		X2	G1		X8	M1		X8
D1		X2	H1		X2	N1		X4
			I1		X4	O1		X2

IN BATHROOM


A2		X1	Bibcock
B2		X1	Connector
C2		X1	Shower Pedestal

IN GLASS


99814

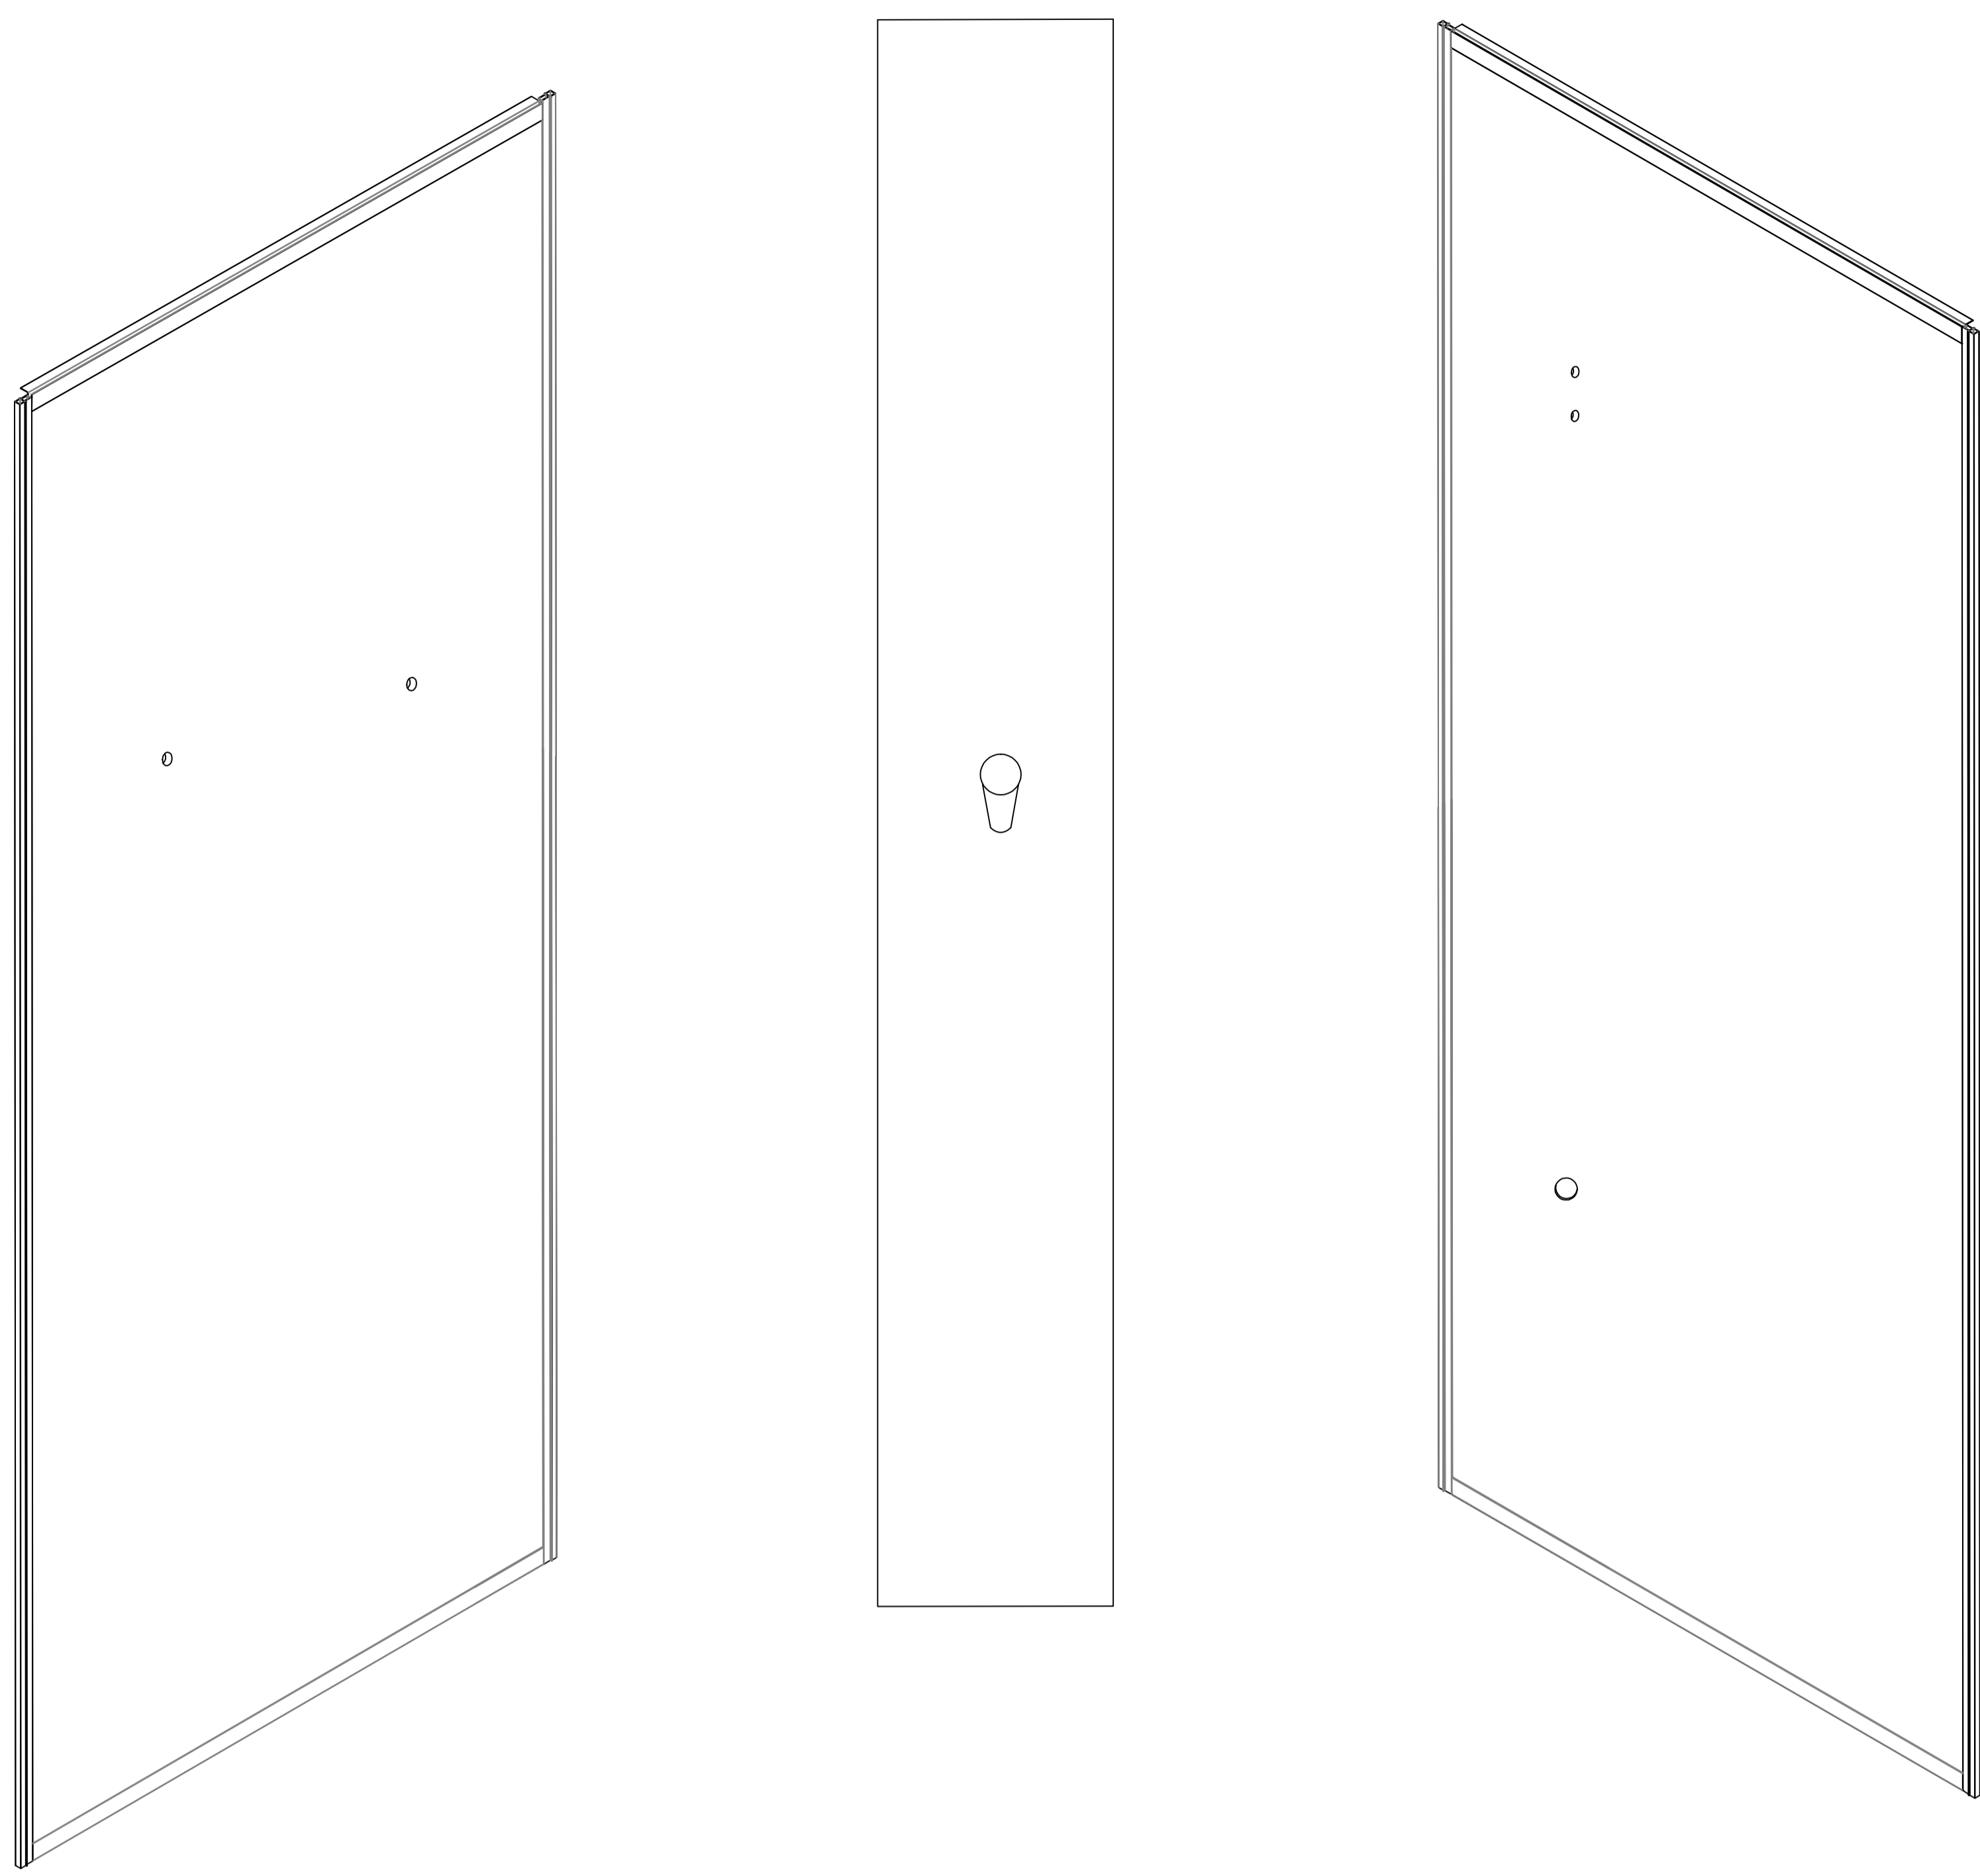


ROOF

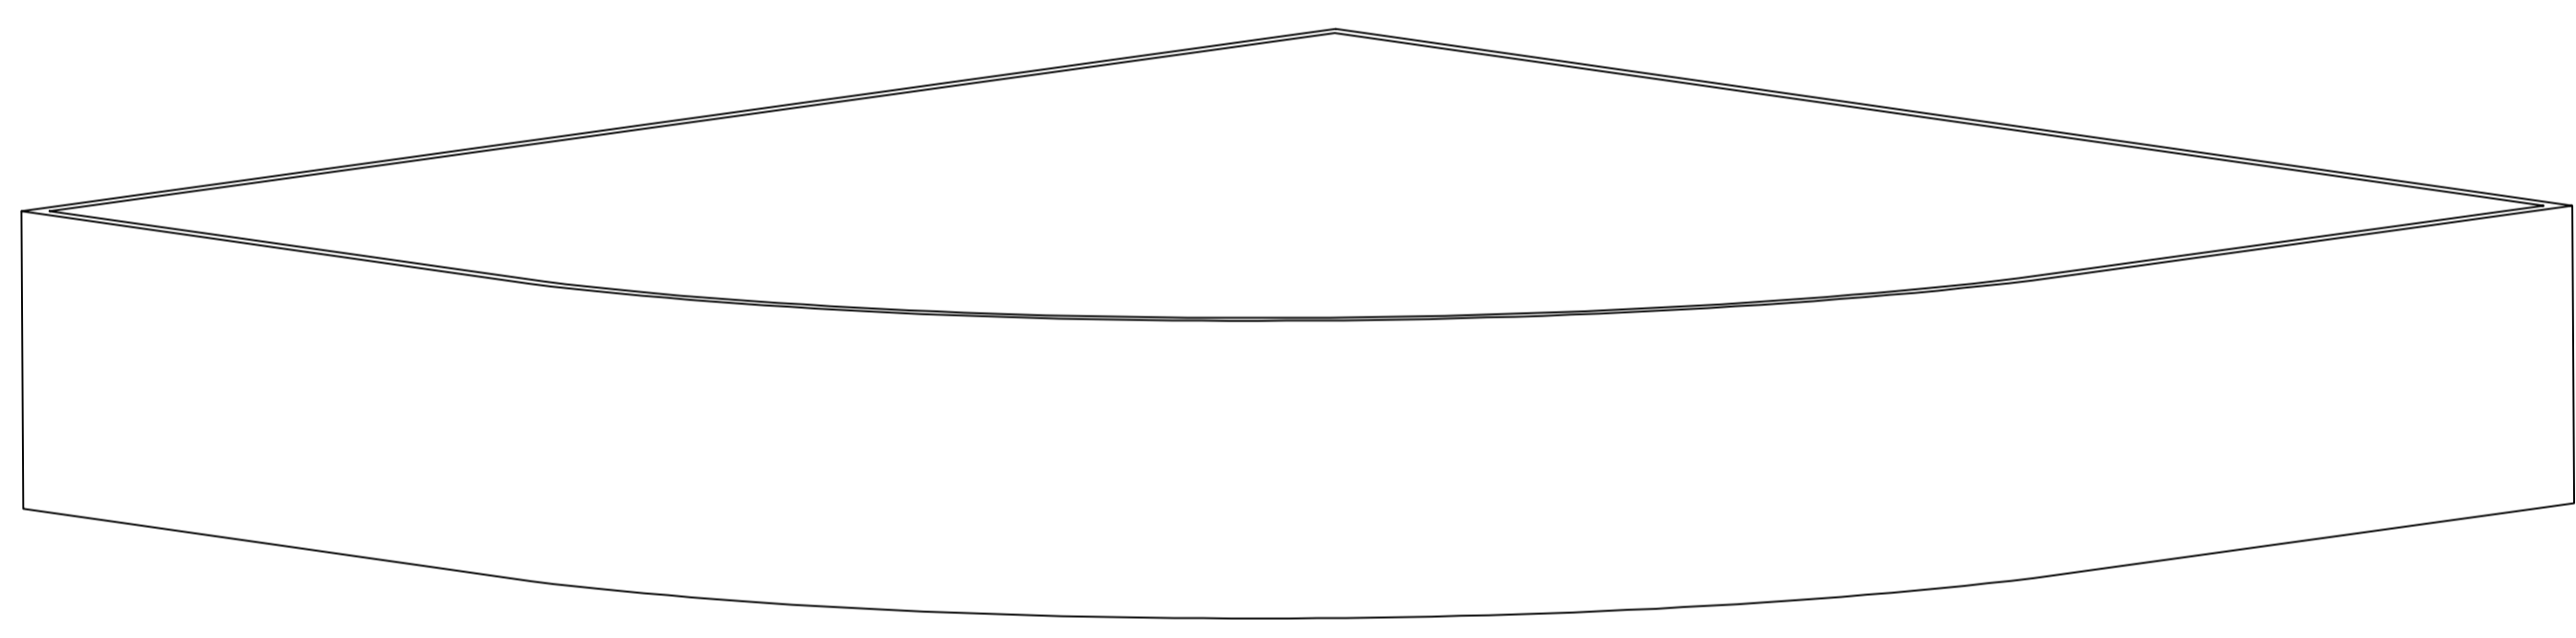


TRAY

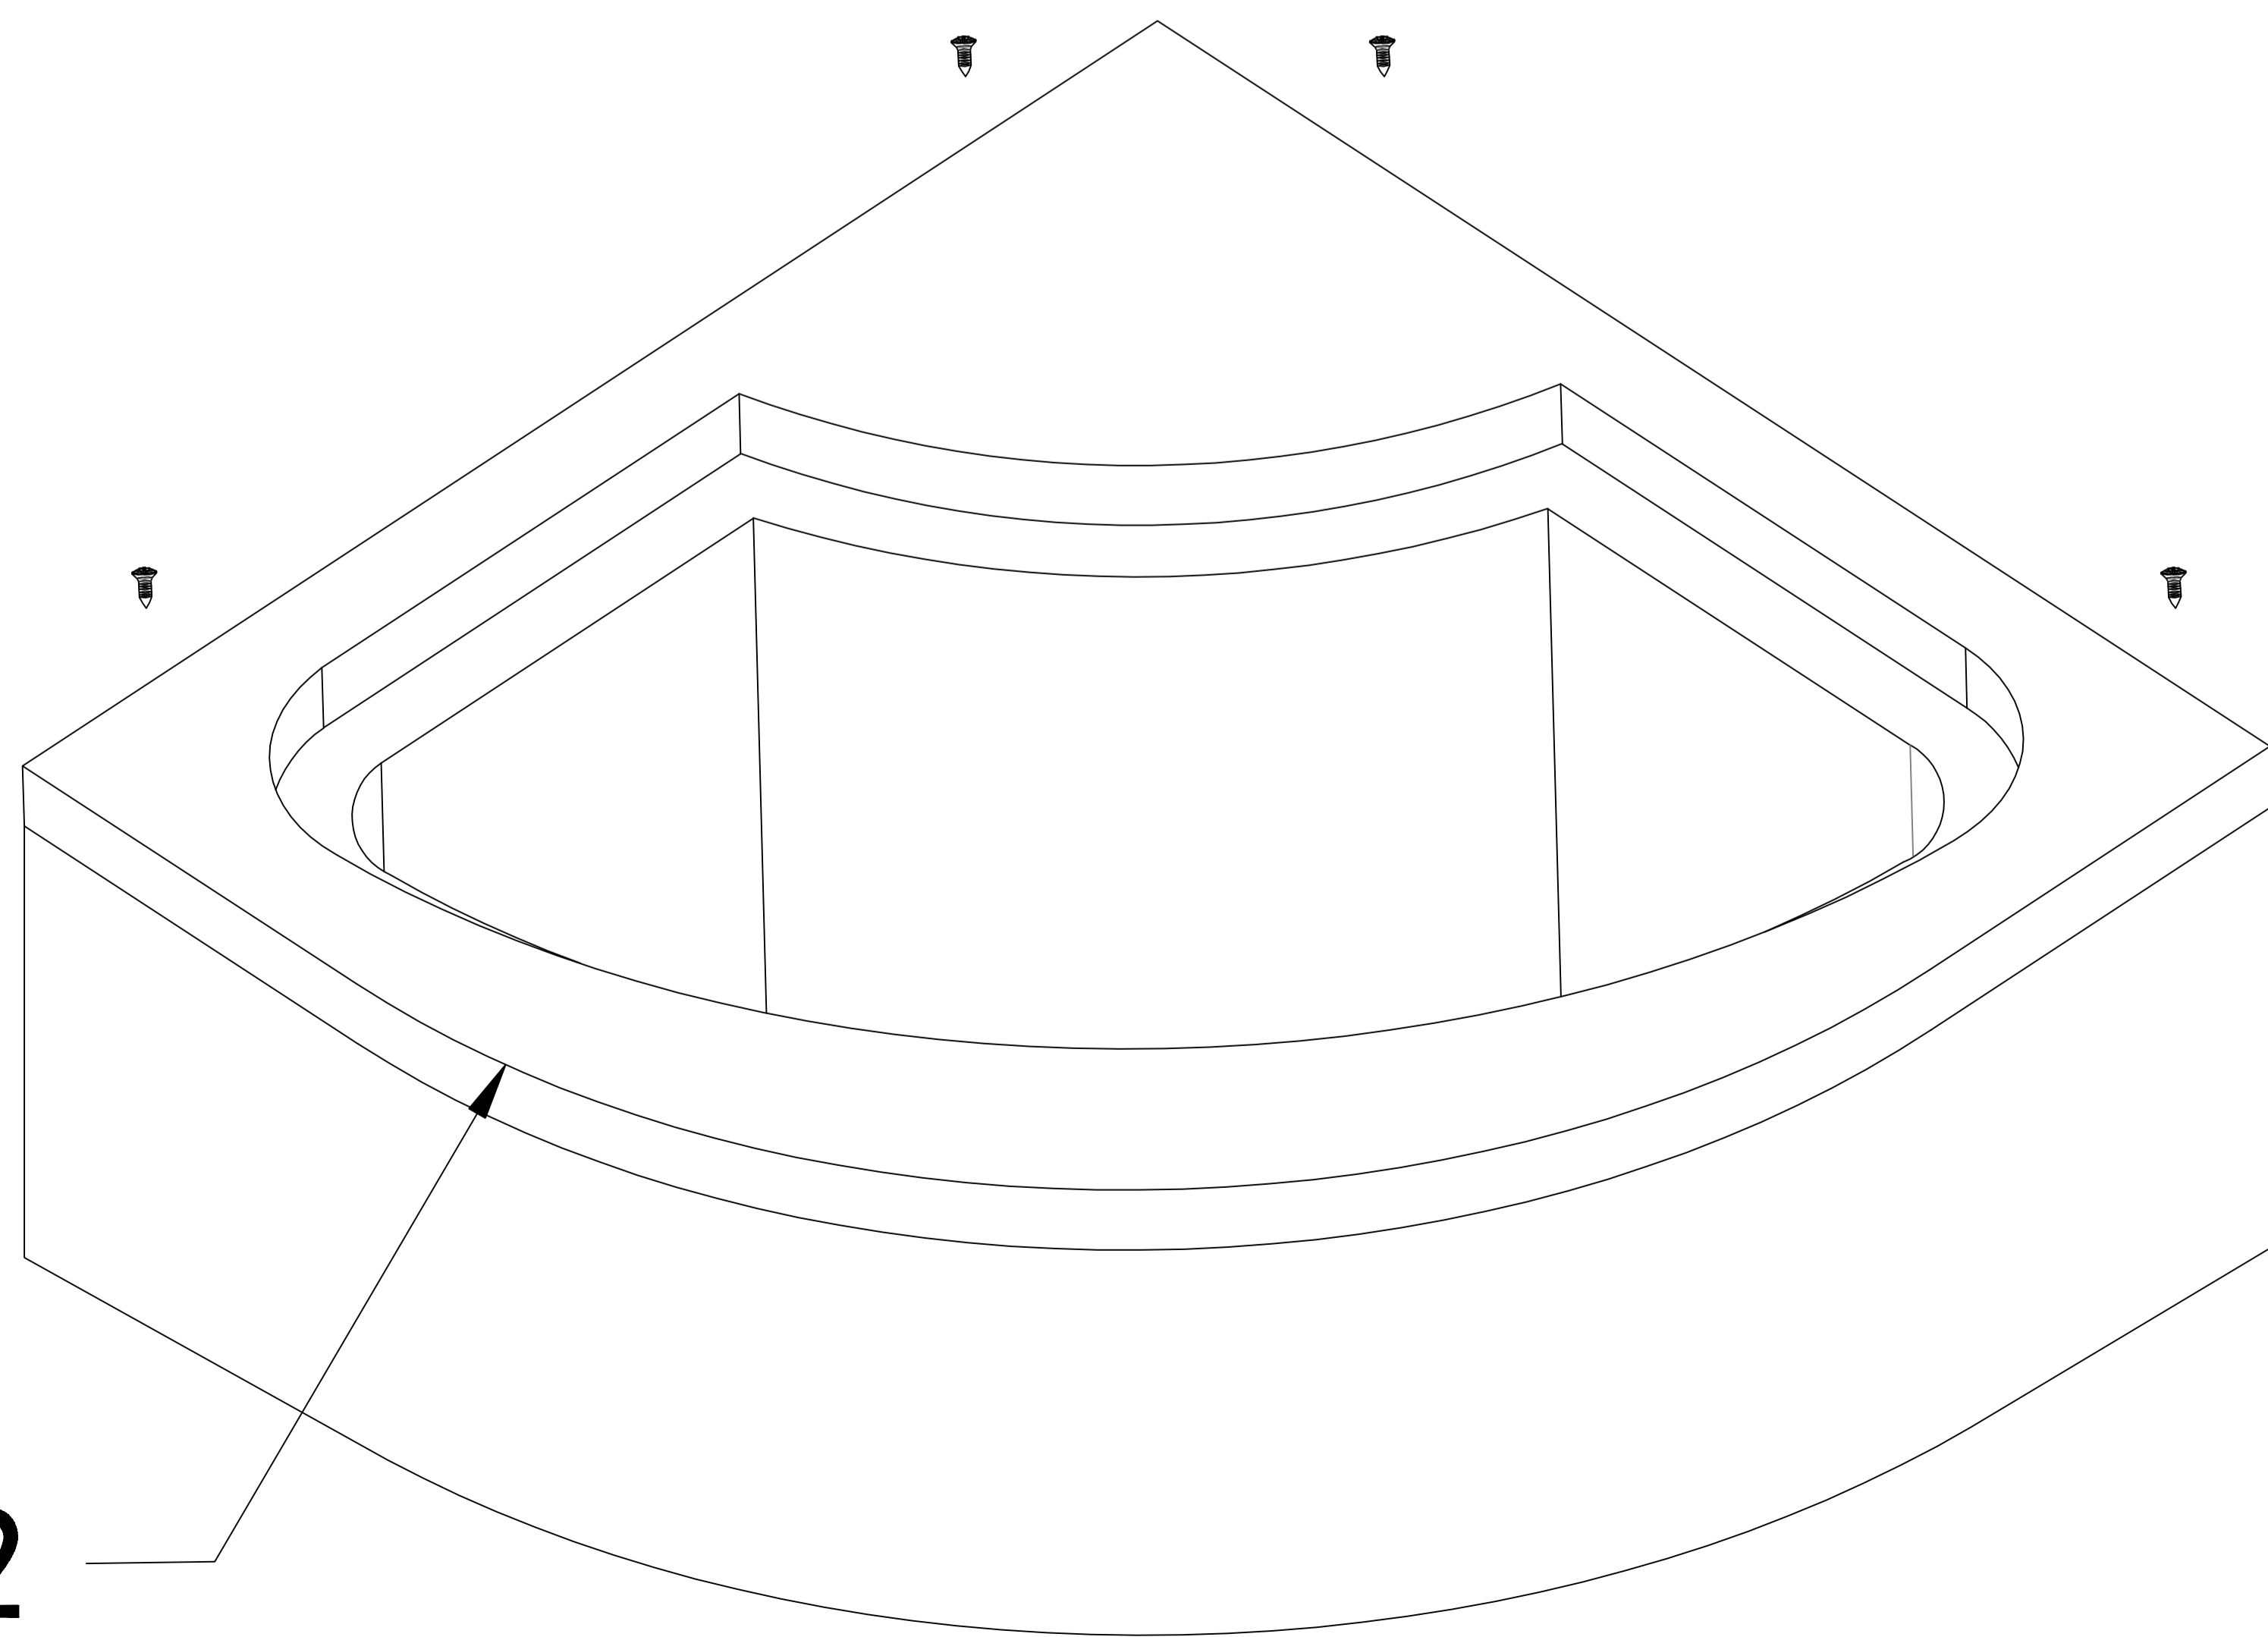


A2




Set Glass

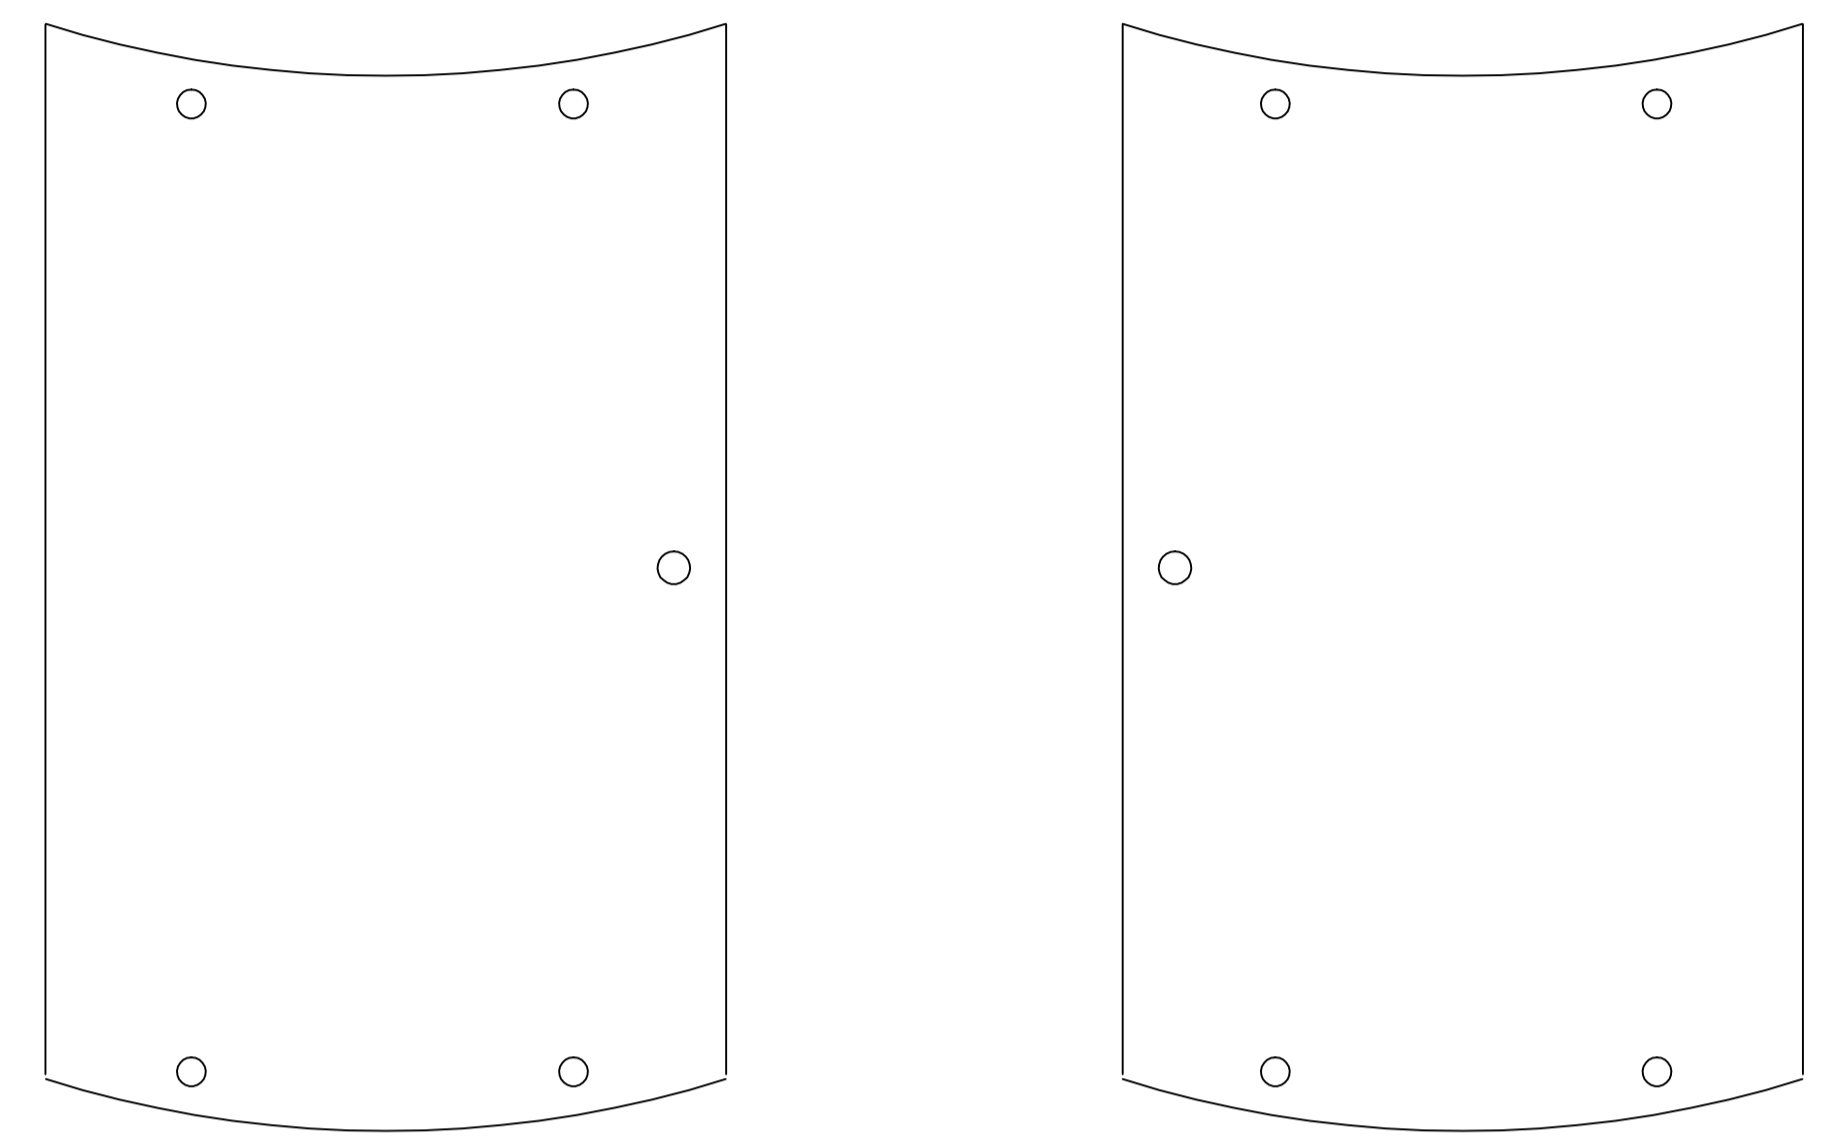


Door Glass







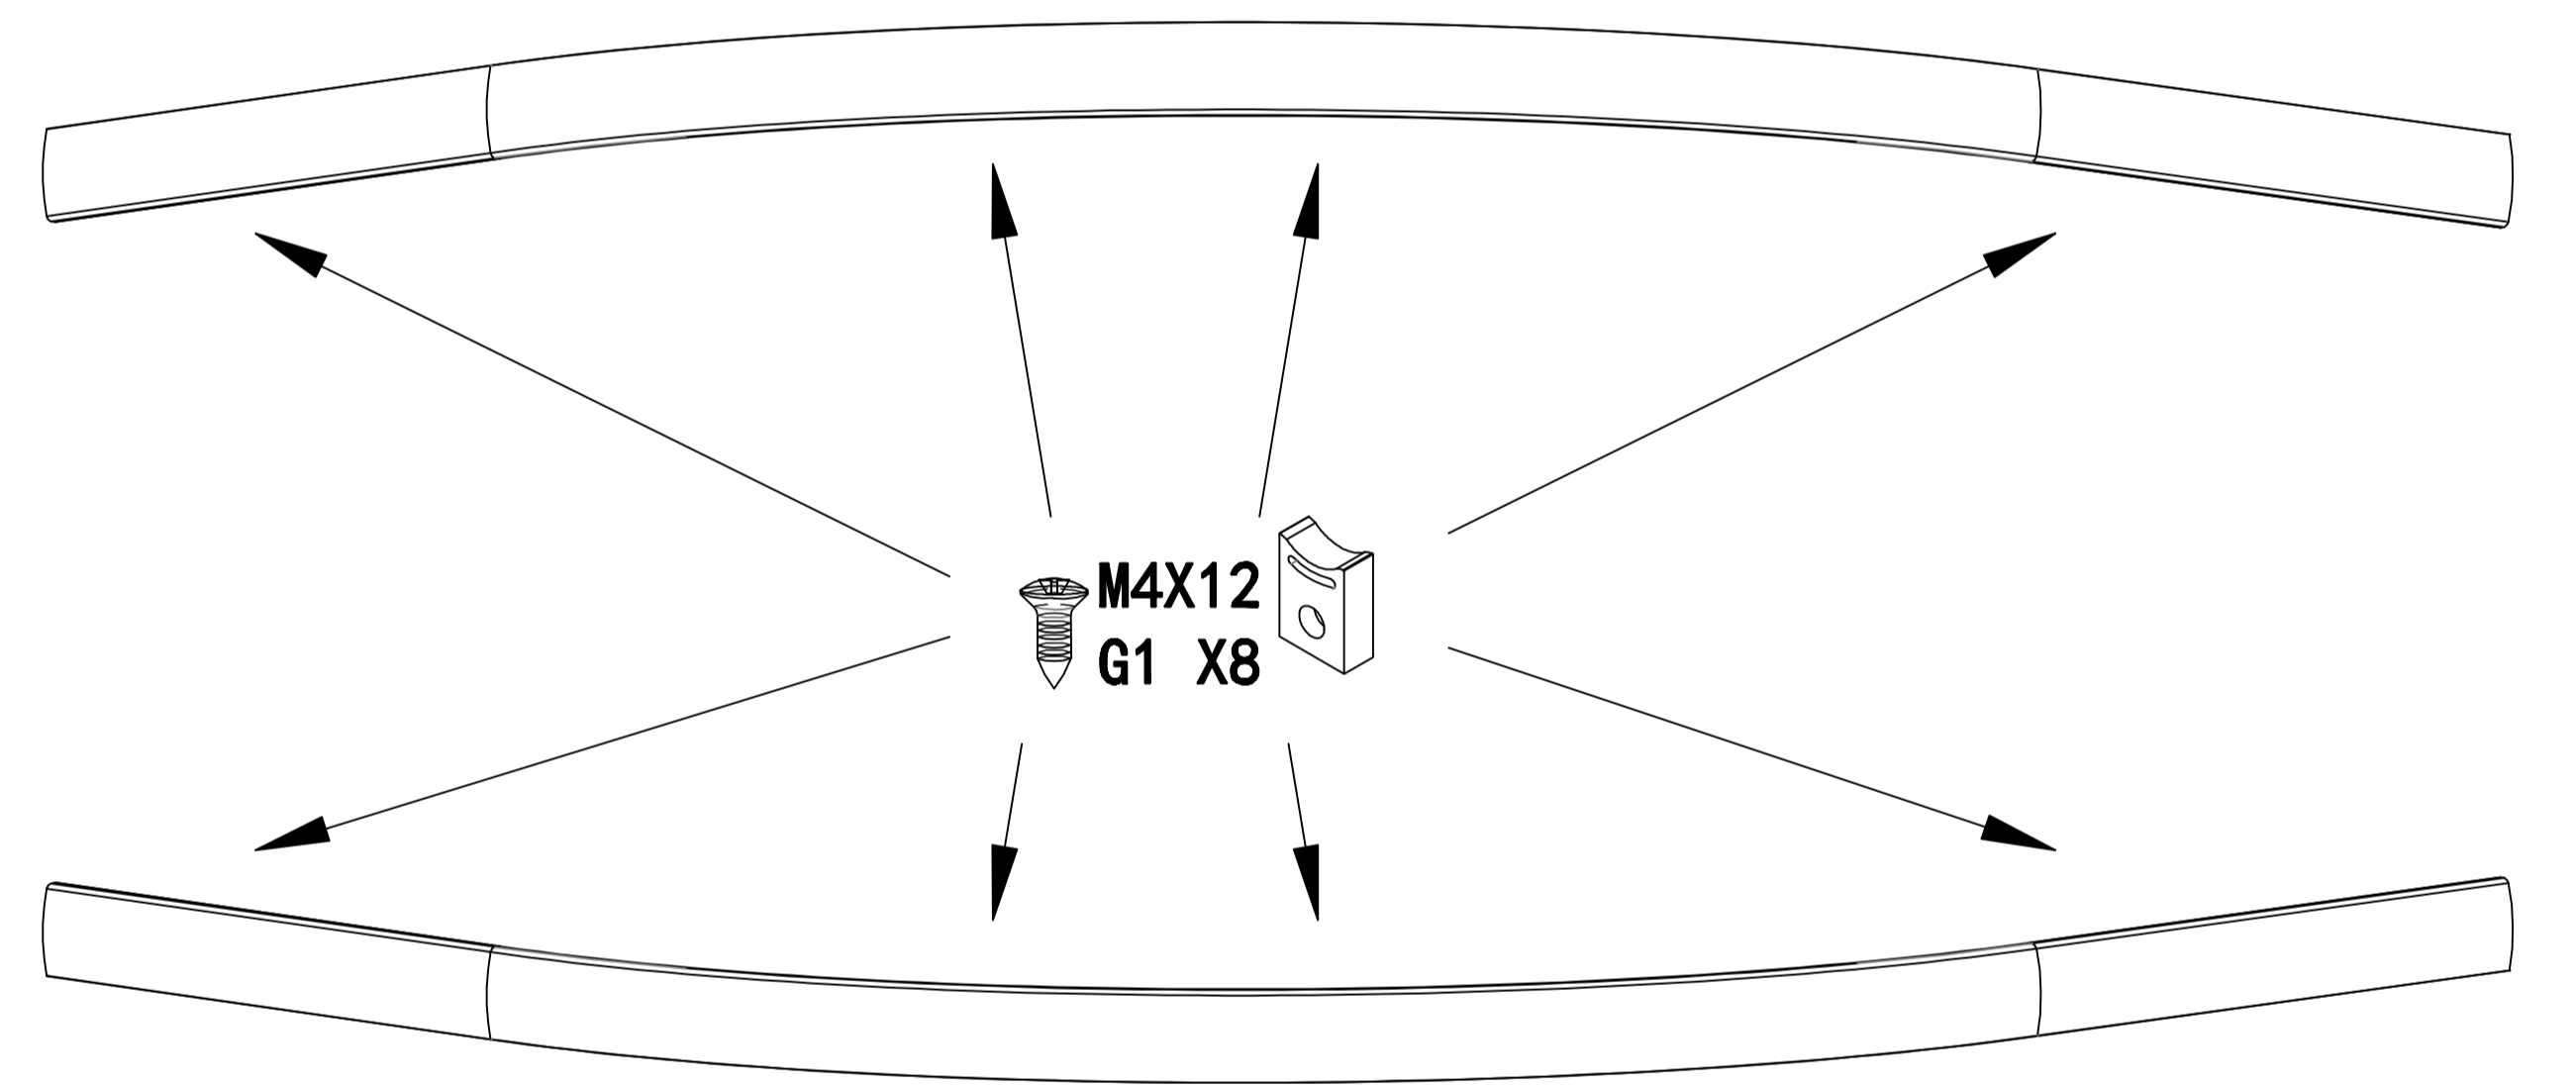



Pathway

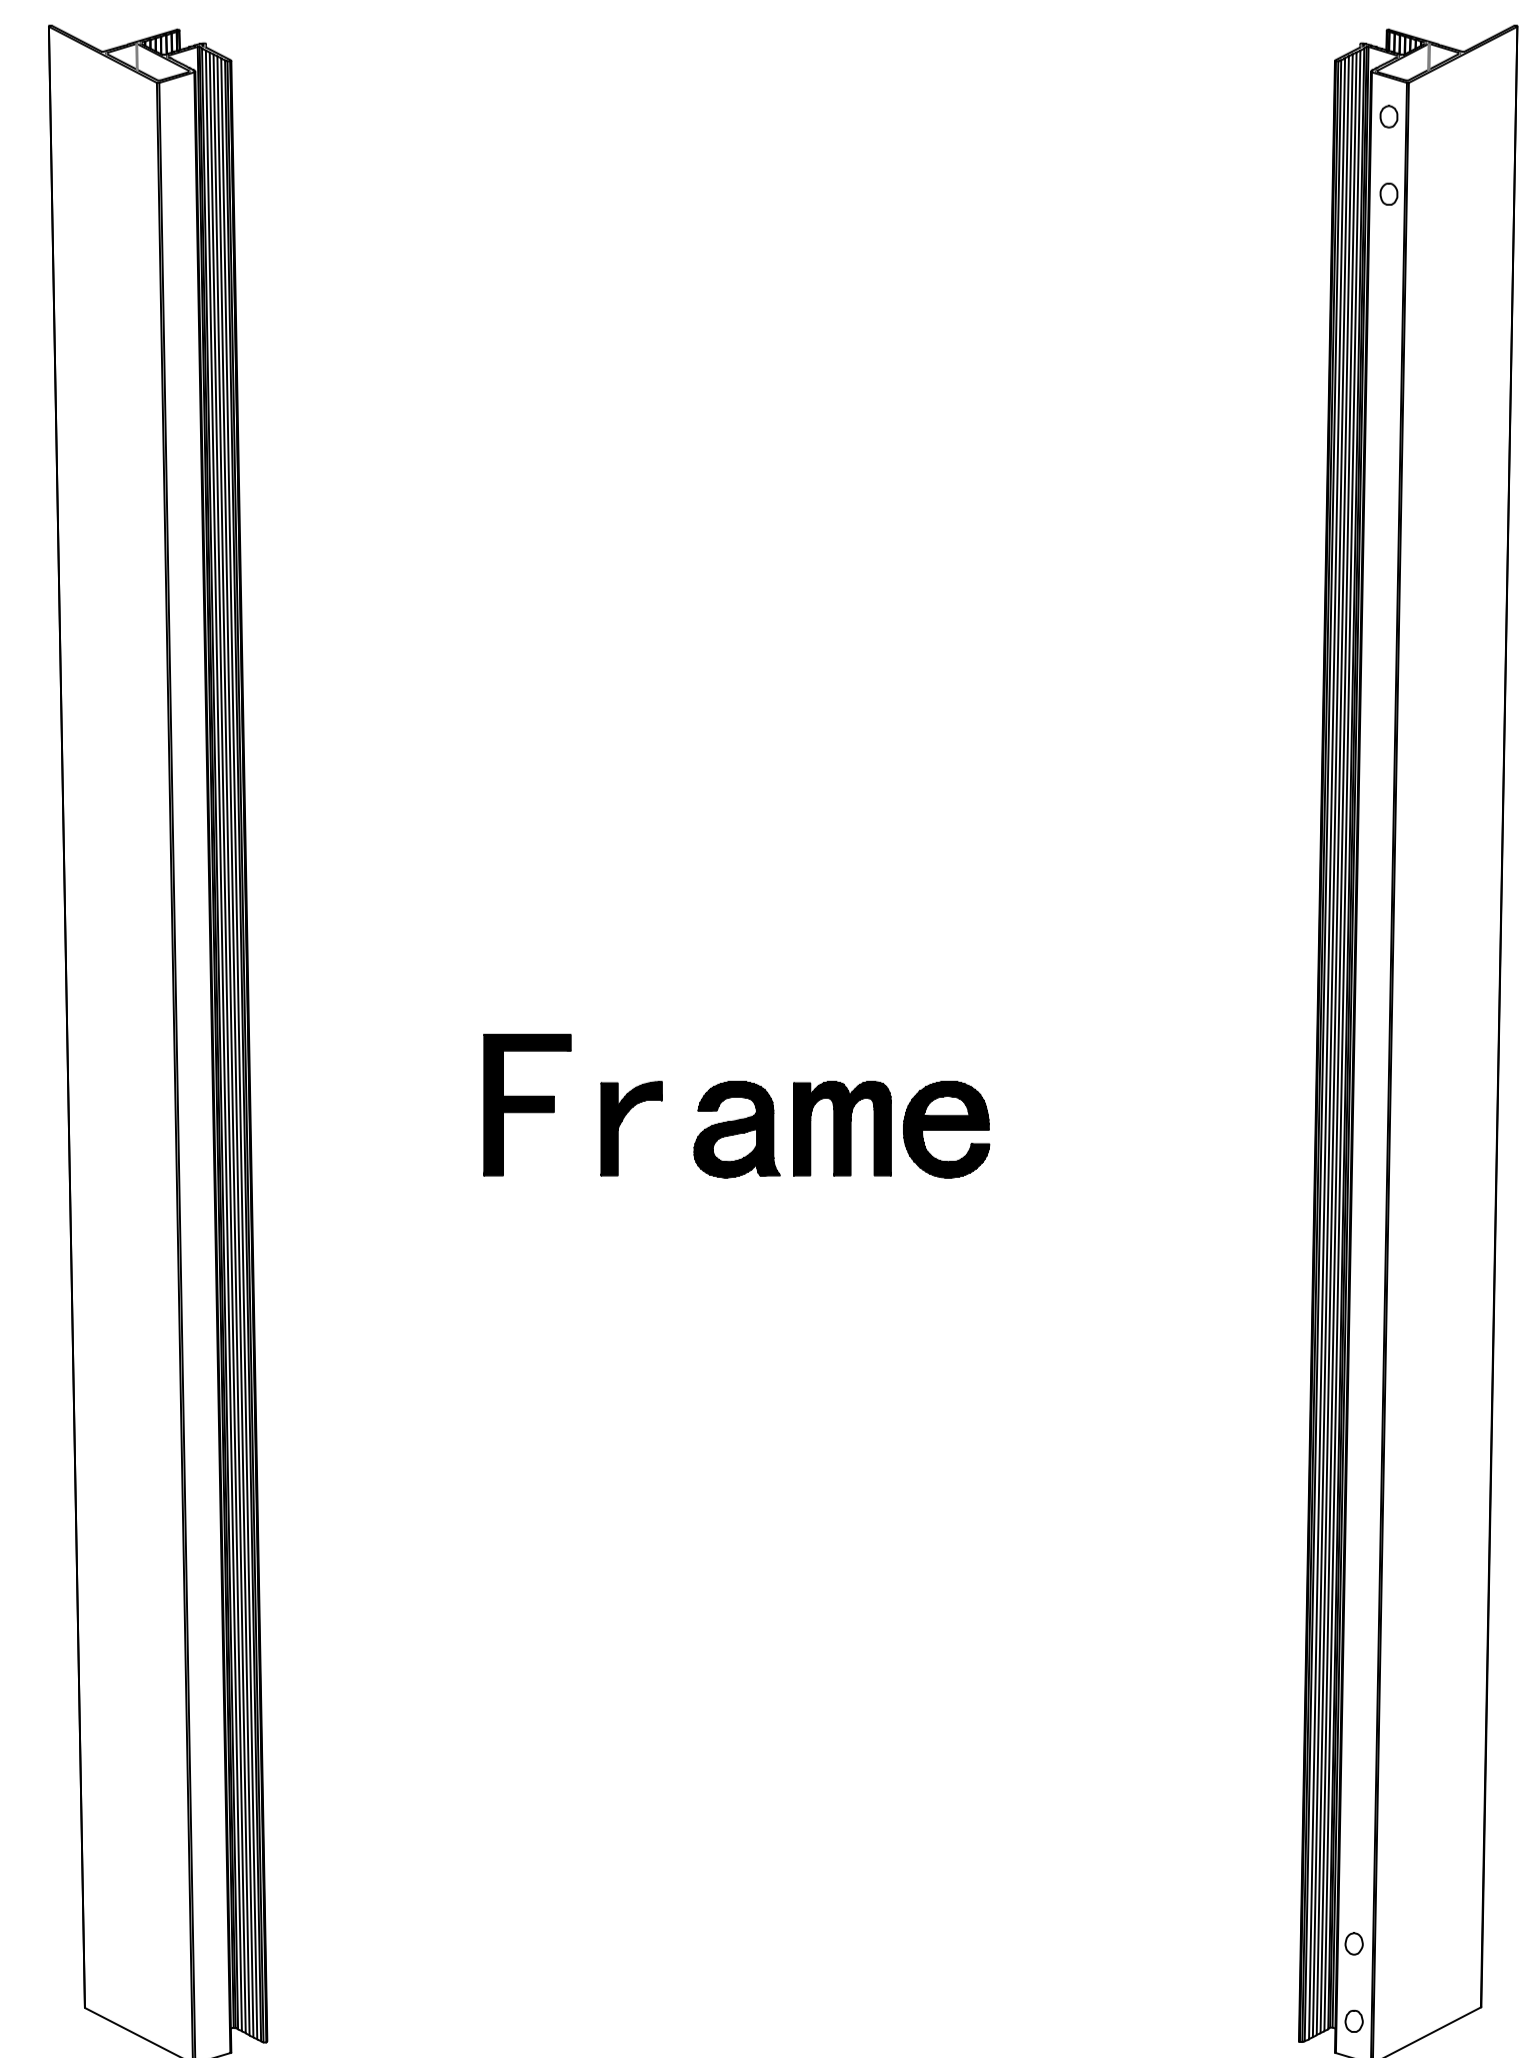



Frame

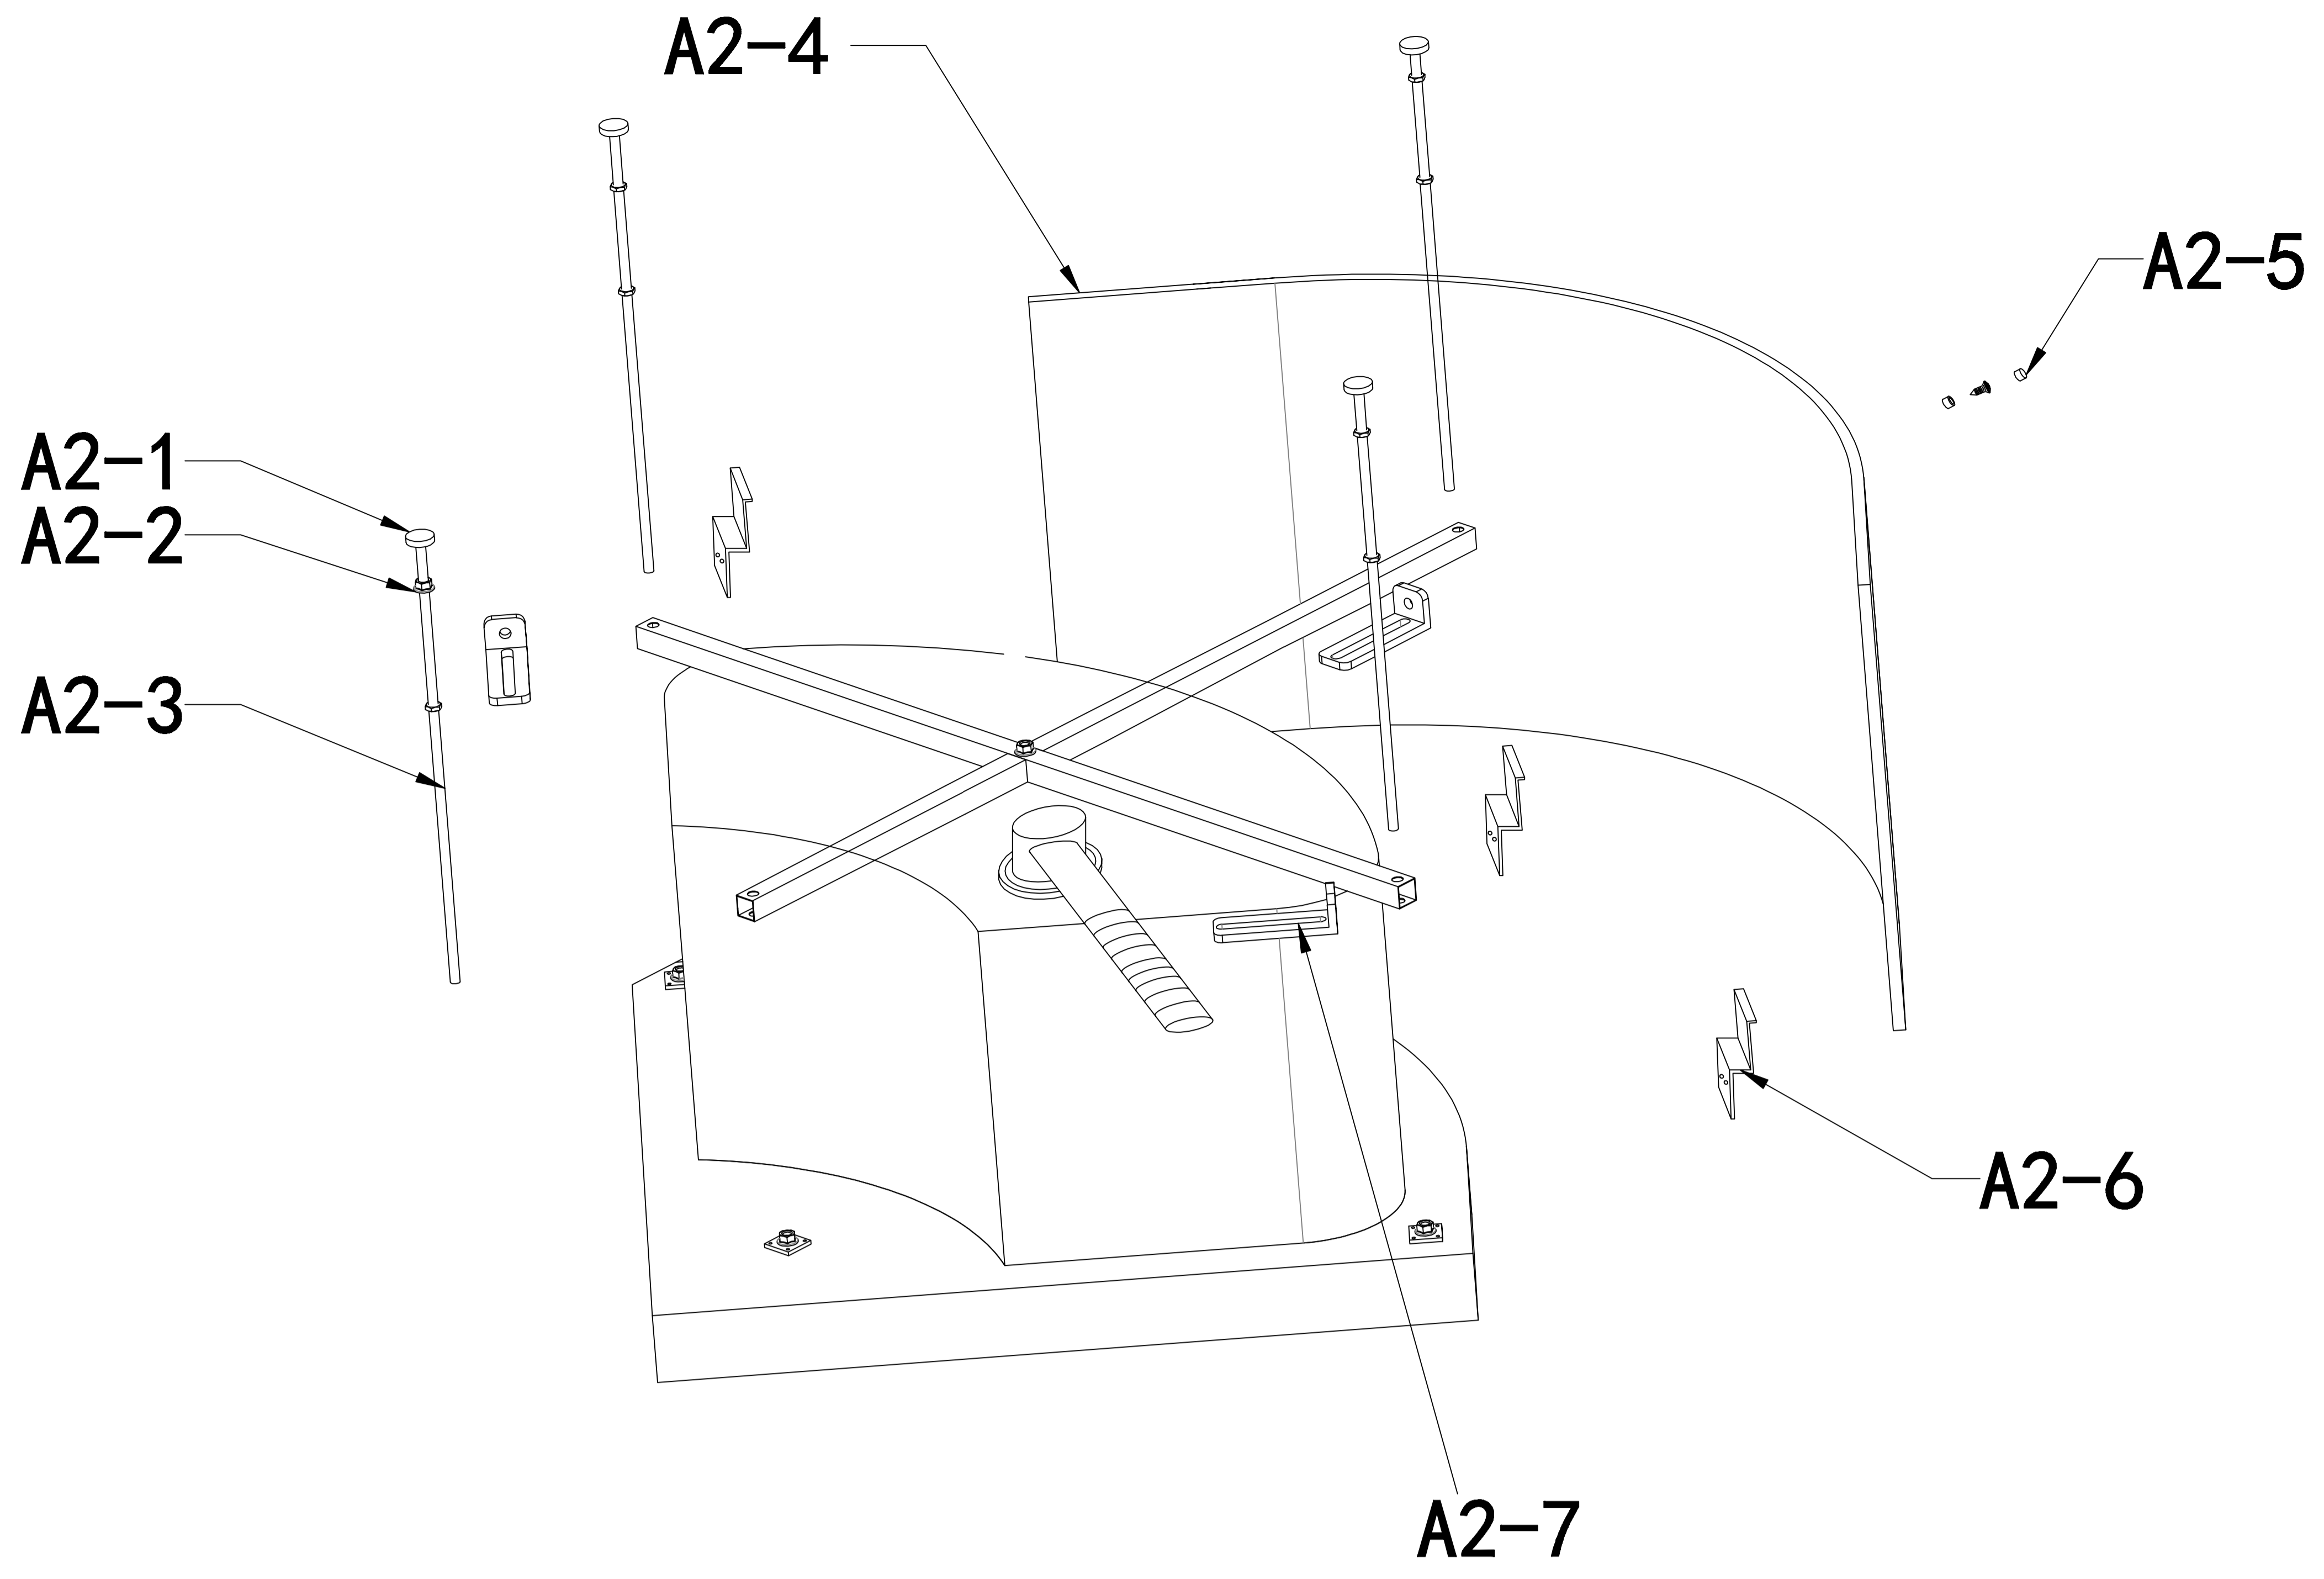

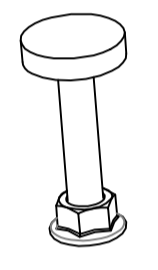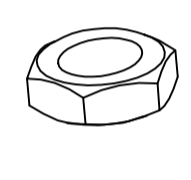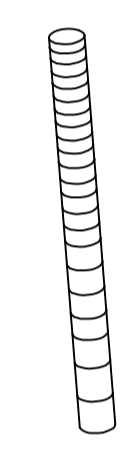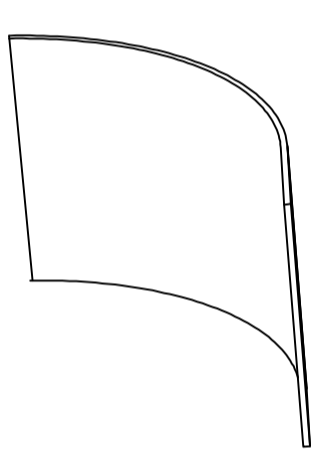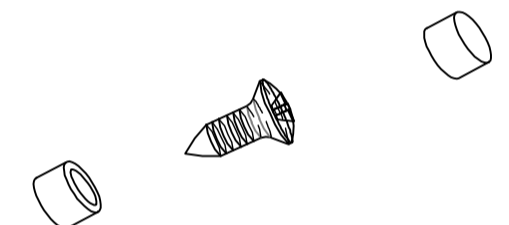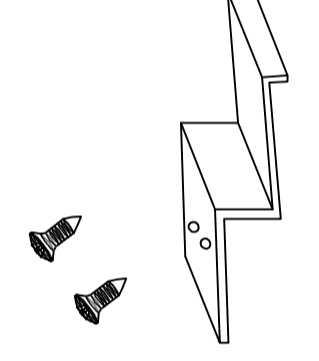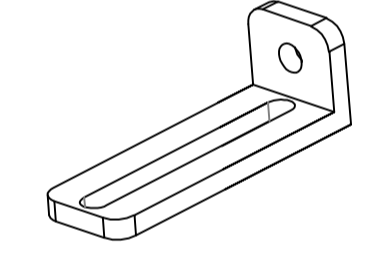
<p>A2-1 X4</p> 	<p>A2-2 X12</p>  <p>M12</p>	<p>A2-3 M12*L x3 M12*S x1</p> 
	<p>A2-4 X1</p> 	<p>A2-5 X4</p> 
<p>A2-6 X5</p> 	<p>A2-7 X3</p> 	

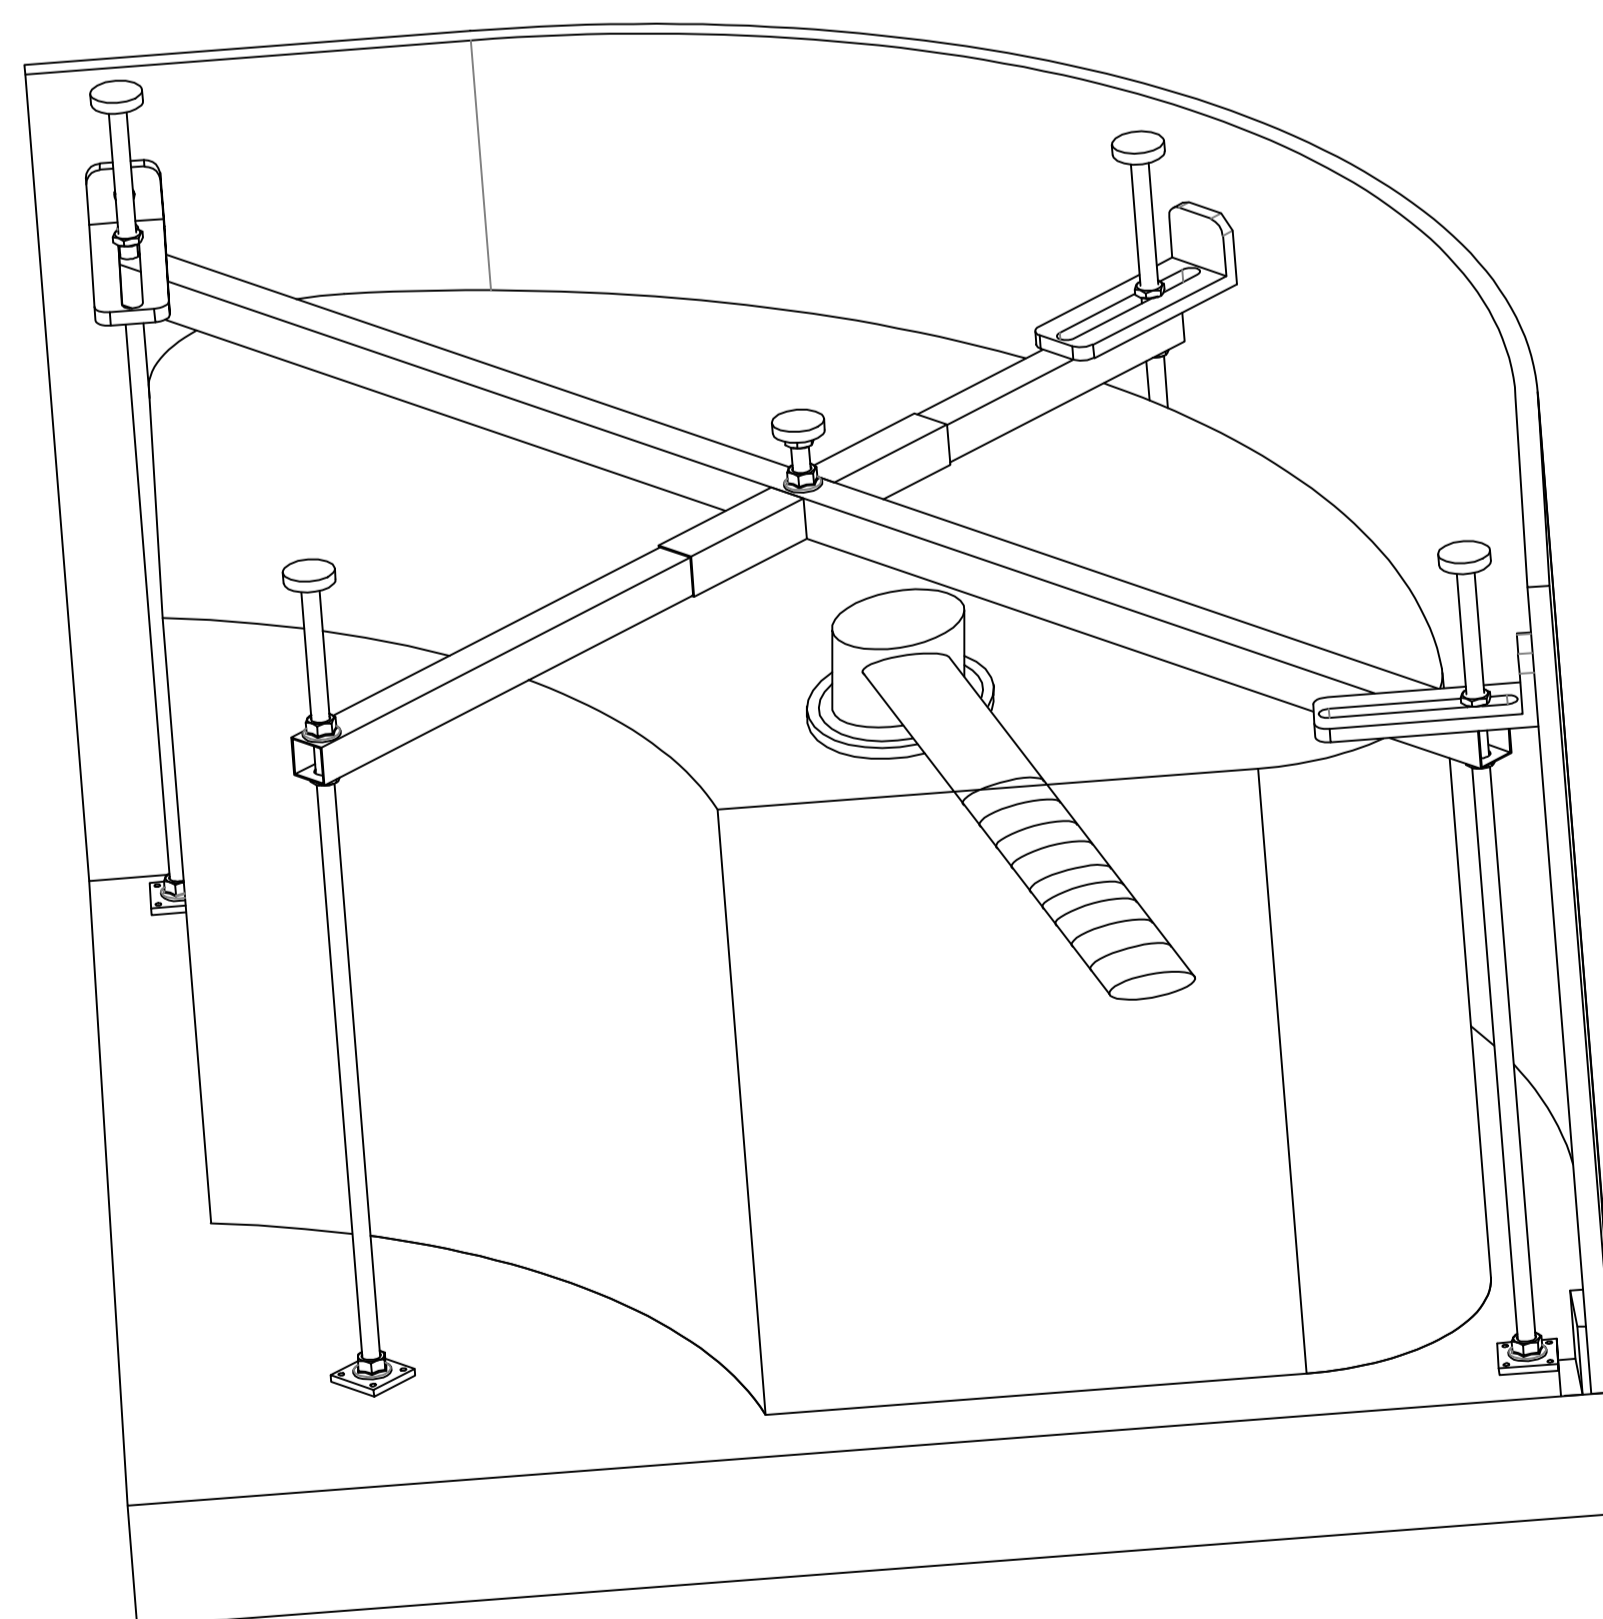

1

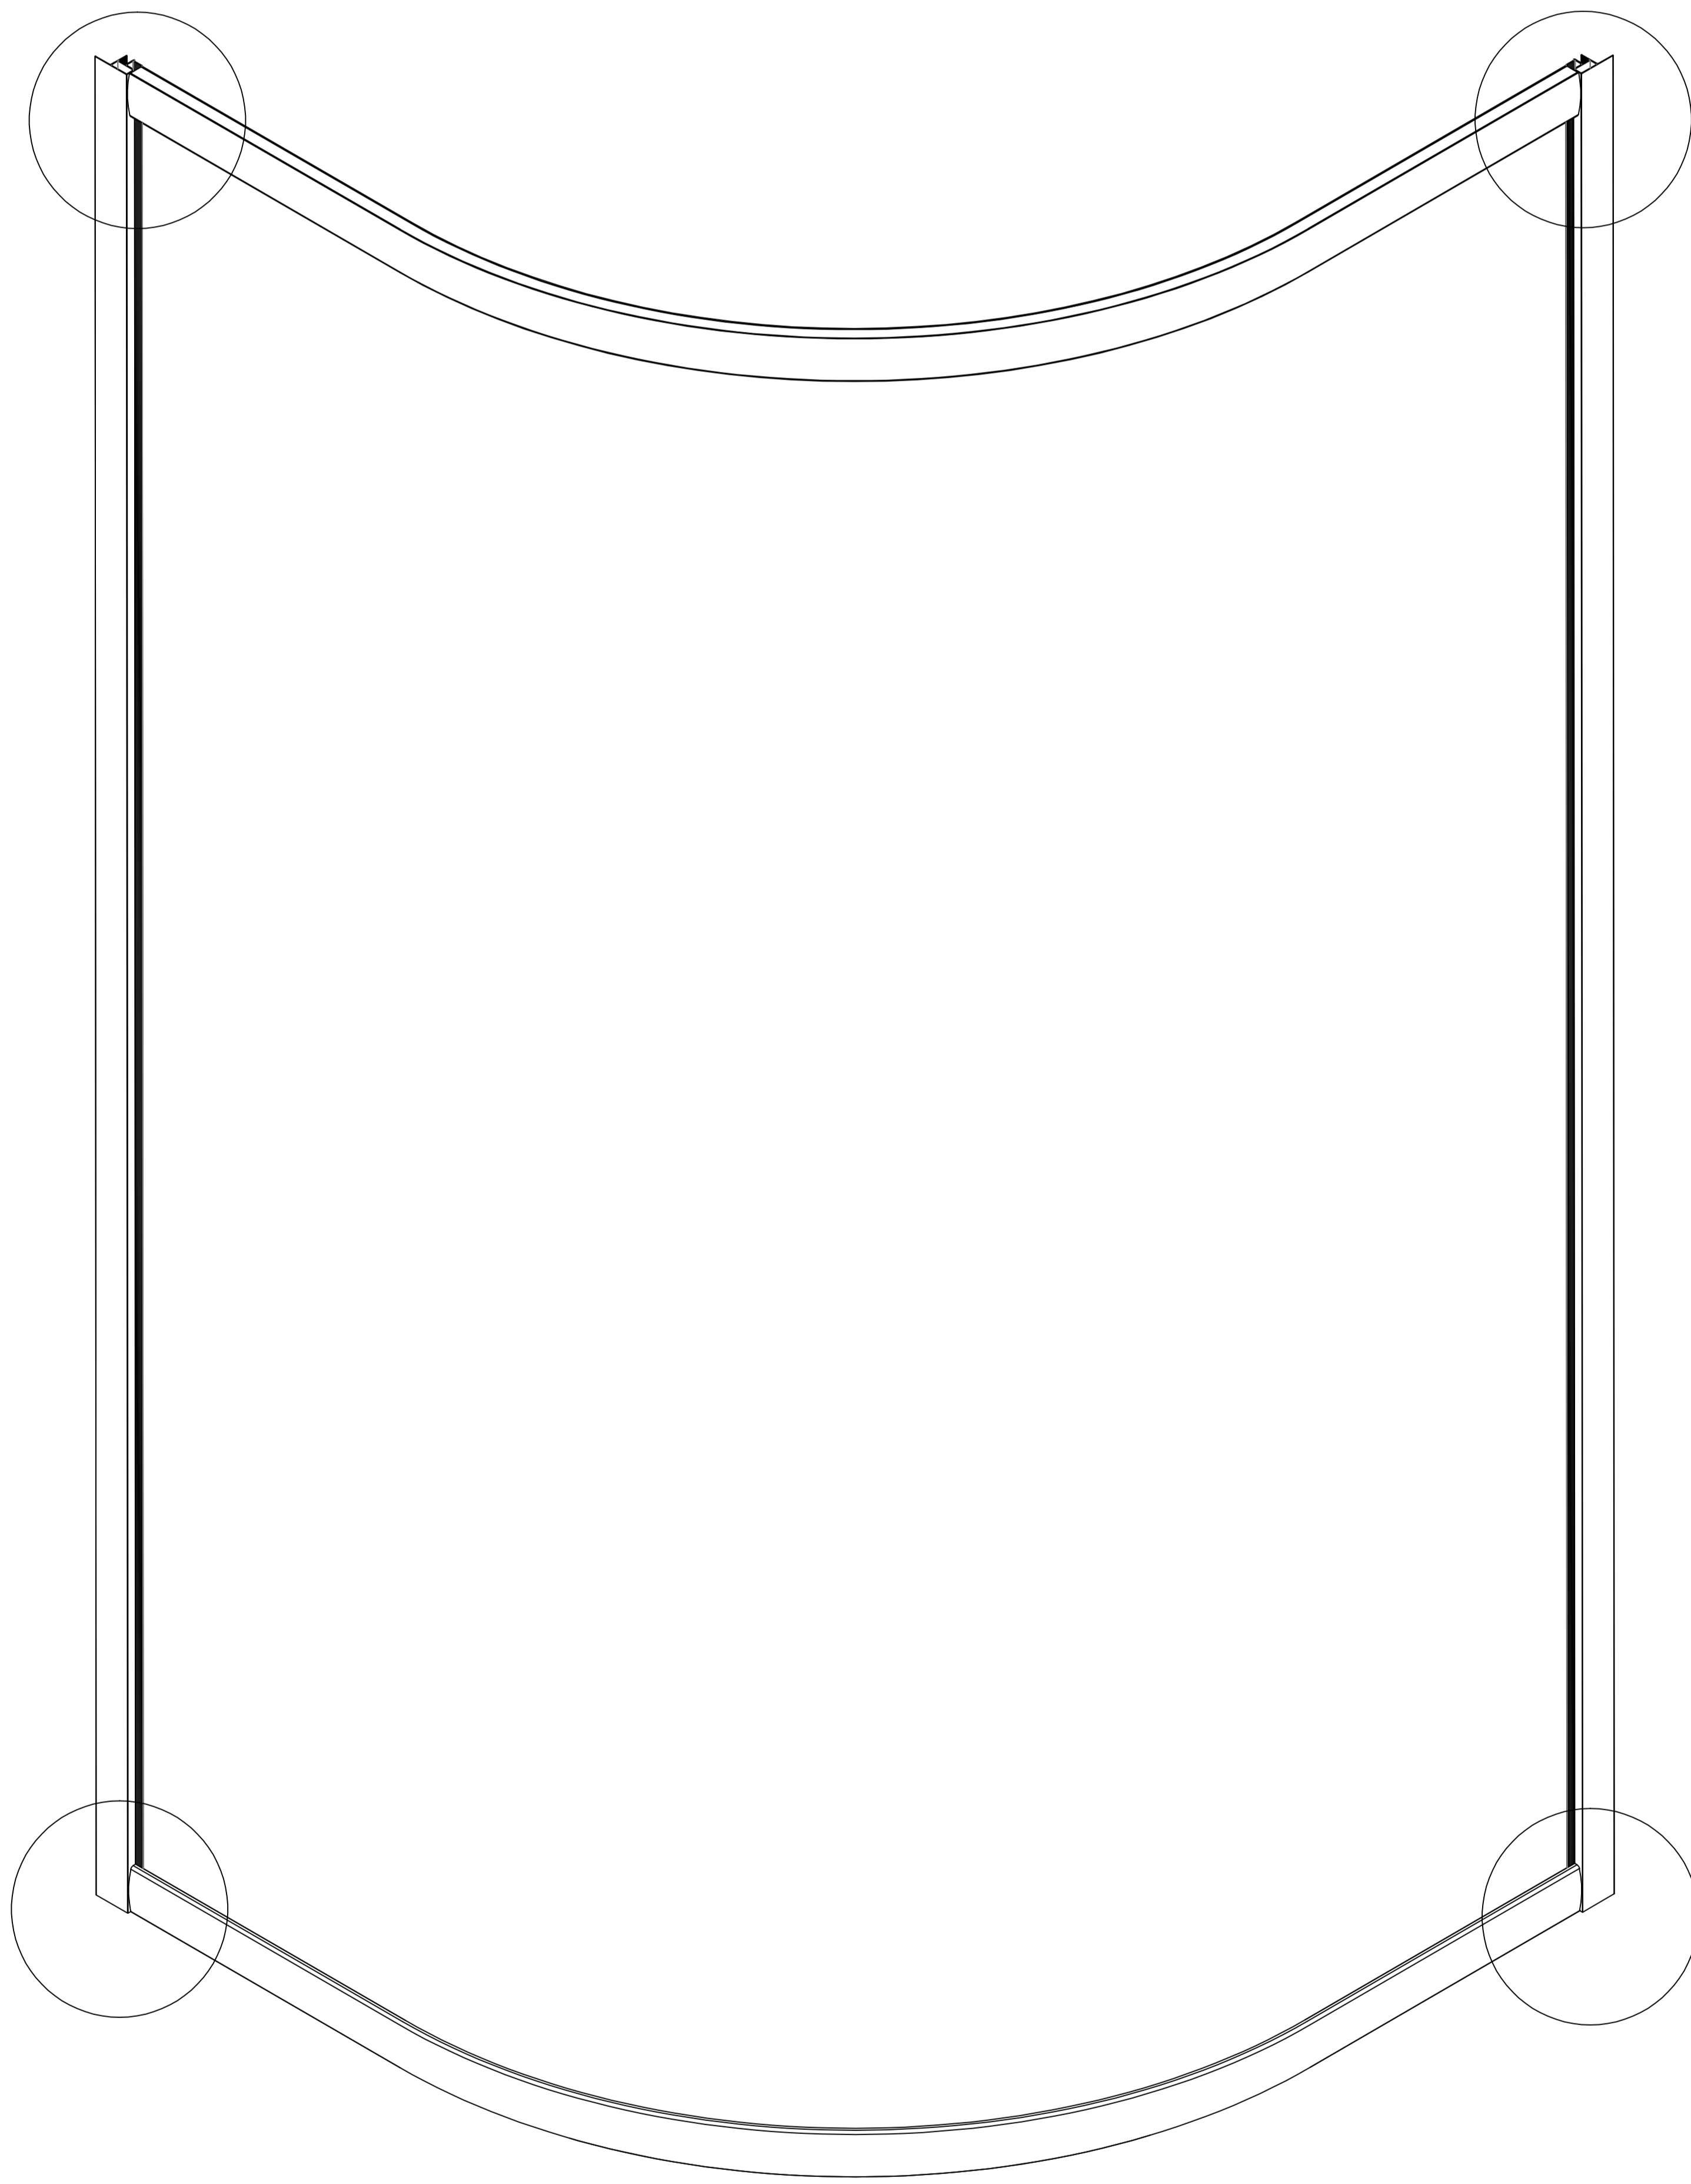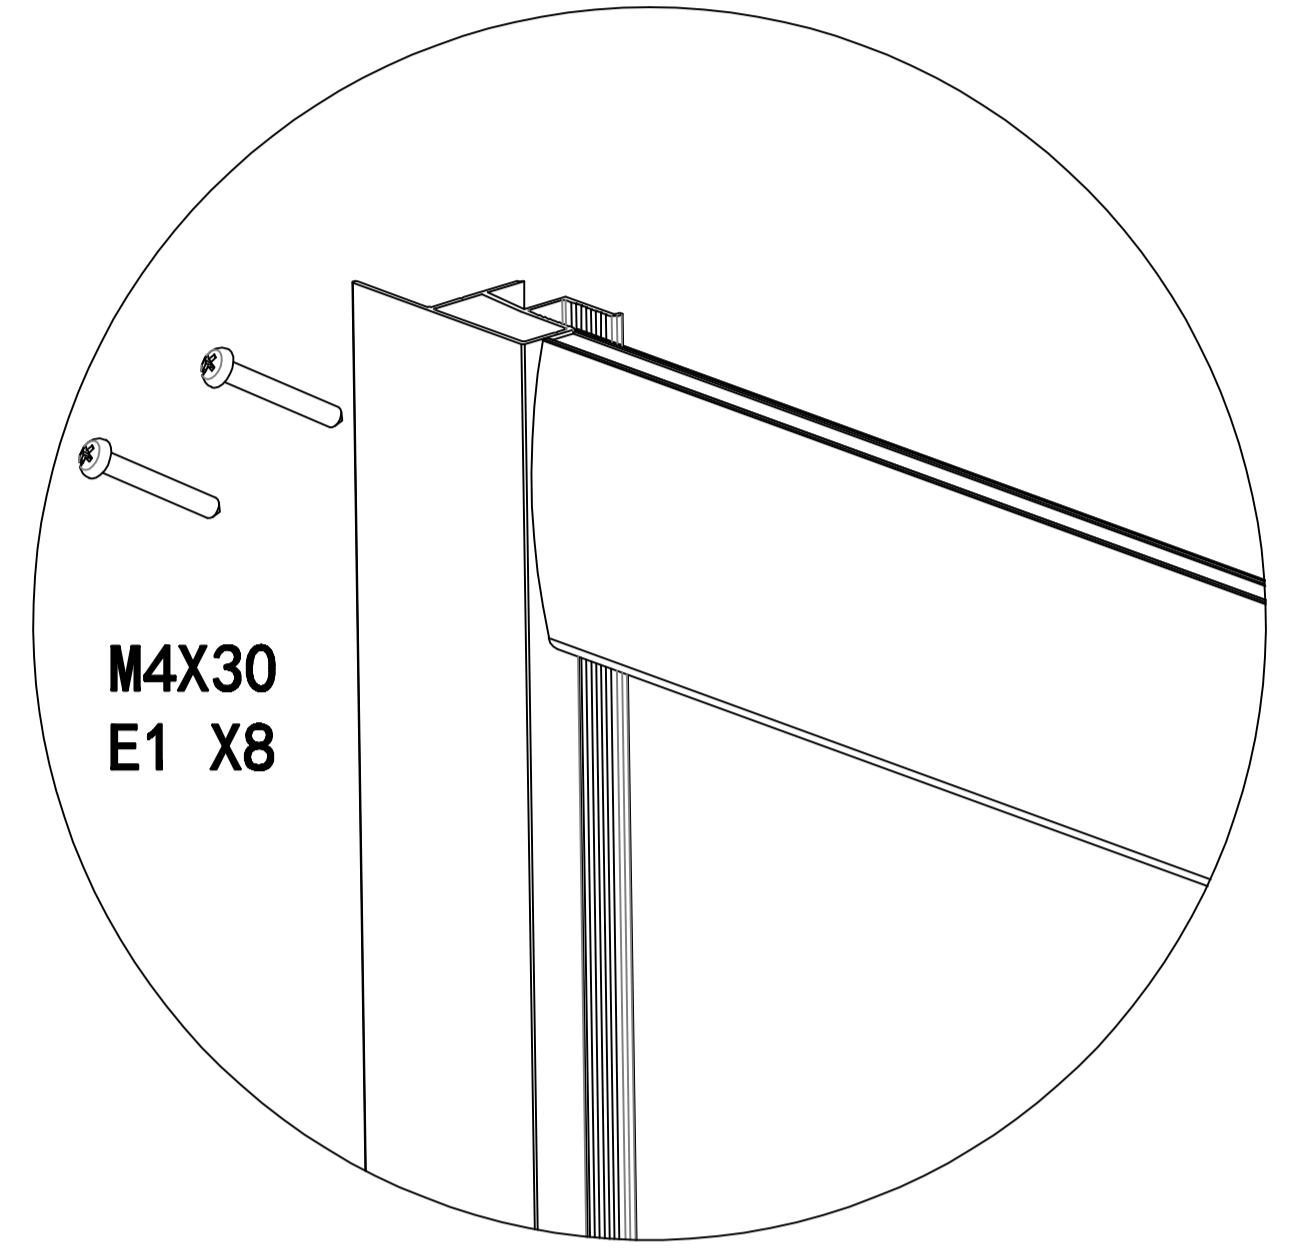


2

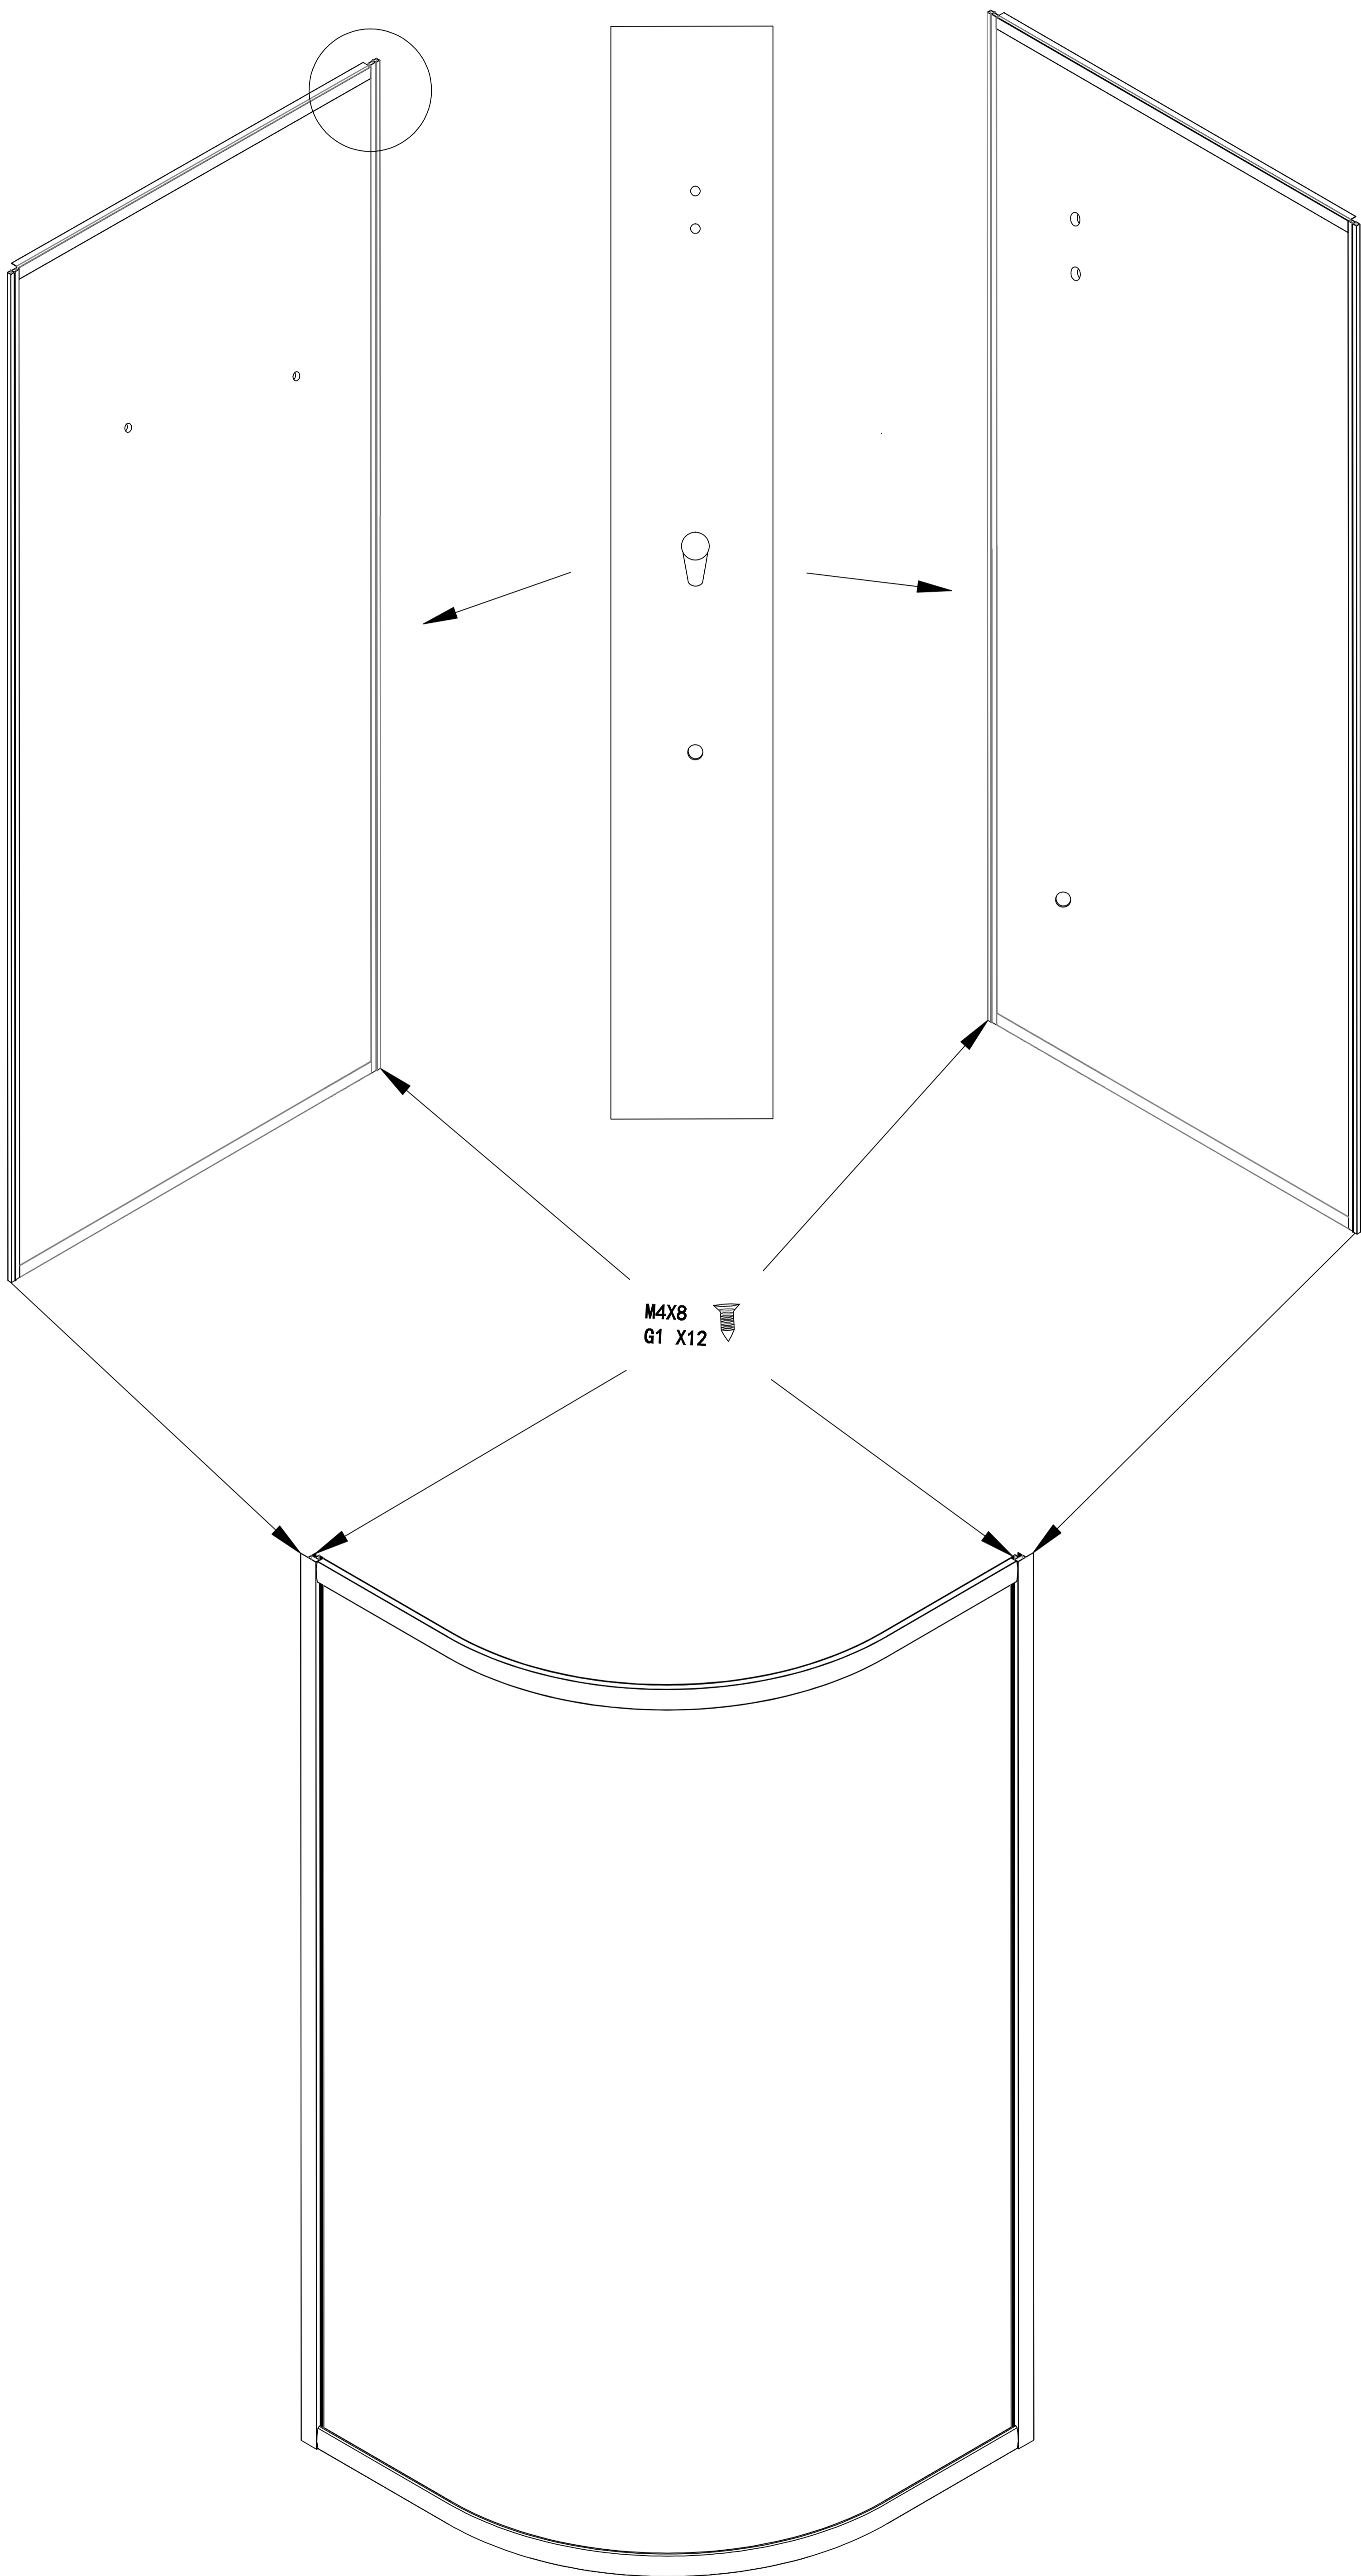


2-1


a


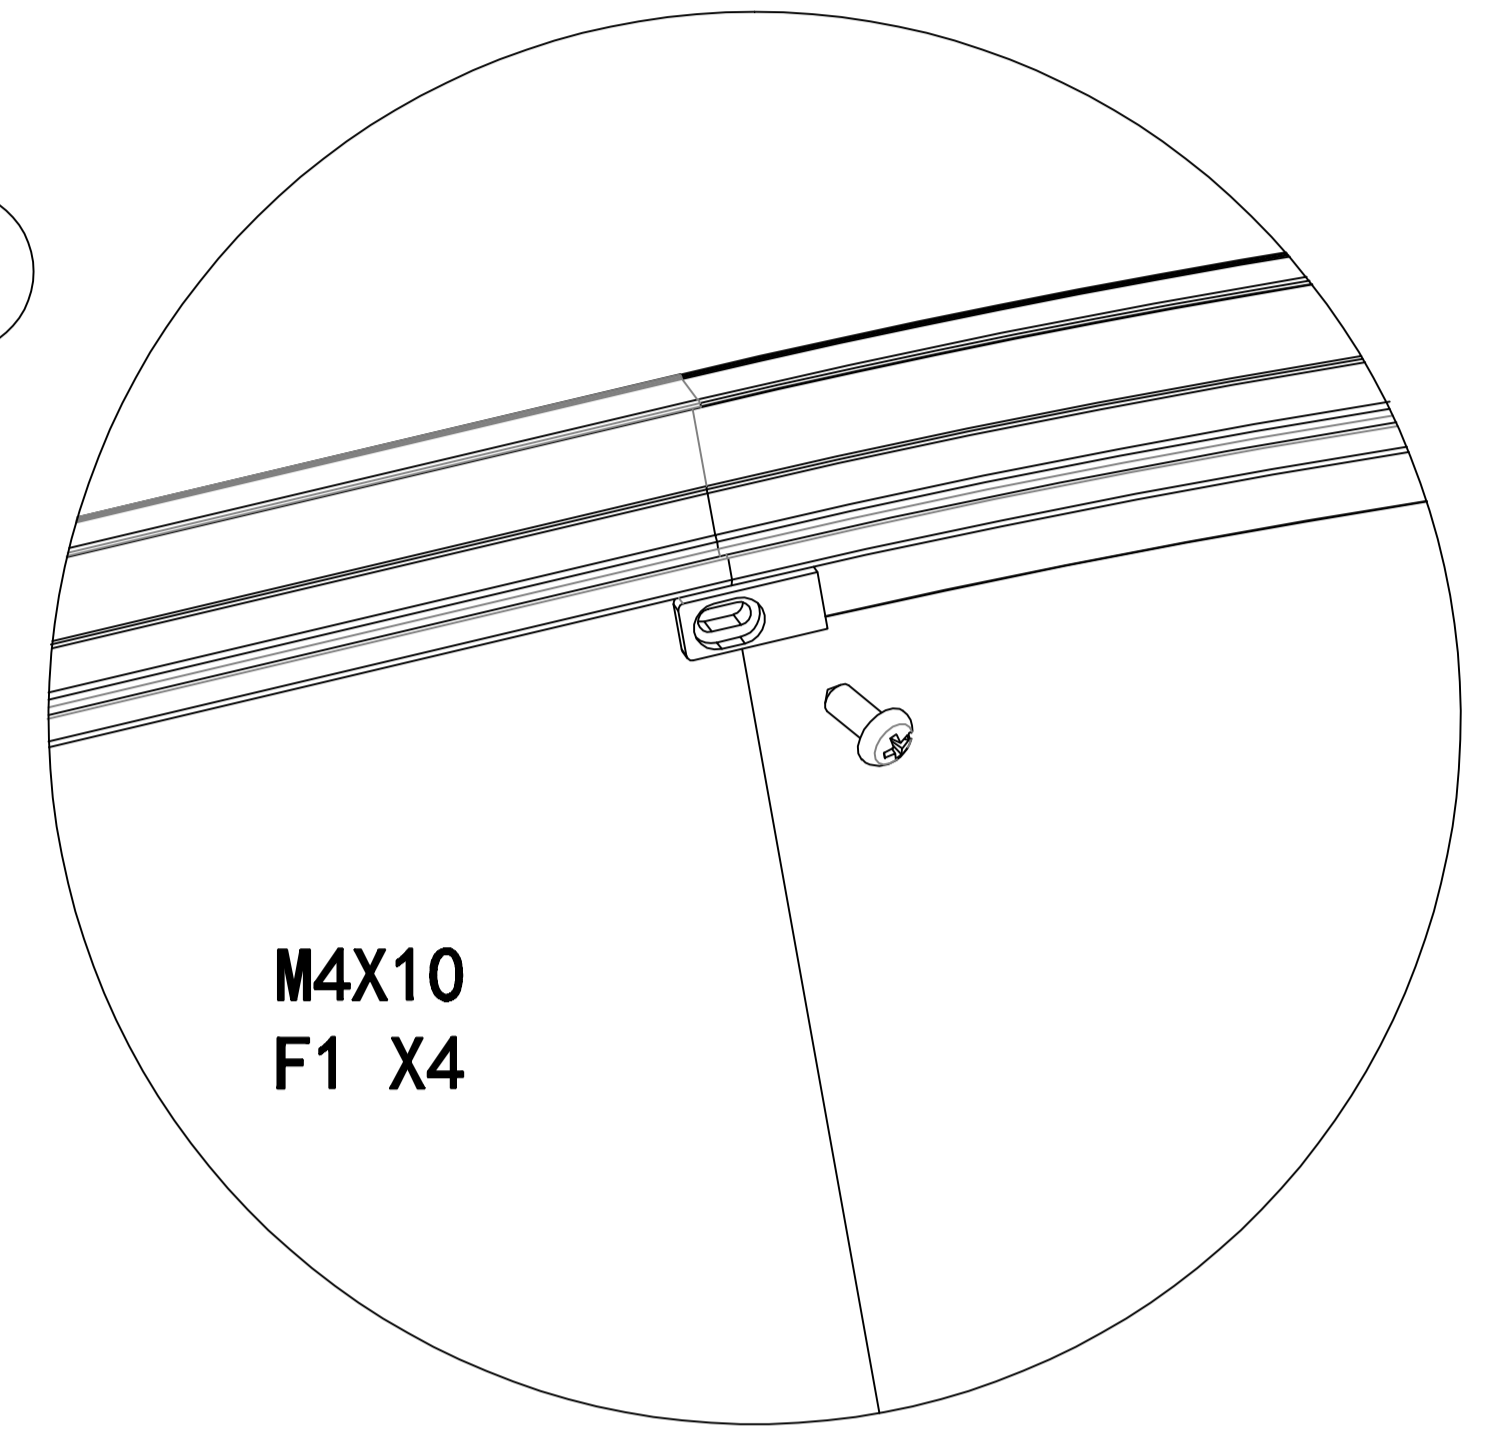


b

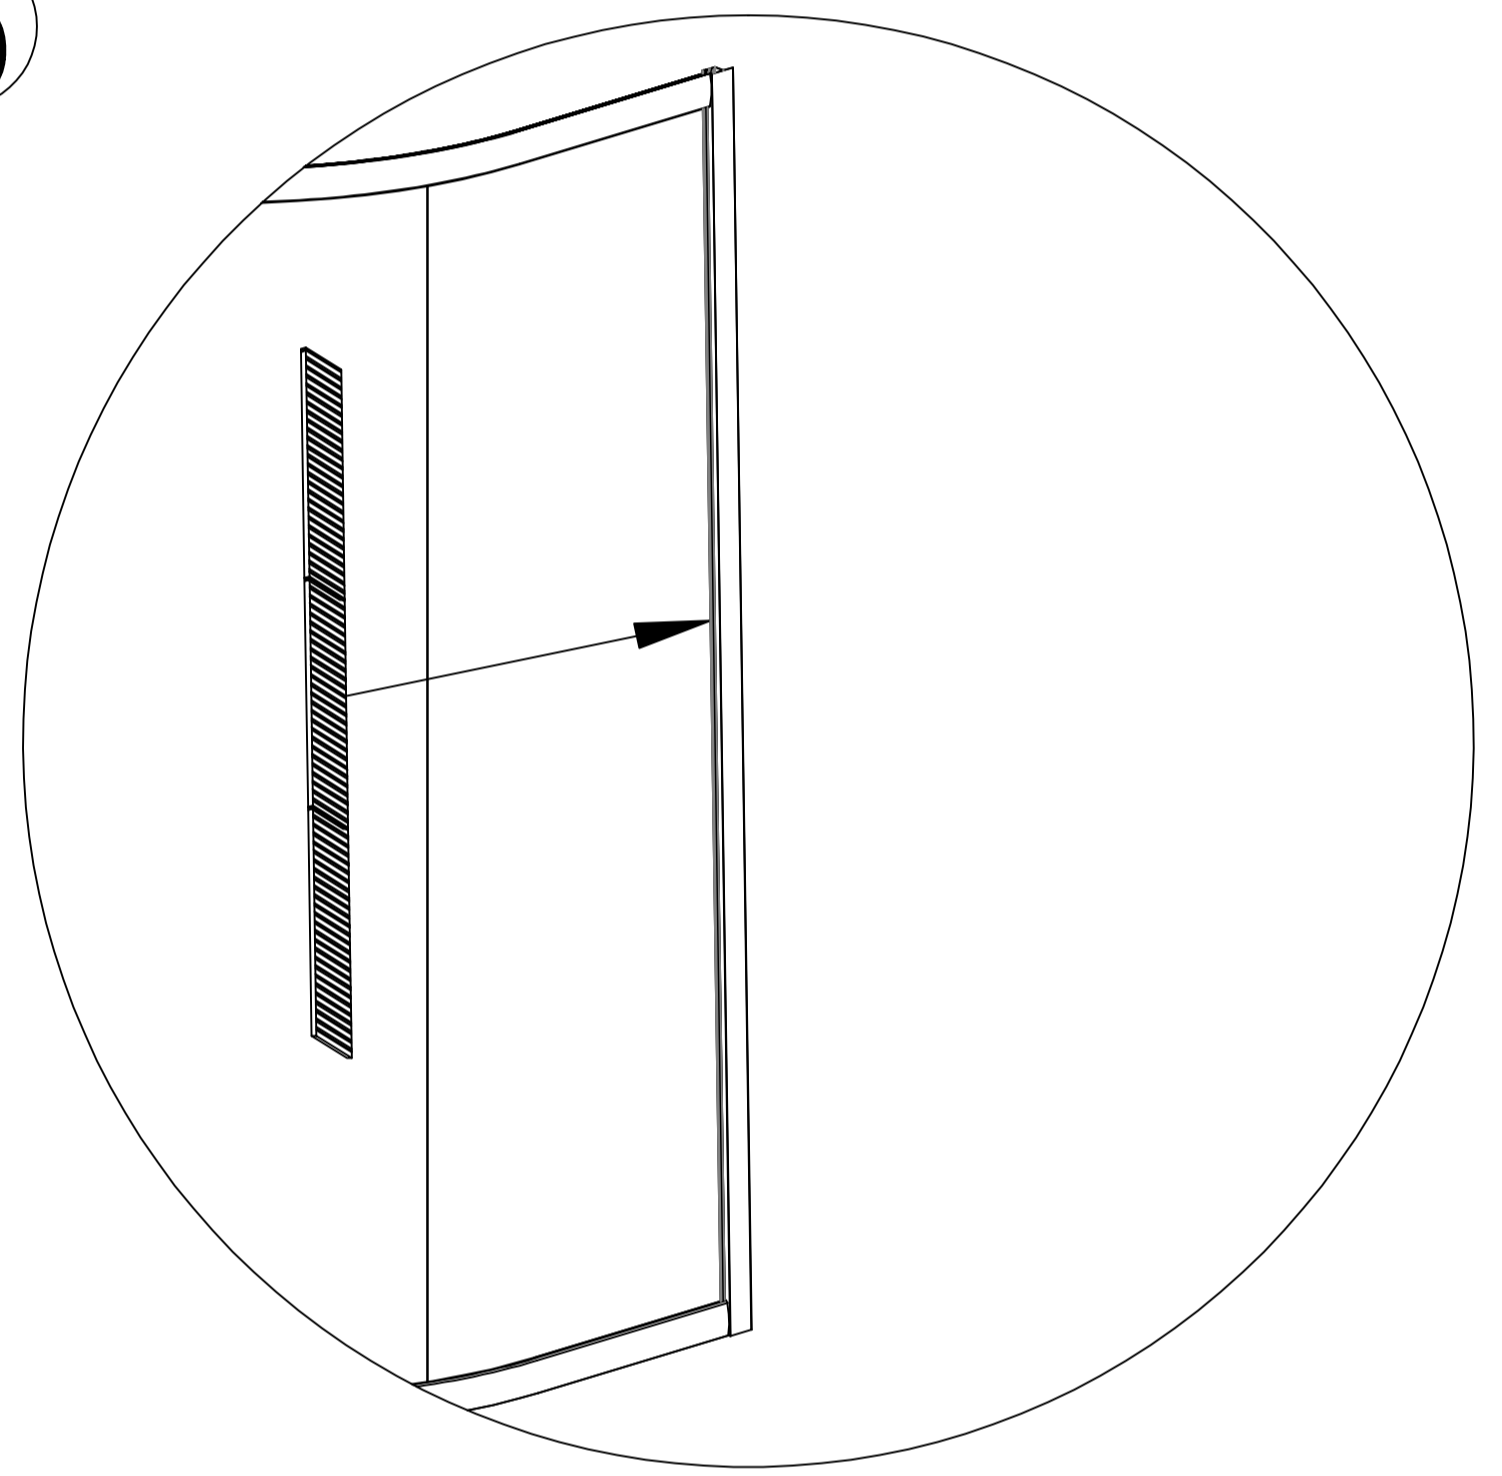

②-1

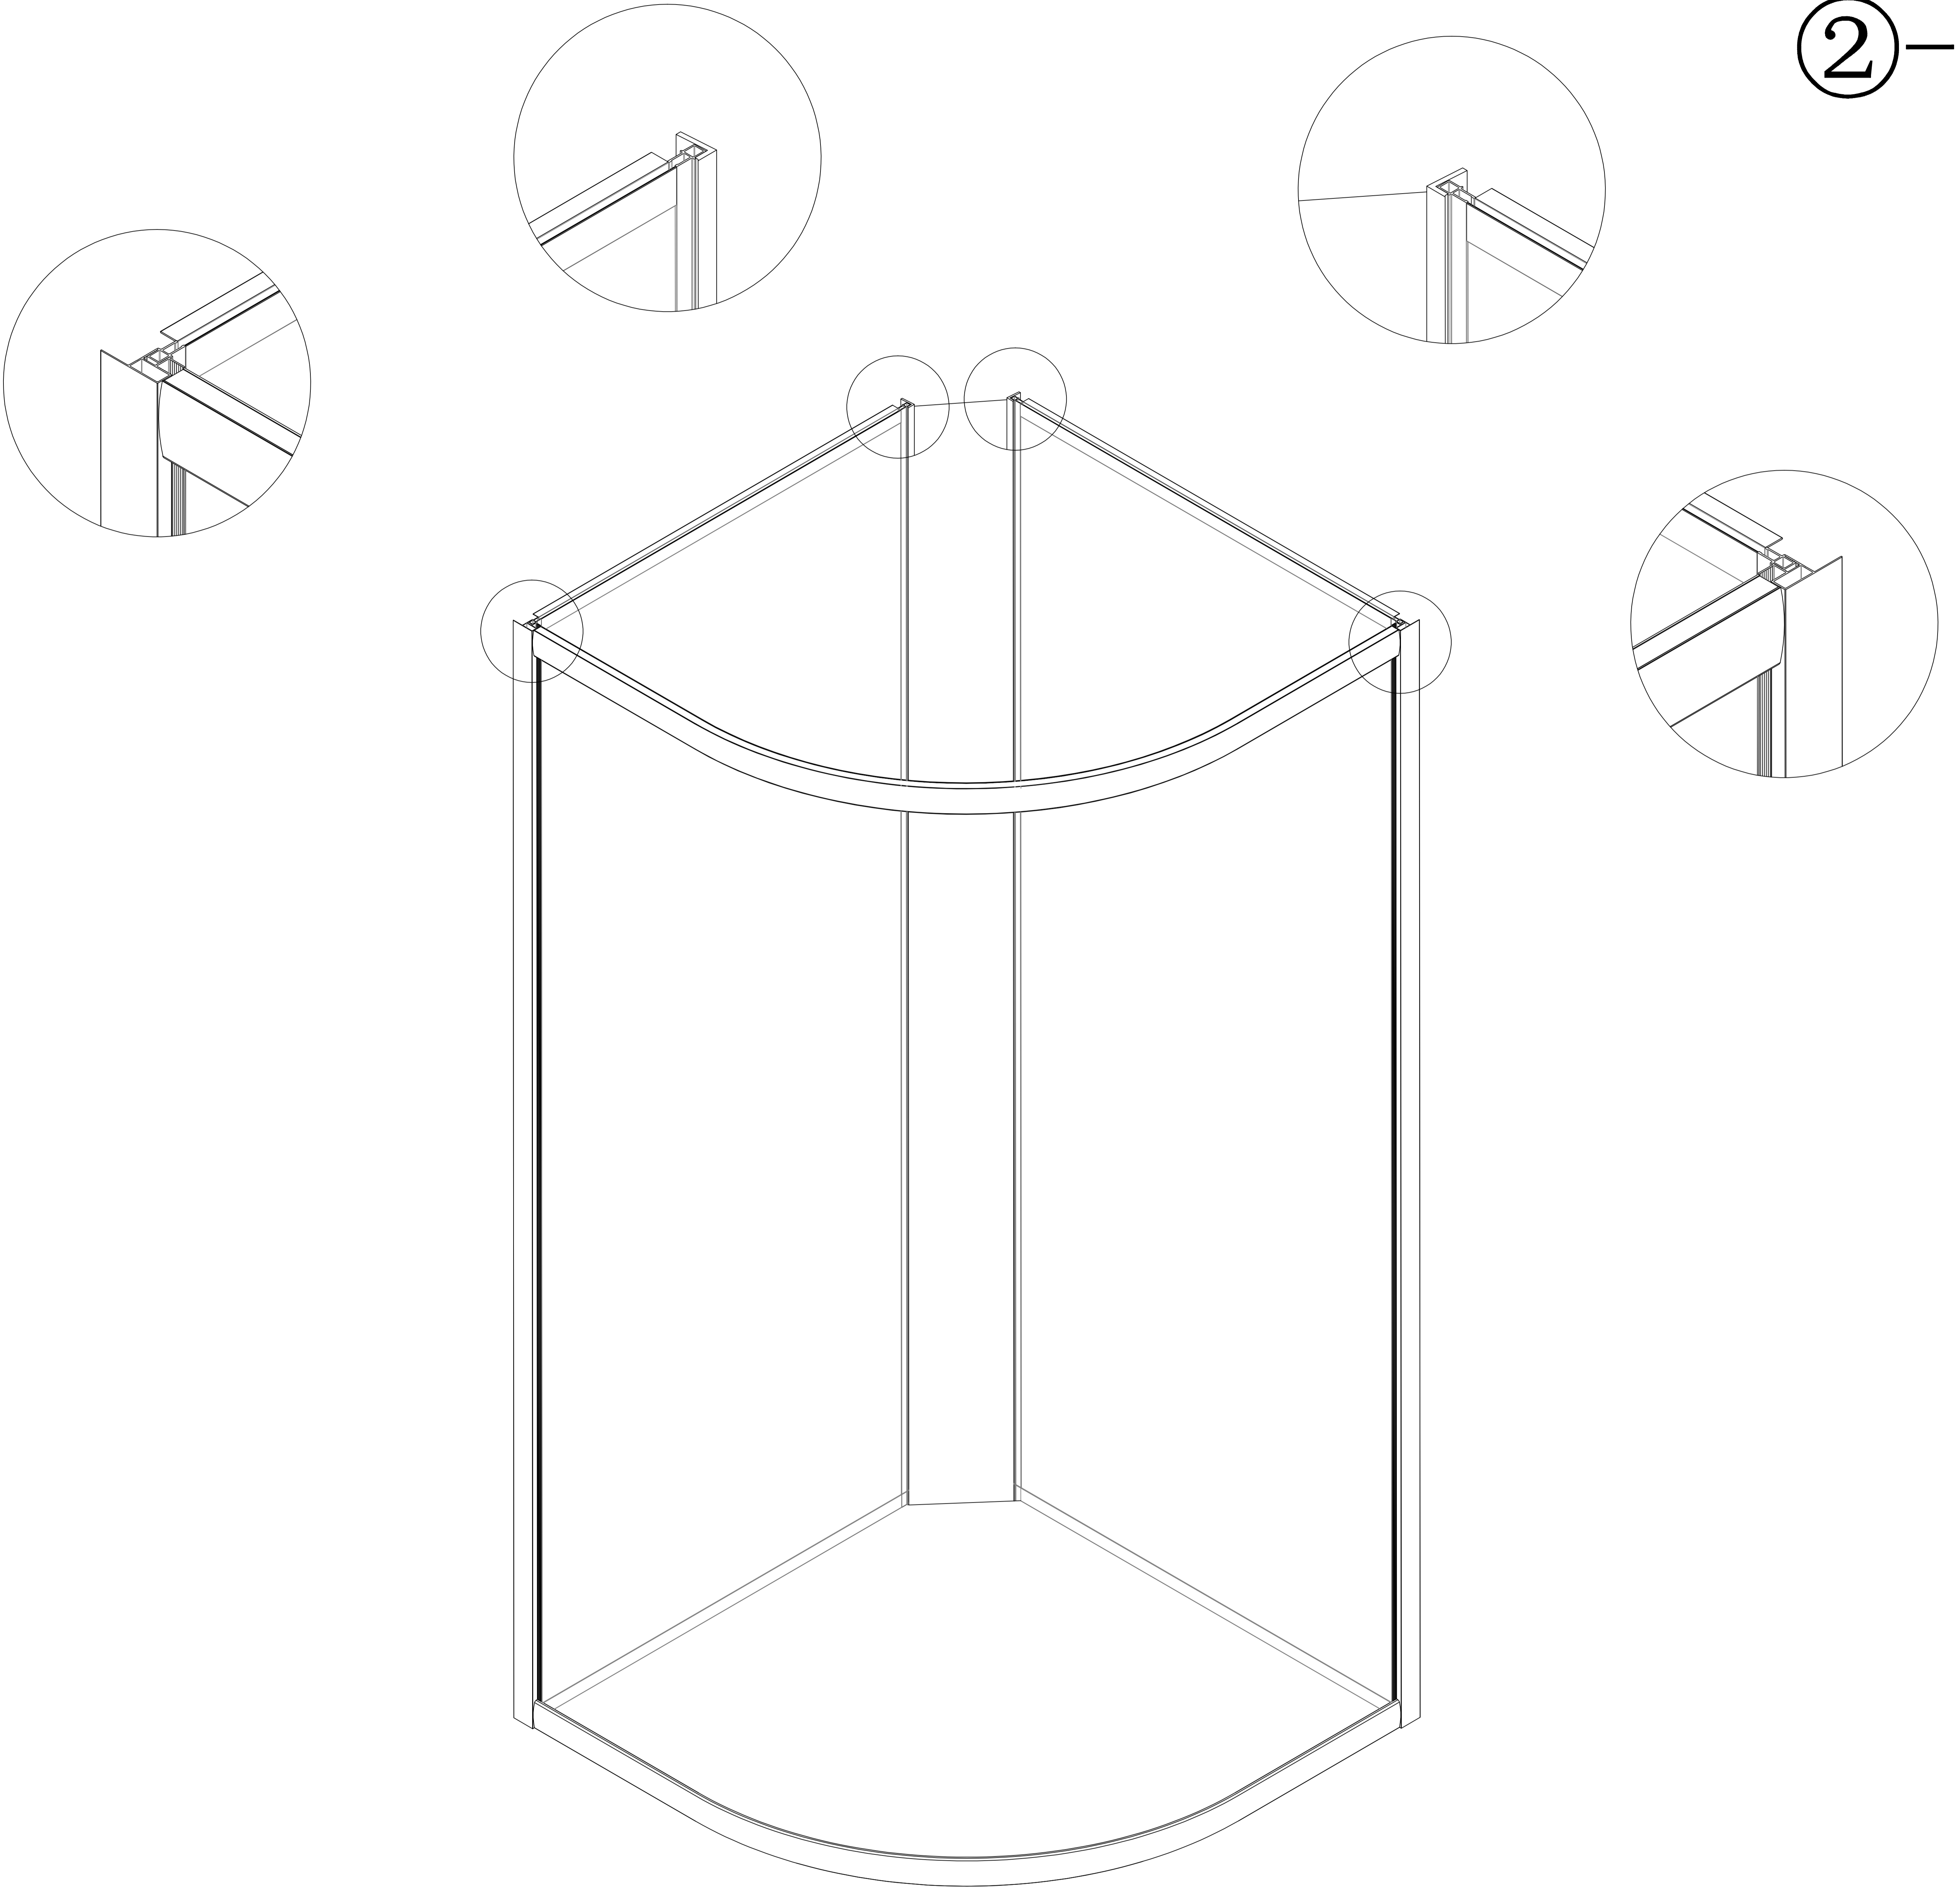

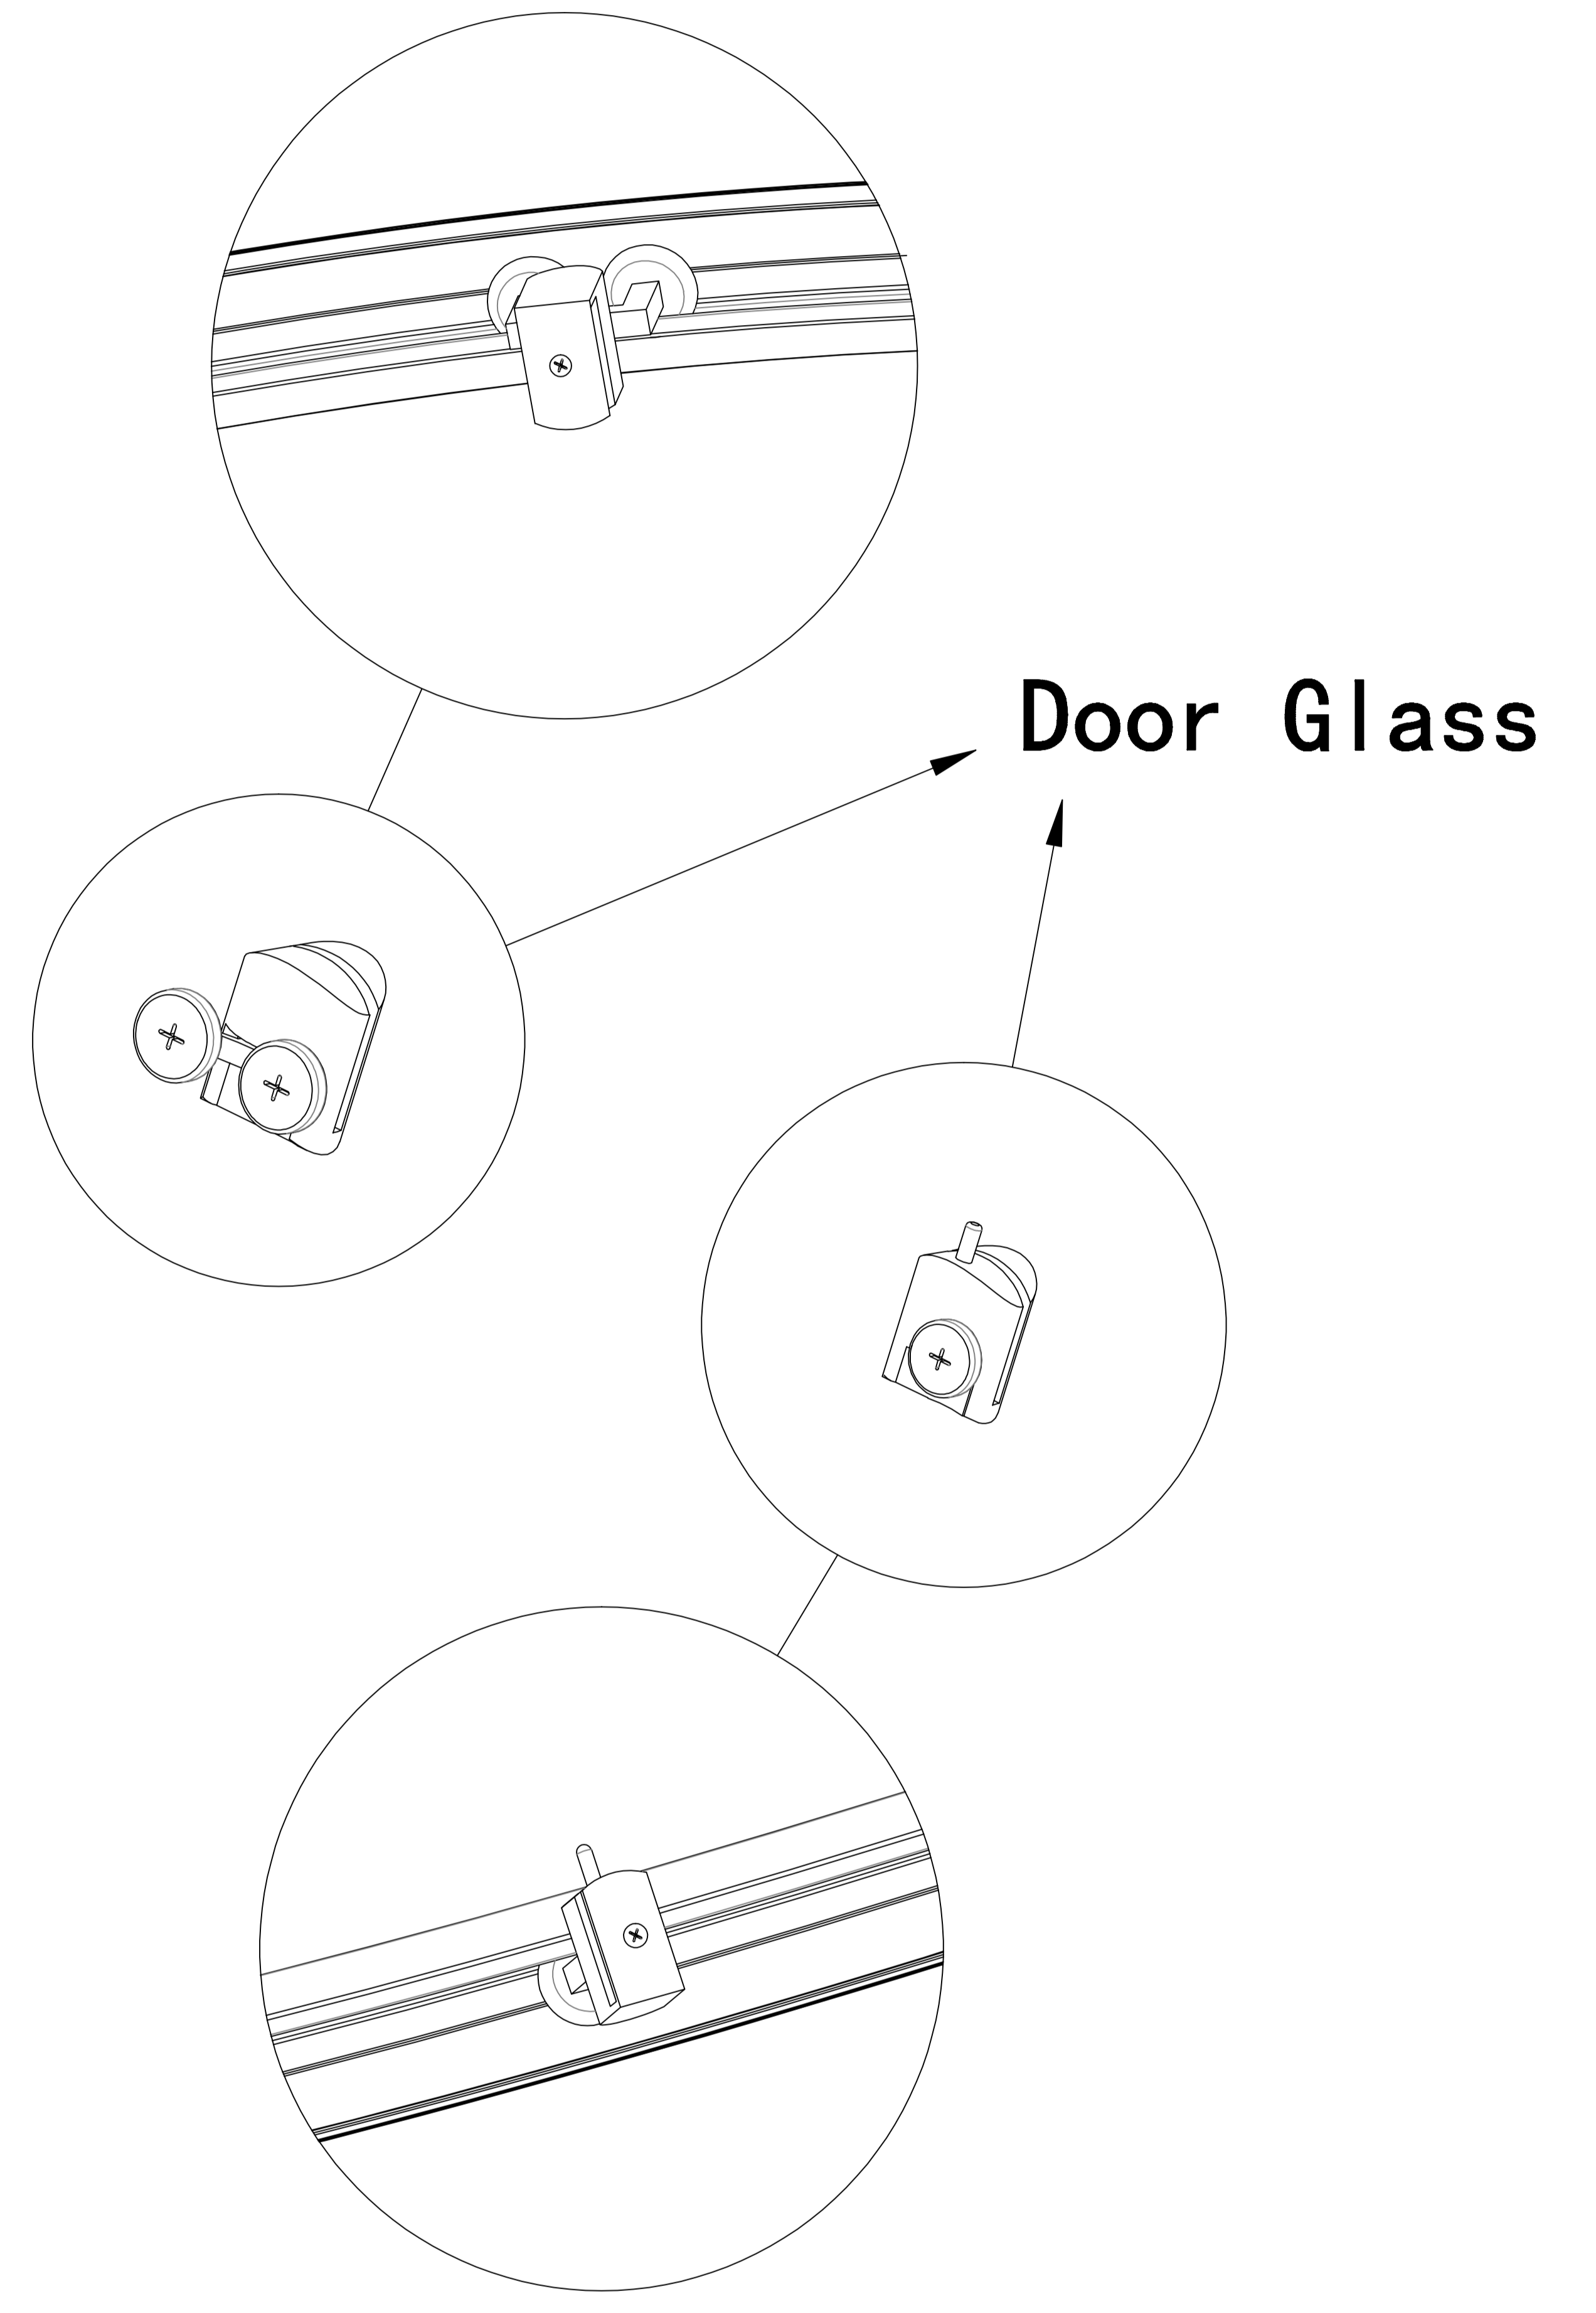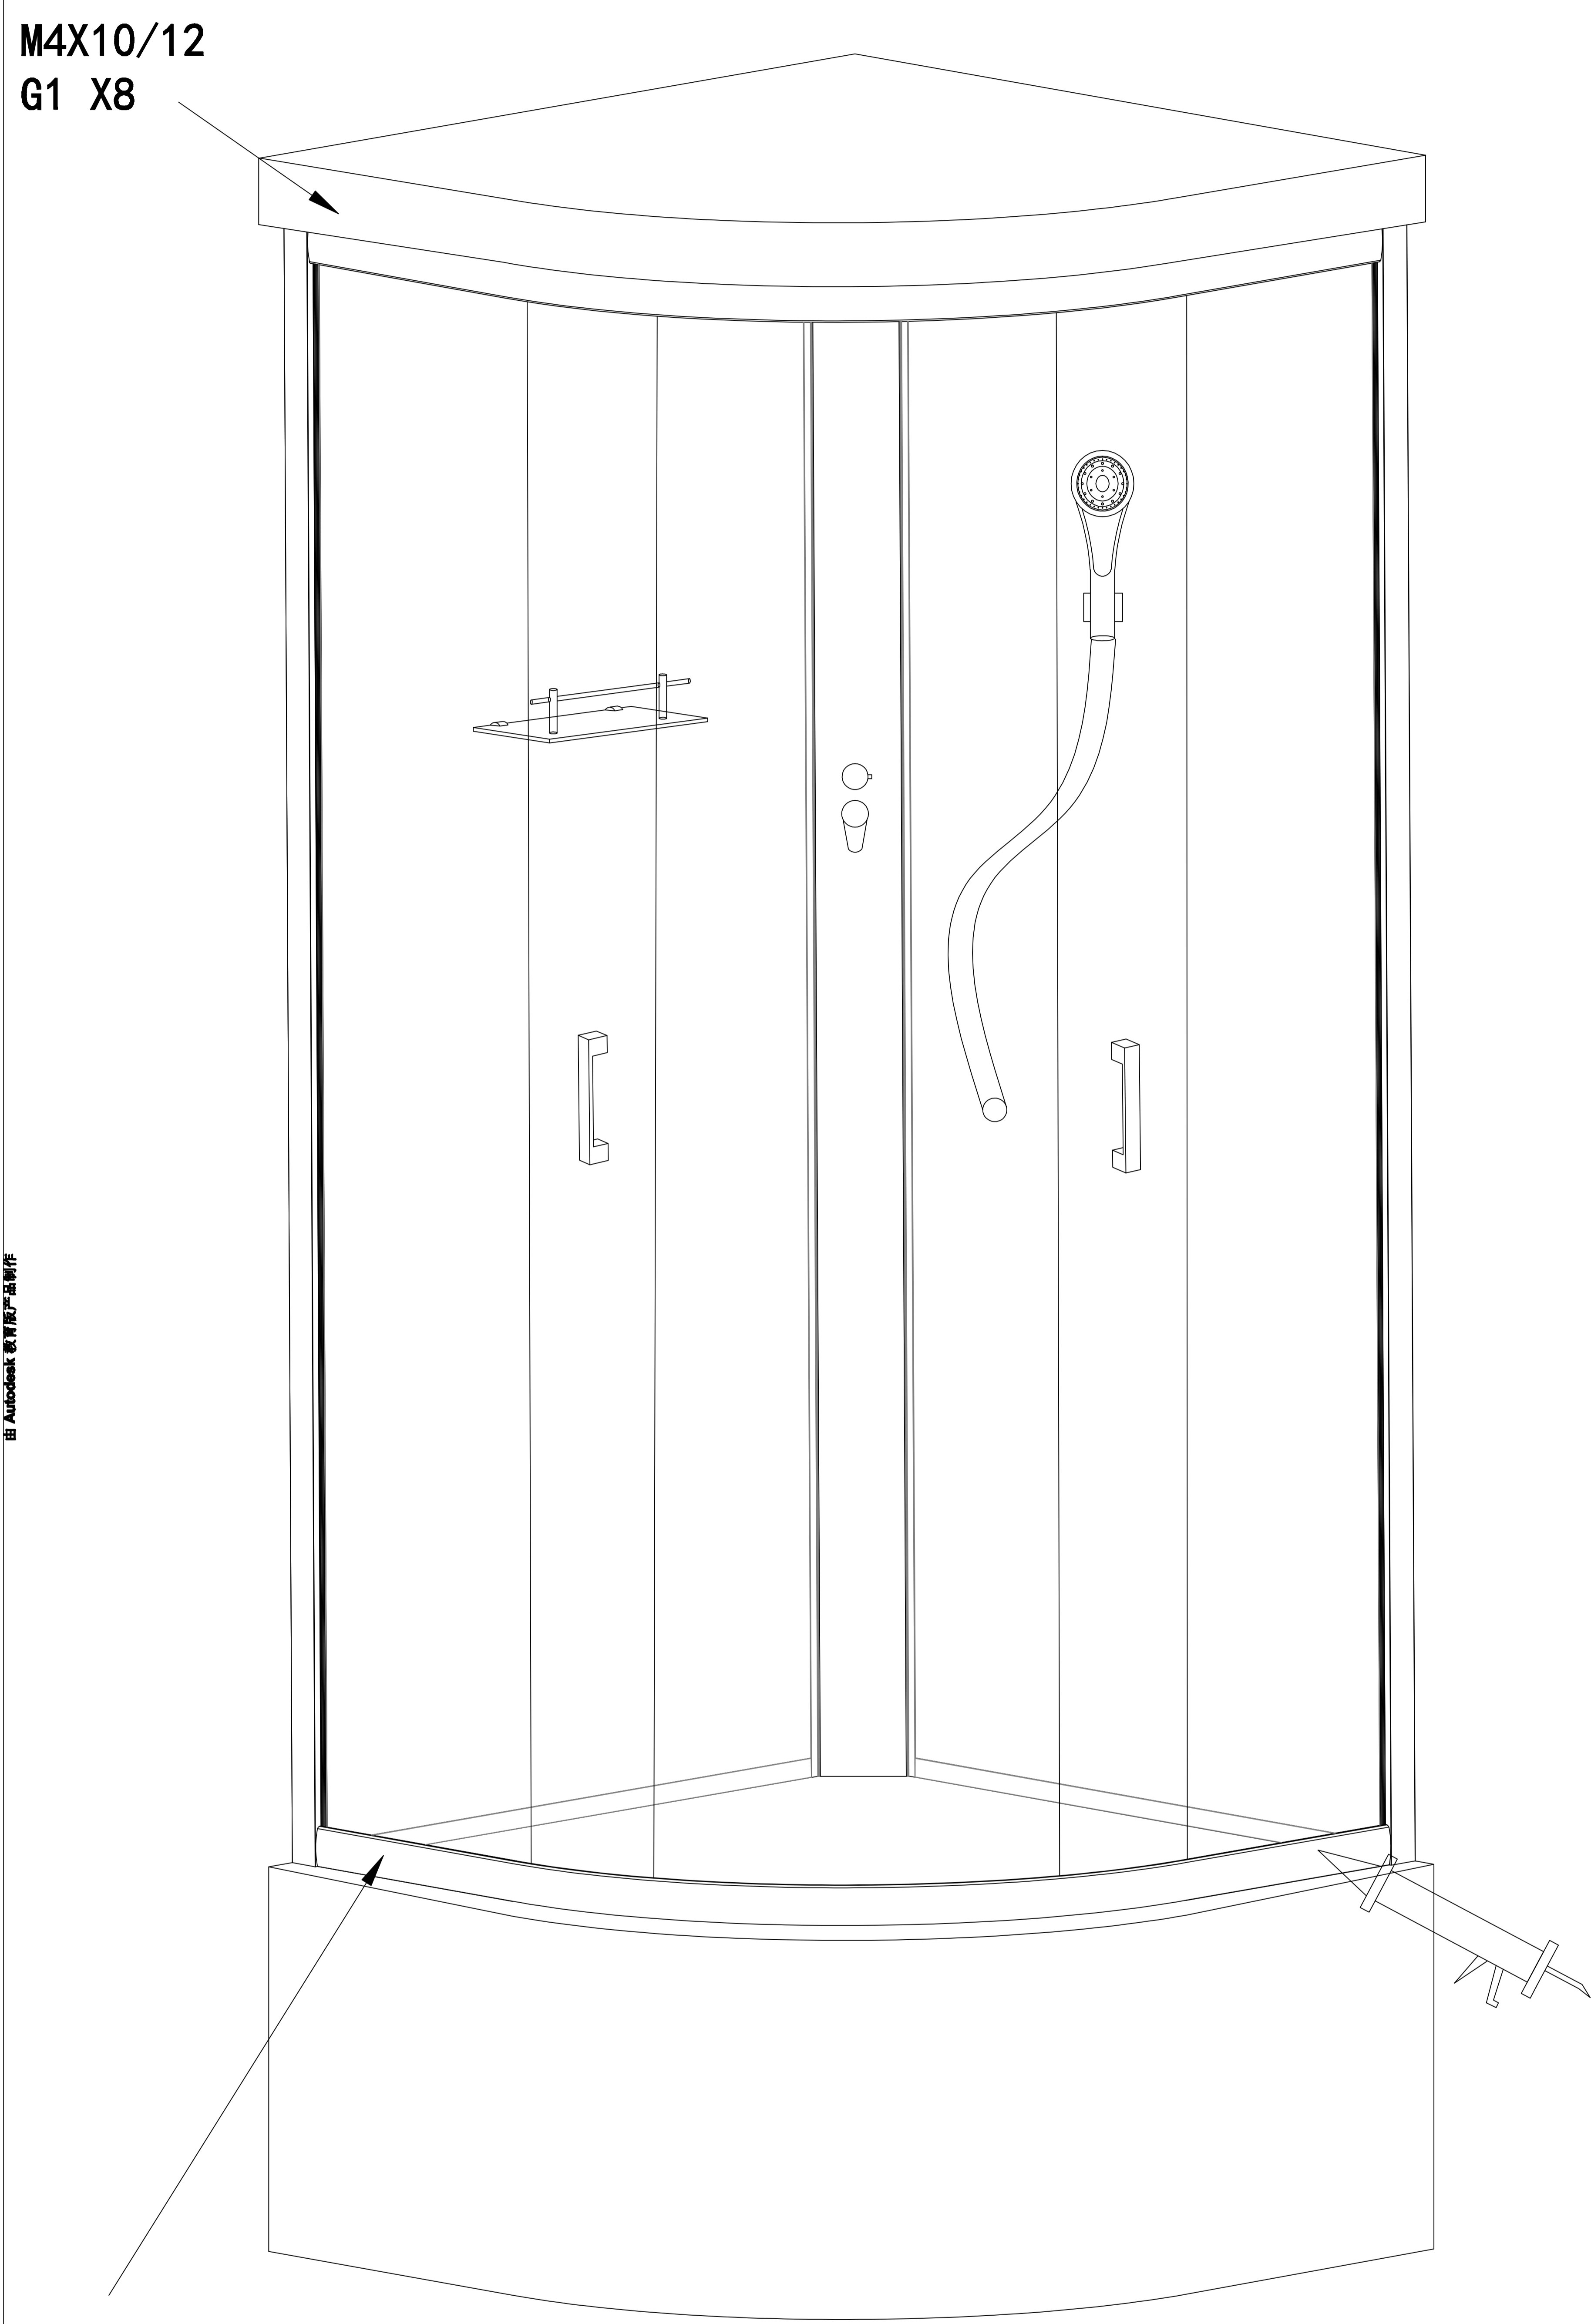

 M4X10/12
G1 X8

99814