


HIGS

T001

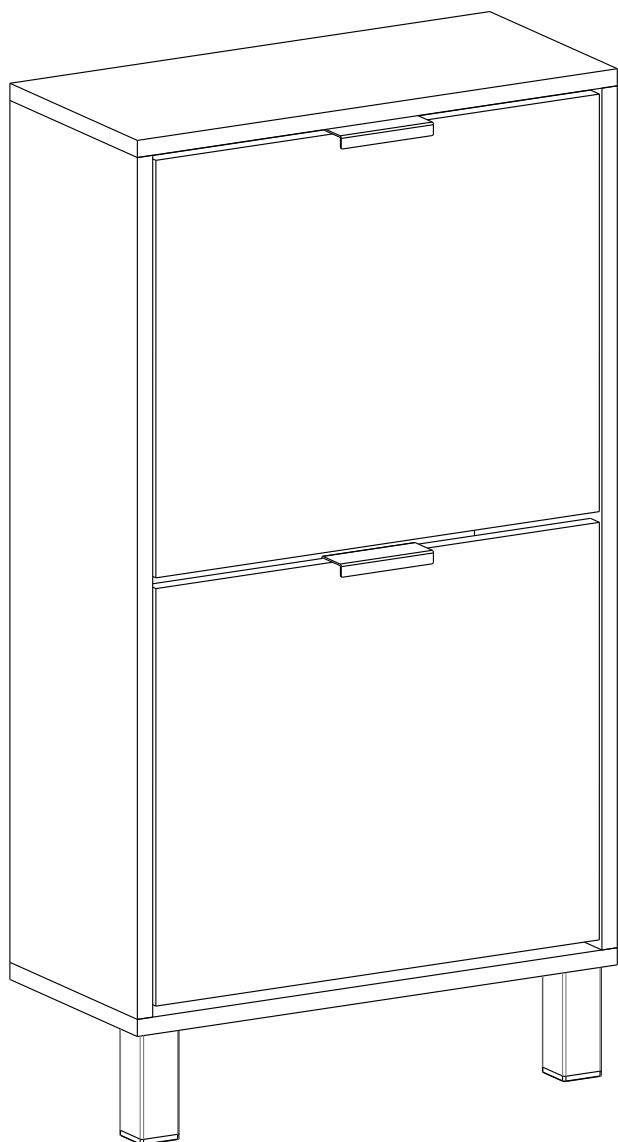


УЗНАВАЙТЕ ПЕРВЫМИ О НОВИНКАХ И АКЦИЯХ В НАШИХ СОЦСЕТЯХ /
PLEASE CHECK OUT OUR SOCIAL MEDIA ACCOUNTS TO FIND OUT ABOUT
NEWS AND PROMOTIONS


КАЛИФОРНИЯ
МЕБЕЛЬ
малых форм




MEBELMOB.COM

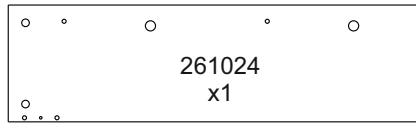


261024
x1

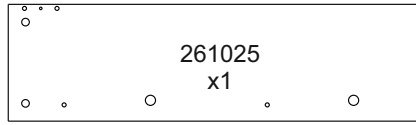


261025
x1

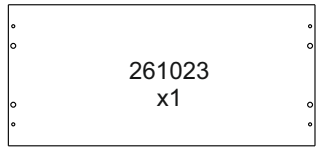


261023
x1

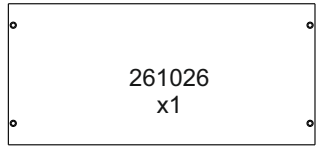


261026
x1

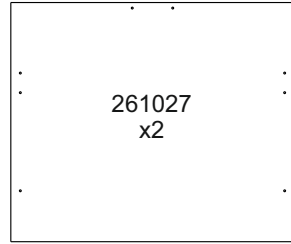


261027
x2




261028
x1




261029
x2




261030
x4

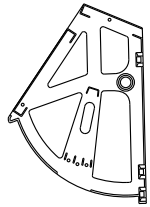


251236-2
x2

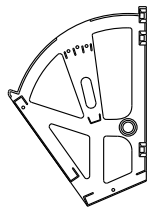


251236-1
x2

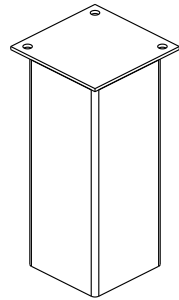


251138
x2



251238
x2

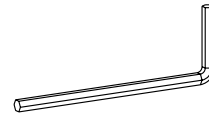


261002
x1




251236-4
x4



251236-5
x4



261236-3
x4



251099
x6



251076
x2



251078
x2



251003
x4



251074
x24




251239
x10




251237
x8








251098
x6




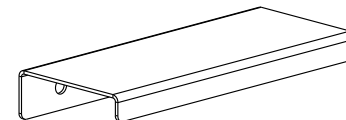


251234
x2

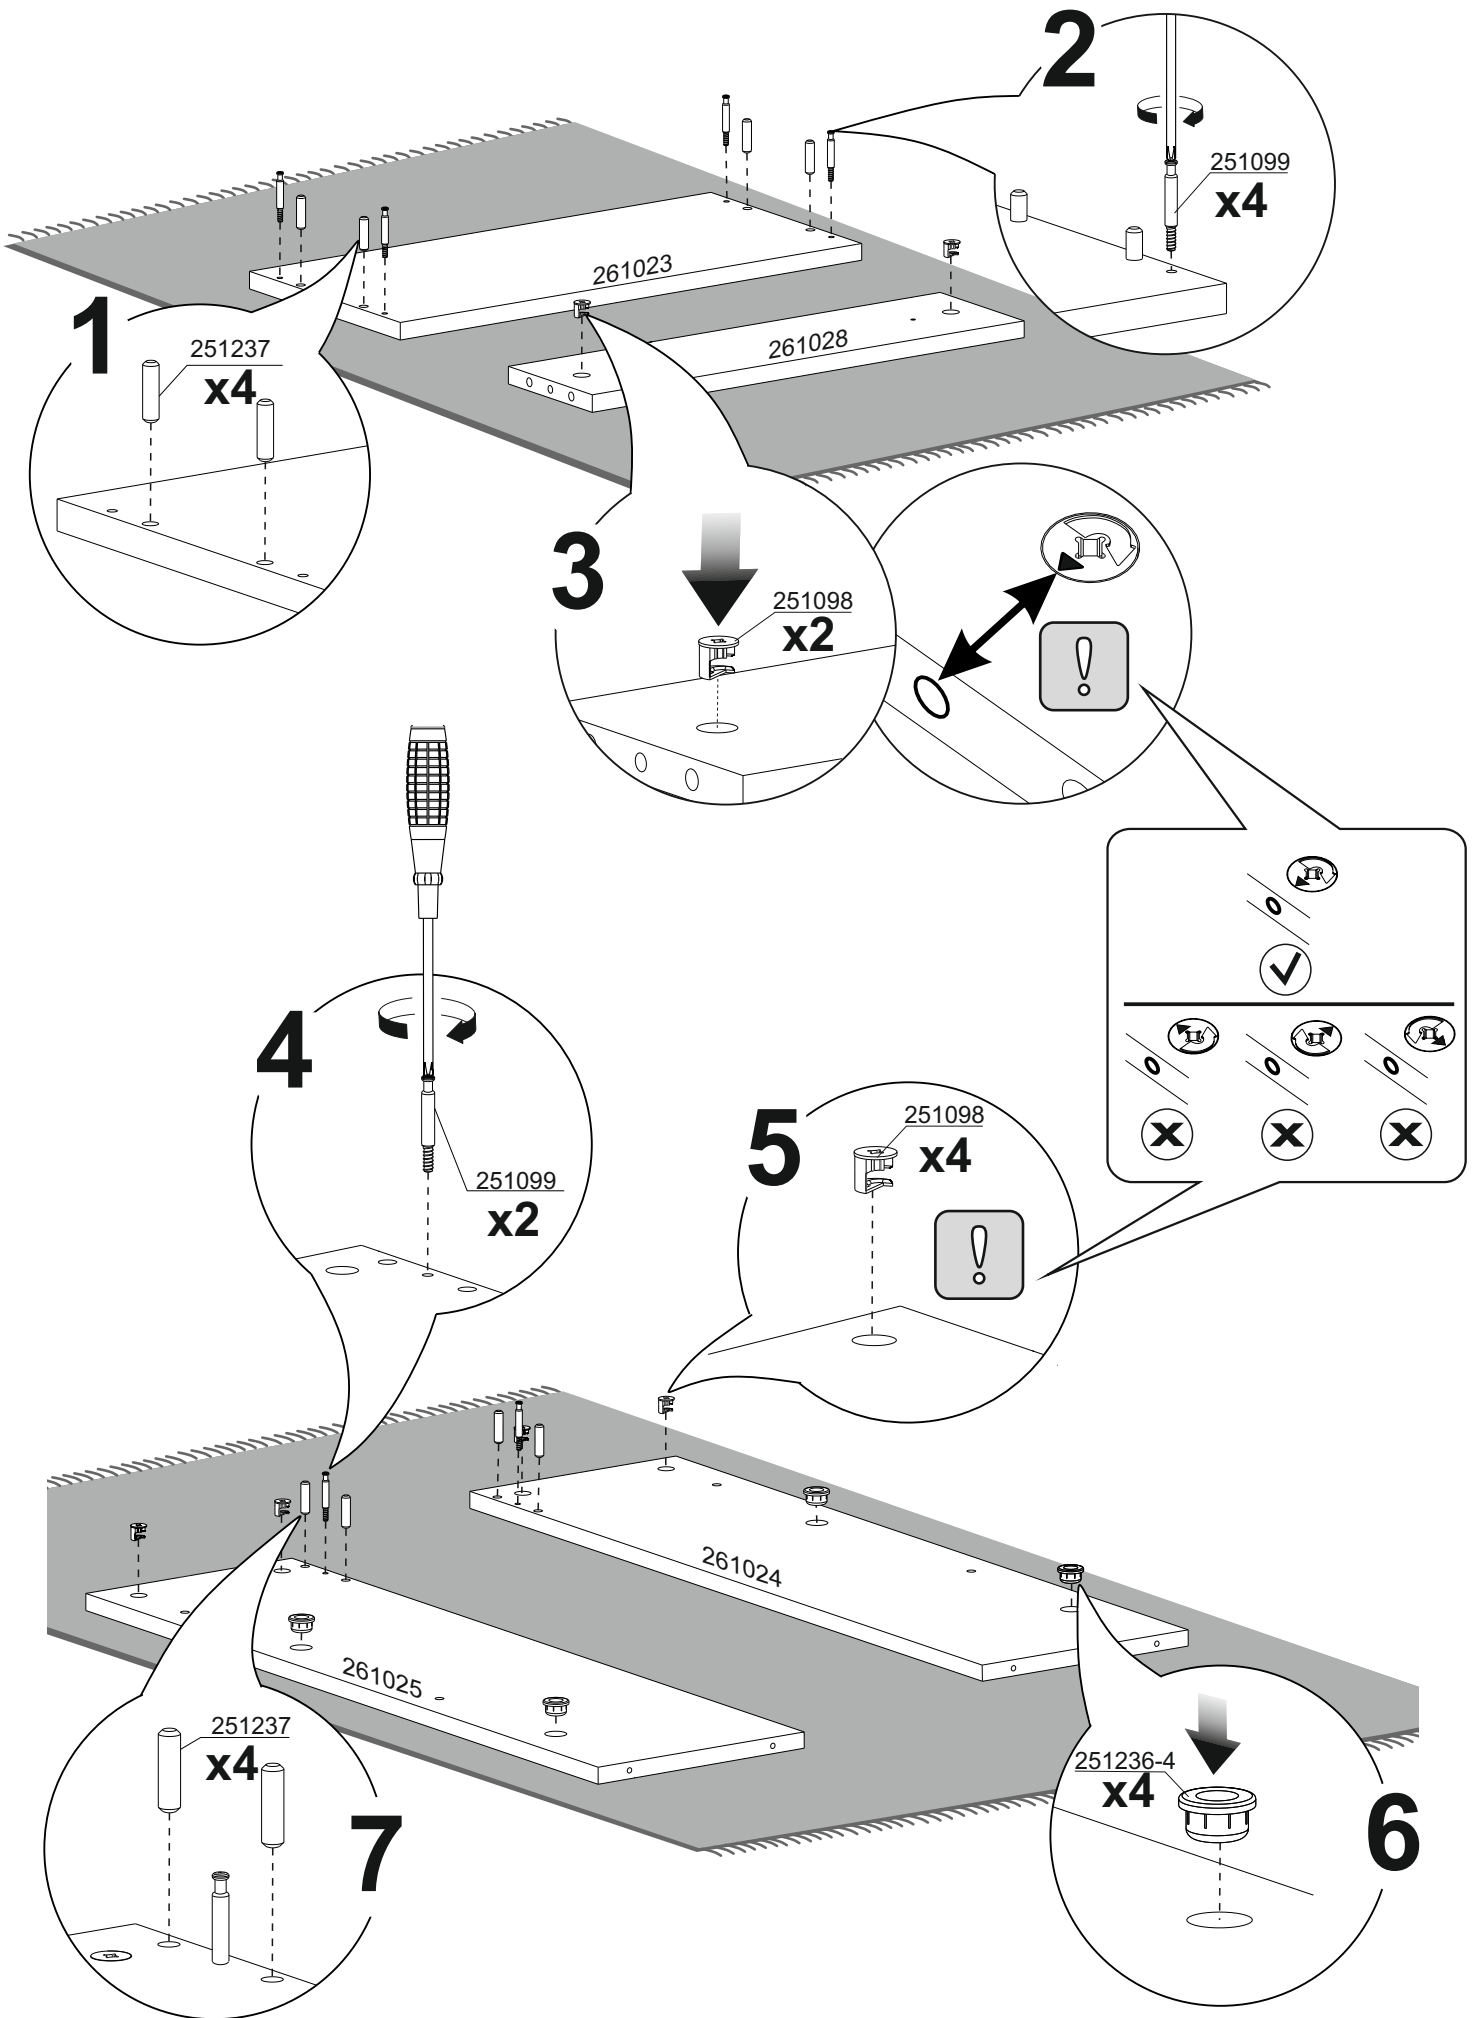

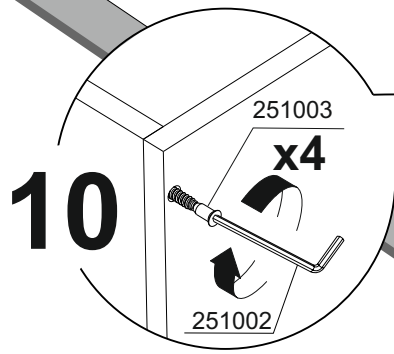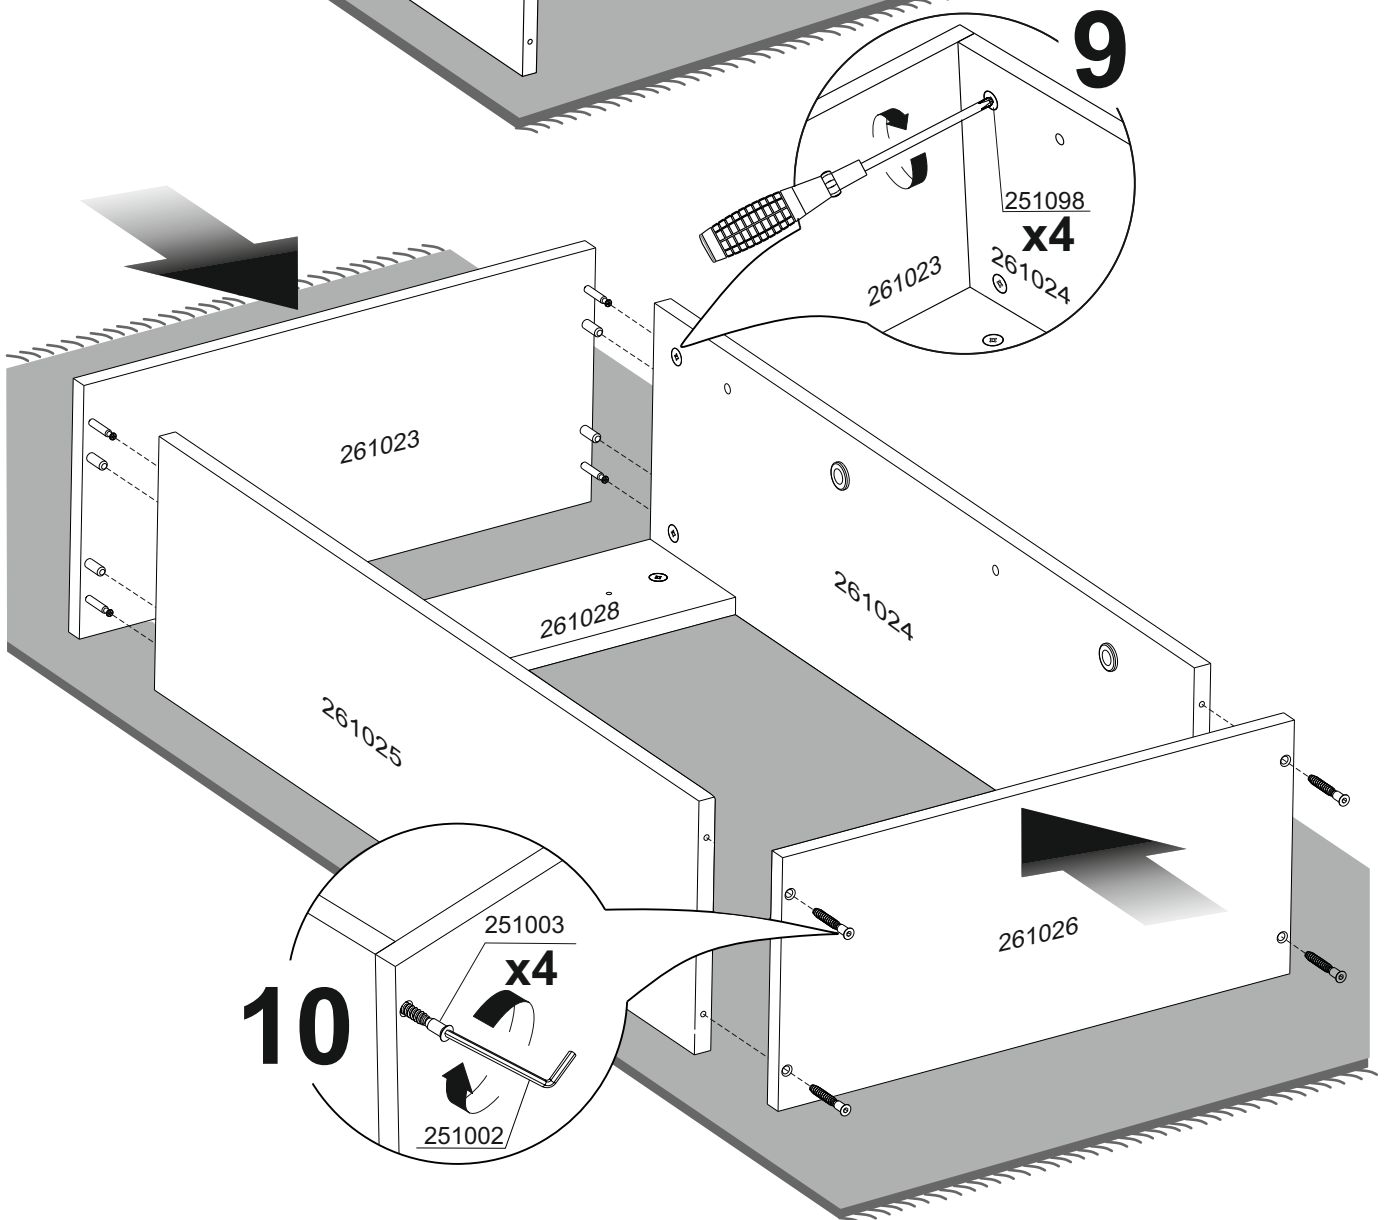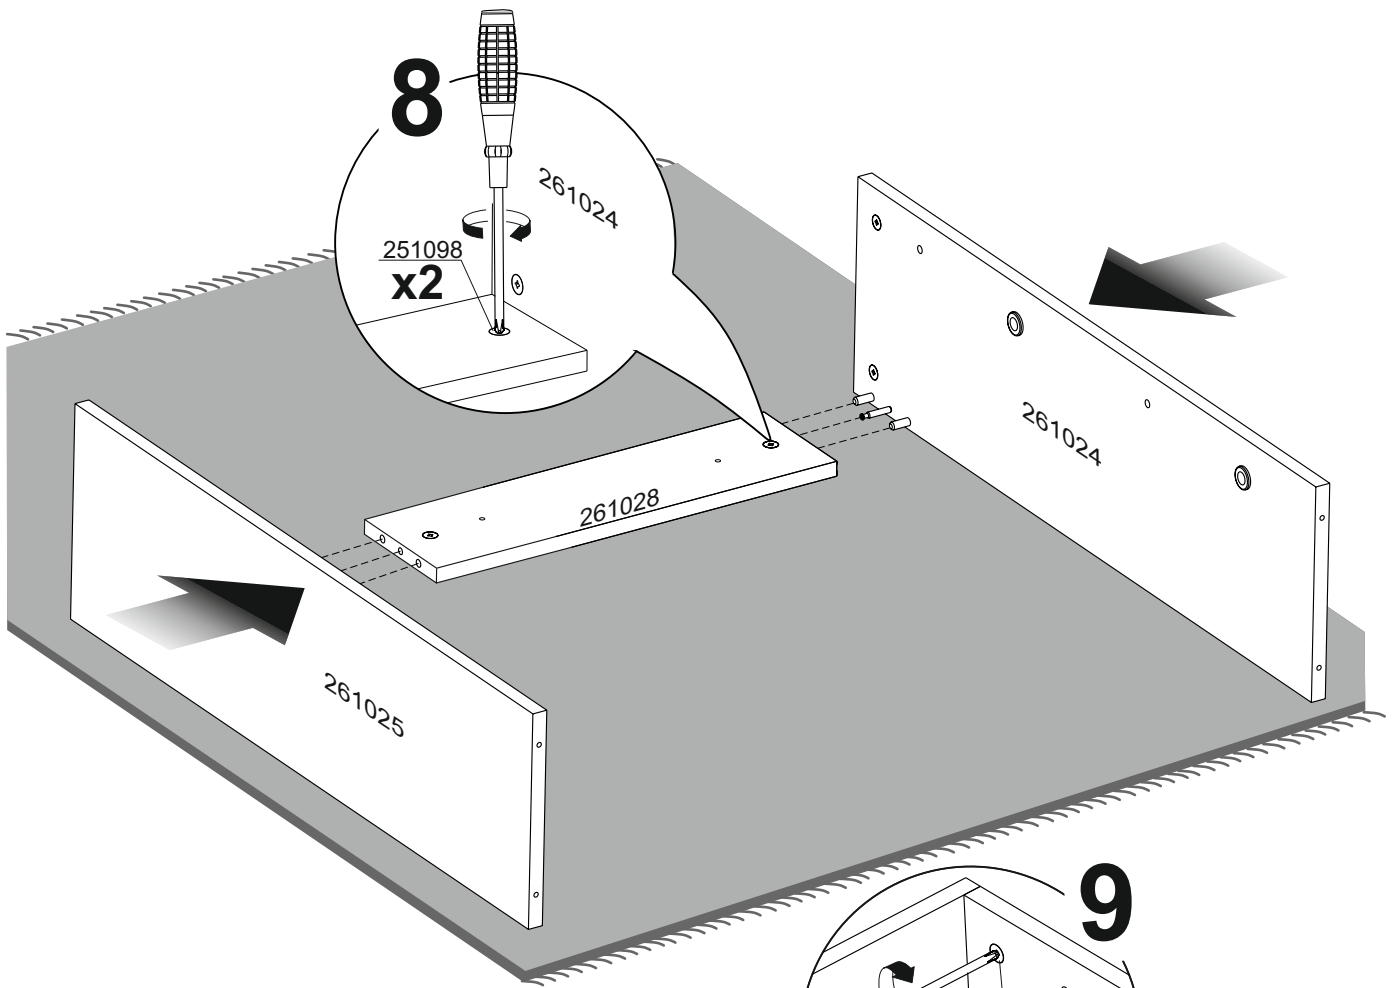

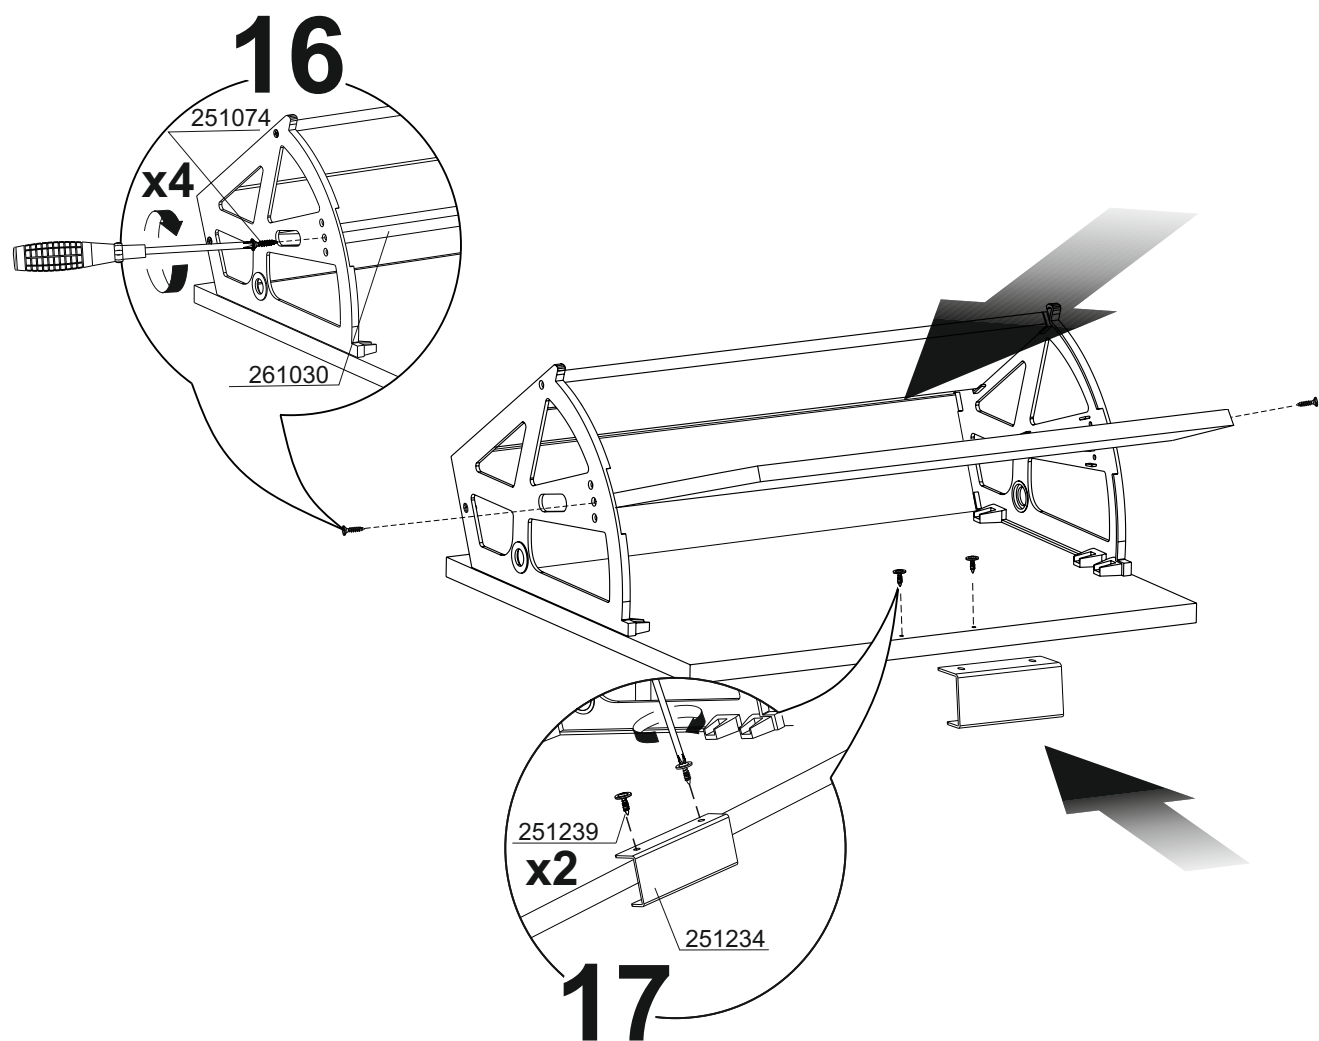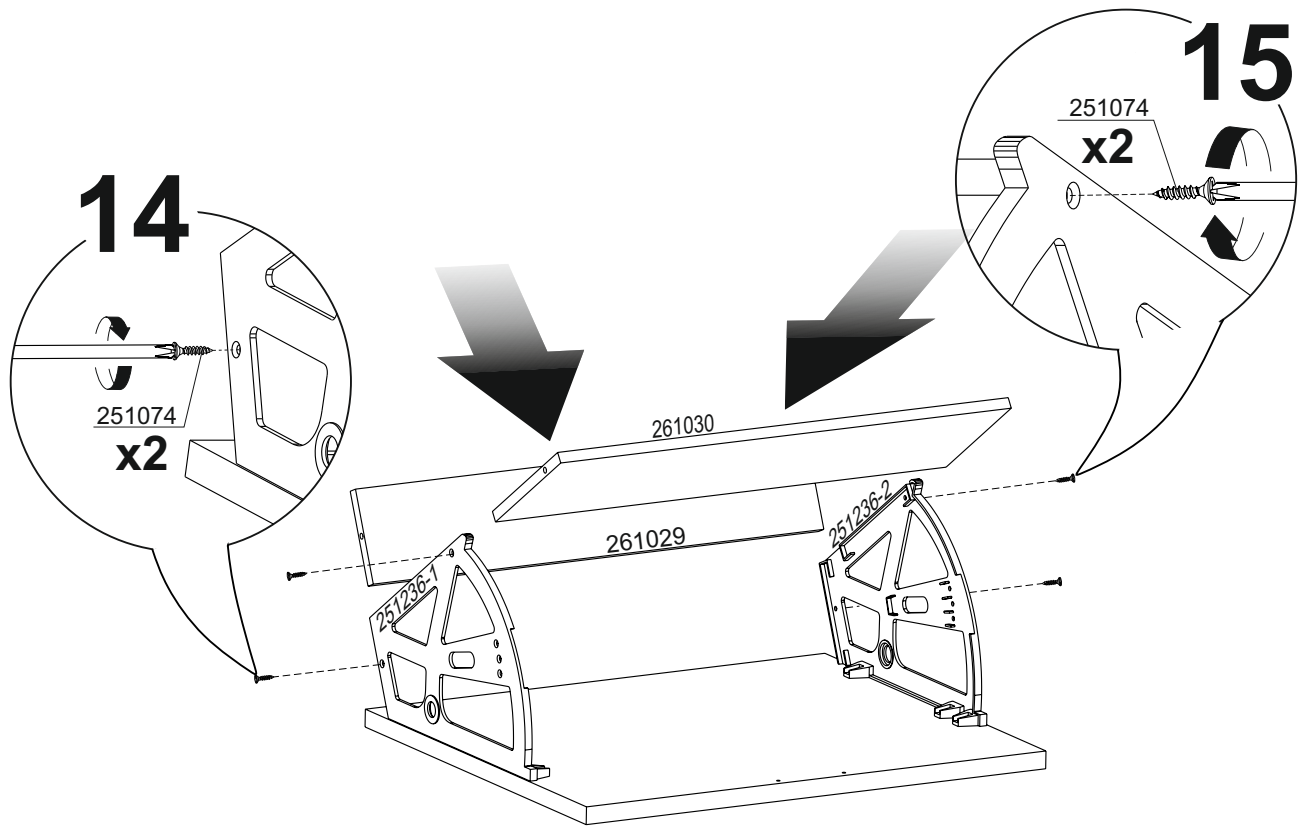

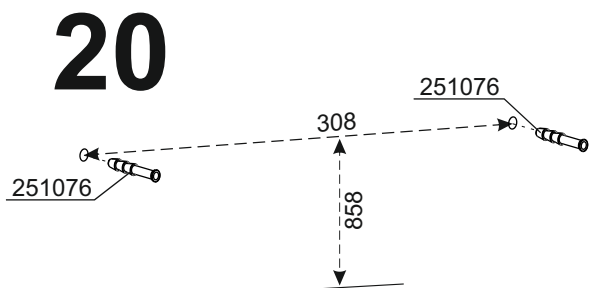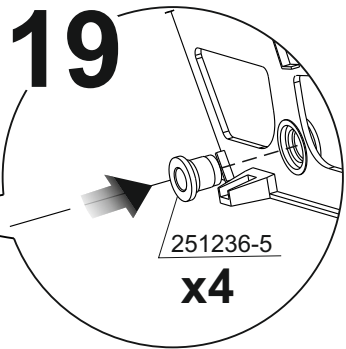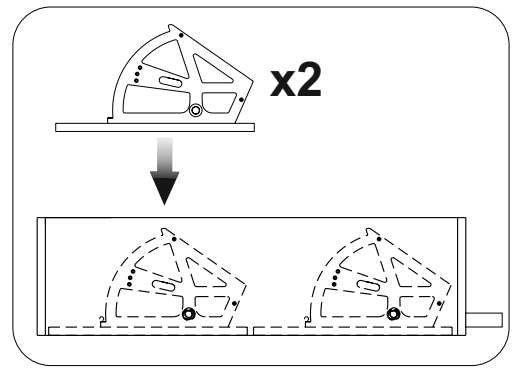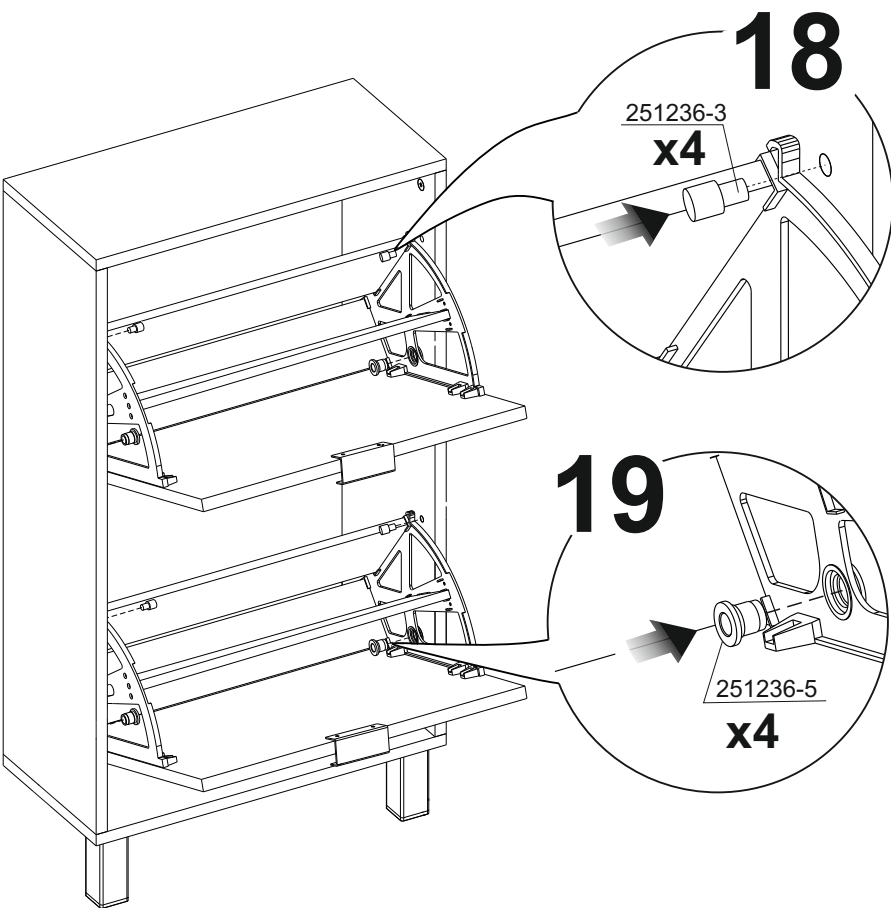

Просверлить отверстия в стене на заданном расстоянии, соблюдая рекомендованную высоту от пола и вставить дюбели (251076).

