

**Model: ROYAL BLACK**

**Code: AB2011B**

**900x900x 2000mm**



[01] x 2



[02] x 2



[03] x 2



[04] x 2



[05]a x 2



[05]b x 2



[06]a x 4



[06]b x 4



[07]a x 1



[07]b x 1



[08] x 2



[09] x 10



[10] x 2




[11] x 2



[12] x 2



[13] x 2



[13] x 6



[14] x 2



[15] x 8  
(M4 x 30mm)











[16] x 10  
(St4 x 12mm)



[17] x 6  
(St4 x 30mm)

## Вам понадобится

Для сборки вашего продукта (Инструменты в комплект не входят)



Silicone sealant




1 помощник




# Assembly

01

Min. & Max	
770	790mm
870	890mm

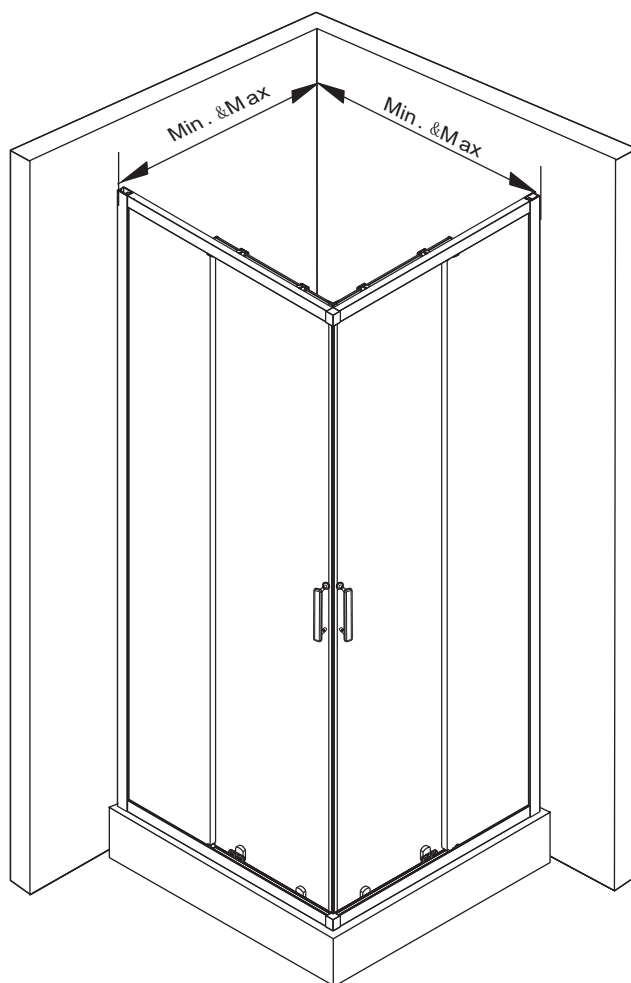

- 3 Перед установкой душевой кабины убедитесь, что душевой поддон в основании правильно установлен и загерметизирован силиконом

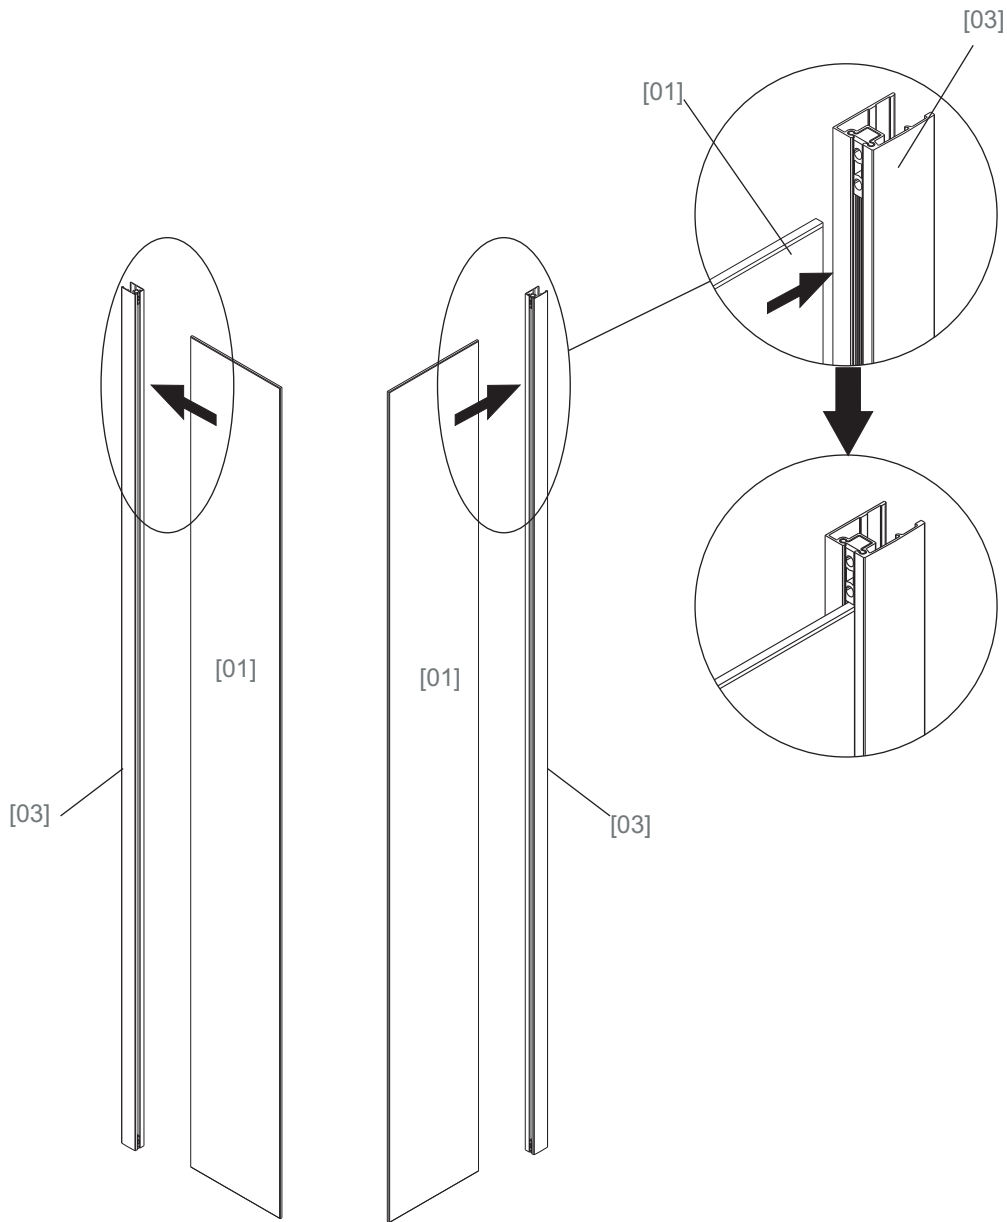

02



[01] x 2



[03] x 2

03








[05]a x 2



[05]b x 2



[15] x 8  
(M4 x 30mm)

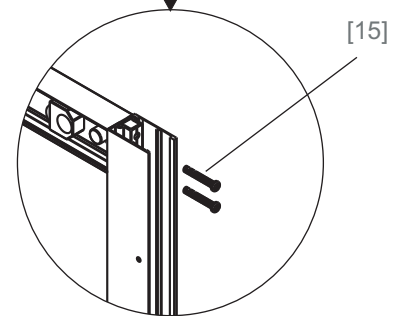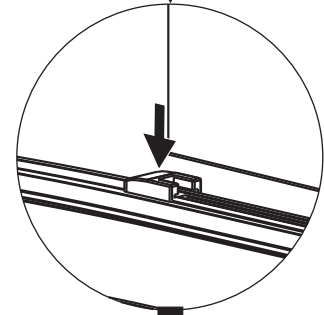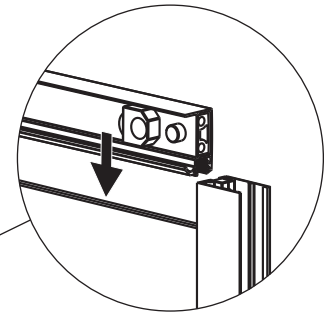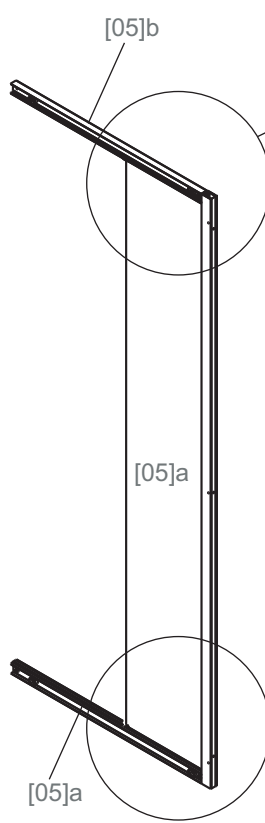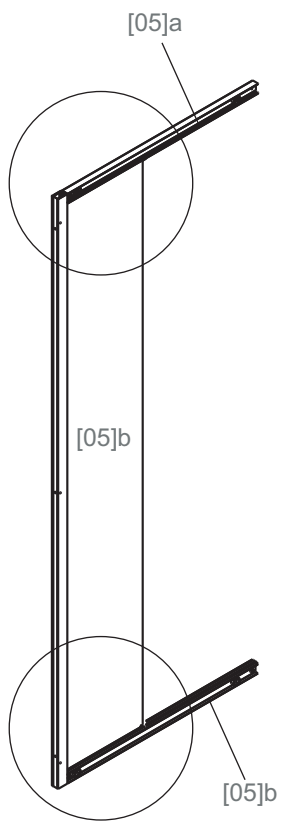


04




[14] x 2



[09] x 4




[16] x 4  
(St4 x 12mm)

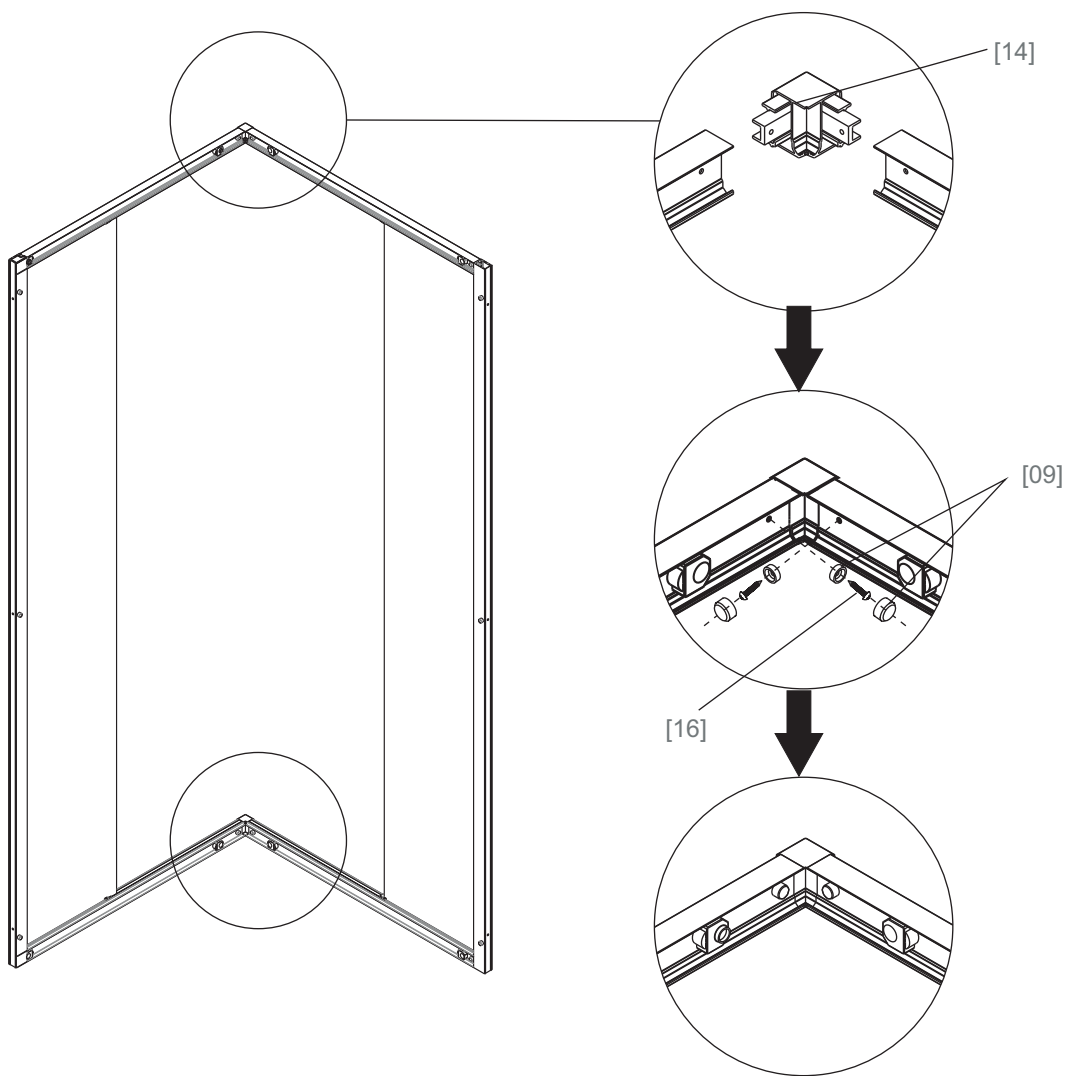


05









[04] x 2



[13] x 6




[17] x 6  
(St4 x 30mm)

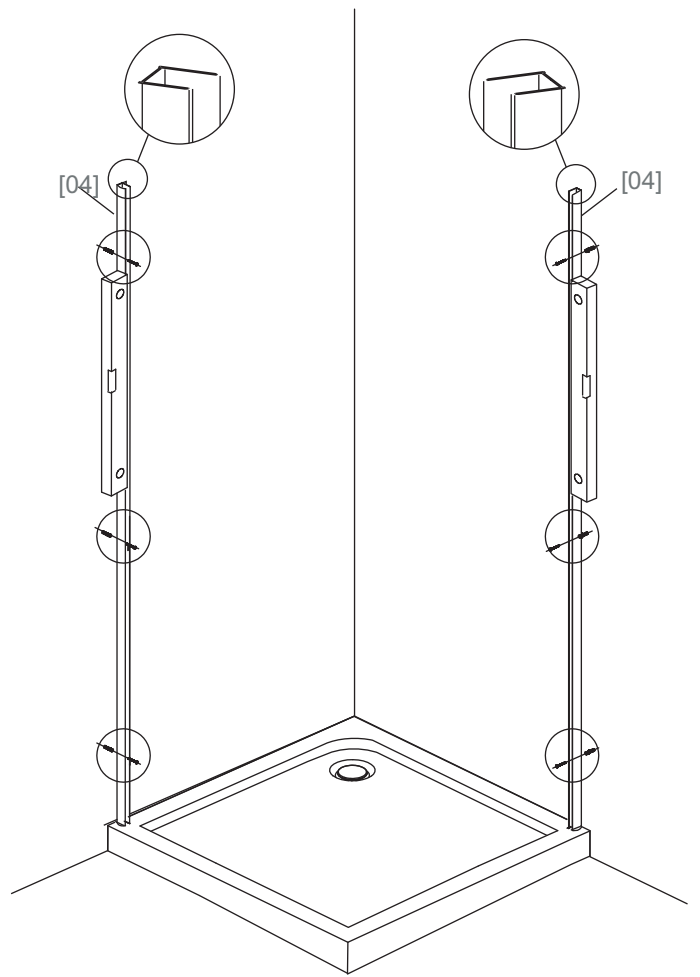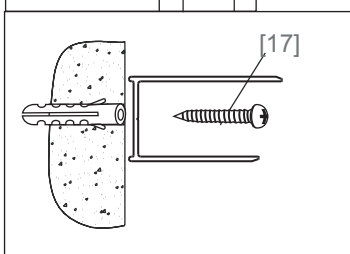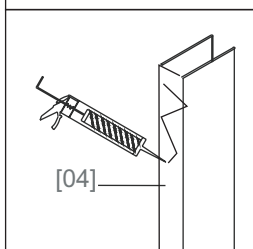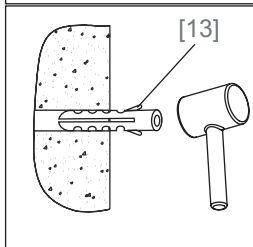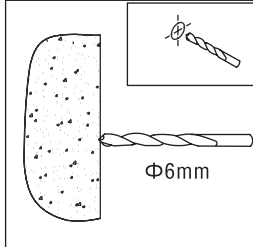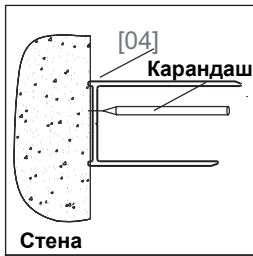

06



[11] x 2

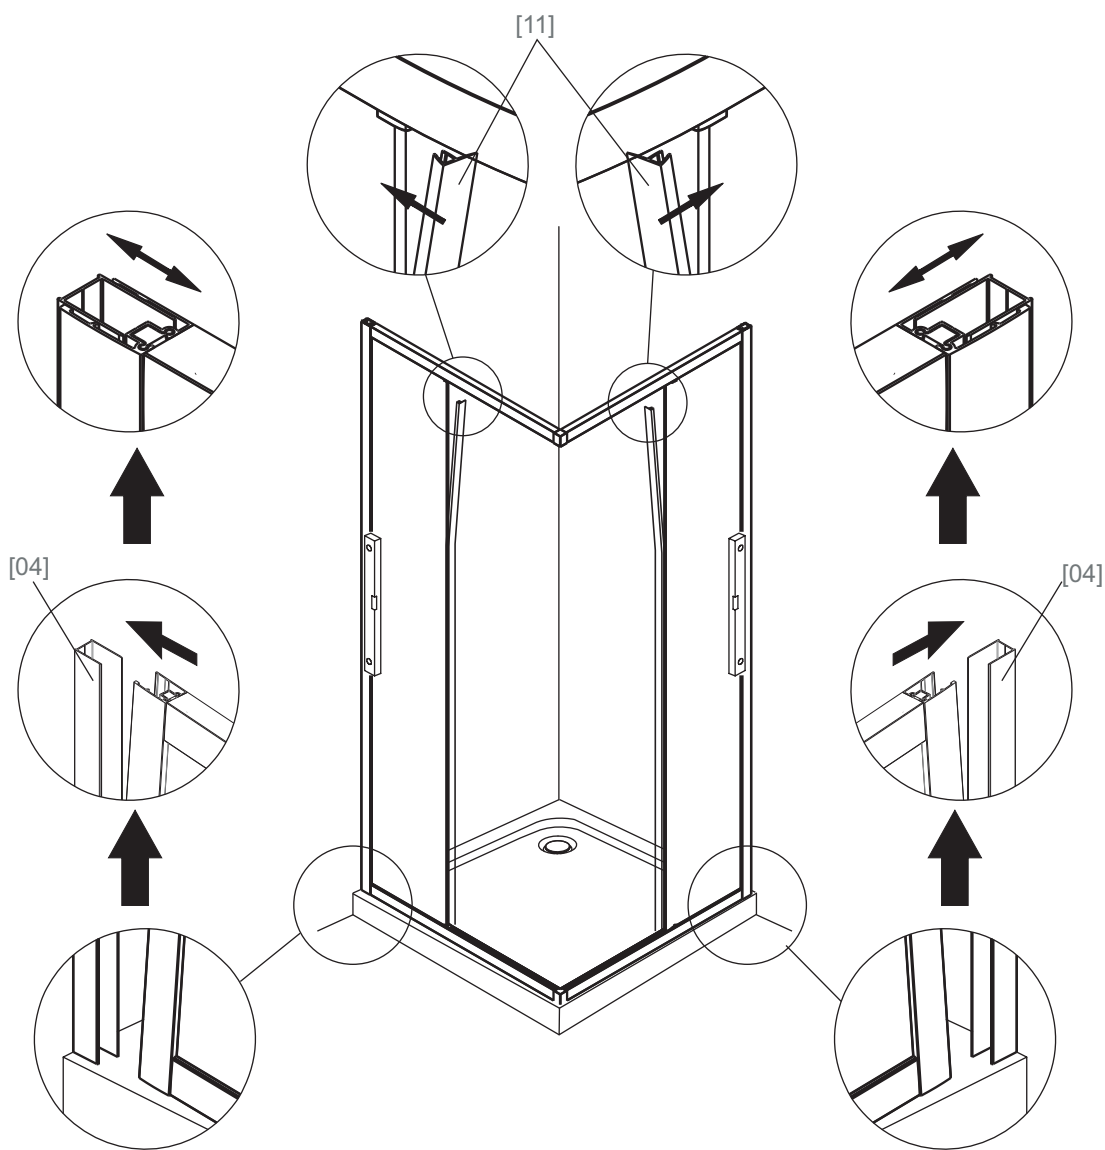



07



[02] x 2






[06]a x 4






[06]b x 4

[06]b

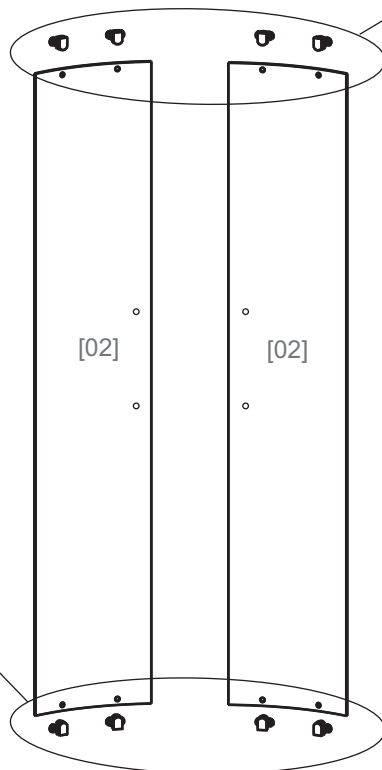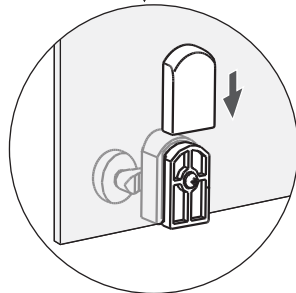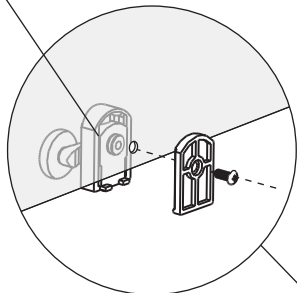

[06]a

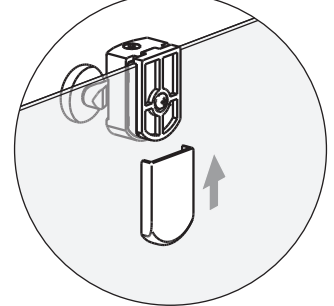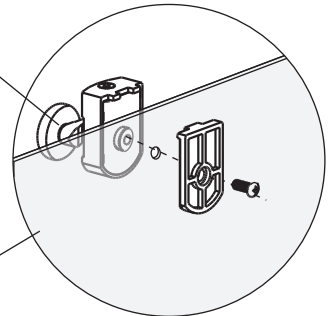

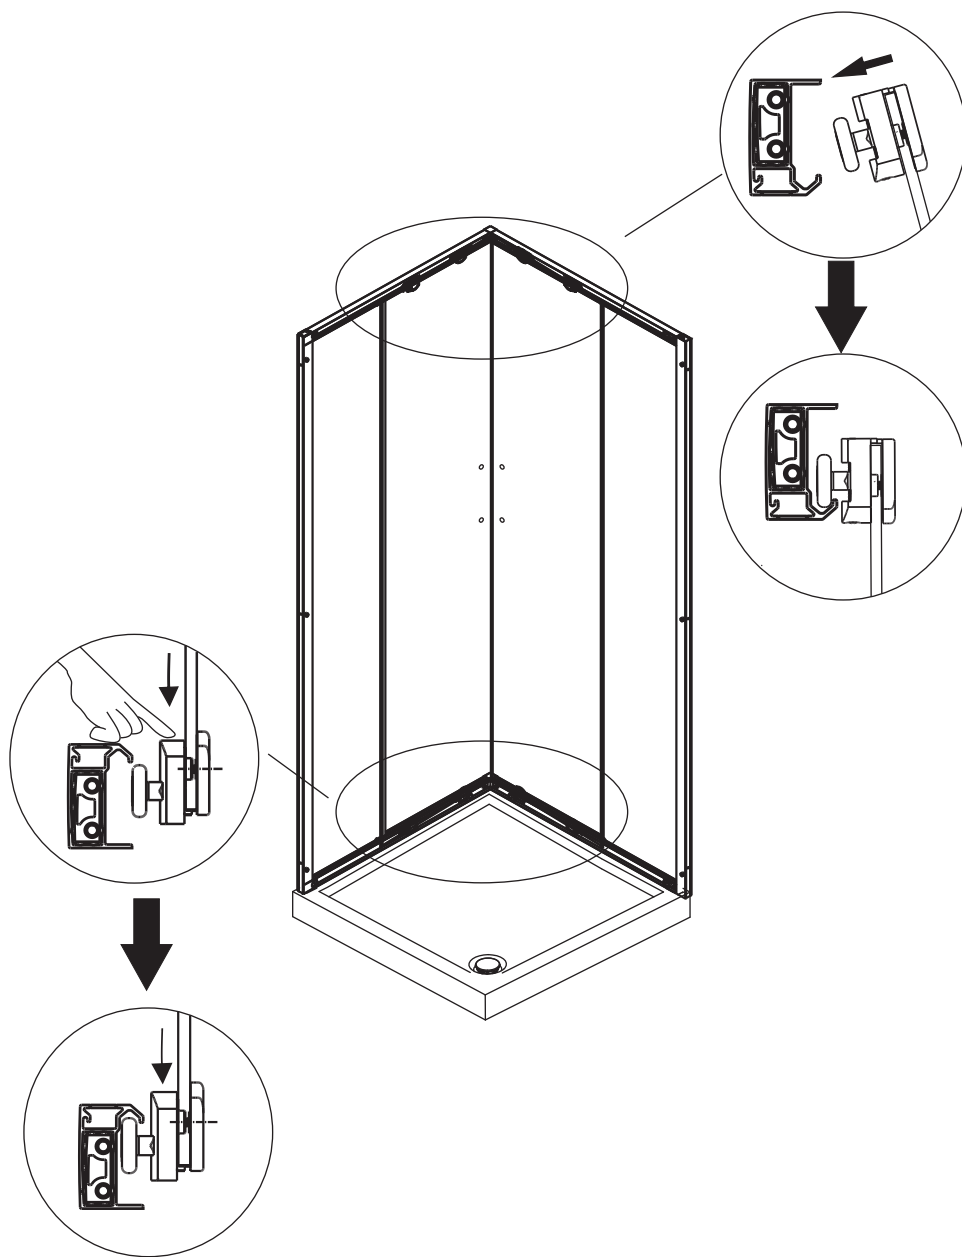


09




[13] x 2



[12] x 2



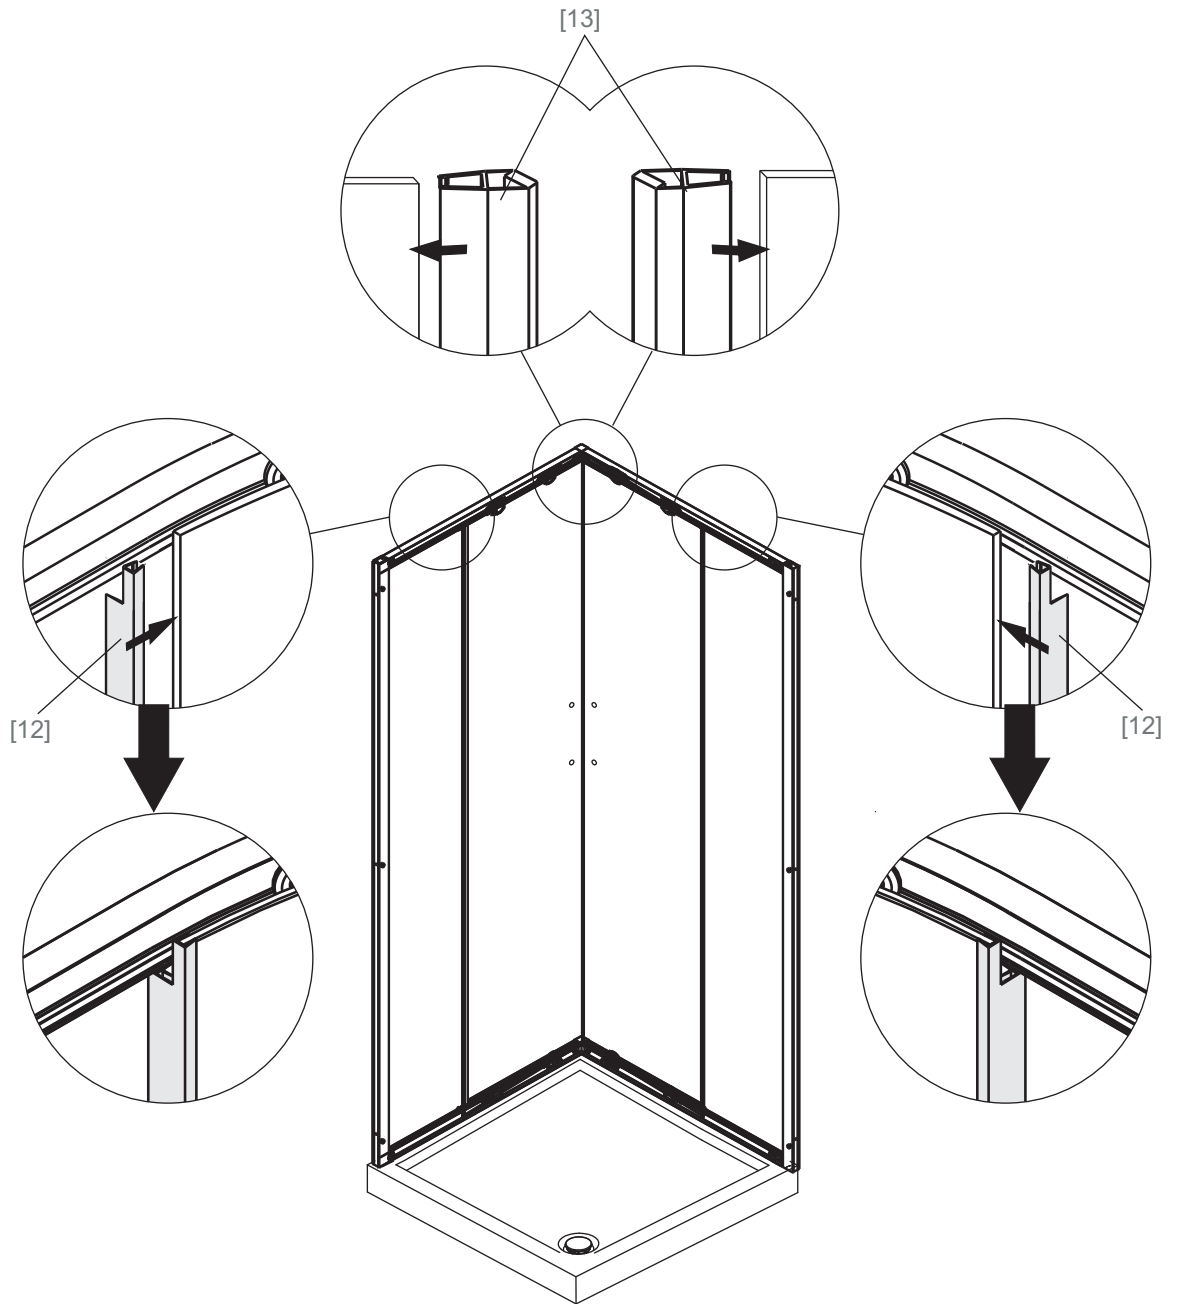


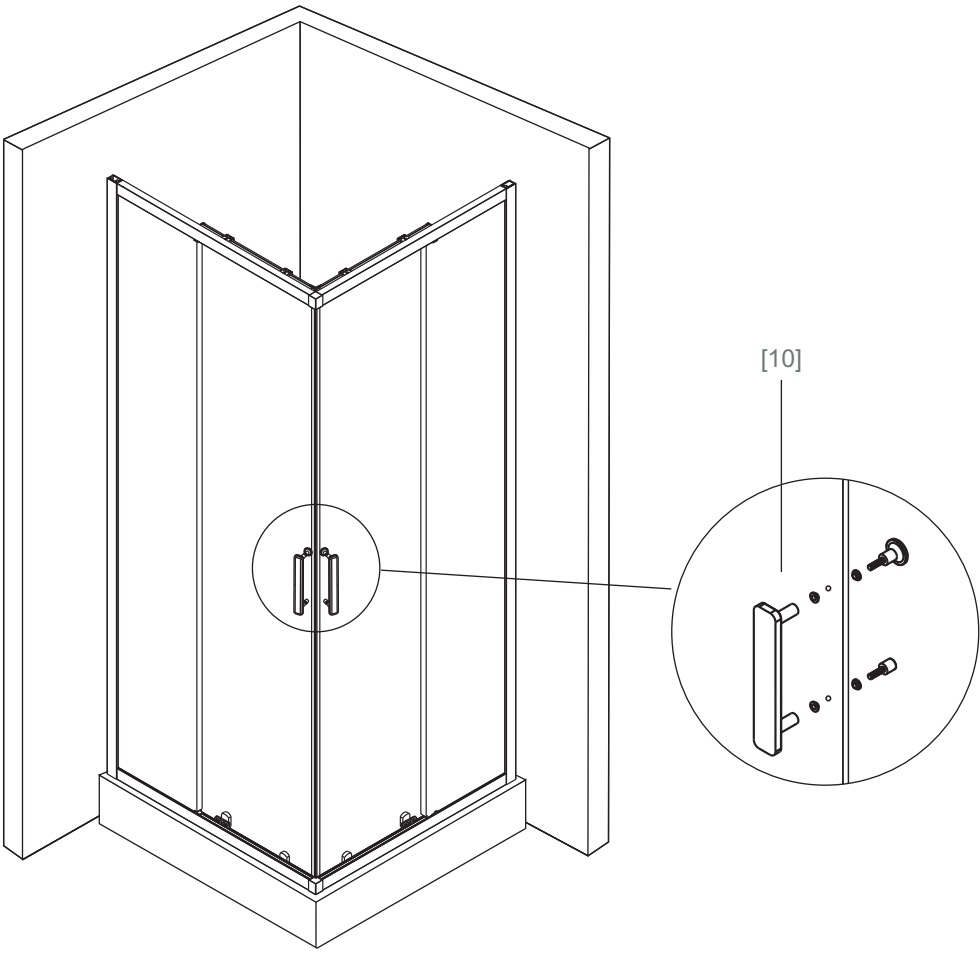

10



[10] x 2

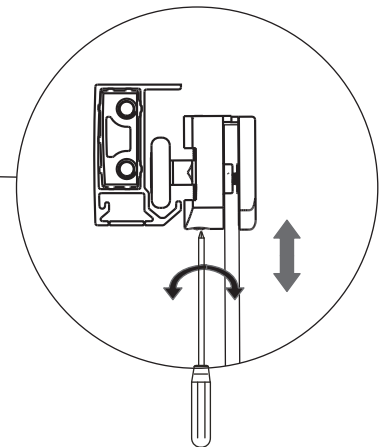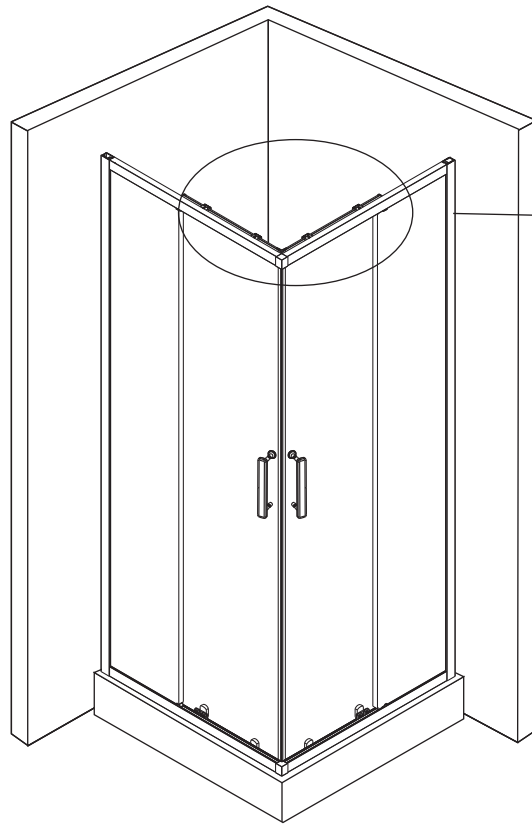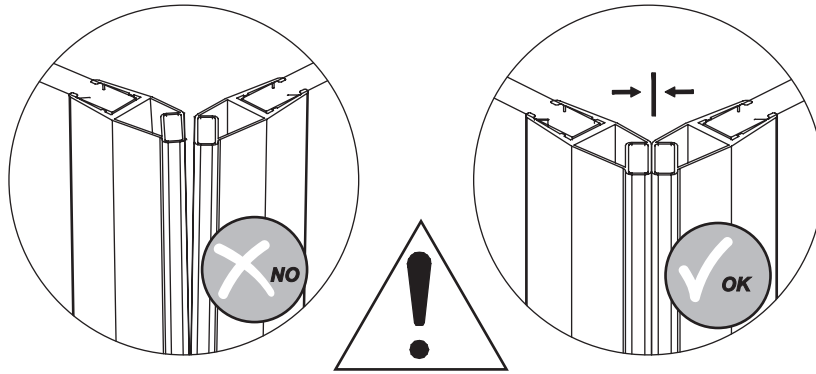


12



[09] x 6



[16] x 6  
(St4 x 14mm)

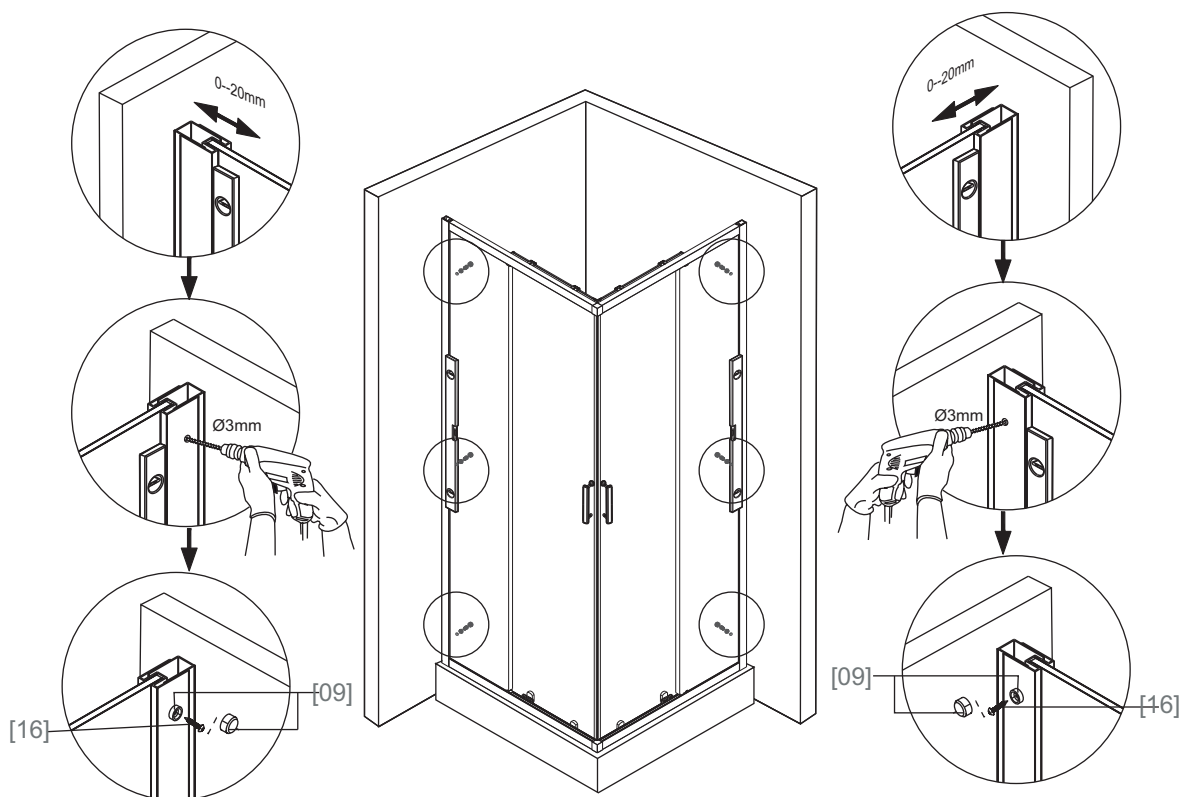

13




[07]a x 1



[07]b x 1



[08] x 2

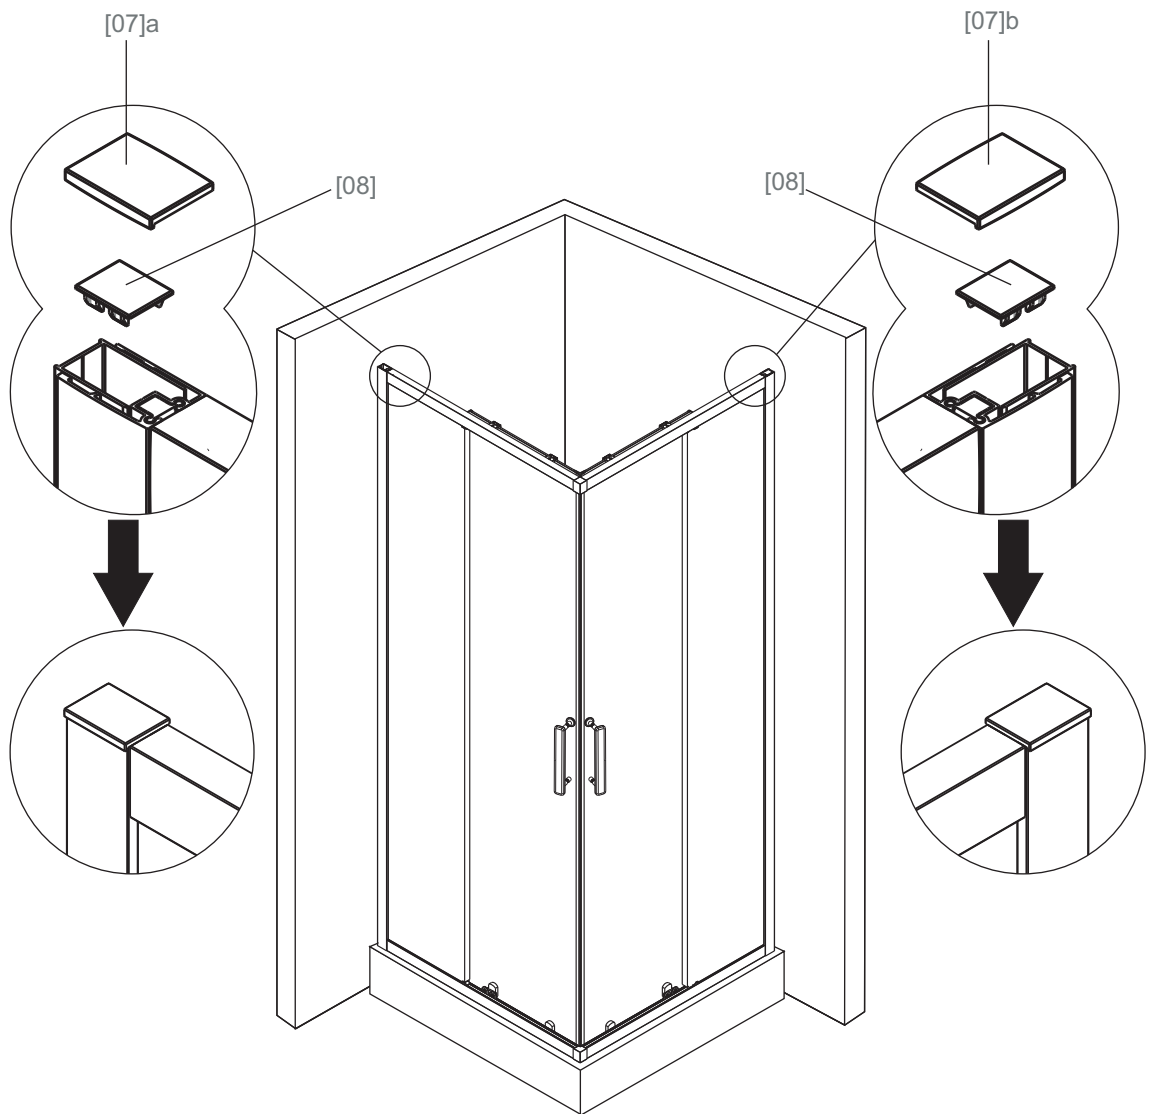

15

