



Art. Nr. 227T001, 227T011

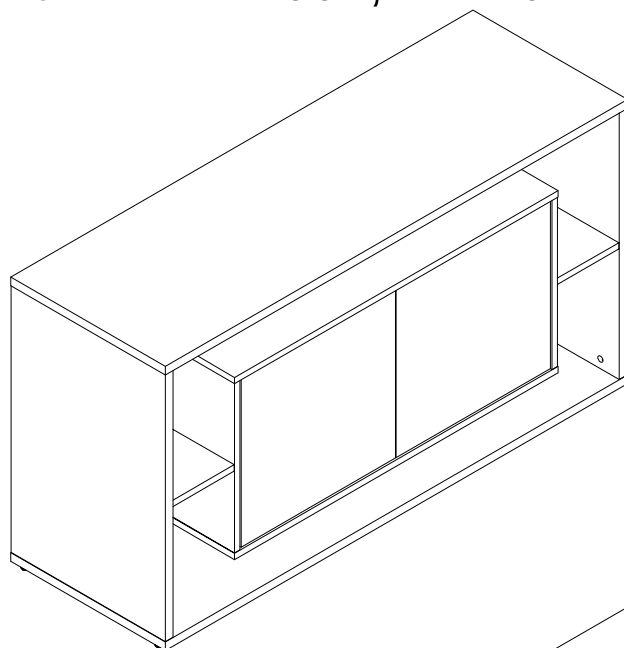

Art. Nr. 227T111

Art. Nr. 227T101

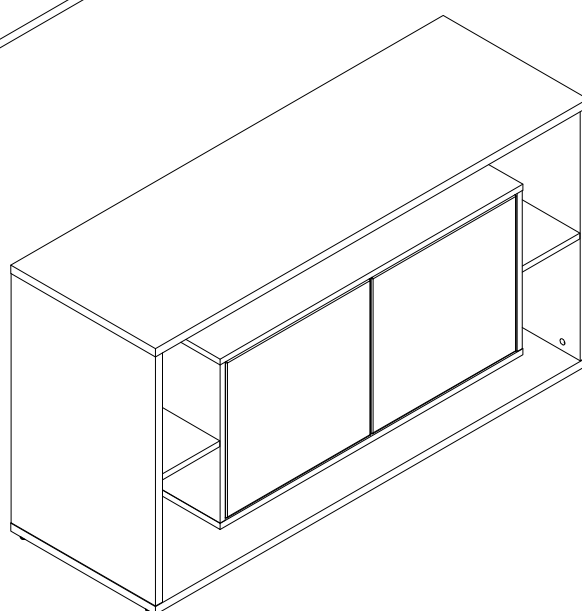

(D) Montageanleitung

(FR) Notice de montage

(NL) Handleiding voor de montage

(CZ) Montážní návod

(HU) Szerelési útmutató

(TR) Montaj talimati

(GB) Assembly instructions




(IT) Istruzioni di montaggio

(PL) Instrukcja montazu





(SK) Návod na montáž

(RO) Instruktiuni de montaj

(RU) Инструкция по монтажу

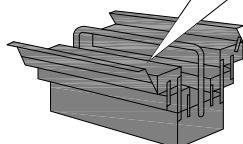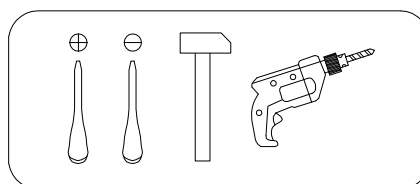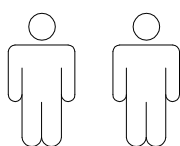



A 090913  7x32 x40	B 000146  15x12 x20	C 000147  15x16 x20	D 000151  8x35 x40	E 135021  x12	F 062367  x2
G 000759  3x20 x14	H 168847  x4	I 235594  6.3x16 x8	J 010942  4x16 x8	K 156593  x2	L 000762  3.5x13 x4
M 155999  x2	N 000754  3.5x16 x4	O 090185  4.5x45 x2	P 013859  8x40 x2	Q 007085  M6 x5	R 007086  M6 x5
S 100640  20x0.5 x28					




N	Size/MaB (mm)	Qty	✓	N	Size/MaB (mm)	Qty	✓
1	450x107x22	2		7	944x451x16	1	
2	225x107x22	2		8	180x449x16	2	
3	1348x451x22	1		9	428x450x16	2	
4	1348x451x22	1		10	428x408x16	1	
5	674x450x22	2		11	422x450x16	2	
6	944x451x16	1		12	438x459x3	2	

Service - Dienstverlening - Serwis - Servis - Сервисная служба

Name - Naam - Nazwa - Isim - Название







Nr. - No. - Номер

Typ - Type - Тип - Тип

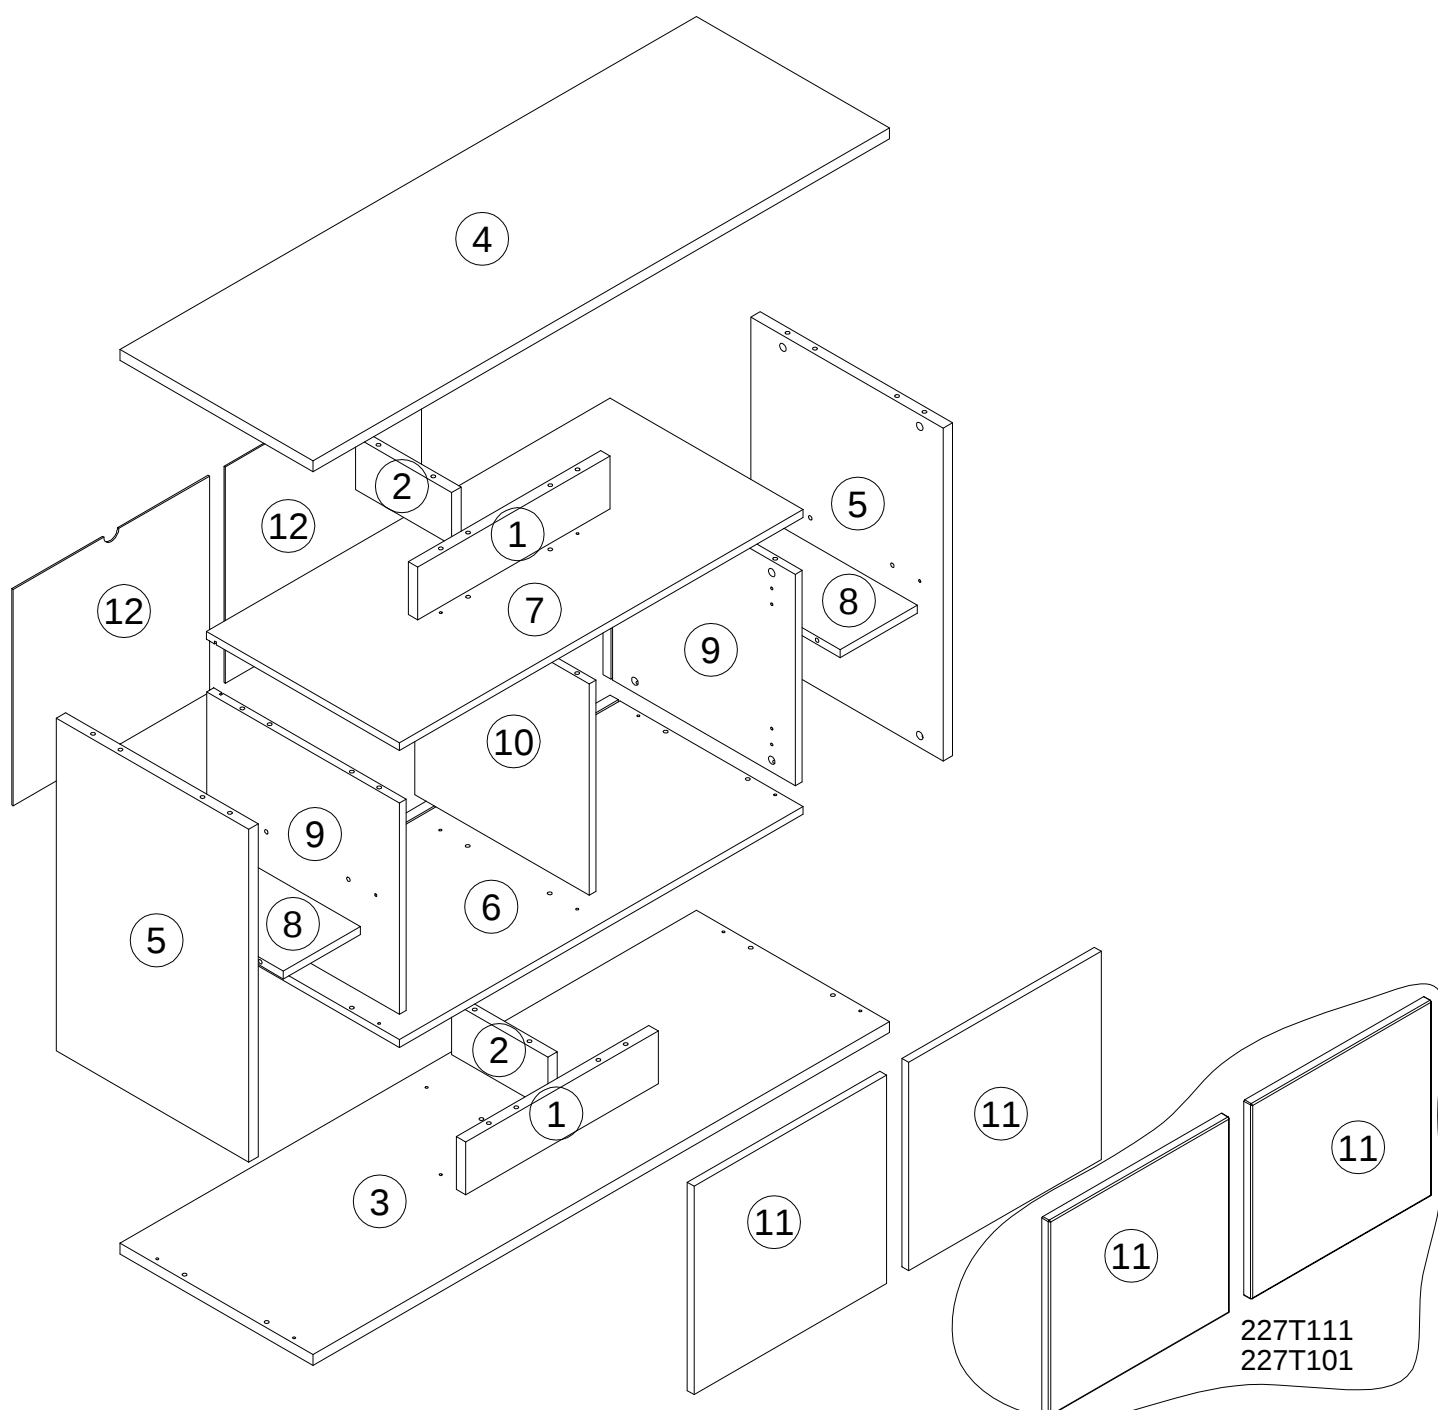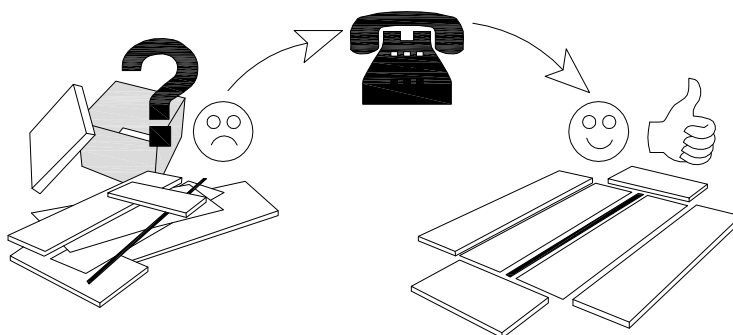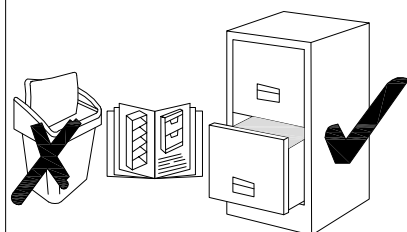







227T111
227T101

1

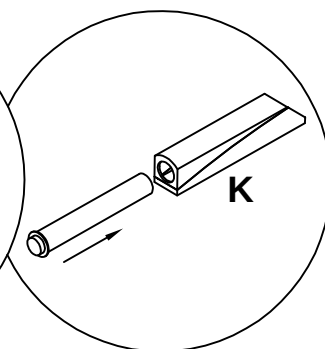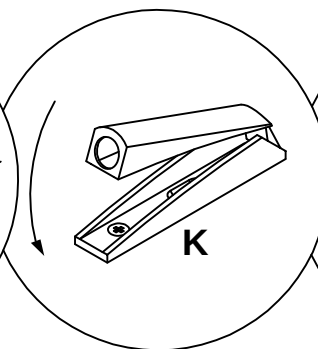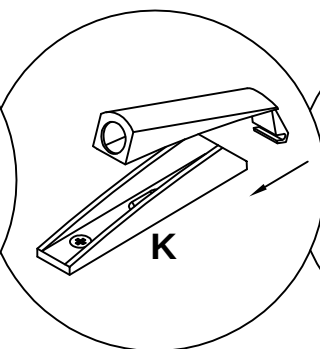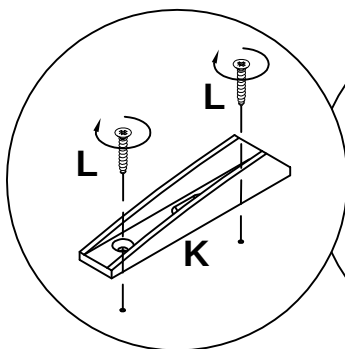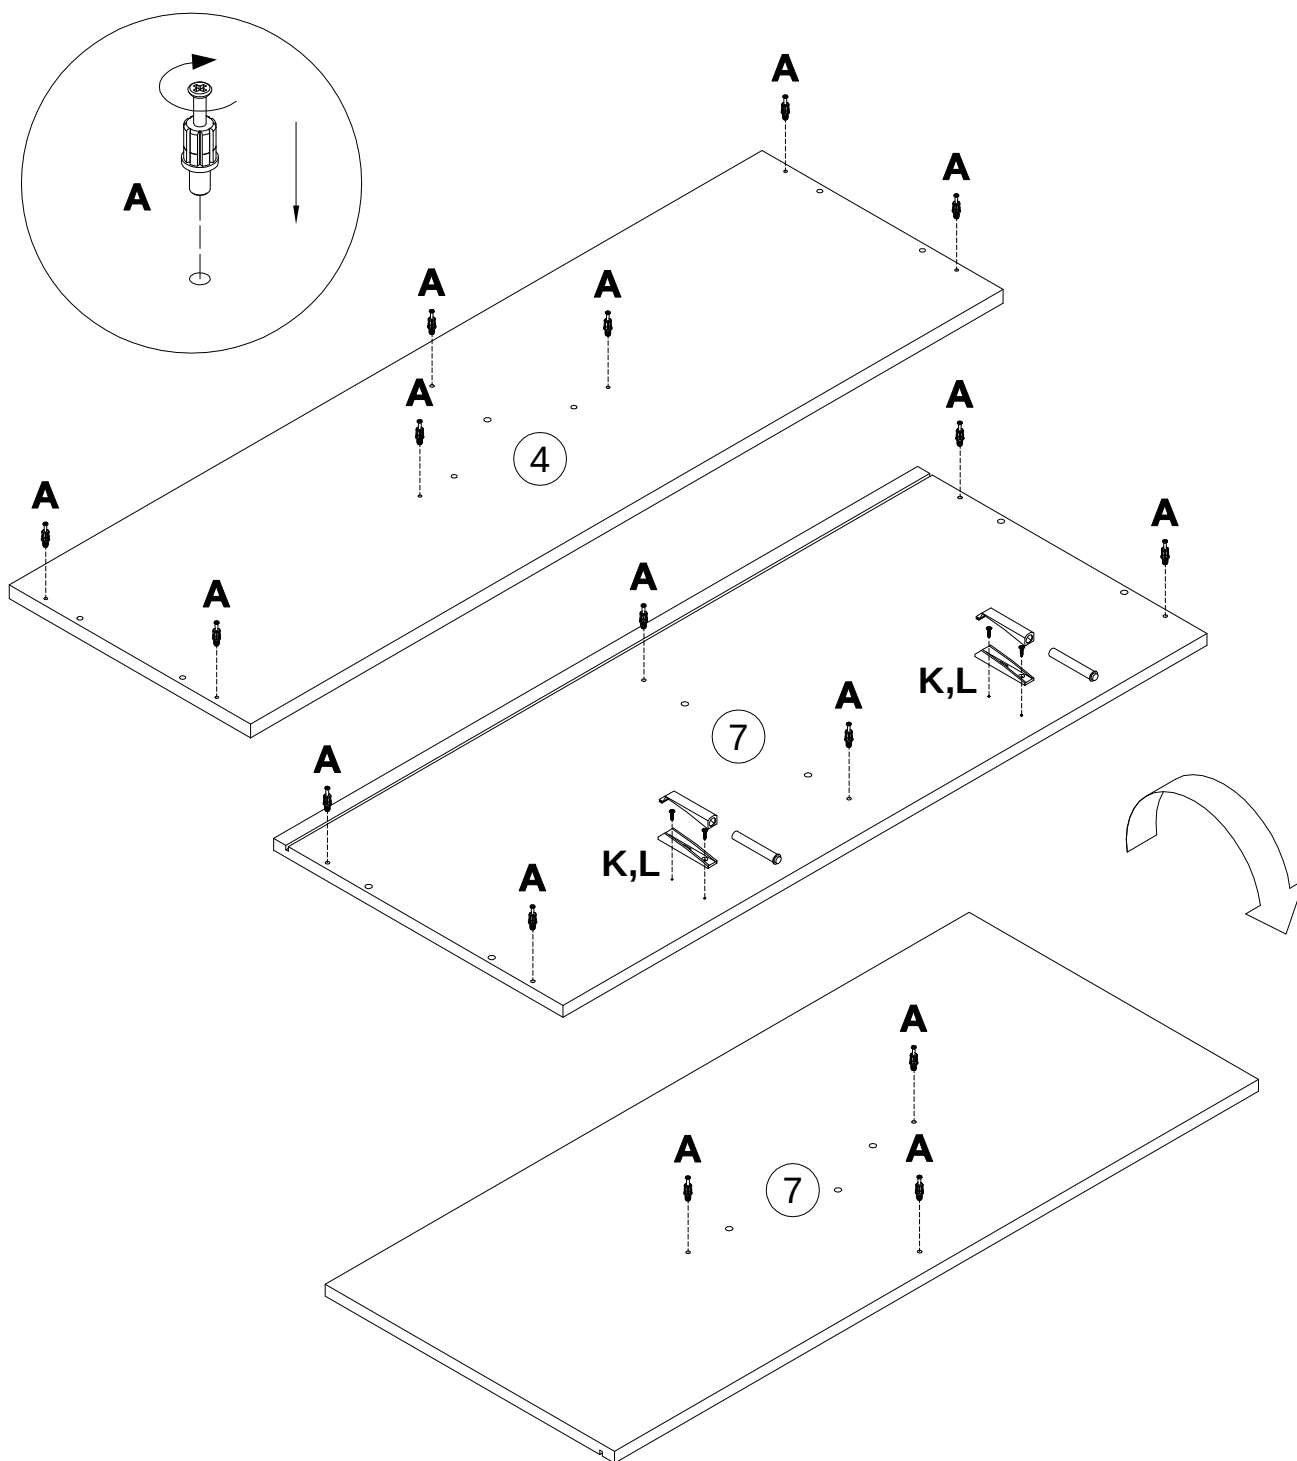


2

A  7x32 x16	Q  M6 x5	R  M6 x5
---	--	--

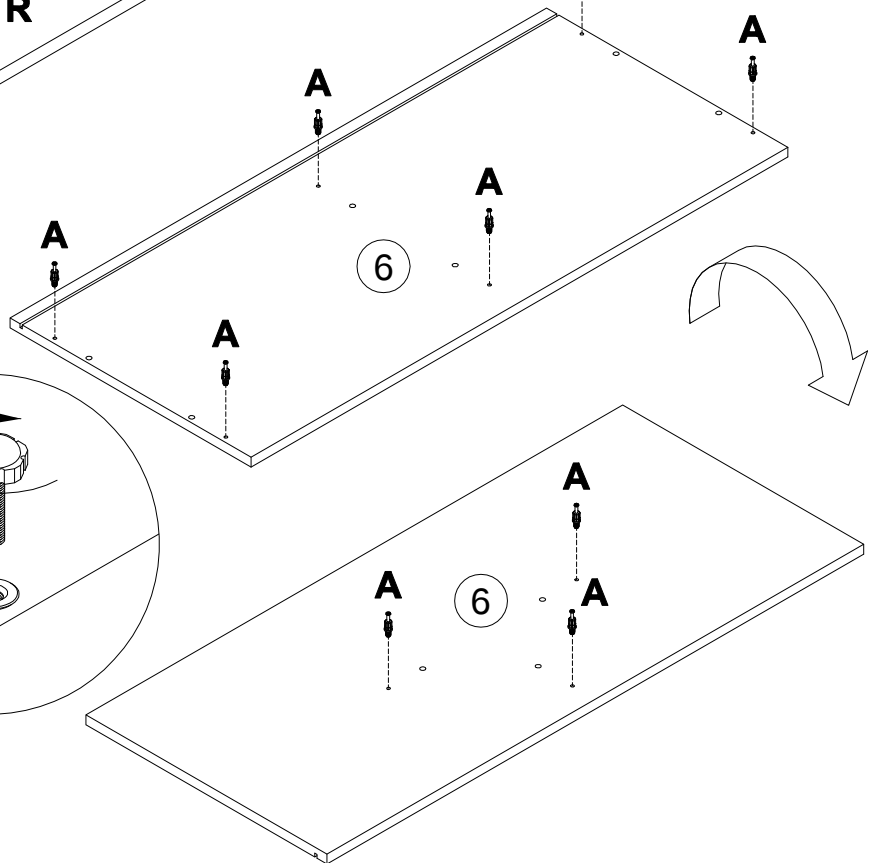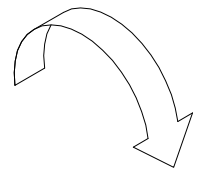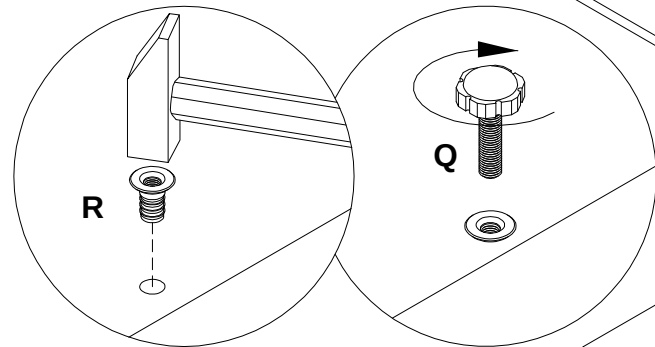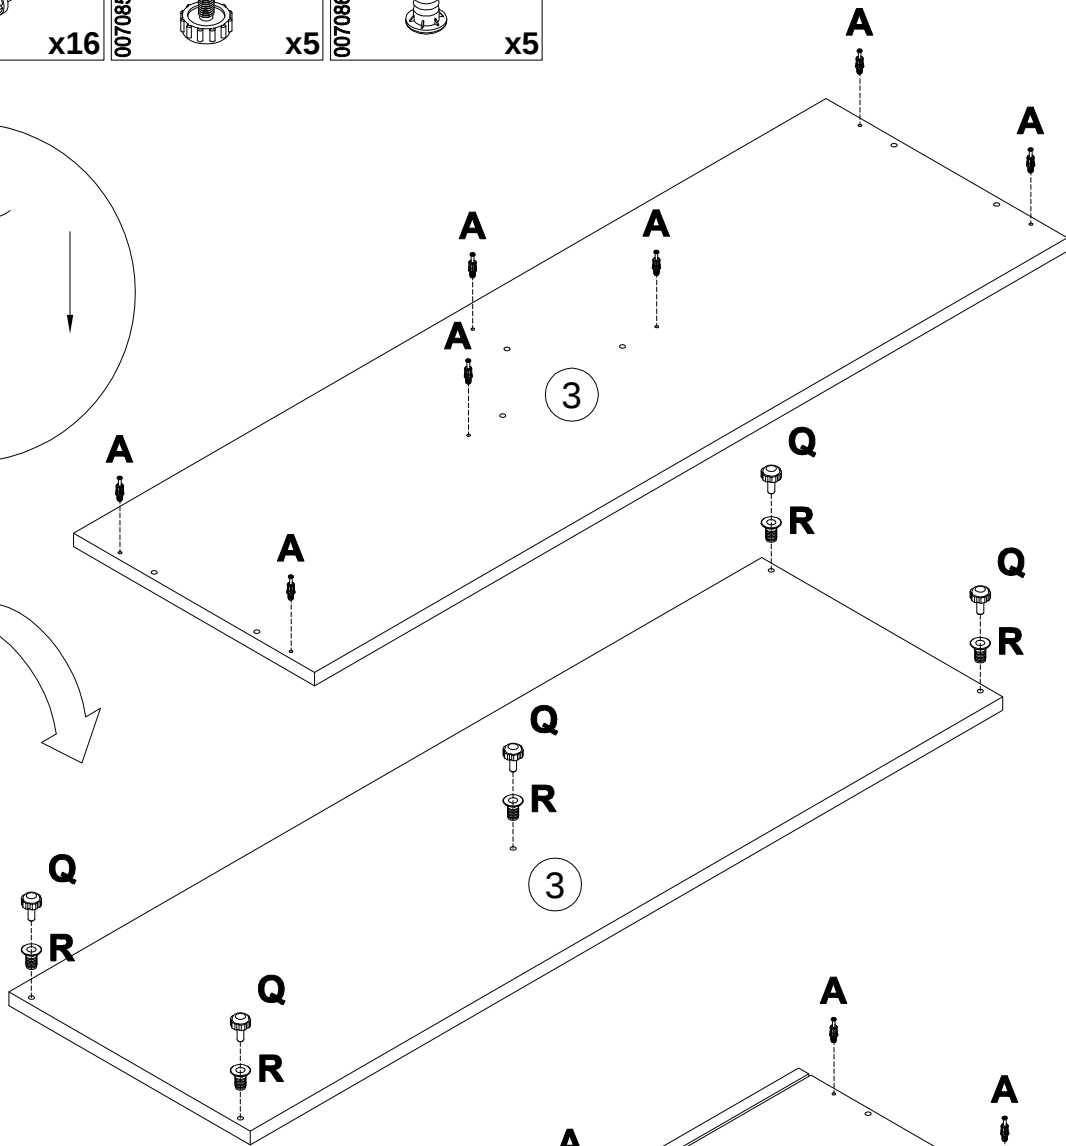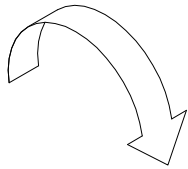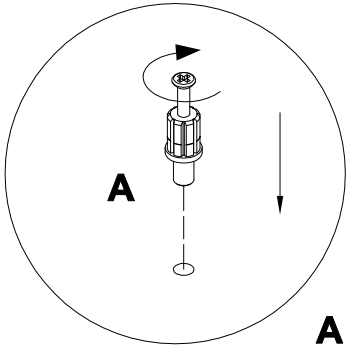

3 x2

168847 H





x4

010942 J




4x16

x8

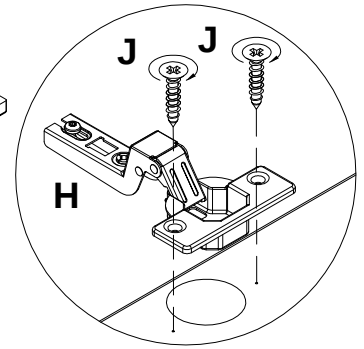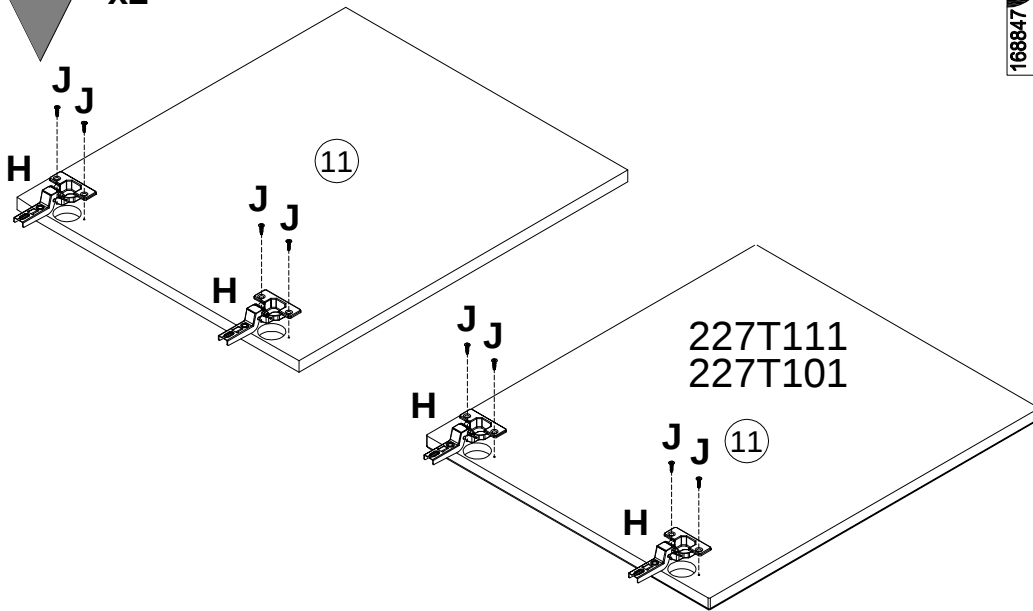

4

090913 A



7x32

x4

000146 B



15x12

x8


000147 C



15x16









x20

000151 D




8x35

x28

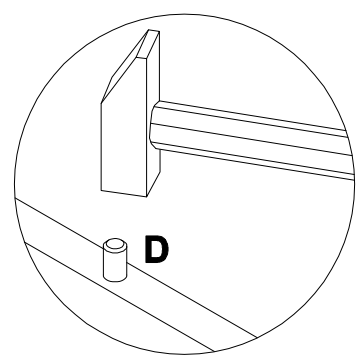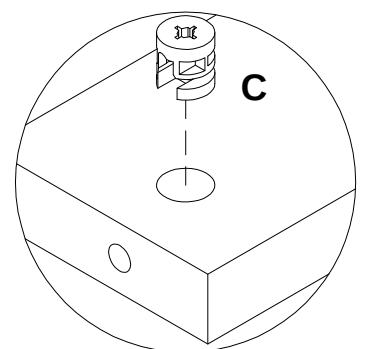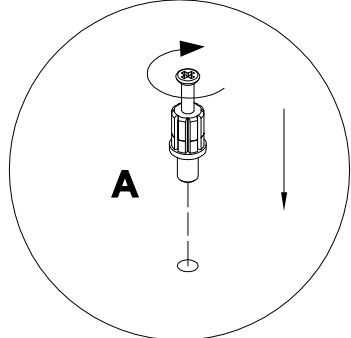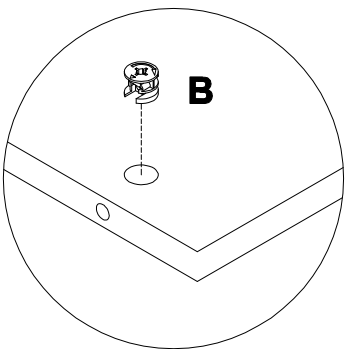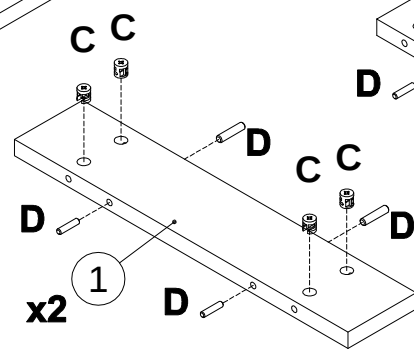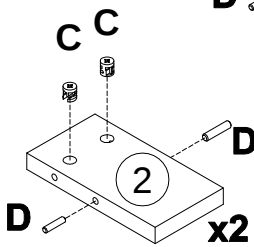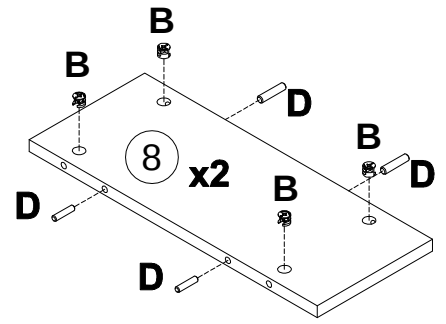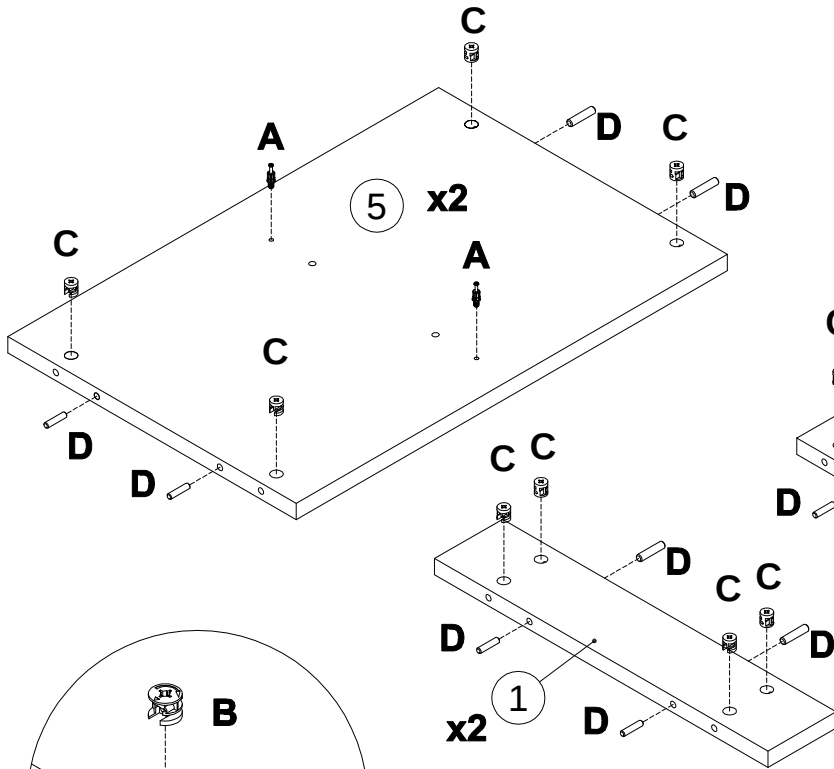

5

A



7x32

x4


B



15x12

x8


D



8x35

x8

H




x4

I



6.3x16

x8

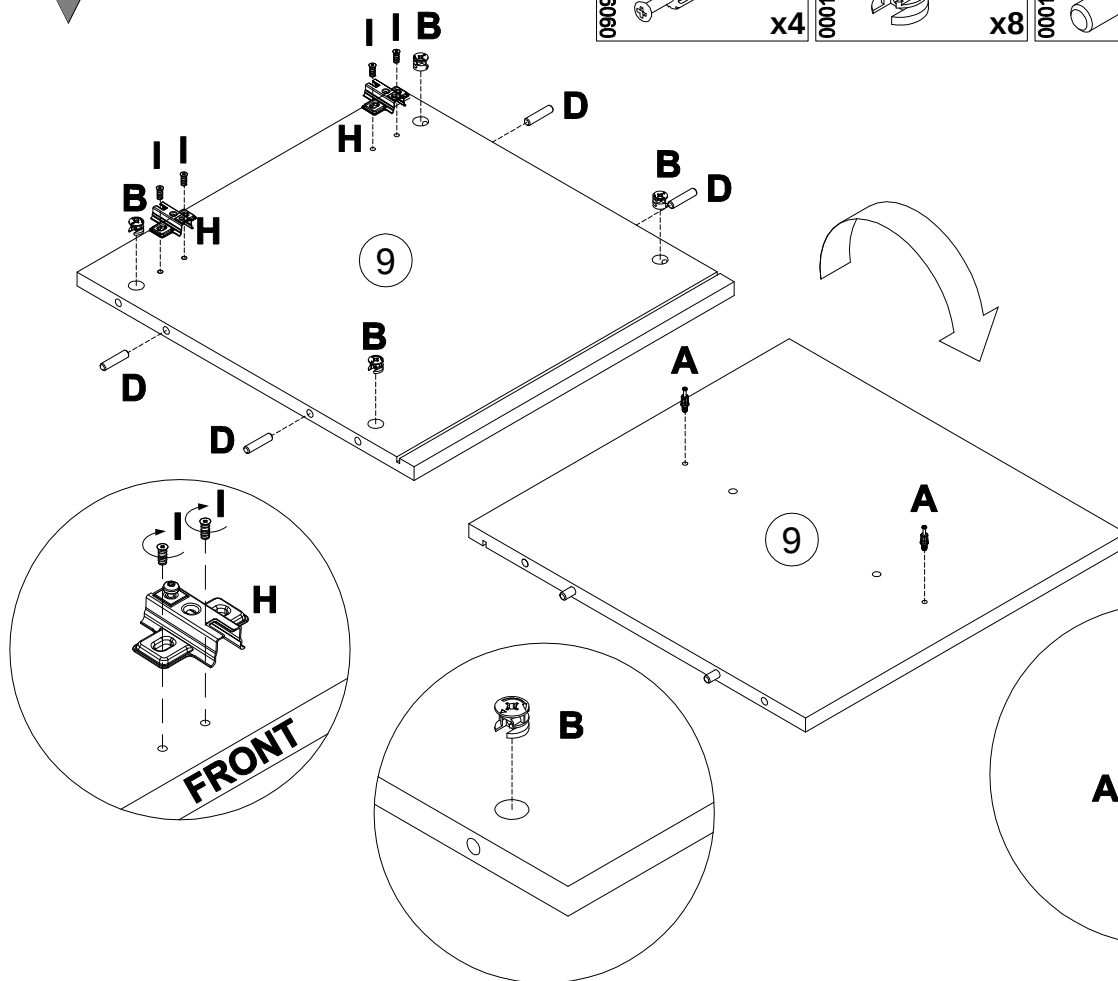

6


B



15x12


x4

D




8x35


x4

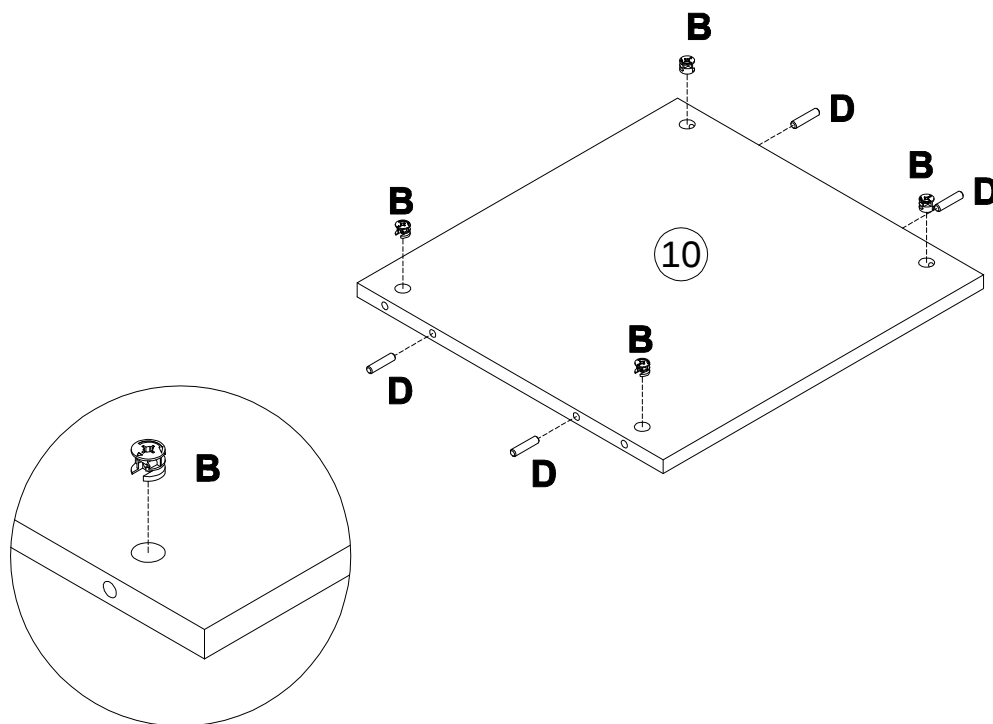




7

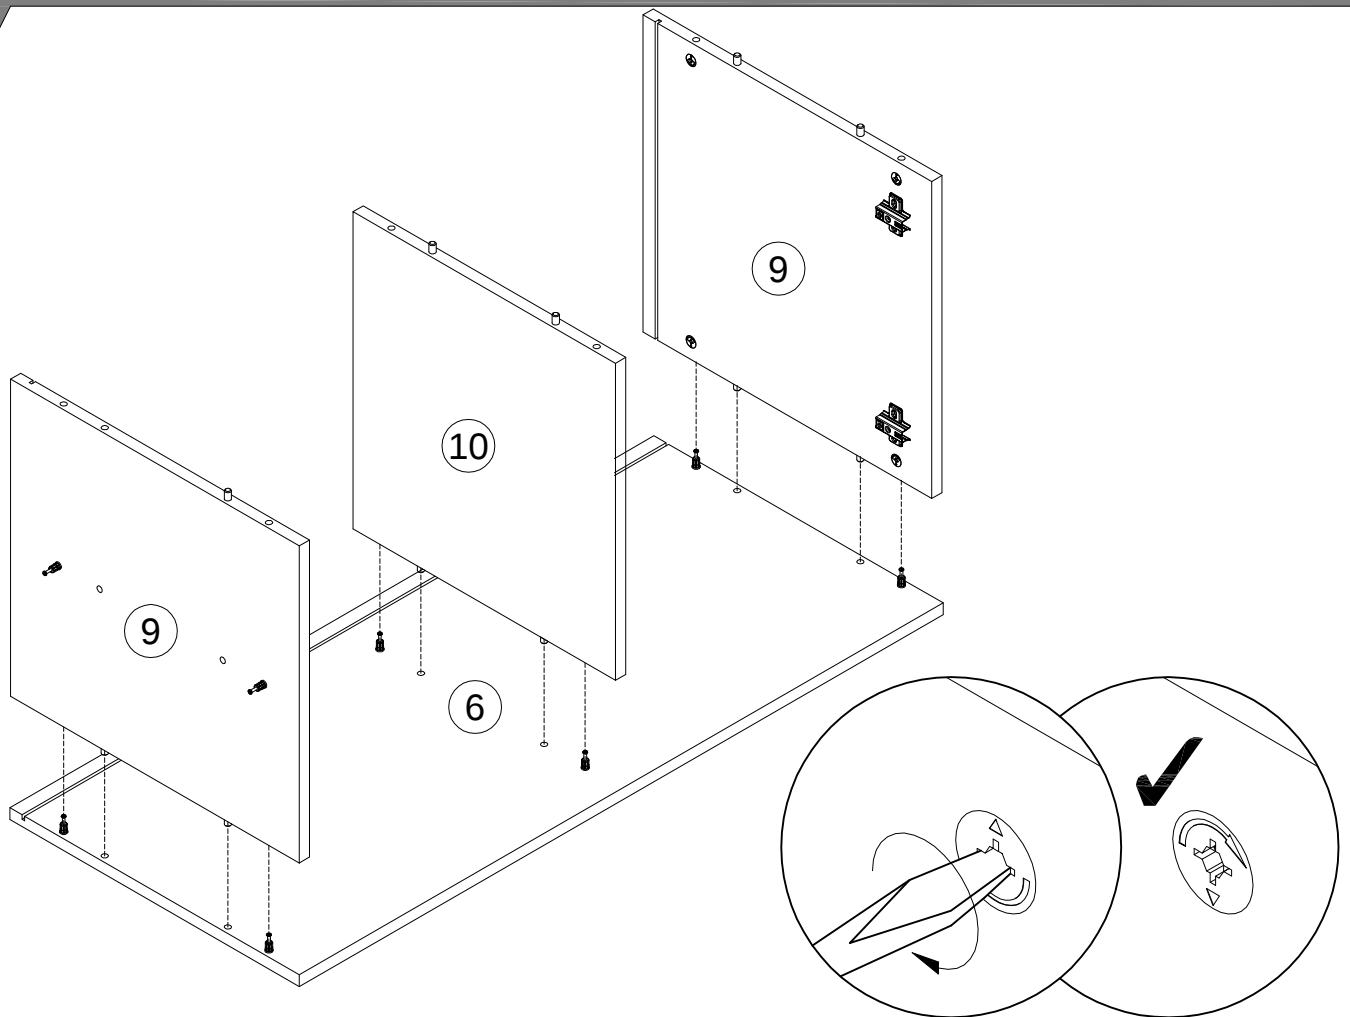


8

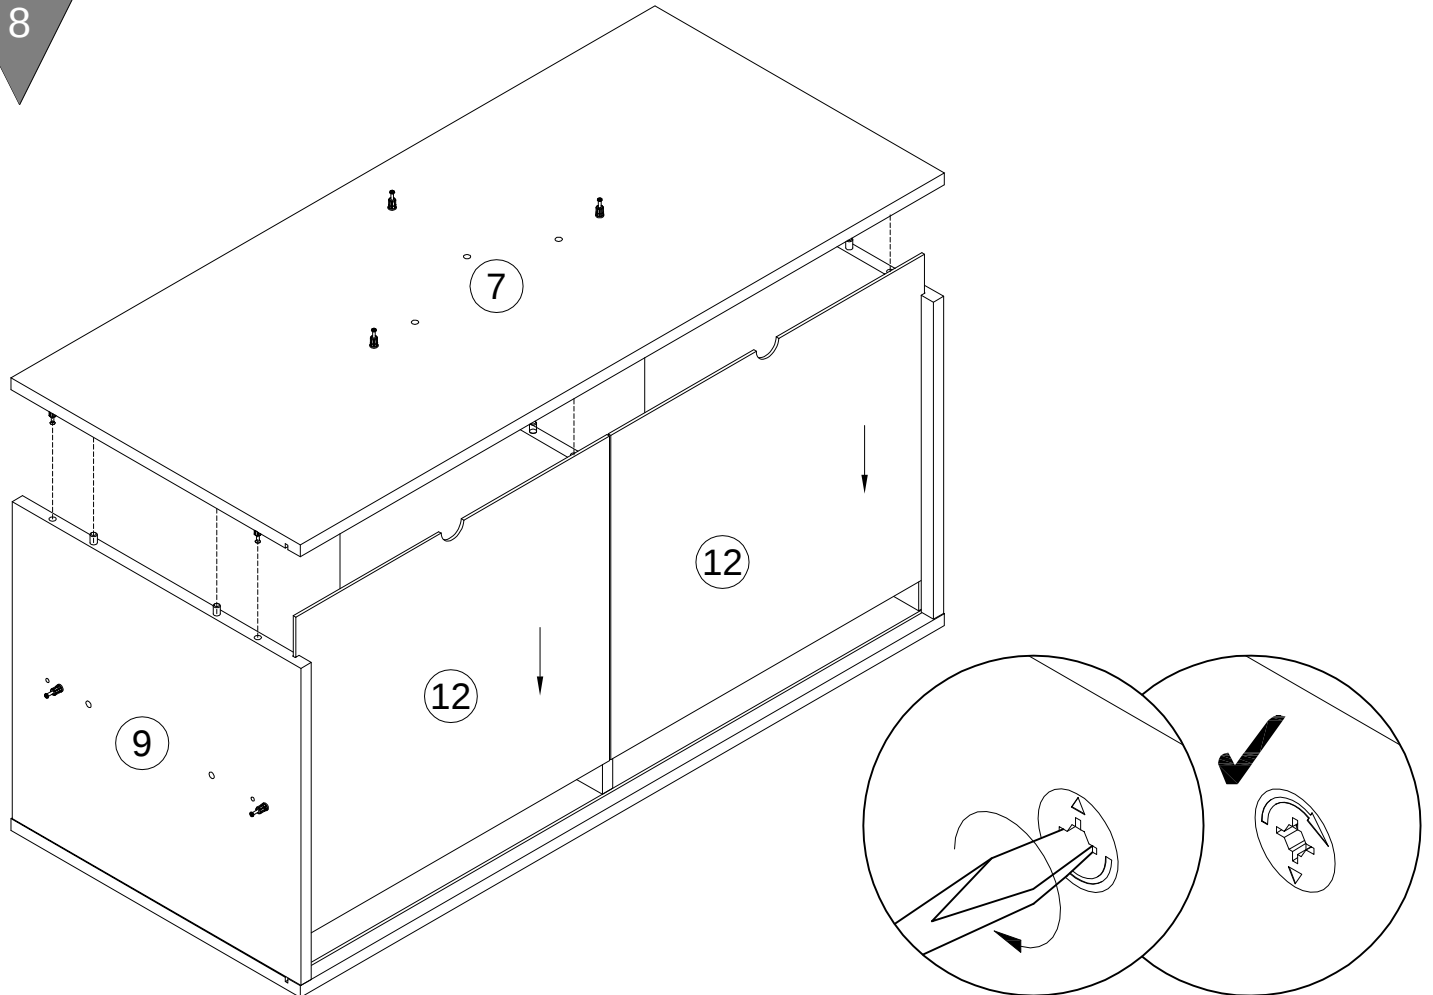


E 135021		x12	F 062367		x2	G 000759		3x20 x14
--------------------	---	------------	--------------------	---	-----------	--------------------	---	---------------------------

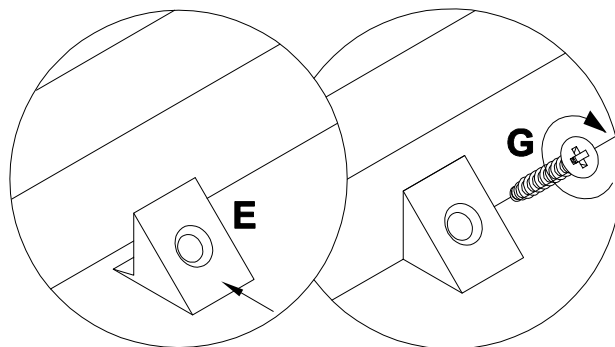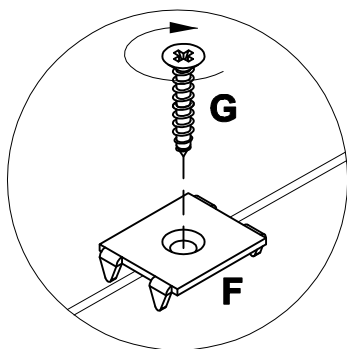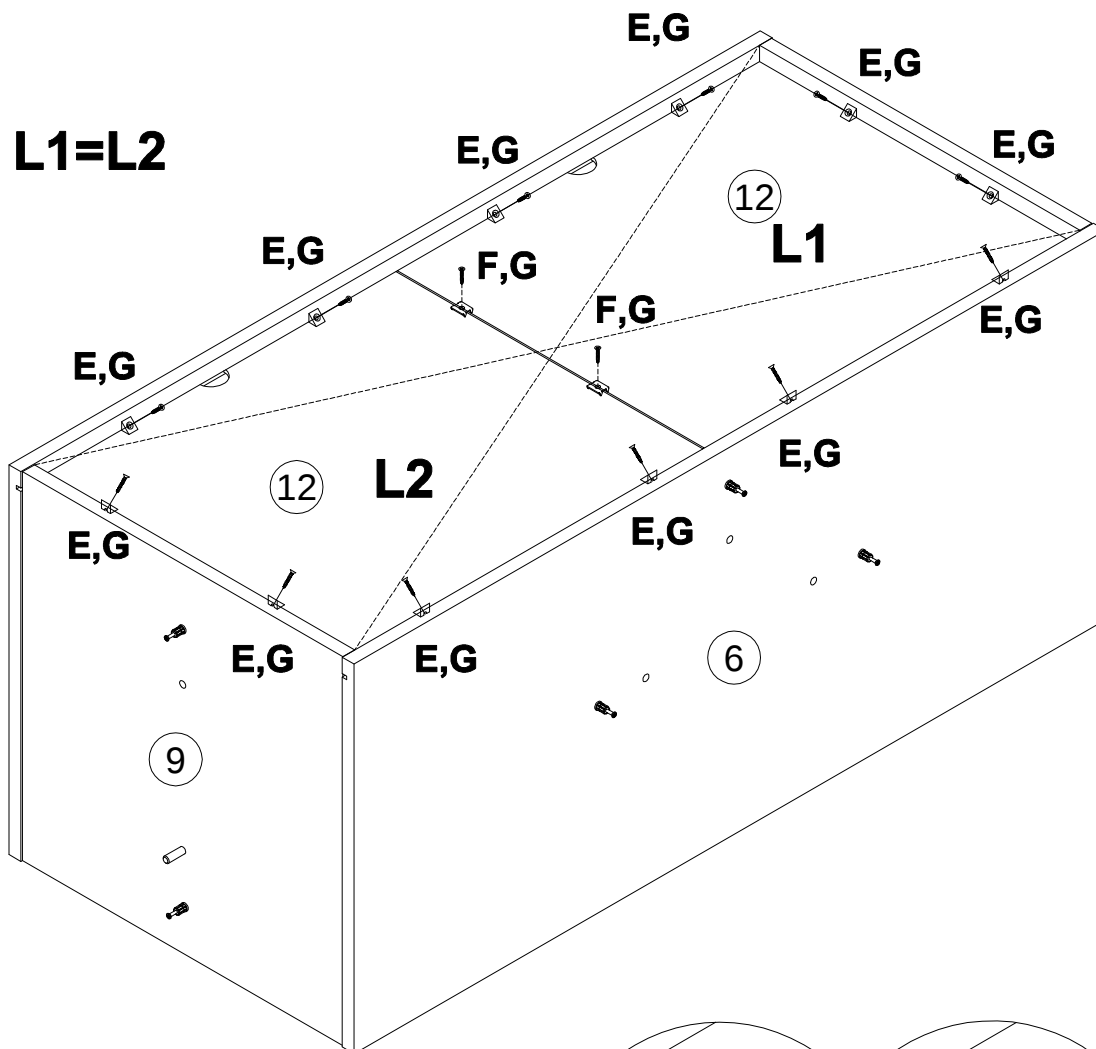



10

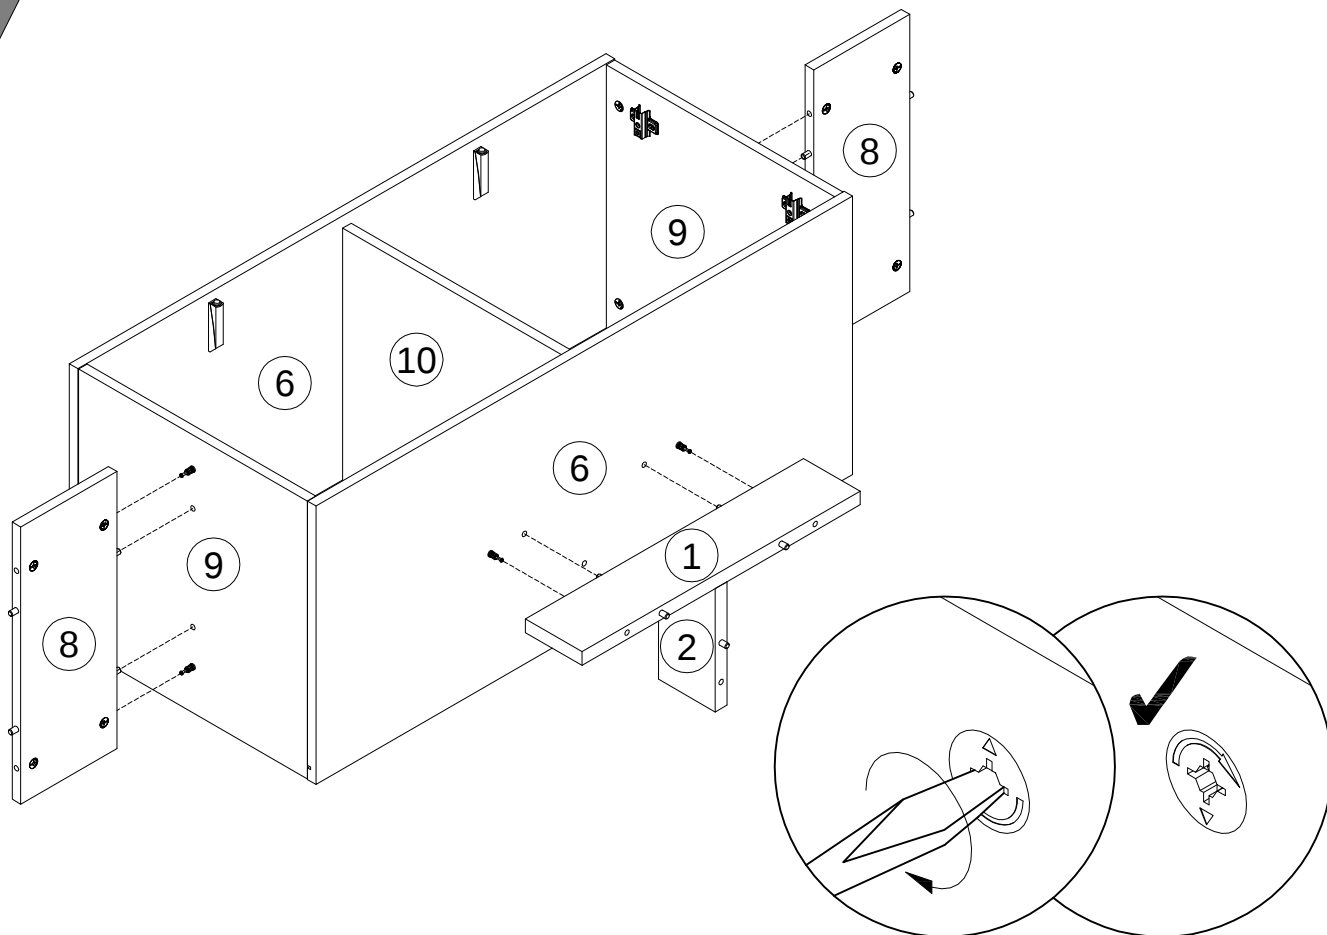



11

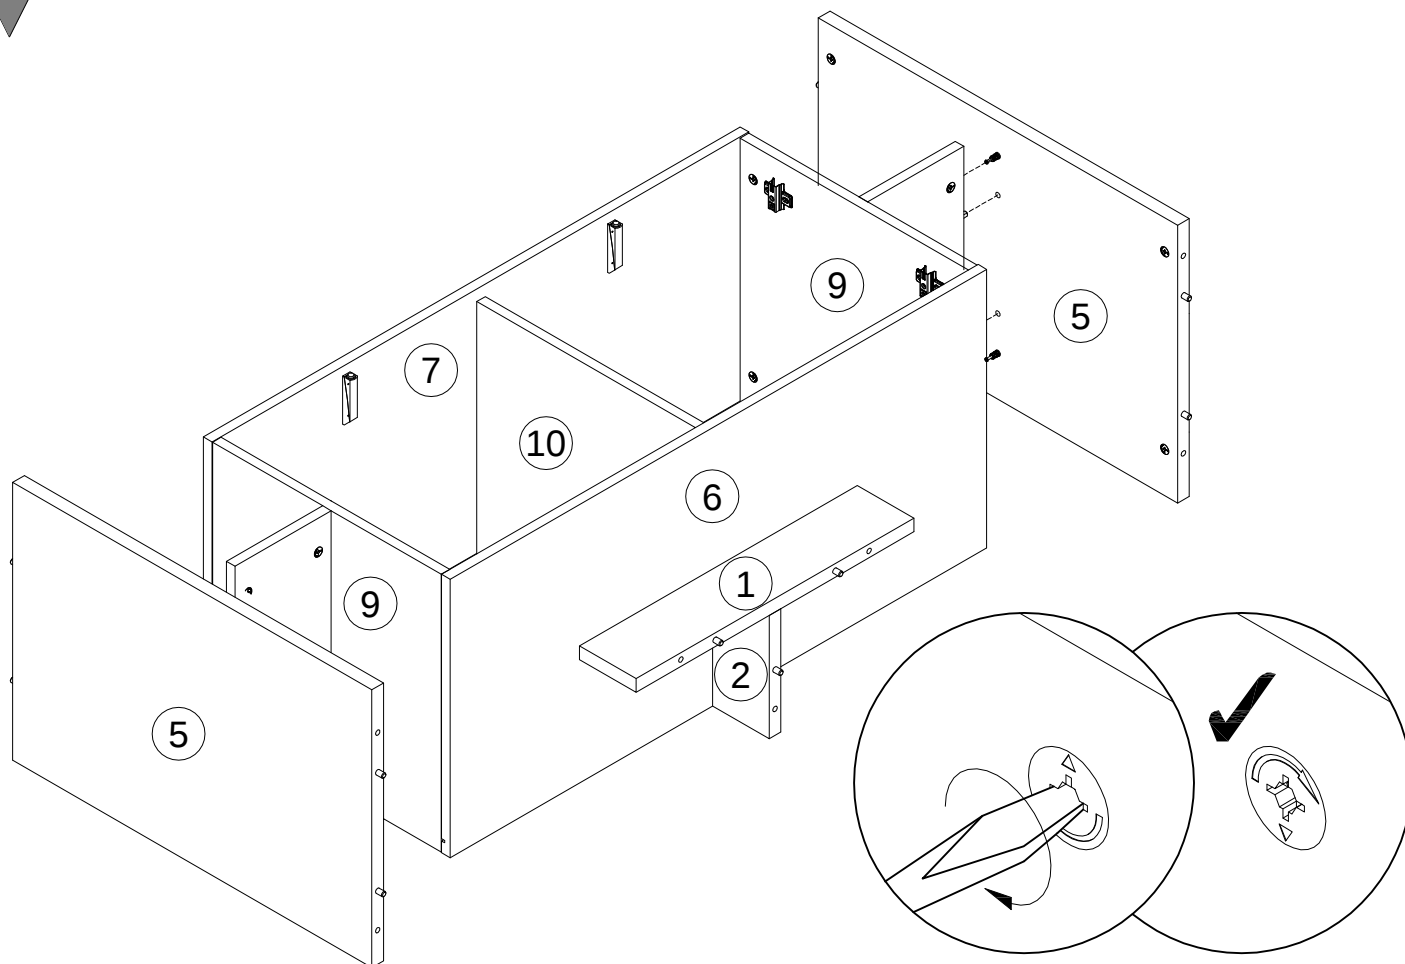




12

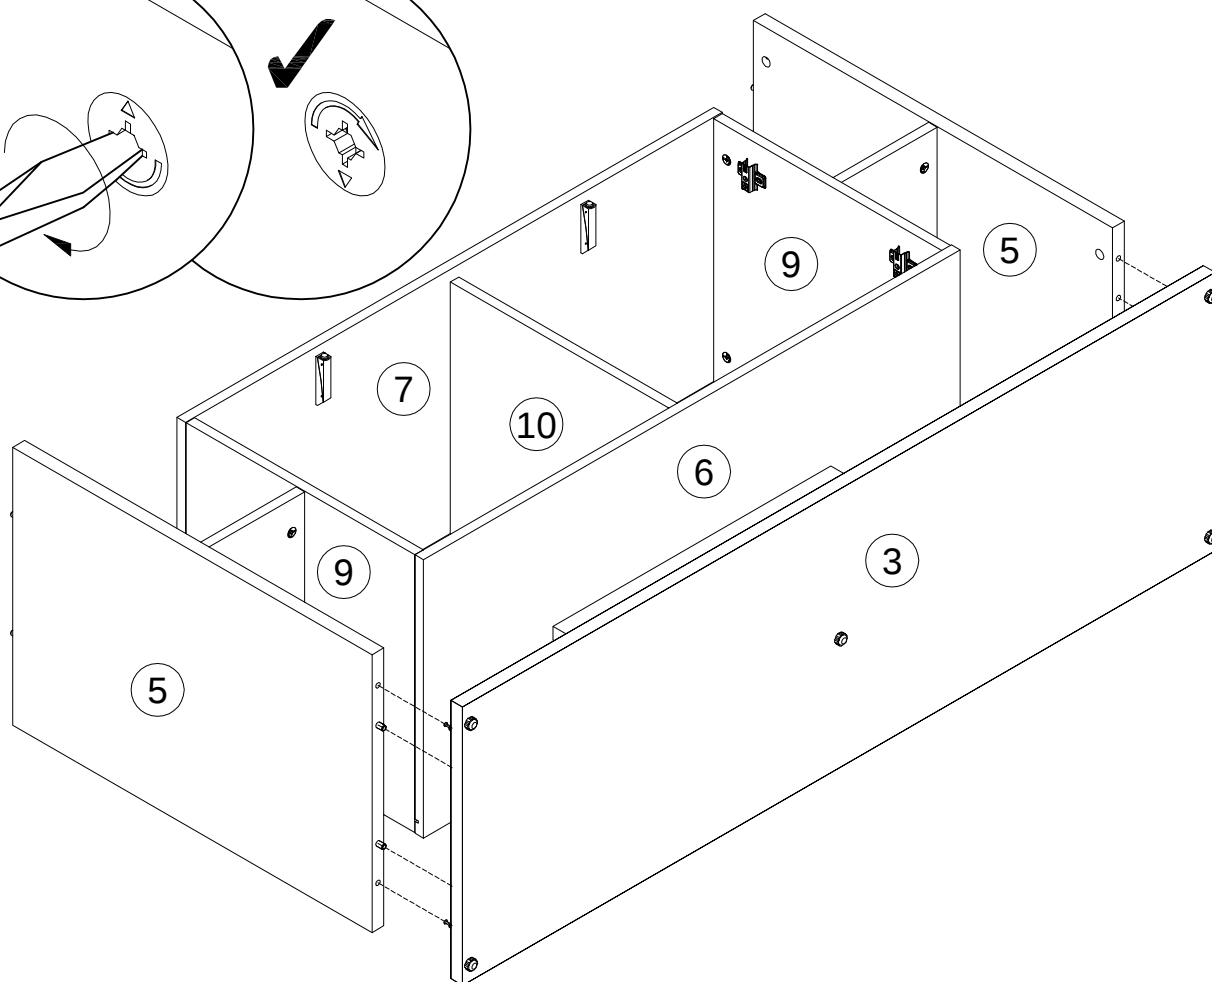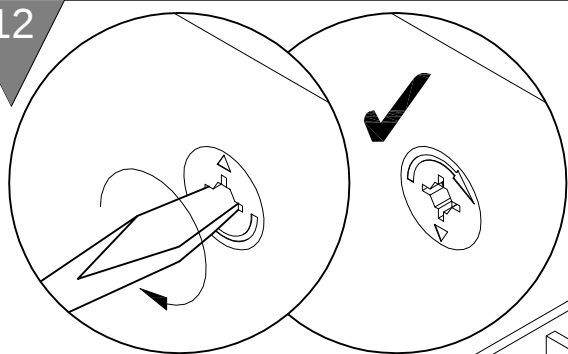




13

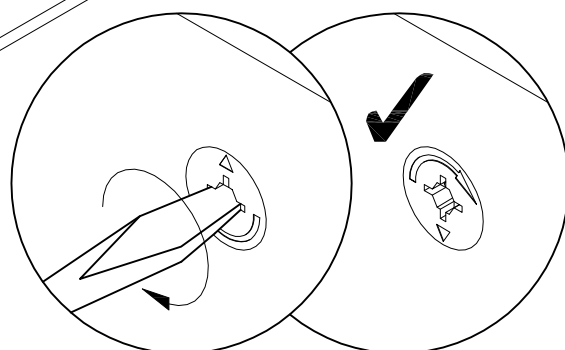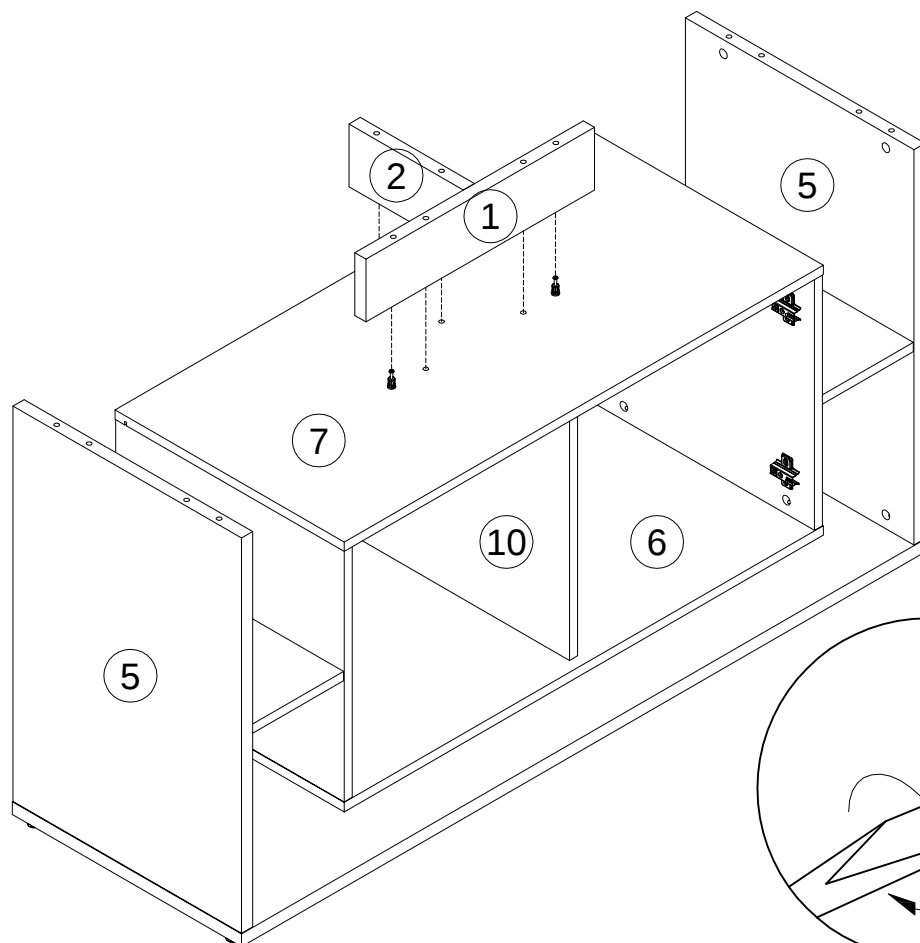


14

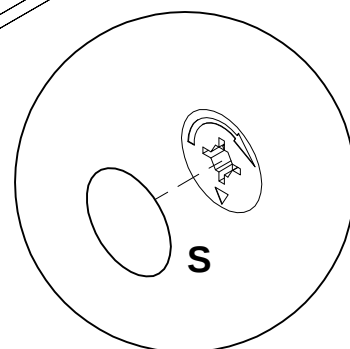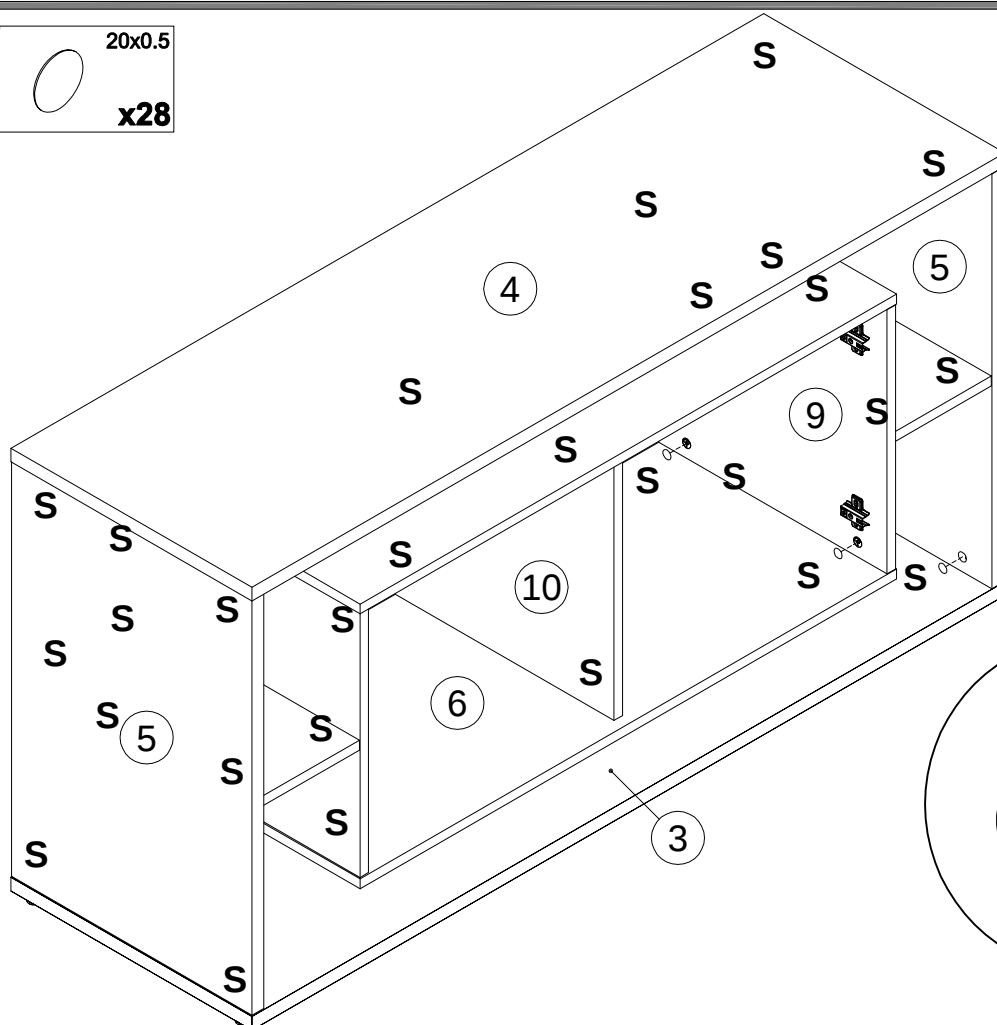


15

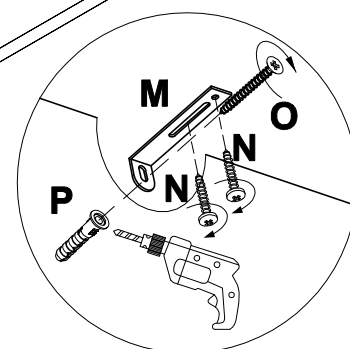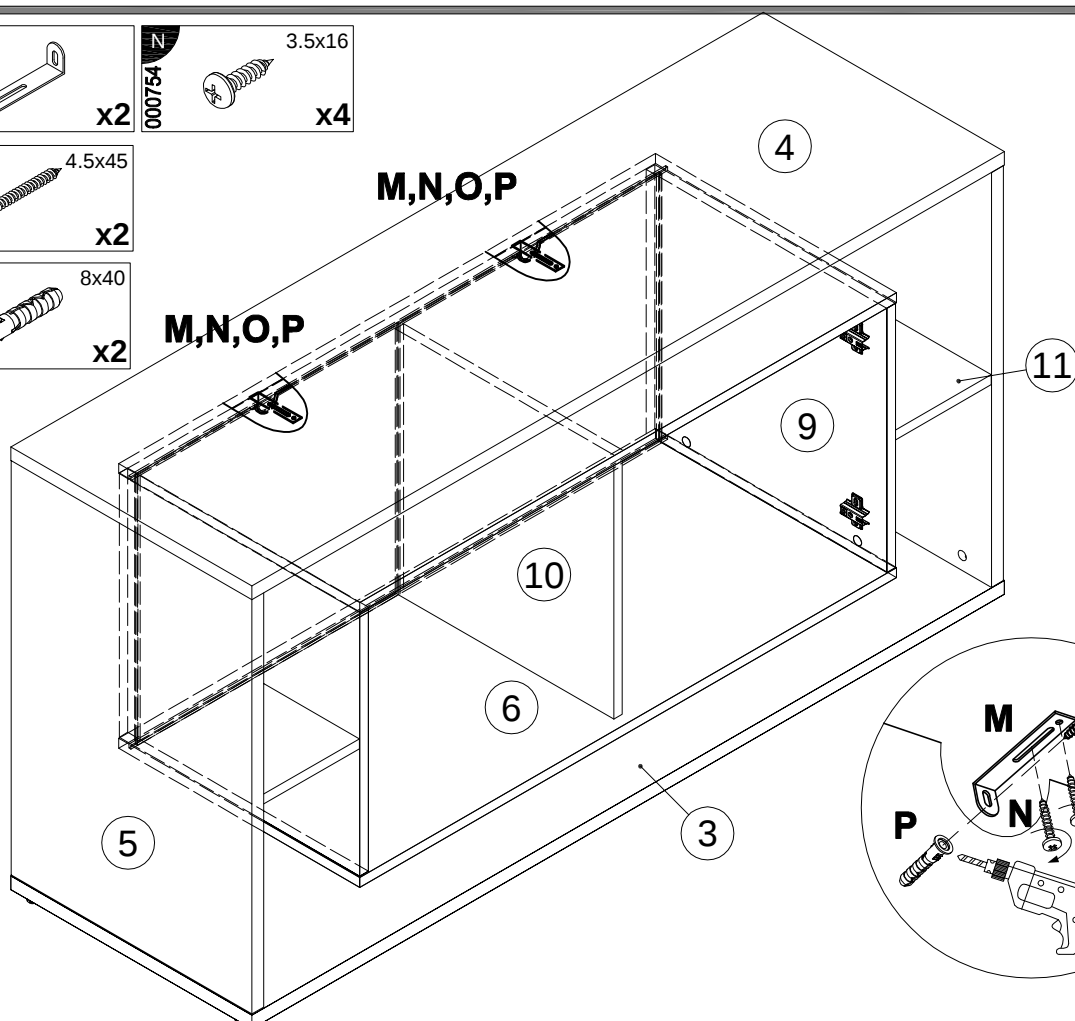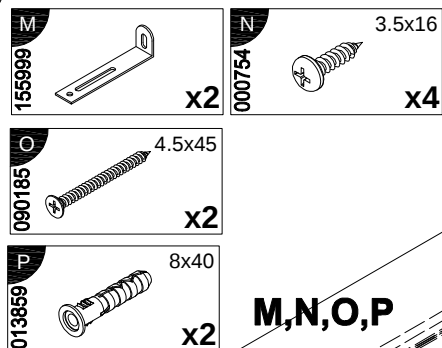


16

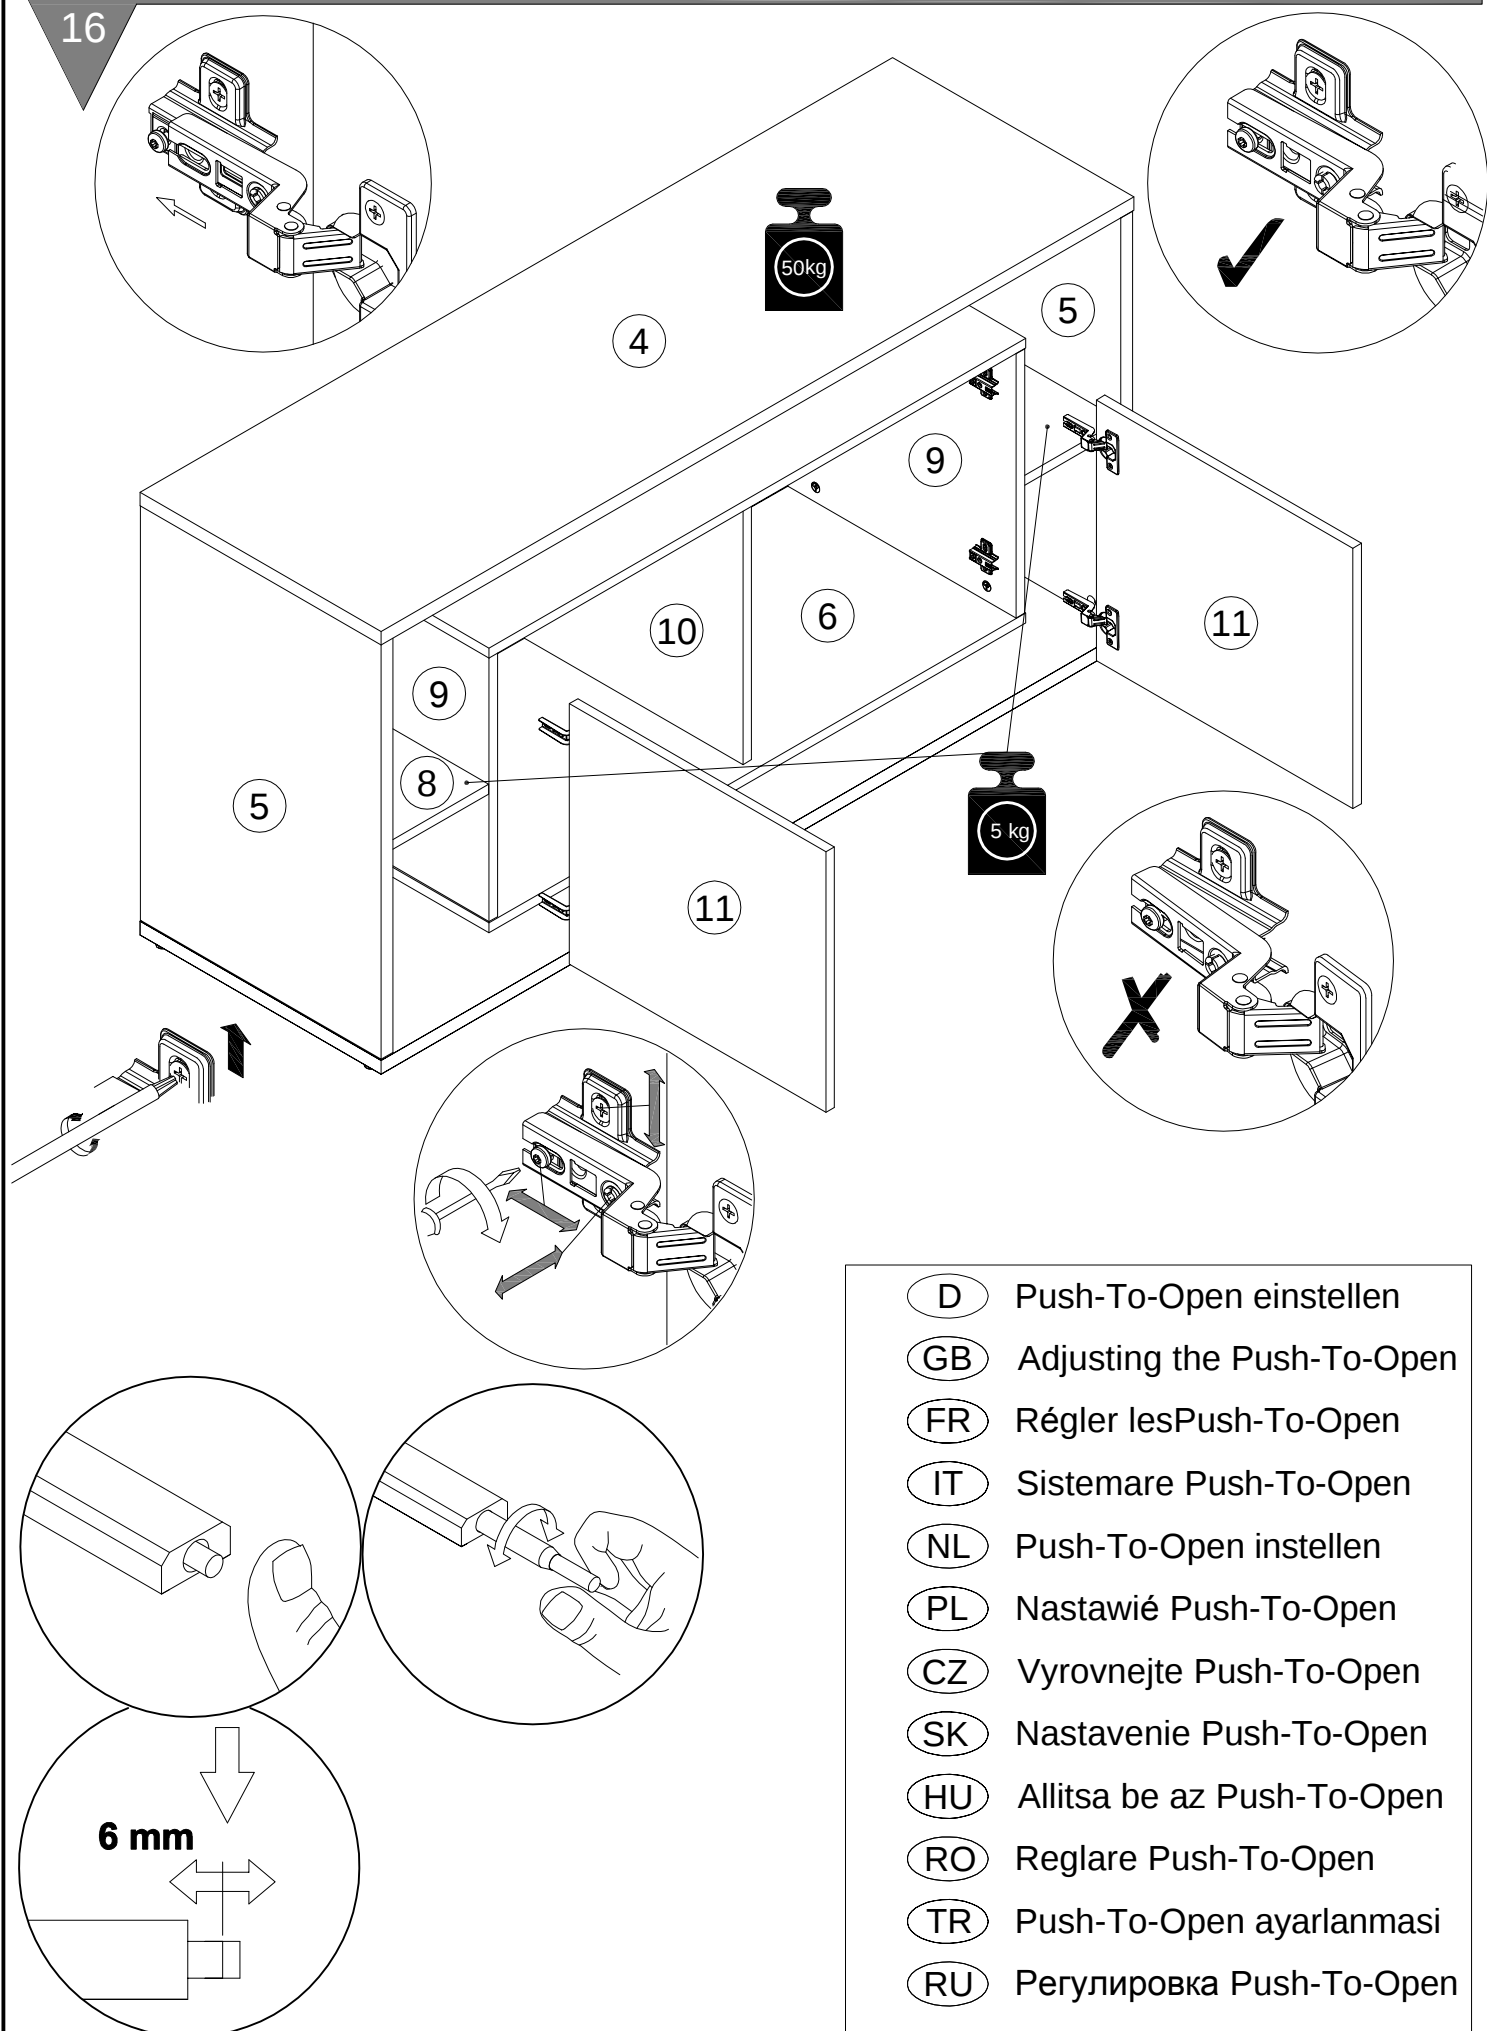

- (D) Push-To-Open einstellen
- (GB) Adjusting the Push-To-Open
- (FR) Régler les Push-To-Open
- (IT) Sistemare Push-To-Open
- (NL) Push-To-Open instellen
- (PL) Nastawić Push-To-Open
- (CZ) Vyrovnajte Push-To-Open
- (SK) Nastavenie Push-To-Open
- (HU) Allítsa be az Push-To-Open
- (RO) Reglare Push-To-Open
- (TR) Push-To-Open ayarlanması
- (RU) Регулировка Push-To-Open

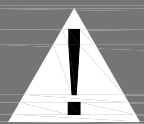

Achtung • Attention • Attenzione
Opgelet • Uwaga • Pozor • Figyelem
Atenție • Dikkat • Внимание

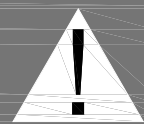

(D)	Wandbefestigung dient als Kippschutz — unbedingt anbringen! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!
(GB)	The wall fastening serves to prevent tipping — be absolutely sure to mount it! For certain wall types, a special wall plug may be necessary!
(FR)	La fixation murale sert de protection contre le basculement — à installer impérativement ! Pour certains types de murs il faut des chevilles spéciales !
(IT)	Il fissaggio alla parete serve da protezione anti-ribaltamento — attaccarla assolutamente ! Per alcune strutture di parete può essere necessario un tassello speciale !
(NL)	Bevestiging aan de muur dient als kantelbescherming — zeker en vast bevestigen ! Bij enkele muurtypes is een speciale plug misschien vereist !
(PL)	Mocowanie do ściany jest jednocześnie zabezpieczeniem przed przewróceniem — koniecznie zamontować! Do niektórych rodzajów ścian koniecznie zastosować specjalne kołki mocujące.
(CZ)	Montáž na stěnu slouží jako ochrana proti převrhnutí — bezpodmienečně umístěte! U některých typů stěn může být zapotřebí speciální hmoždinka !
(SK)	Upevnenie na stenu slúži ako ochrana proti prevráteniu — bezpodmienečne použite! Pre niektoré druhy stien môže byť potrebná špeciálna hmoždenka !
(HU)	A terméket a falhoz kel rögzíteni, különben az felborulhat! Egyes faltípusoknál speciális tiplit kell használni !
(RO)	Sistemul de fixare la perete serve ște ca protecție la răsturnare — de montat obligatoriu! Pentru unele tipuri de pereți este posibil să fie necesar un diblu special !
(TR)	Duvardaki sabitleme, devrilmeye karşı bir emniyet tedbiridir ve mutlaka monte edilmelidir! Bazı duvar tiplerinde bunun için özel bir düble gerekli olabilir !
(RU)	Обязательно установите крепление на стене во избежание опрокидывания ! Для некоторых типов стен может потребоваться специальный дюбель !