



ASSEMBLY INSTRUCTION DC-3090

A  M6x16 X04	B  M6x16 X04	C  M8x40 X03	D  M8 X03	E  5# X01	F  M8 X01	G  M8x18 X06
---	---	---	--	---	--	---


STEP 1.

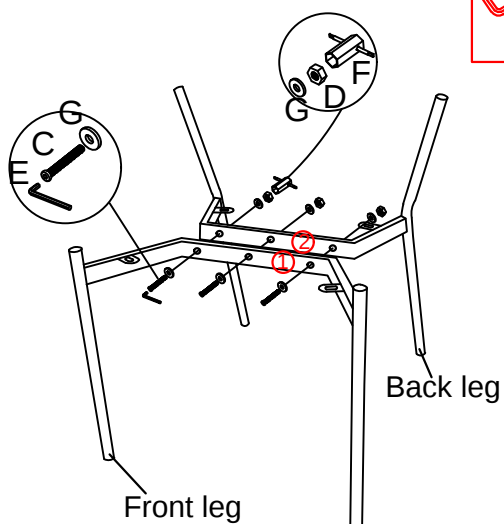

Note: Don't turn all screw completely. Turning 70% is enough in this phase.




STEP 2.

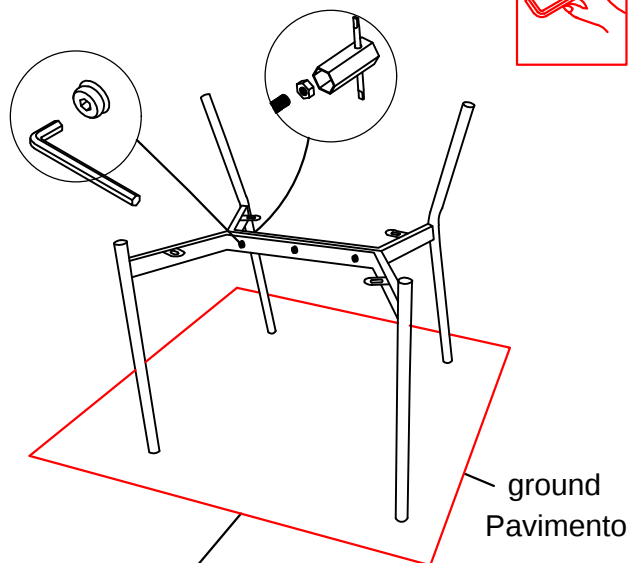

Four plastic feet touch the ground, that has to be flat and regular



STEP 3.

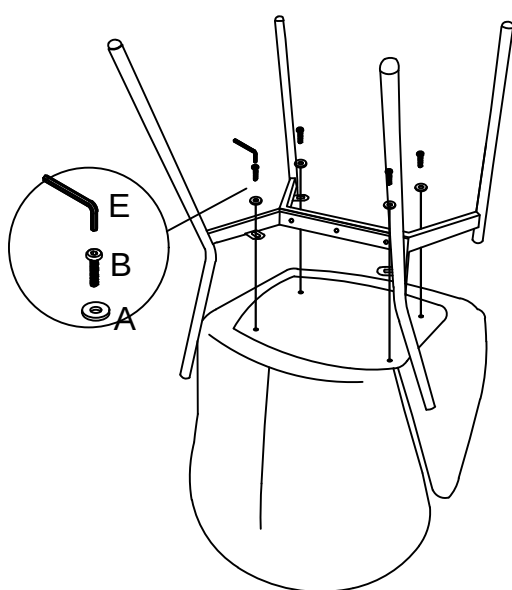

STEP 4.

