

# Network Camera User Manual

Manual Version: V3.00

Thank you for your purchase. If you have any questions, please do not hesitate to contact your dealer.

## Disclaimer

No part of this manual may be copied, reproduced, translated or distributed in any form or by any means without prior consent in writing from Zhejiang Uniview Technologies Co., Ltd (hereinafter referred to as Uniview or us).

The content in the manual is subject to change without prior notice due to product version upgrades or other reasons.

This manual is for reference only, and all statements, information, and recommendations in this manual are presented without warranty of any kind.

To the extent allowed by applicable law, in no event will Uniview be liable for any special, incidental, indirect, consequential damages, nor for any loss of profits, data, and documents.

## Safety Instructions



### CAUTION!

The default password is intended only for your first login. For security, we strongly recommend you set a strong password of at least 9 characters comprising digits, letters, and special characters.

Be sure to read this manual carefully before use and strictly comply with this manual during operation.

The illustrations in this manual are for reference only and may vary depending on the version or model. The screenshots in this manual may have been customized to meet specific requirements and user preferences. As a result, some of the examples and functions featured may differ from those displayed on your monitor.

- This manual is intended for multiple product models, and the photos, illustrations, descriptions, etc, in this manual may be different from the actual appearances, functions, features, etc, of the product.
- Uniview reserves the right to change any information in this manual without any prior notice or indication.
- Due to uncertainties such as physical environment, discrepancy may exist between the actual values and reference values provided in this manual. The ultimate right to interpretation resides in our company.
- Users are fully responsible for the damages and losses that arise due to improper operations.

## Environmental Protection

This product has been designed to comply with the requirements on environmental protection. For the proper storage, use and disposal of this product, national laws and regulations must be observed.

## Safety Symbols

The symbols in the following table may be found in this manual. Carefully follow the instructions indicated by the symbols to avoid hazardous situations and use the product properly.

| Symbol                                                                                              | Description                                                                                               |
|-----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  <b>WARNING!</b> | Indicates a hazardous situation which, if not avoided, could result in bodily injury or death.            |
|  <b>CAUTION!</b> | Indicates a situation which, if not avoided, could result in damage, data loss or malfunction to product. |
|  <b>NOTE!</b>    | Indicates useful or supplemental information about the use of product.                                    |

# Contents

|                                      |    |
|--------------------------------------|----|
| Disclaimer .....                     | i  |
| Safety Instructions .....            | i  |
| Environmental Protection .....       | i  |
| Safety Symbols .....                 | i  |
| 1 Login .....                        | 1  |
| 1.1 Preparation .....                | 1  |
| 1.2 Login .....                      | 2  |
| 2 Live View .....                    | 4  |
| 2.1 Live View .....                  | 4  |
| 2.1.1 Digital Zoom .....             | 7  |
| 2.1.2 Capture .....                  | 7  |
| 2.1.3 5ePTZ .....                    | 8  |
| 2.2 PTZ Control .....                | 8  |
| 2.2.1 3D Positioning .....           | 10 |
| 2.2.2 Area Focus .....               | 10 |
| 2.2.3 Preset .....                   | 11 |
| 2.2.4 Patrol .....                   | 11 |
| 3 Playback .....                     | 18 |
| 3.1 Playback Toolbar .....           | 18 |
| 3.2 Search and Play Recordings ..... | 19 |
| 3.3 Download Recordings .....        | 19 |
| 4 Photo .....                        | 21 |
| 5 Setup .....                        | 22 |
| 5.1 Local Parameters .....           | 22 |
| 5.2 Network .....                    | 23 |
| 5.2.1 Ethernet .....                 | 23 |
| 5.2.2 Port .....                     | 25 |
| 5.2.3 E-mail .....                   | 27 |
| 5.2.4 EZCloud .....                  | 29 |
| 5.2.5 DNS .....                      | 30 |
| 5.2.6 DDNS .....                     | 30 |
| 5.2.7 SNMP .....                     | 31 |
| 5.2.8 802.1x .....                   | 33 |
| 5.2.9 QoS .....                      | 33 |
| 5.2.10 WebSocket .....               | 34 |

|                                                   |    |
|---------------------------------------------------|----|
| 5.3 Video & Audio .....                           | 34 |
| 5.3.1 Video .....                                 | 35 |
| 5.3.2 Snapshot .....                              | 36 |
| 5.3.3 Audio .....                                 | 38 |
| 5.3.4 ROI .....                                   | 39 |
| 5.3.5 View Cropping .....                         | 40 |
| 5.3.6 Media Stream .....                          | 41 |
| 5.4 PTZ .....                                     | 43 |
| 5.4.1 Basic PTZ Settings .....                    | 43 |
| 5.4.2 Home Position .....                         | 44 |
| 5.4.3 Pan/Tilt Limit .....                        | 44 |
| 5.4.4 Remote PTZ Control .....                    | 45 |
| 5.4.5 Preset Snapshot and Patrol Resumption ..... | 46 |
| 5.4.6 Orientation Calibration .....               | 46 |
| 5.5 Image .....                                   | 47 |
| 5.5.1 Image .....                                 | 47 |
| 5.5.2 OSD .....                                   | 59 |
| 5.5.3 Privacy Mask .....                          | 63 |
| 5.5.4 Quick Focus .....                           | 64 |
| 5.6 Smart .....                                   | 65 |
| 5.6.1 Alarm-triggered Actions .....               | 66 |
| 5.6.2 Arming Schedule .....                       | 67 |
| 5.6.3 Cross Line Detection .....                  | 68 |
| 5.6.4 Enter Area Detection .....                  | 70 |
| 5.6.5 Leave Area Detection .....                  | 71 |
| 5.6.6 Intrusion Detection .....                   | 73 |
| 5.6.7 Object Removed Detection .....              | 75 |
| 5.6.8 Object Left Behind Detection .....          | 76 |
| 5.6.9 Defocus Detection .....                     | 77 |
| 5.6.10 Scene Change Detection .....               | 77 |
| 5.6.11 Face Detection .....                       | 78 |
| 5.6.12 Face Recognition .....                     | 81 |
| 5.6.13 Human Body Detection .....                 | 83 |
| 5.6.14 Mixed-Traffic Detection .....              | 84 |
| 5.6.15 People Flow Counting .....                 | 86 |
| 5.6.16 Crowd Density Monitoring .....             | 88 |
| 5.6.17 Auto Tracking .....                        | 90 |

|                                       |     |
|---------------------------------------|-----|
| 5.6.18 Smoke and Fire Detection ..... | 91  |
| 5.6.19 Fire Detection .....           | 94  |
| 5.6.20 Attribute Collection .....     | 95  |
| 5.6.21 Advanced Settings .....        | 96  |
| 5.7 Alarm .....                       | 97  |
| 5.7.1 Common Alarm .....              | 98  |
| 5.7.2 One-key Disarming .....         | 106 |
| 5.8 Storage .....                     | 106 |
| 5.8.1 Memory Card .....               | 107 |
| 5.8.2 Network Disk .....              | 108 |
| 5.8.3 FTP .....                       | 109 |
| 5.9 Security .....                    | 111 |
| 5.9.1 User .....                      | 111 |
| 5.9.2 HTTPS .....                     | 114 |
| 5.9.3 Authentication .....            | 116 |
| 5.9.4 Registration Information .....  | 116 |
| 5.9.5 ARP Protection .....            | 116 |
| 5.9.6 IP Address Filtering .....      | 117 |
| 5.9.7 Access Policy .....             | 117 |
| 5.9.8 Watermark .....                 | 119 |
| 5.9.9 WebSockets .....                | 119 |
| 5.10 System .....                     | 119 |
| 5.10.1 Time .....                     | 119 |
| 5.10.2 DST .....                      | 120 |
| 5.10.3 Server .....                   | 121 |
| 5.10.4 Device Information .....       | 123 |
| 5.10.5 Ports & External Devices ..... | 123 |
| 5.10.6 Maintenance .....              | 127 |
| 5.10.7 Logs .....                     | 130 |

# 1 Login

## 1.1 Preparation

Refer to the camera's quick guide to install it properly, and then connect power to start up it. You can log in to the camera's web interface to perform management or maintenance operations.

The following takes IE on a Windows 7.0 operating system as an example.


### 1. Check before login


- The camera runs normally.
- The PC has a network connection to the camera.
- A web browser has been installed on the PC. Microsoft Internet Explorer 10.0 or later is recommended.
- For optimal display, it is recommended to choose a monitor with the highest resolution of the camera.



#### NOTE!


Recommended PC specifications for 32MP live view: CPU: Intel® Core™ i7 8700; Graphics card: GTX 1080; RAM: DDR4 8GB or higher.

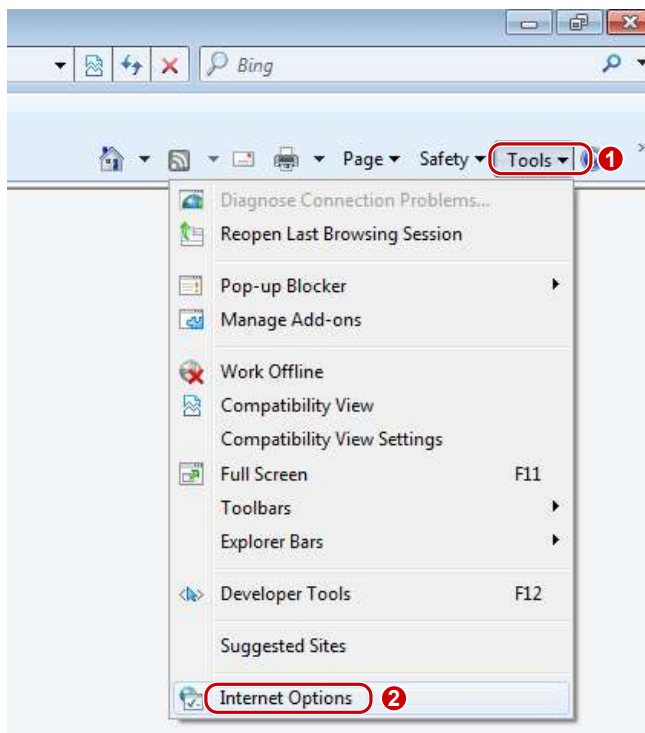

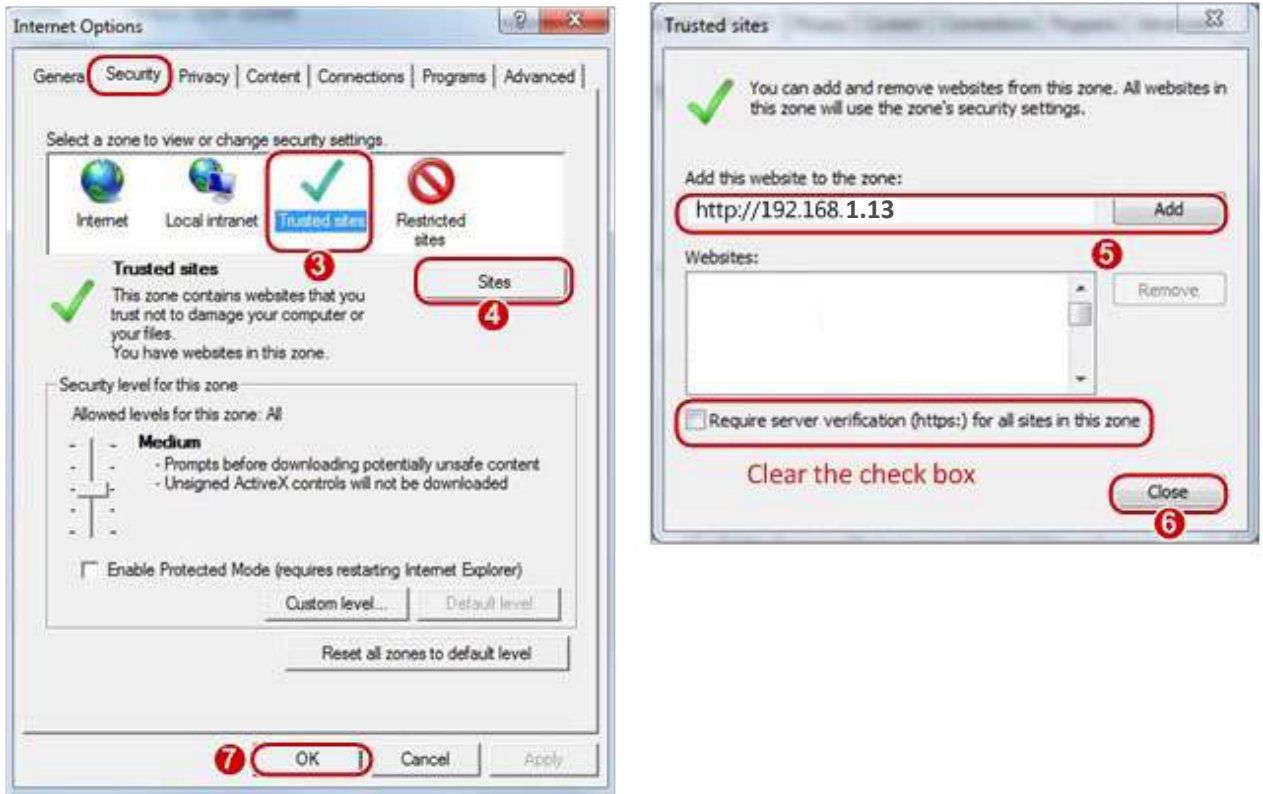

### 3. (Optional) Change user account control settings

Before you access the camera, it's recommended to set **User Account Control** to **Never** notify as shown below.

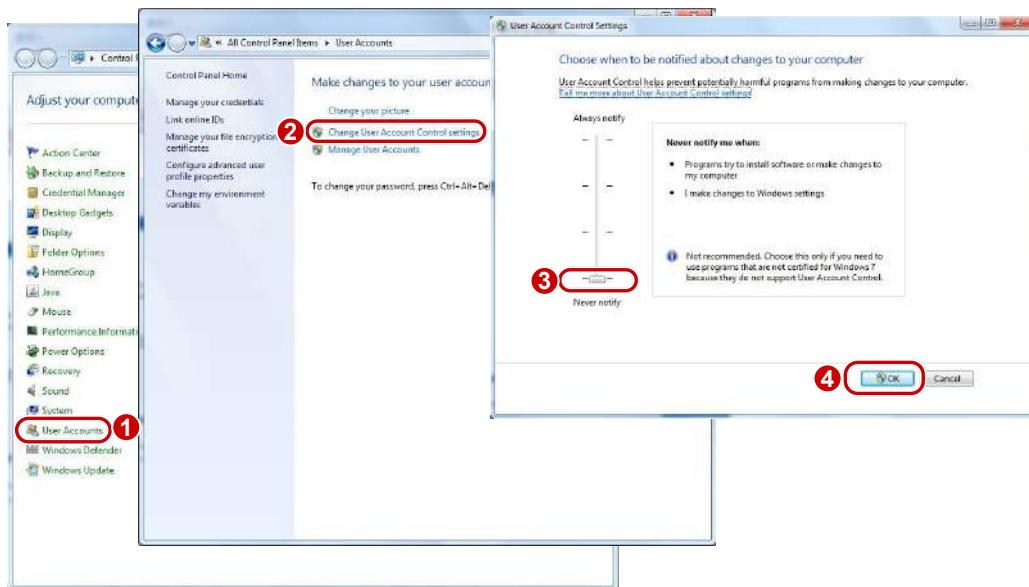

## 1.2 Login

The default static IP address of the camera is 192.168.1.13, and the default subnet mask is 255.255.255.0.

DHCP is enabled by default on the camera. If a DHCP server is deployed in the network, the camera may be assigned an IP address, and you need to use the assigned IP address to log in.

Follow the steps below to log in to the camera's web interface (take IE10 as an example):

1. Open IE, enter the IP address of your camera in the address bar and press **Enter**.
2. At your first login, you need to follow the on-screen instructions to install a plug-in (close all browsers before installation), and then open the browser again to log in. To manually load the plug-in, type `http://IP address/ActiveX/Setup.exe` in the address bar and press **Enter**.

 Please click here to [Download](#) and install the latest plug-in. Close your browser before installation.

3. Set whether to start live view automatically after login.
  - With **Live View** selected, live view will start automatically after login.
  - With **Live View** not selected, you need to start live view manually.



UNV IPC-B314-IR

Username

Password  [Forgot Password?](#)

☒ Live View

5. After first login, the **Change Password** dialog box appears, in which you must set a strong password and enter your email address in case of password retrieval.
  - (1) Set a strong password of 9 to 32 characters including all three elements: digits, letters, and special characters.
  - (2) Enter your email address in case of password retrieval.

**Change Password**

Username:

User Type:

Old Password:

Password:

1~32 common characters entered with keyboard.

Weak Medium Strong

Confirm:

☒ Email

Used to reset password. You are recommended to fill in.

☒ Select Permission

☒ Parameter... ☒ Live View ☒ Playback ☒ Snapshot ☒ Two-way A...

☒ PTZ Control ☒ Event Subs... ☒ Log ☒ Maintenance ☒ Upgrade

**Note:** Your password is weak. Please change your password and log in again (9 to 32 characters including all three elements: digits, letters, and special characters).

OK

See [User](#) for more information.

If you forgot your password, click **Forgot Password** in the login page, then follow the on-screen instructions to reset your password.


## 2 Live View

### 2.1 Live View

The page shows the live video from the camera.

You may double-click the window to enter or exit full screen mode.

Live view page of dual-channel camera

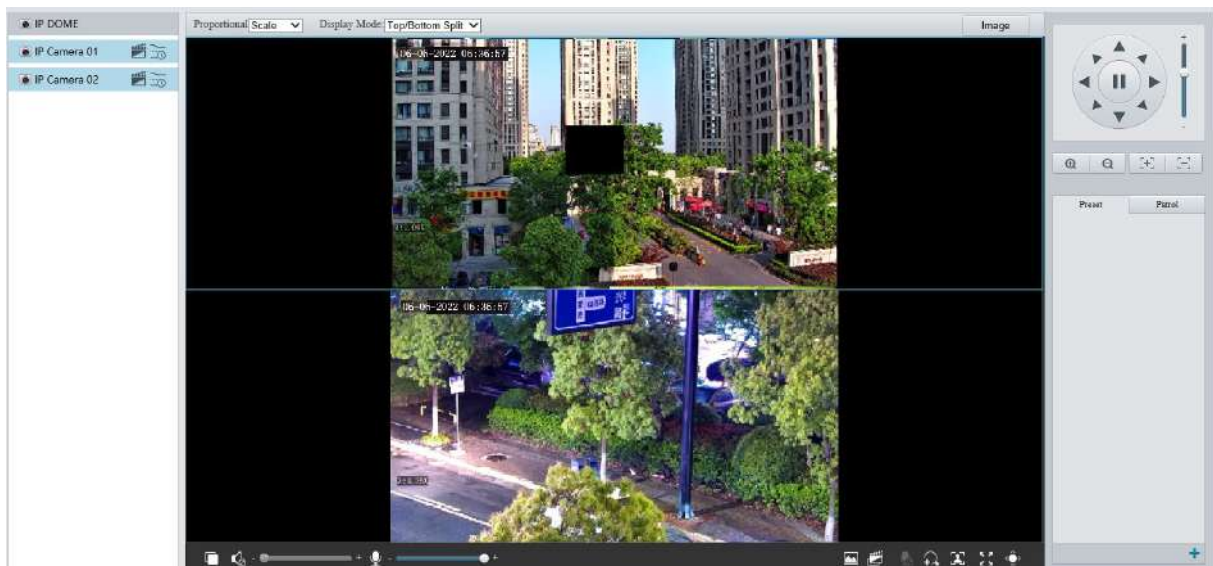





## Live view page of single-channel camera



### NOTE!

Live view operations supported may vary with device model.

## Live View Toolbar
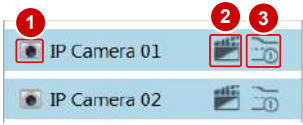
| Item                                                                                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <p>Set the image display ratio in the window.</p> <ul style="list-style-type: none"> <li>Scale: Displays 16:9 images.</li> <li>Stretch: Displays images according to the window size (stretch images to fit the window).</li> <li>Original: Displays images with original size.</li> </ul>                                                                                                                                                                                                  |
|    | <p>Set the image display mode in the window.</p> <ul style="list-style-type: none"> <li>Single Channel: Displays live video of a single channel.</li> <li>Left/Right Split: Displays live video in left/right split mode.</li> <li>Top/Bottom Split: Displays live video in top/bottom split mode.</li> <li>Picture in Picture: Opens a floating live view window on top of the current window.</li> </ul> <p><b>NOTE!</b><br/>This function is only available on dual-channel cameras.</p> |
|    | <p><b>1</b>: Stop/start live view of the selected channel.</p> <p><b>2</b>: Start local recording.</p> <p><b>3</b>: Switch streams.</p>                                                                                                                                                                                                                                                                                                                                                     |
|    | <p>Select a live video stream according to your camera.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|    | <p>Set image parameters.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|   | <p>Start/stop live view.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|  | <p>Turn off/on sound.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|  | <p>Adjust the output volume for the media player on the PC.<br/>Range: 1 to 100.</p>                                                                                                                                                                                                                                                                                                                                                                                                        |
|  | <p>Adjust the microphone volume on the PC during audio communication between the PC and the camera.<br/>Range: 1 to 100.</p>                                                                                                                                                                                                                                                                                                                                                                |
|  | <p>Frame rate/bit rate/resolution/packet loss rate.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|  | <p>Take a snapshot from the displayed live video.</p> <p><b>NOTE!</b><br/>See <a href="#">Local Parameters</a> for the path of the saved snapshots.</p>                                                                                                                                                                                                                                                                                                                                     |
|  | <p>Start/stop local recording.</p> <p><b>NOTE!</b></p> <ul style="list-style-type: none"> <li>See <a href="#">Local Parameters</a> for the path of the saved local recordings.</li> <li>VLC media player is recommended for playing local recordings of 4K cameras.</li> </ul>                                                                                                                                                                                                              |
|  | <p>Start/stop two-way audio.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|  | <p>Start/stop digital zoom. See <a href="#">Digital Zoom</a> for details.</p>                                                                                                                                                                                                                                                                                                                                                                                                               |
|  | <p>Start/stop capturing. See <a href="#">Snapshot</a> for details.</p>                                                                                                                                                                                                                                                                                                                                                                                                                      |
|  | <p>Full screen.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|  | <p>Show/hide PTZ control panel.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

## 2.1.1 Digital Zoom

1. Click  in the live view toolbar to enable digital zoom.



2. View the magnified area.
  - Click in the live view window and roll the wheel to zoom in or out on the image. Drag your mouse to view all the magnified area. To restore, right-click in the window.
  - Click in the live view window and drag your mouse to specify the area (rectangular area) to be magnified. Drag your mouse to view all the magnified area. To restore, right-click in the window.
3. To exit, click .

## 2.1.2 Capture



### NOTE!

This function is only available on certain models.

1. Click  in the live view toolbar to start capture.



2. View captured images.

- Click **Open Image Folder** to view the images captured from the live video on your PC. The images are saved in JPEG format.  
You can change the storage location in **Setup > Common > Local Parameters**. If the disk has less than 100MB free space, you will be prompted to clear up the auto snapshot folder, and new snapshots will not be displayed in the live view page until the disk space is freed.
  - To delete all captured images, click **Clear All Records**.
3. To exit, click .

### 2.1.3 5ePTZ

1. Click  in the live view toolbar to enable 5ePTZ tracking.
  2. Set the tracking area. In 5ePTZ tracking mode, the live view window is divided into 1 panoramic window and 5 tracking windows. You may rest the cursor on the tracking boxes in the panoramic window or tracking windows and use the scroll wheel to zoom in or out, and drag the tracking windows to rearrange them.
  3. Enable perimeter protection (see [Smart](#)), then the camera can automatically detect moving objects in the detection area, and simultaneously track and enlarge 5 objects that trigger the alarm rules until the objects disappear.
4. To exit, click .

## 2.2 PTZ Control



### NOTE!

- This function is only available on PTZ cameras or cameras installed on PT mounts.
- Some lens control functions are available on cameras equipped with motorized lenses.
- The PTZ control buttons may vary with camera model.

## PTZ Control Panel

| Item | Description                                                                                                                                                                                                                                                         |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      | Zoom in/out on images.                                                                                                                                                                                                                                              |
|      | Focus far/near for sharp images at a distance/at close range.                                                                                                                                                                                                       |
|      | Increase/reduce the amount of light that enters the camera for brighter/darker images.                                                                                                                                                                              |
|      | Scene lock, used for locking PTZ and lens.<br><b>NOTE!</b><br>After you lock the scene, the camera does not move, zoom and focus.                                                                                                                                   |
|      | 3D positioning.                                                                                                                                                                                                                                                     |
|      | One-click focus.                                                                                                                                                                                                                                                    |
|      | Area focus.                                                                                                                                                                                                                                                         |
|      | Enable/disable wiper.                                                                                                                                                                                                                                               |
|      | Adjust the rotation speed of the camera.                                                                                                                                                                                                                            |
|      | Adjust the rotation direction of the camera or stop rotation.                                                                                                                                                                                                       |
|      | Enable/disable IR.                                                                                                                                                                                                                                                  |
|      | Enable/disable heater.                                                                                                                                                                                                                                              |
|      | Enable/disable light.                                                                                                                                                                                                                                               |
|      | Enable/disable snow removal.                                                                                                                                                                                                                                        |
|      | Adjust camera zoom.                                                                                                                                                                                                                                                 |
|      | Auto back focus adjustment.                                                                                                                                                                                                                                         |
|      | Shortcut keys for PTZ control. After the mouse cursor changes to one of these shapes in live view, click and hold the left mouse button to operate the PTZ camera.<br><b>NOTE!</b><br>These buttons are unavailable when 3D positioning or digital zoom is enabled. |
|      | Shortcut keys for zooming in or out in live view. Scroll the wheel forward to zoom in or backward to zoom out.<br><b>NOTE!</b><br>This function is only available on cameras with motorized lenses.                                                                 |

## 2.2.1 3D Positioning



### NOTE!

This function is only available on dome cameras and box cameras with motorized lens and PTZ.

1. Click  in the PTZ control panel to enable 3D positioning.



2. Click on the image and drag down/up to delineate a rectangular area to zoom in/out.
3. To exit, click .

## 2.2.2 Area Focus

1. Click  in the PTZ control panel to enable area focus.



2. Click on the image and drag to delineate a rectangular area to start auto focus in this area.
3. To exit, click .

### 2.2.3 Preset

A preset position (preset for short) is a saved view used to quickly steer the PTZ camera to a specific position.

On the PTZ control panel, click **Preset**.

- Add a preset
  1. Use the PTZ directional buttons to steer the camera to the desired position.
  2. Select a preset not in use and click  to edit the preset name.
  3. Click  to save.
- Call a preset

In the preset list, select the preset to call, and then click .

- Delete a preset

In the preset list, select the preset to delete, and then click .

### 2.2.4 Patrol


You can define a patrol route comprising several actions or presets or record a patrol route to allow the PTZ camera to automatically move along the route.

#### 1. Add a patrol route

- Add a common patrol route

In a common patrol route, the PTZ camera performs linear motion between presets.

1. On the PTZ control panel, click **Patrol**.

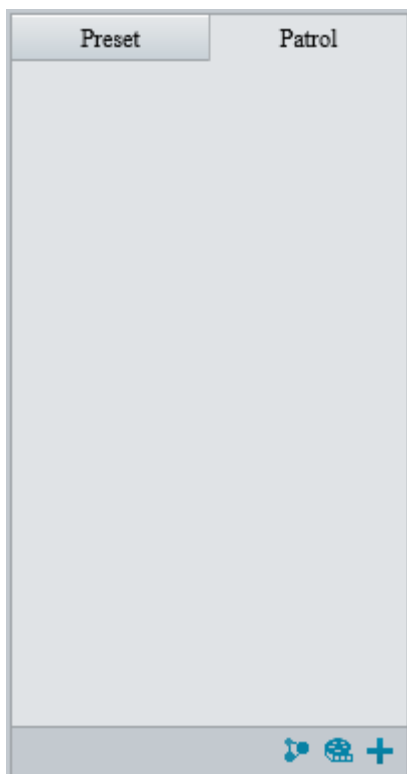

2. Click .

**Add Patrol** ✕

Route ID

Route Name

Added 0/64

| Action Type | Speed | Keep Rotating | Duration(ms)/Ratio | Preset | Stay Time(s) |
|-------------|-------|---------------|--------------------|--------|--------------|
|             |       |               |                    |        |              |
|             |       |               |                    |        |              |
|             |       |               |                    |        |              |
|             |       |               |                    |        |              |
|             |       |               |                    |        |              |
|             |       |               |                    |        |              |
|             |       |               |                    |        |              |
|             |       |               |                    |        |              |
|             |       |               |                    |        |              |

- Set the route ID and name. On certain models, you may need to set the **Patrol Type** to **Common Patrol**.
- Click **Add** to add patrol actions.

**Add Patrol** ✕

Route ID

Route Name


Added 2/64

| Action Type                          | Speed | Keep Rotating            | Duration(ms)/Ratio | Preset | Stay Time(s) |
|--------------------------------------|-------|--------------------------|--------------------|--------|--------------|
| <input type="checkbox"/> Move Left ▾ | 6 ▾   | <input type="checkbox"/> | 10000              |        | 20           |
|                                      |       |                          |                    |        |              |
|                                      |       |                          |                    |        |              |
|                                      |       |                          |                    |        |              |
|                                      |       |                          |                    |        |              |
|                                      |       |                          |                    |        |              |
|                                      |       |                          |                    |        |              |
|                                      |       |                          |                    |        |              |
|                                      |       |                          |                    |        |              |

- Complete the action settings.

| Item               | Description                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Action Type        | <p>10 options: <b>Move Left, Move Right, Move Up, Move Down, Move Up Left, Move Up Right, Move Down Left, Move Down Right, Zoom, Goto Preset.</b></p> <p>Up to 64 actions are allowed. All action types except <b>Goto Preset</b> are recorded as 2 actions. You may use the up and down arrows to rearrange the patrol actions.</p> <p><b>NOTE!</b></p> <p>It is recommended to set the first action to <b>Goto Preset</b>.</p> |
| Speed              | Set how fast the camera performs the action. 1 means the slowest, 9 means the fastest.                                                                                                                                                                                                                                                                                                                                           |
| Keep Rotating      | When enabled, the camera repeats this action for patrol.                                                                                                                                                                                                                                                                                                                                                                         |
| Duration(ms)/Ratio | Set the duration/zoom ratio for the action.                                                                                                                                                                                                                                                                                                                                                                                      |
| Preset             | Select the preset you want the camera to go to.                                                                                                                                                                                                                                                                                                                                                                                  |
| Stay Time          | <p>Set the dwell time after the camera has performed the action.</p> <p>Range: 15s to 1800s.</p>                                                                                                                                                                                                                                                                                                                                 |

6. Click **OK**.

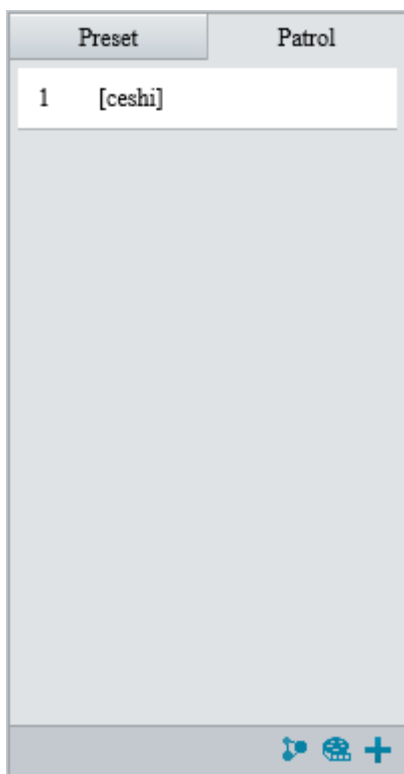

| Item                                                                                | Description          |
|-------------------------------------------------------------------------------------|----------------------|
|  | Start patrol.        |
|  | Edit patrol route.   |
|  | Delete patrol route. |

- Add a scan patrol route


In a scan patrol route, the camera rotates from the start preset to the end preset in a specified gradient and direction.



**NOTE!**

This function is only available on certain models.

1. Before adding a scan patrol route, set presets first. See [Preset](#) for details.
2. On the PTZ control panel, click **Patrol**.

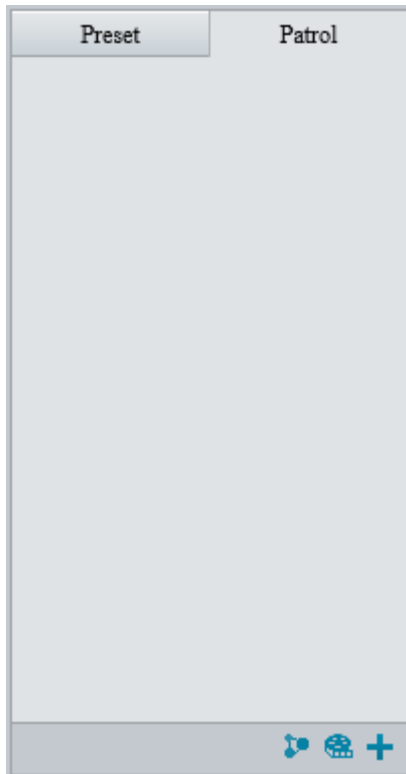

3. Click .

**Add Patrol**

Patrol Type:


Route ID:

Route Name:

| Speed                          | Tilt Gradient                    | Initial Patrol Direction               | Start Preset                      | End Preset                        |
|--------------------------------|----------------------------------|----------------------------------------|-----------------------------------|-----------------------------------|
| <input type="text" value="5"/> | <input type="text" value="2.8"/> | <input type="text" value="Clockwise"/> | <input type="text" value="2[2]"/> | <input type="text" value="1[1]"/> |

OK Cancel


4. Set the patrol type to **Scan Patrol**.
5. Set the route ID and name.
6. Set the patrol parameters.

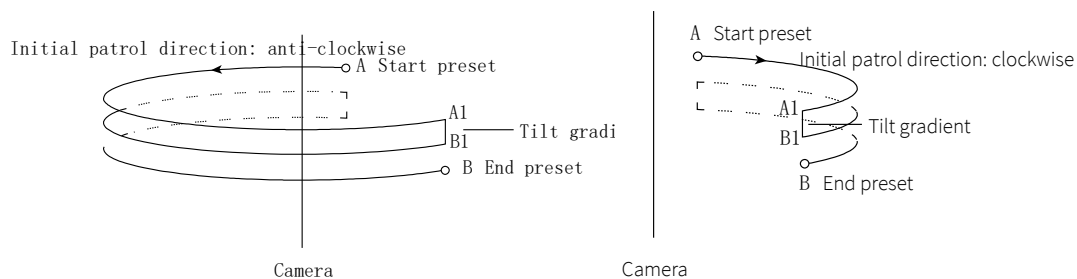

| Item                     | Description                                                                                                                                 |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Speed                    | Set how fast the camera rotate. 1 means the slowest, 9 means the fastest.                                                                   |
| Tilt Gradient            | The average division value of the vertical distance between the start and end presets. The greater the value, the shorter the patrol route. |
| Initial Patrol Direction | The direction of the first rotation from the start preset to the end preset.                                                                |
| Start/End Preset         | Select a preset from the drop-down list as the start/end preset. The start and end presets must be different.                               |

- Record a patrol route

1. On the PTZ control panel, click **Patrol**.

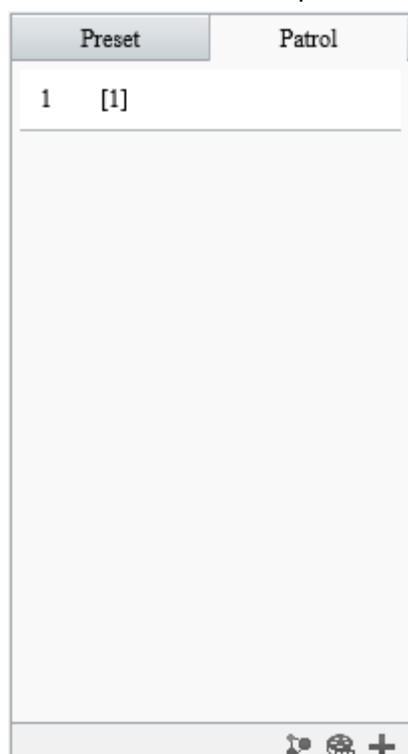

- Click  to start recording. You can adjust the direction, rotation speed and zoom of the camera during recording. All movement data of the camera will be recorded.
- Click  to finish recording and the recording is saved as a patrol route automatically.



1. On the PTZ control panel, click **Patrol**.

| Preset | Patrol       |
|--------|--------------|
| 1      | [1]          |
| 2      | [Mode Route] |



2. Click .

**Patrol Plan** 

☐ **Enable Patrol Plan**

| Mon                  | Tue | Wed                  | Thu             | Fri | Sat | Sun |
|----------------------|-----|----------------------|-----------------|-----|-----|-----|
| <input type="text"/> | ~   | <input type="text"/> | Please select ▼ |     |     |     |
| <input type="text"/> | ~   | <input type="text"/> | Please select ▼ |     |     |     |
| <input type="text"/> | ~   | <input type="text"/> | Please select ▼ |     |     |     |
| <input type="text"/> | ~   | <input type="text"/> | Please select ▼ |     |     |     |
| <input type="text"/> | ~   | <input type="text"/> | Please select ▼ |     |     |     |
| <input type="text"/> | ~   | <input type="text"/> | Please select ▼ |     |     |     |
| <input type="text"/> | ~   | <input type="text"/> | Please select ▼ |     |     |     |
| <input type="text"/> | ~   | <input type="text"/> | Please select ▼ |     |     |     |

Copy To

☐ Select All

☒ Mon

☐ Tue

☐ Wed

☐ Thu

☐ Fri

☐ Sat

☐ Sun

Copy

OK

Cancel

3. Select the **Enable Patrol Plan** check box.
4. Select the patrol route to call and set a start time and an end time for it.
5. Click **OK**.


# 3 Playback



## NOTE!



- Edge recordings refer to video recorded on storage media of cameras; local recordings refer to video recorded on a local PC.
- Before you search for edge recordings, make sure that the camera has storage resources such as memory card, and the storage parameters in [Storage](#) are properly configured.
- Recording playback and download functions are only available on certain models.
- For dual-channel devices, you can set playback parameters for the channels separately.

On the home page, click **Playback**.

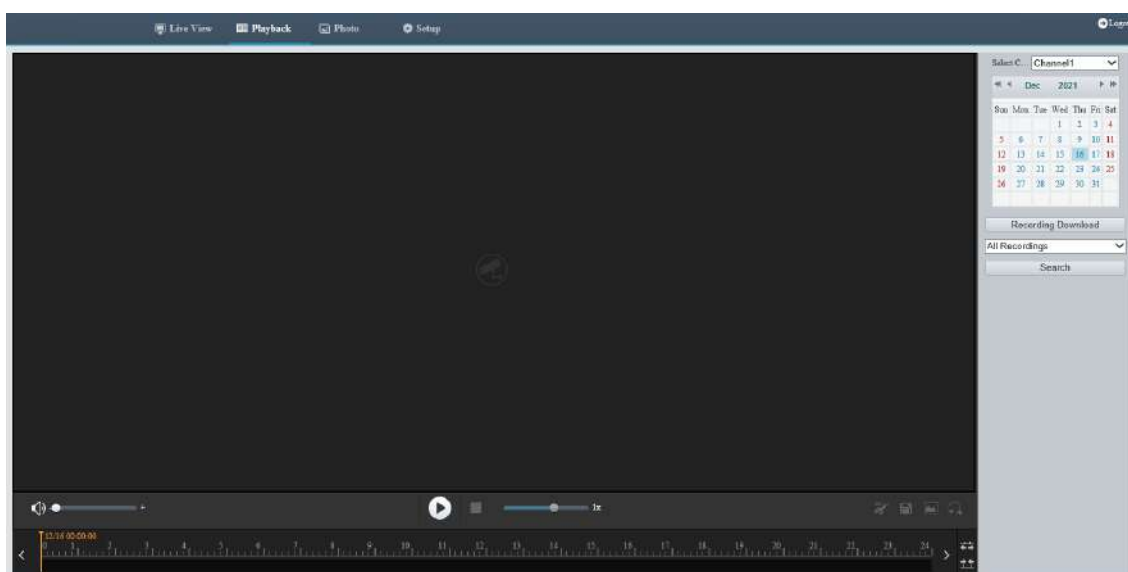

## 3.1 Playback Toolbar

| Button | Description                                                                                                                            |
|--------|----------------------------------------------------------------------------------------------------------------------------------------|
|        | Adjust sound volume. Range: 1 to 100.                                                                                                  |
|        | Start playback.                                                                                                                        |
|        | Pause playback.                                                                                                                        |
|        | Stop playback.                                                                                                                         |
|        | Clip video.                                                                                                                            |
|        | Save.                                                                                                                                  |
|        | Adjust playback speed. The default playback speed is 1x. Both rewind and forward are supported.                                        |
|        | Take a snapshot. The snapshots are saved locally by default. You can change the storage location in <a href="#">Local Parameters</a> . |
|        | Digital zoom. See <a href="#">Digital Zoom</a> for details.                                                                            |
|        | Zoom in/out on the time scale. You can also use the scroll wheel to zoom.                                                              |
|        | When the time scale is zoomed in, you can click  or  to view the previous or next section of the video.                                |
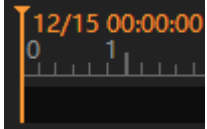
|                                                                                   |                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Playhead. Drag the playhead to skip to any point in the video.</p>                                                                                                                                            |
|  | <p>Playback bar.<br/> Blue: Normal recording.<br/> Red: Alarm recording. To view alarm recordings, you need to configure alarm-triggered recording. See <a href="#">Alarm-triggered Actions</a> for details.</p> |

## 3.2 Search and Play Recordings

1. In case of a multi-channel camera, select the channel to search for recordings.
2. Select the date and recording type.
3. Click **Search**.
4. The search results are displayed. Double-click a result to play it back.



## 3.3 Download Recordings

You can download videos in batches or clip videos to download.

- Download in batches
1. Click **Recording Download**.
  2. Select the recording type, set the start time and end time, and then click **Search**.

**Recording Download**

Recording Type: All Recordings ▼


Recording Time: 2021-12-16 ~ 2021-12-16 Search

Recording Download: Browse...

| <input type="checkbox"/> | No. | Start Time          | End Time            |
|--------------------------|-----|---------------------|---------------------|
| <input type="checkbox"/> | 1   | 2021-12-16 00:00:00 | 2021-12-16 00:15:18 |
| <input type="checkbox"/> | 2   | 2021-12-16 00:15:20 | 2021-12-16 00:39:00 |
| <input type="checkbox"/> | 3   | 2021-12-16 00:39:02 | 2021-12-16 01:02:41 |
| <input type="checkbox"/> | 4   | 2021-12-16 01:02:43 | 2021-12-16 01:26:23 |
| <input type="checkbox"/> | 5   | 2021-12-16 01:26:25 | 2021-12-16 01:50:04 |
| <input type="checkbox"/> | 6   | 2021-12-16 01:50:06 | 2021-12-16 02:13:46 |
| <input type="checkbox"/> | 7   | 2021-12-16 02:13:48 | 2021-12-16 02:37:27 |
| <input type="checkbox"/> | 8   | 2021-12-16 02:37:29 | 2021-12-16 03:01:09 |
| <input type="checkbox"/> | 9   | 2021-12-16 03:01:11 | 2021-12-16 03:24:50 |
| <input type="checkbox"/> | 10  | 2021-12-16 03:24:52 | 2021-12-16 03:48:32 |
| <input type="checkbox"/> | 11  | 2021-12-16 03:48:34 | 2021-12-16 04:12:13 |
| <input type="checkbox"/> | 12  | 2021-12-16 04:12:15 | 2021-12-16 04:35:55 |
| <input type="checkbox"/> | 13  | 2021-12-16 04:35:57 | 2021-12-16 04:59:36 |
| <input type="checkbox"/> | 14  | 2021-12-16 04:59:38 | 2021-12-16 05:23:18 |

Download

3. Click **Browse...** to set the path to the recordings.
4. Select the recordings to download and click **Download**.
  - Download video clips
1. Search for the video to clip.
2. In the playback toolbar, click .
3. Click in the time bar to determine the start time and end time.
4. Click  to finish. The time bar of the clip turns blue and green.

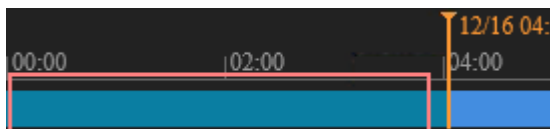

5. Click .
6. Click **Recording Download**, select the video clip, and click **Download**.

**Recording Download**

Recording Type: All Recordings

Recording Download:  Browse...

| <input type="checkbox"/> | No. | Start Time          | End Time            |
|--------------------------|-----|---------------------|---------------------|
| <input type="checkbox"/> | 1   | 2021-12-16 00:00:00 | 2021-12-16 00:05:31 |

Download

## 4 Photo

View the photo storage status. See [Storage](#) for photo storage policy.



### NOTE!

This function is only available on cameras with storage capabilities.

On the home page, click **Photo**.

Refresh Delete

**Photo List** Ascending Order Descending Order Total Capacity for Smart Snapshot 0 GB, Free Space 0 GB, Total 0 GB

- ☐ 20
- ☐ SmartServer
  - ☐ Server1
  - ☐ Server2
- ☐ CommonServer

| Item             | Description                                               |
|------------------|-----------------------------------------------------------|
| Refresh          | Refresh the displayed content.                            |
| Export           | Export the selected photos.                               |
| Delete           | Delete the selected photos.                               |
| Export & Delete  | Export the selected photos and delete them on the server. |
| Ascending Order  | Arrange the items in chronological order.                 |
| Descending Order | Arrange the items in reverse chronological order.         |
| SmartServer      | Used to store smart snapshots.                            |
| CommonServer     | Used to store common snapshots.                           |



### NOTE!

To allocate photo capacity, go to **Setup > Storage > Storage**.

# 5 Setup

## 5.1 Local Parameters

Set local parameters for your PC, including smart, video, recording and snapshot.



### NOTE!

The local parameters displayed may vary with camera model.

1. Go to **Setup > Common > Local Parameters**.

**Smart**

Intelligent Mark ☒ On ☐ Off

Target Mark ☒ Vehicle ☒ Non-Motor Vehicle ☒ Pedestrian

Object Attributes ☒ On ☐ Off

Font Size Small

Display Human Body Sn... ☒ On ☐ Off

Note: When enabled, snapshots of human body will show in live view page. Only effective when face detection is enabled.

**Video**

Display Mode Balanced

Protocol TCP

**Recording and Snapshot**

Recording Subsection By Time

Subsection Time (min) 30

When Storage Full ☒ Overwrite Recording ☐ Stop Recording

Total Capacity(GB) 10

Local Recording MP4

Files Folder C:\Users\I07053\WebPlugin\_IPC\IPCUN\ Browse... Open

Save

2. Set local parameters as needed.

| Item                   |                             | Description                                                                                                                                                                                                                                            |
|------------------------|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Smart                  | Intelligent Mark            | This function shall be used with <a href="#">Cross Line Detection</a> , <a href="#">Intrusion Detection</a> , <a href="#">Enter Area</a> , <a href="#">Leave Area</a> , <a href="#">Mixed-Traffic Detection</a> , and <a href="#">Face Detection</a> . |
|                        | Object Attributes           | When enabled, the attributes of detected objects appear on the live view page.                                                                                                                                                                         |
|                        | Font Size                   | Set the font size of object attributes, including <b>Large</b> , <b>Medium</b> , and <b>Small</b> .                                                                                                                                                    |
|                        | Display Human Body Snapshot | When enabled, human body snapshots appear on the live view page.<br><b>NOTE!</b><br>Only effective when face detection is enabled.                                                                                                                     |
| Video                  | Display Mode                | Set the display mode according to the network status, including <b>Min. Delay</b> , <b>Balanced</b> , and <b>Fluent</b> (from low delay to high delay). You may also customize the display mode as needed.                                             |
|                        | Protocol                    | Set the protocol used to transmit media streams to be decoded by the PC, including <b>TCP</b> and <b>UDP</b> .                                                                                                                                         |
| Recording and Snapshot | Recording                   | <ul style="list-style-type: none"><li>• Subsection By Time: Length of each local recording file. For example, 2 minutes.</li><li>• Subsection By Size: Size of each local recording file. For example, 10MB.</li></ul>                                 |

|                                            |                                                                                                                                                                                                                                                                                                                                                                                     |
|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Subsection Time (min)/Subsection Size (MB) | <ul style="list-style-type: none"> <li>Subsection Time (min): Available when <b>Subsection By Time</b> is selected. 1 to 60 minutes allowed.</li> <li>Subsection Size (MB): Available when <b>Subsection By Size</b> is selected. 10 to 1024MB allowed.</li> </ul>                                                                                                                  |
| When Storage Full                          | <ul style="list-style-type: none"> <li>Overwrite Recording: When the local recording capacity is full, older recordings are overwritten automatically.</li> <li>Stop Recording: When the local recording capacity is full, recording stops automatically.</li> </ul>                                                                                                                |
| Total Capacity (GB)                        | Allocate storage capacity for local recording.<br>Range: 1 to 1024GB.                                                                                                                                                                                                                                                                                                               |
| Local Recording                            | Set the file format for saving local recordings, including <b>TS</b> and <b>MP4</b> .                                                                                                                                                                                                                                                                                               |
| Files Folder                               | Set the location where snapshots and recordings are saved. <ul style="list-style-type: none"> <li>Click <b>Browse...</b> to select the storage location.</li> <li>Click <b>Open</b> to quickly open the folder.</li> </ul> <p><b>NOTE!</b></p> <p>The maximum length of the directory is 260 bytes. If the limit is exceeded, recording or snapshot during live view will fail.</p> |

3. Click **Save**.

## 5.2 Network

### 5.2.1 Ethernet

Connect the camera to the network so that it can communicate with other devices.



**NOTE!**

After you change the IP address, you need to log in again with the new IP address.

- Go to **Setup > Network > Network**.
- Configure Ethernet parameters.
  - IPv4
    - Static Address (obtain IP manually)
      - Select **Static** from the **Obtain IP Address** drop-down list.
      - Enter the IP address, subnet mask, and default gateway address. Make sure that the IP address of the camera is unique in the network.
      - Click **Save**.

| IPv4              |               |
|-------------------|---------------|
| Obtain IP Address | Static        |
| IP Address        | 192.164.2.35  |
| Subnet Mask       | 255.255.255.0 |
| Default Gateway   | 192.164.2.1   |

| IPv6 |      |
|------|------|
| Mode | DHCP |

| Basic          |                  |
|----------------|------------------|
| MTU            | 1500             |
| Port Type      | FE Port          |
| Operating Mode | Auto-negotiation |

**Save**

### ➤ PPPoE

Configure PPPoE to assign the camera a dynamic IP address to establish network connection.

- (1) Select **PPPoE** from the **Obtain IP Address** drop-down list.
- (2) Enter the username and password provided by your ISP (Internet Service Provider).
- (3) Click **Save**.

| IPv4              |         |
|-------------------|---------|
| Obtain IP Address | PPPoE   |
| IP Address        | 0.0.0.0 |
| Username          | user    |
| Password          | *****   |
| Confirm           | *****   |

| IPv6 |      |
|------|------|
| Mode | DHCP |

| Basic          |                  |
|----------------|------------------|
| Port Type      | FE Port          |
| Operating Mode | Auto-negotiation |

**Save**

### ➤ DHCP

DHCP (Dynamic Host Configuration Protocol) is enabled by default. If a DHCP server is deployed in the network, the camera can automatically obtain an IP address from the DHCP server.

- (1) Select **DHCP** from the **Obtain IP Address** drop-down list.
- (2) Click **Save**.

**IPv4**

Obtain IP Address DHCP

---

**IPv6**

Mode DHCP

---

**Basic**

MTU 1500

Port Type FE Port

Operating Mode Auto-negotiation

Save

- IPv6
  - DHCP

By default, the IPv6 mode is set to **DHCP**. The IP address is automatically obtained from the DHCP server.

**IPv6**

Mode DHCP

- Manual

**IPv6**

Mode Manual

Address 23:12:15:64:12:16:12:15

Prefix Length 64

Default Gateway 23:12:15:64:12:16:12:1

(1) Set the IPv6 mode to **Manual**.

(2) Enter the IPv6 address, prefix length and default gateway. Make sure that the IPv6 address is unique in the network.

3. Set the MTU value, port type and operating mode.

- MTU: Set the maximum packet size supported by the network in bytes. The greater the value, the higher the communication efficiency, the higher the transmission delay.
- Port Type: **FE Port** by default.
- Operating Mode: **Auto-negotiation** by default.

**Basic**

MTU 1500

Port Type FE Port

Operating Mode Auto-negotiation

4. Click **Save**.

## 5.2.2 Port

### 1. Port

1. Go to **Setup > Network > Port**.

|            |                                  |
|------------|----------------------------------|
| HTTP Port  | <input type="text" value="80"/>  |
| HTTPS Port | <input type="text" value="443"/> |
| RTSP Port  | <input type="text" value="554"/> |

**Note:** Modifying the RTSP port number will cause the device to restart.

2. You can use the defaults or customize them in case of port conflicts.



### CAUTION!

- If the HTTP port number you entered has been used, a message “Port conflicts. Please try again.” will appear. 23, 81, 82, 85, 3260, and 49152 have been assigned for other purposes and cannot be used.
- In addition to the above port numbers, the system can also dynamically detect other port numbers that are already in use.

- HTTP/HTTPS Port: If you change the HTTP/HTTPS port number, then you need to add the new port number after the IP address when logging in. For example, if the HTTP port number is set to 88, you need to use <http://192.168.1.13:88> to log in to the camera.
  - RTSP Port: Real-Time Streaming Protocol port, enter an available port number.
3. Click **Save**.

## 2. Port Mapping

Configure port mapping so computers on the WAN can access your camera on the LAN.

1. Go to **Setup > Network > Port > Port Mapping**.

2. Enable **Port Mapping**.

3. Select the mapping type.

- UPnP

Port Mapping ☒ On ☐ Off

Mapping Type

UPnP Mapping

| Port Type  | External                         | Internal IP Address | Status   |
|------------|----------------------------------|---------------------|----------|
| HTTP Port  | <input type="text" value="80"/>  | 0.0.0.0             | Inactive |
| RTSP Port  | <input type="text" value="554"/> | 0.0.0.0             | Inactive |
| HTTPS Port | <input type="text" value="443"/> | 0.0.0.0             | Inactive |

**Save**

- Auto: Enable UPnP on the router, then the external port numbers are assigned automatically.
- Manual: The external port numbers need to be set manually.

- Manual

Port Mapping ☒ On ☐ Off

Mapping Type

HTTP Port

RTSP Port

HTTPS Port

**Save**

- If your router does not support UPnP, you need to set the external port numbers manually.

- “Inactive” displayed in the **Status** column indicates that the port number you entered is already in use.

4. Click **Save**.

### 5.2.3 E-mail

Configure E-mail so that the camera can e-mail an alarm message to the specified email addresses when an alarm occurs.

1. Go to **Setup > Network > E-mail**.

**Sender**



Name   
Address   
SMTP Server   
SMTP Port   
TLS/SSL ☐ On ☒ Off  
Snapshot Interval(s)  ☒ Attach Image  
Server Authentication ☒ On ☐ Off  
Username   
Password   
Confirm

**Recipient**

Name1   
Address1    
Name2   
Address2    
Name3   
Address3

2. Set the sender and recipient information.

| Item                  | Description                                                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Sender Name           | Enter the device name.                                                                                                                                                                                                                                                                                                                                                                                     |
| Sender Address        | Enter the device IP.                                                                                                                                                                                                                                                                                                                                                                                       |
| SMTP Server/SMTP Port | Enter the IP address and port number of SMTP server of the sender's e-mail.<br>The default SMTP port number is 25.                                                                                                                                                                                                                                                                                         |
| TLS/SSL               | Enable TLS/SSL to secure e-mail communication.                                                                                                                                                                                                                                                                                                                                                             |
| Snapshot Interval     | Set the interval for taking snapshots to be attached to alarm e-mails.<br><b>NOTE!</b> <ul style="list-style-type: none"> <li>The interval for taking snapshots attached to alarm e-mails is subject to the settings on the <b>E-mail</b> page.</li> <li>Deep-learning exception detection functions captures 1 snapshot by default, and you do not need to set the snapshot interval for them.</li> </ul> |
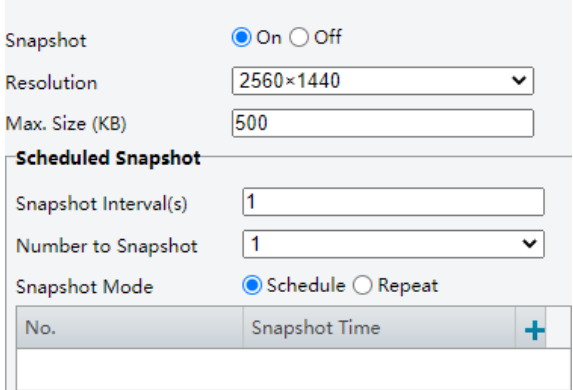
|                        |                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Attach Image           | <p>When enabled, the camera will automatically send an alarm e-mail with 3 attached snapshots taken at set intervals in the event of an alarm.</p> <ol style="list-style-type: none"> <li>1. Select the <b>Attach Image</b> check box.</li> <li>2. Enable <a href="#">Snapshot</a> and set the snapshot resolution as needed.</li> </ol>  |
| Server Authentication  | Enable SMTP server authentication to secure e-mail transmission.                                                                                                                                                                                                                                                                                                                                                            |
| Username/Password      | <p>Enter the username and password of the SMTP server.</p> <p><b>NOTE!</b></p> <ul style="list-style-type: none"> <li>The email only shows the sender name not the username.</li> </ul>  <ul style="list-style-type: none"> <li>The password allows special characters.</li> </ul>                                                        |
| Recipient Name/Address | <ol style="list-style-type: none"> <li>1. Enter the e-mail name and address to receive e-mails.</li> <li>2. After recipient configuration, you can click <b>Test</b> to test the email sending function.</li> </ol>                                                                                                                                                                                                         |

3. Click **Save**.

**Sender**

Name

217.2.1.196.Ily

Address

217.2.1.196

SMTP Server

217.2.1.8

SMTP Port

25

TLS/SSL

☐ On
☒ Off

Snapshot Interval(s)

2

☒ Attach Image

Server Authentication

☒ On
☐ Off

Username

th1@th.com

Password

.....

Confirm

.....

**Recipient**

Name1

th1@th.com

Address1

th1@th.com

Test

Name2

Address2

Test

Name3

Address3

Test

Save

## 5.2.4 EZCloud

You can add the camera to EZCloud via EZView app (without registering an EZCloud account) or EZCloud website to remotely access the camera.

Go to **Setup > Network > EZCloud**. EZCloud is enabled by default.



The image shows the EZCloud configuration interface. It includes the following fields and controls:

- EZCloud**: ☒ On ☐ Off
- Add Without Signup**: ☒ On ☐ Off
- Address**: [ap.ezcloud.uniview.com](http://ap.ezcloud.uniview.com)
- Register Code**: 313SYJOZJSBEVR08D7VUZEK4Y
- Device Status**: Offline
- Username**: limaoji
- Scan**: A QR code for scanning.
- Save**: A blue button at the bottom.

### 1. Add cameras on EZView app without signup

After you add the camera to EZCloud on EZView, you can view live or recorded video and receive alarm notifications from the camera on EZView. Certain functions are not available to cameras added without signup in the app.

1. Enable **Add Without Signup**.
2. Search and download EZView in the app store of your phone.
3. Open EZView and tap **Try Now**.



#### NOTE!

If you have EZView on your phone already, open it, and then select  > **Devices > Add > Add Without Signup**.

4. A message pops up to inform you that no devices have been added. Tap **Add**.
5. Tap **Add Without Signup**.
6. Scan the QR code on the **EZCloud** page using EZView.
7. Enter the password and tap **Login** to add the camera to EZCloud.

### 2. Add cameras on EZCloud website

1. Enter [en.ezcloud.uniview.com](http://en.ezcloud.uniview.com) in the address bar of a web browser.
2. Click **Sign Up** and follow the on-screen instructions to create an account.
3. Log in to the EZCloud.



The image shows the EZCloud website interface. It includes the following elements:

- Navigation Bar**: Device Management, Organization Management, Sharing Records, Personal Info.
- Organization Management**: A search bar with the text "Please enter organization name" and a magnifying glass icon.
- My Cloud Devices**: A section with a table of devices. The table has columns: IP Address, Device Name, Model, Organization, Latest Online Time, Status, and Operation. There are buttons for Add, Delete, and Refresh.
- Device Shared to Me**: A section with a search bar and a magnifying glass icon.

4. Go to **Device Management > My Cloud Devices** and click **Add**.

Add

Please enter device information below.

\* Device Name:

\* Register Code:

\* Organization:

Where to find the register code?

Option 1: Log in to the Web of the device, and then click Network > EZCloud.

Option 2: Find the register code sticker on the device.

OK

Cancel

| Item          | Description                                                                                                                                                                                      |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device Name   | Enter the device name.                                                                                                                                                                           |
| Register Code | Enter the register code.                                                                                                                                                                         |
| Organization  | Select an organization for your camera.<br>By default, the root organization is selected. You may add or delete organizations under <b>Organization Management &gt; My Cloud Organizations</b> . |

5. Click **OK**.
6. Click **Save**.
7. Check device status.
  - EZCloud website: Go to **Device Management > My Cloud Devices** to check whether the camera is online.
  - Camera's web interface: Go to **Setup > Network > EZCloud** to check whether the camera is online.

### 5.2.5 DNS

DNS (Domain Name System) is a distributed database system for translating human readable domain names to machine readable IP addresses, facilitating devices to access external servers or hosts through domain names.

1. Go to **Setup > Network > DNS**.
2. The default DNS server addresses are as follows.

Preferred DNS Server

Alternate DNS Server

### 5.2.6 DDNS

DDNS (Dynamic Domain Name System) automatically updates the DNS server with the dynamic IP address of the device to enable remote Internet access to the device on the network.

1. Go to **Setup > Network > DDNS**.
2. Enable **DDNS Service**.

DDNS Service ☐ On ☒ Off

DDNS Type DynDNS

Server Address www.dyndns.com

Domain Name

Username

Password

Confirm

**Save**

3. Select the DDNS type.

- DynDNS/NO-IP: Third-party DDNS service provider, enter the domain name registered with the DDNS provider.
- EZDDNS: Uniview's DDNS service, enter a domain name for your camera and click **Test** to check if the domain name is available.

DDNS Service ☐ On ☒ Off

DDNS Type EZDDNS

Server Address http://en.ezcloud.uniview.com

Domain Name  **Test**

Device Address http://en.ezcloud.uniview.com

**Save**

4. Click **Save**.

### 5.2.7 SNMP

SNMP is required for the camera to share configuration information to servers.

1. Go to **Setup > Network > SNMP**.

SNMP ☐ On ☒ Off

**Save**

2. Enable **SNMP**.



**NOTE!**

This function is enabled by default on certain models.

3. Set SNMP parameters.

- SNMPv3



**NOTE!**

Before you enable SNMPv3, make sure that it is supported both on your camera and the server.



| Item                | Description                                                                                                                                                                                           |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SNMP Type           | Select <b>SNMPv2</b> . After you select SNMPv2, a message pops up to remind you of potential risks and ask if you want to continue. Click <b>OK</b> .                                                 |
| Read Community      | The default read community name is public, and you may change it as needed. Make sure the read community names of the server and camera are the same, otherwise the two-way authentication will fail. |
| Trap Server Address | Set the trap server address in <a href="#">Management Server</a> .                                                                                                                                    |
| SNMP Port           | The default SNMP port number is 161. You may change it as needed.                                                                                                                                     |

- Click **Save**.

### 5.2.8 802.1x

802.1x provides authentication to devices for access to the network and enhances network security by allowing only authenticated devices to access.

- Go to **Setup > Network > 802.1x**.

802.1x ☐ On ☒ Off

Protocol

EAPOL Version

Username

Password

Confirm

**Save**

- Enable **802.1x**.
- By default, the protocol is set to EAP-MD5. Select the same EAPOL version as that of the router or the switch.
- Enter the username and password for authentication.
- Click **Save**.

### 5.2.9 QoS

QoS (Quality of Service) has the ability to guarantee the performance of high-priority services under limited network capacity.

- Go to **Setup > Network > QoS**.

Audio & Video

Alarm Report

Configuration Manage...

FTP

**Save**

- Set a priority level (0 to 63) for each service.

At present, QoS allows you to assign different priority to audio and video, alarm report, configuration management and FTP transmission. The greater the value, the higher the priority.

As shown in the figure above, the audio & video service takes priority over all other services in case of network congestion.



#### NOTE!

To use QoS, make sure that the router or switch is also configured with QoS.

3. Click **Save**.

### 5.2.10 WebSocket

WebSocket allows you to manage your camera on a third-party platform, such as device version and capability information acquisition, PTZ control, alarm reporting, etc.

1. Go to **Setup > Network > WebSocket**.

WebSocket ☐ On ☒ Off

Destination IP

Destination Port

Device ID

Authentication Key

Confirm Authentication Key

Online Status Offline

**Save**

2. Set the parameters.

| Item                       | Description                                                                                                                                                                            |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| WebSocket                  | Select to enable or disable WebSocket.                                                                                                                                                 |
| Destination IP             | Enter the IP address of the third-party platform.                                                                                                                                      |
| Destination Port           | Enter the listener port of the third-party platform.                                                                                                                                   |
| Device ID                  | The default device ID is the device's serial number. You can set a device ID as needed.                                                                                                |
| Authentication Key         | Enter the authentication key used to connect the camera to a third-party platform. Make sure the authentication key configured on the camera and the third-party platform is the same. |
| Confirm Authentication Key | Confirm the authentication key you entered by entering it again.                                                                                                                       |
| Online Status              | Check whether the device is successfully connected to the third-party platform.                                                                                                        |

3. Click **Save**.

## 5.3 Video & Audio

For dual-channel devices, you can set video and audio parameters for the channels separately.

## 5.3.1 Video

### 1. Video

1. Go to **Setup > Video & Audio > Video**.

Capture Mode: 2560x1440@25

**Main Stream**

Video Compression: H.265

Resolution: 2560x1440

Frame Rate(fps): 25

Bit Rate(Kbps): 4352

Bitrate Type: CBR

Image Quality: Bit Rate / Quality

I Frame Interval: 50

GOP: IP

Smoothing: Clear / Smooth

SVC: On / Off

U-Code: Off

☐ Enable Fourth Stream

☐ Enable Fifth Stream

Save

2. Select a capture mode for your camera.

The **Extended Encoding** function is available only when the capture mode is greater than 8MP.

Capture Mode: 8192x3840@25

Extended Encoding: On / Off

After you change the capture mode, the encoding settings will be reset to defaults and some models of cameras will restart.

3. Set stream parameters.

The streams are independent of each other and can be set with different resolutions, frame rates, video compression formats, etc. Only the main stream supports full resolution.



#### NOTE!

- The fourth and fifth streams are only available on certain models.
- Before configuring the fifth stream, you need to enable the fourth stream first.

☒ Enable Fourth Stream

| Item              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Video Compression | Select a video compression standard for your camera: <b>H.265</b> , <b>H.264</b> or <b>MJPEG</b> .<br><b>NOTE!</b> <ul style="list-style-type: none"><li>• When H.265 or H.264 is selected, <b>Image Quality</b> is not available; When MJPEG is selected, <b>Bit Rate</b>, <b>I Frame Interval</b>, <b>Smoothing</b>, <b>SVC</b> and <b>U-Code</b> are not available.</li><li>• The bit rate restores to the default when you switch between H.264 and H.265.</li></ul> |
| Resolution        | Select a video resolution for your camera. The higher the resolution, the clearer the image.                                                                                                                                                                                                                                                                                                                                                                             |
| Frame Rate(fps)   | Select the frame rate.<br><b>NOTE!</b><br>To ensure image quality, the frame rate shall not be greater than the reciprocal of the shutter speed.                                                                                                                                                                                                                                                                                                                         |
| Bit Rate(Kbps)    | Set the bit rate. Range: 128 to 16384.<br><b>NOTE!</b><br>The bit rate range may vary with device model.                                                                                                                                                                                                                                                                                                                                                                 |

|                  |                                                                                                                                                                                                                                                                                          |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Bitrate Type     | Select the bitrate type. <ul style="list-style-type: none"> <li>• CBR: The camera keeps a specific bit rate by varying the quality of video streams.</li> <li>• VBR: The camera keeps the quality of video streams as constant as possible by varying the bit rate.</li> </ul>           |
| Image Quality    | Configurable when <b>Bitrate Type</b> is set to <b>VBR</b> .<br>The closer the slider is to <b>Quality</b> , the higher the bit rate, and the higher the image quality.<br>The closer the slider is to <b>Bit Rate</b> , the lower the bit rate, and the image quality will be affected. |
| I Frame Interval | Set the number of frames between I-frames. A shorter interval presents better image quality but consumes more bandwidth and storage.                                                                                                                                                     |
| GOP              | Group of Pictures, defines the basic pattern of the video stream encoded with I and P frames.                                                                                                                                                                                            |
| Smoothing        | Set the smoothness of the video stream. Drag the slider to choose whether smoothness or clarity takes precedence.<br><b>NOTE!</b><br>Smoothing is recommended for fluent video in a poor network environment.                                                                            |
| SVC              | SVC (Scalable Video Coding) enables a video stream to be broken into multiple layers of resolution, quality and frame rate, reducing bandwidth consumption without compromising the image quality.                                                                                       |
| U-Code           | Select the U-code mode. <ul style="list-style-type: none"> <li>• Basic Mode: The bit rate is reduced by about 25%.</li> <li>• Advanced Mode: The bit rate is reduced by about 50%.</li> </ul>                                                                                            |

4. Set the BNC output format, **PAL** or **NTSC**.

5. Click **Save**.

## 2. Adaptive Streams


The bit rate of the media stream is automatically adjusted according to the network conditions.



### NOTE!

- This function is only available on certain models.
- This function is enabled by default on certain models.
- It's recommended to enable Adaptive Streams in a poor network environment.

1. Go to **Setup > Video & Audio > Video > Adaptive Streams**.

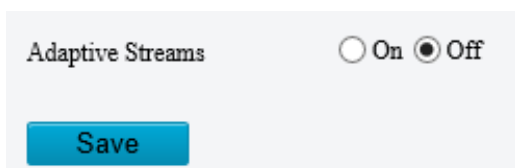

2. Enable **Adaptive Streams**.

3. Click **Save**.

## 5.3.2 Snapshot

Configure basic snapshot parameters and scheduled snapshot.

1. Go to **Setup > Video & Audio > Snapshot**.



## NOTE!

- For dual-channel devices, you can set snapshot parameters for the channels separately.
- When you configure e-mail and FTP, you only need to enable Snapshot and set the resolution and maximum size, and do not need to configure the scheduled snapshot.

2. Enable **Snapshot** and set the resolution and maximum size of snapshots to be saved.
3. Set the snapshot mode.
  - **Schedule:** Set a time for snapshot. For example, with snapshot interval set to 20s, number to snapshot set to 3, and snapshot time set to 16:00:00, the camera will take a snapshot at 16:00:00, 16:00:20 and 16:00:40.

To delete a snapshot time, click .

- **Repeat:** Set an interval for snapshot. For example, with snapshot plan set to 16:00:00 to 20:00:00 on Monday, repeat interval set to 120s, snapshot interval set to 20s, and number to snapshot set to 2, the camera will take a snapshot at 16:00:00, 16:00:20, 16:02:00 and 16:02:20.
  - a Select **Repeat** and set the repeat interval. A valid repeat interval ranges from 1 to 86400.
  - b Select the **Enable Snapshot Plan** check box and set the snapshot plan. See [Arming Schedule](#) for details. A 24/7 snapshot plan is enabled by default.



## NOTE!

- The time periods cannot overlap.
- Up to 4 time periods are allowed.

4. Set the snapshot interval and number to snapshot. For example, if the interval is set to 1s and the number to snapshot is set to 2, the camera will take 2 snapshots (take one first and then take another after 1 second).
5. Click **Save**.

### 5.3.3 Audio

#### 1. Audio

1. Go to **Setup > Video & Audio > Audio**.

The screenshot shows the 'Audio Input' and 'Audio Output' configuration panels. The 'Audio Input' panel includes settings for 'Audio Input' (On/Off), 'Access Mode' (Line/Mic), 'Input Volume' (slider at 50), 'Audio Compression' (G.711U), 'Sampling Rate(KHz)' (8), 'Noise Suppression' (On/Off), and 'Channel 1' (Line) with an 'Enable' checkbox. The 'Audio Output' panel includes 'Audio Output' (Line). A 'Save' button is at the bottom.

2. Set audio input parameters.

| Item                | Description                                                                                                                                                                                                                        |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Audio Input         | Enable/disable audio input.<br><b>NOTE!</b><br>If audio data is not required, select <b>Off</b> to improve camera performance.                                                                                                     |
| Access Mode         | Select the audio input mode, including <b>Line/Mic</b> and <b>RS485</b> .<br><b>NOTE!</b><br>This function is not available on dual-channel cameras.                                                                               |
| Input Volume        | Set the input volume using the slider.                                                                                                                                                                                             |
| Audio Compression   | Select the audio compression format, including <b>G.711U</b> and <b>G.711A</b> .                                                                                                                                                   |
| Sampling Rate(KHz)  | Set the sampling rate according to your required audio compression.<br>In G.711A or G.711U format, only 8KHz is available.                                                                                                         |
| Noise Suppression   | Reduce noise in audio to improve audio output quality.<br><b>NOTE!</b><br>This function is enabled by default.                                                                                                                     |
| Channel 1/Channel 2 | Select the <b>Enable</b> check box to enable audio input for the channel. Channel 1 and Channel 2 (if available) cannot be enabled simultaneously.<br>The default audio input mode of Channel 1 is Mic. You can change it to Line. |

3. Set audio output parameters.

| Item         | Description                                                              |
|--------------|--------------------------------------------------------------------------|
| Audio Output | Select the audio output mode, including <b>Line</b> and <b>Speaker</b> . |

|               |                                         |
|---------------|-----------------------------------------|
| Output Volume | Set the output volume using the slider. |
|---------------|-----------------------------------------|

4. Click **Save**.

## 2. Audio File

1. Go to **Setup > Video & Audio > Audio**.

Alarm Volume

Alarm Audio File

Note: PCM or MP3 files, each no more than 200K.

| No. | Audio                                         | Operation |
|-----|-----------------------------------------------|-----------|
| 1   | You_are_in_the_restricted_area!_Please_leave! |           |
| 2   | You_are_in_the_danger_zone!_Do_no_approach!   |           |
| 3   | Please_be_aware!_You_are_in_a_monitored_area! |           |
| 4   | No_parking!_Please_leave!                     |           |
| 5   | Restricted_area!_Please_leave!                |           |
| 6   | Restricted_area!_Do_not_enter!                |           |
| 7   | Danger!_Deep_water!                           |           |
| 8   | Danger!_Do_not_climb!                         |           |
| 9   | Welcome!                                      |           |
| 10  | Warning!                                      |           |
| 11  | The area is crowded! Please leave!            |           |
| 12  | Please stop! No more people allowed!          |           |
| 13  | Entry forbidden! Please wear a mask!          |           |

2. Set audio file parameters.

| Item             | Description                                                                                                                                                                                                                                                                                                                                    |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Alarm Volume     | Set the alarm volume using the slider.                                                                                                                                                                                                                                                                                                         |
| Alarm Audio File | <p>Click <b>Browse...</b> to import audio files. To play an audio file, click .</p> <p><b>NOTE!</b></p> <ul style="list-style-type: none"> <li>This function is available only on certain models. Up to 5 audio files are allowed.</li> <li>Built-in audio files may vary depending on the smart functions supported by the device.</li> </ul> |

3. Click **Save**.

### 5.3.4 ROI


ROI helps ensure image quality for the specified areas on the image first at low bit rate.

1. Go to **Setup > Video & Audio > ROI**.



## 2. Set ROI areas.

(1) Click  to add a ROI area. The area is a rectangle by default. Up to 8 areas are allowed.

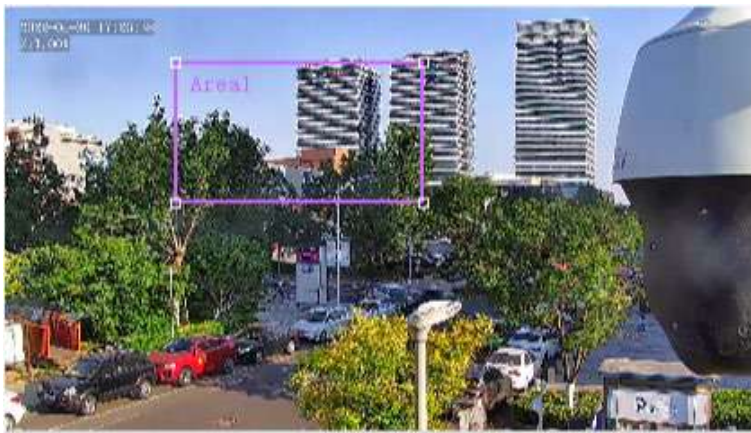

(2) Adjust the position and size of the area or draw an area as needed.

- Adjust the position and size of the area.
  - Point to a border of the area and drag it to the desired position.
  - Point to a handle of the area and drag to resize it.

➤ Draw an area.


Click on the image and drag to draw an area.

### 5.3.5 View Cropping

You can crop the live video to view and save only the video of the region of interest in the form of sub or third stream to save transmission bandwidth and storage.

1. Go to **Setup > Video & Audio > View Crop**.
2. Select the **Enable View Crop** check box.

☒ Enable View Crop

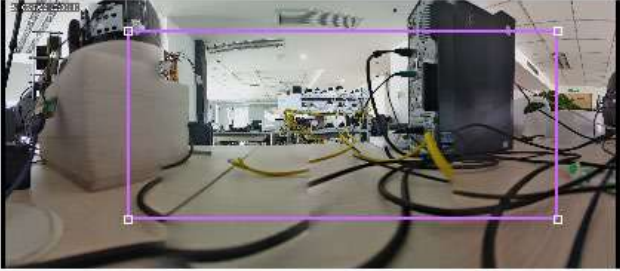

Crop Mode Resolution Mode

Output Stream Type Sub Stream

Resolution 2880×1264

**Save**

3. Select the cropping mode.

- Field of View Mode: Size priority. Set the output stream type, crop size and resolution.

Crop Mode Field of View Mode

Output Stream Type Sub Stream

Crop Size 20:9

Resolution 2880×1264

- Resolution Mode: Resolution priority. Set the output stream type and resolution.

Crop Mode Resolution Mode

Output Stream Type Sub Stream

Resolution 2880×1264

4. Click **Save**.

## 5.3.6 Media Stream

### 1. Media Stream

You can configure a media stream for your camera so that media contents from the camera such as audio and video can be transmitted over the network and played immediately on a third-party client rather than being downloaded first.

1. Go to **Setup > Video & Audio > Media Stream**.

| Stream Profile | Protocol | Destination IP | Destination Port | Persistent | Status | + |
|----------------|----------|----------------|------------------|------------|--------|---|
|----------------|----------|----------------|------------------|------------|--------|---|

2. Click  to add a media stream.

3. Complete the media stream settings.

| Item             | Description                                                                                                                              |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| Stream Profile   | Select a stream type for the camera to transmit media contents to a third-party client.                                                  |
| Destination IP   | Enter the IP address of the device receiving media streams.                                                                              |
| Destination Port | Enter the port number of the device receiving media streams.                                                                             |
| Protocol         | Select a protocol for streaming media data over the network, including <b>TS/UDP</b> , <b>ES/UDP</b> , <b>PS/UDP</b> , and <b>RTMP</b> . |
| Persistent       | Set whether to automatically establish the configured media stream after the camera restarts.                                            |

4. Click **OK**.

## 2. RTSP Multicast

RTSP multicast allows third-party players to request RTSP multicast media streams from the camera through the RTSP protocol.

1. Go to **Setup > Video & Audio > Media Stream > RTSP Multicast Address**.

2. Set the multicast address and port number (multicast address range: 224.0.1.0 to 239.255.255.255, port number range: 0 to 65535).

3. Click **Save**.

## 5.4 PTZ

### 5.4.1 Basic PTZ Settings

Go to **Setup > PTZ > Basic Settings**.

#### 1. Preset Image Freeze

After you enable **Preset Image Freeze**, as the camera moves from one preset to another, the live view window keeps displaying the image of the previous preset until the camera stops at the next preset.

Preset Image Freeze ☐ On ☒ Off

#### 2. PTZ Timeout

After you enable **Stop PTZ Control After Timeout** and set a timeout period, the camera will stop rotation when the predefined timeout period is reached.

Stop PTZ Control After Timeout ☐ On ☒ Off  
PTZ Control Timeout(s)

#### 3. PTZ Speed

Speed Level between Presets  9  
Manual Operation Speed Level  5

- Speed Level between Presets: Set the rotation speed of the camera between presets.
- Manual Operation Speed Level: Set the speed level for manually controlling the PTZ on the live view page.



#### NOTE!

- The higher the manual operation speed level, the higher each PTZ speed level on the live view page.
- When both manual operation speed level and PTZ speed on the live view page are set to the maximum, the PTZ speed reaches the upper limit.

#### 4. PTZ Rectification

Check for PTZ zero point offset and perform rectification.

☐ Enable Auto Rectification Execute Time

- Rectify manually: Click **Rectify** to start rectification immediately.
- Rectify automatically: Select the **Enable Auto Rectification** check box and set the execute time. The camera automatically performs PTZ rectification at the set time.

#### 5. Power Off Memory

When enabled, the system will record the last position of the PTZ and lens in case of power failure. This function is enabled by default.

Power Off Memory ☒ On ☐ Off

## 5.4.2 Home Position

The PTZ camera can automatically operate as configured (e.g., go to a preset or start patrol) if no operation is made within a specified period.



### NOTE!

Before use, you need to add a preset or a patrol route. See [Preset](#) and [Add a patrol route](#) for details.

1. Go to **Setup > PTZ > Home Position**.

2. Enable **Home Position** and complete the settings.

| Item       | Description                                                                |
|------------|----------------------------------------------------------------------------|
| Mode       | Select the home position mode, including <b>Preset</b> and <b>Patrol</b> . |
| ID         | Select the desired preset or patrol route.                                 |
| Idle State | Set the idle duration for the camera to start auto guard.                  |

3. Click **Save**.


## 5.4.3 Pan/Tilt Limit

You can filter out the undesired scenes by limiting the pan and tilt movements.


1. Go to **Setup > PTZ > Limit**.

2. Select the **Enable PTZ Limit** check box.
3. Set the pan and tilt limits. Take the tilt limit configuration as an example:

- (1) Use  to move the camera to the desired upper tilt limit position.
- (2) Click  above the rectangle to set the position as the upper tilt limit.

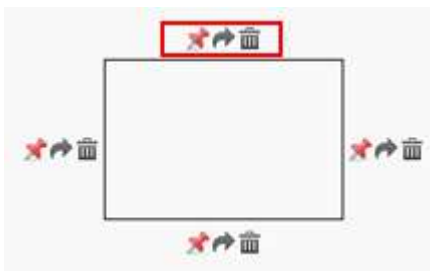

- (3) Use  to move the camera to the desired lower tilt limit position.
- (4) Click  below the rectangle to set the position as the lower tilt limit.

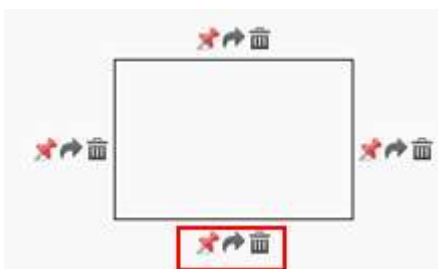

| Item                                                                                | Description                     |
|-------------------------------------------------------------------------------------|---------------------------------|
|  | Rotate the camera to the limit. |
|  | Delete the limit.               |

4. Click **Save**.

#### 5.4.4 Remote PTZ Control

Remote PTZ control is required when the camera is added to a third-party platform and the PTZ protocol does not match.

1. Go to **Setup > PTZ > Remote Control**.

Remote Control

☐ On
 ☒ Off

Listener Port

10008

Address Code

1


Save

2. Enable **Remote Control** and complete the settings.

| Item          | Description                                                                                                                                        |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| Listener Port | Local port number of the camera. Make sure that the port number you entered is not in use. In general, it's recommended to keep the default value. |
| Address Code  | The address code in the command must be the same as the address code configured on the camera, so that the camera can parse the command.           |

## 5.4.5 Preset Snapshot and Patrol Resumption

Go to **Setup > PTZ > Patrol**.

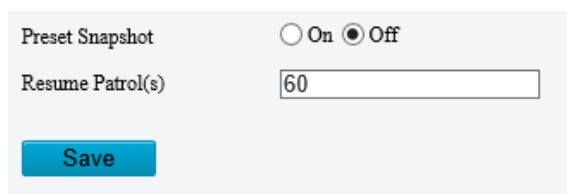

- Preset Snapshot

The camera takes a snapshot at each preset during patrol and uploads the snapshots to FTP.



### NOTE!

Before use, please configure [FTP](#) and [Snapshot](#) first.

- Resume Patrol


In the event of a patrol interruption, the camera can automatically resume the patrol after a specified time period.

## 5.4.6 Orientation Calibration

### 1. North Calibration

Calibrate the north direction.

1. Go to **Setup > PTZ > Orientation**.

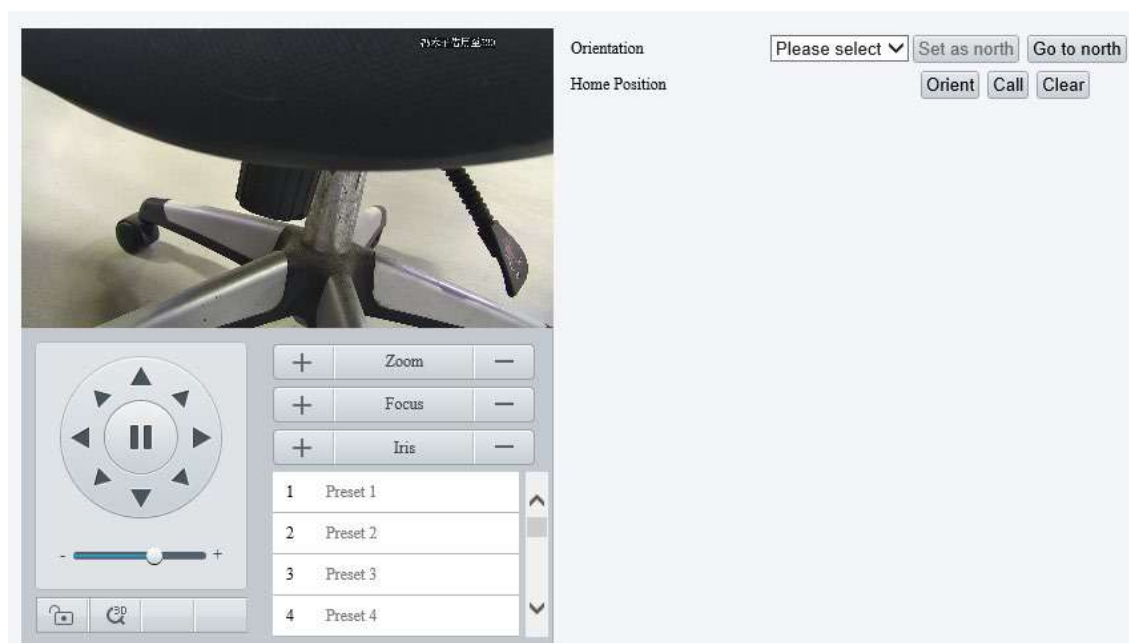


2. Select the mode to calibrate the camera to north.

| Item      | Description                                                                                                                                                                                                                                                                                                                                           |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Manual    | <ul style="list-style-type: none"><li>• Set the north direction manually.</li><li>• After calibration, you can click <b>Go to north</b> to rotate the camera to the calibrated north direction.</li></ul>                                                                                                                                             |
| Automatic | <ul style="list-style-type: none"><li>• Automatically determines the north position based on the geomagnetic field.</li><li>• After calibration, you can click <b>Go to north</b> to rotate the camera to the calibrated north direction.</li></ul> <p><b>NOTE!</b><br/>This option is only available on cameras that support electronic compass.</p> |

## 2. Home Position

Configure a home position so that the camera can use it as the zero degree pan and tilt positions.

1. Go to **Setup > PTZ > Orientation**.

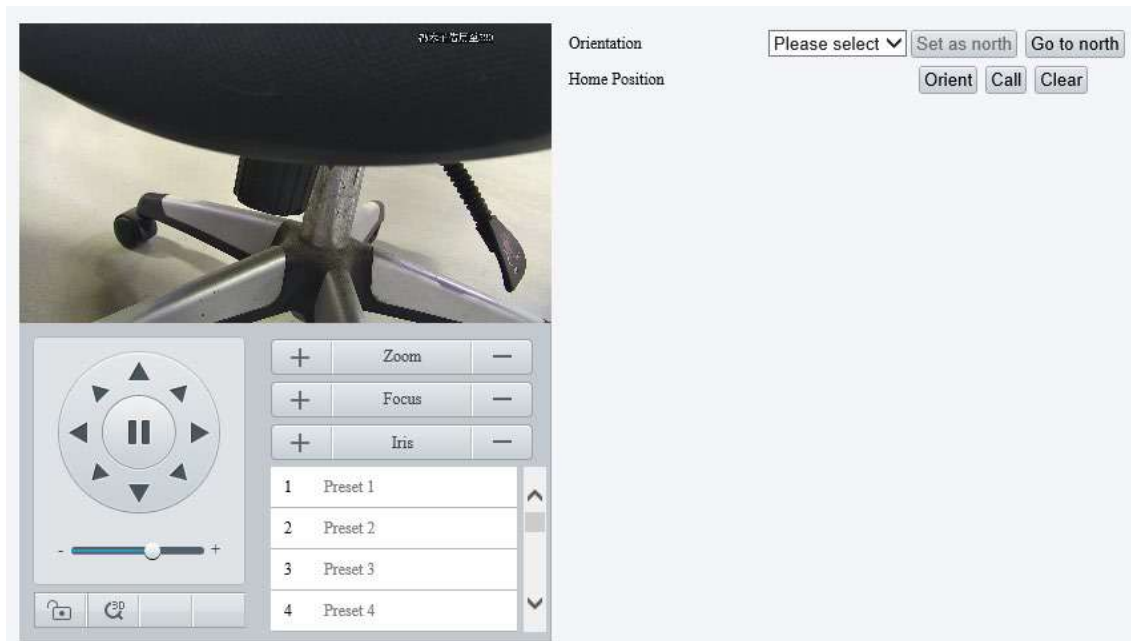

2. Move the camera to the desired position.
3. Click **Orient** to set the position as the home position.

| Item  | Description                           |
|-------|---------------------------------------|
| Call  | Move the camera to the home position. |
| Clear | Clear the home position.              |

## 5.5 Image


### 5.5.1 Image

For dual-channel devices, you can set image parameters for the channels separately.


#### 1. Scenes

A scene mode is a collection of image parameters preset in the camera. The camera provides several predefined scene modes for different application scenarios. You can select a scene as required.

1. Go to **Setup > Image > Image**.

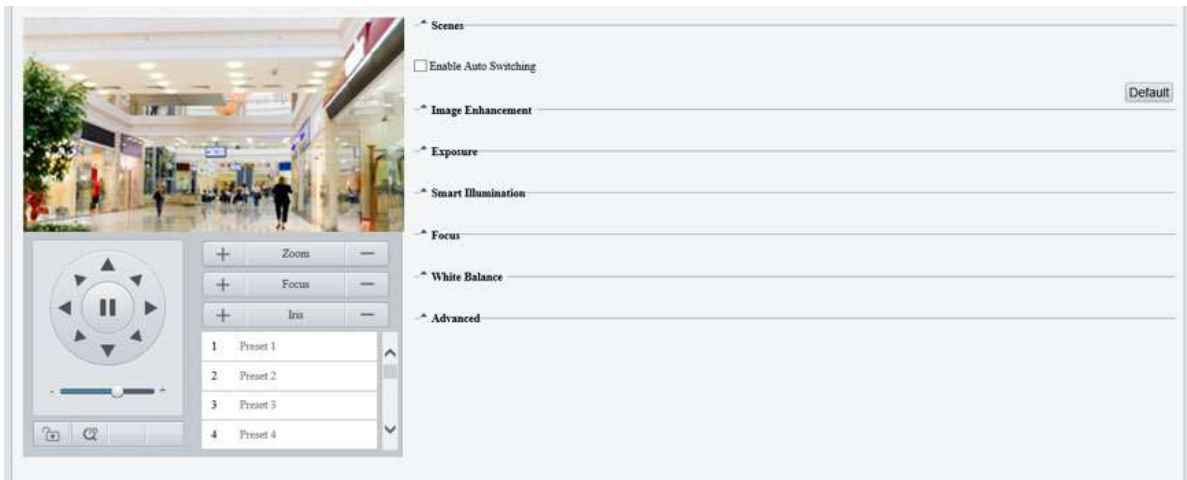

2. Click **Scenes**.

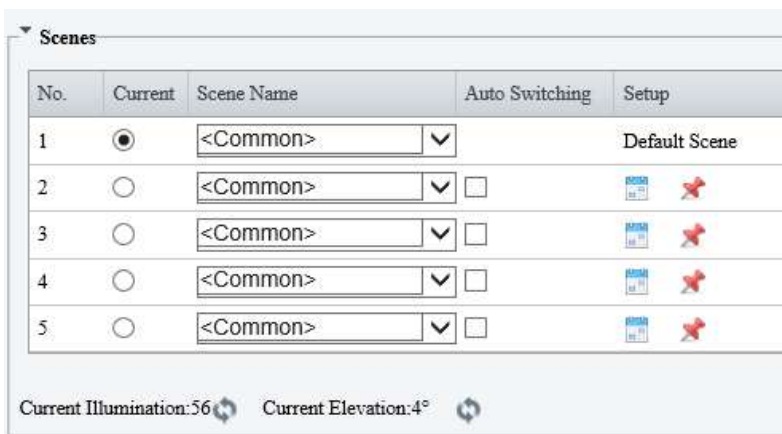

3. Set the scene parameters.

| Item           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Current        | Select the scene you want to use.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Scene Name     | <p>Select the scene mode.</p> <ul style="list-style-type: none"> <li>Common: Recommended for outdoor scenes.</li> <li>Indoor: Recommended for indoor scenes.</li> <li>Road Highlight Compensation/Park Highlight Compensation: Recommended for capturing vehicle license plates.</li> <li>WDR: Recommended for scenes with high-contrast lighting, such as window, corridor, front door or other scenes that are bright outside but dim inside.</li> <li>Custom: Set a scene as needed.</li> <li>Test: Recommended for test scenes.</li> <li>Standard: Recommended for most standard scenes both indoor and outdoor.</li> <li>Vivid: Enhanced saturation based on the Standard scene.</li> <li>Bright: Enhanced brightness based on the Standard scene.</li> <li>Starlight: Recommended for obtaining clear and bright images in low light conditions.</li> <li>Face: Recommended for capturing faces in motion in complicated scenes.</li> <li>Person And Vehicle: Recommended for detecting motor vehicles, non-motor vehicles and pedestrians in road scenes.</li> <li>Intrusion Prevention: Recommended for perimeter protection scenes.</li> </ul> |
| Auto Switching | Select whether to add the scene to the auto-switching list. When enabled, if the conditions for switching to a non-default scene are met, the device will automatically switch to the scene.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

Set auto-switching conditions, including schedule, illumination and PTZ elevation. Auto switching can only be triggered when all the set conditions are met.

| Schedule                                    | Illumination                                | PTZ Elevation                               |
|---------------------------------------------|---------------------------------------------|---------------------------------------------|
| <input type="text"/> ~ <input type="text"/> | <input type="text"/> ~ <input type="text"/> | <input type="text"/> ~ <input type="text"/> |
| <input type="text"/> ~ <input type="text"/> | <input type="text"/> ~ <input type="text"/> | <input type="text"/> ~ <input type="text"/> |
| <input type="text"/> ~ <input type="text"/> | <input type="text"/> ~ <input type="text"/> | <input type="text"/> ~ <input type="text"/> |
| <input type="text"/> ~ <input type="text"/> | <input type="text"/> ~ <input type="text"/> | <input type="text"/> ~ <input type="text"/> |

OK

Cancel

Set the scene as the default scene.

#### 4. (Optional) Enable auto switching.

- When enabled, if the conditions for switching to a non-default scene are met, the camera will automatically switch to the scene; otherwise, the camera uses the default scene.
- After you select the **Enable Auto Switching** check box, all scene parameters cannot be configured.
- If multiple non-default scenes meet the switching condition at the same time, the camera will switch to the scene with the minimum number (starts from 1 to 5).

## 2. Image Enhancement

### 1. On the **Image** page, click **Image Enhancement**.



### 2. Set the image enhancement parameters.

| Item       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Brightness | <p>The overall lightness or darkness of the image.</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <div style="display: flex; justify-content: space-around; align-items: center;"> <span>Low brightness</span> <span>High brightness</span> </div> |

| Item               | Description                                                                                                                                                                                                                                                                                                        |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Saturation         | <p>The intensity or vividness of colors in the image.</p> <div>   </div> <div> <p>Low saturation</p> <p>High saturation</p> </div>              |
| Contrast           | <p>The difference between the lightest and darkest tones in the image.</p> <div>   </div> <div> <p>Low contrast</p> <p>High contrast</p> </div> |
| Sharpness          | <p>The definition of edges in the image.</p> <div>   </div> <div> <p>Low sharpness</p> <p>High sharpness</p> </div>                           |
| 2D Noise Reduction | Reduce noise by individually analyzing each frame, which may cause image blur.                                                                                                                                                                                                                                     |
| 3D Noise Reduction | Reduce noise by analyzing the difference between successive frames, which may cause image smearing or ghosting.                                                                                                                                                                                                    |

| Item           | Description                                                                                                                                                            |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Image Rotation | The rotation of the image.                                                                                                                                             |
|                |     |
|                | Normal Flip vertical                                                                                                                                                   |
|                |     |
|                | Flip horizontal 180°                                                                                                                                                   |
|                |   |
|                | 90° clockwise 90° anti-clockwise                                                                                                                                       |

To restore defaults, click **Default**.

### 3. Exposure



#### NOTE!

- The exposure settings may vary with device model.
- The default settings are scene-adaptive. Use default settings unless modification is necessary.

1. On the **Image** page, click **Exposure**.

Exposure

Exposure Mode

Custom

Shutter(s)

1/100000 ~ 1/150

Gain

0 ~ 40

Slow Shutter

☐ On ☒ Off

Slowest Shutter

1/12

Compensation

0

Restore Auto Exposure(min)

15

Metering Control

Face Metering

Face Brightness

50

Min. Duration(min)

5

Day/Night Mode

☒ Automatic ☐ Day ☐ Night ☐ Input Boolean

Day/Night Sensitivity

Medium

Day/Night Switching(s)

3

WDR

Off

WDR Level

5

Suppress WDR Stripes

☐ On ☒ Off

WDR On Sensitivity

5

WDR Off Sensitivity

5

## 2. Set the exposure parameters.

| Item          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Exposure Mode | <p>Select the exposure mode.</p> <ul style="list-style-type: none"> <li>Automatic: The camera automatically set the optimum shutter speed according to the scene.</li> <li>Custom: User can set exposure parameters as needed.</li> <li>Shutter Priority: The camera adjusts shutter as priority to adjust the image quality.</li> <li>Iris Priority: The camera adjusts iris as priority to adjust the image quality.</li> <li>Indoor 50Hz: Reduce stripes by limiting shutter frequency.</li> <li>Indoor 60Hz: Reduce stripes by limiting shutter frequency.</li> <li>Manual: Fine-tune image quality by setting shutter, gain and iris manually.</li> <li>Low Motion Blur: Control the minimum shutter to reduce motion blur in faces captured in motion.</li> </ul> |
| Shutter(s)    | <p>Shutter is used to control the light that comes into the lens. A fast shutter speed is ideal for scenes in quick motion. A slow shutter speed is ideal for scenes that change slowly.</p> <p><b>NOTE!</b></p> <ul style="list-style-type: none"> <li>This parameter is configurable when <b>Exposure Mode</b> is set to <b>Manual</b>, <b>Shutter Priority</b>, or <b>Custom</b>.</li> <li>If <b>Slow Shutter</b> is disabled, the reciprocal of the shutter speed must be greater than the frame rate.</li> </ul>                                                                                                                                                                                                                                                   |
| Gain          | <p>Control image signals so that the camera can output standard video signals in different light conditions.</p> <p><b>NOTE!</b></p> <p>This parameter is configurable when <b>Exposure Mode</b> is set to <b>Manual</b> or <b>Custom</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Slow Shutter               | <p>Increase image brightness in low light conditions.</p> <p><b>NOTE!</b><br/>This parameter is configurable when <b>Exposure Mode</b> is not set to <b>Iris Priority</b> and <b>Image Stabilization</b> is disabled.</p>                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Slowest Shutter            | <p>Set the slowest shutter speed for exposure.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Compensation               | <p>Adjust the compensation value as required to achieve the desired image effect.</p> <p><b>NOTE!</b><br/>This parameter is configurable when <b>Exposure Mode</b> is not set to <b>Manual</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Restore Auto Exposure(min) | <p>Set the duration for the camera to restore automatic exposure mode.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Metering Control           | <p>Set how the camera measures the intensity of light.</p> <ul style="list-style-type: none"> <li>Center-Weighted Average Metering: Measure light mainly in the central part of the image.</li> <li>Evaluative Metering: Measure light in the specified area of the image.</li> <li>Spot Metering: Similar to evaluative metering. But it cannot increase the brightness of images.</li> <li>Face Metering: Adjust image quality in poor lighting conditions by controlling the brightness of captured faces in face scenes.</li> </ul> <p><b>NOTE!</b><br/>This parameter is configurable when <b>Exposure Mode</b> is not set to <b>Manual</b>.</p> |
| Day/Night Mode             | <ul style="list-style-type: none"> <li>Automatic: The camera automatically switches between day mode and night mode according to the ambient lighting condition to output optimum images.</li> <li>Day: The camera outputs high-quality images in daylight conditions.</li> <li>Night: The camera outputs high-quality images in low-light conditions.</li> <li>Input Boolean: The camera switches between day mode and night mode according to the Boolean value input from a connected third-party device.</li> </ul> <p><b>NOTE!</b><br/>The <b>Input Boolean</b> option is only available on certain models.</p>                                  |
| Day/Night Sensitivity      | <p>Light threshold for switching between day mode and night mode. A higher sensitivity value means that the camera is more sensitive to the change of light and is therefore more easily to switch between day mode and night mode.</p> <p><b>NOTE!</b><br/>This parameter is configurable when <b>Day/Night Mode</b> is set to <b>Automatic</b>.</p>                                                                                                                                                                                                                                                                                                 |
| Day/Night Switching(s)     | <p>Set the length of time before the camera switches between day mode and night mode after the switching conditions are met.</p> <p><b>NOTE!</b><br/>This parameter is configurable when <b>Day/Night Mode</b> is set to <b>Automatic</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                                        |
| WDR                        | <p>Enable WDR to ensure clear images in high contrast conditions.</p> <p><b>NOTE!</b><br/>This parameter is configurable when <b>Exposure Mode</b> is set to <b>Automatic</b>, <b>Custom</b>, <b>Shutter Priority</b>, <b>Indoor 50Hz</b> or <b>Indoor 60Hz</b> and when <b>Image Stabilization</b> and <b>Defog</b> are disabled.</p>                                                                                                                                                                                                                                                                                                                |
| WDR Level                  | <p>Adjust the WDR level.</p> <p><b>NOTE!</b><br/>Level 7 or higher is recommended if there is a high contrast between the bright and dark areas in the scene. In the case of low contrast, it is recommended to disable WDR or use level 1 to 6.</p>                                                                                                                                                                                                                                                                                                                                                                                                  |
| WDR On/Off Sensitivity     | <p>When <b>WDR</b> is set to <b>Automatic</b>, adjust the parameter to change the WDR switching sensitivity.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Suppress WDR Stripes       | <p>When enabled, the camera automatically adjusts the slow shutter frequency according to the light frequency to minimize stripes in the image.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

To restore defaults, click **Default**.

#### 4. Smart Illumination

1. On the **Image** page, click **Smart Illumination**.

▼ **Smart Illumination**

Smart Illumination ☐ On ☒ Off

Illumination Mode

Control Mode

Illumination Level

2. Enable **Smart Illumination**.
3. Set the smart illumination parameters.

| Item               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Illumination Mode  | <ul style="list-style-type: none"> <li>• Infrared: The camera uses infrared light illumination.</li> <li>• White Light: The camera uses white light illumination.</li> <li>• Warm Light: The camera uses warm light illumination.</li> <li>• Laser: The camera uses laser light illumination.</li> </ul> <p><b>NOTE!</b><br/>Before you select <b>Warm Light</b>, please set the <b>Port Mode</b> to <b>Illumination</b> (go to Setup &gt; System &gt; Ports &amp; Devices &gt; Serial Port).</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Control Mode       | <ul style="list-style-type: none"> <li>• Global Mode: The camera automatically adjusts illumination and exposure to achieve the balanced image effect. Some areas might be overexposed if you select this option. This option is recommended if you focus on the monitoring range and image brightness.</li> <li>• Overexposure Restrain: The camera automatically adjusts illumination and exposure to avoid regional overexposure. Some areas might be dark if you select this option. This option is recommended if you focus on the clarity of the monitoring center area.</li> <li>• Road: This mode offers a strong overall illumination and is recommended for monitoring wide-range scenes, for example, road.</li> <li>• Park: This mode offers a uniform illumination and is recommended for monitoring small-range scenes with many obstacles, for example, park.</li> <li>• Custom Level: This mode allows you to manually control the intensity of illumination.</li> <li>• Custom Level(Always On): In this mode, the illumination is always on.</li> </ul> |
| Illumination Level | <p>Set the intensity of the illuminator. The greater the value, the higher the intensity. 0 is off.</p> <ul style="list-style-type: none"> <li>• Near-illumination Level: Recommended for near focus scenes.</li> <li>• Mid-illumination Level: Recommended for medium distance focus scenes.</li> <li>• Far-illumination Level: Recommended for far focus scenes.</li> </ul> <p><b>NOTE!</b><br/>This parameter is configurable when <b>Control Mode</b> is set to <b>Custom Level</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

To restore defaults, click **Default**.

## 5. Focus

1. On the **Image** page, click **Focus**.

▼ **Focus**

Focus Mode

Scene

Zoom Speed

Min. Focus Distance(cm)

Max. Zoom Ratio

## 2. Set the focus parameters.


| Item                | Description                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Focus Mode          | <ul style="list-style-type: none"> <li>• Auto Focus: Automatic focus control based on the current light conditions.</li> <li>• Manual Focus: Manual focus control.</li> <li>• One-Click Focus: Automatic focus in the event of rotation, zoom, and preset call.</li> <li>• One-Click Focus (IR): Recommended for low light scenes.</li> <li>• One-click Focus (Locked): Recommended for road highlight scenes.</li> </ul> |
| Scene               | <ul style="list-style-type: none"> <li>• Normal: Common monitoring scenes such as road, park, etc.</li> <li>• Long Distance: Long-distance monitoring scenes</li> </ul>                                                                                                                                                                                                                                                   |
| Zoom Speed          | <ul style="list-style-type: none"> <li>• 1: Low zoom speed. Recommended for common scenes.</li> <li>• 2: High zoom speed. Recommended when <b>Quick Focus</b> is enabled.</li> </ul>                                                                                                                                                                                                                                      |
| Min. Focus Distance | Select the minimum focus distance.                                                                                                                                                                                                                                                                                                                                                                                        |
| Max. Zoom Ratio     | Select the maximum digital zoom ratio, including <b>22, 44, 88, 176, and 352</b> .                                                                                                                                                                                                                                                                                                                                        |

To restore the default settings, click **Default**.

## 6. White Balance

White balance is used to eliminate unnatural color casts in images under different color temperatures for optimal color reproduction.

### 1. On the **Image** page, click **White Balance**.

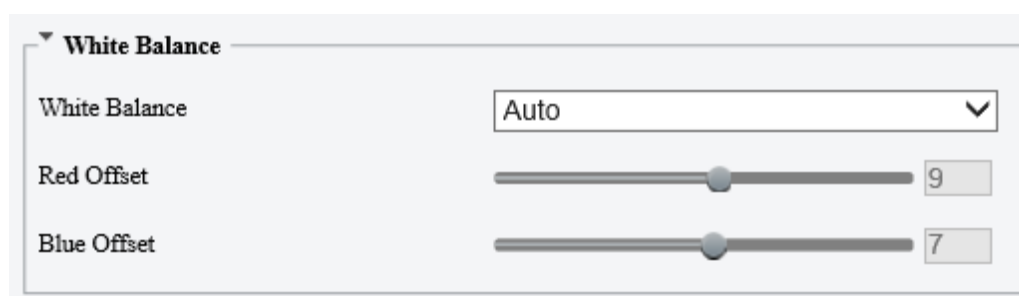

### 2. Set the white balance parameters.

| Item            | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| White Balance   | Adjust the red and blue gains of the image to remove unrealistic color casts. <ul style="list-style-type: none"> <li>• Auto/Auto 2: Automatically adjust the red and blue gains according to the lighting conditions. If there are still color casts in Auto mode, try Auto 2 mode.</li> <li>• Fine Tune: Manually adjust the red and blue offsets.</li> <li>• Sodium Lamp: Automatically adjust the red and blue gains for optimal color reproduction in sodium light sources.</li> <li>• Outdoor: Recommended for outdoor scenes where the color temperature varies widely.</li> <li>• Locked: Keep the current color temperature.</li> </ul> |
| Red/Blue Offset | Set the red/blue offset.<br><b>NOTE!</b><br>This parameter is configurable when <b>White Balance</b> is set to <b>Fine Tune</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

To restore defaults, click **Default**.

## 7. Defog

Defog is used to improve image visibility in foggy, hazy and other low-visibility scenes.

### 1. On the **Image** page, click **Advanced**.

**Advanced**

Defog Automatic

Defog Intensity 5



### NOTE!

This function is only available when WDR is disabled.

## 2. Set the defog parameters.

| Item            | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Defog           | Select the defog mode, including <b>Automatic</b> , <b>On</b> , and <b>Off</b> .<br>In <b>Automatic</b> mode, the camera automatically adjusts the defog intensity according to the fog concentration for clear images.                                                                                                                                                                                                                                                                                      |
| Defog Intensity | Adjust the defog intensity.<br>In a heavy-fog environment, the higher the defog level, the clearer the image; in a fog-free or light-fog environment, there is not much difference between levels 1 to 9.<br><b>NOTE!</b><br>Optical defog is available on certain models.<br>To enable optical defog, select <b>On</b> and set the defog intensity to 6 or higher, or select <b>Automatic</b> . Optical defog is automatically turned on in thick fog, and the image changes from color to black and white. |

To restore defaults, click **Default**.

## 8. Lens Info



### NOTE!

- This function is only available on cameras with external lenses.
- When using a P-IRIS lens with Z/F function, connect the iris control cable to the Z/F port of the camera.

## 1. On the **Image** page, click **Lens Info**.

Lens Type Common

Lens Model LENS-DM0734P

Aperture Control Manual

F-Number 100

Use Recommended Value

## 2. Set the lens parameters.

| Item       | Description                                                                                                                                                |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Lens Type  | Select the lens type, including <b>Common</b> and <b>IR</b> .                                                                                              |
| Lens Model | Select the lens model, including <b>LENS-DC-IRIS</b> , <b>LENS-DM0734P</b> , etc.<br><b>NOTE!</b><br>The lens models supported may vary with device model. |

|                       |                                                                                                                                     |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Aperture Control      | Select automatic or manual iris control.<br><b>NOTE!</b><br>This parameter is configurable when <b>Lens Type</b> is <b>P-IRIS</b> . |
| F-Number              | Set the f-number to adjust the iris opening manually.                                                                               |
| Use Recommended Value | The camera optimizes the iris opening based on the current lighting conditions.                                                     |

To restore defaults, click **Default**.

## 9. Dewarping

Dewarping is used to correct distorted images caused by wide-angle lenses.

1. On the **Image** page, click **Advanced**.




2. Enable **Dewarping** and set the dewarping level as needed.

To restore defaults, click **Default**.

## 10. Image Stabilization

A camera mounted outdoors may be shaken by external forces (e.g., wind), causing image blur. In this case, you can enable image stabilization to ensure the image quality.

1. On the **Image** page, click **Advanced**.




2. Select **On** or **Off** to enable or disable image stabilization.

To restore defaults, click **Default**.

## 11. Fusion Mode

In fusion mode, the object details on the visible image are overlaid on the thermal image, so that you can see the object details on the thermal image as well.

1. On the **Image** page, select **Channel 2** and click **Fusion Mode**.

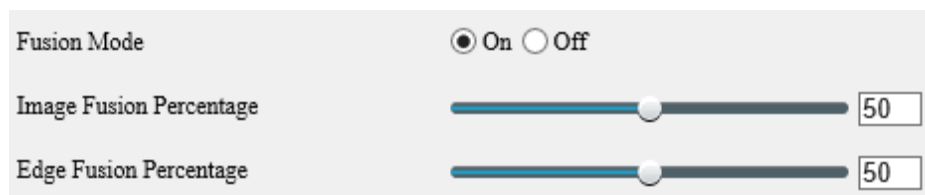

2. Select **On** to enable fusion mode.
3. Set the fusion percentage.

| Item                    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |  |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Image Fusion Percentage | <p>The greater the value, the closer the thermal image effect is to the visible image effect.</p> <div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div style="text-align: center;">  <p>Image fusion percentage: 0<br/>Edge fusion percentage: 50</p> </div> <div style="text-align: center;">  <p>Image fusion percentage: 100<br/>Edge fusion percentage: 50</p> </div> </div> |  |

|                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Edge Fusion Percentage | <p>The greater the value, the sharper the object edges in the thermal image.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>Image fusion percentage: 50<br/>Edge fusion percentage: 0</p> </div> <div style="text-align: center;">  <p>Image fusion percentage: 50<br/>Edge fusion percentage: 100</p> </div> </div> |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|




#### NOTE!

The frame rate of live video may be limited when the fusion mode is enabled on certain models.

## 12. Non-Uniformity Correction

Non-uniformity correction is used to correct the non-uniformity of pixels caused by different response rates between thermal units to generate higher quality and more accurate images.

1. On the **Image** page, select **Channel 2** and click **Advanced**.



2. Select the non-uniformity correction mode.
  - Shutter Compensation: In this mode, the live video may be lost.
  - Background Compensation: In this mode, scene change may occur during image collection.

## 13. Reduce Vertical Stripe Noise


This function helps remove vertical stripes in images caused by sensor process or external temperature.

1. On the **Image** page, select **Channel 2** and click **Advanced**.




2. Drag the slider or enter a value to set the intensity. The greater the value, the blurrier the image.

Before removing vertical stripe noise

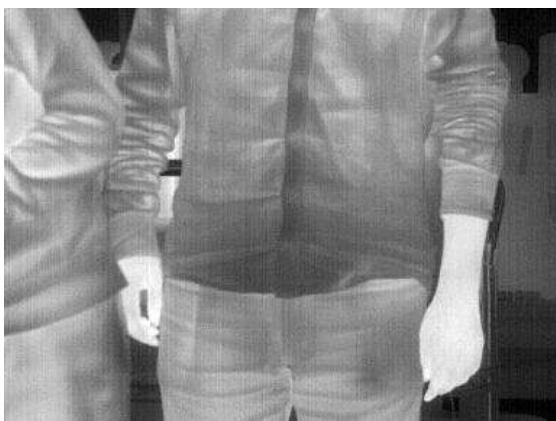

After removing vertical stripe noise

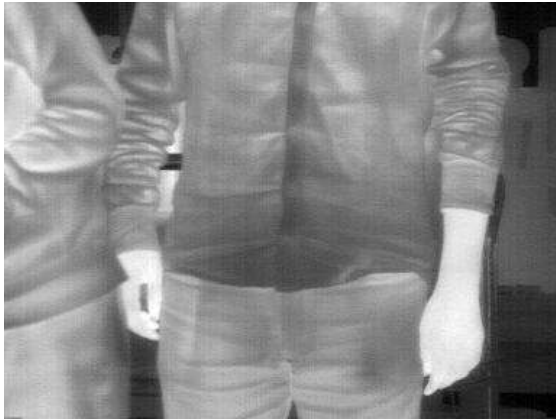

#### 14. Thermal Imaging Palette

The camera offers a variety of color display options for thermal imaging. The rainbow palette has a strong contrast and a clear distinction between colors of different temperatures, ideal for pinpointing objects in environments with subtle temperature differences.

1. On the **Image** page, select **Channel 2** and click **Advanced**.
2. Select the appropriate thermal imaging palette for your camera.

Common Palette “Rainbow 3”



Common Palette “White Hot”



### 5.5.2 OSD

On Screen Display (OSD) are characters displayed with video images, for example, camera name, date and time.




#### NOTE!

- This function may vary with device model.
- For dual-channel devices, you can set OSD parameters for the channels separately.


#### 1. Live View OSD



Configure OSD overlayed on the live video.

1. Go to **Setup > Image > OSD > Live View**.

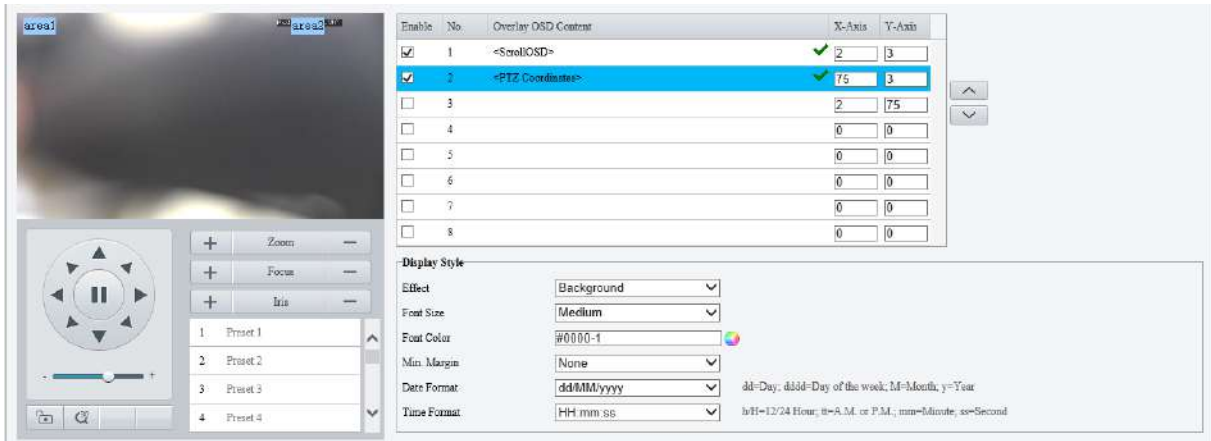

## 2. Set the OSD position and content.
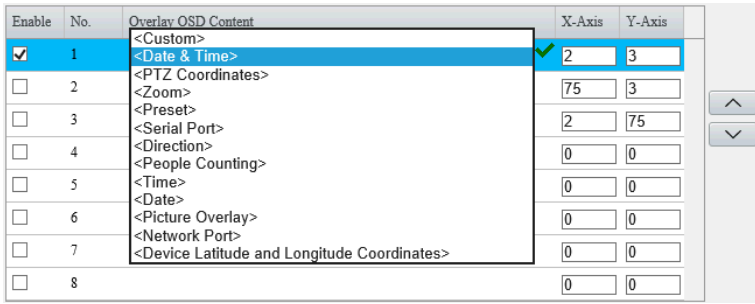
| Item                                                                                |     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------|-----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enable                                                                              |     | <p>Select the check boxes in the <b>Enable</b> column to overlay the corresponding contents on the live video.</p> <p><b>NOTE!</b></p> <p>Up to 8 overlays allowed.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Overlay Content                                                                     | OSD | <p>Set the OSD content you want to overlay. Point to the OSD content, click , select the OSD content from the drop-down list or customize it.</p>  <p>Some OSD contents are described below.</p> <ul style="list-style-type: none"> <li>Preset: When you call a preset, the preset ID will be displayed on the live image, such as "Preset 1".</li> <li>People Counting: Before use, you need to enable and configure <a href="#">People Flow Counting</a>, <a href="#">Crowd Density Monitoring</a>, or <a href="#">Face Detection</a>, then you can view the people flow information (number of people entering/leaving), crowd density information (number of people present), or face detection information (number of people entering/leaving) on the live image.</li> <li>Motor Vehicle&amp;Non-Motor Vehicle&amp;Pedestrian Count: Before use, you need to enable <a href="#">Mixed-Traffic Detection</a> and <b>Motor Vehicle&amp;Non-Motor Vehicle&amp;Pedestrian Count</b>, then you can view motor vehicle/non-motor vehicle/pedestrian counting information on the live image.</li> </ul> <p><b>NOTE!</b></p> <ul style="list-style-type: none"> <li>The OSD content only takes effect after you select the <b>Enable</b> check box.</li> <li>Some models allow different OSD contents in one overlay area.</li> </ul> |
| X-Axis/Y-Axis                                                                       |     | <p>Specify the exact position of the OSD by entering the X and Y coordinates.</p> <p>Take the top left corner of the image as the origin coordinates (0, 0), the horizontal axis is the X-axis, and the vertical axis is the Y-axis.</p> <p><b>NOTE!</b></p> <p>You can also set the OSD position as follows: point to the OSD box in the preview window, drag the box to the desired position after the cursor shape is changed.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|  |     |  indicates the OSD overlay is set successfully.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|  |     | Use the two buttons to rearrange the OSDs.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
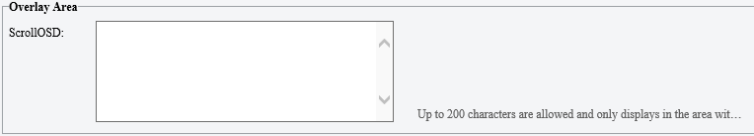
|                |                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Upload Picture | <p>This parameter is available only when the <b>Overlay OSD Content</b> is set to <b>Picture Overlay</b>.</p> <ol style="list-style-type: none"> <li>1. Click <b>Browse...</b> to select the picture you want to overlay.</li> <li>2. Click <b>Upload</b>, then the picture is displayed on the live video.</li> </ol>         |
| Scroll OSD     | <p>This parameter is available only when the <b>Overlay OSD Content</b> is set to <b>Picture Overlay</b>.</p> <ol style="list-style-type: none"> <li>1. Enter the text information you want to overlay.</li> <li>2. After successful configuration, the text will be scrolled from right to left on the live video</li> </ol>  |



### NOTE!

To cancel an OSD, clear the corresponding check box in the **Enable** column or click × in the **Overlay OSD Content** text box.


### 3. Set the OSD display style.

| Item        | Description                                                                                                                             |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Effect      | Select the display effect of the OSD content, including <b>Background</b> , <b>Stroke</b> , <b>Hollow</b> , or <b>Normal</b> .          |
| Font Size   | Select the font size of the OSD content, including <b>X-large</b> , <b>Large</b> , <b>Medium</b> , or <b>Small</b> .                    |
| Font Color  | Click  to select the text color of the OSD content.  |
| Min. Margin | Select the minimum distance between the OSD area and the edge of the image, including <b>None</b> , <b>Single</b> , and <b>Double</b> . |
| Date Format | Select the date format, including <b>dd/MM/yyyy</b> , <b>MM/dd/yyyy</b> , etc.                                                          |
| Time Format | Select the time format, including <b>HH:mm:ss</b> , <b>HH:mm:ss.aaa</b> , <b>hh:mm:ss tt</b> , and <b>hh:mm:ss.aaa tt</b> .             |

## 2. Photo OSD

Configure OSD overlaid on the images captured from the live video.

### 1. Go to **Setup > Image > OSD > Photo**.

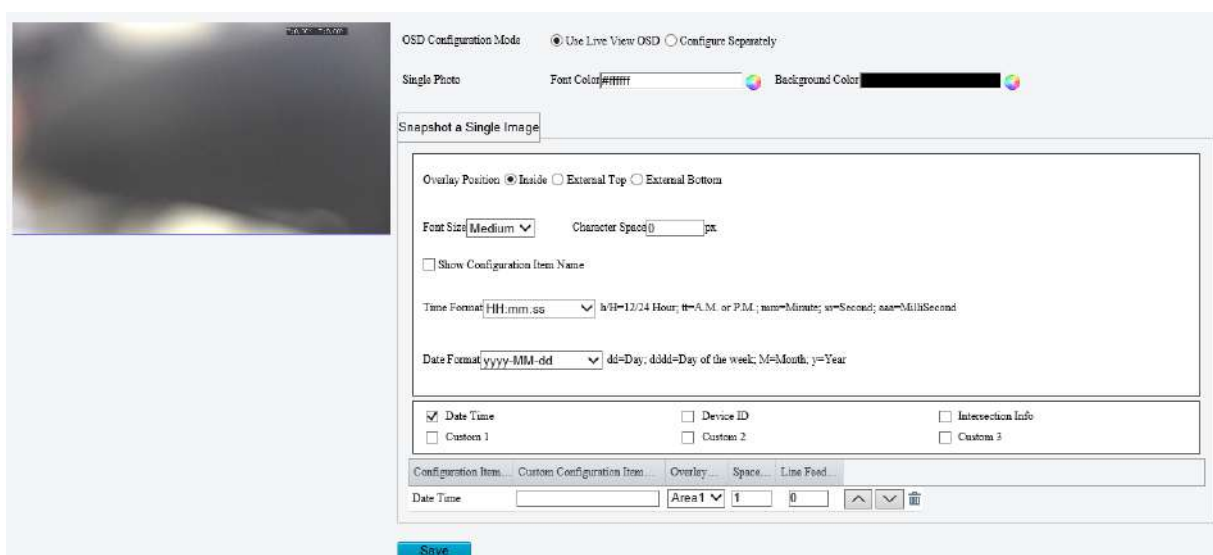

2. Select how the photo OSD is configured, **Use Live View OSD** or **Configure Separately**.
  - Use Live View OSD: Use the OSD overlayed on the live video.
  - Configure Separately: Configure the OSD overlayed on the snapshots separately.
3. Set the text color and background color for the OSD.
4. Refer to the table below to set other parameters as needed.

| Item                                                                                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Overlay Position                                                                    | <p>Select the position for the OSD on the snapshot.</p> <ul style="list-style-type: none"> <li>• Inside: Overlay inside the image.</li> <li>• External Top: Overlay at the top outside the image</li> <li>• External Bottom: Overlay at the bottom outside the image.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                   |
| Font Size                                                                           | Select the font size of the OSD content, including <b>X-large</b> , <b>Large</b> , <b>Medium</b> , and <b>Small</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Character Space                                                                     | Set the distance between the OSD area and the edge of the image.<br>Range: 0 to 10px.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Show Configuration Item Name                                                        | Select whether to show the configuration item name, such as <b>Date Time</b> , <b>Device ID</b> , etc.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Time Format                                                                         | Select the time format, including <b>HH:mm:ss</b> , <b>HH:mm:ss.aaa</b> , <b>hh:mm:ss tt</b> , and <b>hh:mm:ss.aaa tt</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Date Format                                                                         | Select the date format, including <b>dd/MM/yyyy</b> , <b>MM/dd/yyyy</b> , etc.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Configuration Item Name                                                             | <p>Select the configuration items you want to overlay, then the selected items are listed in the table.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Custom Configuration Item Name                                                      | Customize the configuration item name.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Overlay Area                                                                        | <p>Select an overlay area for the configuration item. You may change the area position by dragging it on the image or entering the X and Y coordinates.</p>  <p><b>NOTE!</b><br/>This parameter is available only when <b>Overlay Position</b> is set to <b>Inside</b>.</p>                                                                                                                                                                                                                                                                                                    |
| Space Count                                                                         | Set the number of spaces after the overlay. Range: 0 to 10.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Line Feed Count                                                                     | <p>Set whether and how to break line for the subsequent configuration items.</p> <ul style="list-style-type: none"> <li>• 0: No line break.</li> <li>• 1: Second line.</li> <li>• 2/3: Third/fourth line.</li> </ul> <p><b>NOTE!</b></p> <ul style="list-style-type: none"> <li>• In <b>External Top</b> or <b>External Bottom</b> mode, if the <b>Line Feed Count</b> is set to 2 or 3, the subsequent configuration items move to the next line.</li> <li>• In <b>External Top</b> or <b>External Bottom</b> mode, up to 8 lines are allowed. The larger the font, the fewer lines are displayed; the smaller the font, the more lines are displayed.</li> </ul> |
|  | Use the two buttons to rearrange the configuration items.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|  | Delete the configuration item.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

5. Click **Save**.

### 5.5.3 Privacy Mask


Privacy mask is used to cover certain areas on the image for privacy, for example, ATM keyboard.



#### NOTE!

- This function may vary with device model.
- For dual-channel devices, you can set privacy mask parameters for the channels separately.

#### 1. Go to **Setup > Image > Privacy Mask**.

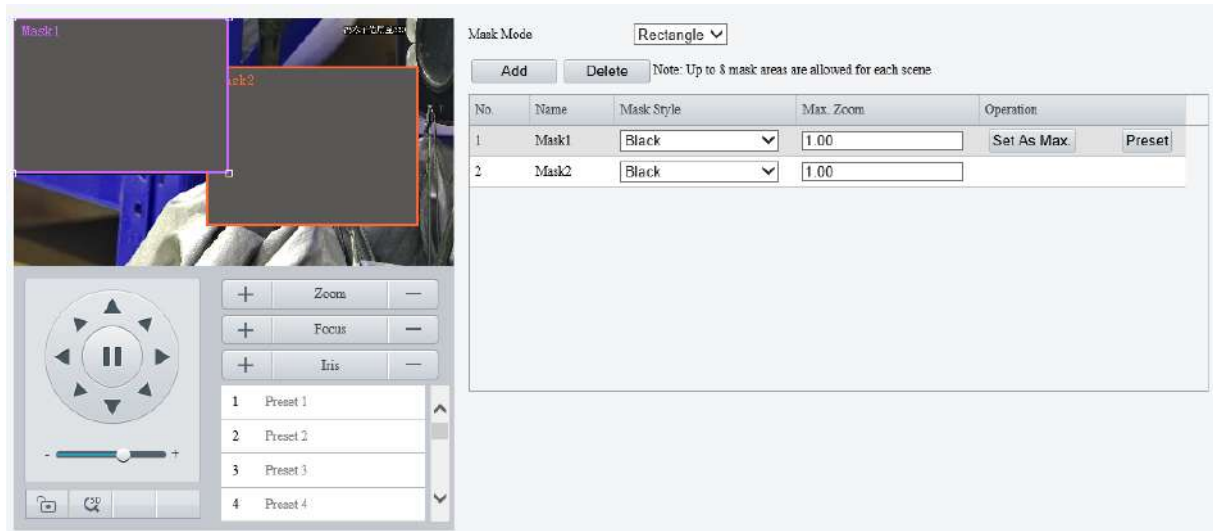

#### 2. Select the mask mode, **Rectangle** or **Polygon**.

- 2D-mask camera: For a PTZ camera, the privacy mask does not move and zoom with the camera.
- 3D-mask camera: For a PTZ camera, the privacy mask moves and zooms with the camera and the masked area is always covered.

#### 3. Add a privacy mask.

(1) Click **Add**. The privacy mask is a rectangle by default.



(2) Adjust the position and size of the mask or draw a mask as needed.

- Adjust the position and size of the mask.
  - Point to a border of the mask and drag it to the desired position.
  - Point to a handle of the mask and drag to resize it.
- Draw a mask.
  - Polygon: Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 4 lines are allowed.
  - Rectangle: Click on the image and drag to draw a rectangle.

#### 4. Set the privacy mask.

| Item                         | Description                                                                                                                                                                                                                                                                                                                                          |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Mask style                   | <p>Select the mask style, <b>Black</b> or <b>Mosaic</b>.</p> <p><b>NOTE!</b></p> <ul style="list-style-type: none"> <li>This parameter is configurable when <b>Mask Mode</b> is set to <b>Rectangle</b>. By default, the mask style of polygon mask is black and cannot be modified.</li> <li>Mosaic is only available on certain models.</li> </ul> |
| Max. Zoom (3D-mask camera)   | <p>Set the maximum zoom ratio to determine whether to show or hide the privacy mask.</p> <p>If the current lens zoom ratio is less than the maximum zoom ratio, the privacy mask is invalid.</p>                                                                                                                                                     |
| Set As Max. (3D-mask camera) | <p>Click to set the current lens zoom ratio as the maximum zoom ratio.</p>                                                                                                                                                                                                                                                                           |
| Preset (3D-mask camera)      | <p>Click to rotate the camera to the masked area (generally, the masked area is in the center of the live video).</p>                                                                                                                                                                                                                                |

### 5.5.4 Quick Focus


Fast focus effectively saves focus time and avoids missing important information after the camera changes the scene, focus and zoom.



#### NOTE!

- This function is only available on certain models.
- Set the zoom speed to 2 on the **Image** page when quick focus is enabled.

- Go to **Setup > Image > Quick Focus**.
- Select the **Enable Quick Focus** check box to enable it.

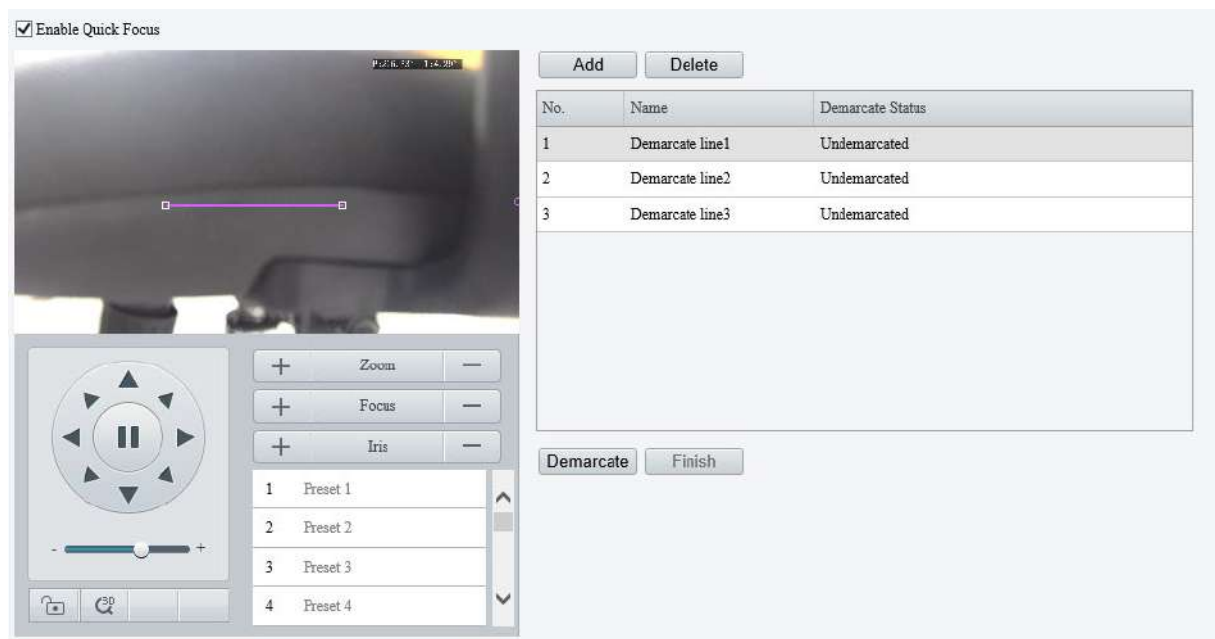

- Add a calibration line for the desired scene.
  - (1) Click **Add**. A line displays on the image.



(2) Adjust the position and length of the line or draw a line as needed.

- Adjust the position and length of the line.
  - Point to the line and drag it to the desired position.
  - Point to a handle of the line and drag to resize it.
- Draw a line.

Click on the image and drag to draw a line.

4. Click **Demarcate** to start automatic zoom. After the auto zoom is completed, click **Finish** to complete calibration. If you click **Finish** during calibration, the calibration line is considered invalid.
5. Repeat the above steps to calibrate more scenes. Up to 4 scenes are allowed.

## 5.6 Smart

On the **Smart** page, you can select the smart event to be monitored and click  to configure relevant parameters.

The smart events supported by the device and the parameters supported by the events may vary with device model.



### Common Button Description

| Button                                                                              | Description                                                                       |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|  | Create detection rules. Up to 4 detection rules are allowed for each smart event. |
|  | Delete detection rules.                                                           |



## NOTE!



- For dual-channel devices, you can set smart parameters for the channels separately.
- Some smart functions are mutually exclusive. When a smart function is enabled, the functions that are mutually exclusive with it are grayed out.

### 5.6.1 Alarm-triggered Actions

You can set how the camera responds to an event to alert you to deal with it in time.

| Conventional                                               | Alarm Output                         | Storage                                         | PTZ                                                    |
|------------------------------------------------------------|--------------------------------------|-------------------------------------------------|--------------------------------------------------------|
| <input checked="" type="checkbox"/> Send E-mail            | <input type="checkbox"/> A → 1       | <input type="checkbox"/> Recording Edge Storage | <input type="checkbox"/> Trigger Tr... <b>Tracking</b> |
| <input type="checkbox"/> Attribute Collection              | <input type="checkbox"/> A → 2       | <input type="checkbox"/> Image Edge Storage     |                                                        |
| <input checked="" type="checkbox"/> Upload Image(Original) | <input type="checkbox"/> Alarm Sound | <input type="checkbox"/> FTP Video Storage      |                                                        |

| Item                   | Description                                                                                                                                                                                       |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Upload to FTP          | The camera uploads snapshots to the specified FTP server when an alarm occurs.<br>Please configure <a href="#">FTP</a> and <a href="#">Snapshot</a> first before use.                             |
| Send E-mail            | The camera sends snapshots to the specified email addresses when an alarm occurs.<br>Please configure <a href="#">E-mail</a> and <a href="#">Snapshot</a> first before use.                       |
| Alarm the Center       | The camera uploads alarm information to the surveillance center when an alarm occurs.                                                                                                             |
| Attribute Collection   | The camera uploads the attribute information of the object that triggers the alarm to the server when an alarm occurs.<br>Please configure <a href="#">Attribute Collection</a> first before use. |
| Upload Image(Original) | The camera uploads the original snapshots of the object that triggers the alarm to the server when an alarm occurs.                                                                               |
| Upload Image(Target)   | The camera uploads the object snapshots to the server.                                                                                                                                            |
| Alarm Output           | The camera outputs an alarm to trigger actions by an alarm output device when an alarm occurs.<br>Please configure <a href="#">Alarm Output</a> first before use.                                 |
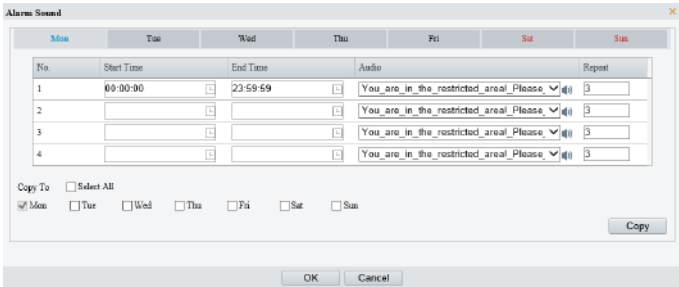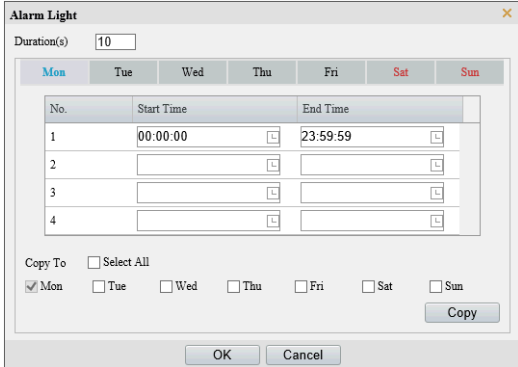
|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Alarm Sound        | <p>The camera plays warning sounds when an alarm occurs.</p> <ol style="list-style-type: none"> <li>1. Select the <b>Alarm Sound</b> check box and click  to configure relevant parameters.</li> <li>2. Set the arming schedule for audible alarms. See <a href="#">Arming Schedule</a> for details.</li> <li>3. Set the alarm audio content and alarm times. <ul style="list-style-type: none"> <li>• Audio: Set the audio content to be played when an alarm occurs. See <a href="#">Audio File</a> for details.</li> <li>• Repeat: Set the number of times the audio to be played when an alarm occurs.</li> </ul> </li> </ol>  <p><b>NOTE!</b><br/>This function may vary with device model.</p> |
| Alarm Light        | <p>The illuminator of the camera flashes for a certain period of time when an alarm occurs.</p> <ol style="list-style-type: none"> <li>1. Select the <b>Alarm Light</b> check box and click  to configure relevant parameters.</li> <li>2. Set the duration that the illuminator flashes when an alarm occurs.</li> <li>3. Set the arming schedule for visible alarms. See <a href="#">Arming Schedule</a> for details.</li> </ol>  <p><b>NOTE!</b><br/>This function may vary with device model.</p>                                                                                                                                                                                                 |
| Recording Storage  | <p>The camera saves alarm recordings to its memory card or NAS when an alarm occurs. Please configure <a href="#">Memory Card</a> or <a href="#">Network Disk</a> first before use.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Image Edge Storage | <p>The camera saves alarm snapshots to its memory card or NAS when an alarm occurs. Please configure <a href="#">Memory Card</a> or <a href="#">Network Disk</a> first before use.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| FTP Video Storage  | <p>The camera uploads alarm recordings to the specified FTP server when an alarm occurs. Please configure <a href="#">FTP</a> first before use.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Trigger Tracking   | <p>The camera starts tracking the object that triggers the alarm automatically until the set tracking time is reached or the object disappears when an alarm occurs.</p> <p>You can click <b>Tracking</b> to configure tracking parameters. See <a href="#">Tracking</a> for details.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Go to Preset       | <p>The camera automatically goes to a preset position when an alarm occurs.</p> <p>Select the preset position you want the camera to go to. See <a href="#">PTZ</a> for details.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

## 5.6.2 Arming Schedule

You can set an arming schedule to determine when the camera performs detection.

- Draw a schedule

To set an armed period, click **Armed**, and then click or drag on the schedule to select the time cells you want to enable arming. To set a disarmed period, click **Unarmed**, and then click or drag on the schedule to select the time cells you want to disable arming.



#### NOTE!

Only browsers of IE 9 or higher allows schedule drawing.

- Edit a schedule

Click **Edit**, set the arming time, and then click **OK**.

| No. | Start Time | End Time |
|-----|------------|----------|
| 1   | 00:00:00   | 23:59:59 |
| 2   |            |          |
| 3   |            |          |
| 4   |            |          |



#### NOTE!


- Up to 4 time periods are allowed per day. The time periods cannot overlap.
- To apply the same time settings to other days, select the desired day(s), and then click **Copy**.

### 5.6.3 Cross Line Detection

Cross line detection detects objects crossing a user-specified virtual line in a specified direction. The camera reports an alarm when the detection rule is triggered.

1. Go to **Setup > Intelligent > Smart**.

2. Select **Cross Line** and click  to configure it.

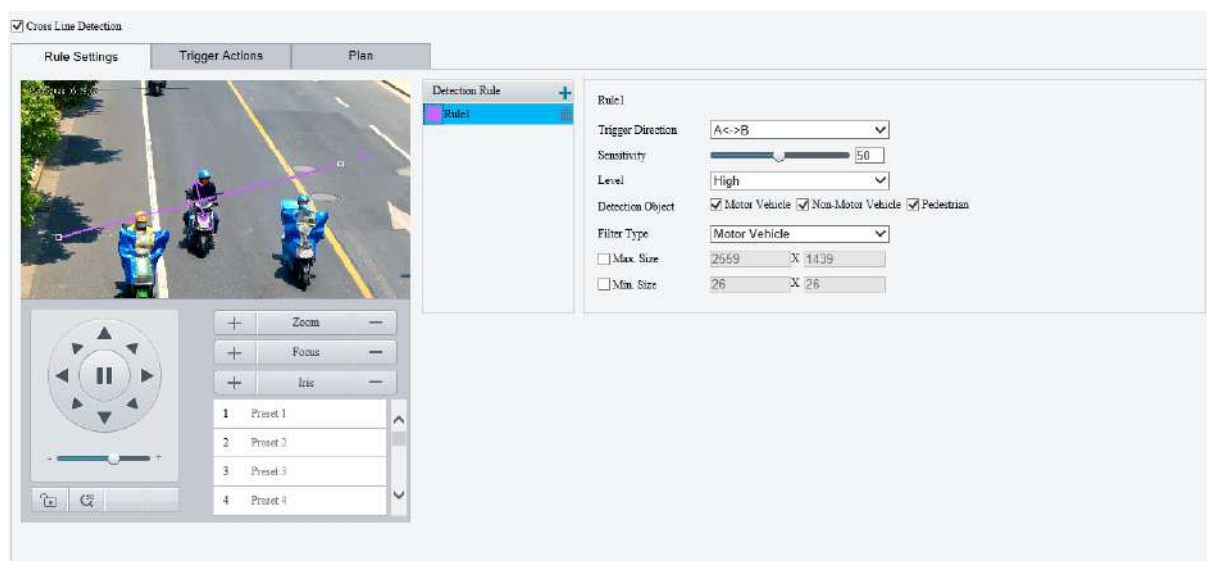

3. Add a detection rule.

(1) Click  to add a detection line. Up to 4 detection rules are allowed.




(2) Adjust the position and length of the line or draw a line as needed.

- Adjust the position and length of the line.
  - Point to the line and drag it to the desired position.
  - Point to a handle of the line and drag to resize it.
- Draw a line.

Click on the image and drag to draw a line.

4. Set the detection rule.

| Item              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Trigger Direction | <p>Select the direction from which the object crosses the line to trigger an alarm.</p> <ul style="list-style-type: none"> <li>• A-&gt;B: The camera reports a cross line alarm when it detects an object crossing the line from A to B.</li> <li>• B-&gt;A: The camera reports a cross line alarm when it detects an object crossing the line from B to A.</li> <li>• A&lt;-&gt;B (default): The camera reports a cross line alarm when it detects an object crossing the line from A to B or from B to A.</li> </ul> |
| Sensitivity       | <p>Set the detection sensitivity.</p> <p>The higher the sensitivity, the more likely cross line behaviors will be detected, and the more likely false alarms will occur.</p>                                                                                                                                                                                                                                                                                                                                           |
| Level             | <p>Select the priority of the detection rule, including <b>High</b>, <b>Medium</b>, and <b>Low</b>.</p> <p>The camera detects the rule that is triggered first by default. If multiple rules are triggered at the same time, the camera detects the rule with higher priority.</p>                                                                                                                                                                                                                                     |

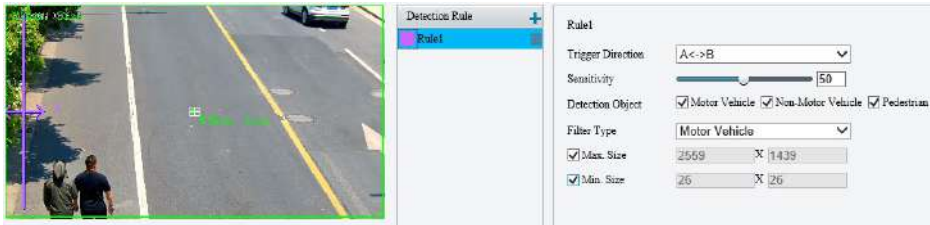
|                     |                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Detection Object    | Select the object to be detected, including <b>Motor Vehicle</b> , <b>Non-Motor Vehicle</b> , and <b>Pedestrian</b> .                                                                                                                                                                                                                                                                     |
| Filter Type         | After you select a detection object, you can set a filter rule for it.<br>For example, if you have selected <b>Motor Vehicle</b> as a detection object, select <b>Motor Vehicle</b> from the <b>Filter Type</b> drop-down list and set the <b>Max. Size</b> or <b>Min. Size</b> for it, then motor vehicles larger than the Max. Size or smaller than the Min. Size will not be detected. |
| Max. Size/Min. Size | When enabled, a box appears on the image, you can point to a handle of the box and drag to resize it. The camera filters objects larger than the Max. Size or smaller than the Min. Size. The width and height of the maximum filter area must be greater than that of the minimum filter area.<br>     |

- Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- Click **Save**.

#### 5.6.4 Enter Area Detection

Enter area detection detects objects entering a user-specified area. The camera reports an alarm when the detection rule is triggered.

- Go to **Setup > Intelligent > Smart**.
- Select **Enter Area** and click  to configure it.

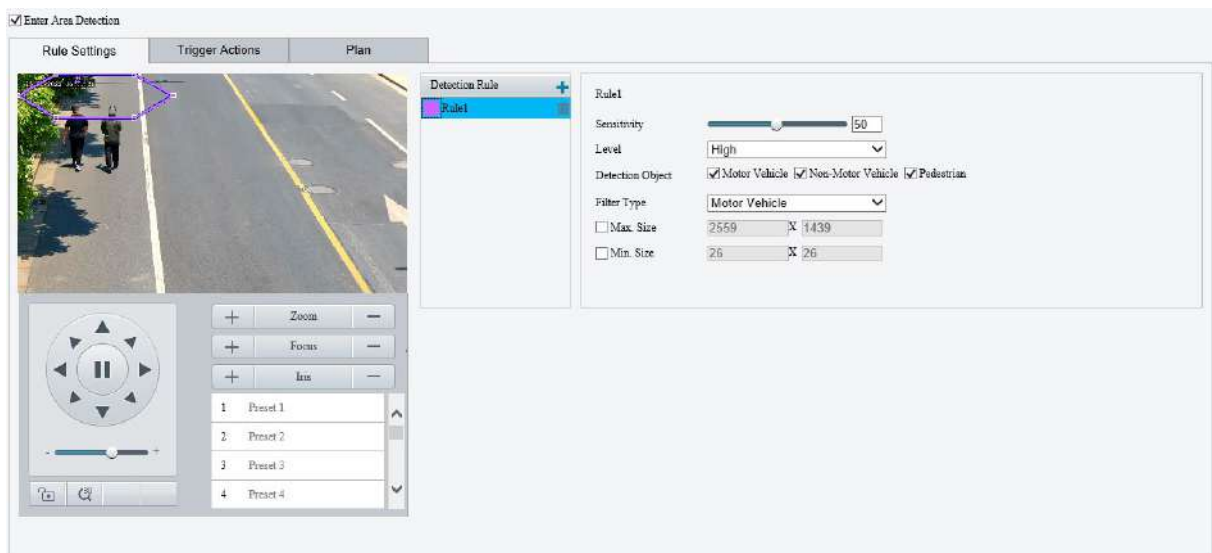

- Add a detection rule.
  - Click  to add a detection area. The detection area is a hexagon by default. Up to 4 detection rules are allowed.





(2) Adjust the position and size of the area or draw an area as needed.

- Adjust the position and size of the area.
  - Point to a border of the area and drag it to the desired position.
  - Point to a handle of the area and drag to resize it.
- Draw an area.

Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed.

4. Set the detection rule.
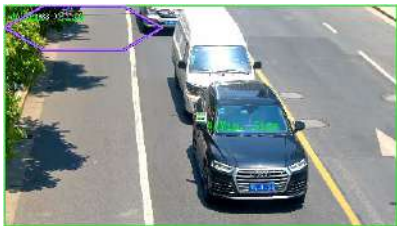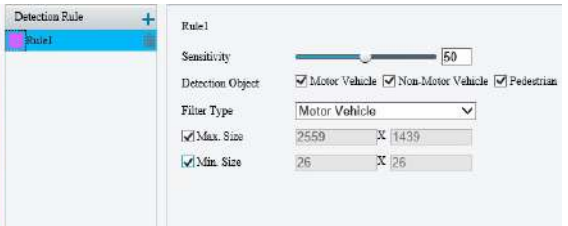
| Item                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Sensitivity         | Set the detection sensitivity.<br>The higher the sensitivity, the more likely entry behaviors will be detected, and the more likely false alarms will occur.                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Level               | Select the priority of the detection rule, including <b>High</b> , <b>Medium</b> , and <b>Low</b> .<br>The camera detects the rule that is triggered first by default. If multiple rules are triggered at the same time, the camera detects the rule with higher priority.                                                                                                                                                                                                                                                                                                   |
| Detection Object    | Select the object to be detected, including <b>Motor Vehicle</b> , <b>Non-Motor Vehicle</b> , and <b>Pedestrian</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Filter Type         | After you select a detection object, you can set a filter rule for it.<br>For example, if you have selected <b>Motor Vehicle</b> as a detection object, select <b>Motor Vehicle</b> from the <b>Filter Type</b> drop-down list and set the <b>Max. Size</b> or <b>Min. Size</b> for it, then motor vehicles larger than the Max. Size or smaller than the Min. Size will not be detected.                                                                                                                                                                                    |
| Max. Size/Min. Size | When enabled, a box appears on the image, you can point to a handle of the box and drag to resize it. The camera filters objects larger than the Max. Size or smaller than the Min. Size. The width and height of the maximum filter area must be greater than that of the minimum filter area.<br><div style="display: flex; align-items: center;">  <div style="margin-left: 10px;">  </div> </div> |


5. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
6. Click **Save**.

### 5.6.5 Leave Area Detection

Leave area detection detects objects leaving a user-specified area. The camera reports an alarm when the detection rule is triggered.

1. Go to **Setup > Intelligent > Smart**.

2. Select **Leave Area** and click  to configure it.

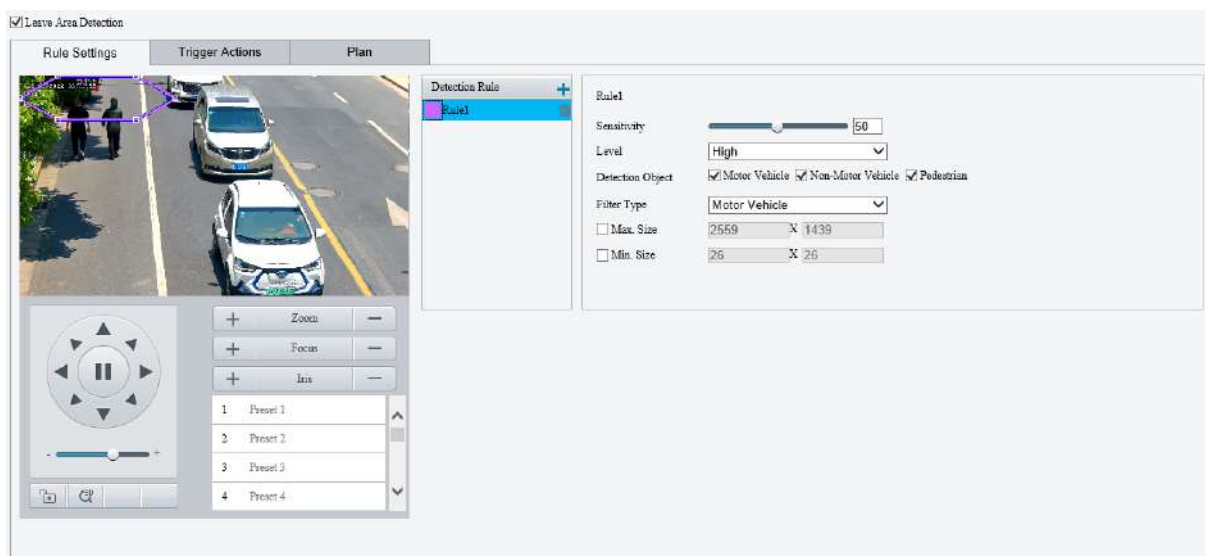

3. Add a detection rule.

- (1) Click  to add a detection area. The detection area is a hexagon by default. Up to 4 detection rules are allowed.



- (2) Adjust the position and size of the area or draw an area as needed.

- Adjust the position and size of the area.
  - Point to a border of the area and drag it to the desired position.
  - Point to a handle of the area and drag to resize it.
- Draw an area.

Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed.

4. Set the detection rule.

| Item             | Description                                                                                                                                                                                                                                                                |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Sensitivity      | Set the detection sensitivity.<br>The higher the sensitivity, the more likely cross line behaviors will be detected, and the more likely false alarms will occur.                                                                                                          |
| Level            | Select the priority of the detection rule, including <b>High</b> , <b>Medium</b> , and <b>Low</b> .<br>The camera detects the rule that is triggered first by default. If multiple rules are triggered at the same time, the camera detects the rule with higher priority. |
| Detection Object | Select the object to be detected, including <b>Motor Vehicle</b> , <b>Non-Motor Vehicle</b> , and <b>Pedestrian</b> .                                                                                                                                                      |


|                     |                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Filter Type         | <p>After you select a detection object, you can set a filter rule for it.</p> <p>For example, if you have selected <b>Motor Vehicle</b> as a detection object, select <b>Motor Vehicle</b> from the <b>Filter Type</b> drop-down list and set the <b>Max. Size</b> or <b>Min. Size</b> for it, then motor vehicles larger than the Max. Size or smaller than the Min. Size will not be detected.</p> |
| Max. Size/Min. Size | <p>When enabled, a box appears on the image, you can point to a handle of the box and drag to resize it. The camera filters objects larger than the Max. Size or smaller than the Min. Size. The width and height of the maximum filter area must be greater than that of the minimum filter area.</p>             |

- Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- Click **Save**.

### 5.6.6 Intrusion Detection

Intrusion detection detects objects entering a user-specified area and staying for a preset time. The camera reports an alarm when the detection rule is triggered.

- Go to **Setup > Intelligent > Smart**.
- Select **Intrusion** and click  to configure it.

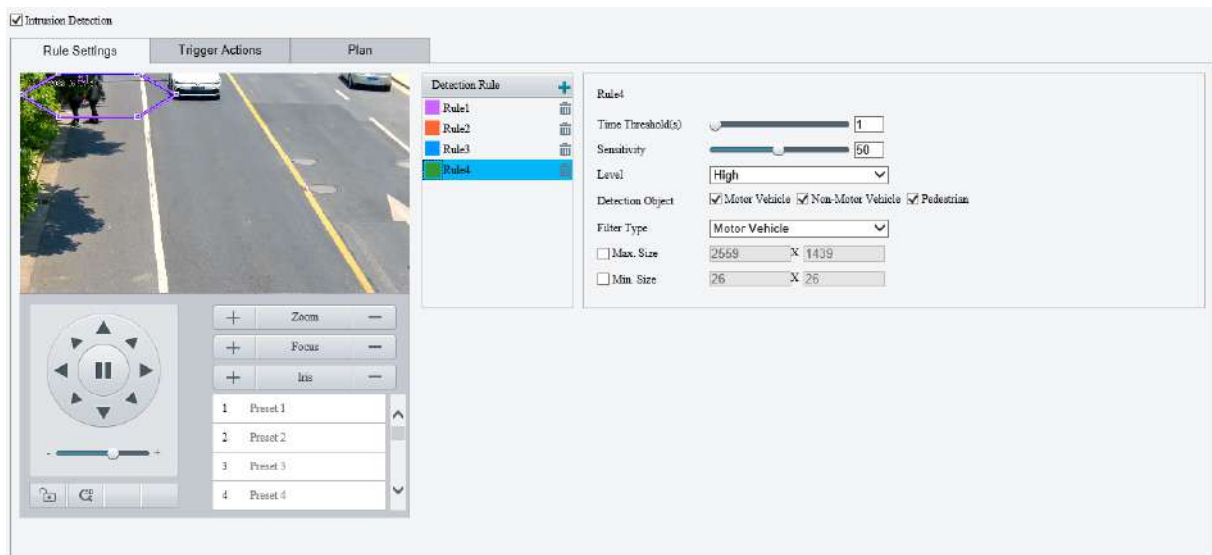

- Add a detection rule.
  - Click  to add a detection area. The detection area is a hexagon by default. Up to 4 detection rules are allowed.



(2) Adjust the position and size of the area or draw an area as needed.

- Adjust the position and size of the area.
  - Point to a border of the area and drag it to the desired position.
  - Point to a handle of the area and drag to resize it.
- Draw an area.

Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed.

4. Set the detection rule.

| Item                | Description                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Time Threshold(s)   | Set how long the object stays in the detection area to trigger an intrusion alarm.<br>If an object stays in the detection area for the set time, an intrusion alarm will be triggered.                                                                                                                                                                                                    |
| Sensitivity         | Set the detection sensitivity.<br>The higher the sensitivity, the more likely intrusion behaviors will be detected, and the more likely false alarms will occur.                                                                                                                                                                                                                          |
| Level               | Select the priority of the detection rule.<br>The camera detects the rule that is triggered first by default. If multiple rules are triggered at the same time, the camera detects the rule with higher priority.                                                                                                                                                                         |
| Detection Object    | Select the object to be detected, including <b>Motor Vehicle</b> , <b>Non-Motor Vehicle</b> , and <b>Pedestrian</b> .                                                                                                                                                                                                                                                                     |
| Filter Type         | After you select a detection object, you can set a filter rule for it.<br>For example, if you have selected <b>Motor Vehicle</b> as a detection object, select <b>Motor Vehicle</b> from the <b>Filter Type</b> drop-down list and set the <b>Max. Size</b> or <b>Min. Size</b> for it, then motor vehicles larger than the Max. Size or smaller than the Min. Size will not be detected. |
| Max. Size/Min. Size | When enabled, a box appears on the image, you can point to a handle of the box and drag to resize it. The camera filters objects larger than the Max. Size or smaller than the Min. Size. The width and height of the maximum filter area must be greater than that of the minimum filter area.<br>                                                                                       |


5. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.

6. Click **Save**.

## 5.6.7 Object Removed Detection

Object removed detection detects objects removed from a user-specified area. The camera reports an alarm when the detection rule is triggered.

1. Go to **Setup > Intelligent > Smart**.
2. Select **Object Removed** and click  to configure it.

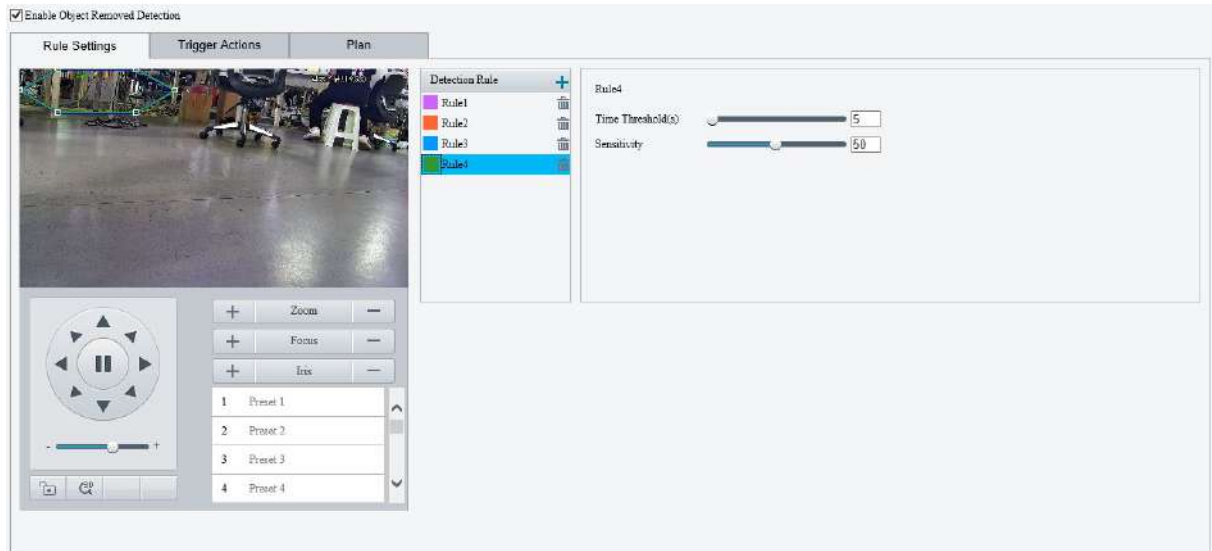

3. Add a detection rule.

(1) Click  to add a detection area. The detection area is a hexagon by default. Up to 4 detection rules are allowed.



(2) Adjust the position and size of the area or draw an area as needed.

- Adjust the position and size of the area.
  - Point to a border of the area and drag it to the desired position.
  - Point to a handle of the area and drag to resize it.
- Draw an area.

Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed.

4. Set the detection rule.


| Item              | Description                                                                                                                                                                      |
|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Time Threshold(s) | Set how long the object is removed from the detection area to trigger an alarm.<br>If an object is removed from the detection area for the set time, an alarm will be triggered. |
| Sensitivity       | Set the detection sensitivity.<br>The higher the sensitivity, the more likely object removal behaviors will be detected, and the more likely false alarms will occur.            |

- Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- Click **Save**.

### 5.6.8 Object Left Behind Detection

Object left behind detection detects objects left behind in a user-specified area. The camera reports an alarm when the detection rule is triggered.

- Go to **Setup > Intelligent > Smart**.
- Select **Object Left Behind** and click  to configure it.

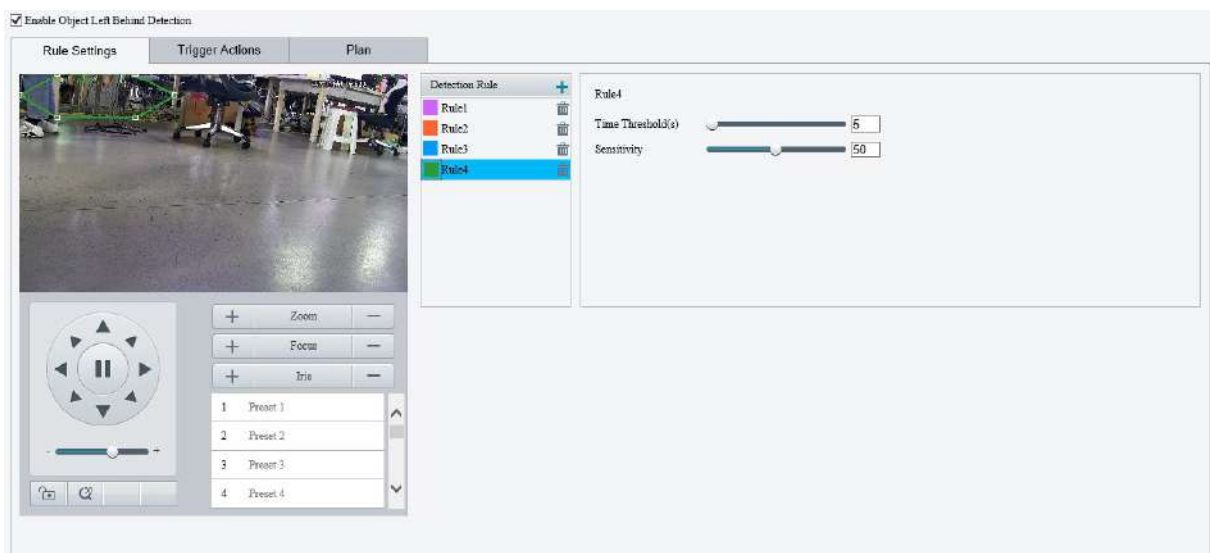

- Add a detection rule.
  - Click  to add a detection area. The detection area is a hexagon by default. Up to 4 detection rules are allowed.



- Adjust the position and size of the area or draw an area as needed.
  - Adjust the position and size of the area.
  - Point to a border of the area and drag it to the desired position.

- Point to a handle of the area and drag to resize it.

- Draw an area.

Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed.

4. Set the detection rule.


| Item              | Description                                                                                                                                                                          |
|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Time Threshold(s) | Set how long the object is left behind in the detection area to trigger an alarm.<br>If an object is left behind in the detection area for the set time, an alarm will be triggered. |
| Sensitivity       | Set the detection sensitivity.<br>The higher the sensitivity, the more likely object left behind behaviors will be detected, and the more likely false alarms will occur.            |

5. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
6. Click **Save**.

### 5.6.9 Defocus Detection

Defocus detection detects lens defocus. The camera reports an alarm when the detection rule is triggered.

1. Go to **Setup > Intelligent > Smart**.
2. Select **Defocus** and click  to configure it.

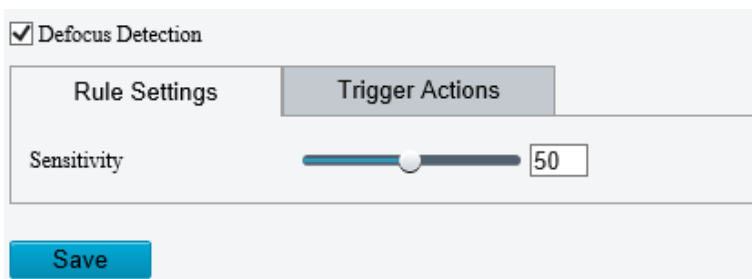


3. Set the detection sensitivity. The higher the sensitivity, the more likely defocus will be detected, and the more likely false alarms will occur.
4. Set the alarm-triggered actions. See [Alarm-triggered Actions](#) for details.
5. Click **Save**.

### 5.6.10 Scene Change Detection

Scene change detection detects the change of surveillance scene caused by external factors such as intentional camera movement. The camera reports an alarm when the detection rule is triggered.

1. Go to **Setup > Intelligent > Smart**.
2. Select **Scene Change** and click  to configure it.

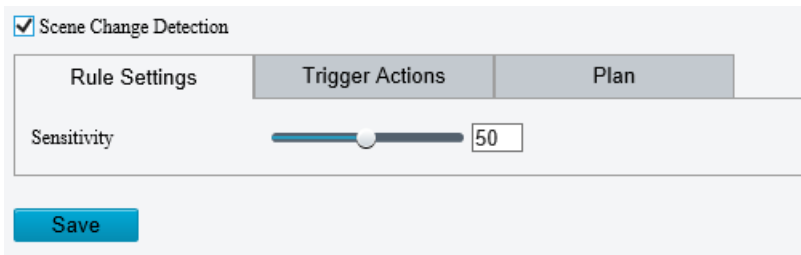


3. Set the detection sensitivity. The higher the sensitivity, the more likely scene change behaviors will be detected, and the more likely false alarms will occur.
4. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
5. Click **Save**.

### 5.6.11 Face Detection

Face detection detects and captures faces in a specified detection area.

1. Go to **Setup > Intelligent > Smart**.
2. Select **Face Detection** and click  to configure it.

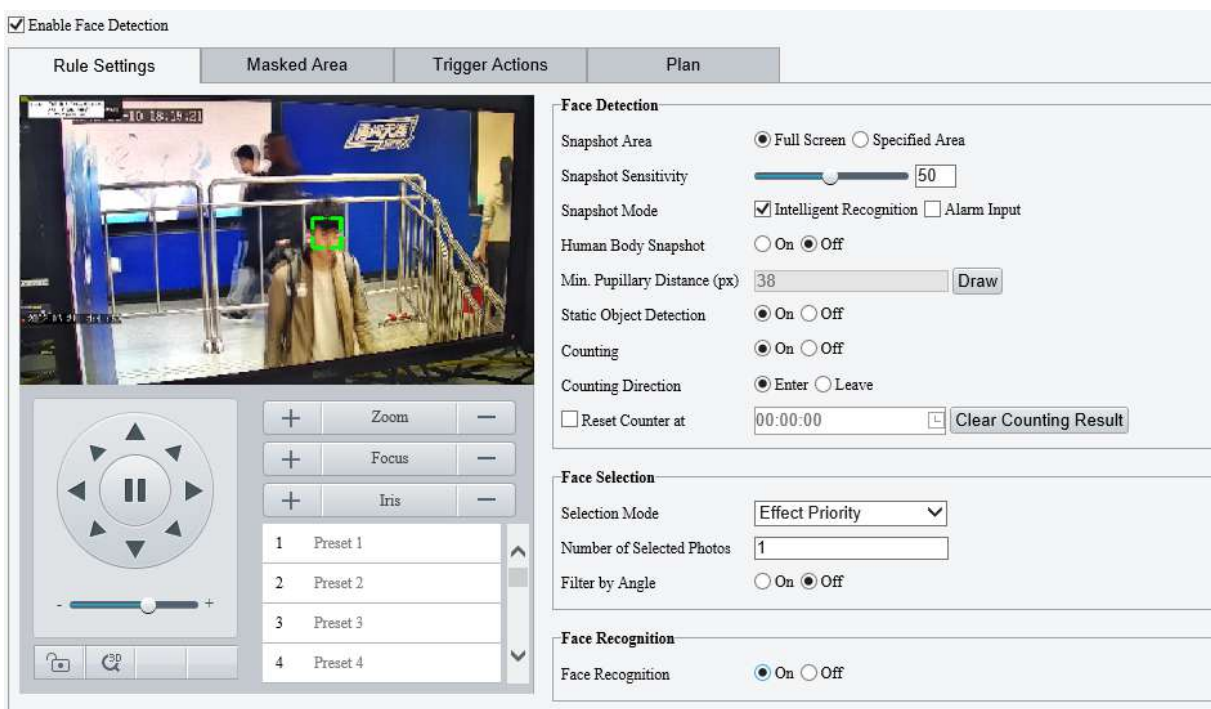


3. Set the face detection rule.

| Item                         | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Snapshot Area                | <p>Select the snapshot area.</p> <ul style="list-style-type: none"> <li>Full Screen: The camera detects and captures all faces in the live video.</li> <li>Specified Area: The camera only detects and captures faces in a specified area of live video. <ul style="list-style-type: none"> <li>Select <b>Specified Area</b> and a detection box appears in the left preview window.</li> </ul> </li> </ul>  <ul style="list-style-type: none"> <li>Adjust the position and size of the area or draw an area as needed. <ul style="list-style-type: none"> <li>Adjust the position and size of the area. Point to a border of the area and drag it to the desired position. Point to a handle of the area and drag to resize it.</li> <li>Draw an area. Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed.</li> </ul> </li> </ul> |
| Snapshot Sensitivity         | <p>Set the snapshot sensitivity.</p> <p>The higher the sensitivity, the more likely a face will be detected.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Snapshot Mode                | <p>Set the snapshot mode.</p> <ul style="list-style-type: none"> <li>Intelligent Recognition: The camera continuously performs face detection.</li> <li>Alarm Input: The camera only performs face detection in the event of an alarm input. Before use, you need to enable alarm input and configure arming schedule for it. See <a href="#">Alarm Input</a> for details.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Human Snapshot               | <p>Body</p> <p>Select to enable or disable human body snapshot.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Min. Pupillary Distance (px) | <p>The minimum distance (measured in pixels) between two pupils. The face with pupillary distance smaller than the value will not be captured.</p> <p>To set the minimum pupillary distance, you can click <b>Draw</b> and drag the corners of the box in the preview window to resize it, or type the pupillary distance value in the text box.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Static Detection             | <p>Object</p> <p>Select whether to detect static objects.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Counting                     | <p>After you enable <b>Counting</b> and select the people counting direction, the statistics of people entering or leaving are displayed on the live image.</p> <p>Before use, please configure a people counting OSD overlay on the <b>OSD</b> page. See <a href="#">OSD</a> for details.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Reset Counter at             | <ul style="list-style-type: none"> <li>Select the <b>Reset Counter at</b> check box and set a time for the camera to clear people counting statistics.</li> <li>To clear people counting statistics immediately, click <b>Clear Counting Result</b>. This operation only clears the people statistics displayed on the OSD, and does not affect the reported data.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

#### 4. Set the face selection rule.

| Item           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Selection Mode | <p>Select the face selection mode.</p> <ul style="list-style-type: none"> <li>Effect Priority: The camera selects 1 to 3 snapshots with the best quality to report. You can specify the number of photos to select.</li> <li>Speed Priority: The camera selects certain number of snapshots from the moment that the face is detected till <b>Selection Timeout</b> is up. You can specify the number of photos to select.</li> <li>Periodic Selection: The camera selects a snapshot in every selection period. For example, if <b>Selection Period</b> is set to 500ms, the camera selects a face snapshot every 500ms, and if <b>Upload Original Image</b> is enabled, both the original snapshot containing the face and the face cutout will be uploaded.</li> </ul> |
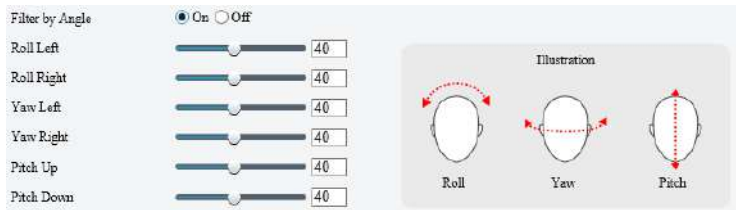
|                           |                                                                                                                                                                                                                                                                  |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Number of Selected Photos | Set the number of snapshots to be selected in the range of 1 to 3. This parameter is set to 1 by default and cannot be modified on certain models.                                                                                                               |
| Filter by Angle           | <p>After you enable <b>Filter by Angle</b> and set the filtering rule, faces with unqualified angles (larger than the set angles) will be filtered during face detection.</p>  |

5. Set the face recognition rule. See [Face Recognition](#) for details.



#### NOTE!

Face recognition and human body snapshot cannot be enabled at the same time.

6. Mask undesired areas.

- (1) Click **+** to add a masked area. The masked area is a hexagon by default. Up to 4 masked areas are allowed.



- (2) Adjust the position and size of the area or draw an area as needed.

- Adjust the position and size of the area.
  - Point to a border of the area and drag it to the desired position.
  - Point to a handle of the area and drag to resize it.
- Draw an area.

Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed.

7. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
8. Click **Save**.

## 5.6.12 Face Recognition


Face recognition compares the faces captured in live view with the faces stored in face libraries, and uploads the comparison results to the server.

1. Go to **Setup > Intelligent > Smart**.
2. Select **Face Detection** and click .
3. Click the **Face Library** tab.




4. Create face libraries.


Click **Add** in the left area, enter the library name, and click **OK**.

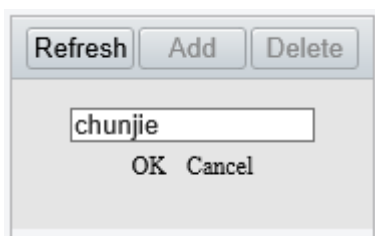

5. Add face data.

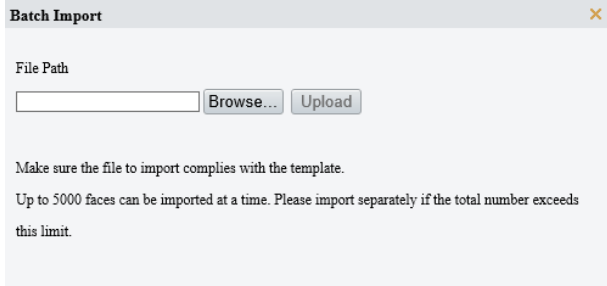
| Item           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Add one by one | <p>4. Click <b>Add</b>.</p>  <p>5. Upload a face image and complete the required face information.</p>                                                                                                                                                                                                                                                                 |
| Add in batches | <p>1. Click <b>Export Template</b> to export the CSV face template file to the PC.</p> <p>2. Complete the required face data in the template with reference to the import guide. Refer to the import guide to fill in the template with the required face data.</p> <p>3. Click <b>Batch Import</b>, select the CSV file you have edited, and click <b>Upload</b>.</p>  |

The imported face data are shown as below:

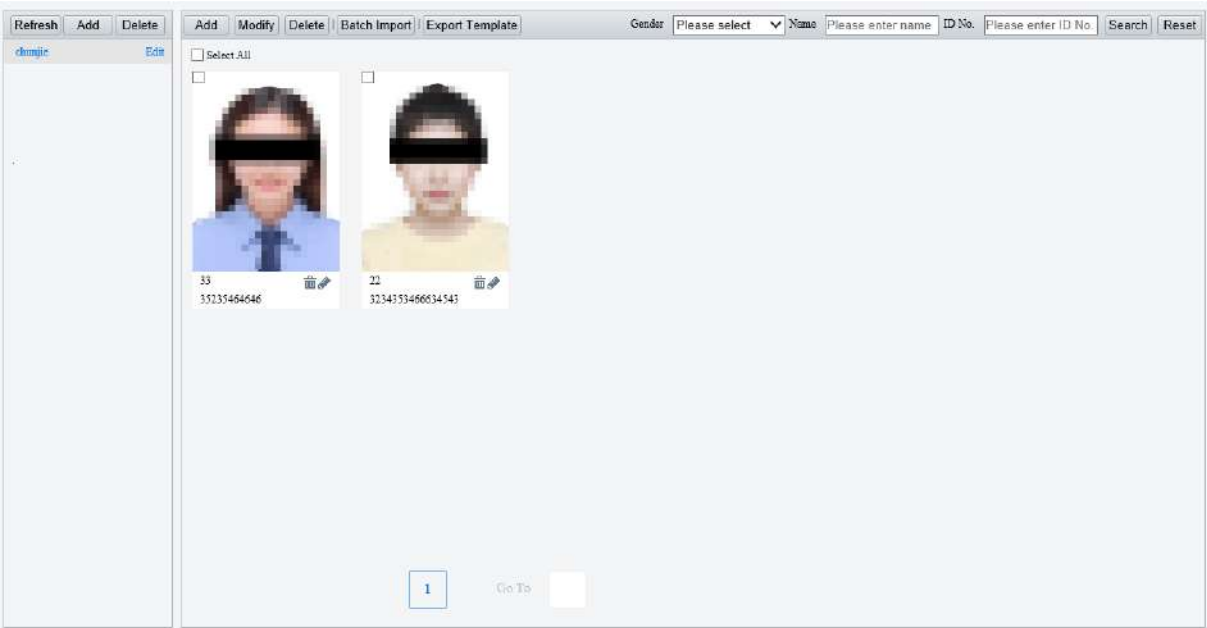


6. Add monitoring tasks.

Open the **Monitoring Task** tab.

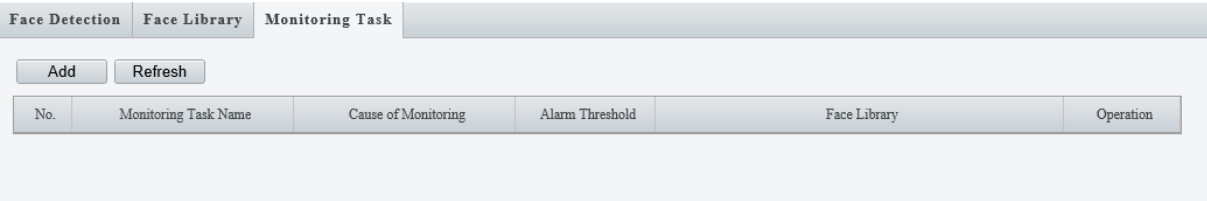

(1) Click **Add**.

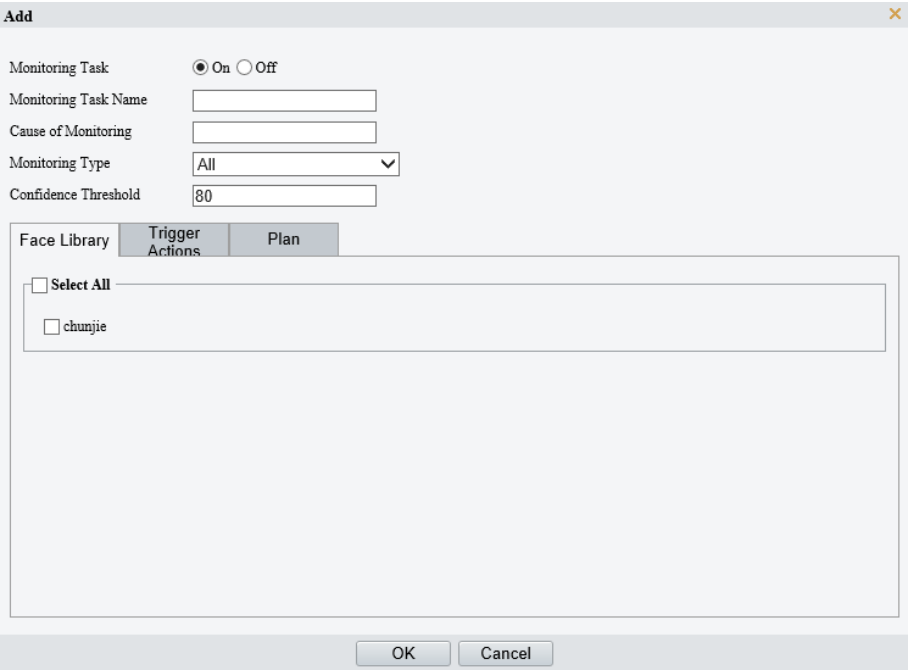

(2) Complete the monitoring task settings.

| Monitoring Type      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Monitoring Task      | Select to enable or disable the monitoring task.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Monitoring Task Name | Enter a name for the monitoring task.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Cause of Monitoring  | Enter the cause of the monitoring task.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Monitoring Type      | <p>Select the monitoring type.</p> <ul style="list-style-type: none"> <li>All: The camera reports an alarm and performs the set alarm-triggered actions once it detects a face.</li> <li>Match Alarm: The camera reports a match alarm and performs the set alarm-triggered actions when the similarity between a captured face and a face in the monitored face library reaches the confidence threshold.</li> <li>Not Match Alarm: The camera reports a not match alarm and performs the set alarm-triggered actions when the similarity between a captured face and a face in the monitored face library fails to reach the confidence threshold.</li> </ul> |
| Confidence Threshold | <p>By default, the confidence threshold is set to 80. A match alarm/not match alarm occurs when the similarity between a captured face and a face in the face library reaches/fails to reach the threshold.</p> <p>The higher the value, the more accurate the face recognition.</p>                                                                                                                                                                                                                                                                                                                                                                            |

(3) Select the face library to be monitored.

(4) Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.

(5) Click **OK**.


7. Click **Save**.

### 5.6.13 Human Body Detection

Human body detection detects humans in a specified area. The camera reports an alarm when the detection rule is triggered.

1. Go to **Setup > Intelligent > Smart**.

2. Select **Human Body Detection** and click  to configure it.

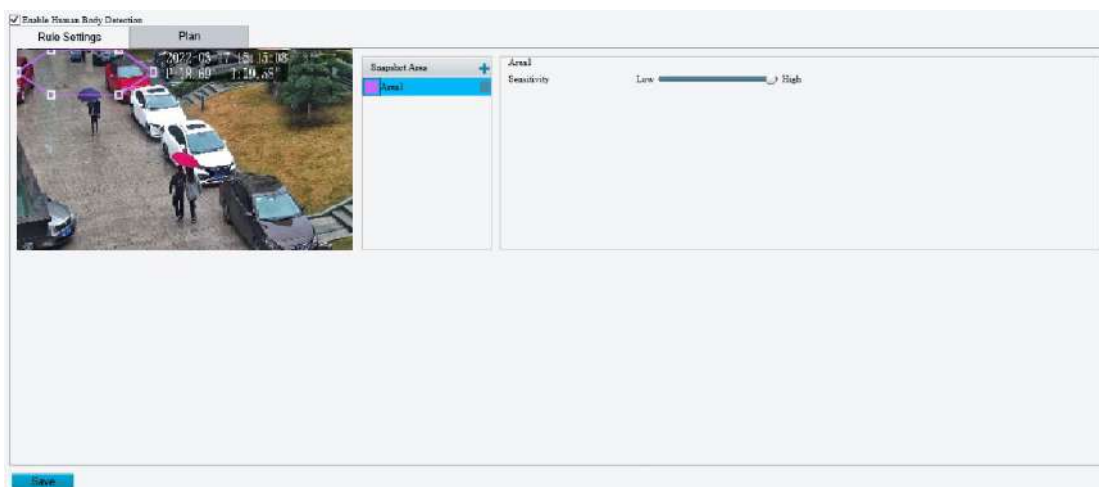

3. Add a snapshot area.

(1) Click . The snapshot area is a hexagon by default. Only one snapshot area is allowed.



(2) Adjust the position and size of the area or draw an area as needed.


- Adjust the position and size of the area.  
Point to the area and drag it to the desired position. Drag the corners of the area to resize it.
- Draw an area.  
Click in the preview window to draw a polygonal area with up to 6 sides.

4. Set the detection sensitivity. The higher the sensitivity, the more likely humans will be detected, and the more likely false alarms will occur.
5. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
6. Click **Save**.

#### 5.6.14 Mixed-Traffic Detection

Mixed-traffic detection detects and captures motor vehicles, non-motor vehicles, and pedestrians in a user-specified area. You can set a mixed-traffic counting OSD to view realtime motor vehicle, non-motor vehicle and pedestrian statistics on the live video. See [Live View OSD](#) for details.

1. Go to **Setup > Intelligent > Smart**.
2. Select **Mixed-Traffic Detection** and click  to configure it.

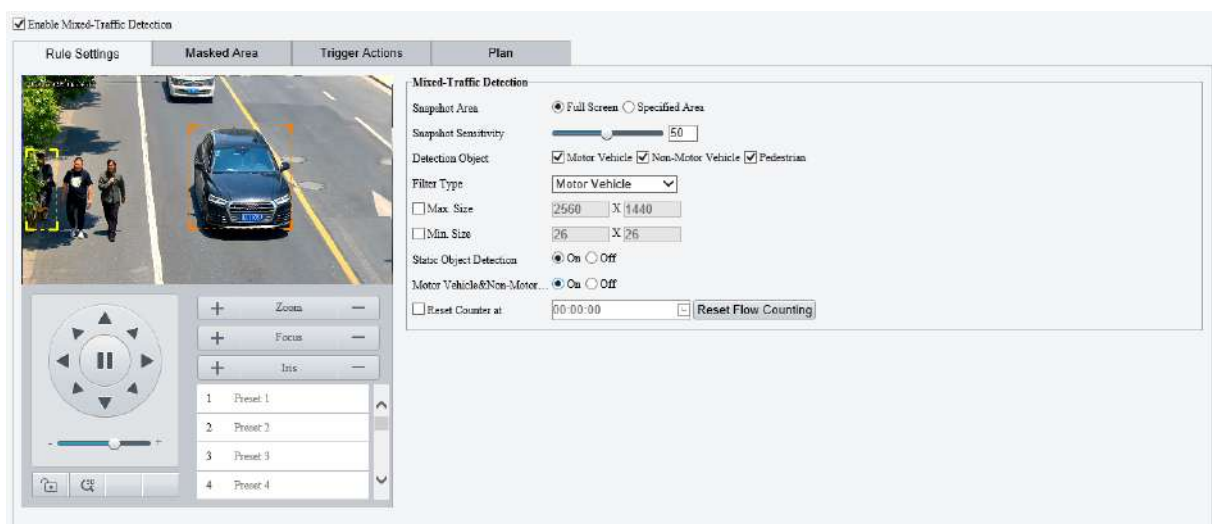

3. Set the detection rule.

| Item                                             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Snapshot Area                                    | <p>Select the snapshot area.</p> <ul style="list-style-type: none"> <li>Full Screen: The camera detects and captures objects in the live video.</li> <li>Specified Area: The camera only detects and captures objects in a specified area of live video. <ul style="list-style-type: none"> <li>Select <b>Specified Area</b> and a detection box appears in the left preview window.</li> </ul> </li> </ul>  <ul style="list-style-type: none"> <li>Adjust the position and size of the area or draw an area as needed. <ul style="list-style-type: none"> <li>Adjust the position and size of the area. Point to the area and drag it to the desired position. Drag the corners of the area to resize it.</li> <li>Draw an area. Click in the preview window to draw a polygonal area with up to 6 sides. Select the area you want to monitor.</li> </ul> </li> </ul> |
| Snapshot Sensitivity                             | <p>Set the detection sensitivity.</p> <p>The higher the sensitivity, the more likely objects will be detected, and the more likely false alarms will occur.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Detection Object                                 | <p>Select the object to be detected, including <b>Motor Vehicle</b>, <b>Non-Motor Vehicle</b>, and <b>Pedestrian</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Filter Type                                      | <p>After you select a detection object, you can set a filter rule for it.</p> <p>For example, if you have selected <b>Motor Vehicle</b> as a detection object, select <b>Motor Vehicle</b> from the <b>Filter Type</b> drop-down list and set the <b>Max. Size</b> or <b>Min. Size</b> for it, then motor vehicles larger than the Max. Size or smaller than the Min. Size will not be detected.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Max. Size/Min. Size                              | <p>When enabled, a box appears on the image, you can point to a handle of the box and drag to resize it. The camera filters objects larger than the Max. Size or smaller than the Min. Size. The width and height of the maximum filter area must be greater than that of the minimum filter area.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Static Object Detection                          | <p>Select whether to detect static objects.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Motor Vehicle&Non-Motor Vehicle&Pedestrian Count | <p>Select whether to count motor vehicles, non-motor vehicles and pedestrians.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Reset Counter at                                 | <p>You can set a time for the camera to clear the traffic statistics or click <b>Reset Flow Counting</b> to clear immediately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

#### 4. Mask undesired areas.

- (1) Click  to add a masked area. The masked area is a hexagon by default. Up to 4 masked areas are allowed.



(2) Adjust the position and size of the area or draw an area as needed.


- Adjust the position and size of the area.  
Point to the area and drag it to the desired position. Drag the corners of the area to resize it.
- Draw an area.  
Click in the preview window to draw a polygonal area with up to 6 sides.

5. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
6. Click **Save**.

### 5.6.15 People Flow Counting

People flow counting counts people passing a specified tripwire and triggers an alarm if the number of people exceeds the set alarm threshold.

1. Go to **Setup > Intelligent > Smart**.
2. Select **People Flow Counting** and click  to configure it.

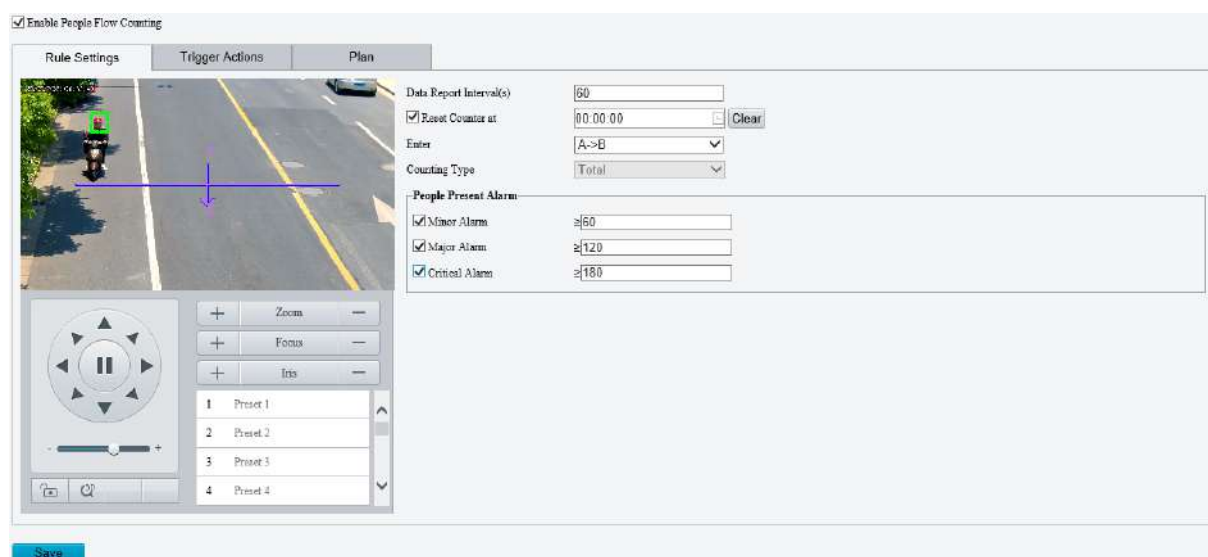

3. A tripwire is displayed in the left preview window by default. You can adjust the position and size of it or draw a tripwire as needed. Only one tripwire is allowed.




- Adjust the position and size of the tripwire.  
Point to the tripwire and drag it to the desired position. Drag the endpoints of the tripwire to resize it.
  - Draw a tripwire.  
Click in the preview window to draw a tripwire.
4. Set the people flow counting rule.

| Item                    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Data Report Interval(s) | Set the time interval for the camera to report people flow statistics.<br>Default: 60.<br>Range: 1 to 60.<br>For example, if the interval is set to 60, the camera will report people flow statistics to the server every 60 seconds.                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Reset Counter at        | <ul style="list-style-type: none"> <li>• Select the <b>Reset Counter at</b> check box and set a time for the camera to clear people counting statistics on the OSD.</li> <li>• To clear now, click <b>Clear</b>.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Enter                   | Set the entry direction.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Counting Type           | Select the counting type.<br>Before use, configure a people counting OSD first. See <a href="#">OSD</a> for details. <ul style="list-style-type: none"> <li>• Total: The number of people entering and leaving the area is displayed in real time on the video image.</li> <li>• People Entered: The number of people entering the area is displayed in real time on the video image.</li> <li>• People Exited: The number of people leaving the area is displayed in real time on the video image.</li> </ul>                                                                                                                                                            |
| People Present Alarm    | Set the people present alarm threshold. When the number of people present reaches a set threshold, an alarm is triggered.<br>Range: 1 to 180. <ul style="list-style-type: none"> <li>• Minor Alarm: A minor alarm is triggered when the number of people present reaches the set value.</li> <li>• Major Alarm: A major alarm is triggered when the number of people present reaches the set value. The value of major alarm must be greater than that of minor alarm.</li> <li>• Critical Alarm: A critical alarm is triggered when the number of people present reaches the set value. The value of critical alarm must be greater than that of major alarm.</li> </ul> |

5. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.

| Rule Settings | Trigger Actions               | Plan |
|---------------|-------------------------------|------|
| No.           | Trigger Actions               |      |
| 1             | People Present Minor Alarm    |      |
| 2             | People Present Major Alarm    |      |
| 3             | People Present Critical Alarm |      |

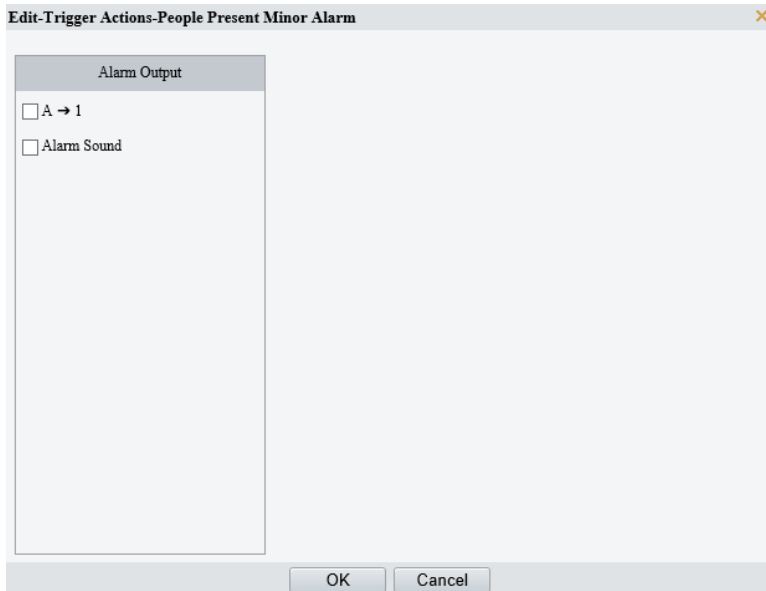


6. Click **Save**.


### 5.6.16 Crowd Density Monitoring

Crowd density monitoring monitors the number of people in a specified area and triggers an alarm if the number exceeds the set alarm threshold.

1. Go to **Setup > Intelligent > Smart**.
2. Select **Crowd Density Monitoring** and click  to configure it.

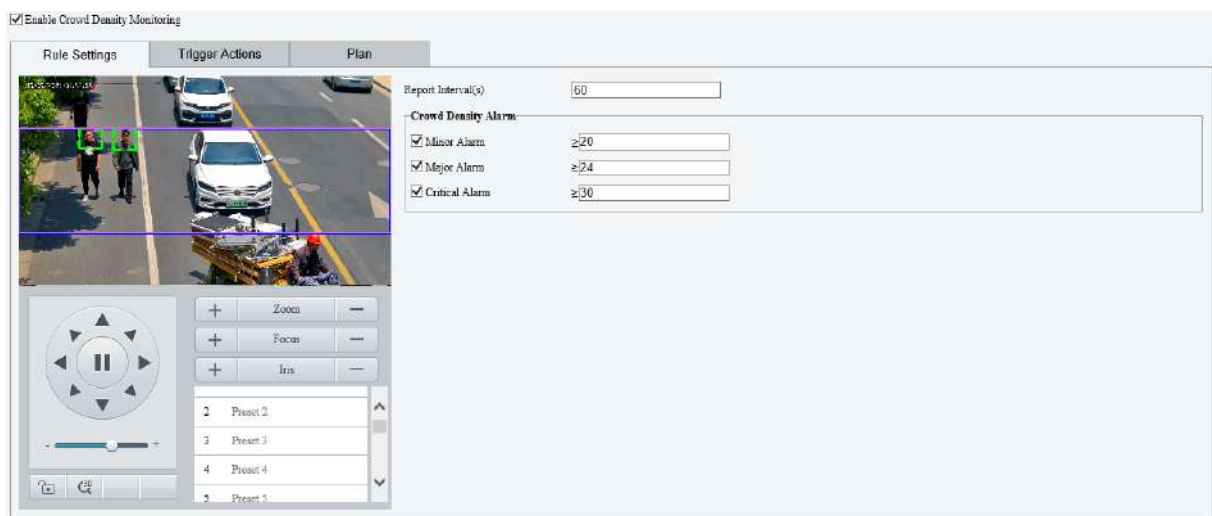

3. A detection box is displayed in the left preview window by default. You can adjust the position and size of it or draw an area as needed. Only one area is allowed.

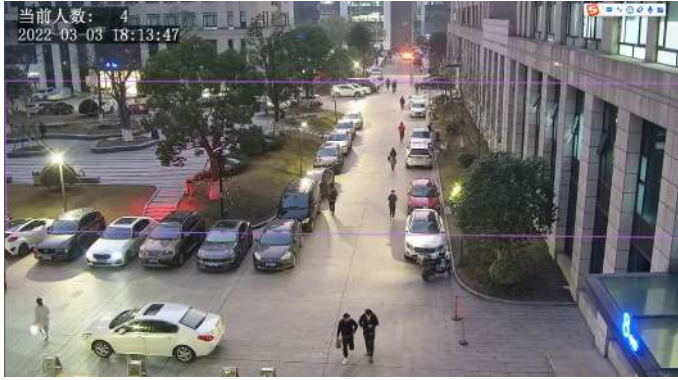


- Adjust the position and size of the area.  
Point to the area and drag it to the desired position. Drag the corners of the area to resize it.
  - Draw an area.  
Click in the preview window to draw a polygonal area with up to 6 sides.
4. Set the crowd density monitoring rule.

| Item                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Report Interval(s)   | <p>Set the time interval for reporting crowd density statistics.<br/>Default: 60.<br/>Range: 1 to 60.<br/>For example, if the interval is set to 60, the camera will report crowd density statistics to the server every 60 seconds.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| People Present Alarm | <p>Set the crowd density alarm threshold. When the number of people in the specified area reaches a set threshold, an alarm is triggered.<br/>Range: 1 to 40.</p> <ul style="list-style-type: none"> <li>• Minor Alarm: A minor alarm is triggered when the number of people in the specified area reaches the set value.</li> <li>• Major Alarm: A major alarm is triggered when the number of people in the specified area reaches the set value. The value of major alarm must be greater than that of minor alarm.</li> <li>• Critical Alarm: A critical alarm is triggered when the number of people in the specified area reaches the set value. The value of critical alarm must be greater than that of major alarm.</li> </ul> |

5. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.

| Rule Settings |                              | Trigger Actions | Plan |
|---------------|------------------------------|-----------------|------|
| No.           | Trigger Actions              |                 |      |
| 1             | Crowd Density Minor Alarm    |                 |      |
| 2             | Crowd Density Major Alarm    |                 |      |
| 3             | Crowd Density Critical Alarm |                 |      |

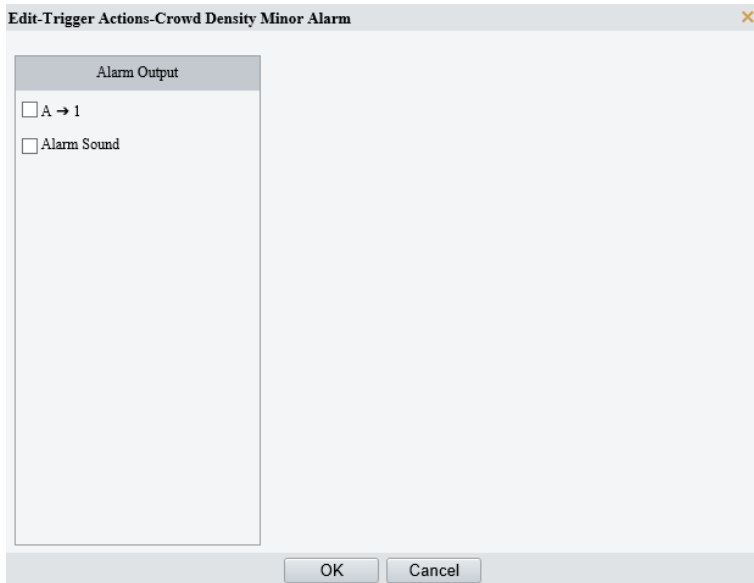

6. Click **Save**.

### 5.6.17 Auto Tracking

The camera can automatically track objects that trigger the predefined tracking rule.

1. Go to **Setup > Intelligent > Smart**.
2. Select **Auto Tracking** and click  to configure it.



3. Set the tracking rule.

| Item            | Description                                                                                                                                                                                                                                                                                                                                                                               |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tracking Object | Select the object to be tracked, including <b>Motor Vehicle</b> , <b>Non-Motor Vehicle</b> , and <b>Pedestrian</b> .                                                                                                                                                                                                                                                                      |
| Filter Type     | After you select a detection object, you can set a filter rule for it.<br>For example, if you have selected <b>Motor Vehicle</b> as a detection object, select <b>Motor Vehicle</b> from the <b>Filter Type</b> drop-down list and set the <b>Max. Size</b> or <b>Min. Size</b> for it, then motor vehicles larger than the Max. Size or smaller than the Min. Size will not be detected. |


|           |                |                                                                                                                                                                                                                                                                                                 |
|-----------|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Max. Size | Size/Min. Size | When enabled, a box appears on the image, you can point to a handle of the box and drag to resize it. The camera filters objects larger than the Max. Size or smaller than the Min. Size. The width and height of the maximum filter area must be greater than that of the minimum filter area. |
| Tracking  |                | Click to set tracking parameters. See <a href="#">Tracking</a> for details.                                                                                                                                                                                                                     |

- Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- Click **Save**.

### 5.6.18 Smoke and Fire Detection

Smoke and fire detection detects smoke and fire in the visible light channel and triggers an alarm. The camera uploads the original snapshots triggered by smoke and fire alarms by default.


- Go to **Setup > Intelligent > Smart**.
- Select **Smoke and Fire Detection** and click  to configure it.

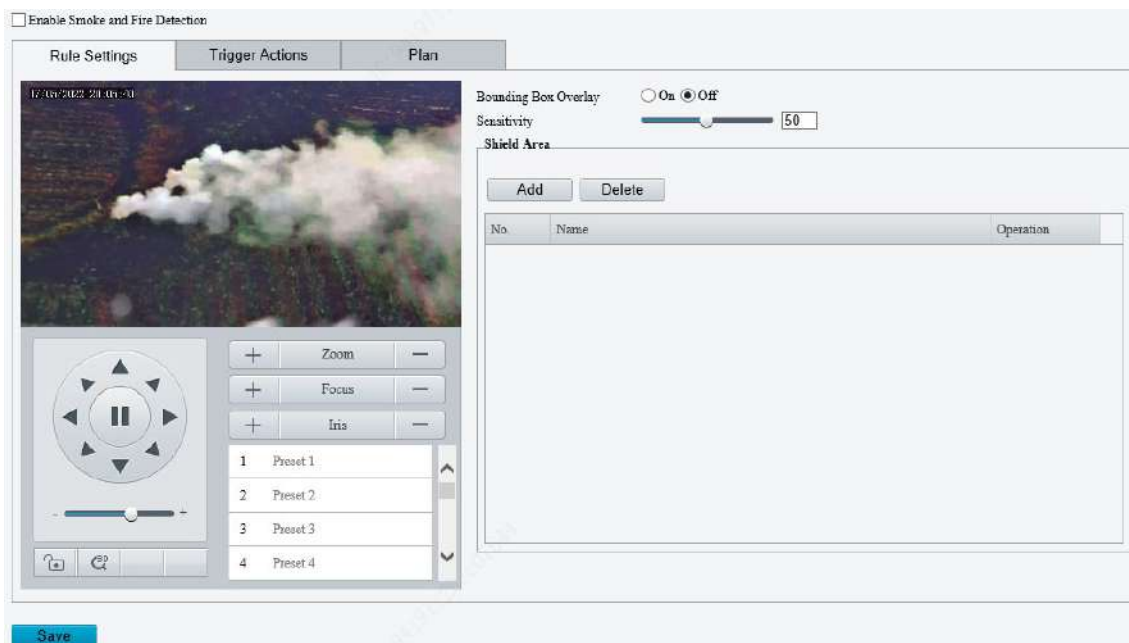

- Set the detection rule.
  - Bounding Box Overlay:** A rectangular box is used to frame the object that triggers the detection rule for you to quickly locate it.
  - Sensitivity:** Set the detection sensitivity. The higher the sensitivity, the more likely smoke and fire will be detected, and the more likely false alarms will occur.
  - Shield Area:** Shield areas that may interfere with detection or trigger false alarms. A total of 64 shielding areas are allowed, with a maximum of 8 shielding areas per image.
    - Move the camera to the desired position manually or using presets.



(2) Click **Add**.

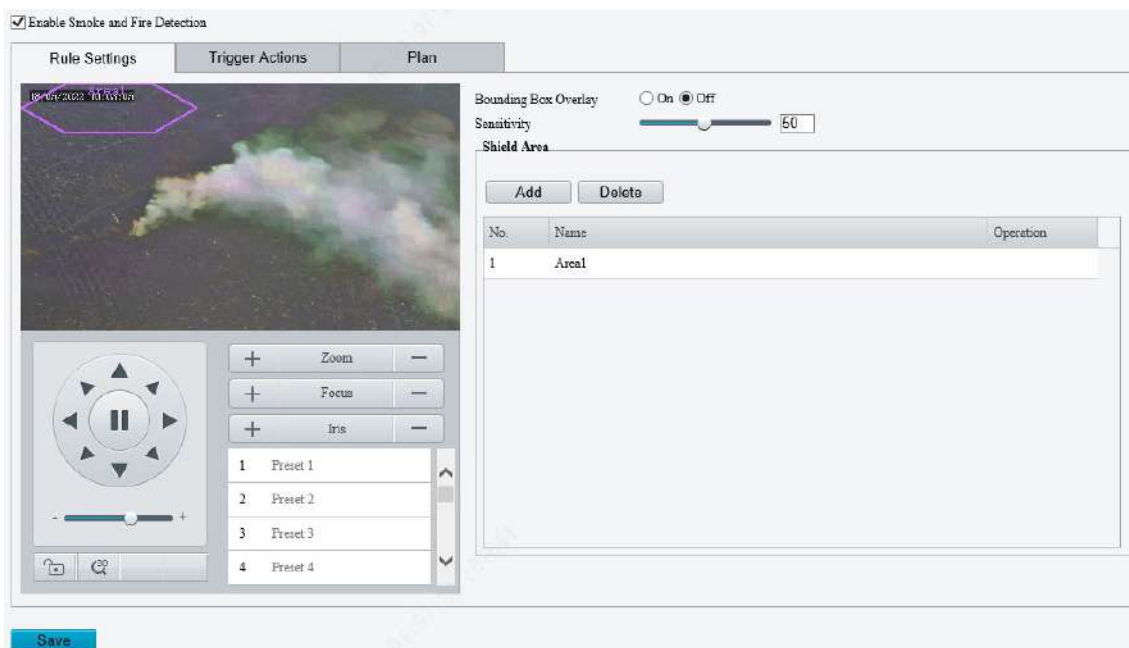

(3) Adjust the position and size of the area or draw an area as needed.

- Adjust the position and size of the area.  
Point to the area and drag it to the desired position. Drag the corners of the area to resize it.
- Draw an area.  
Click in the preview window to draw a polygonal area with up to 6 sides.



| Item   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Preset | <p>Click to move the shielding area to the center of the image.<br/>For example:<br/>Area 1 in the figure below is set as a shielding area.</p>  <p>After you click <b>Preset</b>, the shielding area is moved to the center of the image.</p>  <p><b>NOTE!</b><br/>The area box does not move with the shielding area.</p> |
|        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Delete | Delete the shielding area.                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

- Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- Click **Save**.


5.6.19 Fire Detection

Fire detection detects fire or heat in a specified detection area and triggers an alarm.


- 1. Go to **Setup > Events > Thermal Alarm > Fire Detection**.

This function may vary with device model. The following shows the fire detection page of two models for reference.

Model 1

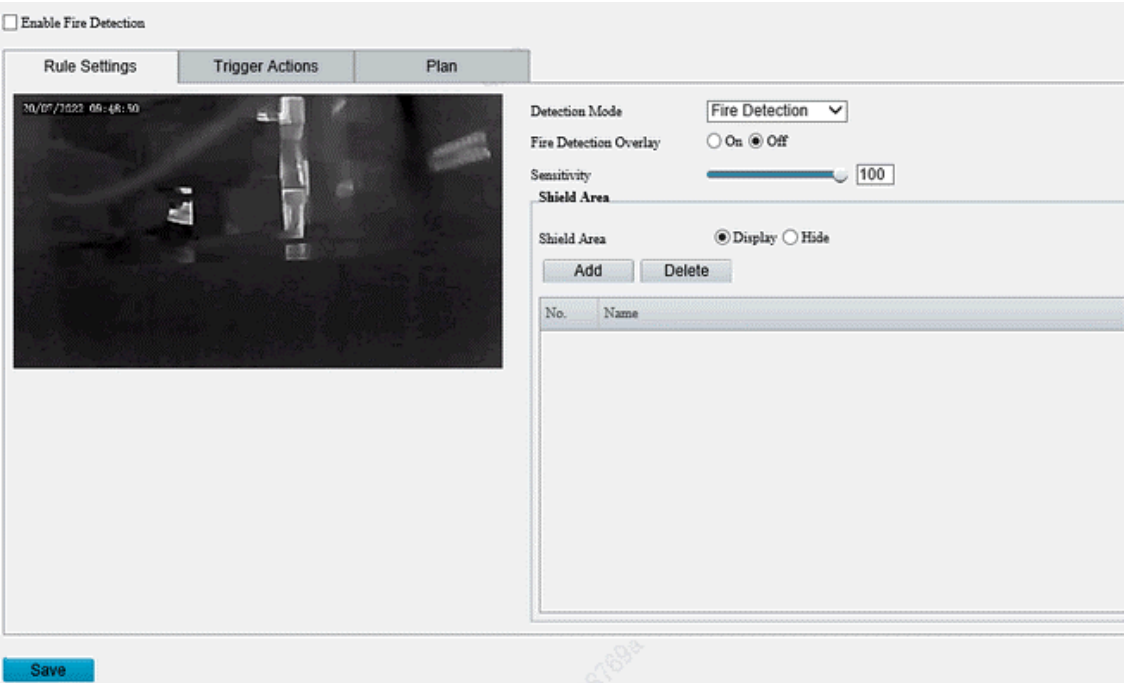

Model 2

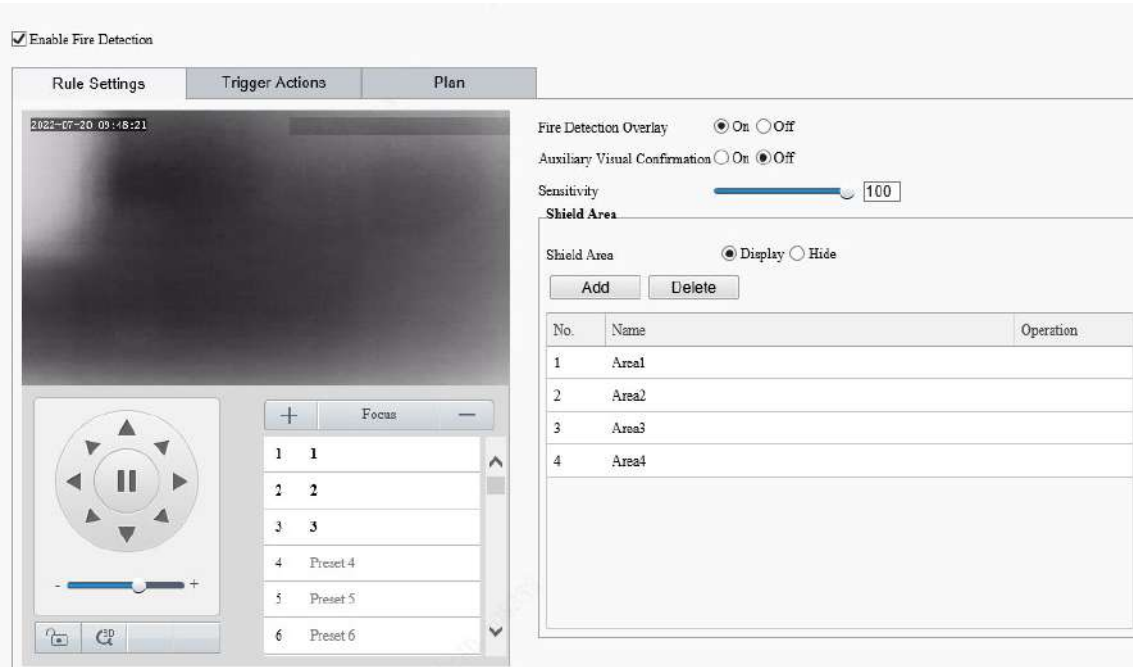

- 2. Enable fire detection.
- 3. Set the detection rule.

| Item           | Description                |
|----------------|----------------------------|
| Detection Mode | Select the detection mode. |

|                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Fire Detection Overlay        | Select whether to show the object bounding box.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Auxiliary Visual Confirmation | <p>Enable <b>Auxiliary Visual Confirmation</b> to work with smoke and fire detection to confirm detected fire or heat for more accurate detection results. After the fire detection detects a fire point, if the smoke and fire detection confirms that the fire point has smoke, a fire alarm will be reported.</p> <p><b>NOTE!</b></p> <ul style="list-style-type: none"> <li>When both fire detection and auxiliary visual confirmation are enabled, all smart functions except smoke and fire detection are unavailable.</li> <li>This function only works during the day.</li> </ul> |
| Sensitivity                   | <p>Set the detection sensitivity.</p> <p>The higher the sensitivity, the more likely fire or heat will be detected, and the more likely false alarms will occur.</p>                                                                                                                                                                                                                                                                                                                                                                                                                      |

- Shield areas that may interfere with detection or trigger false alarms. A total of 24 shielding areas are allowed, with a maximum of 8 shielding areas per image.

- (1) Move the camera to the desired position manually or using presets.

- (2) Click **Add**.

- (3) Adjust the position and size of the area or draw an area as needed.

- Adjust the position and size of the area.

Point to the area and drag it to the desired position. Drag the corners of the area to resize it.

- Draw an area.

Click in the preview window to draw a polygonal area with up to 6 sides.

| Item        | Description                                                  |
|-------------|--------------------------------------------------------------|
| Shield Area | Select to show or hide the shielding area.                   |
| Preset      | Click to move the shielding area to the center of the image. |
| Delete      | Delete the shielding area.                                   |

- Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- Click **Save**.

## 5.6.20 Attribute Collection

### 1. Collect Attributes

You can collect attribute information of monitored objects.

- Go to **Setup > Intelligent > Attribute Collection**.

|                                                           |                                               |                                                         |                                                         |                                                         |                                                         |                                               |
|-----------------------------------------------------------|-----------------------------------------------|---------------------------------------------------------|---------------------------------------------------------|---------------------------------------------------------|---------------------------------------------------------|-----------------------------------------------|
| <input checked="" type="checkbox"/> Face Attributes       |                                               |                                                         |                                                         |                                                         |                                                         |                                               |
| <input checked="" type="checkbox"/> Gender                | <input checked="" type="checkbox"/> Age Range | <input checked="" type="checkbox"/> Glasses             | <input checked="" type="checkbox"/> Mask                | <input checked="" type="checkbox"/> Hat Style           | <input checked="" type="checkbox"/> Hat Color           |                                               |
| <input checked="" type="checkbox"/> Pedestrian Attributes |                                               |                                                         |                                                         |                                                         |                                                         |                                               |
| <input checked="" type="checkbox"/> Gender                | <input checked="" type="checkbox"/> Mask      | <input checked="" type="checkbox"/> Upper Garment Color | <input checked="" type="checkbox"/> Lower Garment Color | <input checked="" type="checkbox"/> Upper Garment Style | <input checked="" type="checkbox"/> Lower Garment Style | <input checked="" type="checkbox"/> Bag Style |
| <input type="button" value="Save"/>                       |                                               |                                                         |                                                         |                                                         |                                                         |                                               |

- Select the attributes to be collected.
- Click **Save**.

### 2. Monitor by Attribute

- Go to **Setup > Intelligent > Attribute Collection > Monitor by Attribute**.

2. Click  to add a monitoring rule.
3. Set the monitoring rule.

| Item            | Description                                              |
|-----------------|----------------------------------------------------------|
| Rule Name       | Set a name for the rule.                                 |
| Trigger Source  | Select the attribute to trigger monitoring.              |
| Trigger Actions | See <a href="#">Alarm-triggered Actions</a> for details. |

4. Click **OK**.

### 5.6.21 Advanced Settings

Advanced settings include snapshot clarity and detection mode for smart functions.

#### 1. Photo

1. Go to **Setup > Intelligent > Advanced Settings > Photo Parameters**.

2. Select to enable or disable object overlay on the image.
3. Adjust the thumbnail image clarity. Please disable **Face Detection** before setting the photo parameters.
4. Click **Save**.

#### 2. Detection


1. Go to **Setup > Intelligent > Advanced Settings > Detection Parameters**.
2. Set the detection parameters.

| Item                             | Description                                                                                                                                                                |
|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Detection Mode                   | Select the detection mode.<br><b>Filter Repeated Motion Mode</b> is used to prevent repeated alarm reporting caused by repeated motion detected in the surveillance scene. |
| Sync Intelligent Mark with Video | When enabled, the intelligent mark will follow the detected object.                                                                                                        |

3. Click **Save**.

### 3. Tracking

1. Go to **Setup > Intelligent > Advanced Settings > Tracking**.

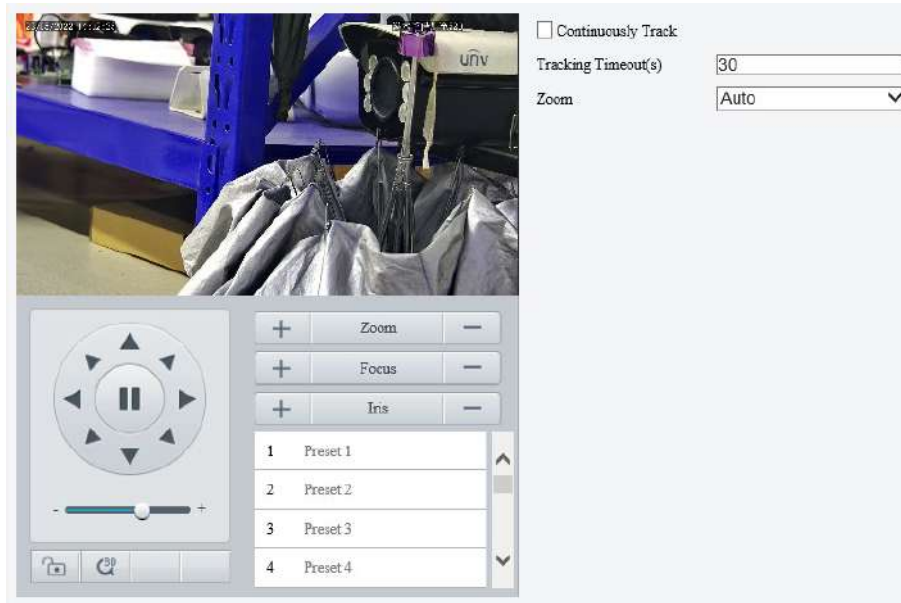

2. Set the tracking parameters.

| Item                | Description                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Continuously Track  | When enabled, the camera continuously tracks the object that triggers the tracking rule until the object disappears.                                                                                                                                                                                                                                                                        |
| Tracking Timeout(s) | <p>Set the tracking time. When the set time is reached, the camera stops tracking.</p> <p><b>NOTE!</b></p> <ul style="list-style-type: none"><li>This parameter is not configurable when <b>Continuously Track</b> is enabled.</li><li>If the object disappears within the set time, the actual tracking time is the time from the appearance to the disappearance of the object.</li></ul> |
| Zoom                | <p>Select the tracking zoom ratio.</p> <ul style="list-style-type: none"><li>Auto: The camera automatically adjusts the zoom ratio according to the object distance during tracking.</li><li>Current Zoom: The camera keeps the current zoom ratio during tracking.</li></ul>                                                                                                               |

## 5.7 Alarm

Configure the alarm function, so the camera can report alarms when an event occurs. Configure alarm linkage, so the camera can trigger other devices to perform specified actions when an event occurs.



**NOTE!**

The supported alarms and linkage actions (or trigger actions) may vary with camera model.

## 5.7.1 Common Alarm

### 1. Motion Detection


The camera detects motions in specified detection areas or grids on the image and reports an alarm when detection rules are triggered.



#### NOTE!

The  icon appears in the upper right corner of the image when a motion detection alarm occurs.

1. Go to **Setup > Events > Common Alarm > Motion Detection**.

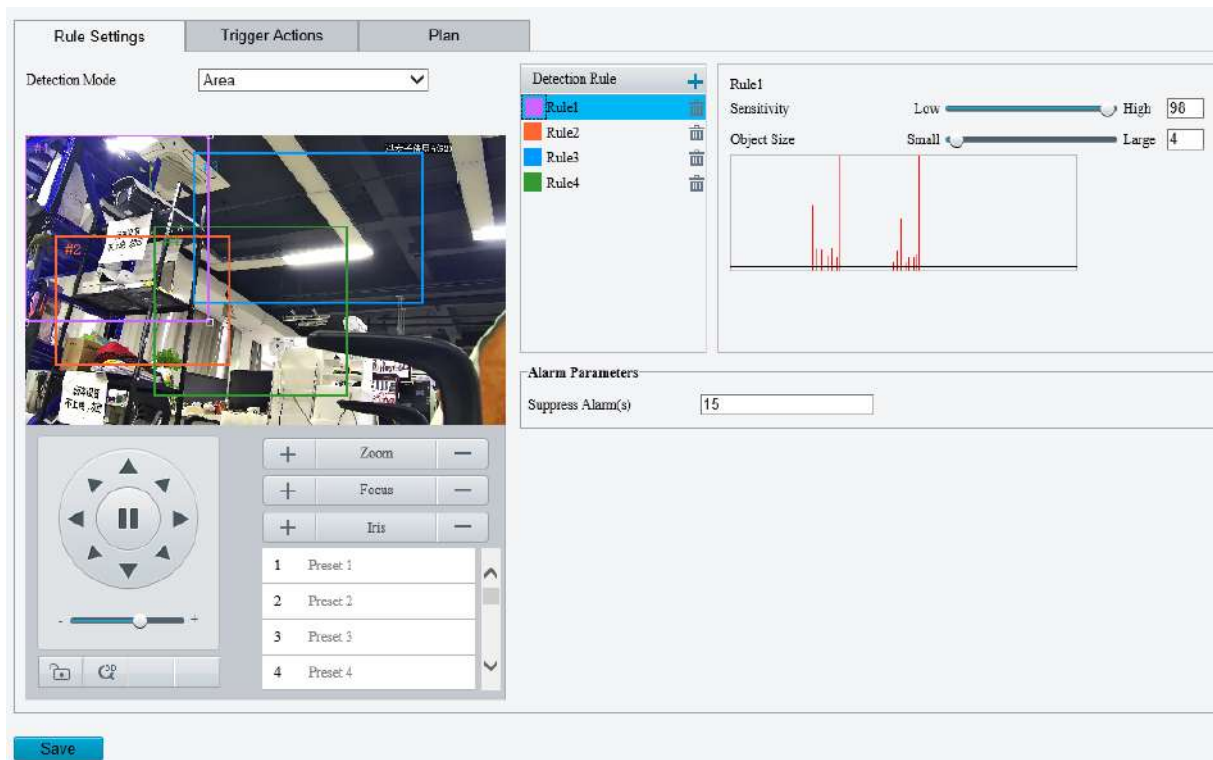

2. Choose a detection mode from the drop-down list.

- Detection area


(1) Up to four detection rules are allowed. To add one, click . A rectangle appears on the image.



(2) Adjust the position, size and shape of the rectangle detection area, or draw a new one.

- Point to a border of the area and drag it to the desired position.
- Point to a handle of the area and drag to resize it.
- Click anywhere on the image, and then drag to draw a new area.


### (3) Set detection rules.
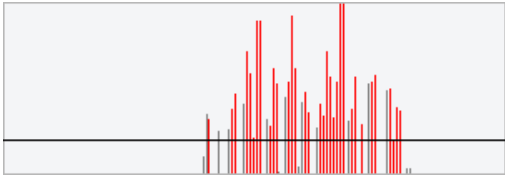
| Item        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Sensitivity | <p>Drag the slider to adjust detection sensitivity.</p> <p>The higher the sensitivity level, the higher the detection rate of small motions, and the higher the false alarm rate. Set based on the scene and your actual needs.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Object size | <p>Drag the slider to set object size.</p> <ul style="list-style-type: none"> <li>Object size: The ratio of the size of the detected object to the size of the detection area. An alarm is triggered when the ratio reaches the set value. To detect motion of small objects, you need to draw a small detection area separately.</li> <li>Motion detection results of the current detection area are shown below in real time. The red means motions that have triggered a motion detection alarm. The height of the lines indicates the extent of motion. The density of the lines indicates the frequency of motion. The higher a line, the greater the extent. The denser the lines, the higher the frequency.</li> </ul>  |


### (4) Set **Suppress Alarm** to avoid receiving the same alarms within a certain length of time (alarm suppression time). For example, alarm suppression time is set to 5s, after an alarm is reported:

- If no motion is detected within the next 5s, new alarms can be reported after 5s when the alarm suppression time is over.
- If motion is detected within the next 5s, the alarm suppression time recounts from the time of the last alarm, and new alarms can be reported when the alarm suppressions time (5s) is over.

### • Grid detection

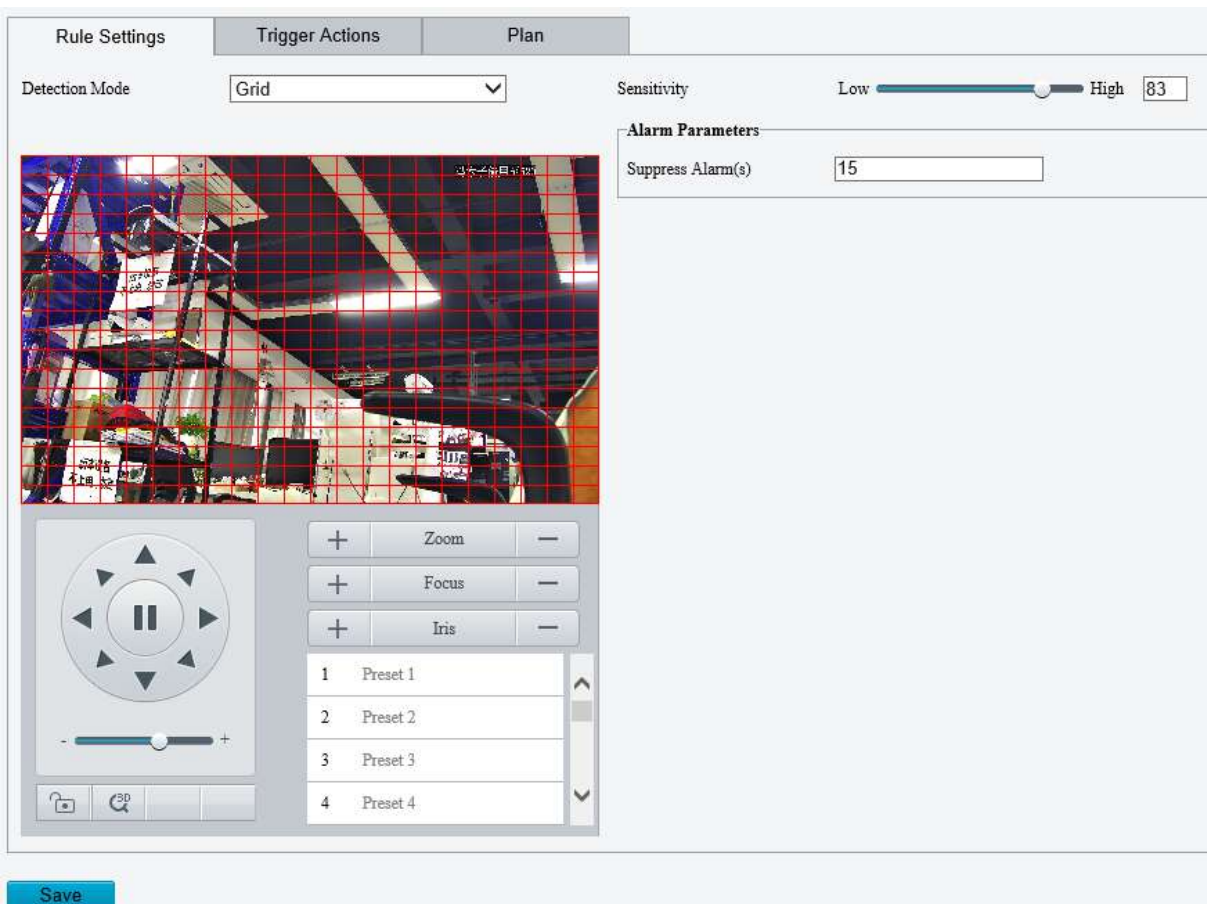

### (1) Set grid detection areas (covered by grid), which is by default the whole screen.

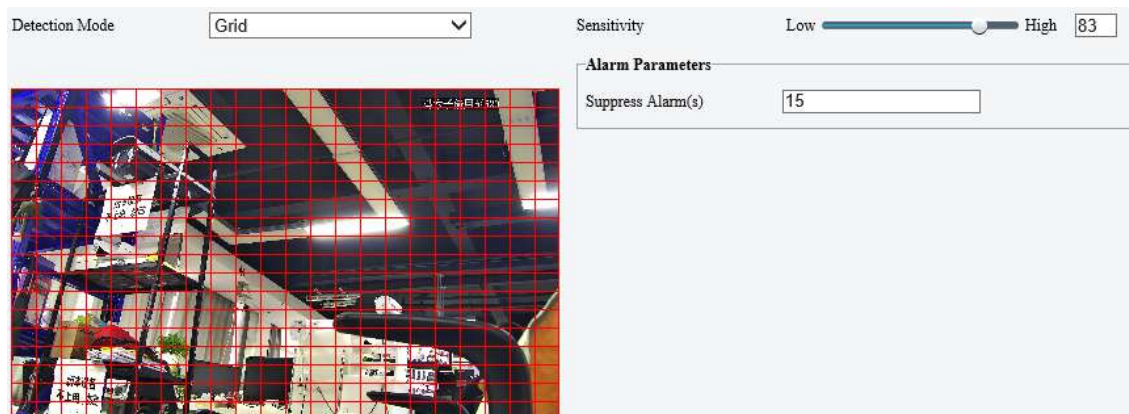

(2) Edit detection areas as needed.

- Click or drag on grid areas to erase grids.
- Click or drag on blank areas to draw grids.

(3) Drag the slider to adjust detection sensitivity.

The higher the sensitivity level, the higher the detection rate of small motions, and the higher the false alarm rate. Set based on the scene and your actual needs.

(4) Set **Suppress Alarm** to avoid receiving the same alarms within a certain length of time (alarm suppression time). For example, alarm suppression time is set to 5s, after an alarm is reported:


- If no motion is detected within the next 5s, new alarms can be reported after 5s when the alarm suppression time is over.
- If motion is detected within the next 5s, the alarm suppression time recounts from the time of the last alarm, and new alarms can be reported when the alarm suppression time (5s) is over.

3. Set alarm linkage and an arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
4. Click **Save**.

## 2. Tampering Detection

The camera triggers a tampering alarm after the lens is blocked for a certain length of time.

1. Go to **Setup > Events > Common Alarm > Tampering Detection**.

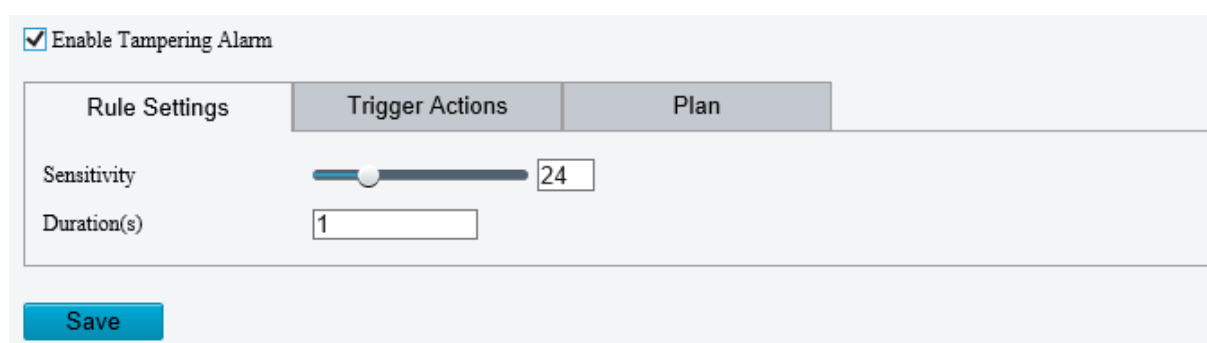

2. Select **Enable Tampering Detection**.
3. Set detection rules.
  - (1) Drag the slider to adjust detection sensitivity. The higher the sensitivity level, the higher the detection rate, and the higher the false alarm rate. Set based on the scene and your actual needs.
  - (2) Set the duration of lens blocking. The camera reports an alarm when the duration of lens blocking exceeds the set value. Set based on the scene and your actual needs.

- Set alarm linkage and an arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- Click **Save**.

### 3. Audio Detection


The camera monitors input audio signals and triggers an audio detection alarm when an exception is detected. Make sure an audio collection device (e.g. sound pickup) is connected, and audio detection is enabled (see [Audio](#)).

- When audio input mode is Line/Mic.

- Go to **Setup > Events > Common Alarm > Audio Detection**.

- Enable **Audio Detection**.
- Set audio detection rules.

| Item                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Detection Type       | <ul style="list-style-type: none"> <li>Sudden Rise: Detects sudden rising sound volume, and triggers an alarm when the rise of volume exceeds the difference.</li> <li>Sudden Fall: Detects sudden falling sound volume, and triggers an alarm when the fall of volume exceeds the difference.</li> <li>Sudden Change: Detects sudden rising and falling sound volume, and triggers an alarm when the rise or fall of volume exceeds the difference.</li> <li>Threshold: Triggers an alarm when the volume exceeds the threshold.</li> </ul> |
| Difference/Threshold | <ul style="list-style-type: none"> <li>Difference: The difference between two sound volumes. The camera triggers an alarm when the rise or fall of volume exceeds the difference (range: 0-400). This parameter is applicable when the detection type is <b>Sudden Rise</b>, <b>Sudden Fall</b>, or <b>Sudden Change</b>.</li> <li>Threshold: The camera triggers an alarm when the sound volume exceeds the threshold (range: 0-400). This parameter is applicable when the detection type is <b>Threshold</b>.</li> </ul>                  |
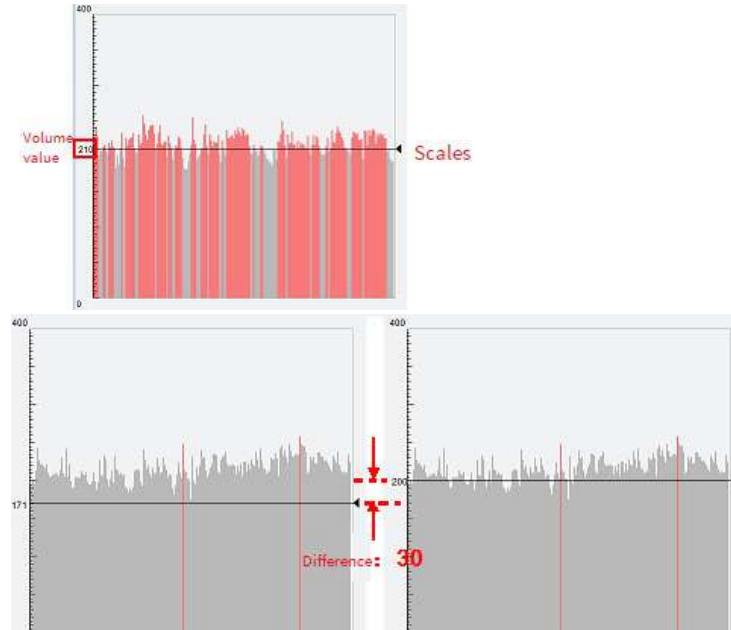
| Item                                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Diagram of relative audio intensity | <ul style="list-style-type: none"> <li>Audio detection results are displayed and updated in real time. You can control the display progress by clicking the <b>Start/Stop</b> button.</li> <li>The scales are used to measure sound volume. Gray indicates relative sound intensity. Red means sound volume that has triggered alarms.</li> </ul>  <p>The diagram illustrates audio intensity detection through three graphs. The top graph shows a volume value of 210 and a scale. The bottom two graphs show a difference of 30 between two scales.</p> |

- Set alarm linkage and an arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- Click **Save**.
  - When audio input mode is RS485.
- Go to **Setup > Events > Common Alarm > Audio Detection**.

Audio Detection ☒ On ☐ Off

Rule Settings **Trigger Actions** Plan

400  
200  
0

Detection Type: Sudden Rises

Difference: 100

Stop

Save

- Enable **Audio Detection**.
- Set audio detection rules.

| Item             | Description                                                                                          |
|------------------|------------------------------------------------------------------------------------------------------|
| Detection Type   | Volume Difference: Compare the difference between the actual ambient volume and the reference value. |
| Reference Volume | Standard value of ambient volume. Range: 0-90.                                                       |

- Set alarm linkage and an arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- Click **Save**.

#### 4. Alarm Input

The camera can receive alarms from external third-party devices such as infrared detectors, smoke detectors, etc. After alarm input is configured, the third-party device can send signals to the camera after an event occurs.

- Go to **Setup > Events > Common Alarm > Alarm Input**.

- Choose an alarm input from the drop-down list.

The number of alarm inputs available may vary with camera model. For example, if the camera has two alarm inputs on the tail cable, you can configure alarm input 1 and alarm input 2 separately.

- Configure alarm input.

| Item        | Description                                                                                                                                                                                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Alarm Name  | The default name is the alarm input channel ID. You rename it as needed.                                                                                                                                                                                           |
| Alarm ID    | Set an alarm ID as you need.                                                                                                                                                                                                                                       |
| Alarm Type  | Set the alarm type according to the alarm input device. <ul style="list-style-type: none"> <li>If the alarm input device is normally open (N.O.), choose <b>N.C.</b>.</li> <li>If the alarm input device is normally closed (N.C.), choose <b>N.O.</b>.</li> </ul> |
| Alarm Input | Click <b>On</b> to enable <b>Alarm Input</b> .                                                                                                                                                                                                                     |

- Set alarm linkage and an arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- Click **Save**.

#### 5. Alarm Output

The camera can output alarms to external third-party devices such as alarm bell, buzzer, etc. After alarm output is configured, the camera can output alarm signals when an alarm (such as motion detection alarm, tampering alarm) occurred and trigger the third-party device to perform certain actions.

- Go to **Setup > Events > Common Alarm > Alarm Output**.

Select Alarm Alarm Output 1

Rule Settings

Output Schedule

Alarm Name A1

Default Status N.O.

Delay(s) 30

Relay Mode Bistable

Save

- Choose an alarm output from the drop-down list. The number of alarm outputs available may vary with camera model.
- Configure alarm output parameters.

| Item           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Alarm Name     | The default name is the alarm output channel ID. You can rename it as needed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Default Status | Choose the default status. The default is <b>N.O.</b> . <ul style="list-style-type: none"> <li>If the external alarm device is normally open (N.O.), choose <b>N.O.</b>.</li> <li>If the external alarm device is normally closed (N.C.), choose <b>N.C.</b>.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Delay(s)       | The duration of alarm output after the alarm is triggered. Set it as needed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Relay Mode     | <p>The default is <b>Monostable</b>.</p> <ul style="list-style-type: none"> <li>Monostable: The circuit can only remain in one stable state. When a trigger pulse is applied, the circuit switches to another state, and then automatically switches back to the original stable state. The circuit will repeat the same actions when the next trigger pulse arrives.</li> <li>Bistable: The circuit can remain in two stable states. When a trigger pulse is applied, the circuit switches to another state, and remains in this state after the trigger pulse is removed. When the next trigger pulse is applied, the circuit switches back to the other stable state and remains in that state.</li> </ul> <p><b>NOTE!</b></p> <p>Set relay mode to better adapt to third-party alarm devices such as alarm lights. Please set the relay mode according to the trigger mode of the third-party alarm device.</p> |

- On the **Output Schedule** page, select **Enable Plan**, and then set when the camera can output alarms. By default, the schedule (plan) is disabled.

☒ **Enable Plan**

☒ Armed ☐ Unarmed Edit

|     |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
|-----|---|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
|     | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
| Mon |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
| Tue |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
| Wed |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
| Thu |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
| Fri |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
| Sat |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
| Sun |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |

Two methods are available to make an arming schedule:

- Draw a schedule

Click **Armed**, and then drag on the calendar to set when the camera can output alarms. Click **Unarmed**, and then drag on the calendar to set when the camera cannot output alarms.

☒ **Enable Plan**

☒ **Armed** ☐ **Unarmed** Edit

|     | 0    | 1     | 2     | 3     | 4     | 5     | 6     | 7     | 8     | 9     | 10    | 11    | 12    | 13    | 14    | 15    | 16    | 17    | 18    | 19    | 20    | 21    | 22    | 23    | 24    |
|-----|------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| Mon | Blue | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  |
| Tue | Blue | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  |
| Wed | Blue | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  |
| Thu | Blue | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  |
| Fri | Blue | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  | Blue  |
| Sat | Blue | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White |
| Sun | Blue | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White | White |



### NOTE!

You need Internet Explorer (higher than IE8) to draw on the calendar. IE10 is recommended.

- Edit the schedule

Click **Edit**, set a refined schedule, click **OK**.

**Edit** ✕

| No. | Start Time              | End Time                |
|-----|-------------------------|-------------------------|
| 1   | 00:00:00 <span>L</span> | 23:59:59 <span>L</span> |
| 2   | <span>L</span>          | <span>L</span>          |
| 3   | <span>L</span>          | <span>L</span>          |
| 4   | <span>L</span>          | <span>L</span>          |

Copy To ☐ Select All

☒ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun

Copy

OK Cancel



### NOTE!

- Four periods are allowed each day. The periods must not overlap.
- To apply the current settings to other days, select the check box for the days one by one or select the **Select All** check box, and then click **Copy**.

5. Click **Save**.




## CAUTION!

- Strictly follow the instructions below when powering on external alarm devices (e.g., alarm light) to avoid device damage.
- Check that **Alarm Type** is set to **Normally Open** (default) on the camera. Make sure the camera and the external alarm device are disconnected from power.
- After you connect the alarm device to the camera, connect the alarm device to power first, and then connect the camera to power.

### 5.7.2 One-key Disarming

The camera cannot trigger linked actions when disarmed.

1. Go to **Setup > Events > One-key Disarming**.
  2. Choose a disarming mode.
    - Disarm by Schedule: Disarm according to a weekly schedule.
    - Disarm Once: Disarm during a specified time period.
  3. Configure disarming schedule or time according to the disarming mode you chose. The disarming schedule or time applies to all the actions selected.
- Disarm by schedule: Click  to configure disarming time.

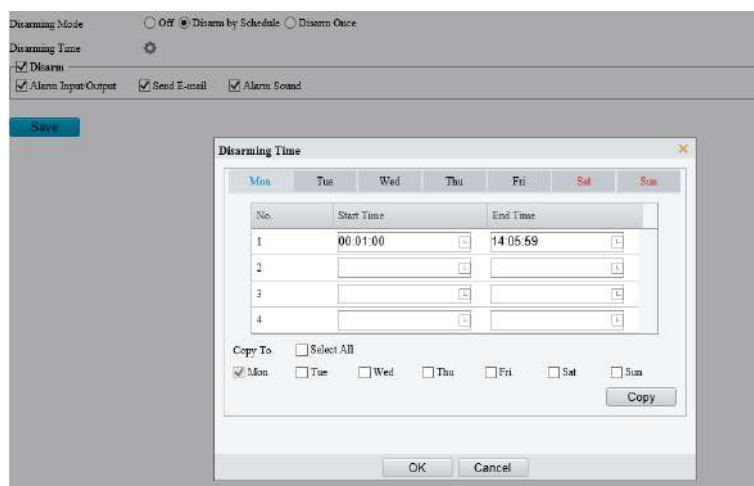

Disarming Mode: ☐ Off ☒ Disarm by Schedule ☐ Disarm Once

Disarming Time: 

☒ Disarm

☒ Alarm Input/Output ☒ Send E-mail ☒ Alarm Sound

**Save**

**Disarming Time**

| No. | Start Time | End Time |
|-----|------------|----------|
| 1   | 00:01:00   | 14:05:59 |
| 2   |            |          |
| 3   |            |          |
| 4   |            |          |


Copy To: ☐ Select All

☒ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun

**Copy**

**OK** **Cancel**

- Disarm Once: Set the disarming time.

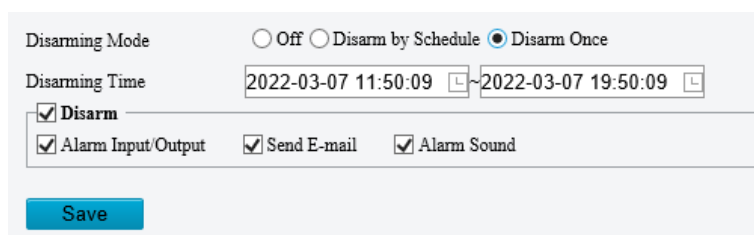

Disarming Mode: ☐ Off ☐ Disarm by Schedule ☒ Disarm Once

Disarming Time: 2022-03-07 11:50:09 ~ 2022-03-07 19:50:09

☒ Disarm

☒ Alarm Input/Output ☒ Send E-mail ☒ Alarm Sound

**Save**

4. Choose actions to be disarmed. The actual actions available, for example, for example, alarm light, alarm sound, email, alarm output, may vary with camera model and version.
5. Click **Save**.

## 5.8 Storage

Go to **Setup > Storage > Storage**.

Storage Medium Memory Card Format ☒ Enable

Storage Medium Status: Normal

Total Capacity 29 GB, Free Space 27 GB.

**Allocate Capacity**

Video(GB)  (The remaining capacity is used for image storage.)

Common Snapshot(GB)  (The remaining capacity is used for smart snapshot storage.)

Smart Snapshot(GB)

**Video Storage Info**

Storage Policy ☐ Manual and Alarm Recording ☐ Scheduled and Alarm Recording ☒ Alarm Recording Only

When Storage Full ☒ Overwrite ☐ Stop

Post-Record(s)

Save

### 5.8.1 Memory Card



#### NOTE!

Before you use this function, make sure a memory card has been mounted on the camera.

1. Set **Storage Media** to **Memory Card**, and select **Enable**.

Storage Medium Memory Card Format ☒ Enable

Storage Medium Status: No card

Total Capacity 0 GB, Free Space 0 GB.

**Allocate Capacity**

Video(GB)  (The remaining capacity is used for image storage.)

Common Snapshot(GB)  (The remaining capacity is used for smart snapshot storage.)

Smart Snapshot(GB)

**Video Storage Info**

Storage Policy ☐ Manual and Alarm Recording ☐ Scheduled and Alarm Recording ☒ Alarm Recording Only

When Storage Full ☒ Overwrite ☐ Stop

Post-Record(s)

Save

| Item                     | Description                                                                                                                                                                                                                         |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Storage Media            | Includes <b>Memory Card</b> and <b>NAS</b> .                                                                                                                                                                                        |
| Format                   | Stop using the storage resource and then click <b>Format</b> . The camera will restart after completing the formatting.                                                                                                             |
| Memory Card Health Index | <p>Show the health status of the memory card.</p> <p><b>NOTE!</b></p> <ul style="list-style-type: none"> <li>• This feature is not available to all devices.</li> <li>• This feature is available to TF cards only.</li> </ul>      |
| When Storage Full        | <ul style="list-style-type: none"> <li>• Overwrite: When space is used up on the memory card, new data overwrites old data.</li> <li>• Stop: When space is used up on the memory card, the camera stops saving new data.</li> </ul> |
| Post-Record(s)           | Sets the duration of alarm-triggered recording after the alarm ended.                                                                                                                                                               |

2. Allocate storage space as needed.
3. Configure storage information.
  - To store manual recordings and alarm recordings

Choose **Manual and Alarm Recording**. By default, the main stream is stored.

|                   |                                                                                                                                                            |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Storage Policy    | <input checked="" type="radio"/> Manual and Alarm Recording <input type="radio"/> Scheduled and Alarm Recording <input type="radio"/> Alarm Recording Only |
| Stream            | Main Stream <span>▼</span>                                                                                                                                 |
| When Storage Full | <input checked="" type="radio"/> Overwrite <input type="radio"/> Stop                                                                                      |
| Post-Record(s)    | 60                                                                                                                                                         |

- To store scheduled recordings and alarm recordings

(1) Choose **Scheduled and Alarm Recording**.

|                   |                                                                                                                                                            |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Storage Policy    | <input type="radio"/> Manual and Alarm Recording <input checked="" type="radio"/> Scheduled and Alarm Recording <input type="radio"/> Alarm Recording Only |
| Stream            | Main Stream <span>▼</span>                                                                                                                                 |
| When Storage Full | <input checked="" type="radio"/> Overwrite <input type="radio"/> Stop                                                                                      |
| Post-Record(s)    | 60                                                                                                                                                         |

(2) The default recording schedule is 24/7. To change the schedule, drag on the calendar or click **Edit**.

☒ Armed
 ☐ Unarmed

Edit

|     | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|-----|---|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| Mon |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
| Tue |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
| Wed |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
| Thu |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
| Fri |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
| Sat |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
| Sun |   |   |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |

- To store alarm recordings only

Choose **Alarm Recording Only**.

|                   |                                                                                                                                                            |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Storage Policy    | <input type="radio"/> Manual and Alarm Recording <input type="radio"/> Scheduled and Alarm Recording <input checked="" type="radio"/> Alarm Recording Only |
| When Storage Full | <input checked="" type="radio"/> Overwrite <input type="radio"/> Stop                                                                                      |
| Post-Record(s)    | 60                                                                                                                                                         |

## 5.8.2 Network Disk

Use a Network Attached Storage (NAS) server to store camera videos.

1. Set **Storage Medium** to **NAS**.
2. Enter the server address.
  - Enter the path to the destination folder on the NAS server. You can find the path by viewing the folder properties.

|                |                        |                           |
|----------------|------------------------|---------------------------|
| Storage Medium | NAS                    | Format                    |
| Server IP      | 192.161.3.250          |                           |
| Path           | /volume1/IPC-TEST1/I04 | NAS Test  Test succeeded. |



### NOTE!

Letters, digits, dots, spaces, and symbols / : , - \_ @ = are allowed in the path.  
Other characters are not allowed and will cause failed NAS test.

3. After the test succeeded, click **Save**.

|                                             |                                                                                                                                                            |                                                     |
|---------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|
| Storage Medium                              | NAS                                                                                                                                                        | Format                                              |
| Server IP                                   | 192.161.3.250                                                                                                                                              |                                                     |
| Path                                        | /volume1/IPC-TEST1/I04                                                                                                                                     | NAS Test  Test succeeded.                           |
| Total Capacity 1828 GB, Free Space 1821 GB. |                                                                                                                                                            |                                                     |
| <b>Allocate Capacity</b>                    |                                                                                                                                                            |                                                     |
| Video(GB)                                   | 1553                                                                                                                                                       | (The remaining capacity is used for image storage.) |
| Common Snapshot(GB)                         | 275                                                                                                                                                        |                                                     |
| Smart Snapshot(GB)                          | 0                                                                                                                                                          |                                                     |
| <b>Video Storage Info</b>                   |                                                                                                                                                            |                                                     |
| Storage Policy                              | <input type="radio"/> Manual and Alarm Recording <input type="radio"/> Scheduled and Alarm Recording <input checked="" type="radio"/> Alarm Recording Only |                                                     |
| When Storage Full                           | <input checked="" type="radio"/> Overwrite <input type="radio"/> Stop                                                                                      |                                                     |
| Post-Record(s)                              | 60                                                                                                                                                         |                                                     |
| <b>Save</b>                                 |                                                                                                                                                            |                                                     |



### NOTE!

- The capacity status appears after you click **Save**. So to change the settings, click **Save** first.
- By default, 85% of the folder space is used to store videos, and the remaining 15% is used to store common snapshots. To allocate space for smart snapshots, you need to reduce space for videos and common snapshots.

## 5.8.3 FTP

Upload images and videos to an FTP server for storage.

1. Go to **Setup > Storage > FTP**.

Server Parameters

Server IP

0.0.0.0

Port No.

21

Username

Password

Confirm

Upload Images

☐

Upload Video

☐

Convert Path into UTF8...

☐

Test

Photo

Recording

Save To:

File Path

File Name

| No. | Naming Element |
|-----|----------------|
| 1   | Disable        |
| 2   | Disable        |
| 3   | Disable        |
| 4   | Disable        |
| 5   | Disable        |
| 6   | Disable        |

Note: Overwrite will take place in the current directory.

Save

## 2. Configure server parameters.

| Item                          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Server IP                     | IP address of the FTP server.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Port No.                      | The default is 21. You can set a different port as needed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Username                      | Username used to log in to the FTP server.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Password                      | Password used to log in to the FTP server.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Test                          | Test the connection to the FTP server.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Upload Images                 | <p>Select the check box if you want to upload common (non-smart) snapshots. To configure an FTP server for smart snapshots, go to <b>Setup &gt; System &gt; Server &gt; Intelligent Server</b>.</p> <p>Overwrite Storage: When the number of images in the folder of the lowest level reaches the threshold, the server continues to save new images by overwriting the existing images. For example, if the folder path is \\IP\date, the level-2 folder "date" is the lowest. When the images uploaded on Jan. 4, 2022 exceeds 1,000, existing images in the 20220104 folder will be overwritten by new images.</p> <p><b>NOTE!</b></p> <p>If you select <b>Overwrite Storage</b>, make sure the last naming element of filename is <b>Photo No.</b>.</p> <p>The default overwrite storage threshold is 1000 images, and the maximum is 100,000 images.</p> |
| Upload Video                  | Select if you want to upload alarm-triggered recordings.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Convert Path into UTF8 Format | Select if you want to convert the path into UTF8 format.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Post-Record(s)                | Fill in the number of seconds, which is the duration of the alarm-triggered recording after the alarm has ended.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

## 3. Configure the storage path.

| Item      | Description                                                                                                                     |
|-----------|---------------------------------------------------------------------------------------------------------------------------------|
| Photo     | File path, up to 6 levels. If not specified, the default path “\IP\Date\Common” will be used. Common means common snapshots.    |
|           | Filename, up to 20 fields are allowed. If not specified, the sequence number such as 1, 2, 3, ... will be used as the filename. |
| Recording | File path, up to 6 levels. If no path is specified, the default path “\IP\Date\Common” will be used.                            |
|           | The default filename is “S+recording start time+E+recording end time”. For example, S20220104174903E20220104175002.             |

4. Click **Save**.

## 5.9 Security

The security functions available may vary with camera model and version.

### 5.9.1 User

Go to **Setup > Security > User**. You can add, edit, and delete users.

The screenshot shows a user management interface. At the top, there are three buttons: 'Add', 'Edit', and 'Delete'. Below them is a table with the following data:

| No. | Username | User Type |
|-----|----------|-----------|
| 1   | admin    | Admin     |

- Add user

1. Click **Add**.

Common User

The screenshot shows the 'Add' dialog box for creating a new user. It contains the following fields and options:

- Username:** A text input field.
- User Type:** A dropdown menu currently showing 'Common User'.
- Password:** A text input field with a strength indicator below it showing 'Weak', 'Medium', and 'Strong'.
- Confirm:** A text input field.
- Select Permission:** A checkbox that is currently unchecked.
- Live View:** A checkbox that is currently checked.
- Playback:** A checkbox that is currently unchecked.

At the bottom of the dialog are 'OK' and 'Cancel' buttons.

## Operator

**Add**

Username

User Type **Operator** ▼

Password

Weak      Medium      Strong

Confirm

☐ **Select Permission**

☐ Parameter...  
 ☒ Live View  
 ☒ Playback  
 ☒ Snapshot  
 ☒ Two-way A...

☒ PTZ Control  
 ☐ Event Subs...  
 ☒ Log  
 ☐ Maintenance  
 ☐ Upgrade

OK      Cancel

### 2. Configure the parameters.

| Item              | Description                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Username          | Set the username that you prefer.                                                                                                                                                                                                                                                                                                                                                                                     |
| User Type         | Choose <b>Common User</b> or <b>Operator</b> .<br><b>NOTE!</b> <ul style="list-style-type: none"> <li>Up to 32 users are allowed, including admin (at least one), common users and operators (up to 31).</li> <li>Admin has all permissions in the system, including device operation and user management.</li> <li>Operator has higher privilege than common user and can configure in the web interface.</li> </ul> |
| Password          | Enter a password.<br><b>NOTE!</b><br>A strong password is required for the new user.                                                                                                                                                                                                                                                                                                                                  |
| Confirm Password  | Enter the password again.                                                                                                                                                                                                                                                                                                                                                                                             |
| Select Permission | Different user types have different permissions. Select permissions you want to assign to the new user.<br><b>NOTE!</b><br>You can select the <b>Select Permission</b> check box to select/deselect all permissions.                                                                                                                                                                                                  |

### 3. Click **OK**.

- Edit user information
1. Click the user.
  2. Click **Edit**.

Common User

Edit

Username

1111

User Type

Common User

Admin Password

Password

Weak

Medium

Strong

Confirm

Select Permission

Live View

Playback

OK

Cancel

Admin

Edit

Username

admin

User Type

Admin

Old Password

Password

Weak

Medium

Strong

Confirm

Email

Used to reset password. You are recommended to fill in.

Select Permission

Parameter...

Live View

Playback

Snapshot

Two-way A...

PTZ Control

Event Subs...

Log

Maintenance

Upgrade

OK

Cancel

3. Configure the parameters.

| Item              | Description                                                                                                                                                                                                                                    |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Admin Password    | Password of administrator, not the user being editing.                                                                                                                                                                                         |
| Password          | Enter a password that you prefer.                                                                                                                                                                                                              |
| Confirm Password  | Enter the password again.                                                                                                                                                                                                                      |
| Select Permission | <div>Different user types have different permissions. Select permissions you want to assign to the new user.</div> <div><b>Note</b></div> <div>You can select the <b>Select Permission</b> check box to select/deselect all permissions.</div> |

4. Click **OK**.



#### NOTE!

- When editing admin information, you can change the registered mobile phone number. The phone number can be used to reset the device password if you forgot it.
- Only admin can change the device password. The new password must be different from the old.
- Only admin can change the username and password of a new user. If the user is logged in, the user will log out automatically and must use the new username and password to log in.

- Delete a user

Click the user, click **Delete**, and then click **OK** to confirm.

## 5.9.2 HTTPS

You can choose to enable HTTPS to enhance data security during network transmission.

1. Enable **HTTPS**.

Go to **Setup > Security > Network Security > HTTPS**.



#### NOTE!

The default HTTPS port is 443. To use a different port, go to **Setup > Network > Port**.

The camera automatically generates a default certificate. To edit certificate contents (such as expiration date), you can delete the installed certificate and re-create one.

- Use the default certificate

The screenshot shows the 'HTTPS' configuration page. At the top, there are two radio buttons: 'On' and 'Off'. The 'Off' button is selected. Below this, there is a table with certificate information:

|                     |                   |                         |        |
|---------------------|-------------------|-------------------------|--------|
| Current Certificate | /CN=192.          | =CN/L=HZ/ST=ZJ/O=Emb... | Delete |
| Certified To        | /CN=192.          | =CN/L=HZ/ST=ZJ/O=Emb... |        |
| Certified By        | /CN=192.          | =CN/L=HZ/ST=ZJ/O=Emb... |        |
| Valid Period(day)   | 20211213~20221214 |                         |        |
| Export Certificate  | Export            |                         |        |

At the bottom left, there is a blue 'Save' button.

(1) Enable **HTTPS**.

(2) Click **Save**.

- Create a certificate

The screenshot shows the 'HTTPS' configuration page. At the top, there are two radio buttons: 'On' and 'Off'. The 'Off' button is selected. Below this, there is a section for 'Certificate Type' with two radio buttons: 'Private' and 'Request'. The 'Private' button is selected. Below this, there is a 'Create Certificate' button. At the bottom left, there is a blue 'Save' button.

(1) Click **Delete** to delete the current certificate.

(2) Choose a certificate type: private certificate or certificate request.

- Private certificate: Suitable for low-security application scenarios without any signature from a third-party certificate authority.

- Certificate request: Suitable for high-security application scenarios and with a third-party certificate.

(3) Click **Create**, and fill in the required information.

Create a private certificate

Create a certificate request

| Item                | Description                                            |
|---------------------|--------------------------------------------------------|
| Public Key          | Length of the public key: 2048 or 1024. Default: 2048. |
| Country             | Two-character country code, for example, CN for China. |
| Domain Name/IP      | Device's IP address or domain name.                    |
| Valid Period(day)   | Validity period of the certificate.                    |
| Province            | Complete province name.                                |
| City                | Complete city name.                                    |
| Organization        | Organization name.                                     |
| Organizational Unit | Organizational unit name.                              |
| Email               | Email address of the contact.                          |

(4) Click **OK**.



#### NOTE!

After the certificate request is created, click **Export** to export the certificate request file. After the third-party certificate authority (CA) signs and issues the certificate request, import the acquired CA certificate into the device.

(5) Enable **HTTPS**.

(6) Click **Save**.

## 2. Log in

The login page appears when HTTPS is enabled. A secure data transmission channel is established after you log in.

### 5.9.3 Authentication

Configure RTSP authentication and HTTP authentication to improve the security of network transmission. Only after successful authentication can data such as videos, audios, text, and images be transferred on the network.

#### 1. Go to **Setup > Security > Network Security > Authentication**.



#### 2. Choose an authentication mode.

| Item                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RTSP Authentication | <p>Choose an authentication mode from the drop-down list.</p> <ul style="list-style-type: none"><li>Basic: Basic authentication. The username and password are transferred on network in plaintext, which imposes serious security risks.</li><li>Digest MD5: Digest authentication, which uses MD5 to protect the username, password, and domain of the requester, and provides higher security.</li><li>Digest SHA256: Digest authentication, which uses SHA256 for authentication and provides higher security than Digest MD5.</li><li>None: Transmit message without authenticating the RTSP address.</li></ul> |
| HTTP Authentication | <p>Choose an authentication mode from the drop-down list.</p> <ul style="list-style-type: none"><li>Digest MD5: Digest authentication, which uses MD5 to protect the username, password, and domain of the requester, and provides higher security.</li><li>Digest SHA256: Digest authentication, which uses SHA256 for authentication and provides higher security than Digest MD5.</li><li>None: Transmit message without authenticating the RTSP address.</li></ul>                                                                                                                                               |


#### 3. Click **Save**.

### 5.9.4 Registration Information

You can set to hide vendor information of the camera from the server.

#### 1. Go to **Setup > Security > Registration Information**.

#### 2. Enable **Hide Vendor Info**. Vendor information will not be displayed on the management platform.

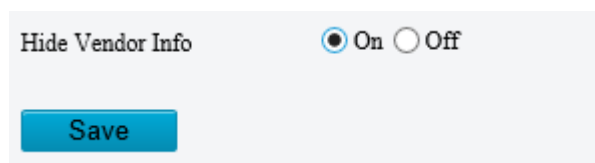

#### 3. Click **Save**.

### 5.9.5 ARP Protection

Protect the camera from ARP spoofing attacks by binding the gateway's IP address and MAC address.

#### 1. Go to **Setup > Security > Network Security > ARP Protection**.

ARP Protection ☒ On ☐ Off

Gateway

Gateway MAC Address

**Save**

2. Enable **ARP Protection**.
3. Enter the gateway's MAC address.
4. Click **Save**.

### 5.9.6 IP Address Filtering

Use IP address filtering to allow or forbid access from specified IP addresses.

1. Go to **Setup > Security > Network Security > IP Address Filtering**.

IP Address Filtering ☐ On ☒ Off

Filtering Mode

| No. | IP Address | + |
|-----|------------|---|
|     |            |   |
|     |            |   |
|     |            |   |
|     |            |   |
|     |            |   |

**Save**

2. Enable **IP Address Filtering**.
3. Choose **Allow** or **Forbid** to filter IP addresses. When **Allow** is selected, access is allowed only from the added IP addresses. If **Forbid** is selected, access is forbidden from the added IP addresses.
4. Click **+**, enter IP addresses.
  - Up to 32 IP addresses can be added. Duplicate addresses are not allowed.
  - The first byte of the IP must be 1-233, and the fourth byte cannot be 0. Invalid IP addresses such as 0.0.0.0, 127.0.0.1, 255.255.255.255, and 224.0.0.1 are not allowed.
5. Click **Save**.

### 5.9.7 Access Policy

Access policies are used to prevent unauthorized access and operation from the network.

1. Go to **Setup > Security > Network Security > Access Policy**.

- Illegal Login Lock

**Illegal Login Lock**

Illegal Login Lock ☒ On ☐ Off

Illegal Login Limit

Lock Time (min)

**Save**

**NOTE!**

By default, illegal login lock is enabled, and the account will be locked for 5 minutes after 5 consecutive failed login attempts due to a wrong password. If illegal login lock is disabled, the camera will not lock the account no matter how many times an incorrect password is input.

| Item                | Description                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Illegal Login Lock  | <p>If the client IP address is not on the blocklist, the input username is correct, but the input password is wrong, it is an illegal login attempt.</p> <p><b>NOTE!</b></p> <ul style="list-style-type: none"> <li>When an account is locked, information including the username, IP address, etc, is logged by the system.</li> <li>The user can unlock the account by disconnecting power and rebooting the camera.</li> </ul> |
| Illegal Login Limit | <p>The maximum number of illegal login attempts allowed. Range: 2-10.</p> <p>The account is locked when the limit is reached.</p>                                                                                                                                                                                                                                                                                                 |
| Lock Time (min)     | Integer within the range of 1-120.                                                                                                                                                                                                                                                                                                                                                                                                |

Example: User A tries to log in from the client IP address 192.168.1.33 and is locked. Then user A cannot log in within the lock time, but user B is not affected and can still log in from the same IP address.

- Session timeout

A session is the connection established between the client (Web browser) and the server (camera). When session timeout is enabled, if the client cannot obtain or save configurations within the set time, the user will automatically log out and go to the login page.

**NOTE!**

Only admin can enable or disable this feature.

| Item            | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Session Timeout | <p>Sessions are counted as follows. Take one device as an example.</p> <ul style="list-style-type: none"> <li>If the session is established using one web browser from one client IP, there is one session.</li> <li>If sessions are established using one web browser from one client IP, there are two sessions.</li> <li>If sessions are established using two web browsers from two client IPs (two browsers from each IP), there are four sessions.</li> </ul> <p><b>NOTE!</b></p> <p>Up to 36 sessions are allowed at the same time.</p> |
| Timeout (min)   | <p>Enter an integer within the range of 1-120.</p> <p><b>NOTE!</b></p> <p>The timer restarts when the session is re-established after a reboot.</p>                                                                                                                                                                                                                                                                                                                                                                                            |

2. Click **Save**.

- Friendly password

Users are not affected when friendly password is enabled. When friendly password is disabled, users who are already logged in with a weak password will be forced to set a strong password before the user can proceed with other actions in the web interface.



**NOTE!**

Friendly password is not available to all cameras.

### 5.9.8 Watermark


Use watermark to encrypt custom information in videos to prevent tampering.



**NOTE!**

- Watermarks can be verified using EZPlayer (available for download from Uniview website).
- For devices with two video channels, watermark parameters need to be configured for the channels separately.

1. Go to **Setup > Security > Watermark**.

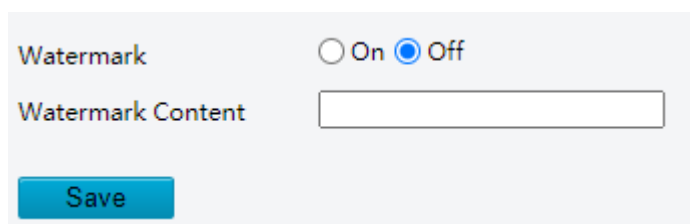


2. Enable **Watermark**.
3. Set watermark contents, which may include uppercase letters, lowercase letters, and digits. Up to 16 characters are allowed.
4. Click **Save**.

### 5.9.9 WebSockets

WebSockets encrypts data based on SSL. You can enable WebSockets to enhance the security of data transmission.

1. Go to **Setup > Security > Network Security > WebSockets**.

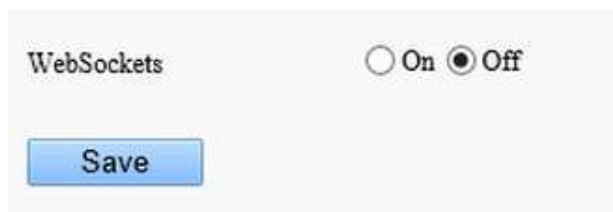

2. Enable **WebSockets**.
3. Click **Save**.

## 5.10 System



**NOTE!**

User operations in this module may vary with camera model.

### 5.10.1 Time

Set the device's system time manually or sync it with a server.

1. Go to **Setup > System > Time**.

|                 |                                                                             |                                    |  |
|-----------------|-----------------------------------------------------------------------------|------------------------------------|--|
| Sync Mode       | <div>Sync with Latest Server Time</div>                                     |                                    |  |
| Time Zone       | <div>(UTC+08:00) Beijing, Hong Kong, Urumqi, Singapore, Taipei, Perth</div> |                                    |  |
| System Time     | 2022-05-24 16:32:16                                                         |                                    |  |
| Set Time        | <div>2022-05-24 16:32:15</div>                                              | <div>Sync with Computer Time</div> |  |
| <div>Save</div> |                                                                             |                                    |  |

2. Set system time.

- Set manually in the **Set Time** field.



**NOTE!**

Make sure **Sync Mode** is set to **Sync with System Configuration**; otherwise, the device time will still sync with other sources after you set it manually.

- Sync time

| Item                                   | Description                                                                                                               |
|----------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Sync with System Configuration         | Default. Time provided by the system's built-in time module.                                                              |
| Sync with Latest Server Time           | The camera regularly syncs time with all the connected servers.                                                           |
| Sync with Management Server(Non-ONVIF) | The camera regularly syncs time with the server that is not connected via Onvif.                                          |
| Sync with Management Server(ONVIF)     | The camera regularly syncs time with the server that is connected via Onvif.                                              |
| Sync with NTP Server                   | The camera syncs time with the NTP server, for which you need to configure the server address, port, and update interval. |
| Sync with Cloud Server                 | The camera syncs time with the cloud server once when it gets online, and does not sync again until it gets offline.      |
| BeiDou Module Auto Sync                | The camera syncs time with BeiDou satellites through the BeiDou module (if equipped).                                     |
| Sync with Computer Time                | The camera syncs time with the client computer from which you log in to the camera.                                       |

3. Click **Save**.

## 5.10.2 DST

1. Go to **Setup > System > Time > DST**.

|                 |                                                                          |                  |                |                 |
|-----------------|--------------------------------------------------------------------------|------------------|----------------|-----------------|
| DST             | <div><input type="radio"/> On <input checked="" type="radio"/> Off</div> |                  |                |                 |
| Start Time      | <div>Apr</div>                                                           | <div>First</div> | <div>Sun</div> | <div>02</div> h |
| End Time        | <div>Oct</div>                                                           | <div>Last</div>  | <div>Sun</div> | <div>02</div> h |
| DST Bias        | <div>60mins</div>                                                        |                  |                |                 |
| <div>Save</div> |                                                                          |                  |                |                 |

2. Enable DST, and set the start time, end time, and DST bias.

3. Click **Save**.


### 5.10.3 Server

#### 1. Intelligent Server

If the camera needs to report smart alarms to a server, you need to configure an intelligent server. The camera can be managed by two intelligent servers simultaneously.

- UNV

1. Go to **Setup > System > Server > Intelligent Server**.
2. Set **Platform Communication Type** to **UNV**.

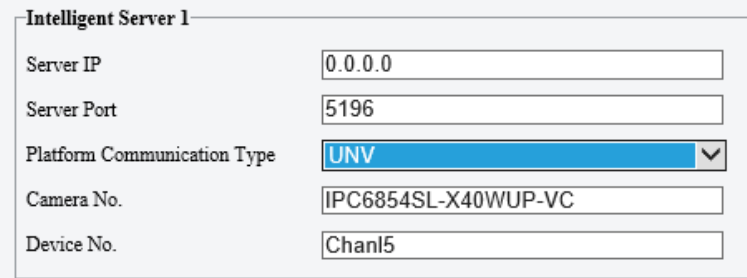


Intelligent Server 1

|                             |                                                  |
|-----------------------------|--------------------------------------------------|
| Server IP                   | <input type="text" value="0.0.0.0"/>             |
| Server Port                 | <input type="text" value="5196"/>                |
| Platform Communication Type | <input type="text" value="UNV"/>                 |
| Camera No.                  | <input type="text" value="IPC6854SL-X40WUP-VC"/> |
| Device No.                  | <input type="text" value="Chan15"/>              |

3. Enter the server's IP address. Keep the defaults for other parameters.
4. Click **Save**.

- FTP


1. Go to **Setup > System > Server > Intelligent Server**.
2. Set **Platform Communication Type** to **FTP**.



Intelligent Server 1

|                             |                                  |                                              |
|-----------------------------|----------------------------------|----------------------------------------------|
| Platform Communication Type | <input type="text" value="FTP"/> | <input type="button" value="Configure FTP"/> |
|-----------------------------|----------------------------------|----------------------------------------------|

3. Click **Configure FTP**.

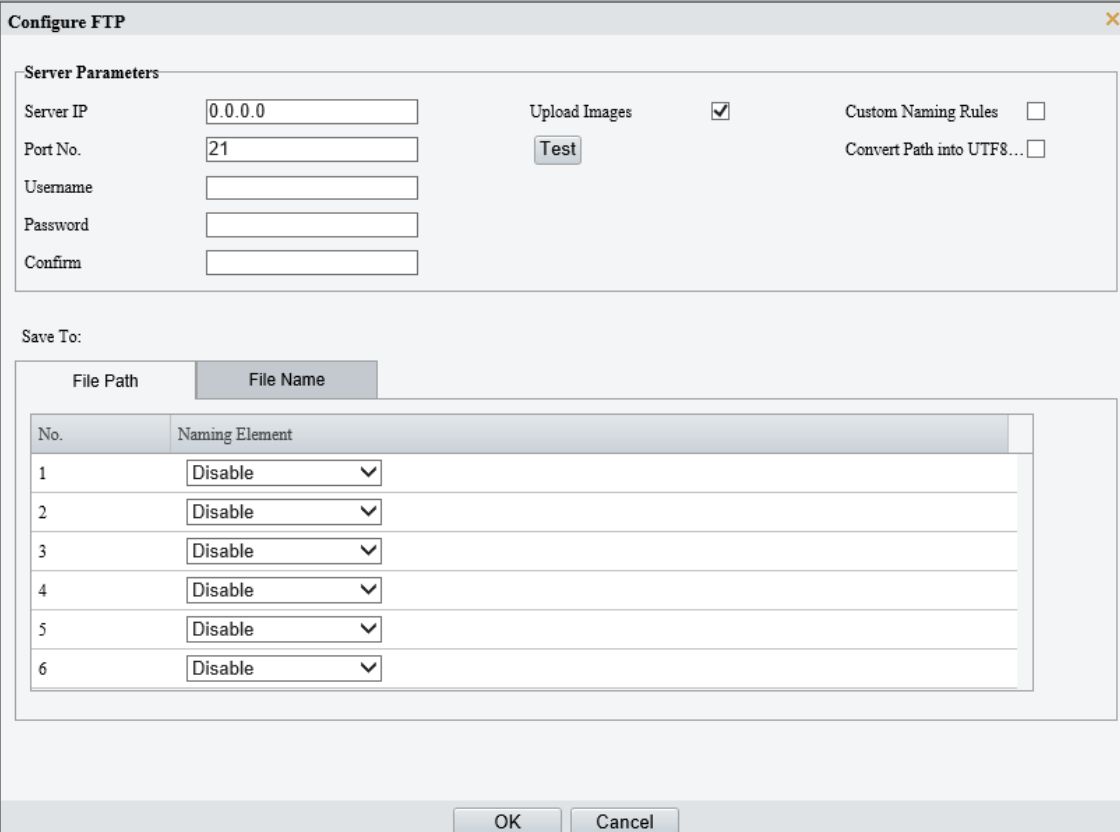

Configure FTP

Server Parameters

|           |                                      |                                     |                                     |                           |                          |
|-----------|--------------------------------------|-------------------------------------|-------------------------------------|---------------------------|--------------------------|
| Server IP | <input type="text" value="0.0.0.0"/> | Upload Images                       | <input checked="" type="checkbox"/> | Custom Naming Rules       | <input type="checkbox"/> |
| Port No.  | <input type="text" value="21"/>      | <input type="button" value="Test"/> |                                     | Convert Path into UTF8... | <input type="checkbox"/> |
| Username  | <input type="text"/>                 |                                     |                                     |                           |                          |
| Password  | <input type="text"/>                 |                                     |                                     |                           |                          |
| Confirm   | <input type="text"/>                 |                                     |                                     |                           |                          |

Save To:

| File Path |                                      | File Name |
|-----------|--------------------------------------|-----------|
| No.       | Naming Element                       |           |
| 1         | <input type="text" value="Disable"/> |           |
| 2         | <input type="text" value="Disable"/> |           |
| 3         | <input type="text" value="Disable"/> |           |
| 4         | <input type="text" value="Disable"/> |           |
| 5         | <input type="text" value="Disable"/> |           |
| 6         | <input type="text" value="Disable"/> |           |

OK Cancel

#### 4. Configure the parameters.

| Item                          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Server IP                     | IP address of the FTP server.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Port No.                      | Use the default port.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Username                      | Username used to log in to the FTP server.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Password                      | Password used to log in to the FTP server.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Test                          | Click to test the connection to the FTP server.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Upload Images                 | <p>Select the check box if you want to upload smart snapshots.</p> <p>Overwrite Storage: When the number of images in the folder of the lowest level reaches the threshold, the server will continue to save new images by overwriting the existing images. For example, if the folder path is <b>\\IP\date</b>, the folder of the lowest level is the level-2 folder <b>date</b>. When the images uploaded on Jan. 4, 2022 exceeds 1000, existing images in the <b>20220104</b> folder will be overwritten by new images.</p> <p><b>NOTE!</b></p> <p>If you select <b>Overwrite Storage</b>, make sure the last naming element of filename is Photo No..</p> <p>For <b>Overwrite storage threshold</b>, the default is 1000 images, and the maximum is 100,000 images.</p> |
| Custom Naming Rules           | Choose <b>Enable</b> and then set the naming rule (see step 5).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Convert Path into UTF8 Format | Select if you want to convert the path into UTF8 format.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

#### 5. Configure the storage path.

| Item      | Description                                                                                                                           |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------|
| File Path | Up to 6 levels. If not specified, the default path “\\IP\Date\Intelligent” will be used. Intelligent means smart snapshots.           |
| Filename  | Naming element: Up to 20 fields are allowed. If not specified, the sequence number such as 1, 2, 3, ... will be used as the filename. |

#### 6. Click **Save**.

- GA/T1400

#### 1. Go to **Setup > System > Server > Intelligent Server**.

#### 2. Set **Platform Communication Type** to **Video&Image Database**.

**Intelligent Server 1**

|                              |                                                       |
|------------------------------|-------------------------------------------------------|
| Server IP                    | <input type="text" value="0.0.0.0"/>                  |
| Server Port                  | <input type="text" value="5196"/>                     |
| Platform Communication Type  | <input type="text" value="Video&amp;Image Database"/> |
| VIID Version                 | <input type="text" value="VIID_2017"/>                |
| Device ID                    | <input type="text" value="001"/>                      |
| Username                     | <input type="text"/>                                  |
| Platform Access Code         | <input type="text"/>                                  |
| Confirm Platform Access Code | <input type="text"/>                                  |

**Video&Image Database Settings**

|                  |                                                                                                                                                                                             |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Coordinate Mode  | <input type="text" value="Percentage Mode"/>                                                                                                                                                |
| Connection Mode  | <input type="text" value="Short Connection"/>                                                                                                                                               |
| Report Data Type | <input checked="" type="checkbox"/> Motor Vehicle <input checked="" type="checkbox"/> Non-Motor Vehicle <input checked="" type="checkbox"/> Person <input checked="" type="checkbox"/> Face |

#### 3. Configure the parameters.

| Item                         | Description                                                                                                      |
|------------------------------|------------------------------------------------------------------------------------------------------------------|
| Server IP                    | Server's IP address.                                                                                             |
| Server Port                  | Use the default port.                                                                                            |
| VIID Version                 | Choose the correct version, VIID_2017 or VIID_2018.                                                              |
| Device ID                    | Make sure the entered device ID conforms to the VIID protocol, and digits 11-13 must be 119.                     |
| Username                     | Username configured at <b>VIID Management &gt; VIID Device Management &gt; Gateway Authentication</b> on the VM. |
| Platform Access Code         | Password configured at <b>VIID Management &gt; VIID Device Management &gt; Gateway Authentication</b> on the VM. |
| Confirm Platform Access Code | Enter the password again.                                                                                        |

#### 4. Configure the VIID parameters.

| Item             | Description                                                                                                                                                                                                         |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Coordinate Mode  | Includes <b>Percentage Mode</b> , <b>Pixel Mode</b> , and <b>Normalized Mode</b> .                                                                                                                                  |
| Connection Mode  | Short Connection: This mode is implemented based on the standard HTTP protocol, and the server decides the connection mode.<br>Standard: This mode is applicable only when the camera connects to a Uniview server. |
| Report Data Type | Types of data to be reported.                                                                                                                                                                                       |

- LAPI

Only Intelligent Server 2 supports LAPI. Choose LAPI and then click **Save**.

### 5.10.4 Device Information

Set device information including device name, location, mounting height, etc., which can be used in smart FTP, OSD, etc.

#### 1. Go to **Setup > System > Device Info**.

|                      |                                                                                                                                                                                   |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device Name          | <input type="text" value="1"/>                                                                                                                                                    |
| Device ID            | <input type="text" value="1"/>                                                                                                                                                    |
| Intersection Info    | <input type="text" value="road"/>                                                                                                                                                 |
| Intersection ID      | <input type="text"/>                                                                                                                                                              |
| Direction ID         | <input type="text" value="1"/>                                                                                                                                                    |
| Mounting Height (cm) | <input type="text" value="600"/>                                                                                                                                                  |
| Longitude            | <div> <div>East</div> <div>▼</div> </div> <div> <input type="text" value="0"/> Degrees <input type="text" value="0"/> Minutes <input type="text" value="0.0000"/> Seconds </div>  |
| Latitude             | <div> <div>North</div> <div>▼</div> </div> <div> <input type="text" value="0"/> Degrees <input type="text" value="0"/> Minutes <input type="text" value="0.0000"/> Seconds </div> |

**Save**

#### 2. Complete the information as needed.

#### 3. Click **Save**.

### 5.10.5 Ports & External Devices

The RS485 port is used for data transmission between the camera and external third-party devices for PTZ control, OSD, audio collection, illumination control, etc. The serial port parameters configured on the camera must match that of the connected external device.

**NOTE!**

Serial ports may not be available to all camera models.

1. Go to **Setup > System > Ports & Devices > Serial Port**.
2. Set **Port Mode** and configure the parameters.

| Item         | Description                                                                                                                                                                                    |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Baud Rate    | Data transmission speed (unit: bits per second). The greater the value, the faster the transmission speed, and the shorter the transmission distance. Usually the default value is applicable. |
| Data Bit     | The actual number of data bits in a group of data packets. Usually the default value is applicable.                                                                                            |
| Stop Bit     | Indicates the end of transmission of a group of data. Usually the default value is applicable.                                                                                                 |
| Parity Bit   | Used to check whether the received data bits are erroneous. You can choose <b>Odd-Parity Check</b> or <b>Even-Parity Check</b> .                                                               |
| Flow Control | Used to control data transmission to prevent data loss.                                                                                                                                        |

- PTZ control

To control the PTZ using a third-party device, set **Port Mode** to **PTZ Control**.

By sending PELCO-D instructions through the RS485, you can control PTZ without using the PTZ control panel.

- (1) Set **Port Mode** to **Local PTZ Control**.

RS485\_1

Port Mode

Local PTZ Control

Baud Rate

9600

Data Bits

8

Stop Bits

1

Parity

None

Flow Control

None

PTZ Protocol

PELCO-D

Address Code

1

☐ Enable Trans-Channel

Save

- (2) Configure the parameters.

| Item         | Description                                                                                                                                                                                                                                                                                                                    |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PTZ Protocol | Choose the correct PTZ protocol: PELCO-D, PELCO-P, INTERNAL-PTZ, ALEC, VISCA, ALEC_PELCO-D, ALEC_PELCO-P, MINKING_PELCO-D, MINKING_PELCO-P, YAAN, Private-KR.<br>Some camera models support preset IDs from 1 to 1024 when the PTZ protocol is PELCO-D, and preset IDs from 1 to 255 when the PTZ protocol is other protocols. |
| Address Code | Set the PTZ address code.<br><b>NOTE!</b><br>This parameter is configurable only when <b>Port Mode</b> is set to <b>PTZ Control</b> and <b>PTZ Protocol</b> is set to <b>Local PTZ Control</b> .                                                                                                                               |

- Trans-channel

Used to transmit data between the RS485 port and the third-party device.



#### NOTE!

This feature is not available to all camera models.

- (3) Set **Port Mode** to **Trans-Channel**.

The screenshot shows a configuration window titled "RS485\_1". It contains several dropdown menus and checkboxes. The "Port Mode" dropdown is set to "Trans-Channel". Other settings include Baud Rate: 9600, Data Bits: 8, Stop Bits: 1, Parity: None, and Flow Control: None. There is an unchecked checkbox labeled "Enable Trans-Channel". At the bottom of the window is a blue "Save" button.

- (4) Enable **Trans-Channel**.

- (5) Enter the destination address and port, that is, the IP address and port number of the third-party device to which the transparent channel is connected.

- (6) Click **Save**.

- OSD

Receive serial port information from the third-party device through the RS485 port and then overlay the parsed information on the OSD.



#### NOTE!

In order for the camera to correctly parse the received serial port information, make sure the serial port information sent from the third-party device conforms to our data formats. Contact our technical support for more information.

- (1) Set **Port Mode** to **OSD**.

The screenshot shows the same "RS485\_1" configuration window, but with "OSD" selected in the "Port Mode" dropdown. The "Enable OSD Report" checkbox is now visible and unchecked. The other settings (Baud Rate: 9600, Data Bits: 8, Stop Bits: 1, Parity: None, Flow Control: None) and the "Enable Trans-Channel" checkbox remain the same. The blue "Save" button is at the bottom.

(2) Select **Enable OSD Report**, so OSD data will be uploaded to the platform.

(3) Click **Save**.

- Trans-Channel via ONVIF

Use the RS485 port for data transmission between the camera and third-party devices via Onvif.

(1) Set **Port Mode** to **Trans-Channel via ONVIF**.

The screenshot shows the 'RS485\_1' configuration window. It contains several dropdown menus and a checkbox. The 'Port Mode' is set to 'Trans-Channel via ONVIF'. The 'Baud Rate' is set to '9600'. The 'Data Bits' are set to '8'. The 'Stop Bits' are set to '1'. The 'Parity' is set to 'None'. The 'Flow Control' is set to 'None'. There is a checkbox labeled 'Enable Trans-Channel' which is currently unchecked. Below the configuration fields is a blue 'Save' button.

(2) Configure the parameters.

(3) Click **Save**.

- Illumination

Use the RS485 port to transmit data between the camera and the third-party illuminator.

(1) Set **Port Mode** to **Illumination**.

The screenshot shows the 'RS485\_1' configuration window. It contains several dropdown menus and a checkbox. The 'Port Mode' is set to 'Illumination'. The 'Baud Rate' is set to '9600'. The 'Data Bits' are set to '8'. The 'Stop Bits' are set to '1'. The 'Parity' is set to 'None'. The 'Flow Control' is set to 'None'. There is a checkbox labeled 'Enable Trans-Channel' which is currently unchecked. Below the configuration fields is a blue 'Save' button.

(2) Configure the parameters.

(3) Click **Save**.

- Wiper Control

Configure wiper parameters to control the wiper.

(1) Go to **System > Ports & Devices > External Device**.

The screenshot shows the 'Wiper Control' configuration window. It contains three input fields. The 'Move Mode' is set to 'Repeat'. The 'Time Interval(min)' is set to '15'. The 'Effective For(h)' is set to '1'.

(2) Configure wiper parameters.

| Item         | Item                          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------------|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Control Mode | Serial Port                   | The wiper is controlled through PELCO-D instructions, so the PTZ protocol must be set to PELCO-D. See PTZ Protocol for more information.                                                                                                                                                                                                                                                                                                                                                            |
|              | Alarm Input/Output            | Use alarm input and output to open or close the circuit and control the wiper.                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Enable Wiper | Normally Open/Normally Closed | Set according to the actual working status of the wiper.                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Move Mode    | One Time/Repeat/Automatic     | One Time: The wiper works once every time you click the wiper icon on the PTZ control panel.                                                                                                                                                                                                                                                                                                                                                                                                        |
|              |                               | Repeat: You need to set the <b>Effective For</b> and <b>Time Interval</b> parameters. The <b>Effective For</b> parameter sets the duration of the <b>Repeat</b> mode (1 to 24 hours), and the <b>Time Interval</b> parameter sets the interval between two wiper movements (1 to 60 minutes).<br><b>NOTE!</b><br>If <b>Time Interval</b> is set to 60 minutes and <b>Effective For</b> is set to 1 hour, then the wiper works once at the last minute and then stops.<br>Only integers are allowed. |
|              |                               | Automatic: Use a rain sensor to detect rains and automatically activate the wiper when the threshold is reached.                                                                                                                                                                                                                                                                                                                                                                                    |

(3) Click **Save**.

## 5.10.6 Maintenance

### 1. Maintenance

System maintenance include software upgrade, system configuration, diagnosis information, power output, and heater settings.

Go to **Setup > System > Maintenance**.

- Software upgrade



#### NOTE!

- Make sure the version to be used matches the device; otherwise, exceptions may occur.
- The version file is a .zip file that includes all the upgrade files.
- Power must be connected throughout the upgrade.

#### ➤ Local upgrade

(1) Click **Browse**, locate the version. (If applicable) select **Upgrade Boot Program** to upgrade the boot program.

(2) Click **Upgrade** to start. The device will restart automatically after the upgrade is completed.

#### ➤ Peripheral upgrade

Check for upgradable peripherals such as pan/tilt unit, illuminator, etc., and available versions.

#### ➤ Cloud upgrade

Click **Detect** to check for new versions. You can perform a cloud upgrade if a new version is available on the cloud server.

- System configuration

You can export the current configurations of the camera to the client computer or an external storage device for backup, so when necessary, you can restore camera configurations by importing the backup file.



## CAUTION!

- Restoring defaults will restore all settings to factory defaults except the administrator password, network interface settings, and system time.
- Before you import a configuration file, make sure the file matches the camera model; otherwise, unexpected results may occur.
- The camera will restart after importing the configuration file.

### ➤ Import configurations

The screenshot shows the 'Config Management' section of a web interface. It includes a 'Default' button, a checkbox for 'Restore all settings to defaults without keeping current network and user settings.', and input fields for 'Importing' and 'Exporting'. Each input field has a 'Browse...' button and an 'Import' or 'Export' button.

- (1) Click **Browse** beside the **Import** button.
- (2) Locate the configuration file, click **Import**. A dialog box appears.
- (3) Enter the password and confirm.
- (4) Click **OK**.

### ➤ Export configurations

- (1) Click **Browse** beside the **Export** button.
- (2) Choose the destination folder, click **Export**. The **File Encryption** dialog box appears.
- (3) Enter the password and confirm.
- (4) Click **OK**.

### ➤ Restore defaults

Click **Default**. The system will restore default settings except network settings and user settings.

To restore all settings, select **Restore all settings to defaults without keeping current network and user settings**.

## • Diagnosis information

Diagnosis information includes logs and system configurations and can be exported to your client computer. Select **Collect Image Debugging Info** to collect diagnosis information with accompanying video images to facilitate troubleshooting.

The screenshot shows the 'Export Diagnosis Info' section. It has a text input field, a 'Browse...' button, and an 'Export' button. Below the input field is a checkbox labeled 'Collect Image Debugging Info' which is checked.

- (1) Click **Browse** and choose the destination.
- (2) Click **Export**.



## NOTE!

Diagnosis information is exported as a compressed file. You need to decompress it first (using decompression tools like WinRAR) and then open the file using a text editor (like Notepad).

## • Power output

The camera can supply power to external devices with lower power consumption such as a sound pickup.

The screenshot shows the 'Power Output' section. It displays '12 VDC' and two radio buttons labeled 'On' and 'Off'. The 'Off' button is selected.

## • Restart device



## CAUTION!

Restarting the camera will interrupt the ongoing service.

Restart

Restart device

Click **Restart** and then confirm to restart the device. You may set a schedule to reboot the camera automatically at the set time.

- Heater

Use the heater to eliminate water droplets on the lens in a high humidity environment.

Heater

☐ On ☒ Off

Remaining Heating Time

0

▼

Day(s)

0

▼

Hour(s)

0

▼

Minute(s)

(1) Enable Heater.

(2) Set **Remaining Heating Time**.

## 2. Network Diagnosis

Go to **Setup > System > Maintenance > Network Diagnosis**.

Select NIC

NIC1 (203.2.1.83) ▼

IP Filter

☒ All ☐ Specify ☐ Filter

Port Filter

☒ All ☐ Specify ☐ Filter

☐ Custom Rules

Start Capture

- Select NIC

NIC1 is the camera's IP address.

- IP/port filter

- All: Capture all packets of the camera.
- Specify: Capture packets of the specified port or IP.
- Filter: Filter packets of the specified port or IP and capture other packets.

- Custom Rules

Select **Custom Rules** and set the rules.

Click **Start Capture** to start capturing packets. After packet capture is finished, save data and view the diagnosis.

- Test network delay and packet loss rate

Test network connectivity by sending test packets to a test address.

Network Delay and Packet Loss Test

Test Address

192.168.1.1

Packet Size (Bytes)

64

Test Result

Average Delay: 3.558 ms Packet Loss Rate: 0%

Test

- Test Address: Must be a valid IP address or domain name.
- Packet Size (Bytes): Size of test packets to be sent. Range: [64-65507]. Sometimes a high delay may be caused by a large packet size. If the test failed, set a smaller packet size and then try again.

- Test results include average delay and packet loss rate.
  - Average delay: Average length of time from test packets are sent till responses are received.
  - Packet loss rate: Ratio of lost packets to the sent packets.

### 5.10.7 Logs

Search camera operation logs and download to your computer.

Go to **Setup > System > Log**.

Time

2022-06-09 00:00:00 ~ 2022-06-09 23:59:59

Main Type

AlarmEvent

Sub Type

All

Operation

Query

Export

| No. | Type     | Sub Type | Date       | Time     | Username | IP          | Result     |
|-----|----------|----------|------------|----------|----------|-------------|------------|
| 1   | Operator | Login    | 2022-06-09 | 10:25:05 | admin    | 192.168.1.1 | Succeeded. |
| 2   | Operator | Upgrade  | 2022-06-09 | 10:18:25 | admin    | 192.168.1.1 | Succeeded. |
| 3   | Operator | Login    | 2022-06-09 | 10:05:29 | admin    | 192.168.1.1 | Succeeded. |

Total 3

<< < 1 > >>

1. Set a time range and choose main and sub log types.
  - Main type: Including system operation, alarm parameter configuration, network configuration, audio and video configuration, PTZ configuration, image configuration, smart configuration, system configuration, storage configuration, and alarm events.
  - Sub type: You can choose up to 5 types or choose All.
2. Click **Search**. Up to 100 logs can be displayed. The latest logs are displayed on the top.
3. Click **Export** to save search results as a .csv file to the client computer.